


Instruction Book

For specification: 78cm(L)x38.5cm(W)x85.5cm(H)

instruction manual

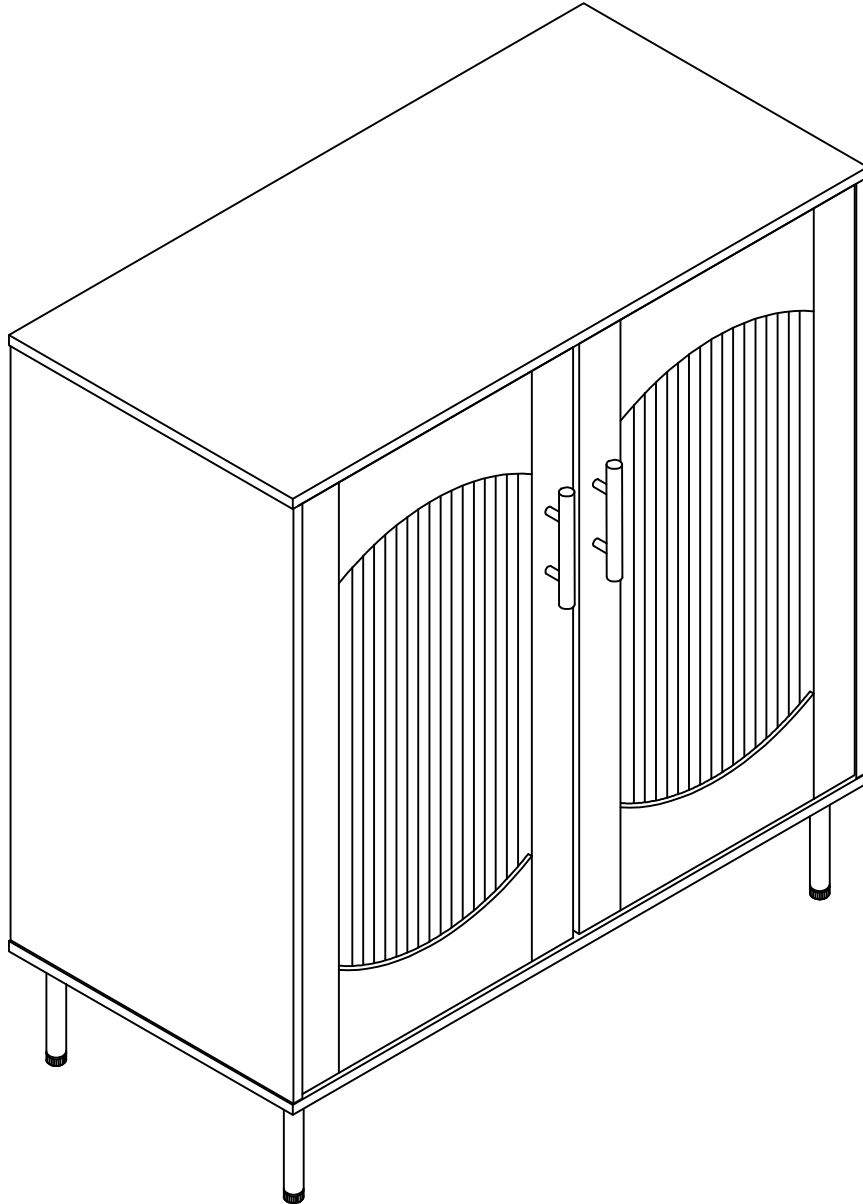

Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other. If you have any question, please feel free to contact us by email

Foreword:

Thank you for choosing our product! We hope you have a good shopping experience! We aim to provide a 100% satisfaction product and customer service. If the received product has missing parts or components, arrived damaged, dissatisfaction with the order, or has questions about the assemble, please do not hesitate to contact us. Our customer service will reply within 12 hours.

Specifications:

Product Name: Buffet Cabinet


Package Dimension: 34.3x18.1x6.3in/87*46*16cm

Product Size: 30.7x15.2x33.7in/78x38.5x85.5cm



Weight: 48.3lb/22KG


Left cabinet

A, B, G, H, C, D installation guide

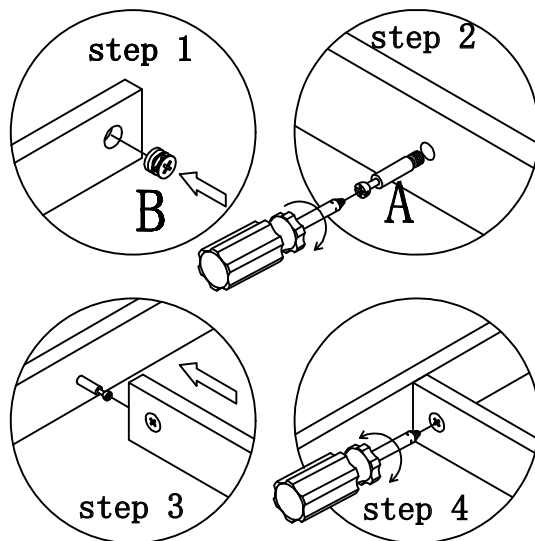

Accessories

 Three-in-one screw A*24	 Three-in-one nut B*24	 Small Screw D*44	 Handle E*2	 Handle Screw F*4	 Laminate support Y*4
 Small Screw Q*5	 Door hinges K*4	 Setscrew O*2	 Anti dumping device L*2	 Iron Leg 1*4	 screwdriver Z*1

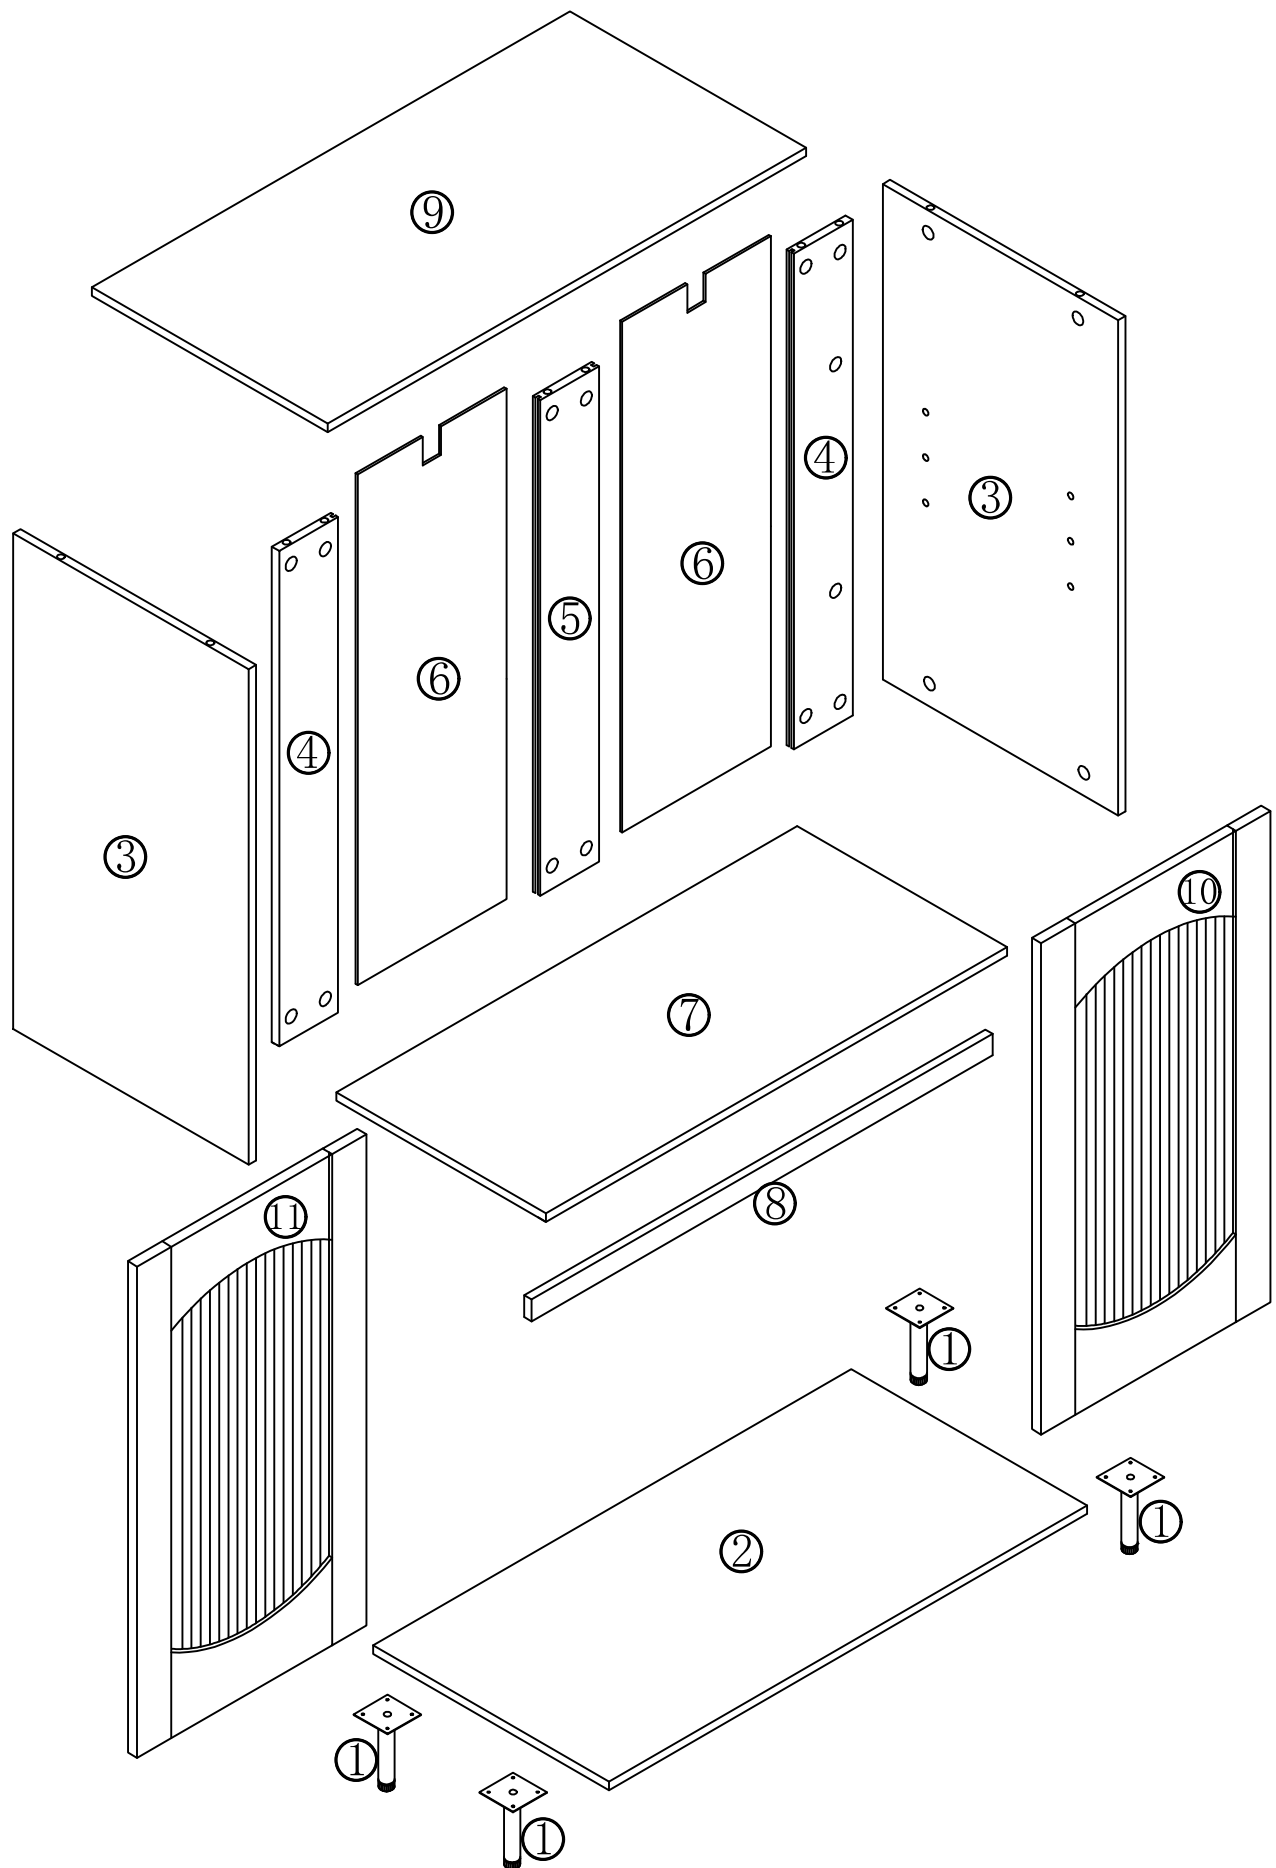


Guidelines for the use of 3-in-1 connecting rods:

The blue screw cap at the bottom of the 3-in-1 connecting rod is twist-able, and it can be twisted clockwise or counterclockwise to fit the size of the reserved holes in the wooden board.


When you use this 3-in-1 connecting rod, if you find that it can't be inserted into the reserved holes on the wooden board, just loosen the blue screw cap a bit until it fits into the holes of the board. Then use a screwdriver to tighten the screws. Note: If the bottom blue screw cap is not stretched apart by the three-in-one connecting rod in the reserved hole, the connected part will appear unstable .

STEP 1

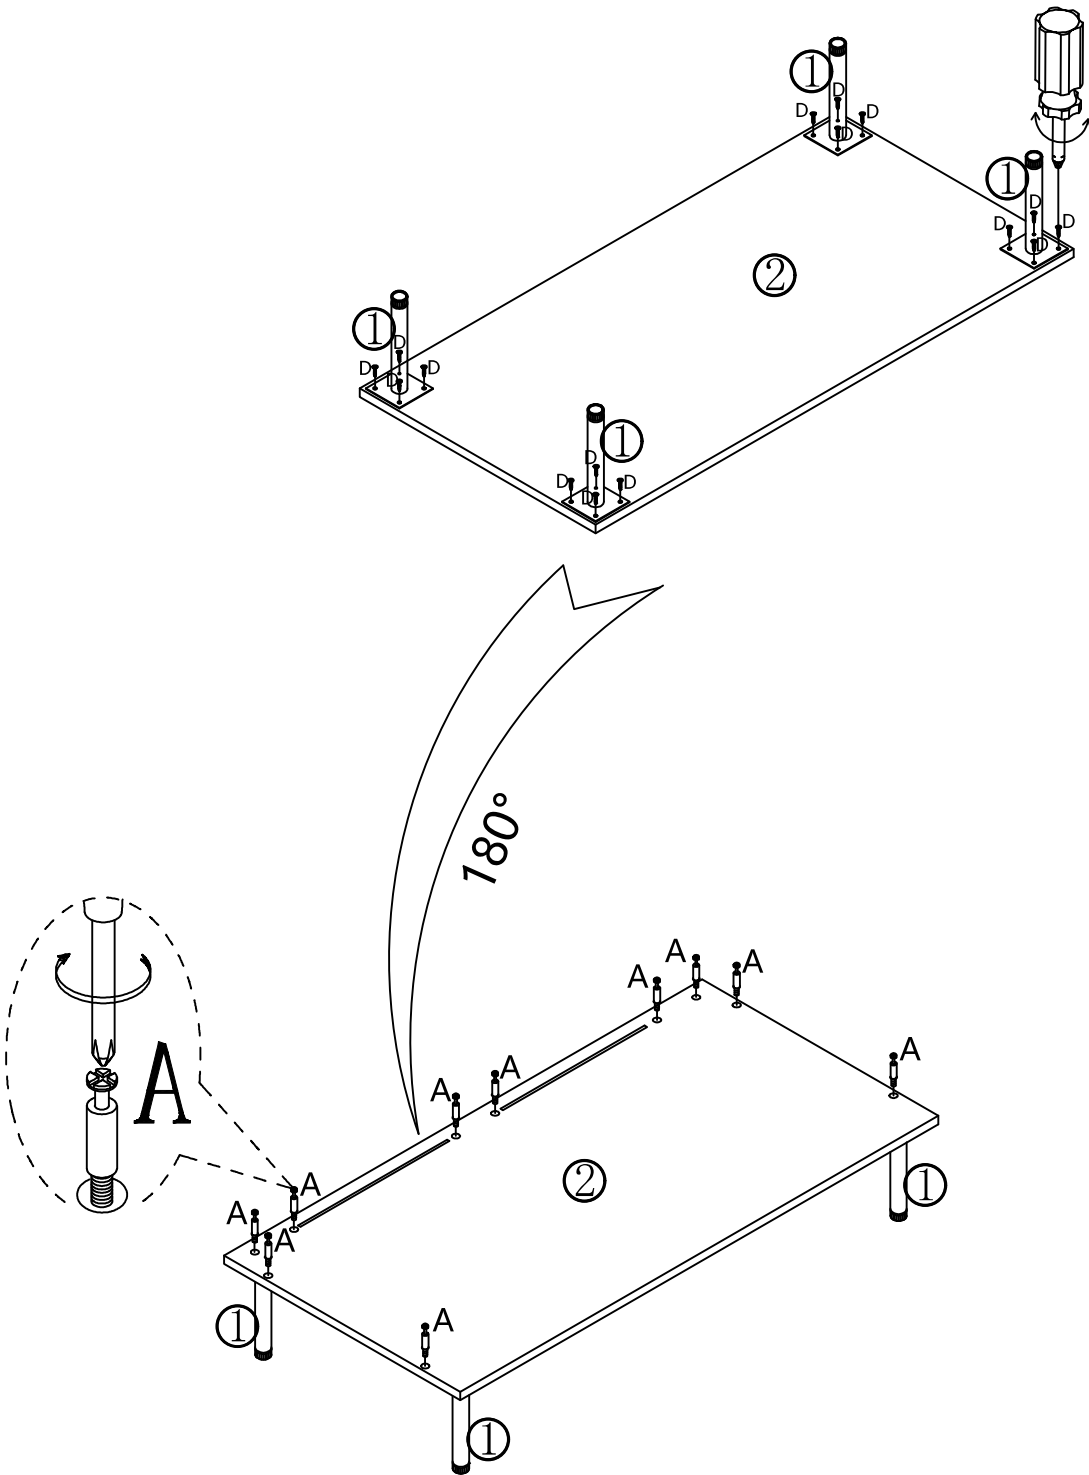





1  x4	
A	D
 x10	 x16

STEP 2




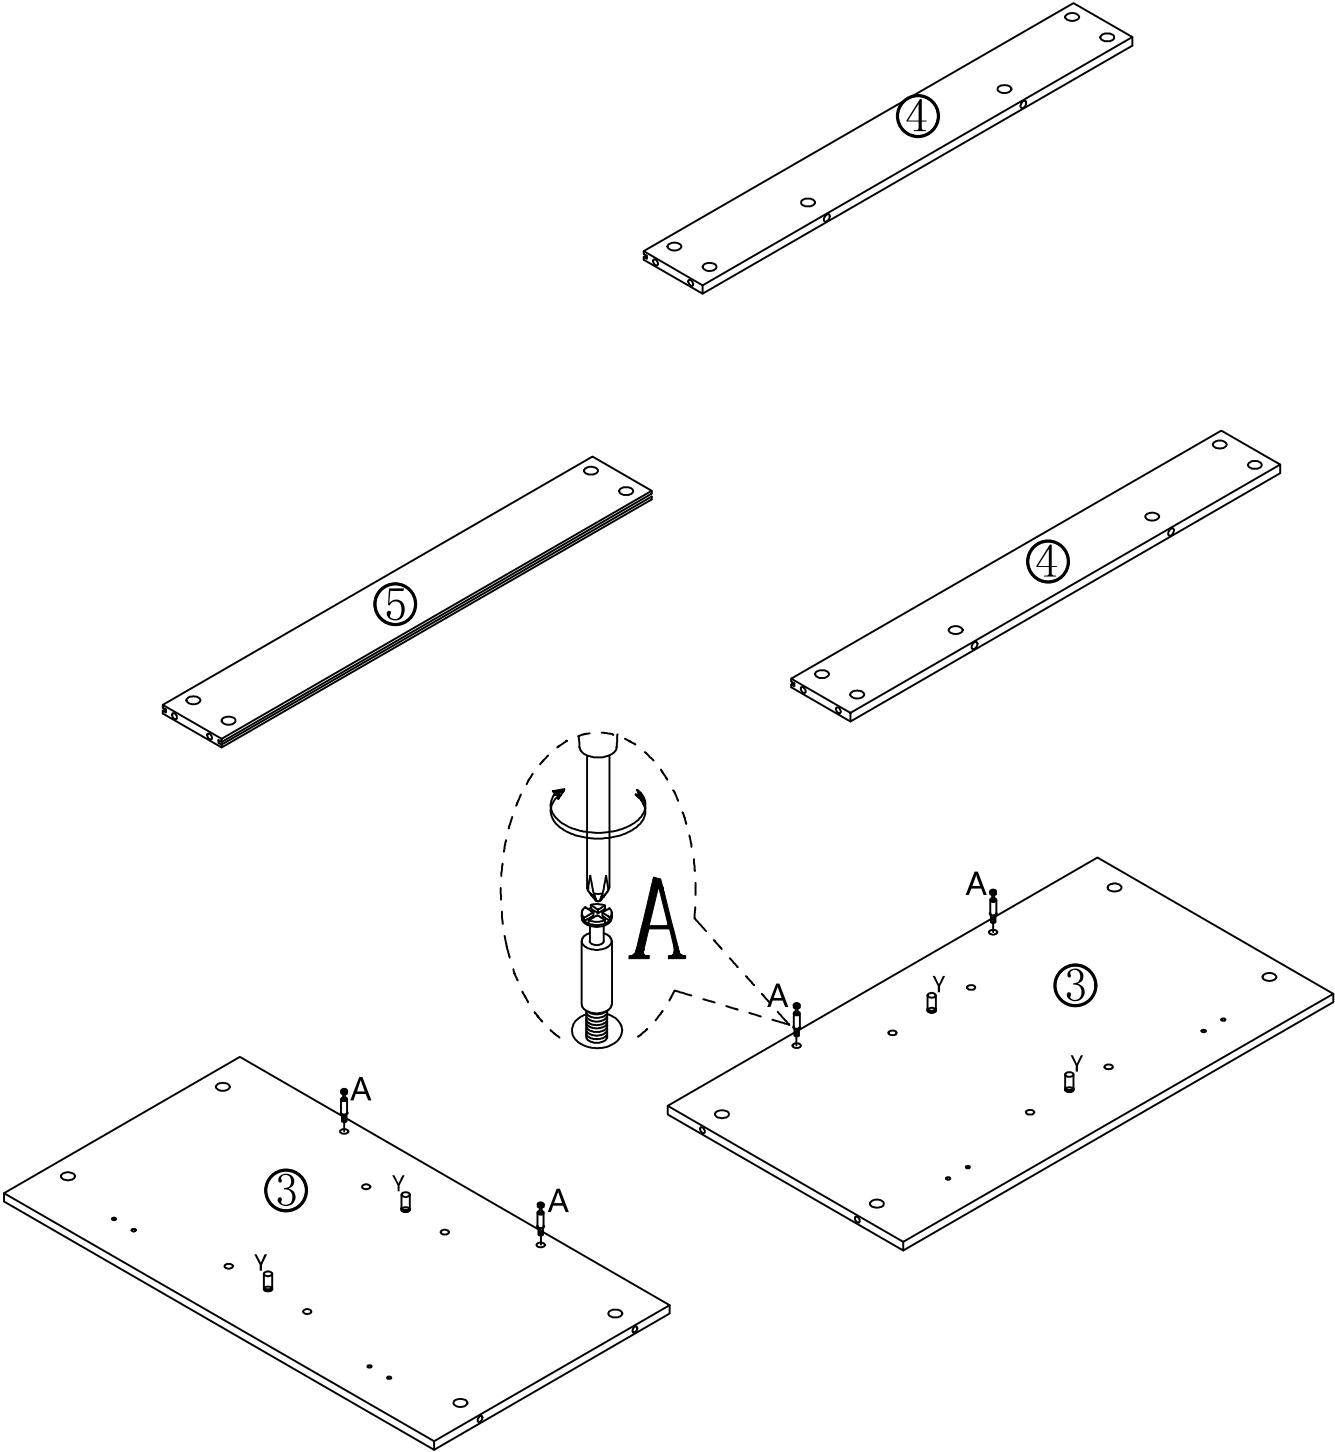


A	Y
	
x4	x4


STEP 3

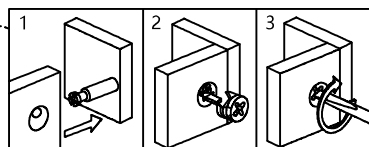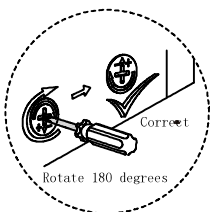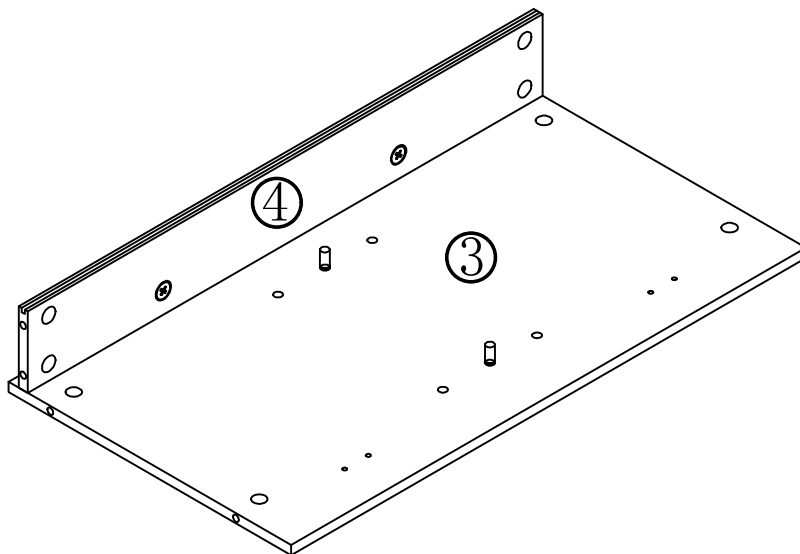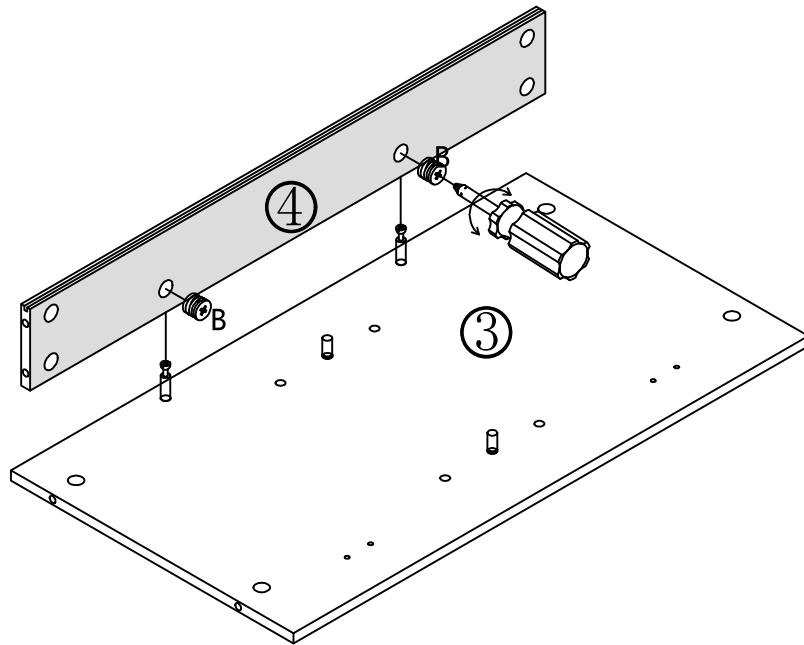




STEP 4

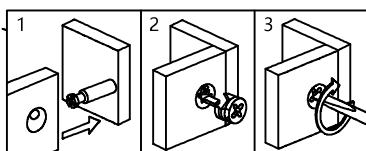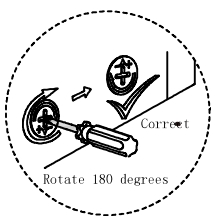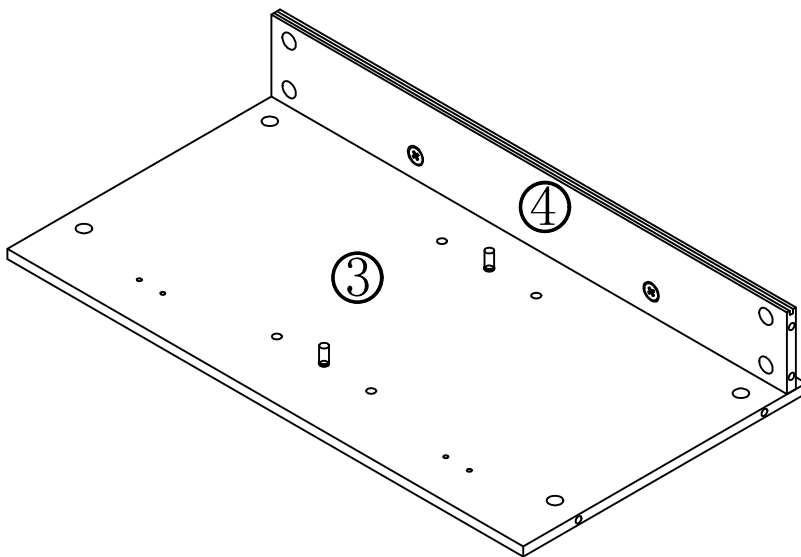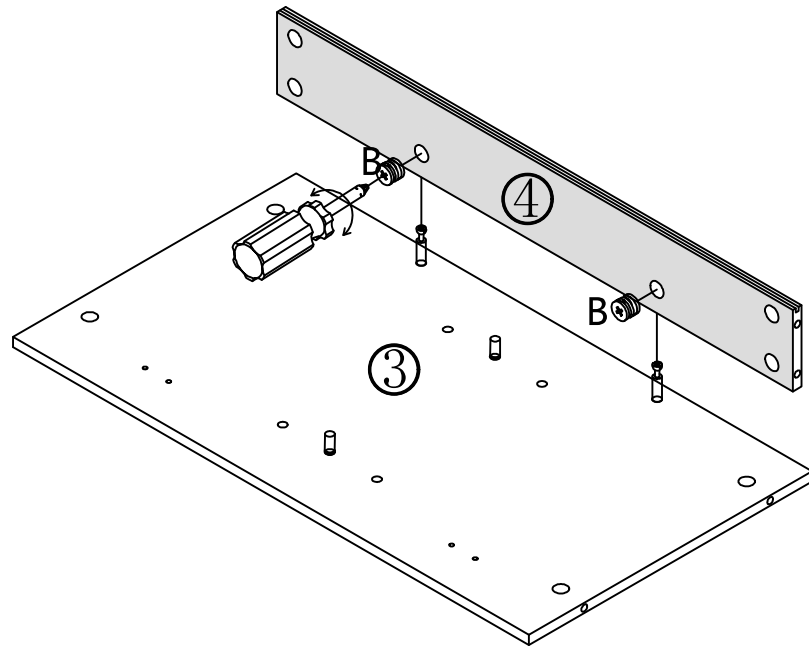


8







STEP 5

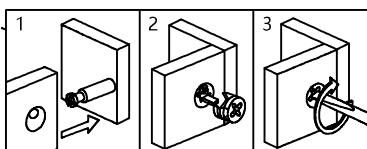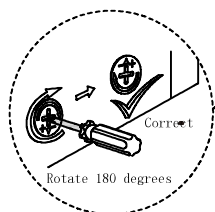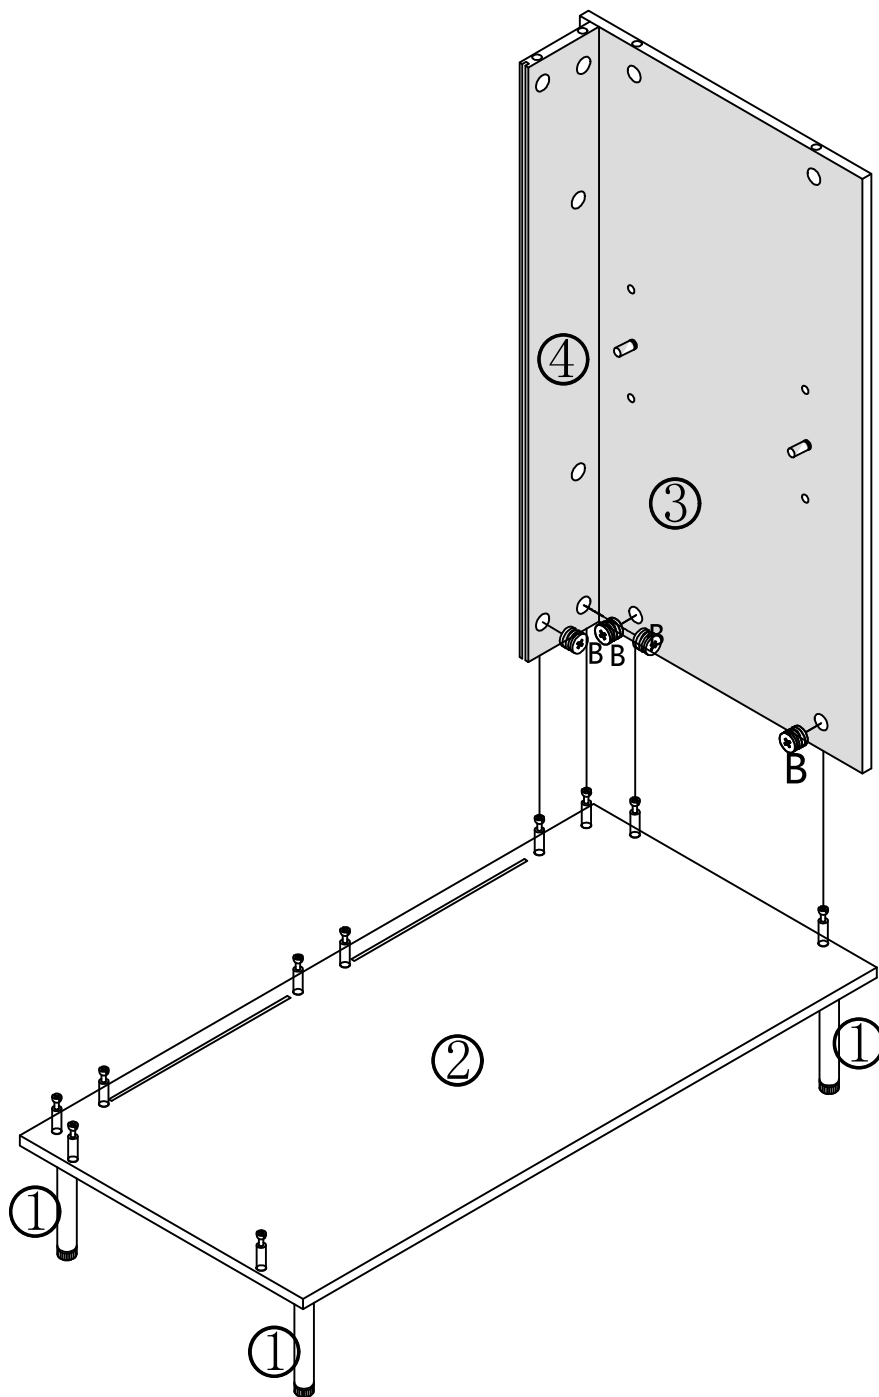




9




STEP 6

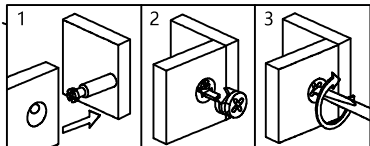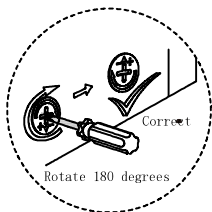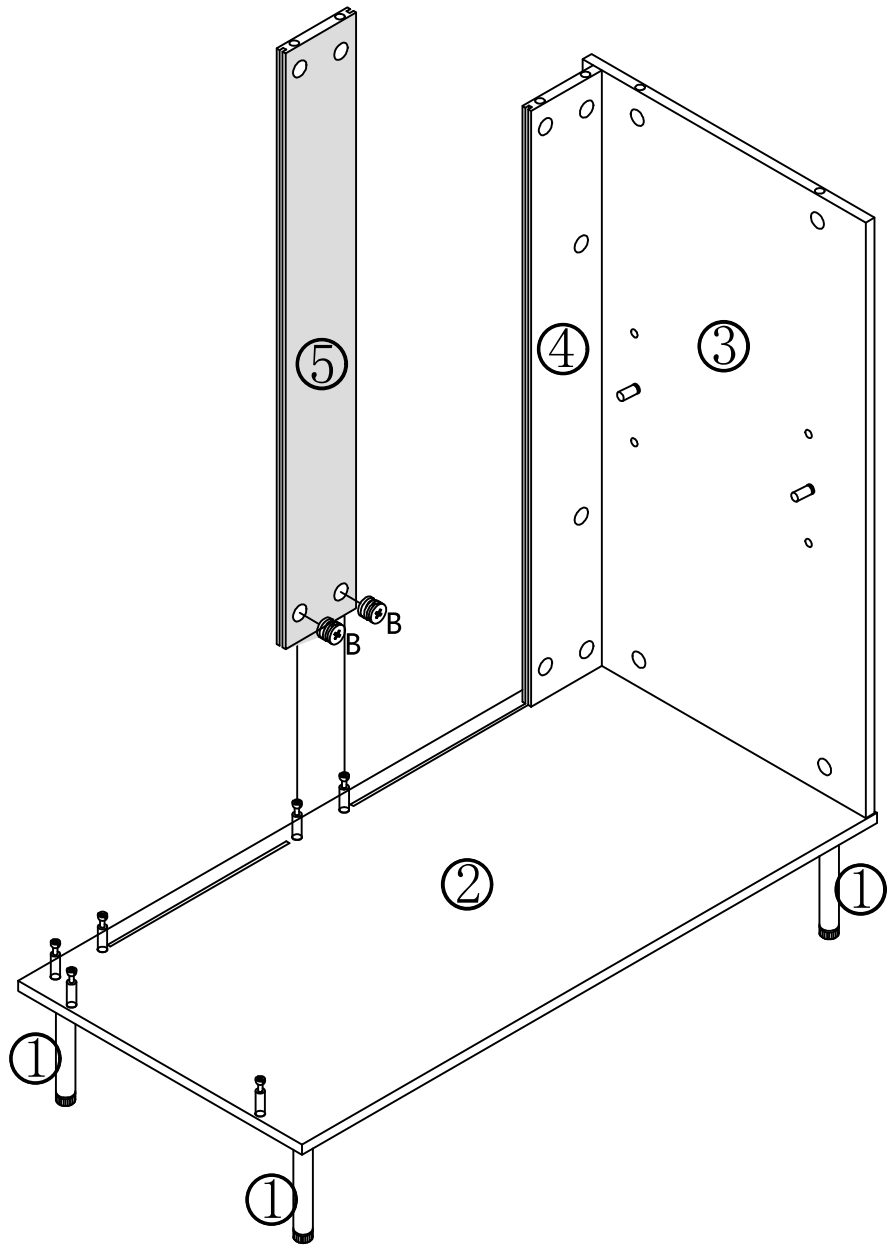


STEP 7

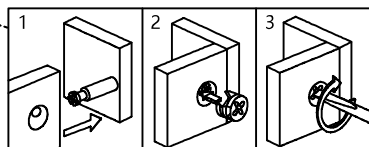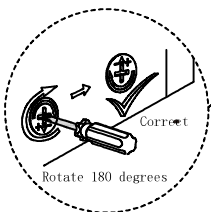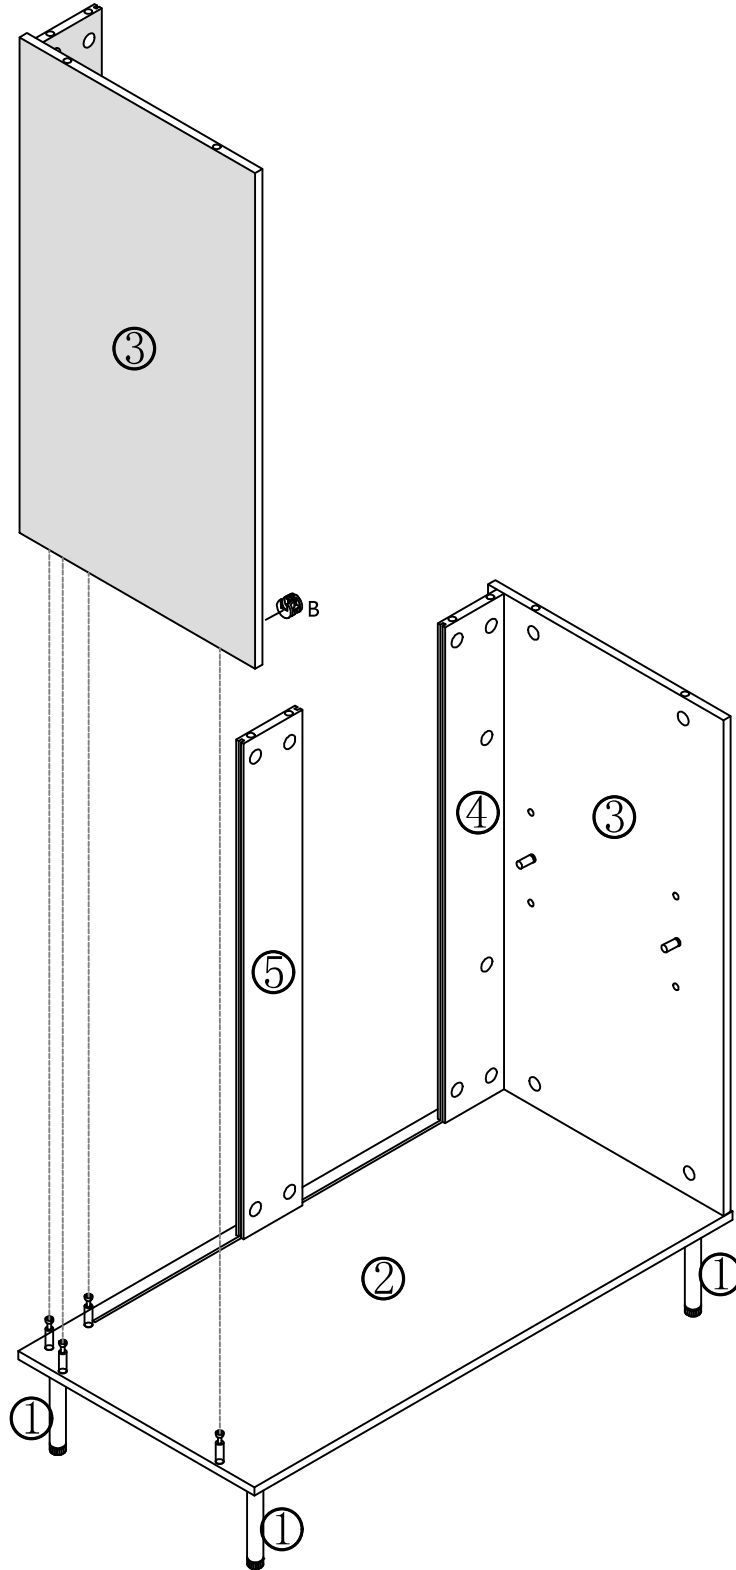


11




STEP 8

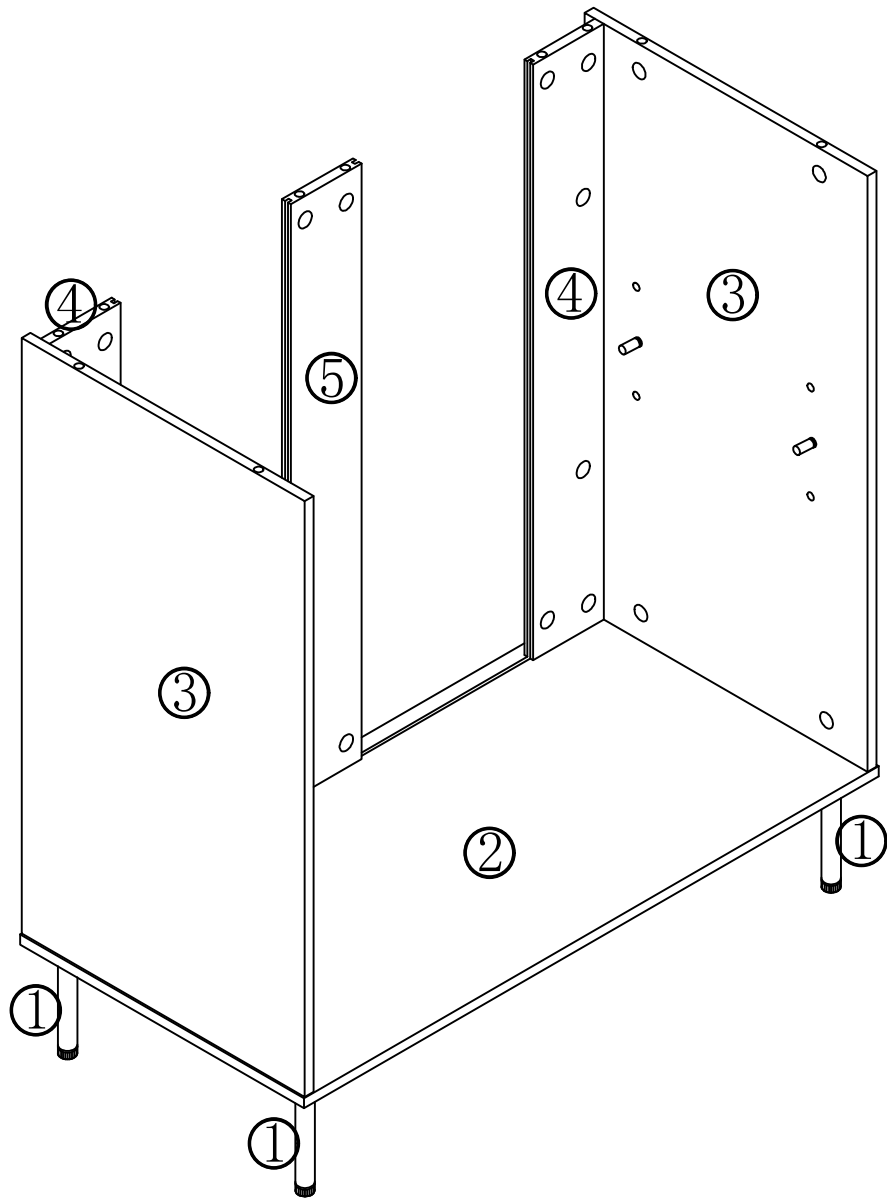


STEP 9

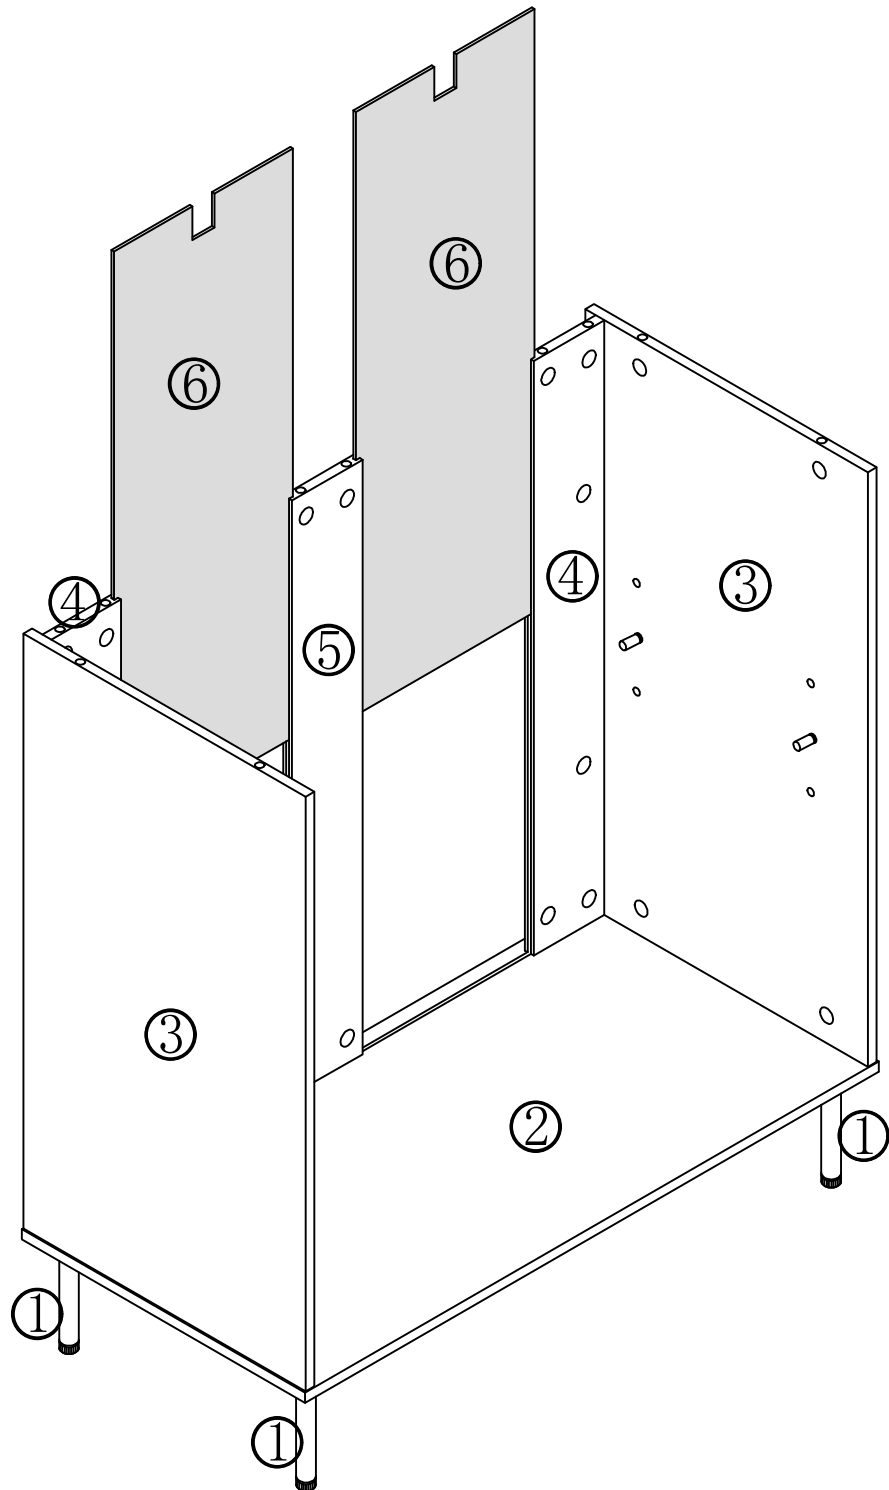

STEP 10

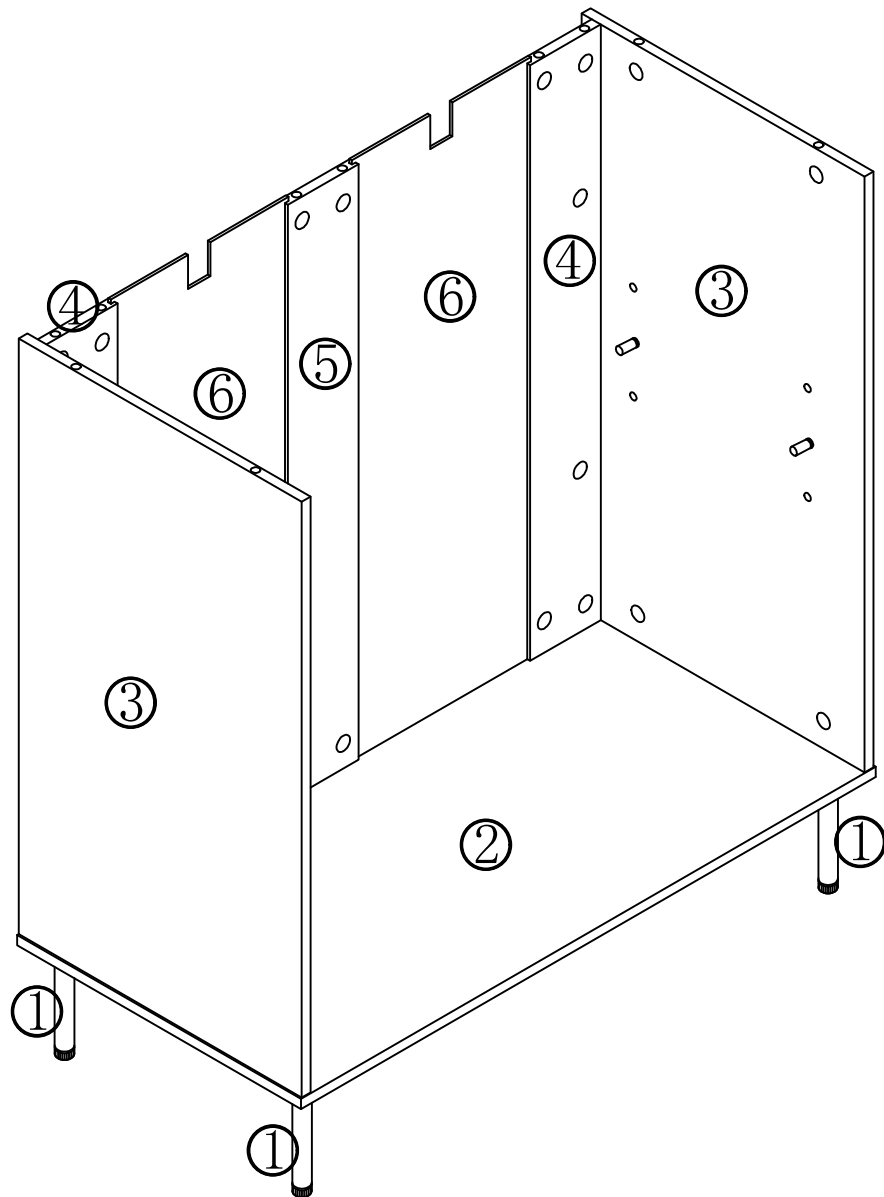


STEP 11




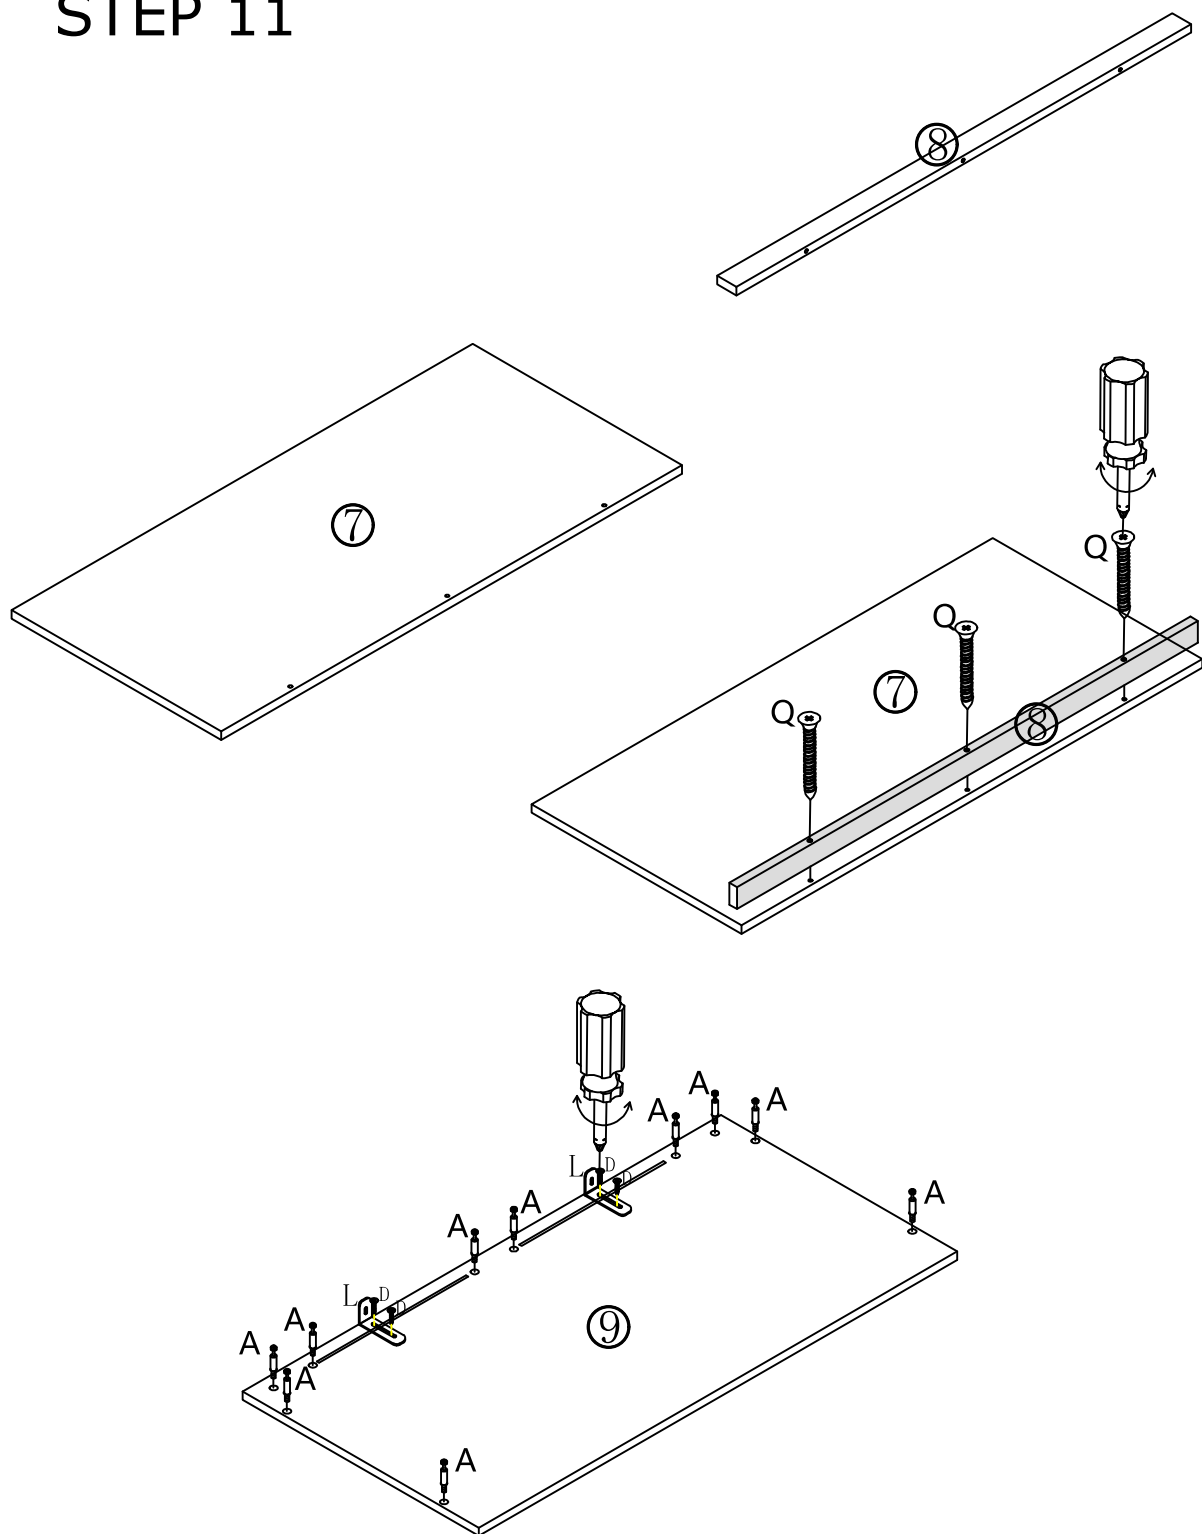


A	L
x10	x2
Q	D
x3	x4


STEP 12

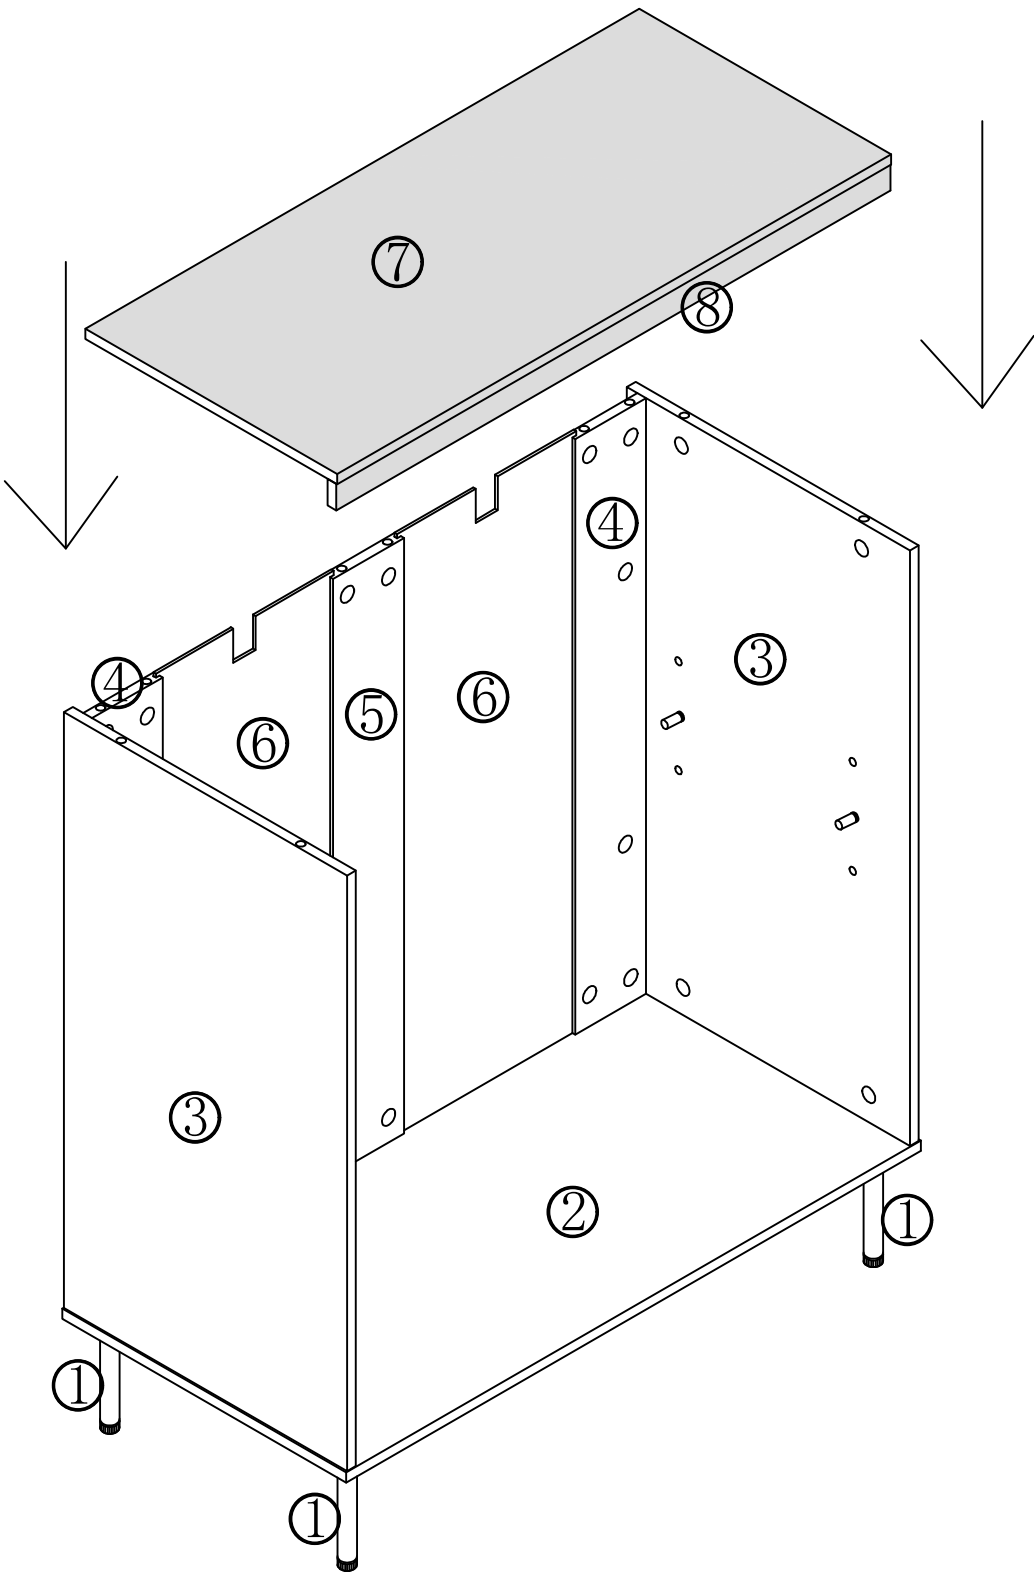



STEP 13

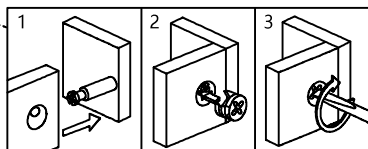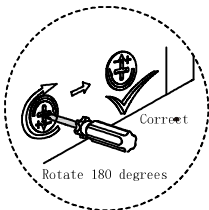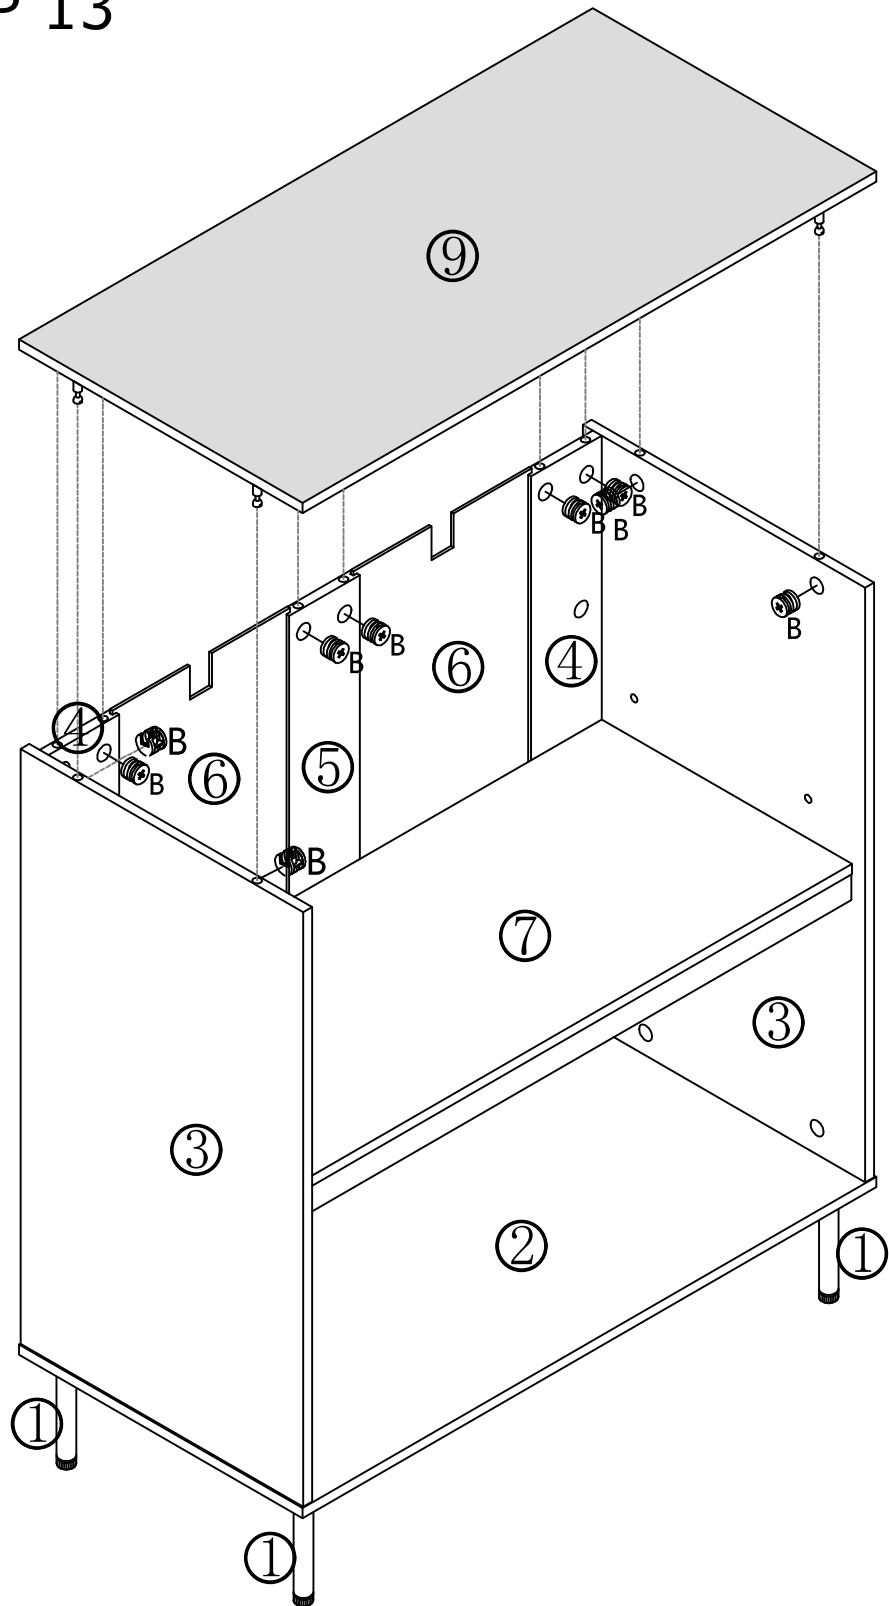



STEP 14

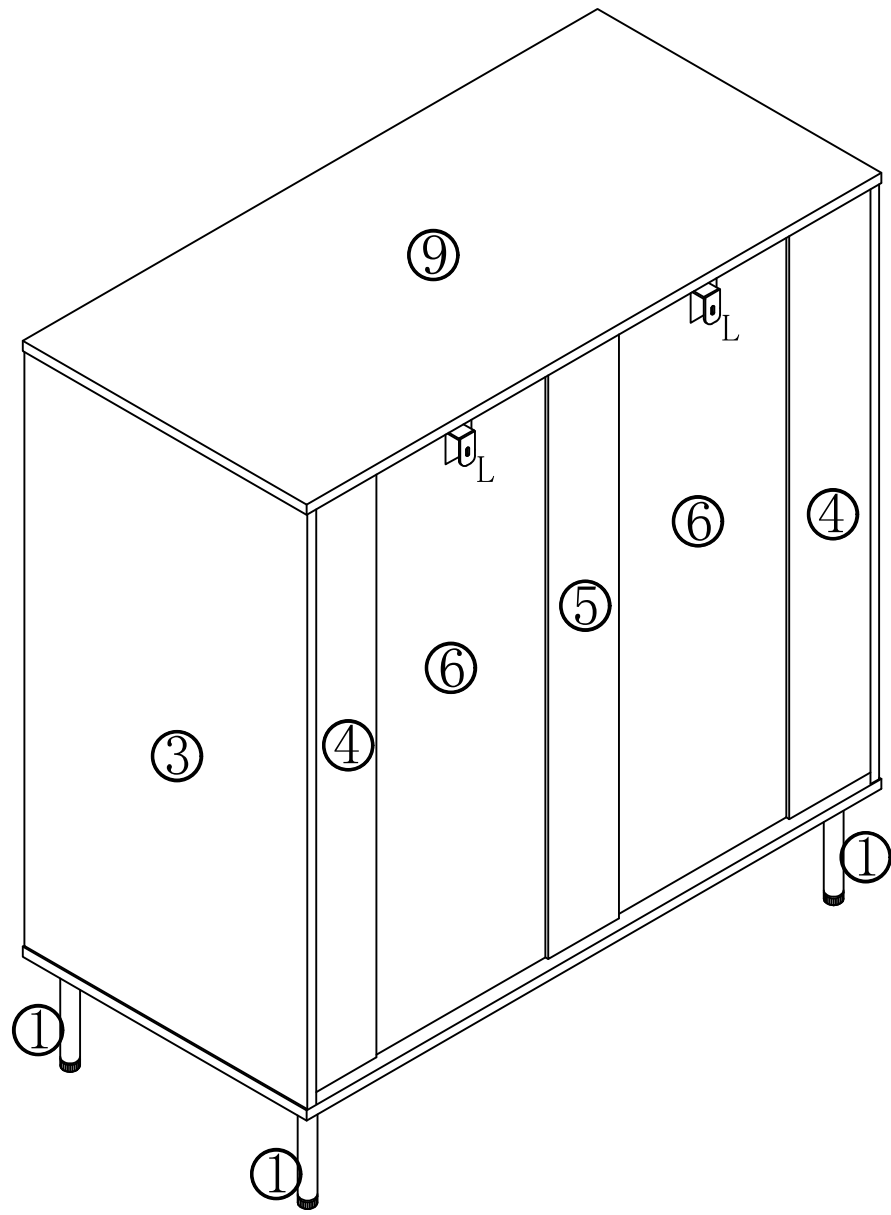

STEP 15


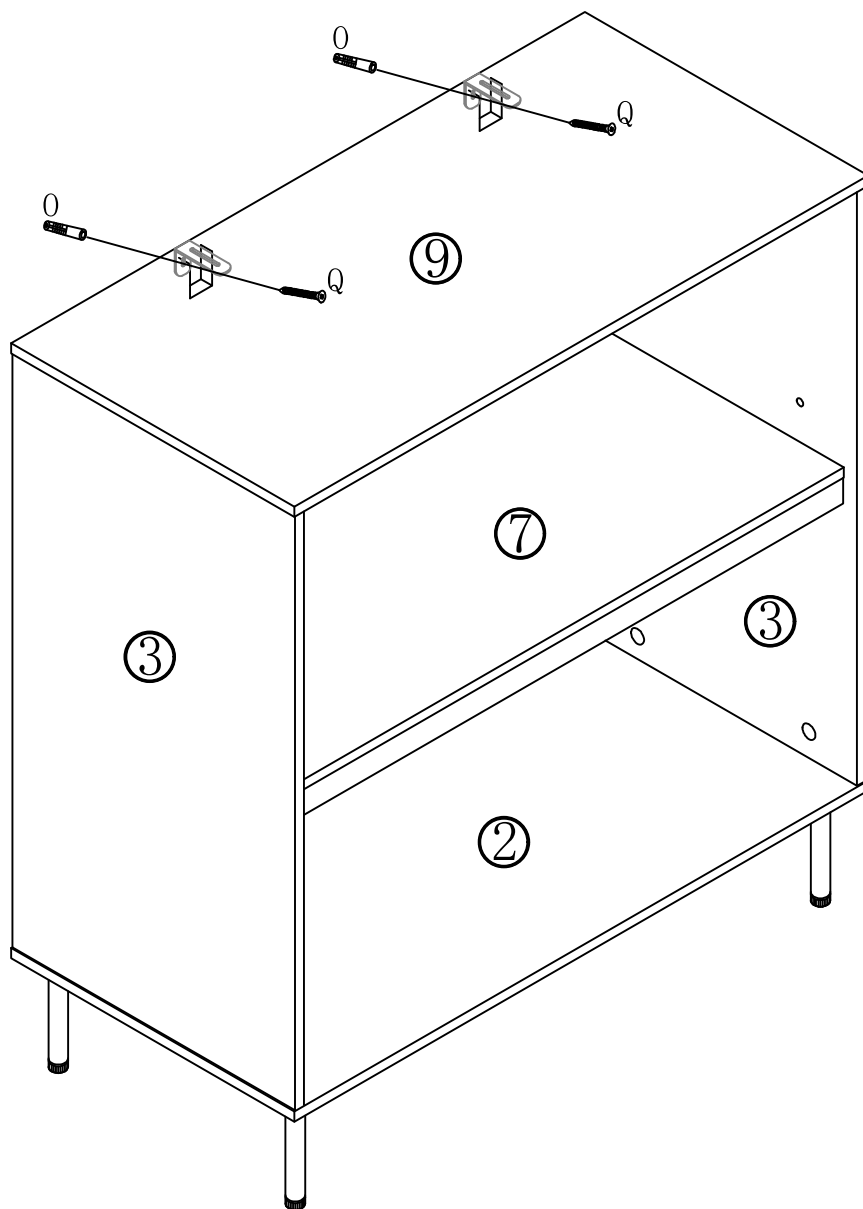


STEP 16

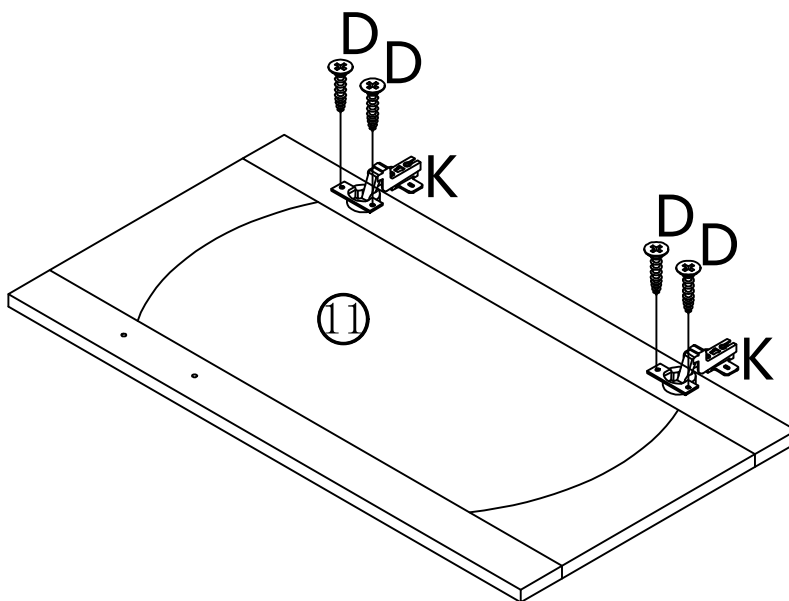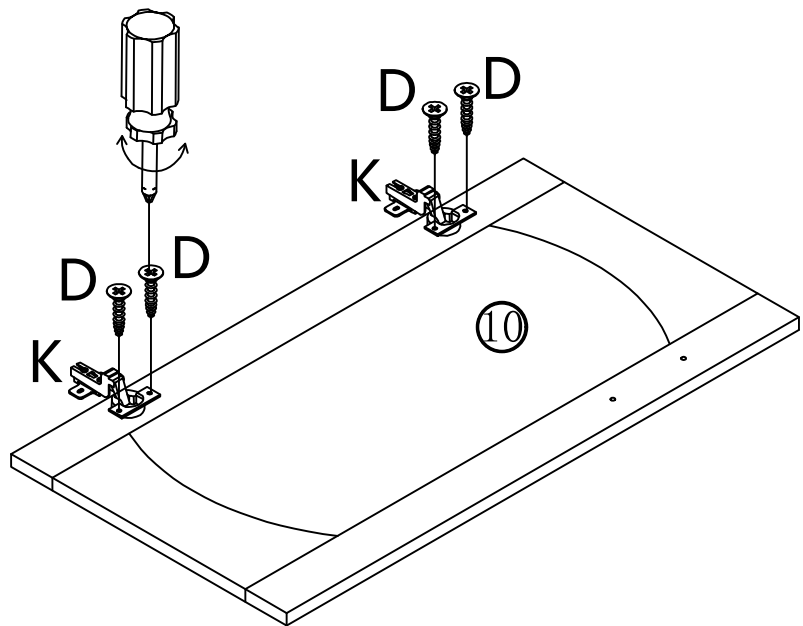


K	D
	
x4	x8

STEP 17

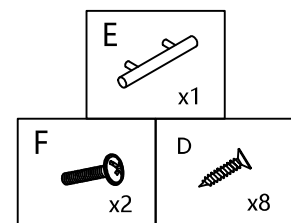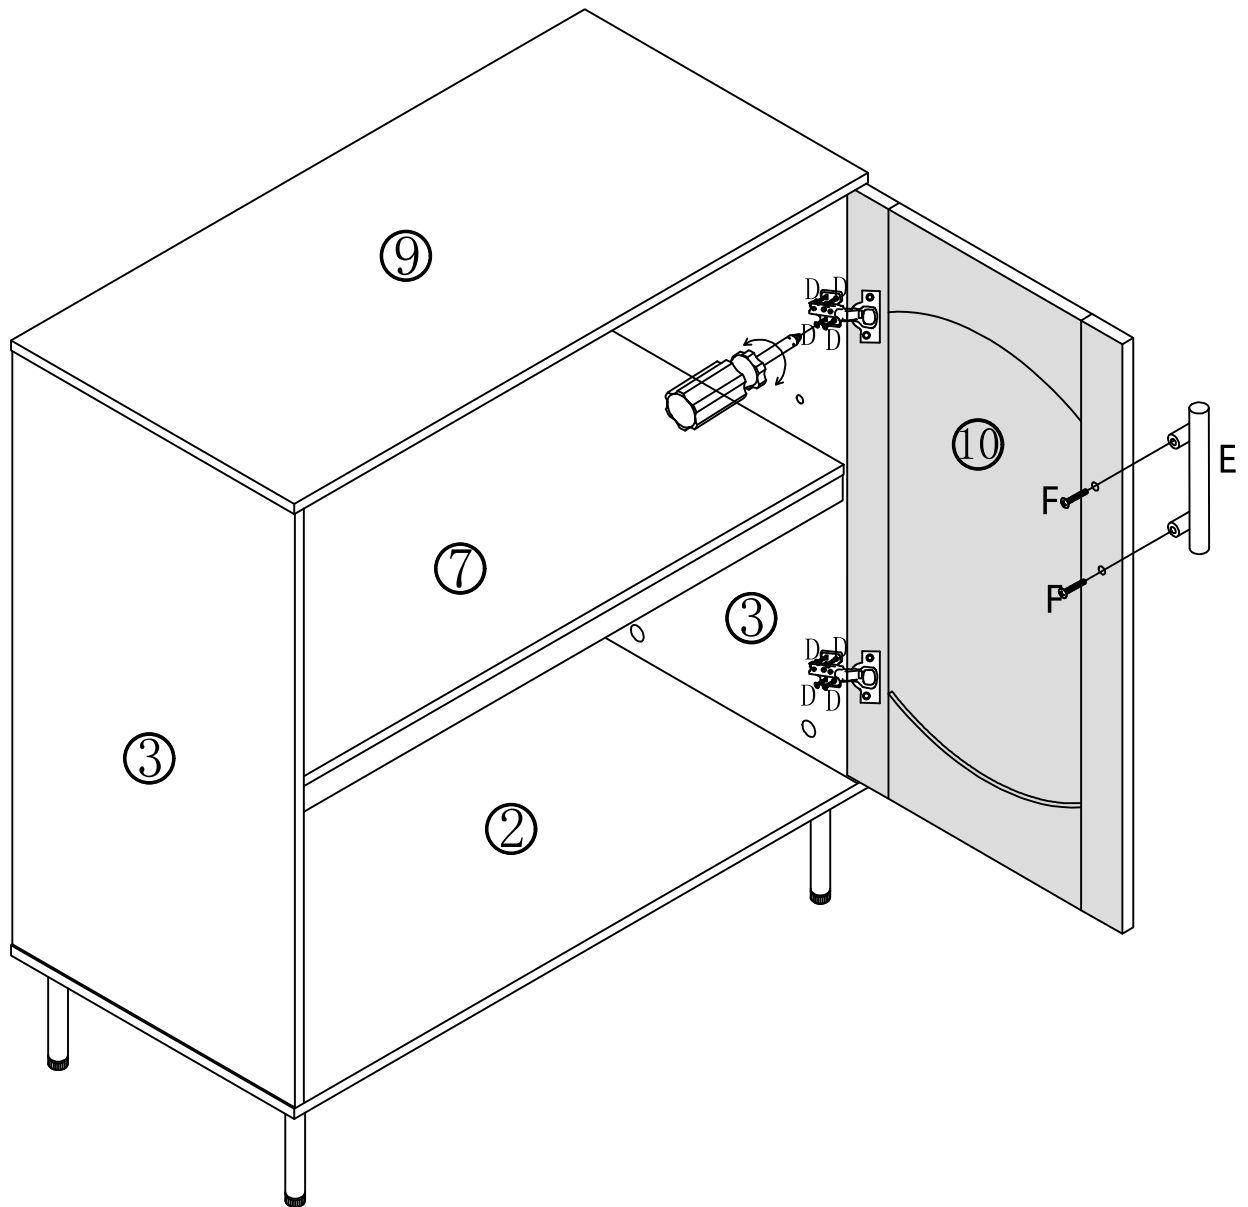

STEP 18

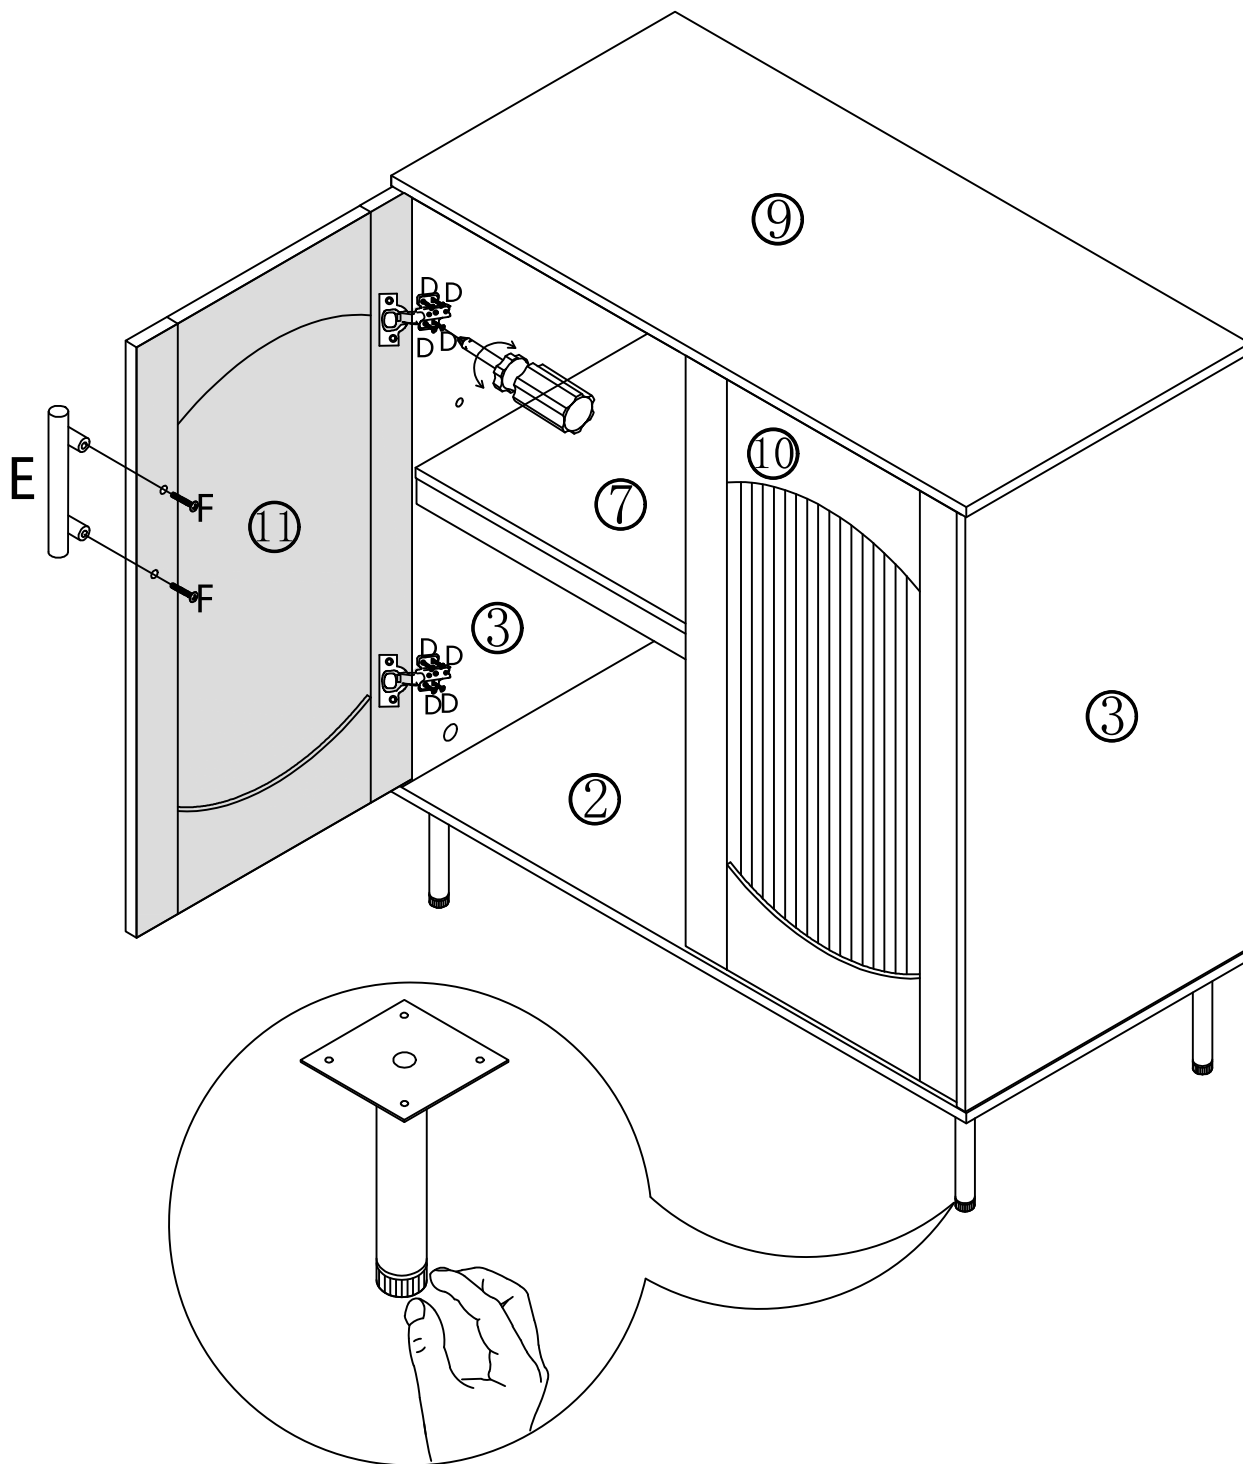

If the cabinet is uneven,
adjust the bottom leveling
feet to level it

