
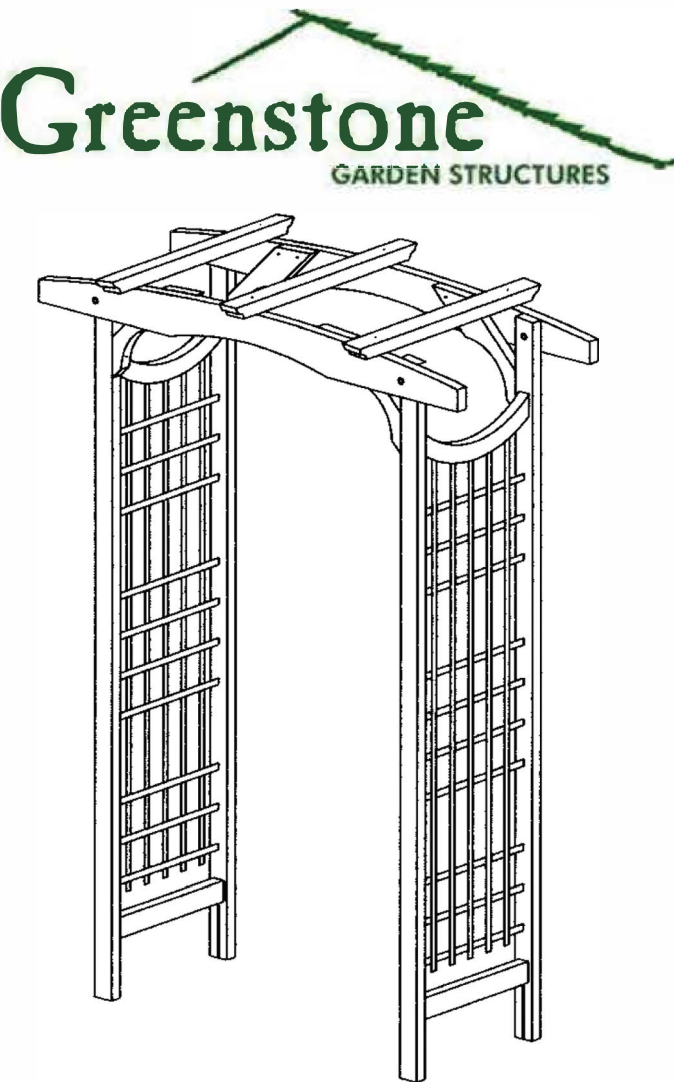


STEP #3 Attach Corner Brace (D) to Leg (A) & Rail (B)

- ① Position the Corner Brace (D) so that it is flush at the top with the Top Rail and tight against the Leg (A)
Be sure that the unit is square before attaching the Corner Braces (D)
- ② Secure the 4 Corner Braces using 12 wood screws (AA)

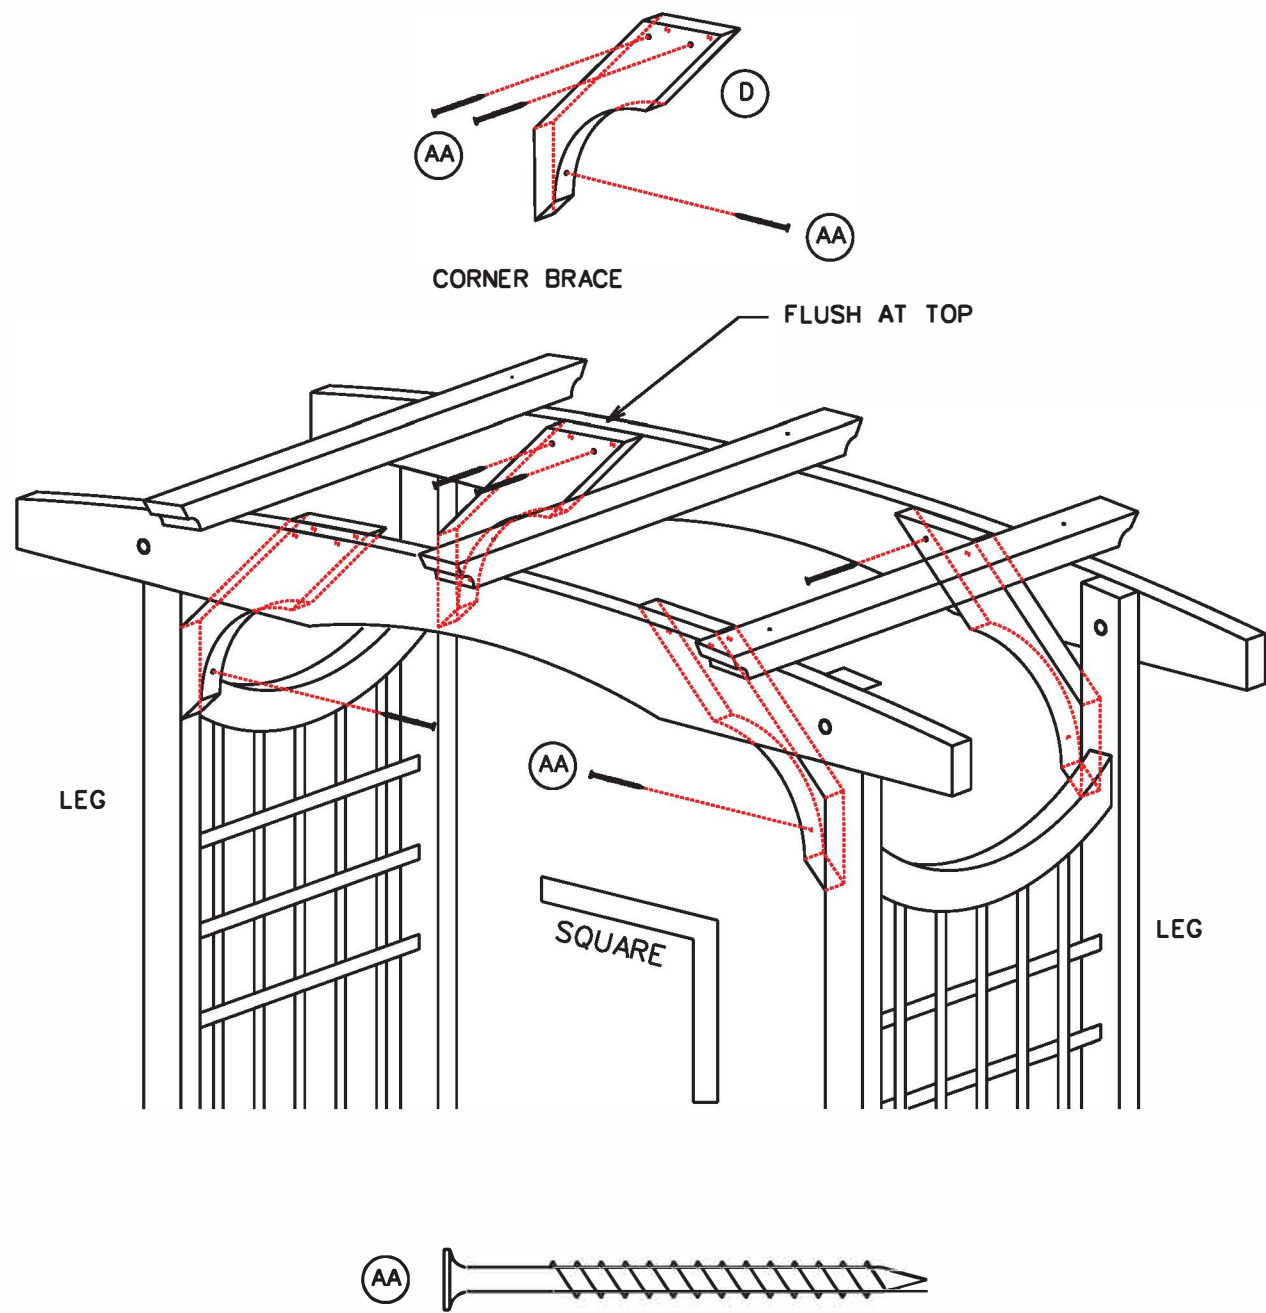

ASSEMBLY INSTRUCTIONS FOR
MODEL #37PG ARBOR


CONGRATULATIONS !

You have just purchased a quality garden product from **Greenstone Garden Structures**. Please examine the contents of your package carefully before assembly. If any parts are missing, **DO NOT RETURN THIS PRODUCT OR CALL THE RETAILER**. Please contact *Greenstone Garden Structures* directly at
530-626-4492

Greenstone Enterprises, LLC
6100 Enterprise Dr. Unit I, Diamond Springs, CA 95619 WWW
.greenstonewholesale.com



#37PG ARBOR PARTS LIST

Item #	Description	Qty	Part No.
(A)	LEG FRAME ASSEMBLY	2	37-001
(B)	TOP FRONT RAIL	2	37-002
(C)	TOP RAIL CLEAT	3	37-003
(D)	CORNER BRACE	4	37-004
AA	WOOD SCREW - 2-1/2" - (STEP #1 & 3)	18	991725
AB	MACHINE BOLT - 2-3/8" - (STEP #2)	4	991733
AC	THREADED INSERTS - INSTALLED AT FACTORY	4	991764

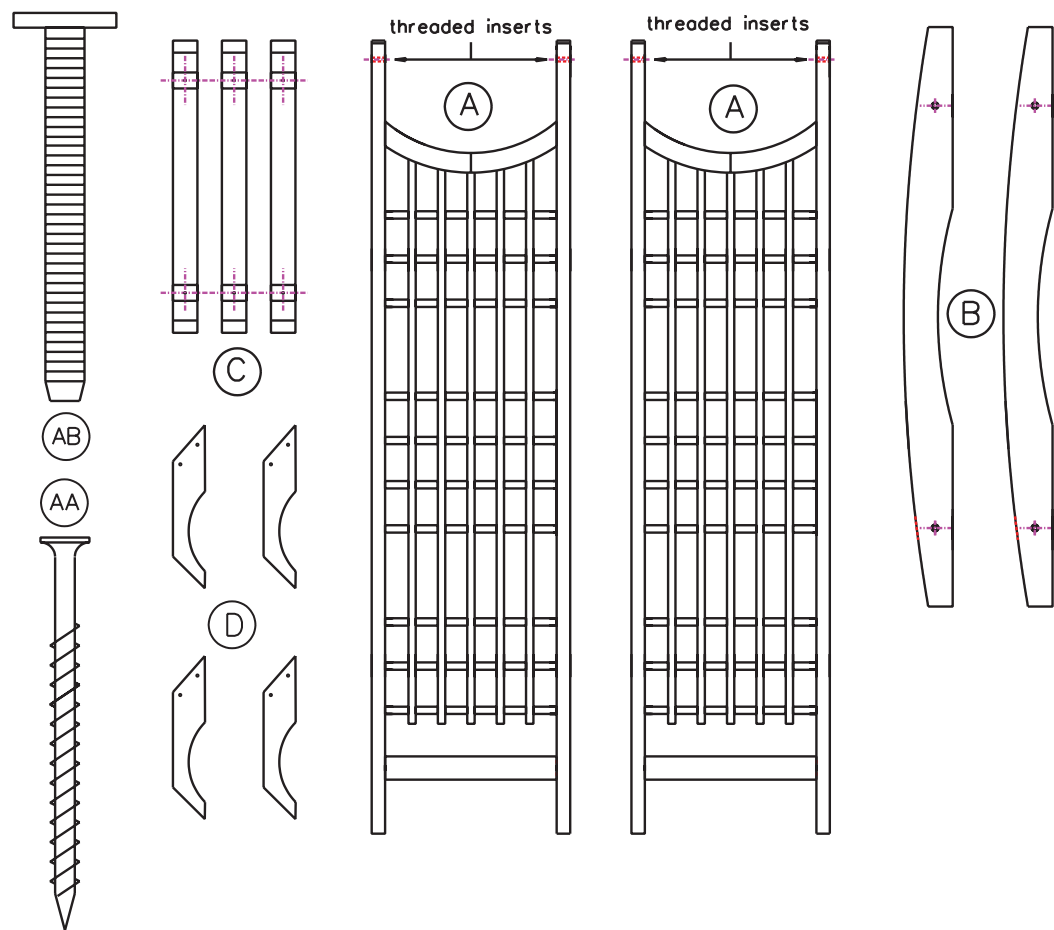

STEP #1 Attach Top Rail Cleats (C) to Top Rails (B)

- Using one of the Leg Frame Assemblies (A) as a spacer, position the 2 Top Rails (B) as shown.
- Secure the 3 Cleats (C) to the Top Rails using 6 Wood Screws (AA). Pilot holes have been provided to locate the Top Rail Cleats. Be sure that the Cleats are square (90°) to the Top Rails before tightening all of the screws.

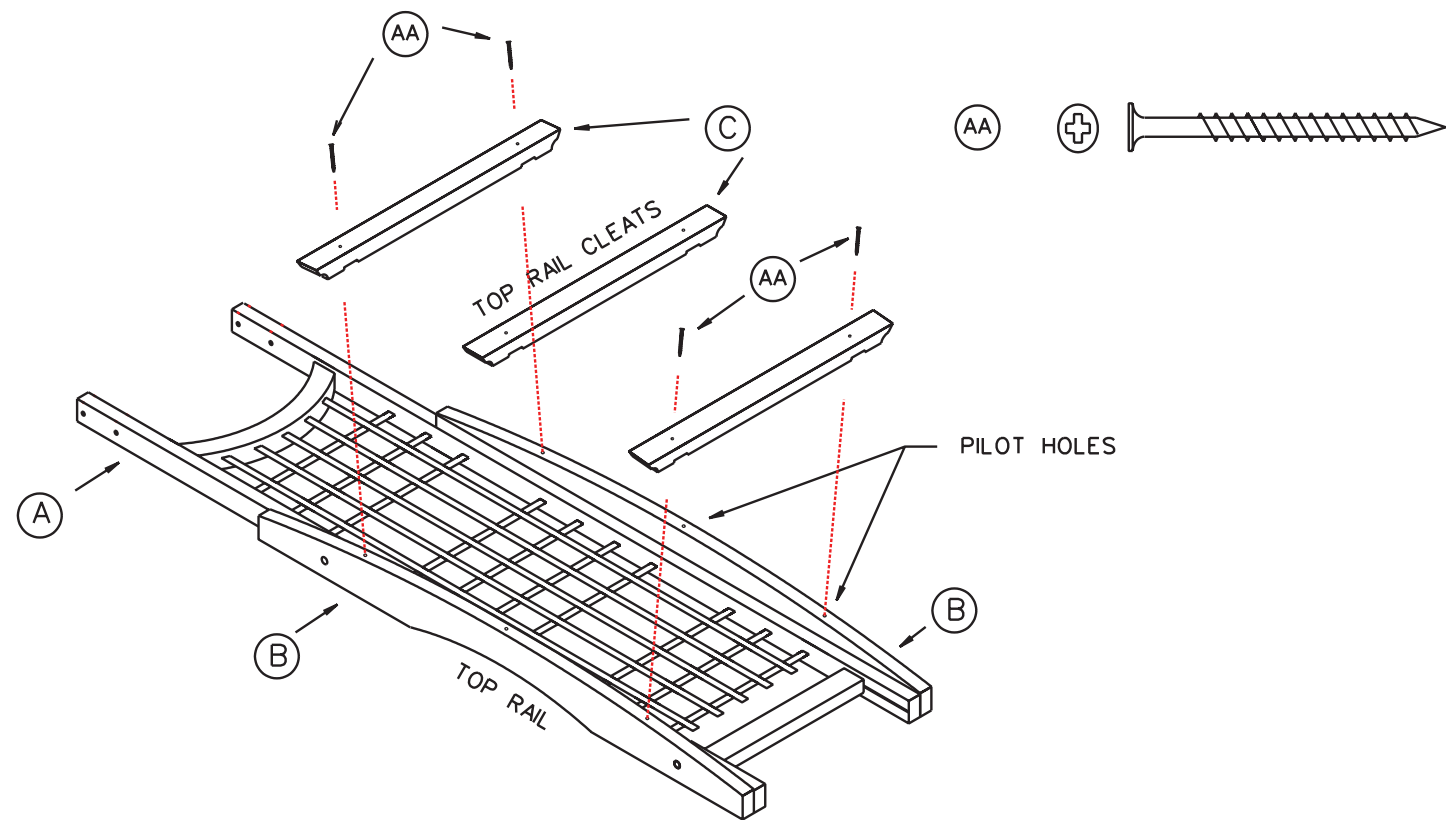

STEP #2 Attach Leg Frame Assembly to Rail Assembly

- Slide the 2 posts of the leg Frame Assembly between the Top Rails. Be sure that the Lattice is positioned as shown. Vertical on the outside!
- Secure the parts using the 4 Machine screws (AB). Be sure that the unit is square before tightening all of the screws.

