


ASSEMBLY INSTRUCTIONS FOR YOUR HORIZON FLOOR LAMP

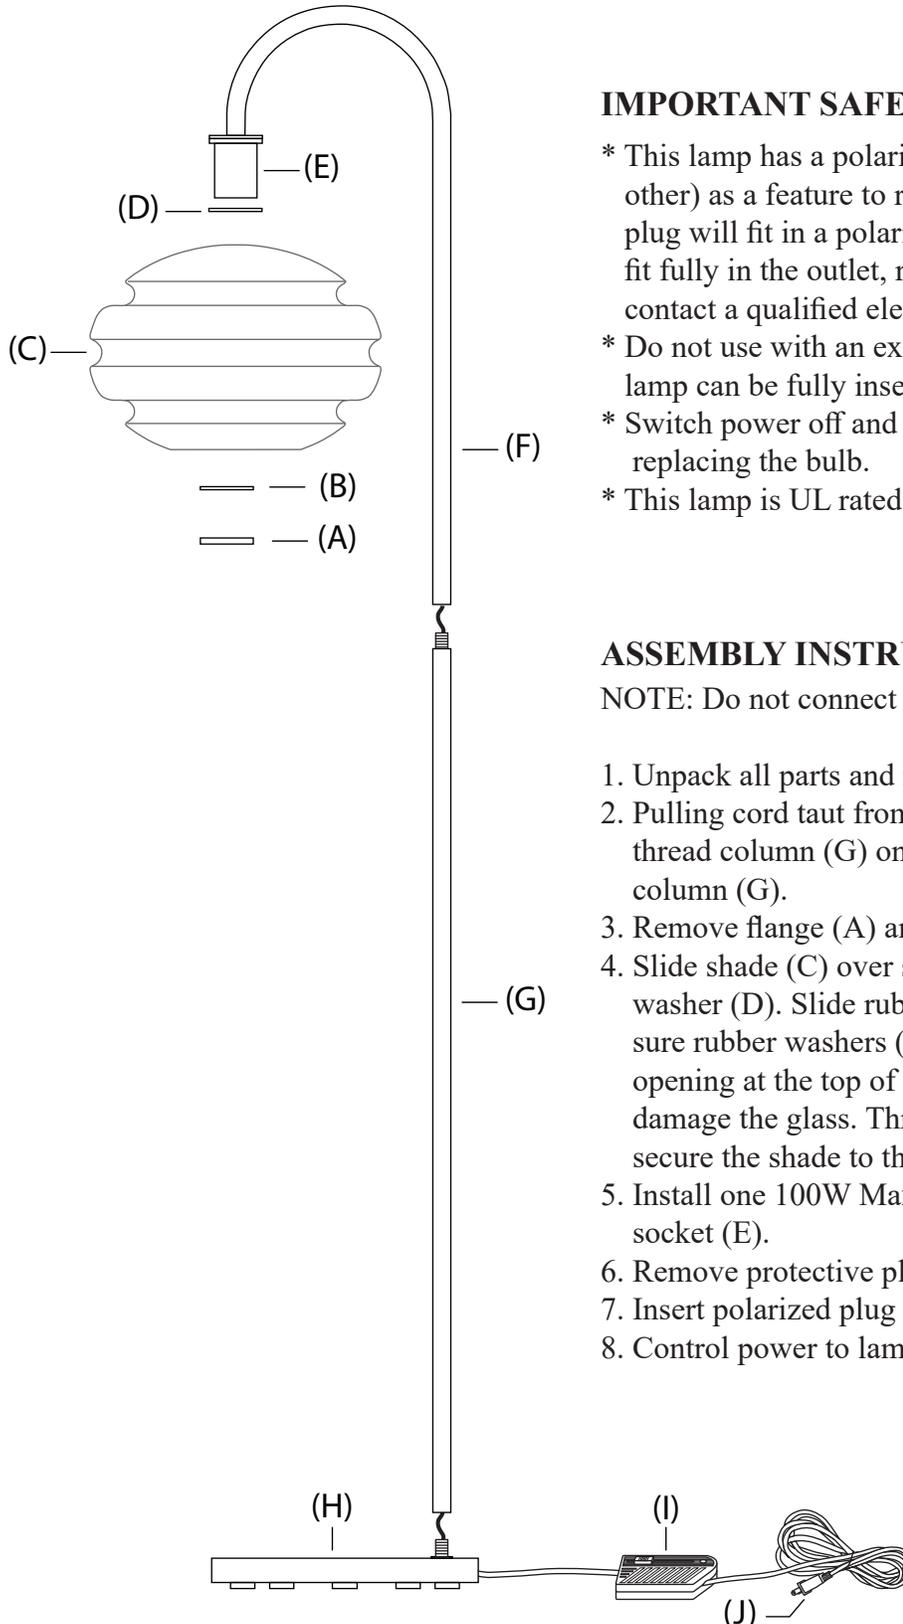

IMPORTANT SAFETY INSTRUCTIONS:

- * This lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If it does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do NOT alter the plug.
- * Do not use with an extension cord unless the plug from the lamp can be fully inserted into the extension cord receptical.
- * Switch power off and remove plug from the wall outlet before replacing the bulb.
- * This lamp is UL rated for dry locations.

ASSEMBLY INSTRUCTIONS:

NOTE: Do not connect electricity until lamp is fully assembled.

1. Unpack all parts and remove packing materials.
2. Pulling cord taut from below base (H) to avoid damage, thread column (G) onto base (H). Thread column (F) onto column (G).
3. Remove flange (A) and rubber washer (B) from socket (E)
4. Slide shade (C) over socket (E) until it rests against rubber washer (D). Slide rubber washer (B) over socket. Note: Make sure rubber washers (D and B) sit on either side of the opening at the top of glass shade so that metal does not damage the glass. Thread flange (A) back onto the socket to secure the shade to the lamp.
5. Install one 100W Max. Type A, medium base bulb into the socket (E).
6. Remove protective plastic from plug (J).
7. Insert polarized plug (J) into wall outlet.
8. Control power to lamp by using full range dimmer (I).