


# 10x12 Gazebo

## Instructions for Assembly

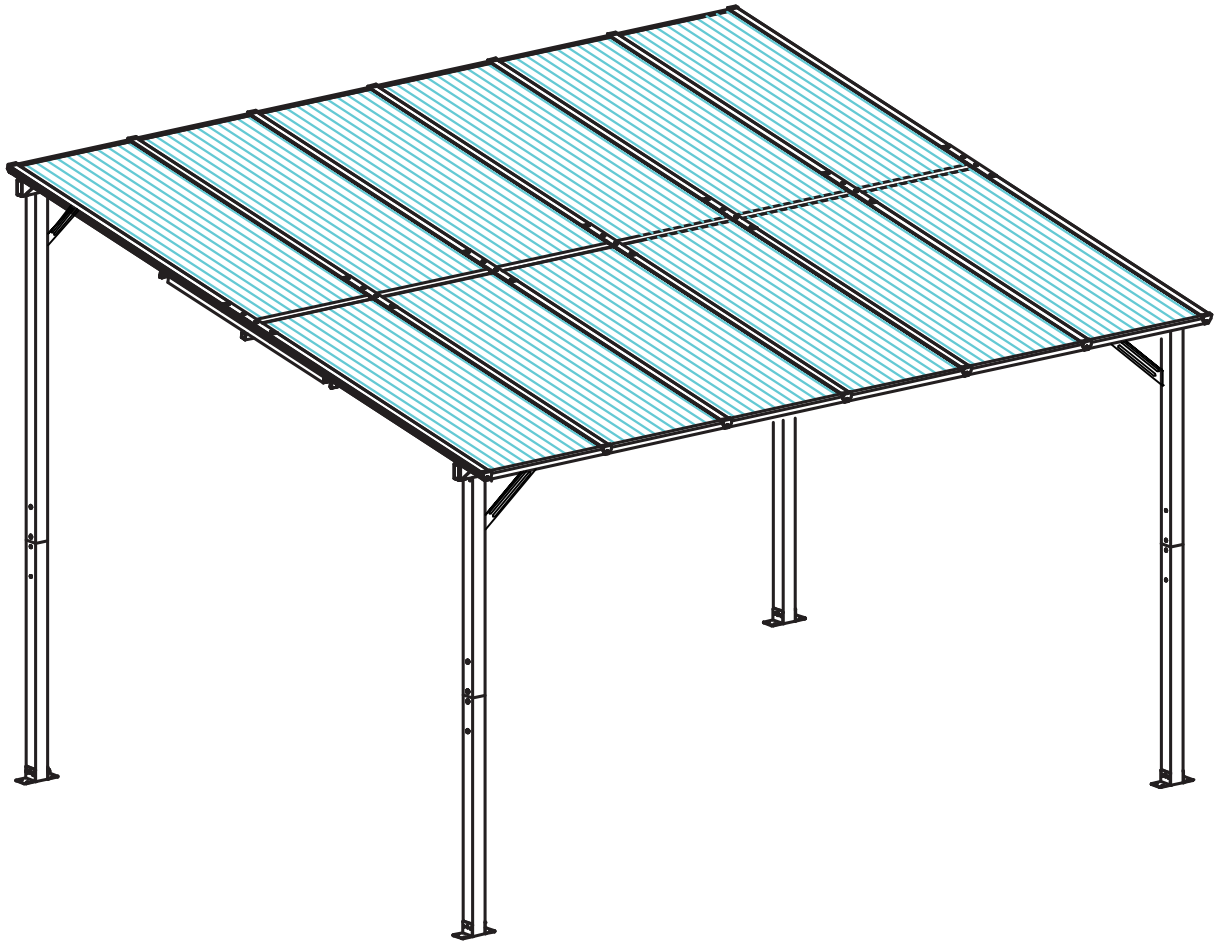

**Minimum of 3 People is required for a safe assembly of the product**

You will receive four separate boxes for this product to be fully assembled. Please make sure all boxes arrived in good condition before assembling. It happens sometimes when boxes arrive separately due to postponed carrier's shipping, and your patience is really appreciated! You can also reach out to us at any time at [VIWAT@cnrrx.net](mailto:VIWAT@cnrrx.net) for any questions!

# STOP

Missing Parts, Questions on Assembly?

Email me: [VIWAT@cnrrx.net](mailto:VIWAT@cnrrx.net)

Do not return to dealer they are not  
equipped to handle your requests.

We will reply to you within 1 business day.

**Get Ready:** Think Ahead!

**Prep Work:** Before you dive into setting up your new gazebo, make sure to check out your local building codes. These codes might have specific guidelines on footings, placement, and other key details. Don't skip this step!

**Understand the Guide:** We've put together detailed instructions for you. Take some time to go through them. They're packed with crucial info and handy tips that'll make your installation smoother and even more satisfying.











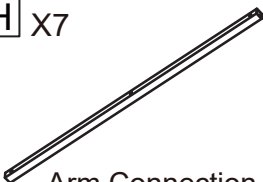




























**Tools & Supplies:** You're going to need some basic tools and materials. The anchoring method and foundation type you choose will determine what exactly you'll need. So, make a comprehensive list based on your plan to stay organized.

Before You Start Assembling






**Instruction Manual:** This manual's got everything you need for setting up your carport. Go through all the instructions before starting. As you assemble, following the steps in order is key to getting it right.


**Check Your Parts:** Make sure you've got all the necessary parts and the right quantities as listed. They should all be in your package, neatly packed within the carton. We've thrown in some extra fasteners too, just to make things easier for you.

## Parts List

<div>A</div> X1	<div>A1</div> X1	<div>B</div> X1	<div>B1</div> X1	
				
Top Back Leg(Left)	Top Back Leg(Right)	Top Front Leg(Left)	Top Front Leg(Right)	
<div>C</div> X4	<div>D</div> X4	<div>D1</div> X2	<div>E</div> X14	
				
Bottom Leg	Side Beam	Middle Beam	Board Arm	
<div>F</div> X12	<div>G</div> X6	<div>H</div> X7	<div>I</div> X2	
				
Board Protection	Middle Board Connection	Arm Connection	Arm Hold Tube(Side)	
<div>I1</div> X1	<div>J</div> X2	<div>K</div> X12	<div>L</div> X4	
				
Arm Hold Tube(Middle)	Arm Hold Tube Connection	UV Protected Board	Leg Connection	
<div>M</div> X10	<div>N</div> X4	<div>O</div> X2	<div>P</div> X2	
				
Wall & Beam Connection	Back Connection	Right Beam Hold	Left Beam Hold	
<div>Q</div> X14	<div>R</div> X14	<div>S</div> X7	<div>T</div> X7	
				
Arm & Beam Connection	Arm Protection	Arm Up Connection	Arm Down Connection	
<div>U</div> X4	<div>V</div> X14	<div>V1</div> X2	<div>V2</div> X4	<div>W</div> X163
				
Beam Plug	Hold Plug	Hold Plug	Top Leg Plug	Bolt M6*12mm
<div>X</div> X14	<div>X1</div> X7	<div>Y</div> X16	<div>Z</div> X1	<div>Z1</div> X28
				
Bolt M6*30mm	Bolt M6*40mm	Bolt M6*38mm	Allen Wrench	Bolt M6*45mm
<div>Z2</div> X8	<div>Z3</div> X1	<div>Z4</div> X1	<div>Z5</div> X11	<div>Z6</div> X4
				
Bolt M6*70mm	Allen Wrench	Middle Wall Connection	Expansion Bolts	


## STEP1

<b>D</b>		X4
<b>D1</b>		X2
<b>N</b>		X4
<b>Z4</b>		X1
<b>W</b>		X32


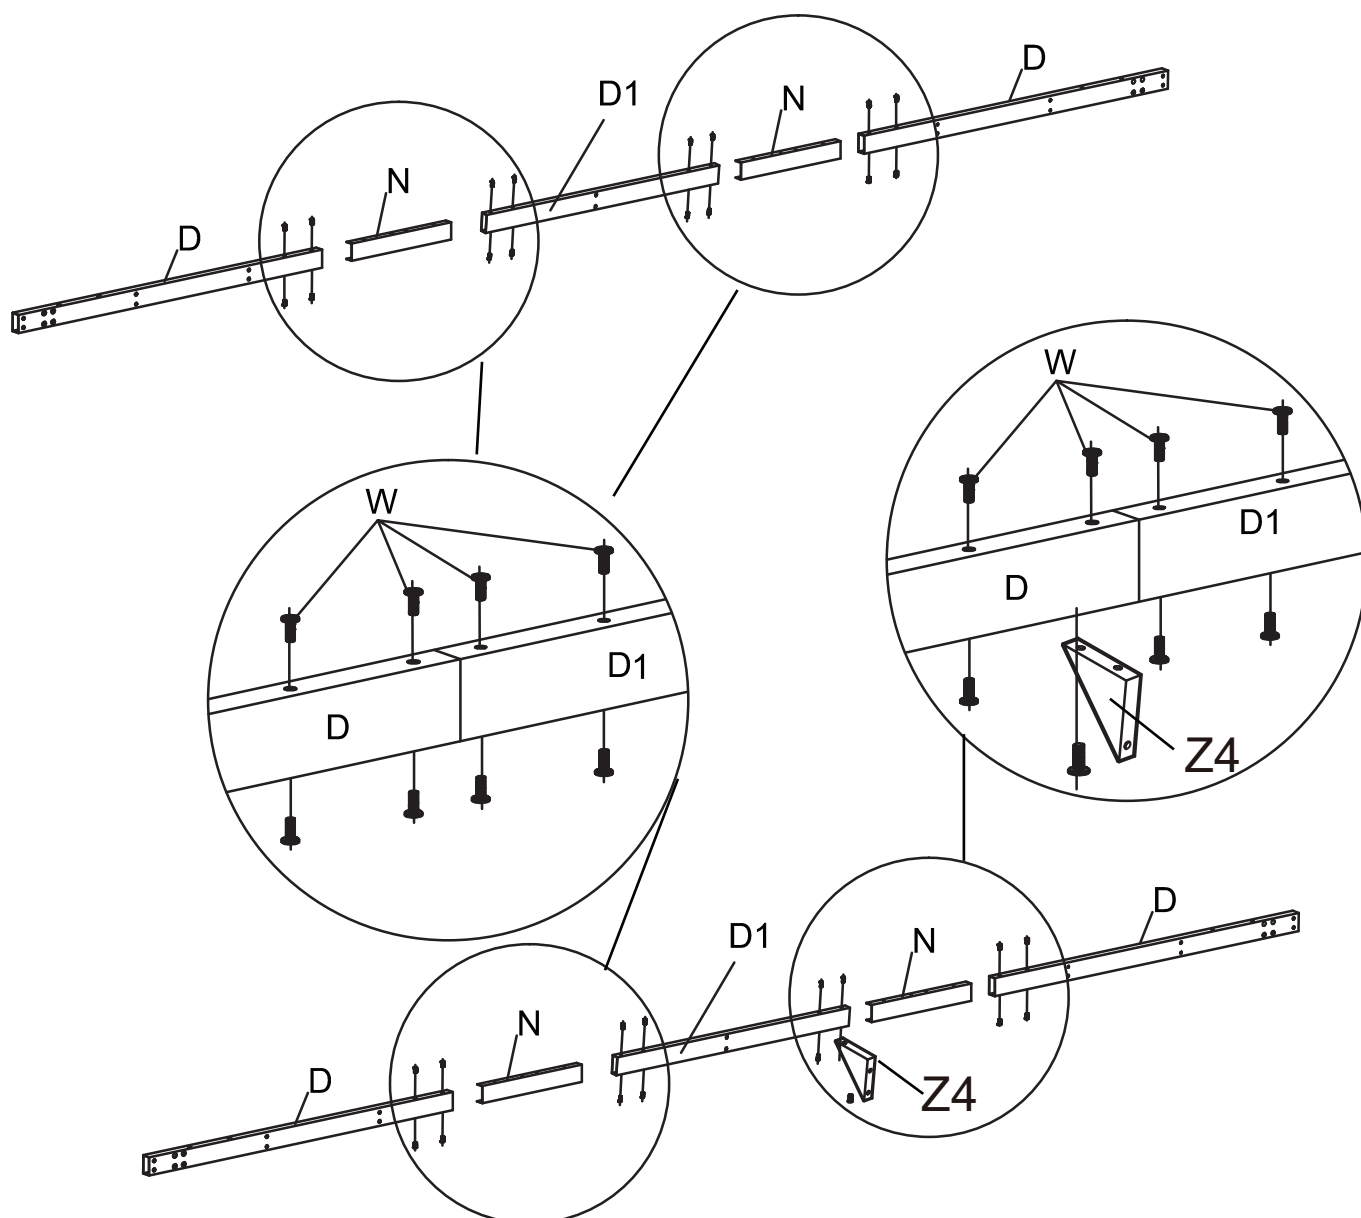






STEP2

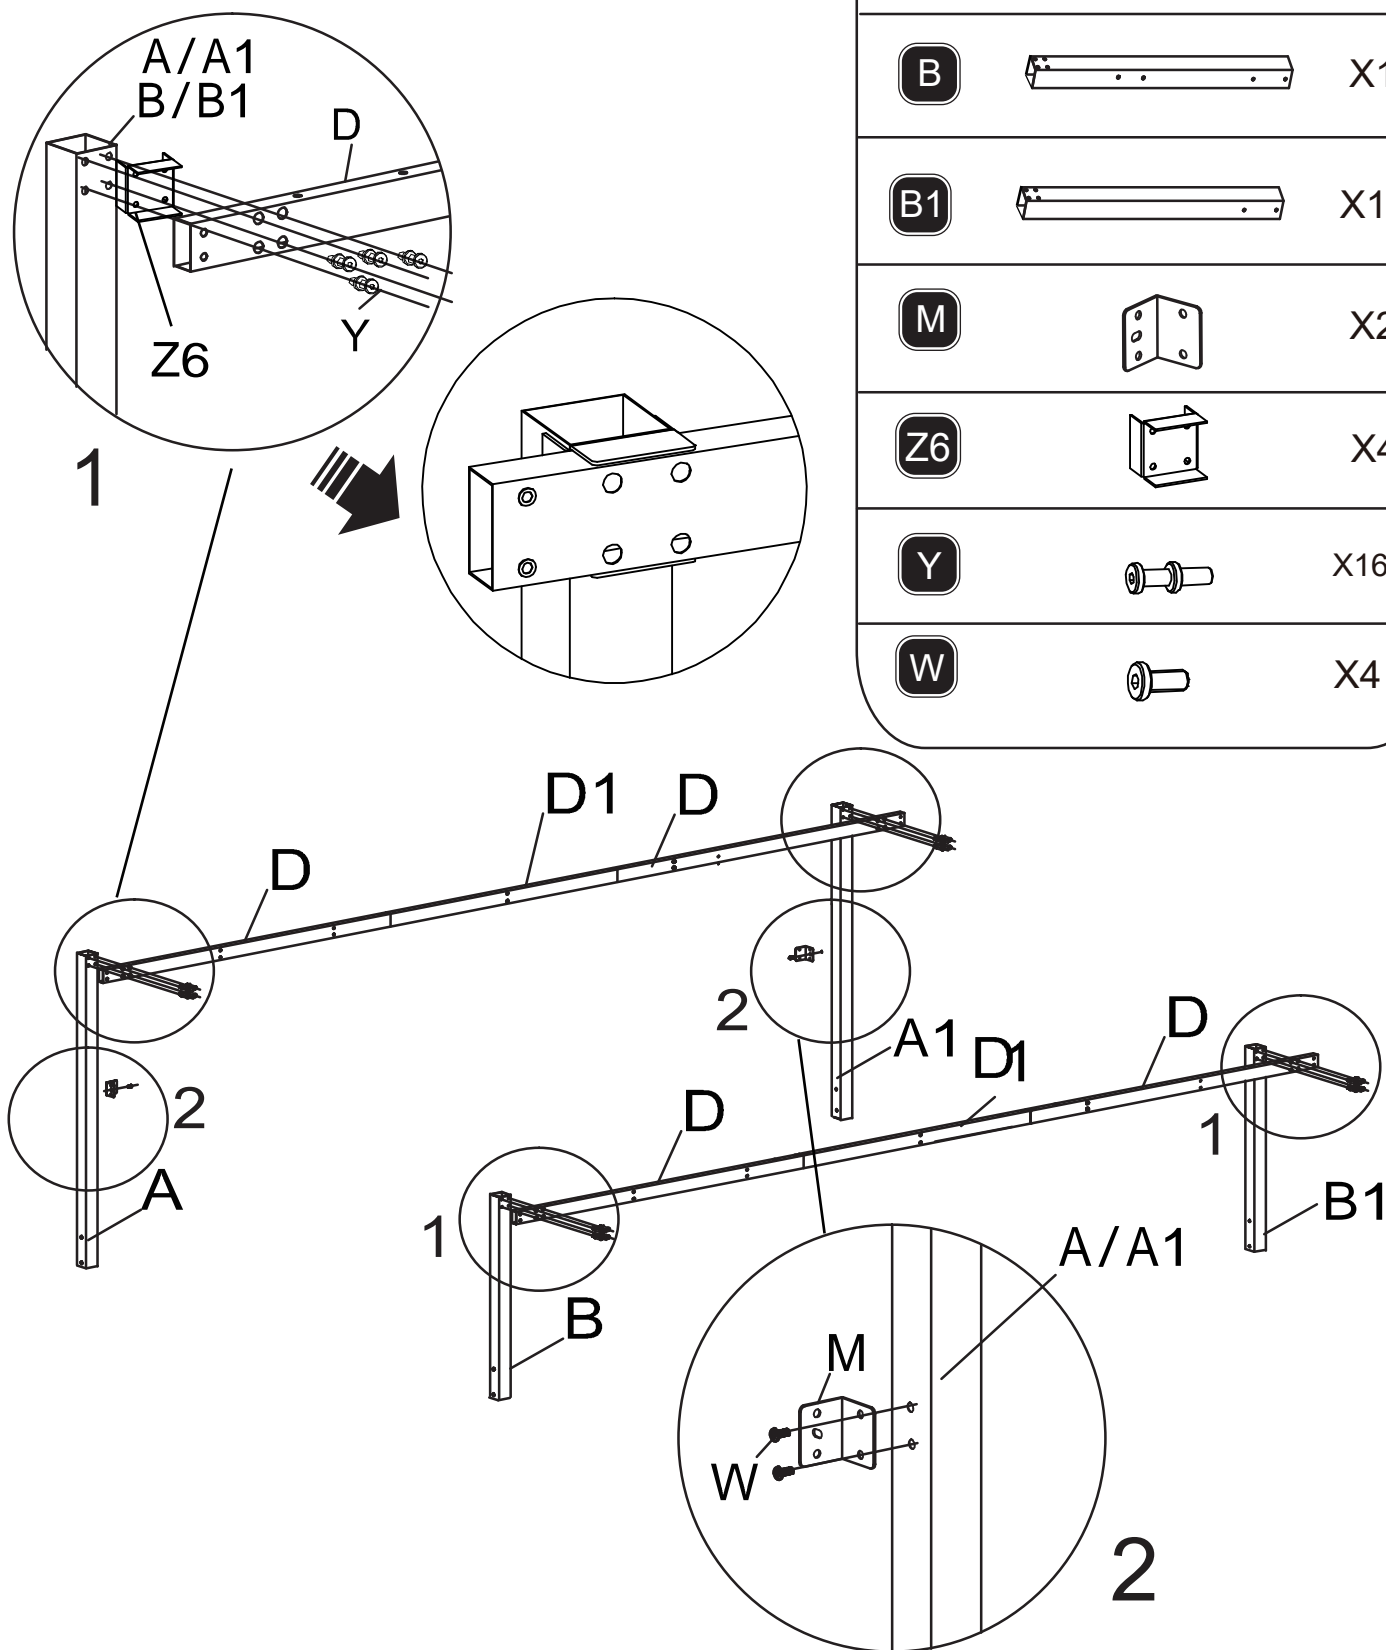A		X1
A1		X1
B		X1
B1		X1
M		X2
Z6		X4
Y		X16
W		X4






# STEP3




O		X2
P		X2
V2		X4
W		X16

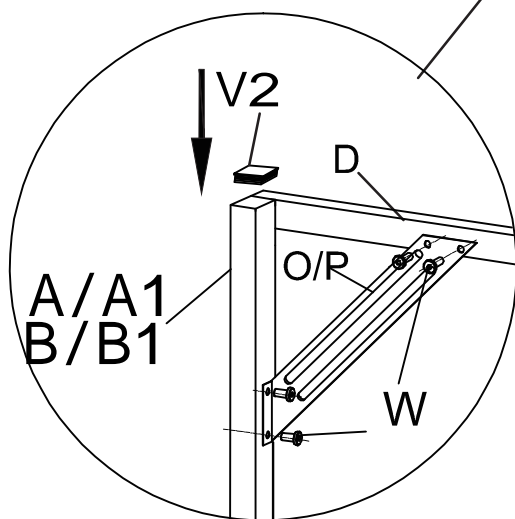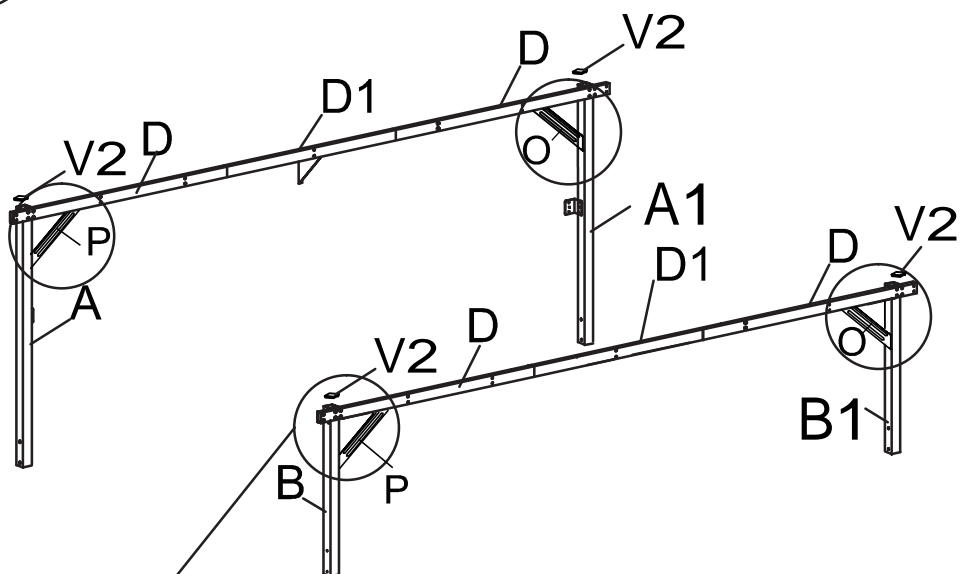



## STEP4

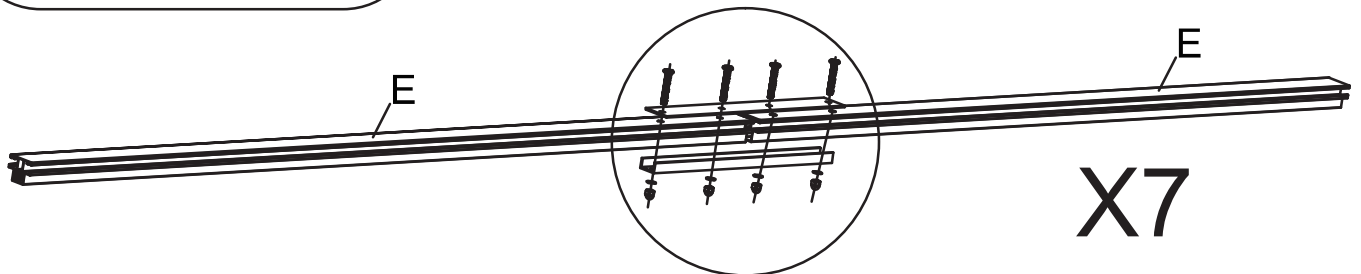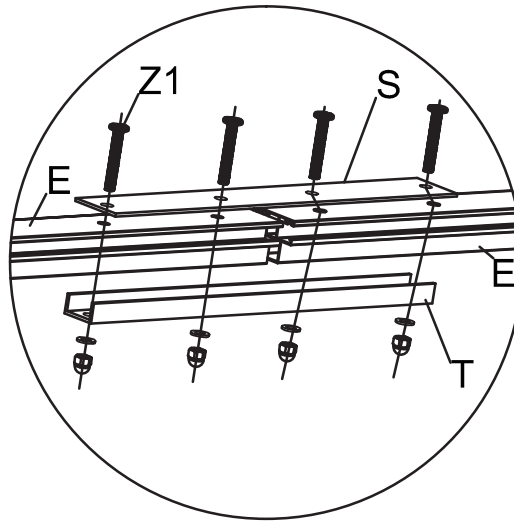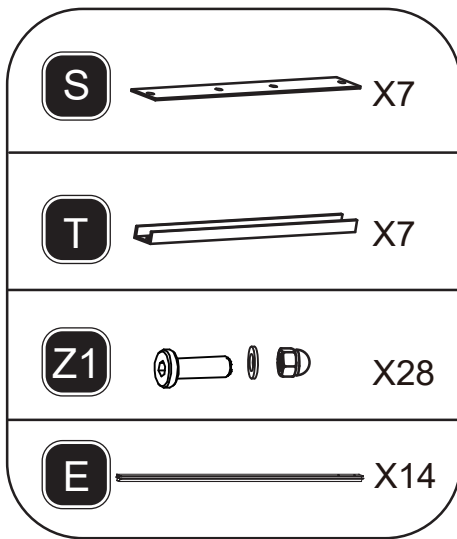

## STEP5

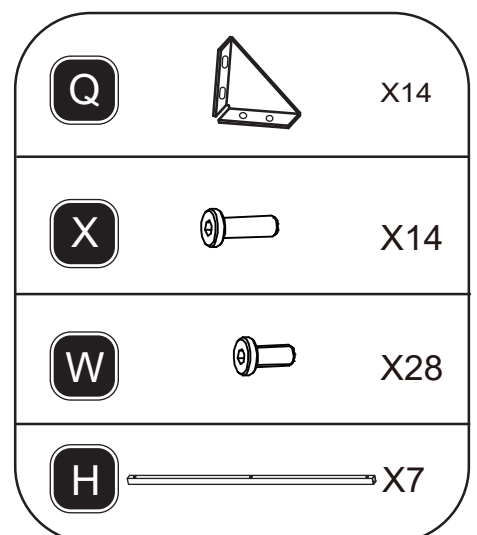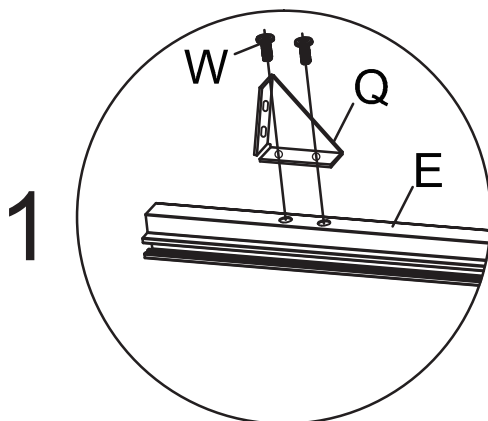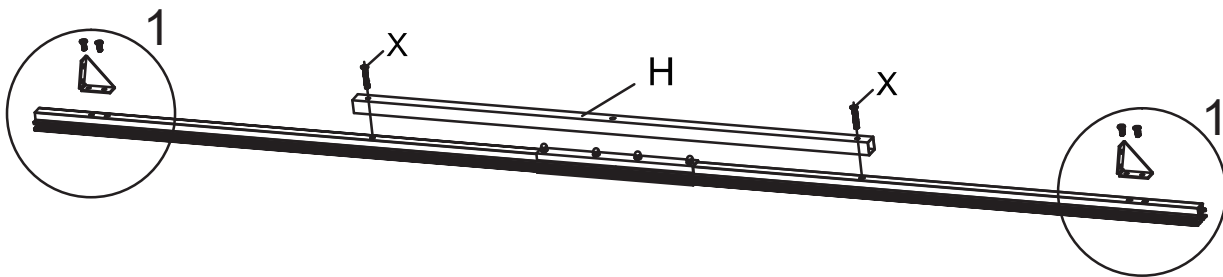

## STEP6

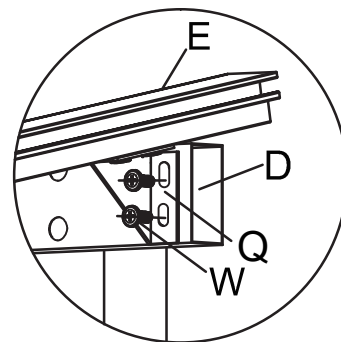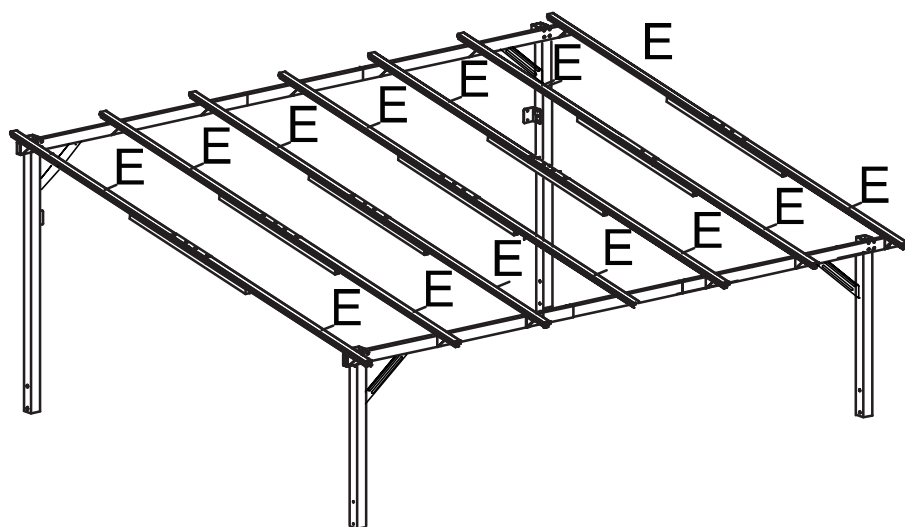

W



X28



## STEP7

The surface of the transparent film is resistant to UV rays. Installation is carried out after removing the film.




K




X6

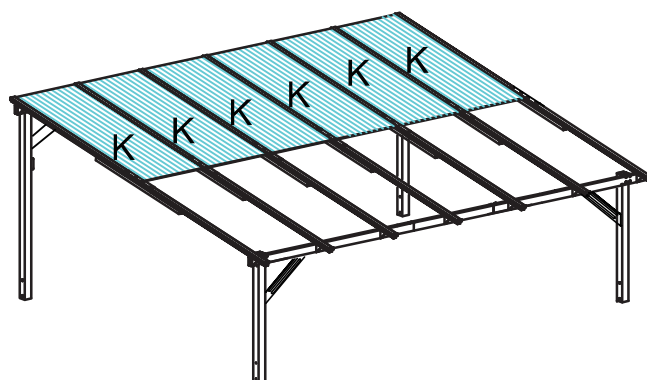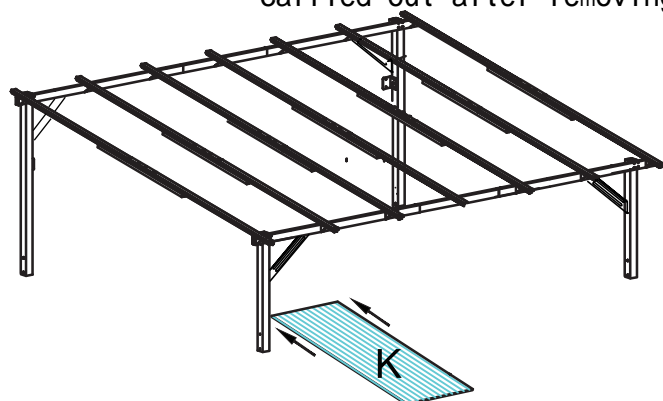

## STEP8

<b>R</b>		X7
<b>W</b>		X7
<b>F</b>		X6



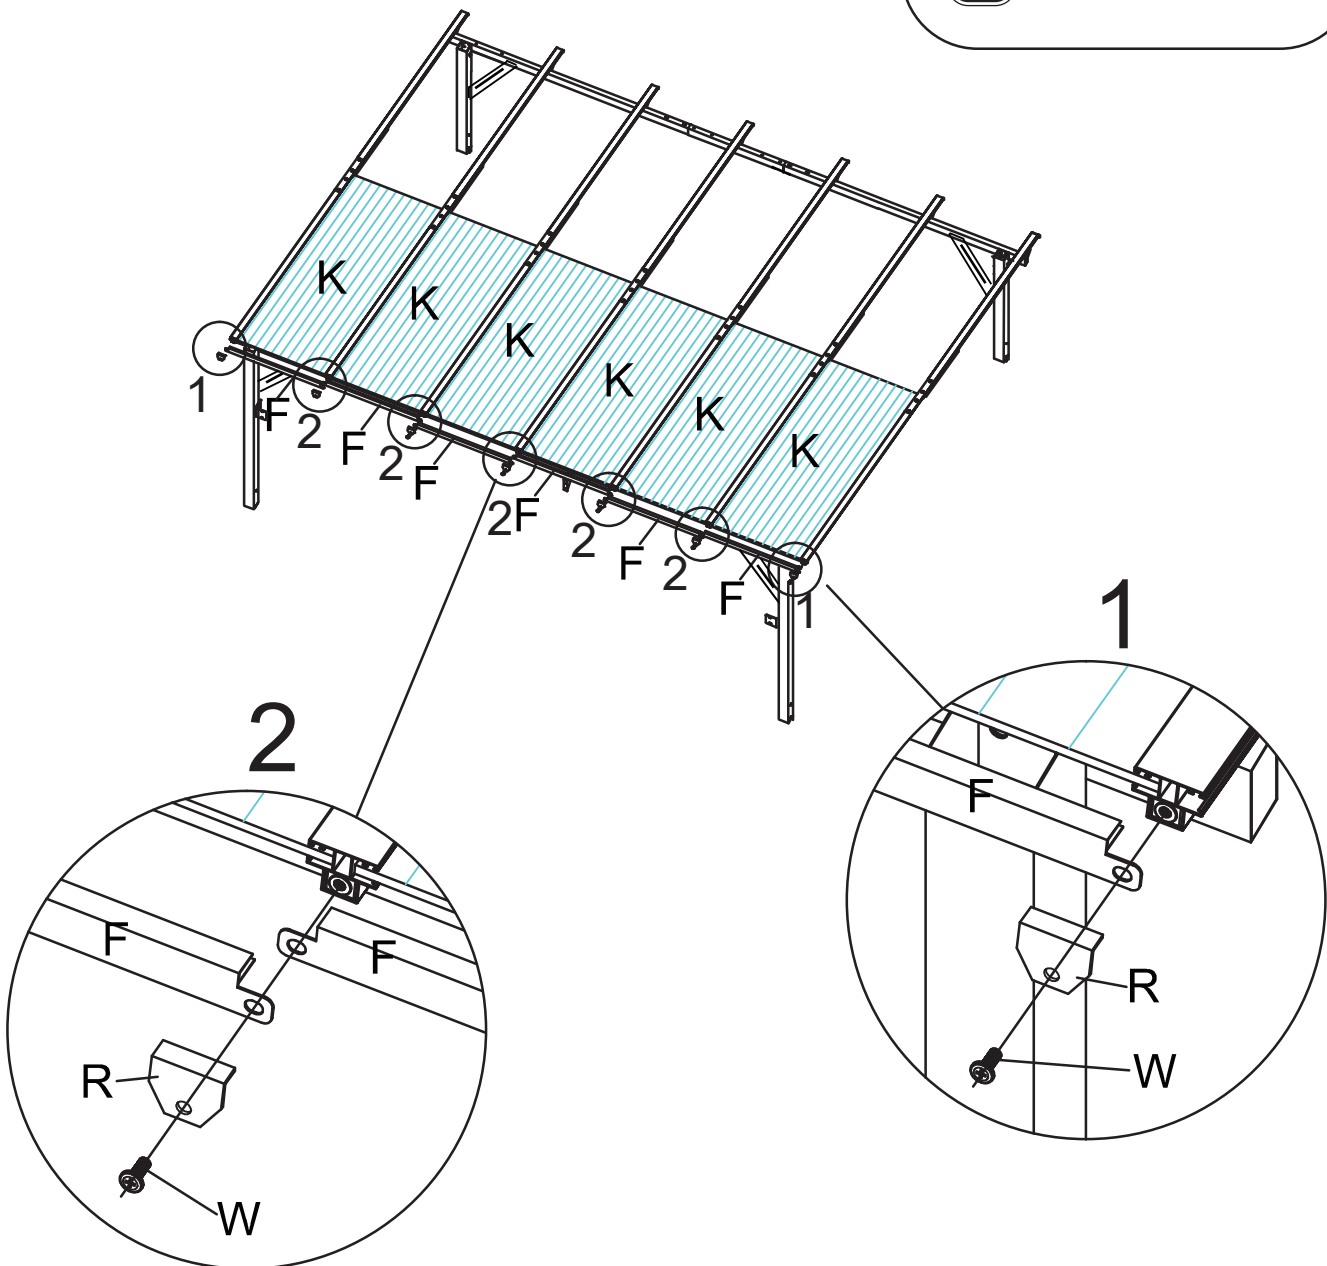


STEP9

**G**



X6

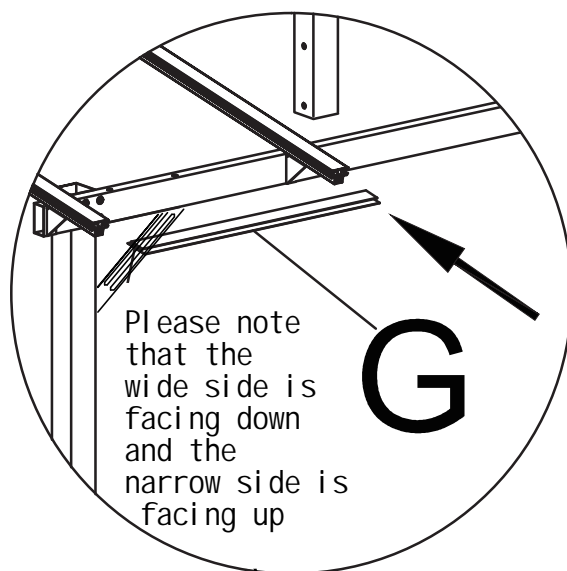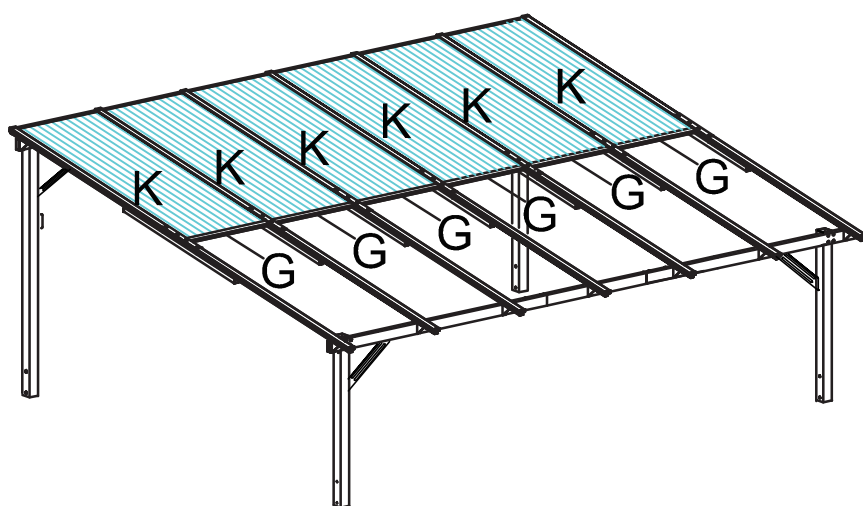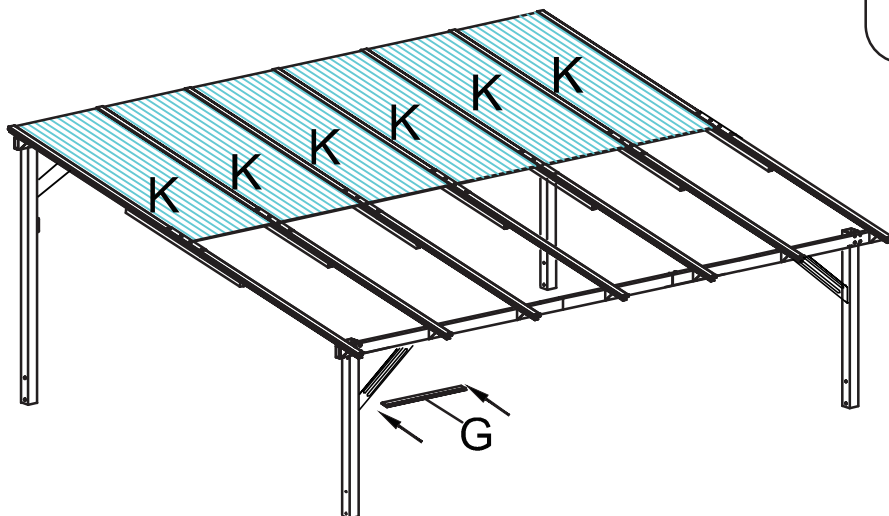



## STEP10

The surface of the transparent film is resistant to UV rays. Installation is carried out after removing the film.




K





X6

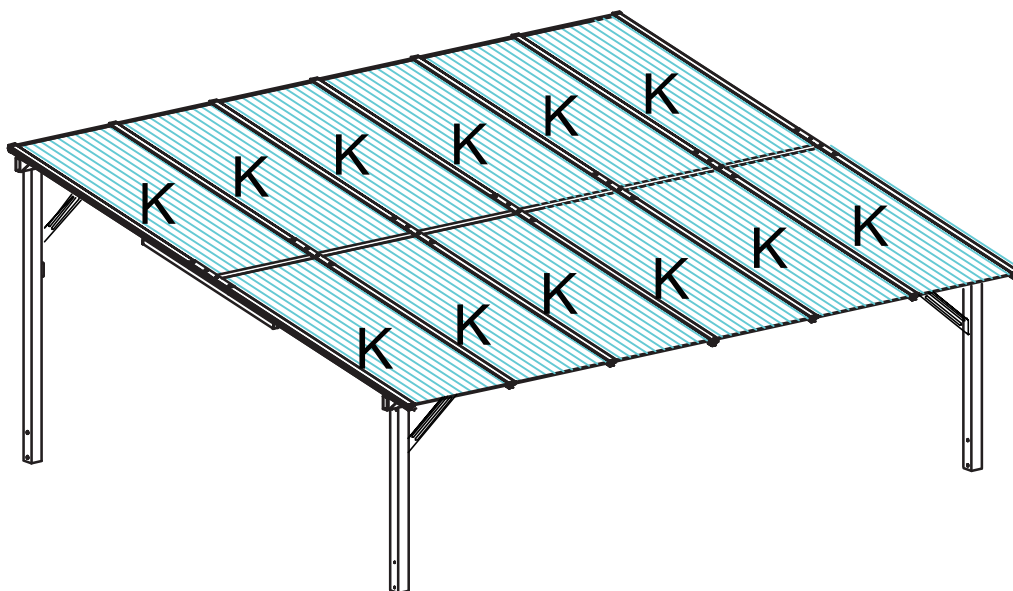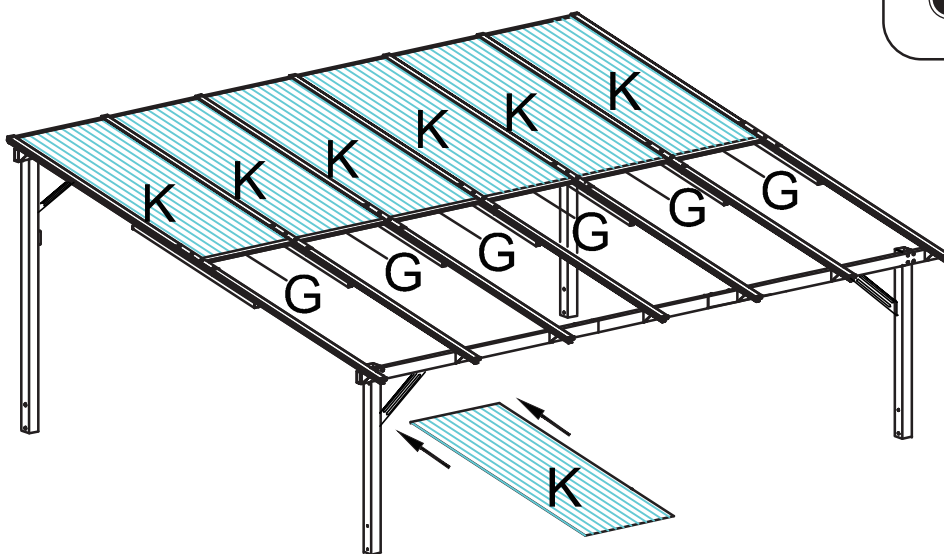


## STEP 11


<b>R</b>		X7
<b>W</b>		X7
<b>F</b>		X6

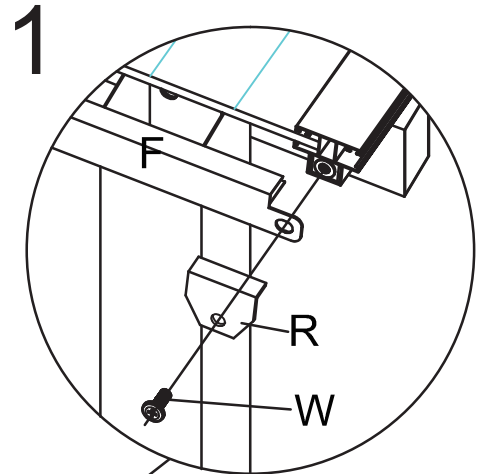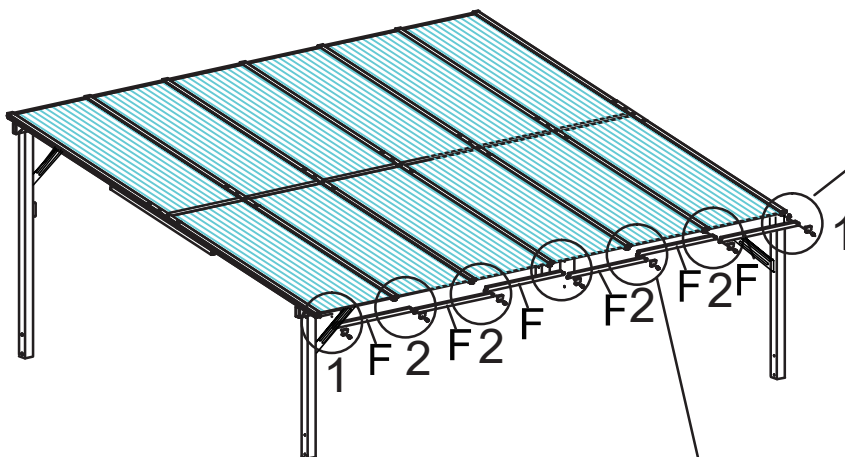



**2**

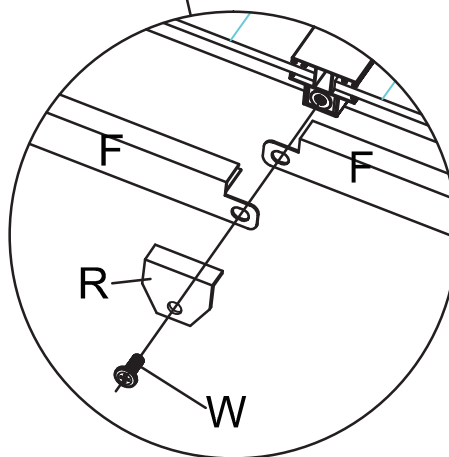

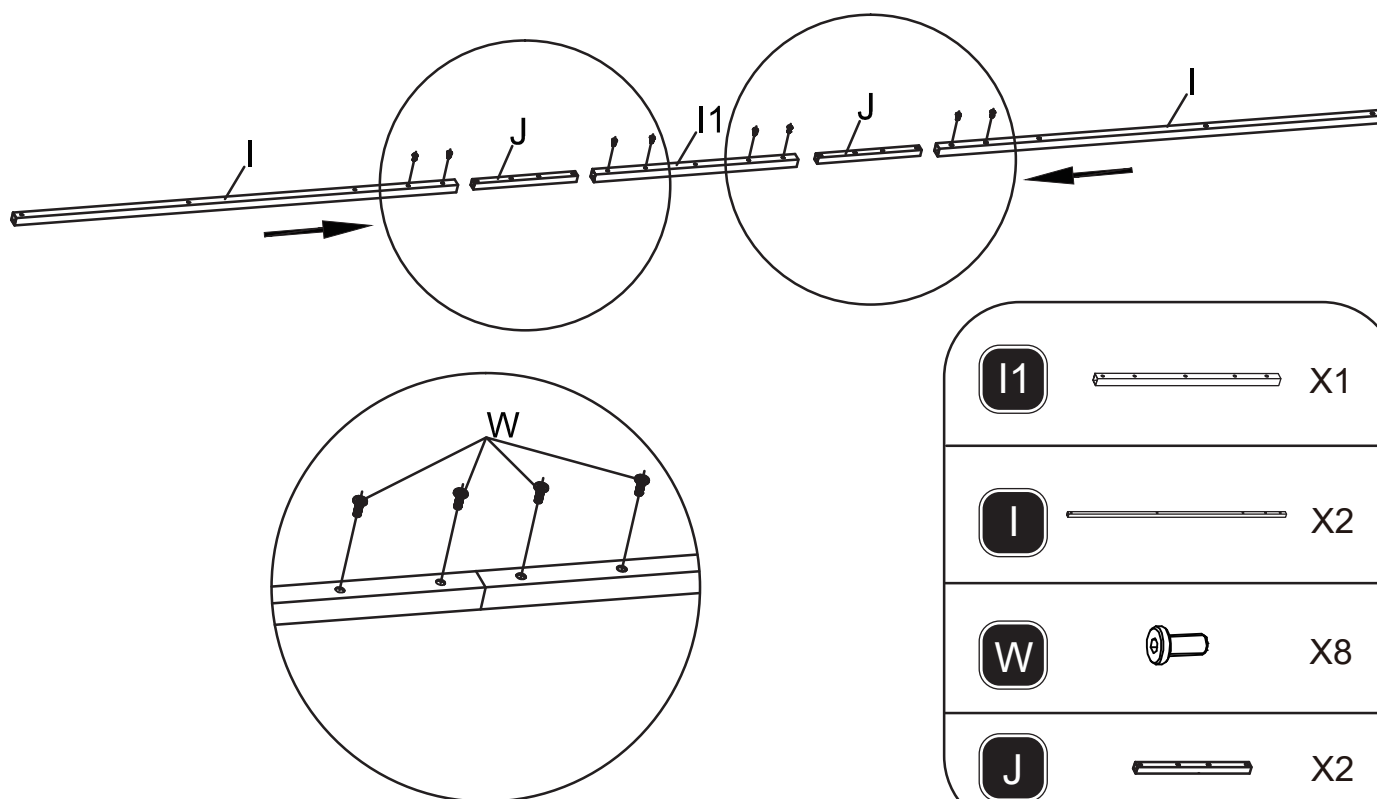


## STEP12


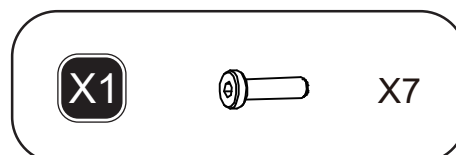
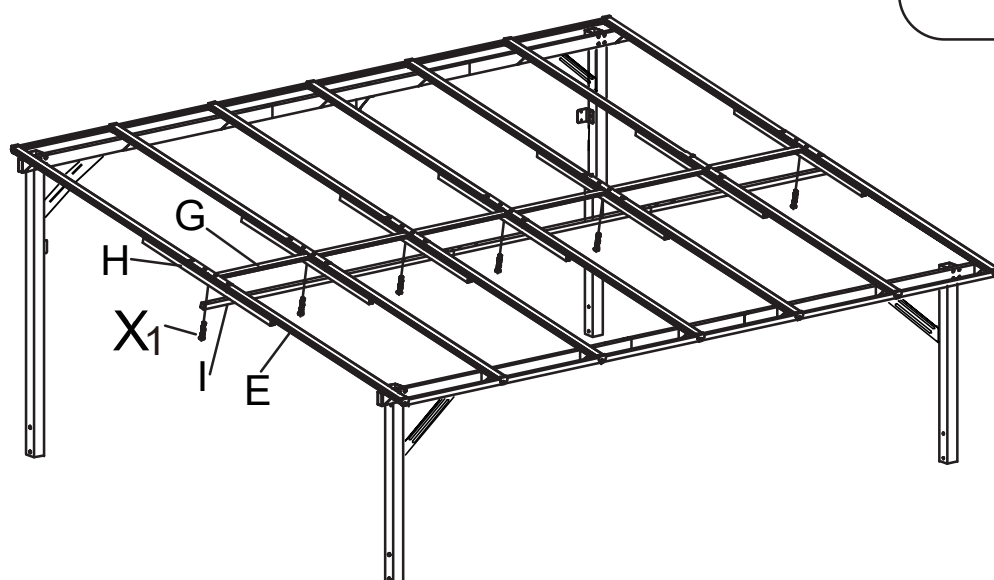


## STEP13







## STEP14

U		X4
V		X16
V1		X2

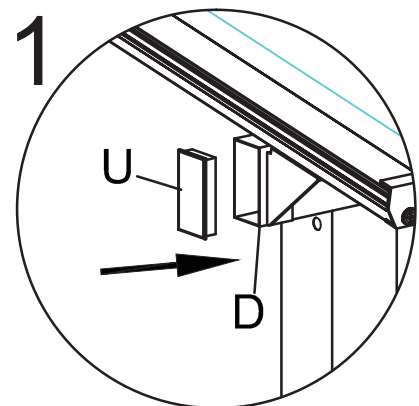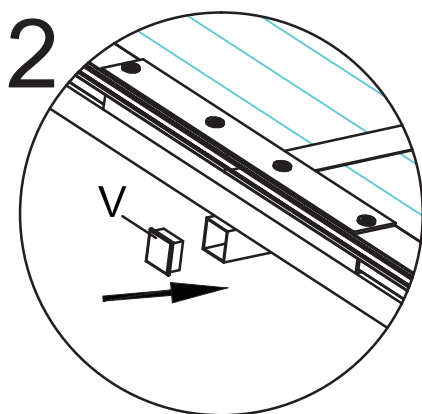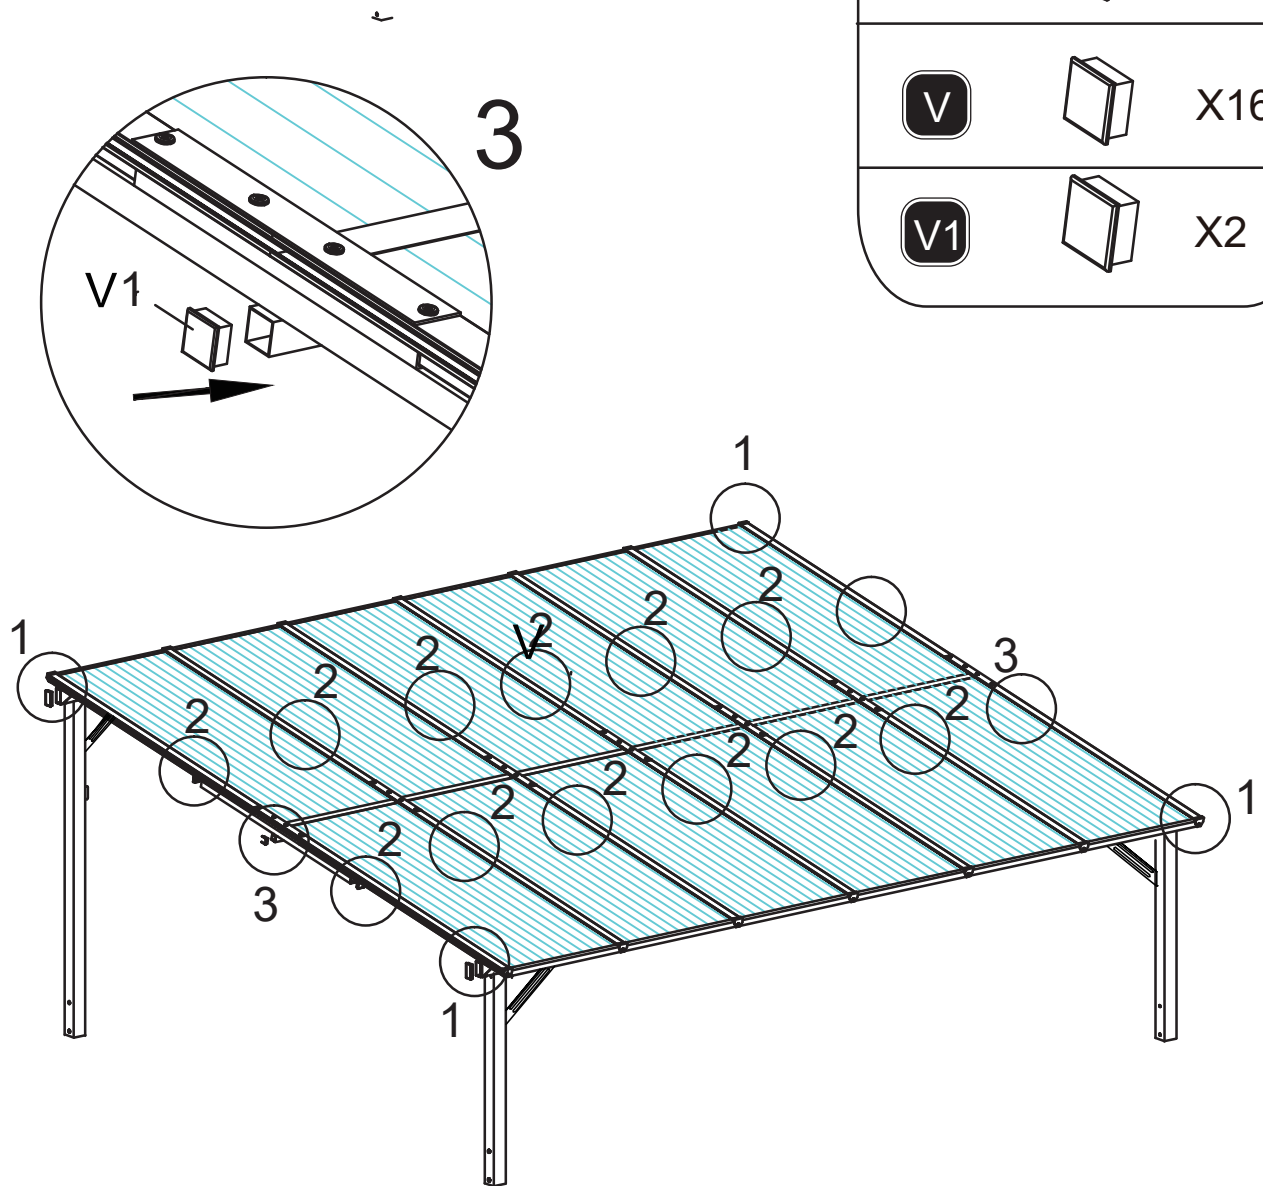

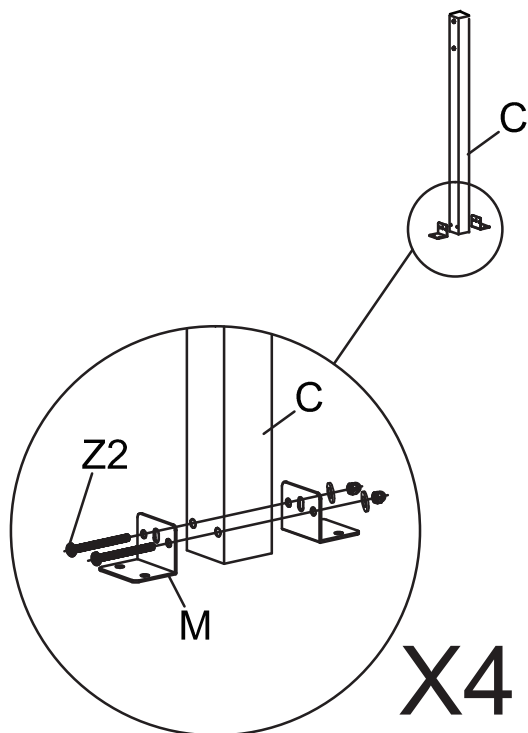


## STEP15



<b>C</b>		X4
<b>M</b>		X8
<b>Z2</b>		X8

## STEP16

<b>L</b>		X4
<b>W</b>		X16

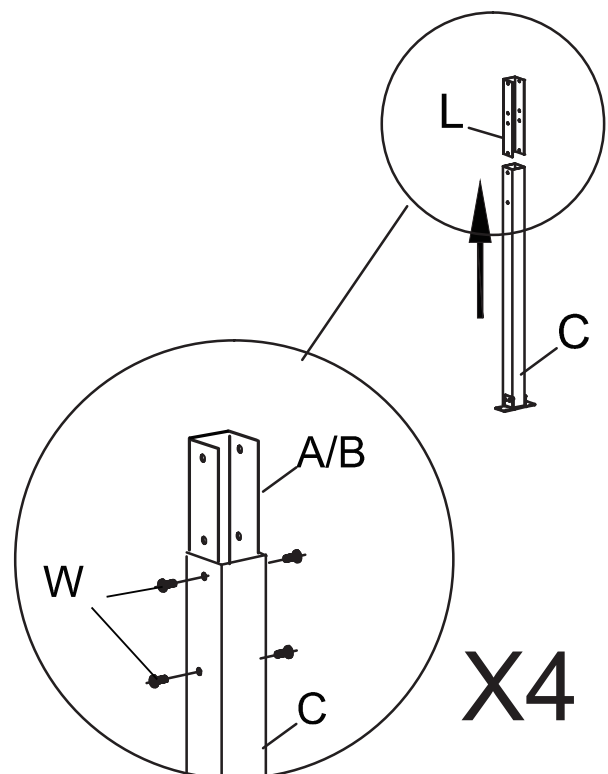


STEP17

W



X16

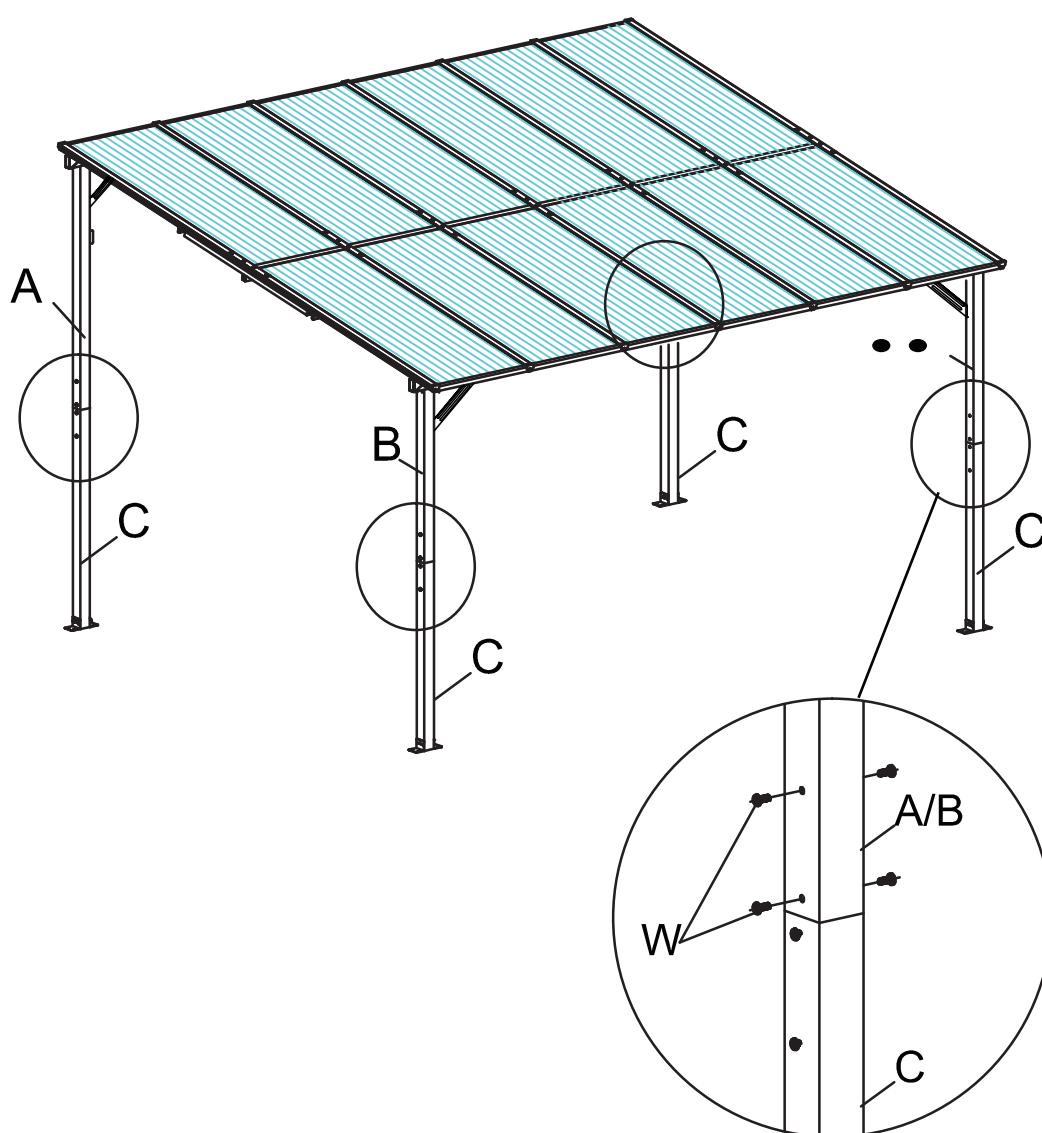

STEP18

Z5



X11

