

ASSEMBLY INSTRUCTIONS

501 - 925

TOOLS REQUIRED:

Allen Key (supplied, part # I)
Spanner Wrench (supplied, part # K)
Phillips Head Screwdriver (Not Provided)

BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

INSTRUCTIONS:

1. Lay the top on a clean and padded surface to prevent scratches and attach brackets (G) to legs table then tightened Screw (H) by a phillips head screwdriver (not provided). (See Figure 1).

2. Put shelf panel above brackets using Bolt (D), Lock Washers (E) and Flat Washers (F). Tighten with Allen key (I). (See Figure 2).

3. Attach the leg to table top using Hex Nut (A), Lock Washers (B) and Flat Washers (C). Tighten with Wrench (K). (See Figure 3).

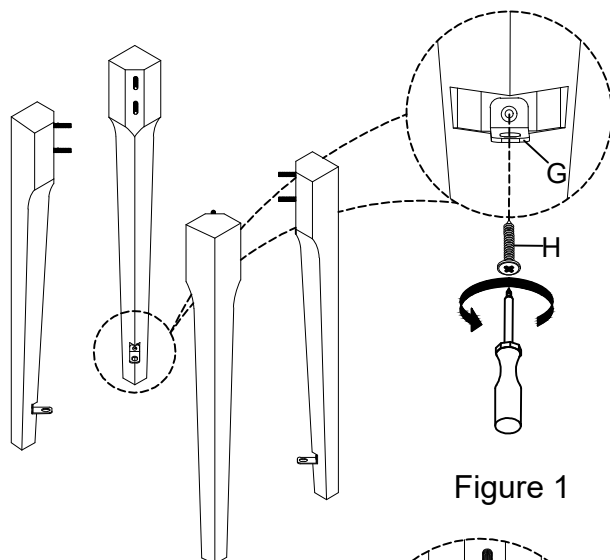


Figure 1

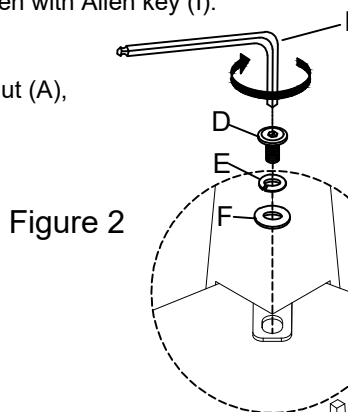


Figure 2

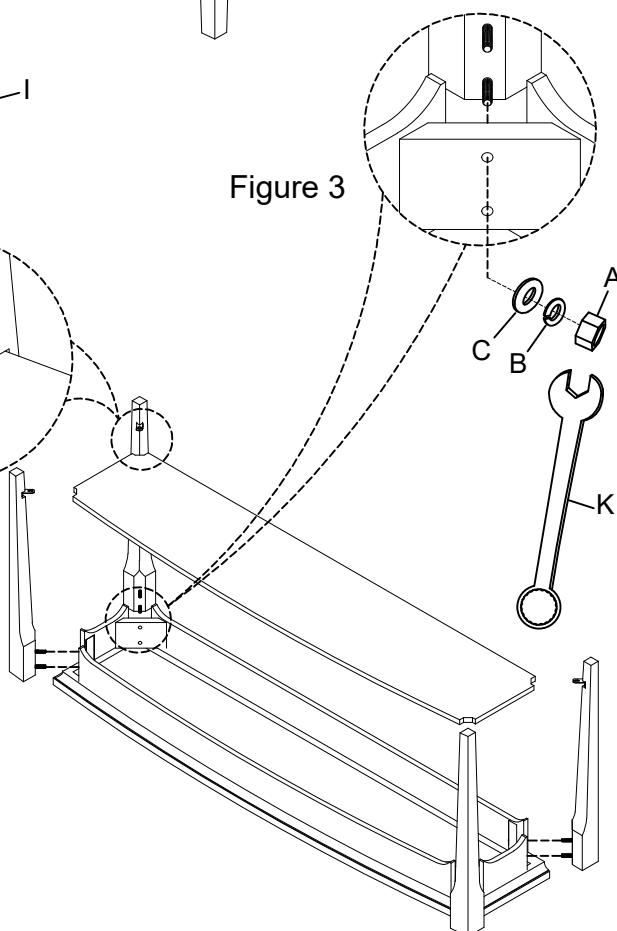


Figure 3

No.	Hardware List		Q'ty
A		Hex Nut Ø5/16" xD12xH6mm	8
B		Lock Washer Ø5/16"	8
C		Flat Washer Ø5/16"	8
D		Bolt Ø1/4 x L5/8"	4
E		Lock Washer Ø1/4"	4
F		Flat Washer Ø1/4"	4
G		Brackets	4
H		Screw	4
I		Allen Key 4mm	1

Thank you for purchasing furniture
from american drew!