


INSTALLATION INSTRUCTIONS

QYJS-LOCKER-2224

ACCESSORIES DESCRIPTION:



STEP:

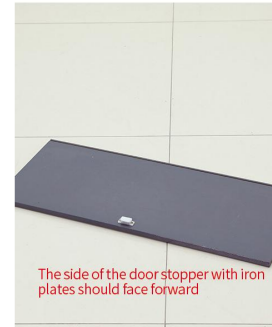

1. Use small screws to install the ordinary laminate and door stopper.



2. Use large screws to install the side frame and the ordinary laminated board with the door stopper already installed.



3. Install the top layer board with large screws.




4. Erect the bracket as shown in the figure.



5. Insert the back panel in sequence along the grooves between the layers.



6. Install the other side bracket with a large screw.

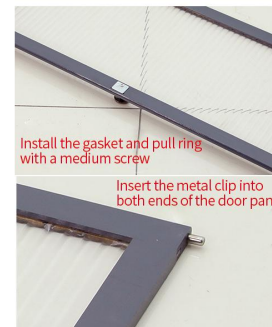

7. Install the gasket, pull ring, and metal clamp onto the door panel at once.



8. Remove the metal strip and insert it into the side bracket hole.



9. Install the metal clips on the door panel into the grooves on the side frame edge, and finally tighten all screws.