
Bedroom Vanity

Assembly Instructions - Please keep for future reference

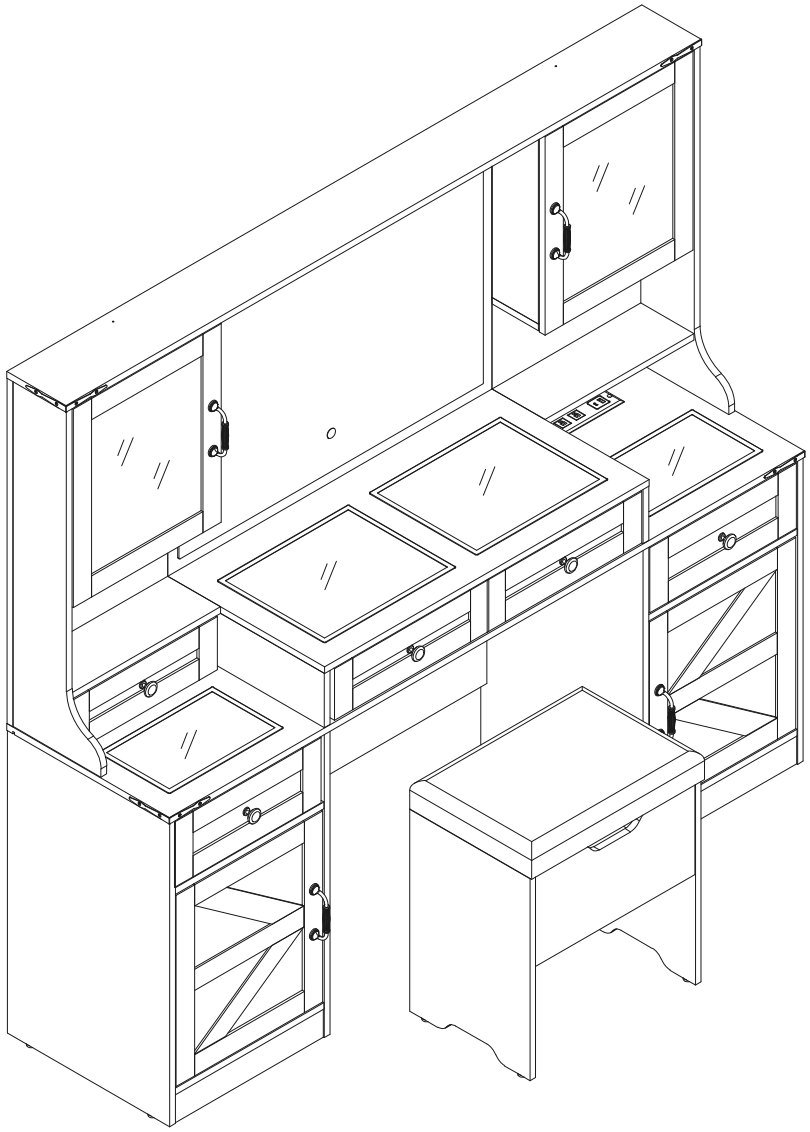


Dimensions

Width-61.50inch

Depth-15.75inch

Height-55.71inch

WARNING

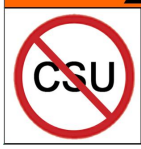

This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.

Important-Please read these instructions fully before starting assembly

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.


• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.

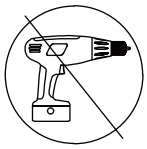

• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

• Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING
In order to help prevent overturning – please follow these instructions


To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Using Camlocks


Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

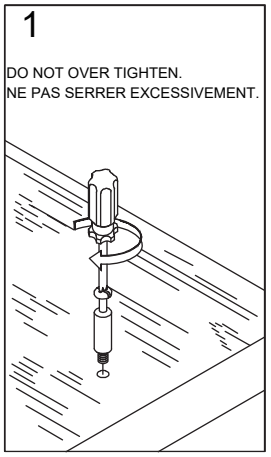

Step 2


Push the male camlock into the entry hole.

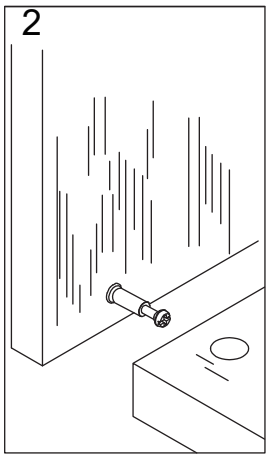

Step 3

Insert the female camlock as shown in the instruction.

Note:ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

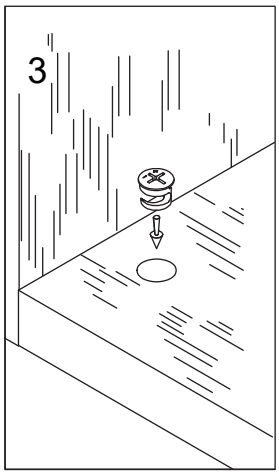


Step 4


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

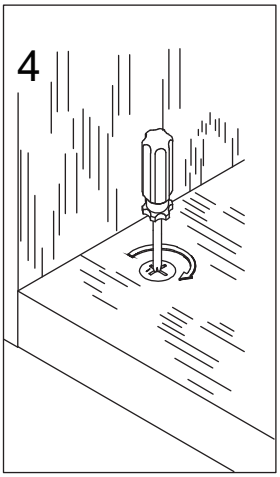


















Assembly Instructions

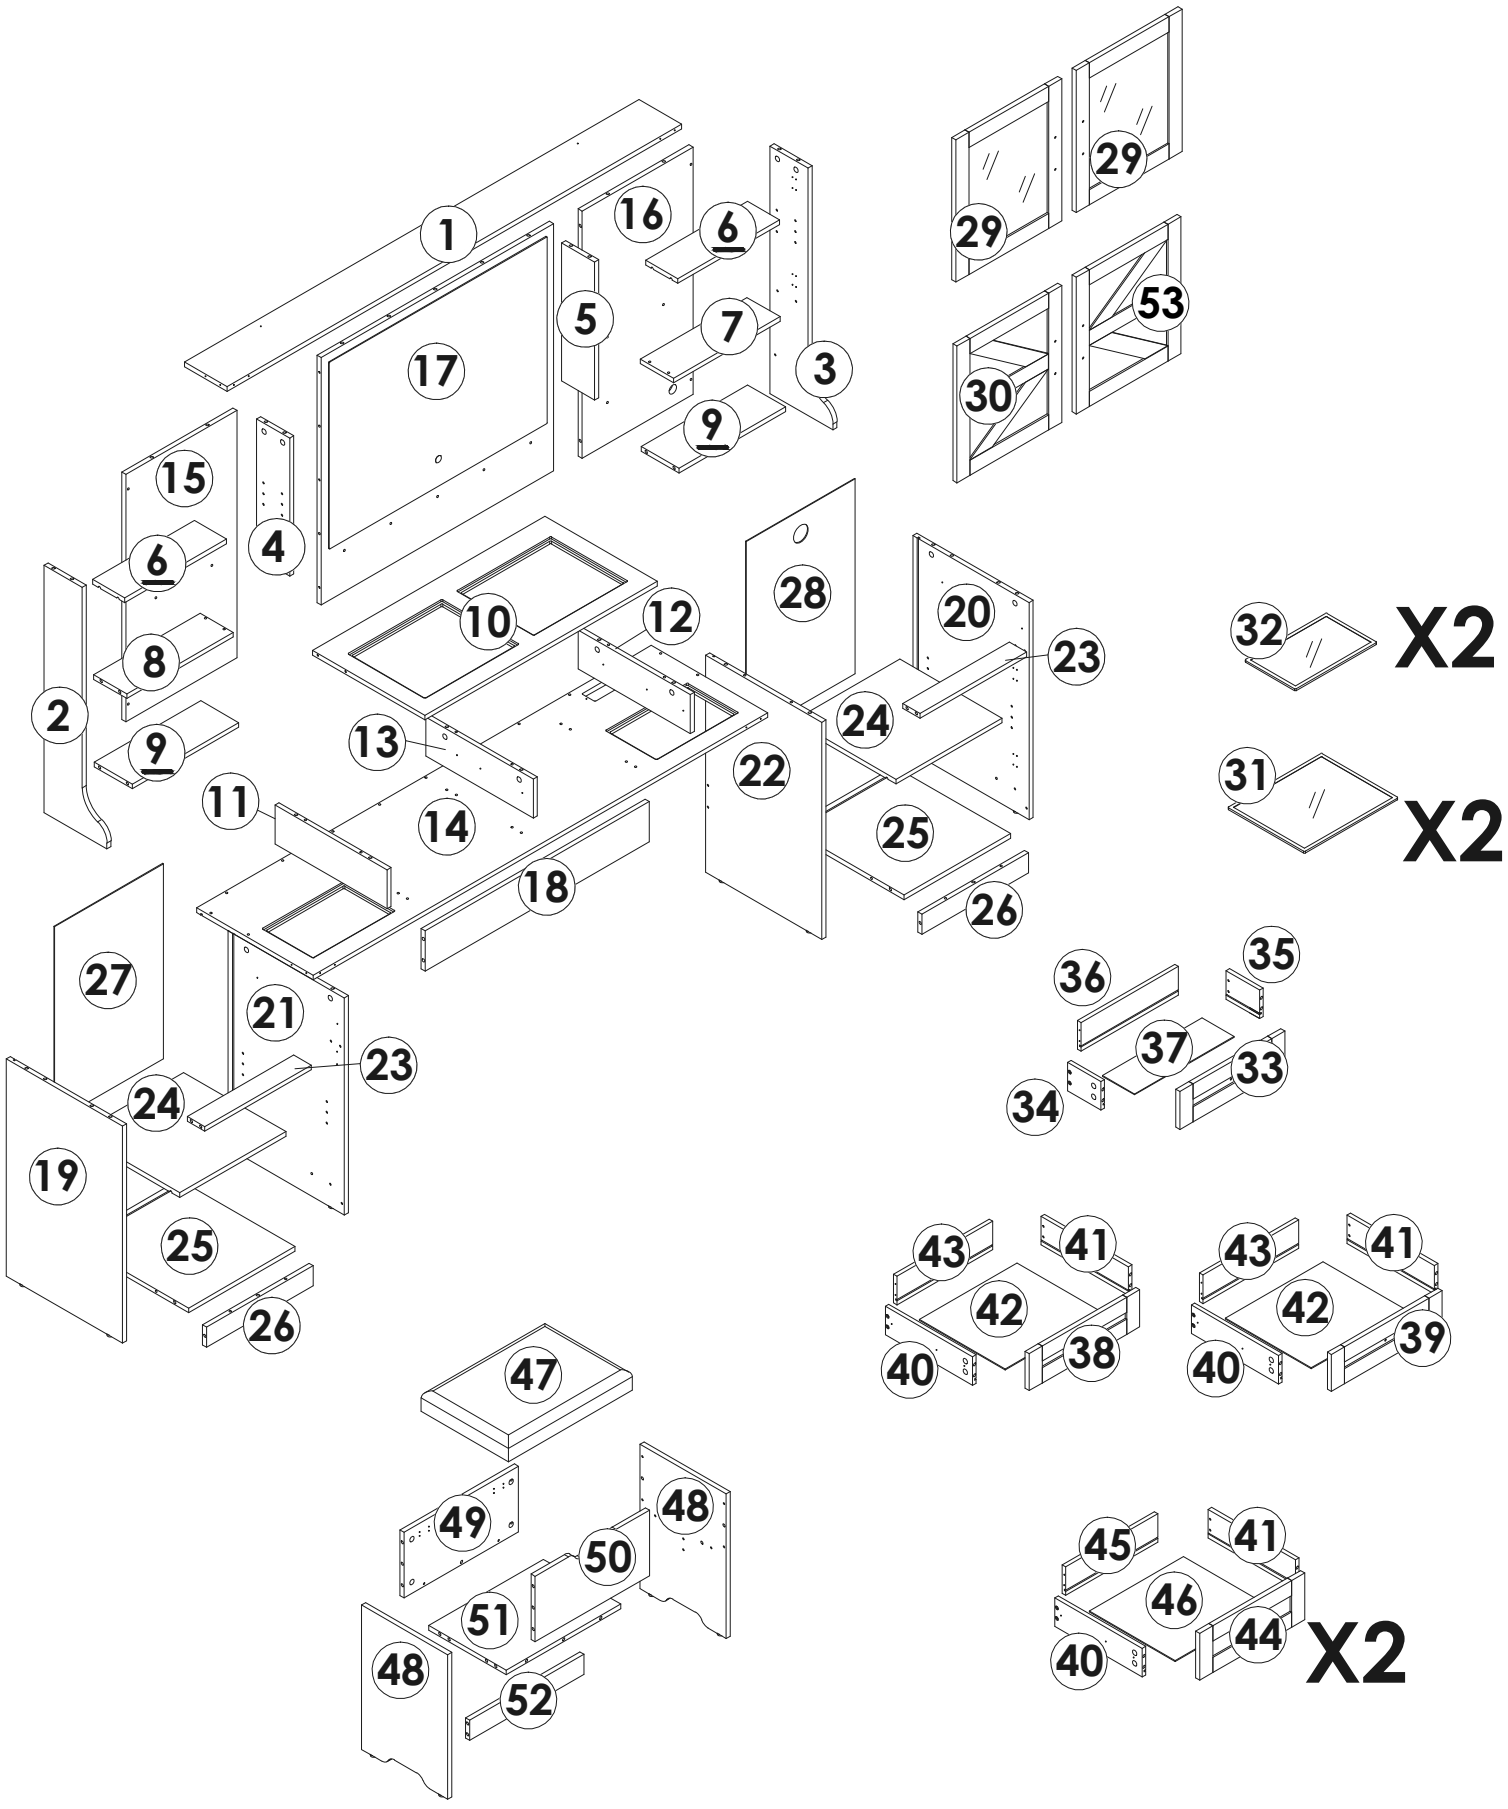

Assembly Instructions

There are 2 boxes of this product




BOX-1: N704P546782

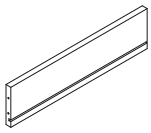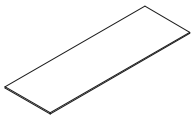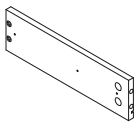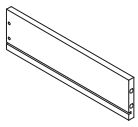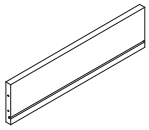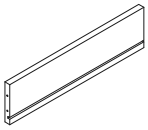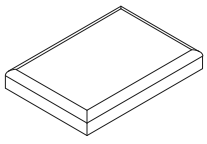				
736x381x14mm 15 x 1	736x381x14mm 16 x 1	736x798x17mm 17 x 1	364x351x14mm 24 x 2	366x398x14mm 25 x 2
				
423x364x14mm 29 x 2	407x360x14mm 30 x 1	322x264x5mm 31 x 2	280x174x5mm 32 x 2	115x85x12mm 34 x 1
				
115x85x12mm 35 x 1	334x85x12mm 36 x 1	342x110x2.5mm 37 x 1	300x85x12mm 40 x 4	300x85x12mm 41 x 4
				
336x295x2.5mm 42 x 2	328x85x12mm 43 x 2	316x85x12mm 45 x 2	324x295x2.5mm 46 x 2	433x300x60mm 47 x 1

Assembly Instructions

There are 2 boxes of this product


















BOX-1: N704P546782

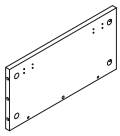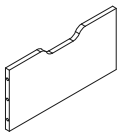			
430x296x14mm **48** x 2	393x195x14mm **49** x 1	393x195x14mm **50** x 1	407x360x14mm **53** x 1

Assembly Instructions

There are 2 boxes of this product










BOX-2: N704P546783

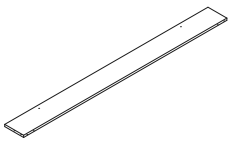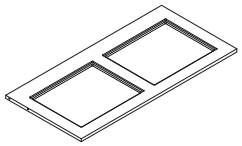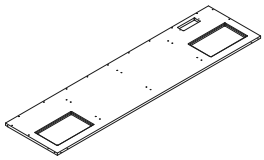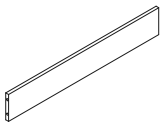 1562x146x14mm 1 x 1	 736x216x14mm 2 x 1	 736x216x14mm 3 x 1	 411x114x14mm 4 x 1	 411x114x14mm 5 x 1
 350x110x14mm 6 x 2	 336x114x14mm 7 x 1	 336x114x14mm 8 x 1	 366x130x14mm 9 x 2	 798x386x14mm 10 x 1
 116x385x14mm 11 x 1	 116x385x14mm 12 x 1	 116x369x14mm 13 x 1	 1562x400x14mm 14 x 1	 770x120x14mm 18 x 1
 646x399x14mm 19 x 1	 646x399x14mm 20 x 1	 646x399x14mm 21 x 1	 646x399x14mm 22 x 1	 366x60x14mm 23 x 2

Assembly Instructions

There are 2 boxes of this product












BOX-2: N704P546783

 366x60x14mm **26** x 2	 580x374x2.5mm **27** x 1	 580x374x2.5mm **28** x 1	 360x113x14mm **33** x 1	 380x110x14mm **38** x 1
 380x110x14mm **39** x 1	 360x139x14mm **44** x 2	 393x266x14mm **51** x 1	 393x60x14mm **52** x 1	


Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required (N704P546782).

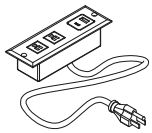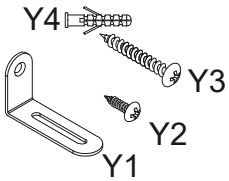A  Ø6*34mm Cam Bolt x 113+2	B  Ø15*9mm Cam lock x 113+2	C  6*30mm Dowel x 42+2	D  8*30mm Dowel x 10+2	E  5*38mm Screw x 38+2
F  3.5*12mm Screw x 48+2	G  4*35mm Screw x 20+2	H  Drawer slides x 8	I  Magnetic Catch x 2	J  Strike Plate x 2
K  Handle x 5	L  Handle x 4	M  Shelf Pin x 16+2	N  Decor Bracket x 4	O  4*12mm Screw x 16+2
P  Hinge x 8	Q  Hinge x 2	R  3.5*15mm Screw x 60+2	S  3*15mm Back panel buckle x 12	T  Power Socket x 1
U  3*12mm Screw x 2	V  USB cable x 1	W  M3 Hex key x 1	Y  Wall Fixing Pack x 2	


Tools required

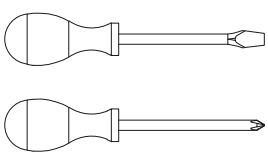


Phillips screwdriver
(medium large)


Assembly Instructions

STEP 1

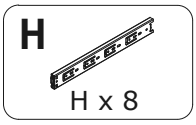

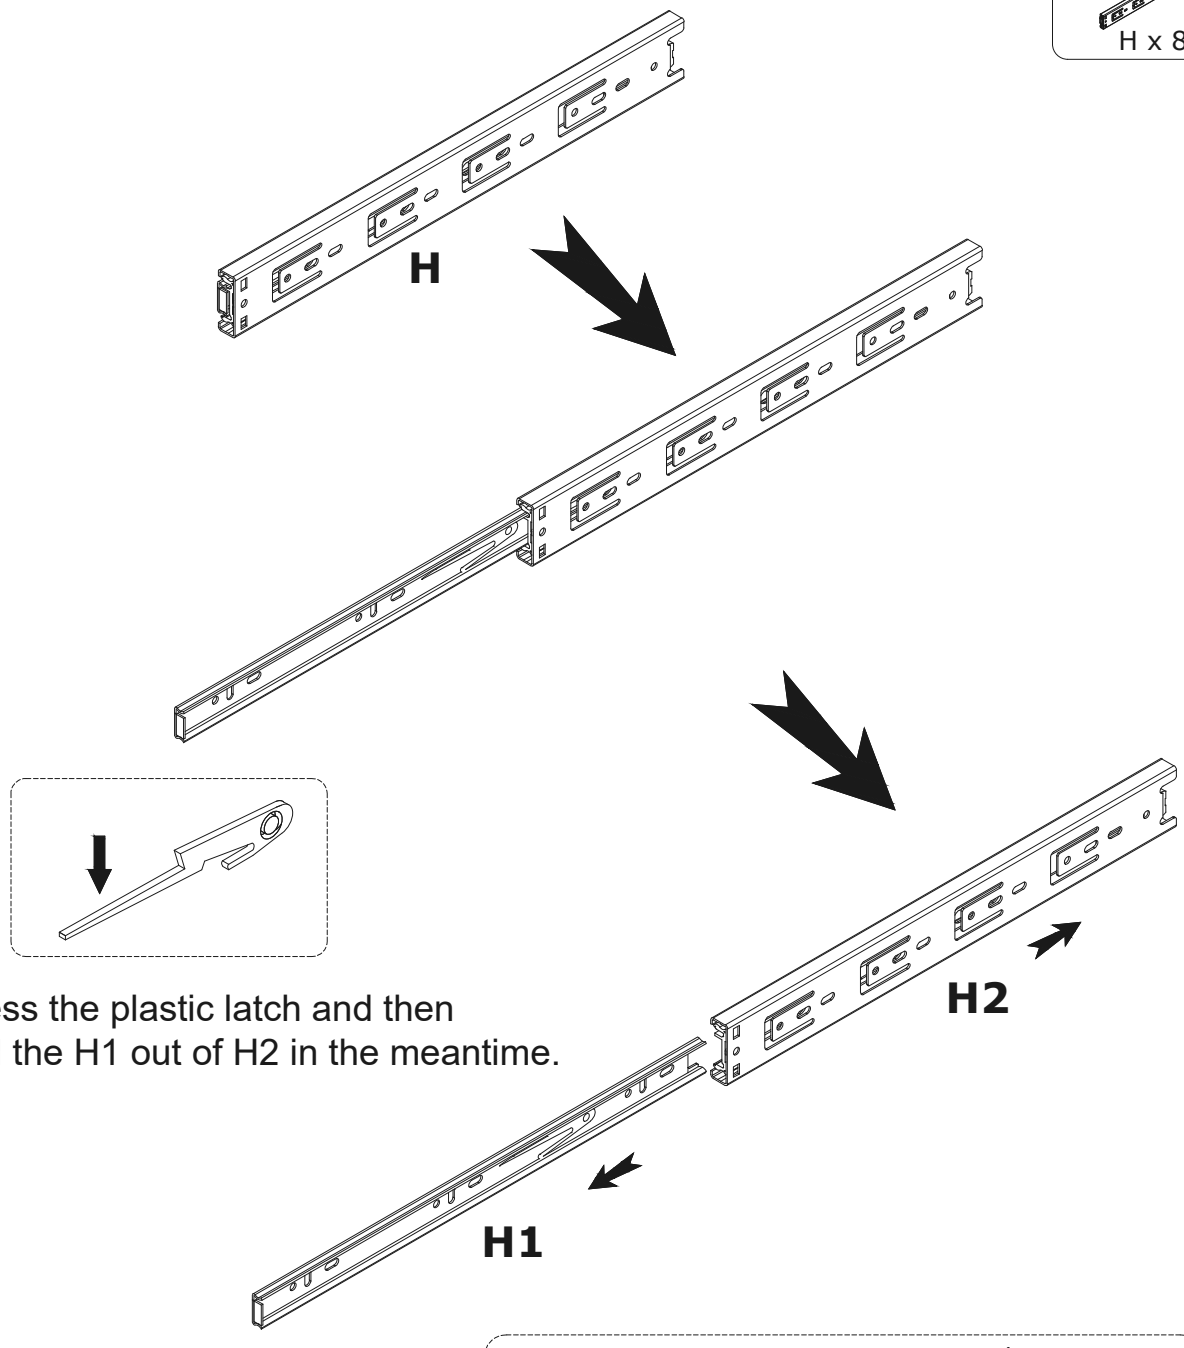


Press the plastic latch and then
pull the H1 out of H2 in the meantime.

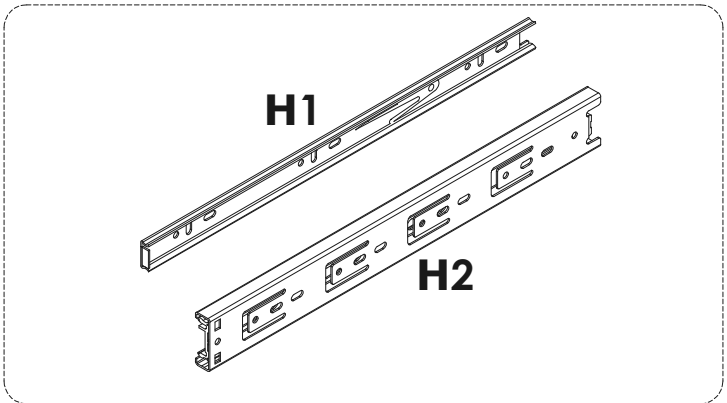


Assembly Instructions


STEP 2

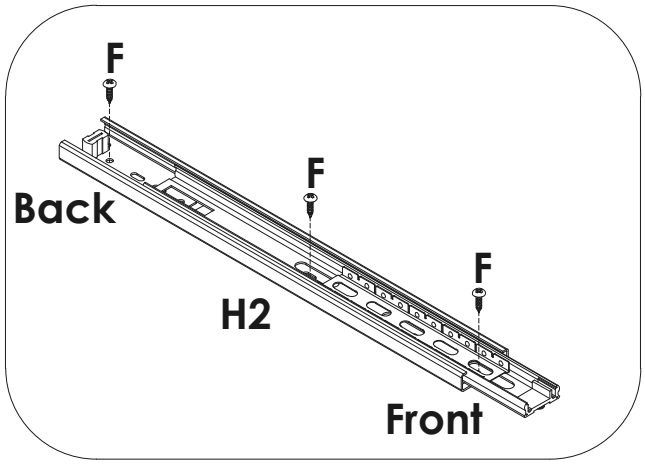

H
H x 2

F
F x 6

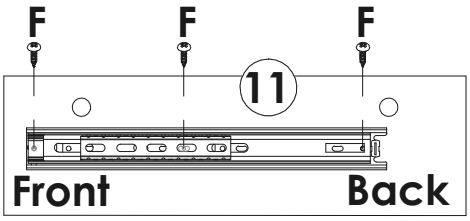


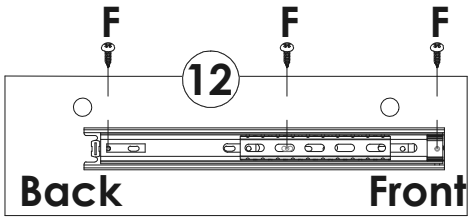



STEP 3


H
H x 2

F
F x 6

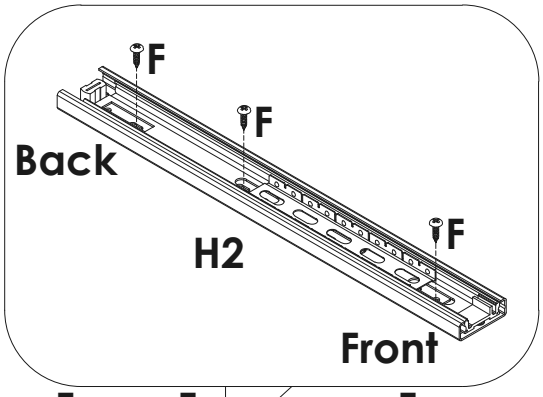

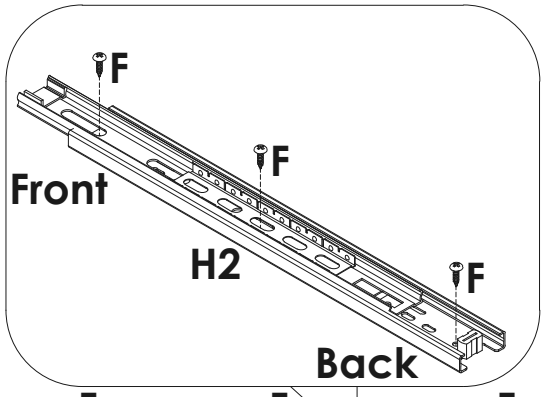

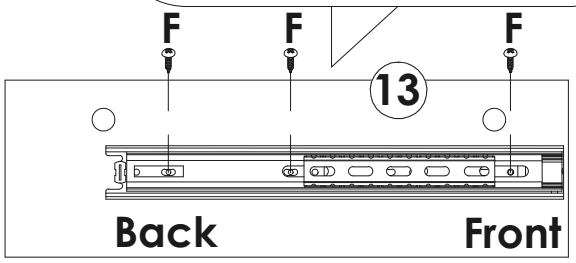


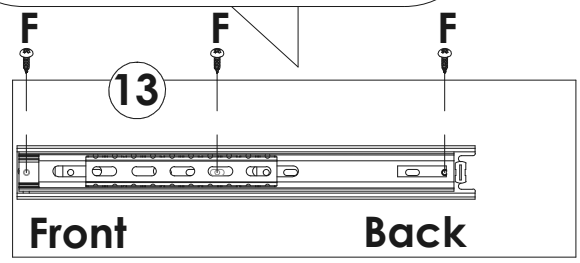

Turn over part (13) to install on the both sides,
Install the drawer slides on both sides of the center panel.

Assembly Instructions

STEP 4

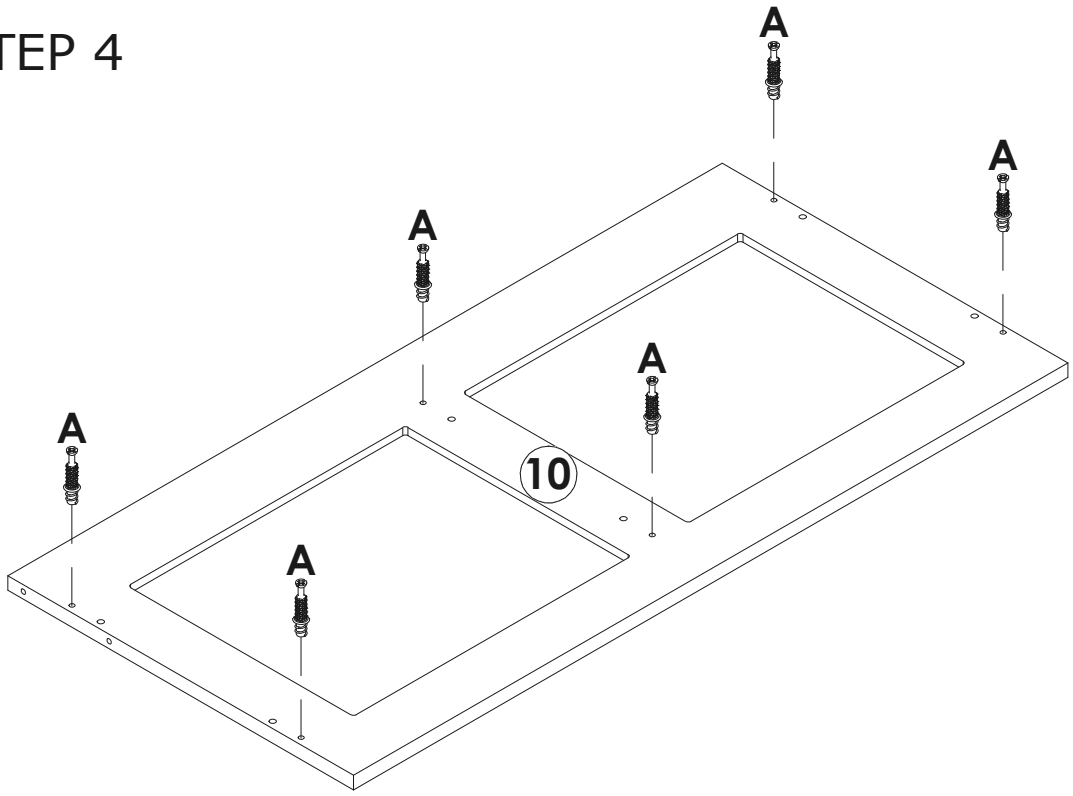



A
A x 6

STEP 5

B
B x 6


C
C x 6

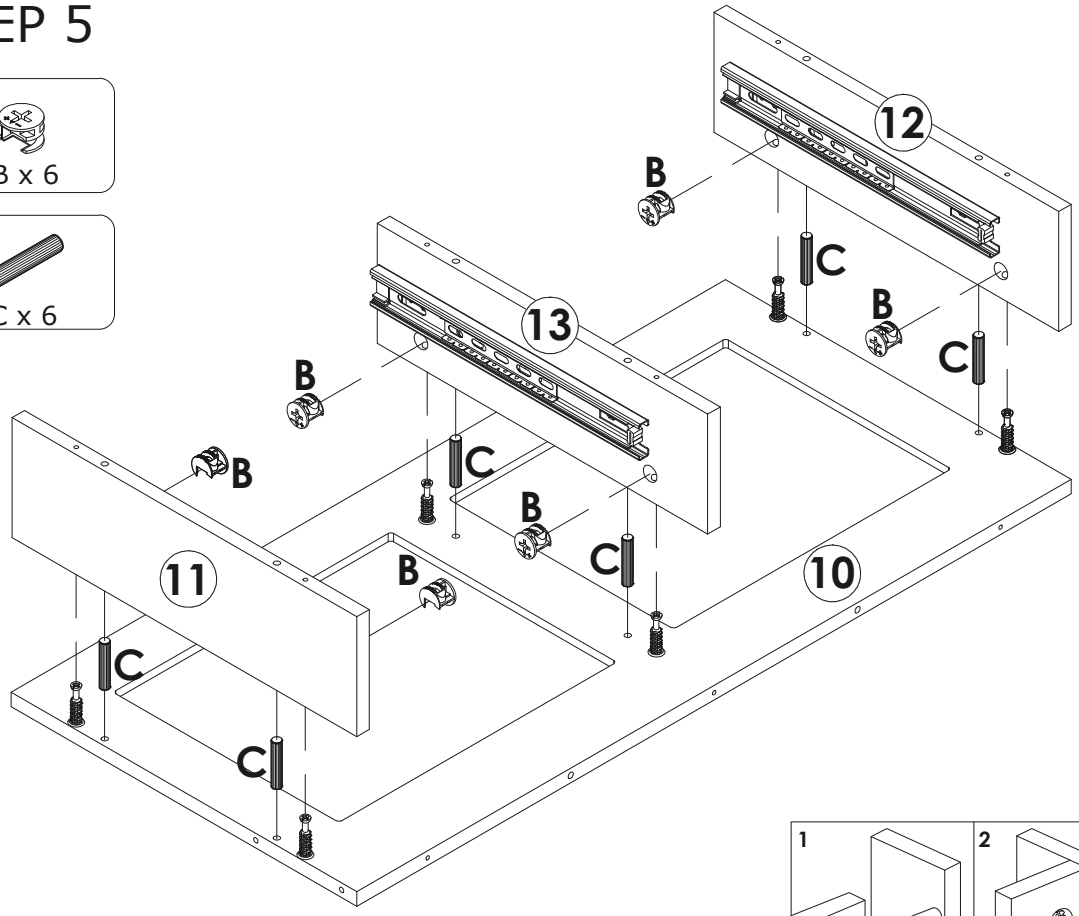


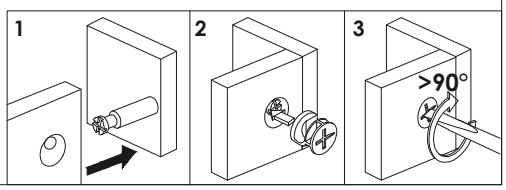


Assembly Instructions

STEP 6

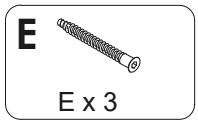

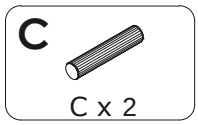

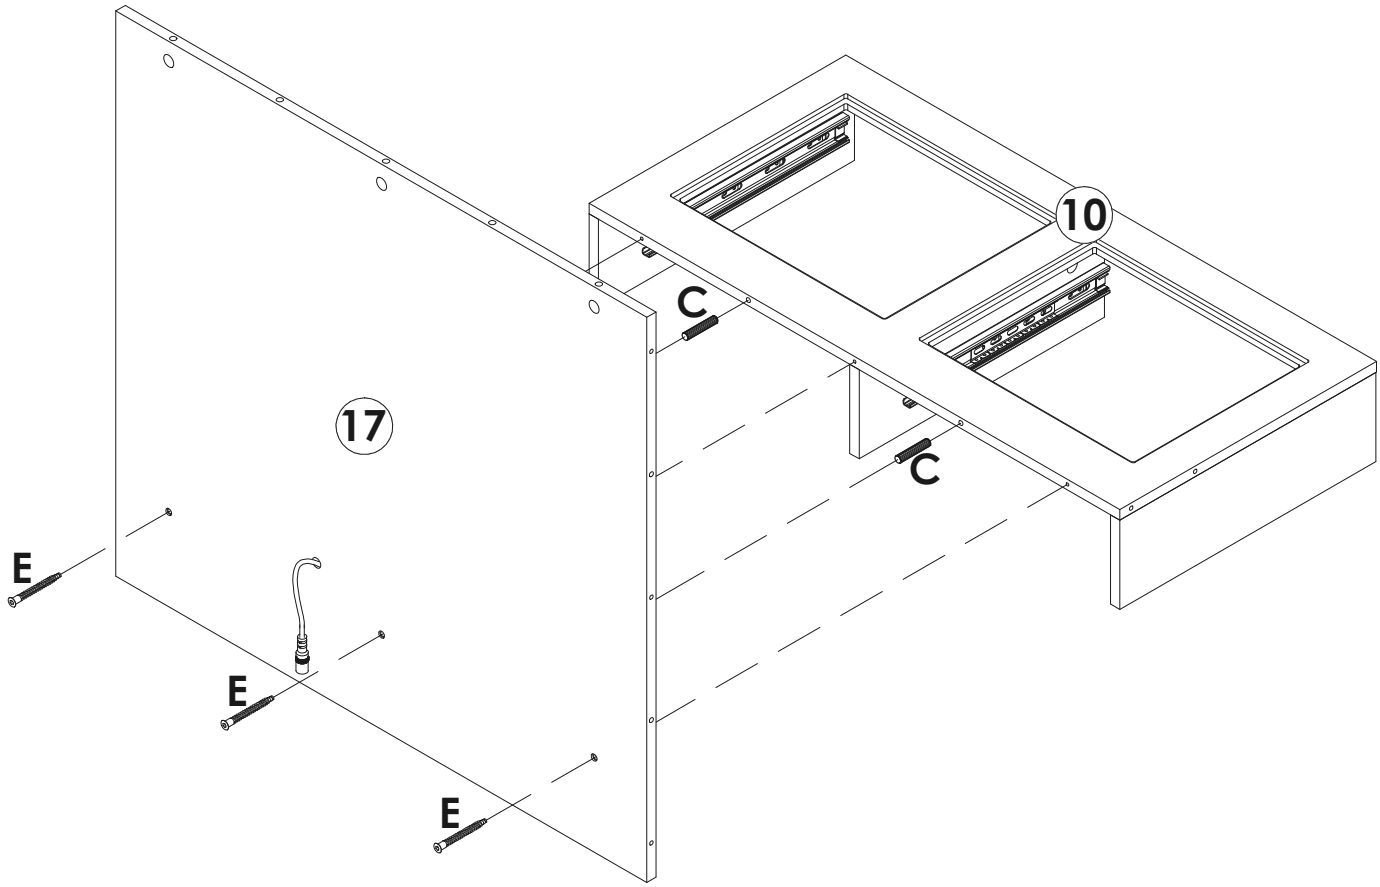


Assembly Instructions

STEP 7

A

A x 10

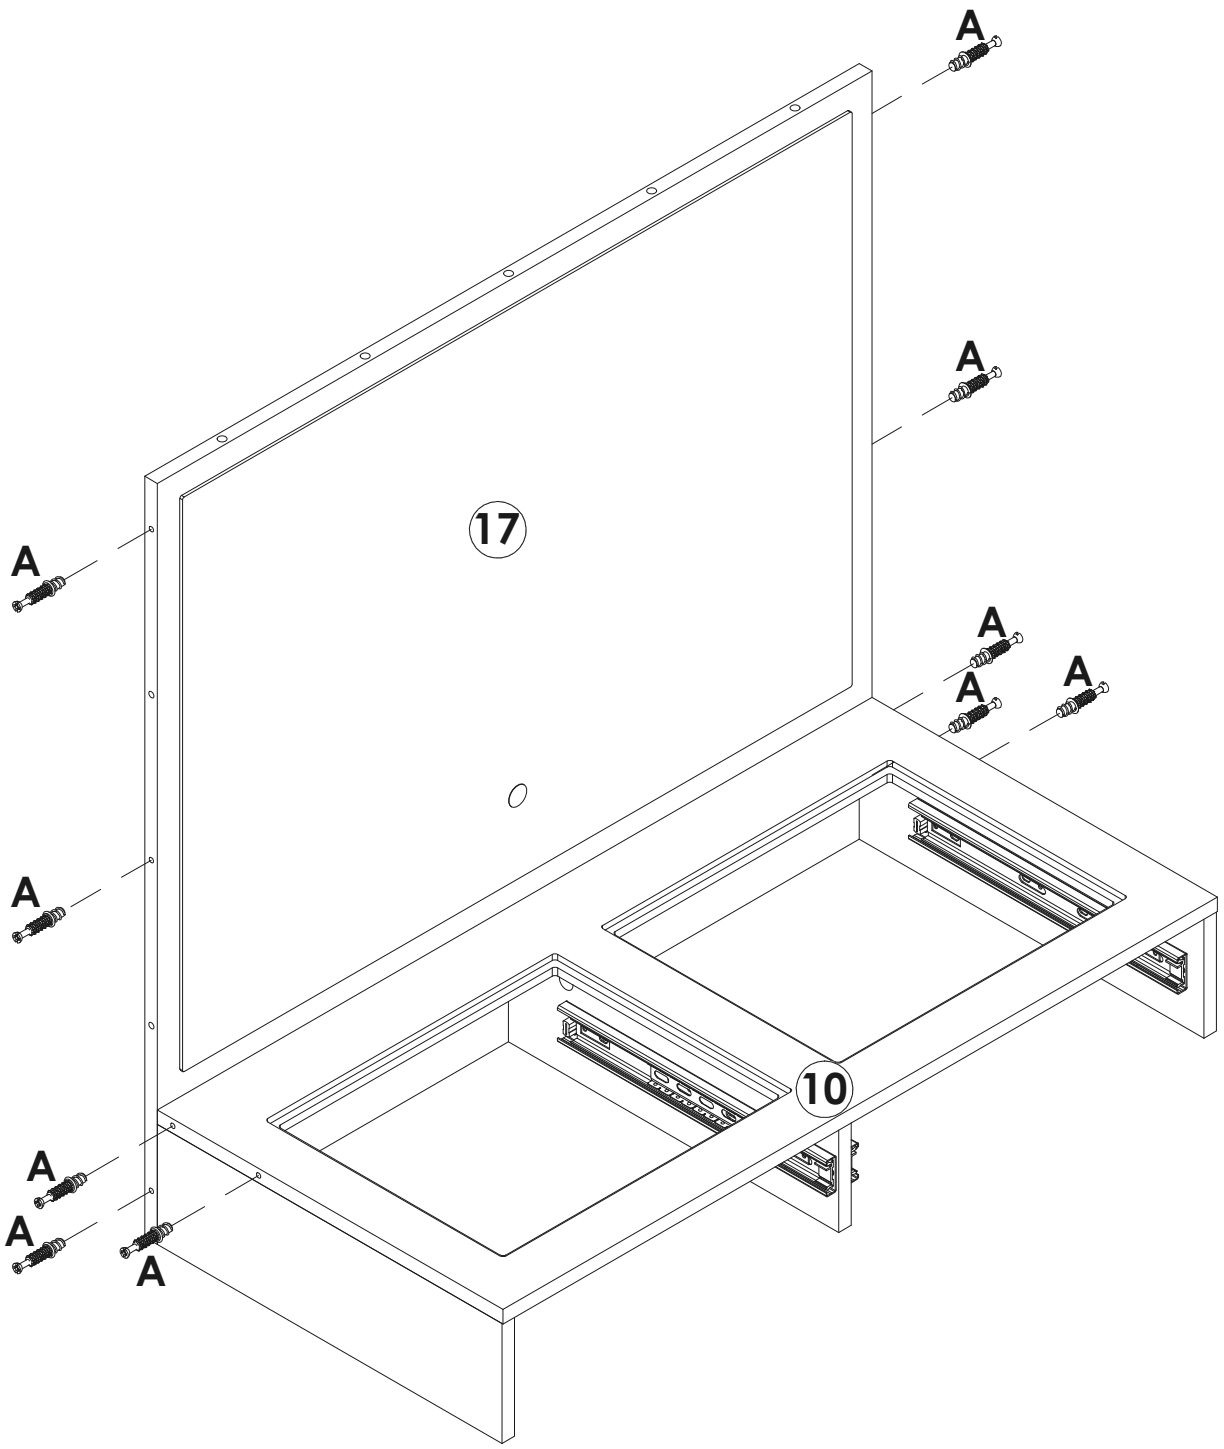


Assembly Instructions

STEP 8

E


E x 4

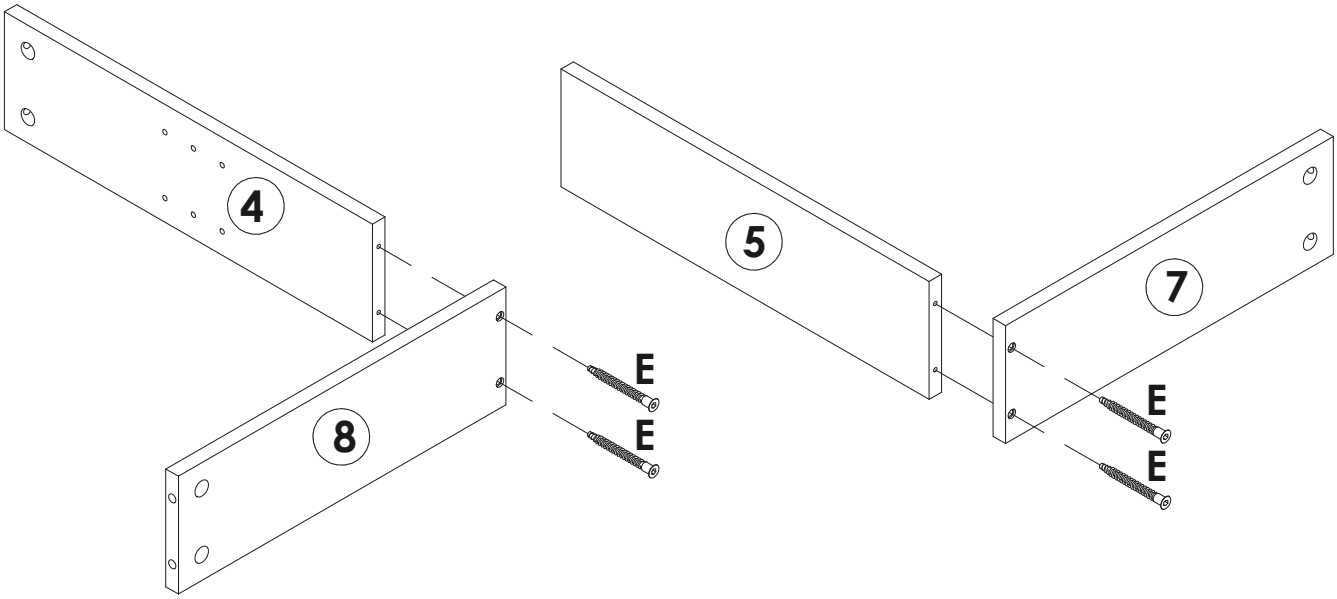

STEP 9

A

A x 8

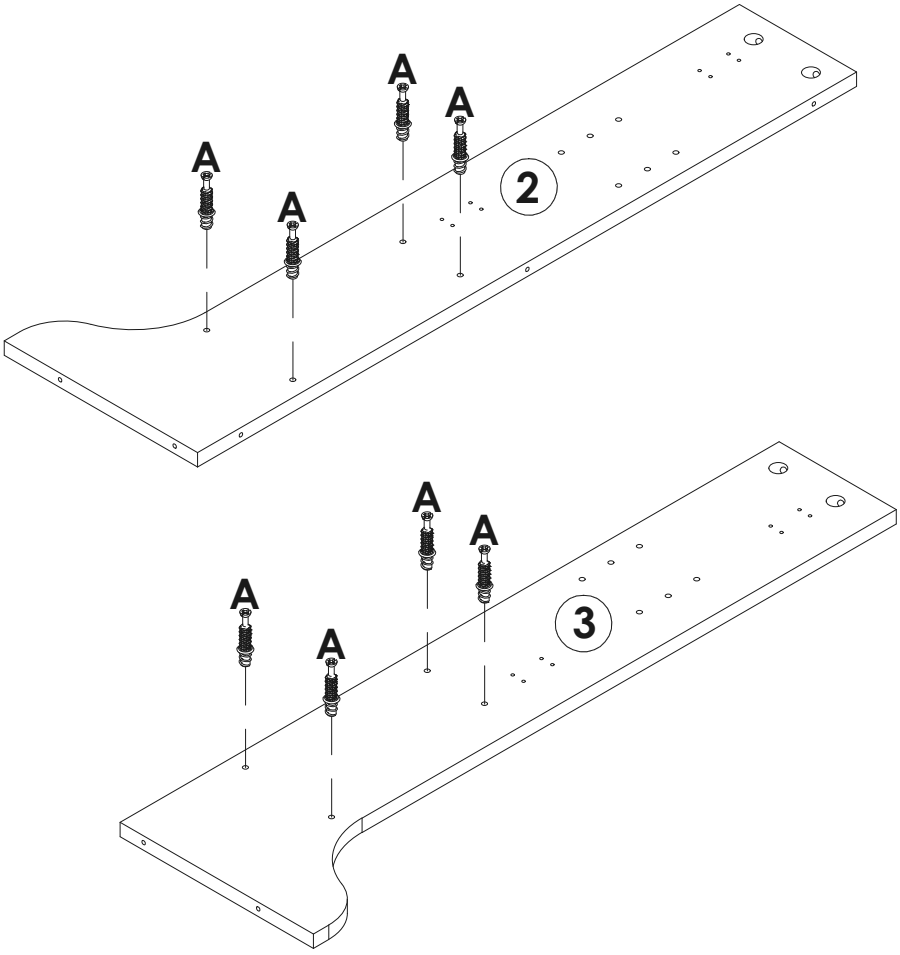



Assembly Instructions


STEP 10

B

B x 8

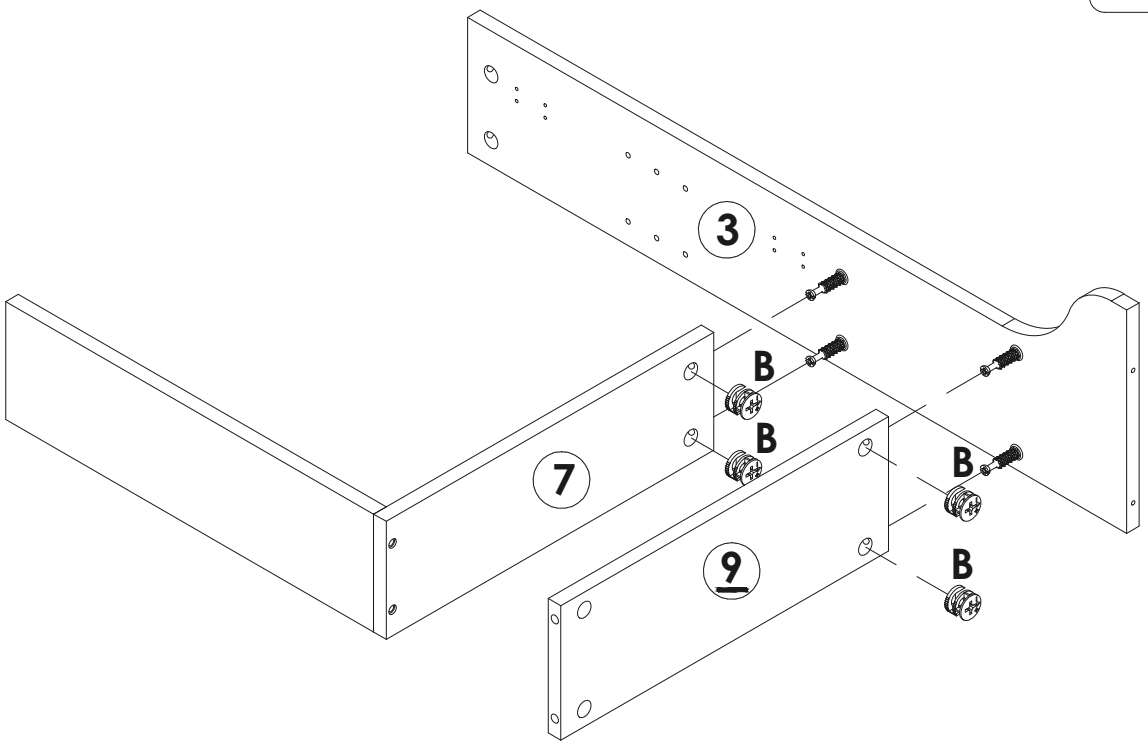

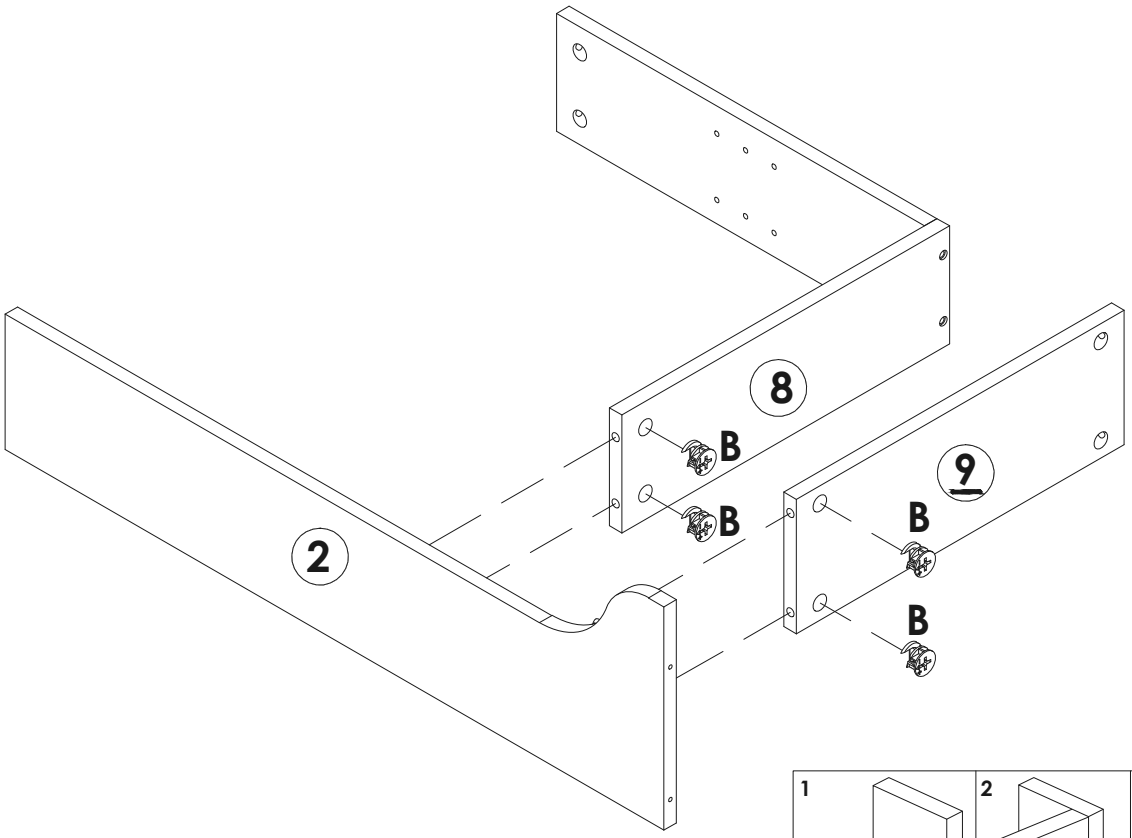

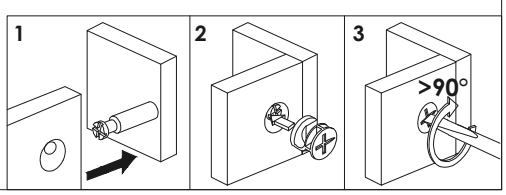



Assembly Instructions

STEP 11

E

E x 14

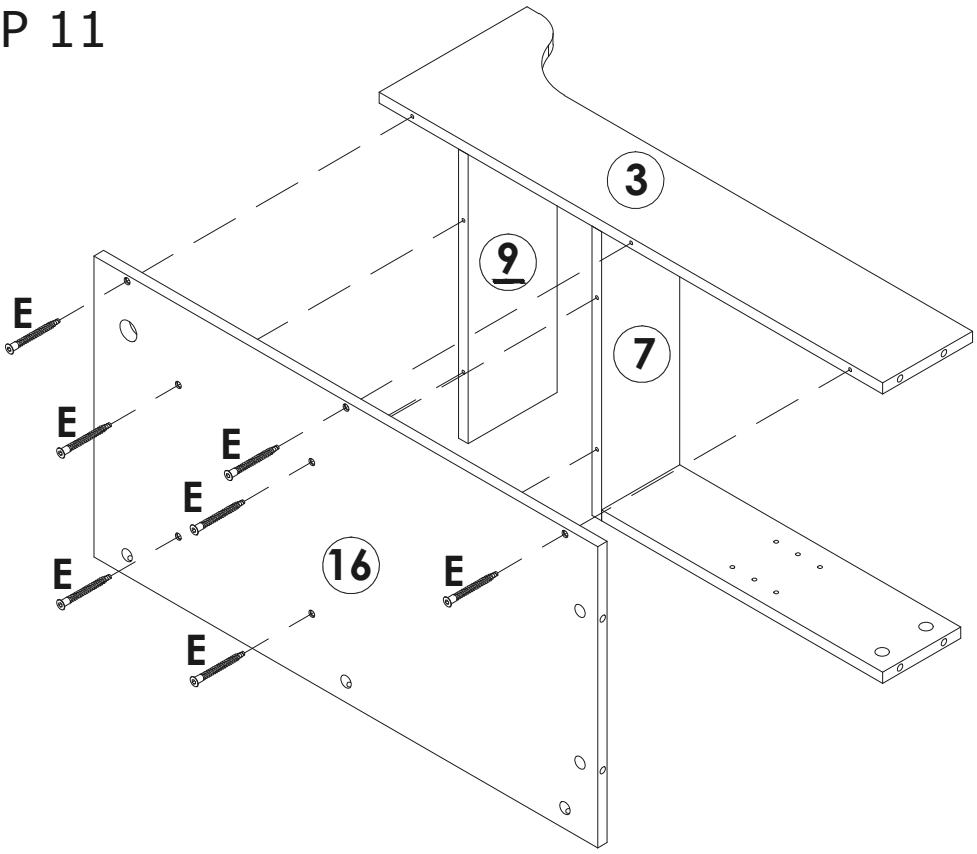

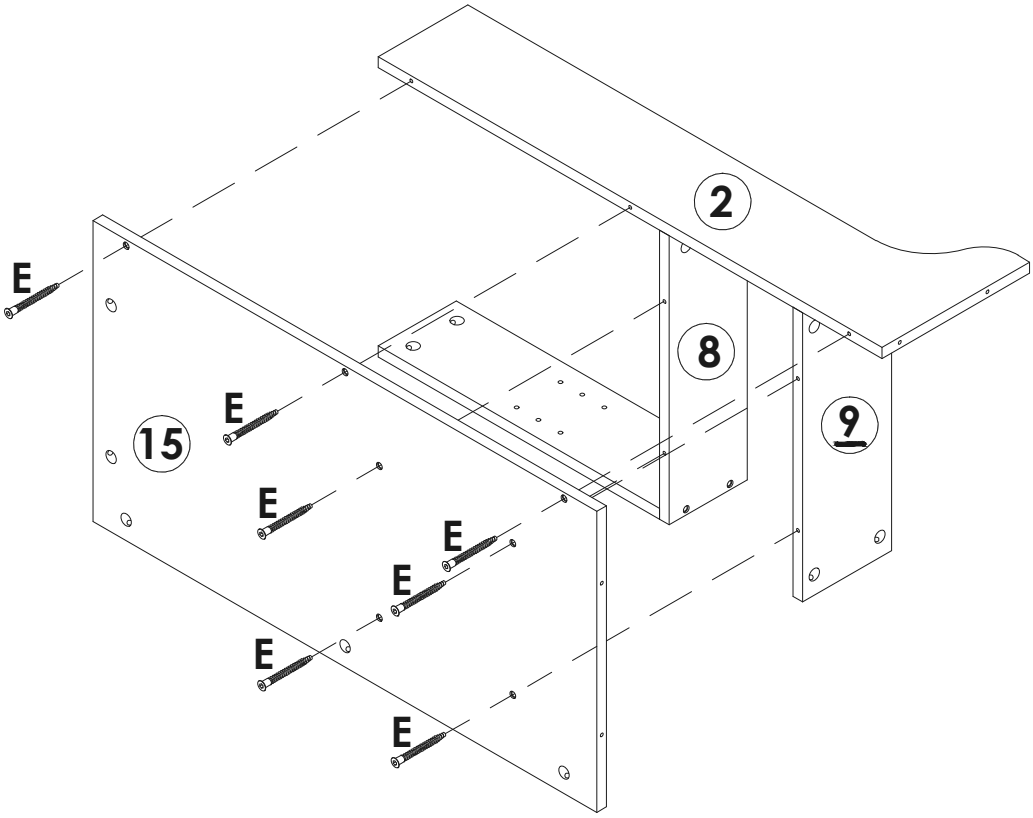

Assembly Instructions

STEP 12

B





B x 5

C



C x 2

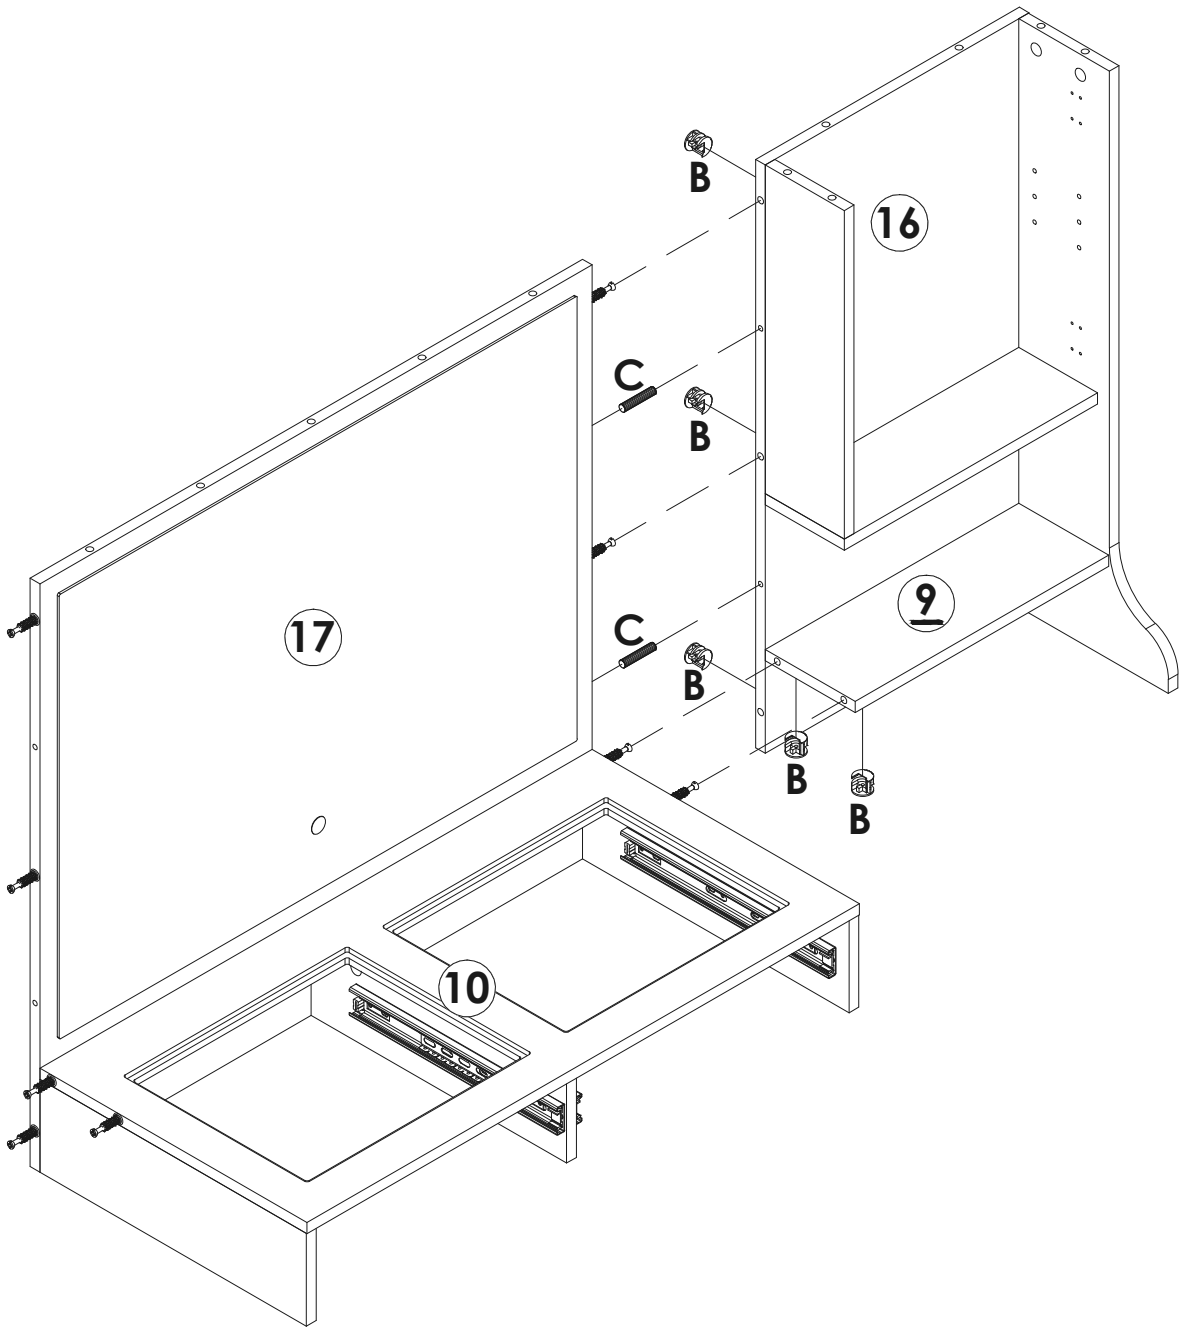

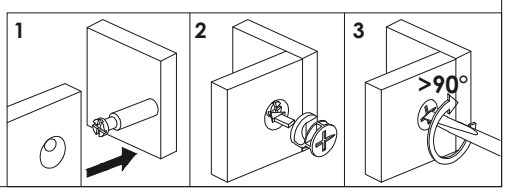

Assembly Instructions

STEP 13

B





B x 5

C



C x 2

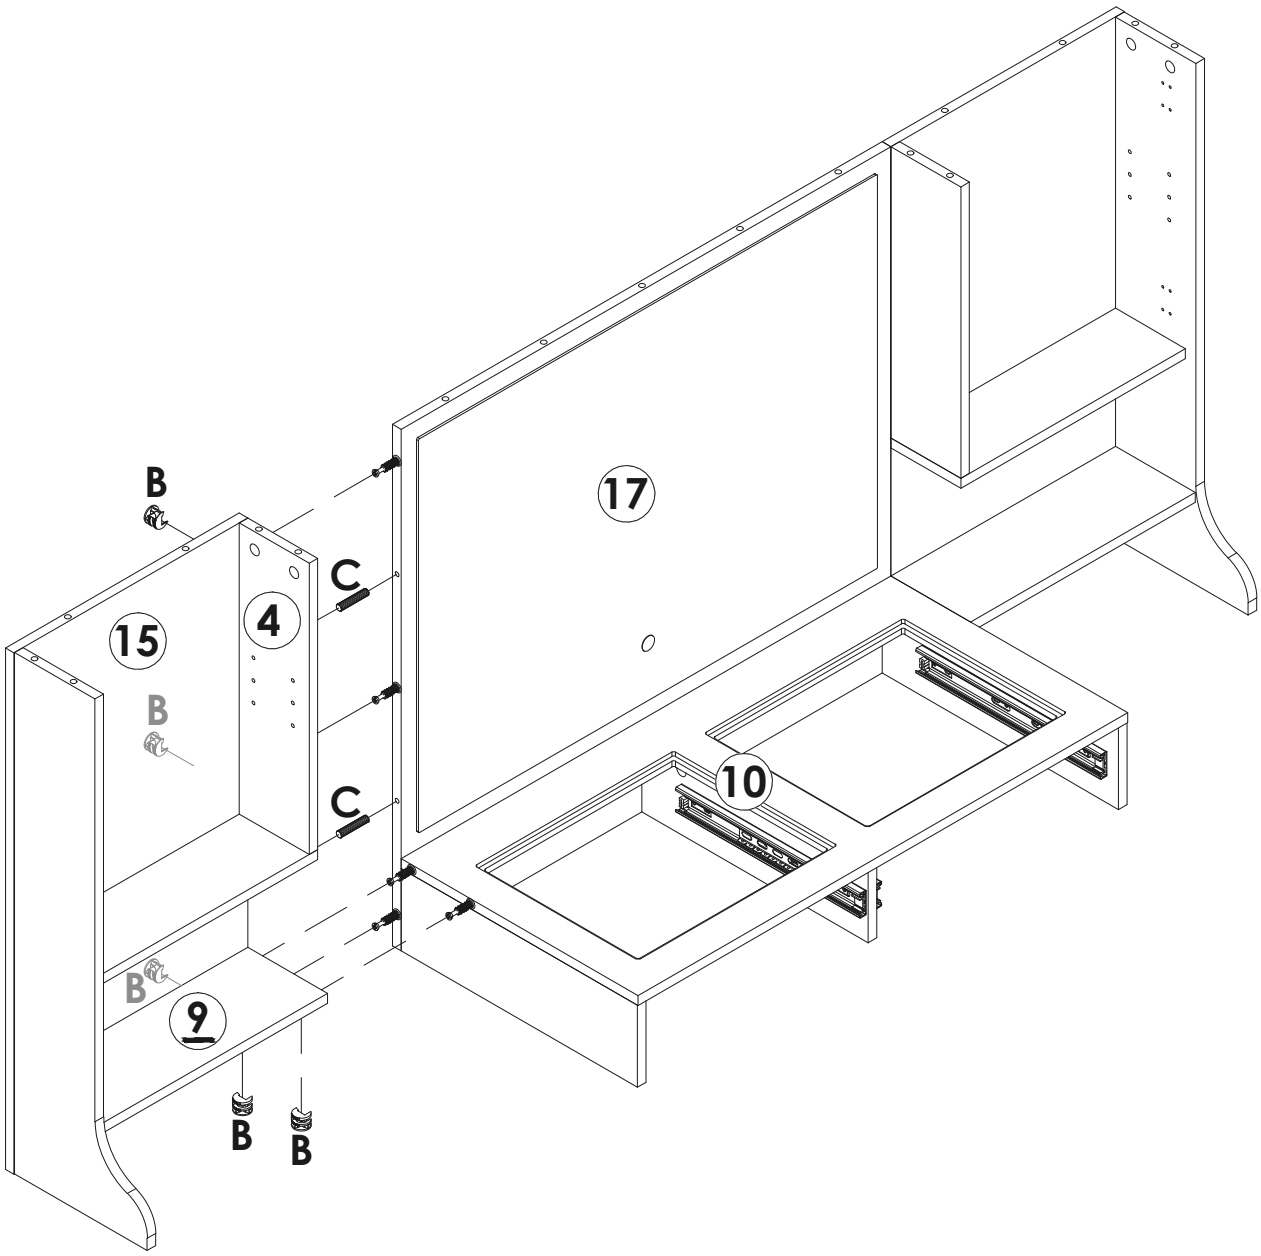

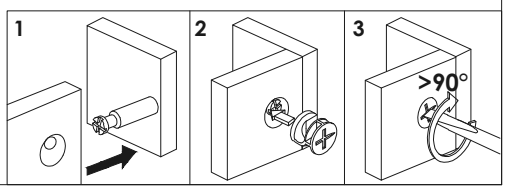


Assembly Instructions

STEP 14

A

A x 23

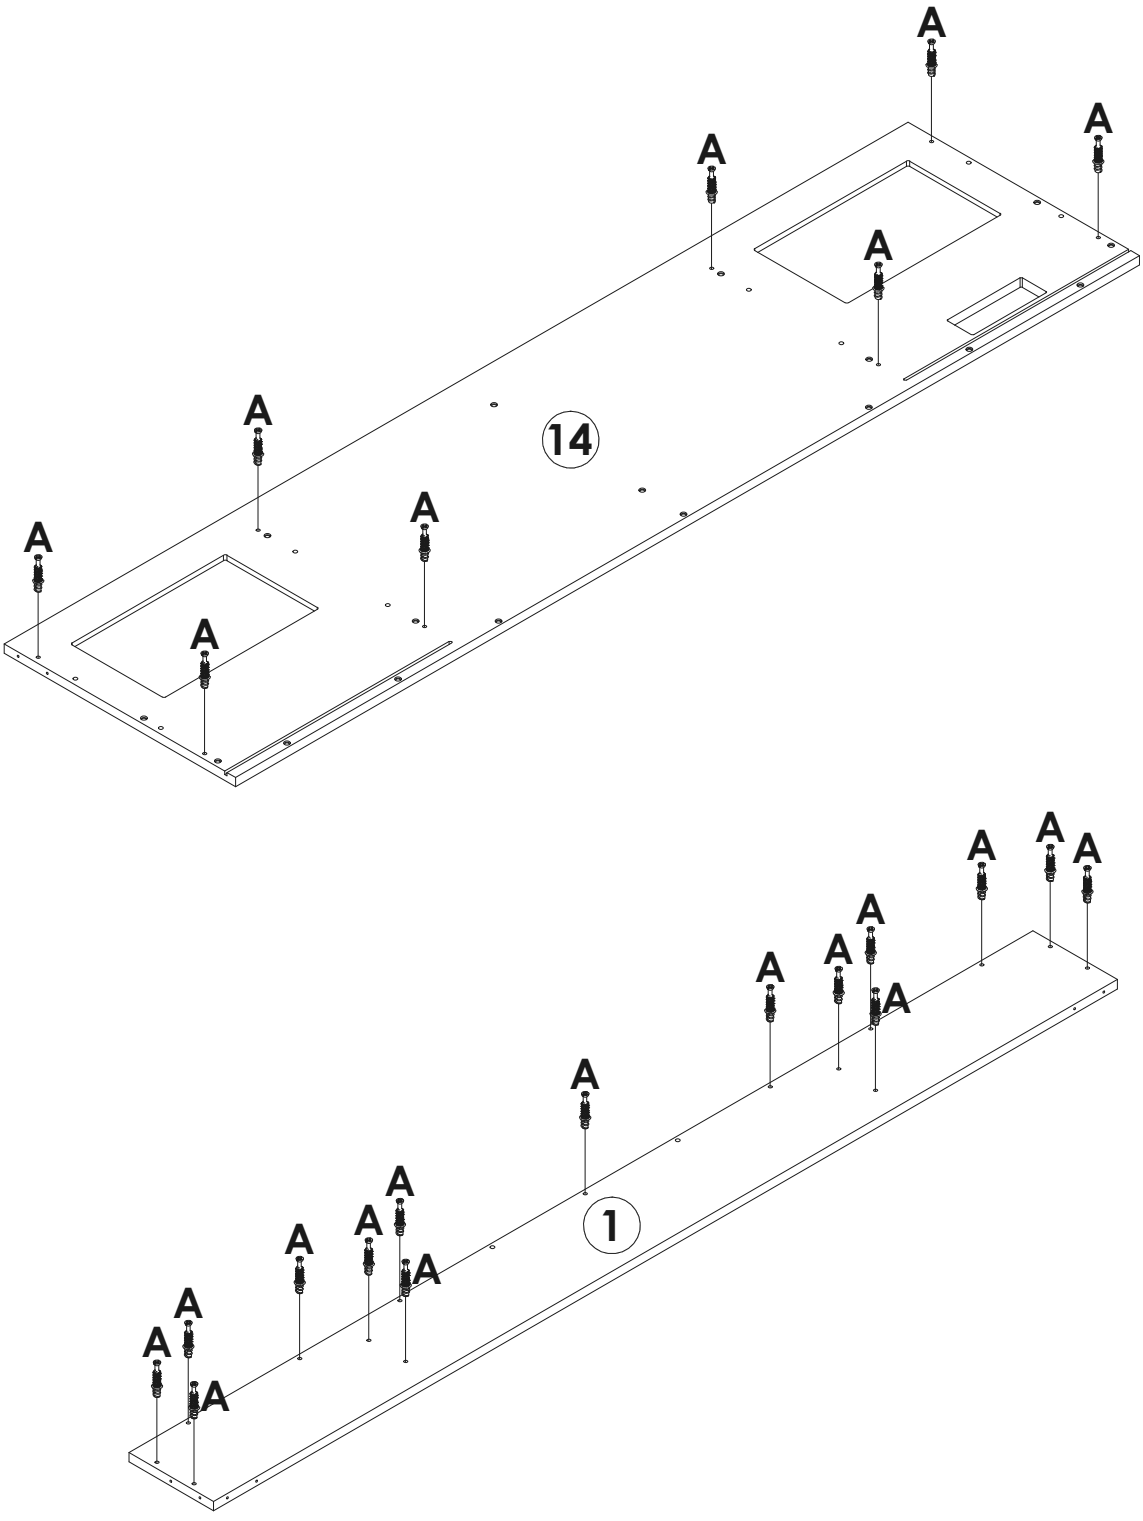

Assembly Instructions

STEP 15

B




B x 15

C



C x 2

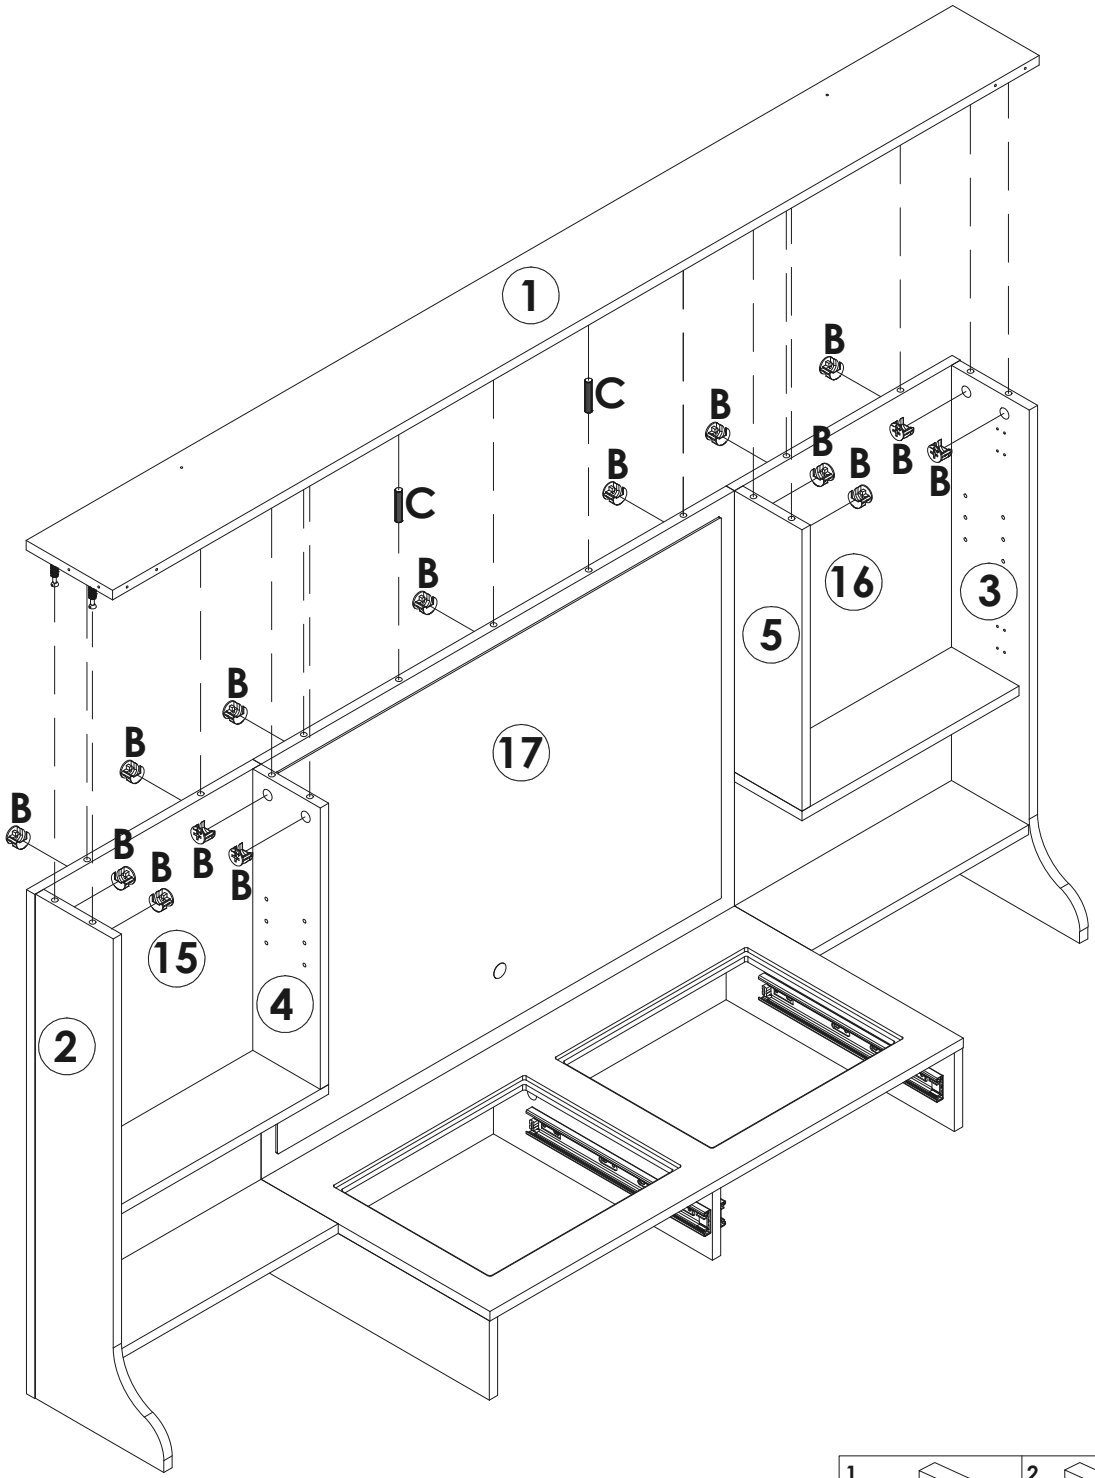
1
C
C
B
B
B

Assembly Instructions

STEP 16

E


E x 17

C

C x 8


90°


“Requires 2 people to flip,
Please flip carefully."

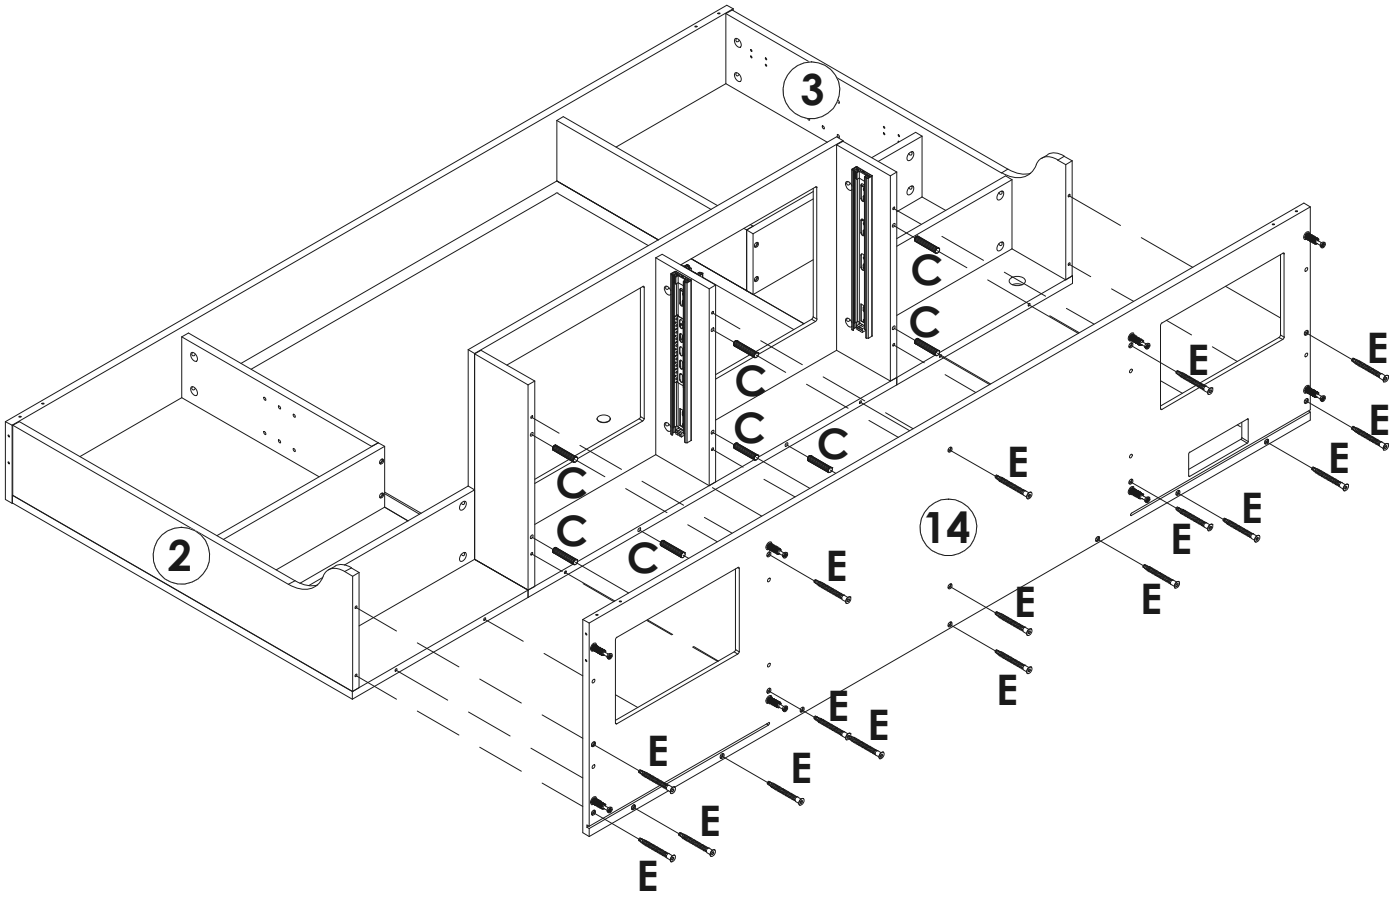



Assembly Instructions


STEP 17

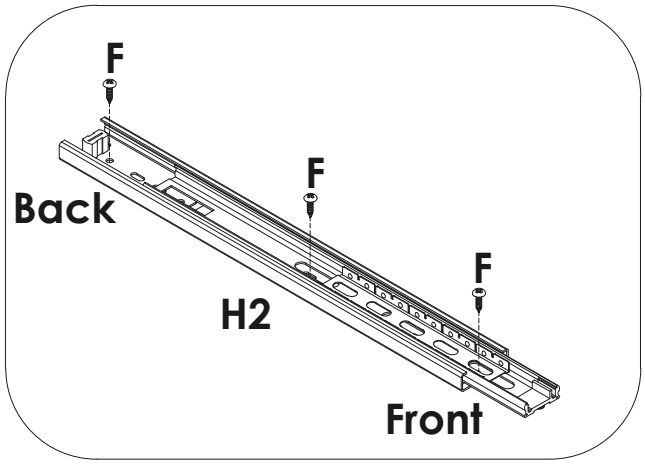

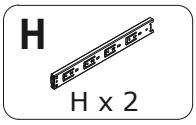

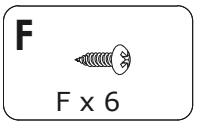


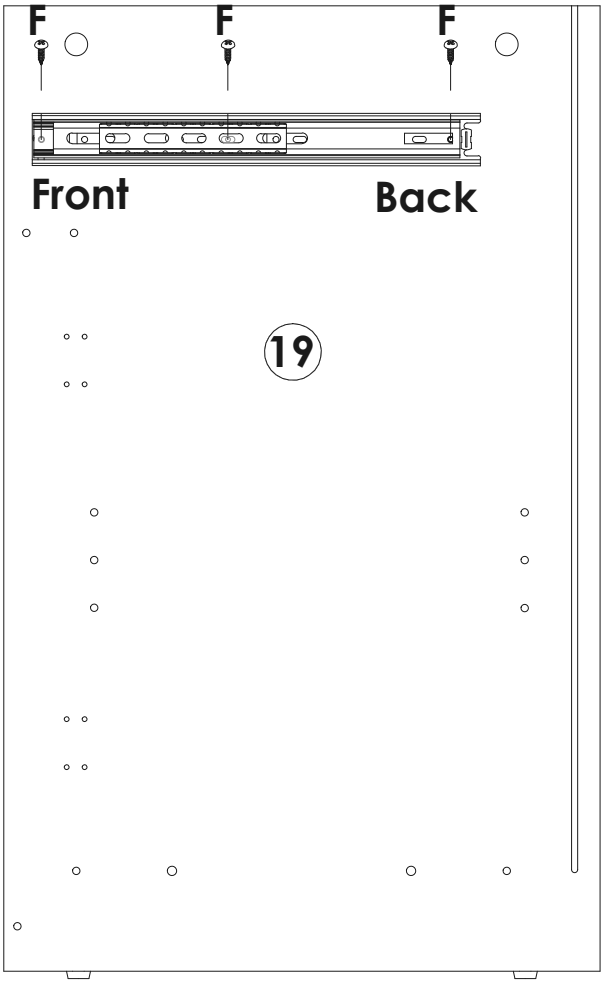


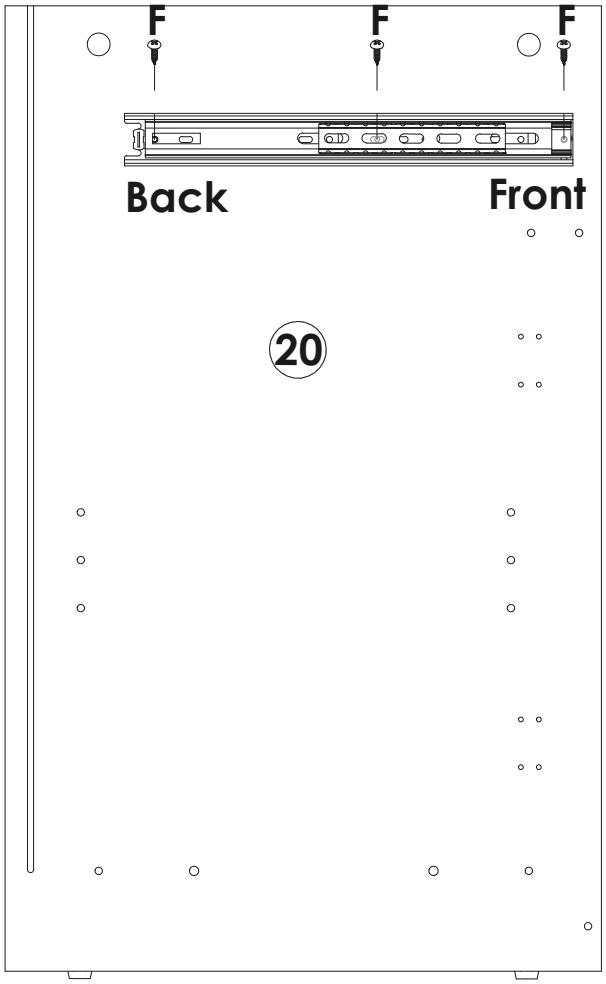



Assembly Instructions


STEP 18

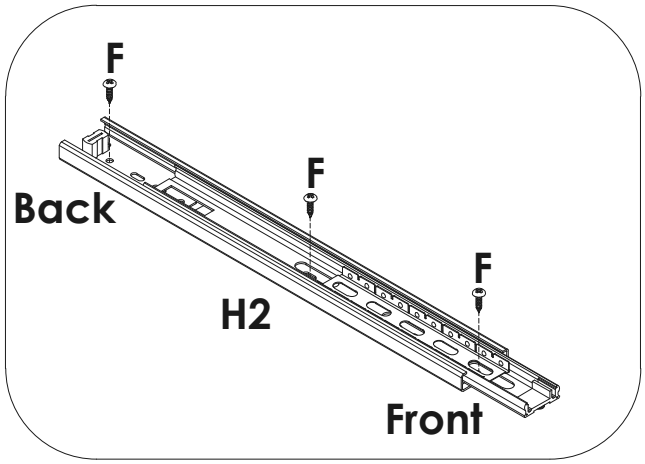

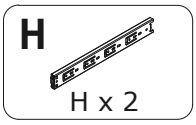

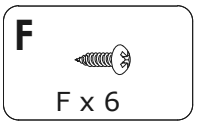

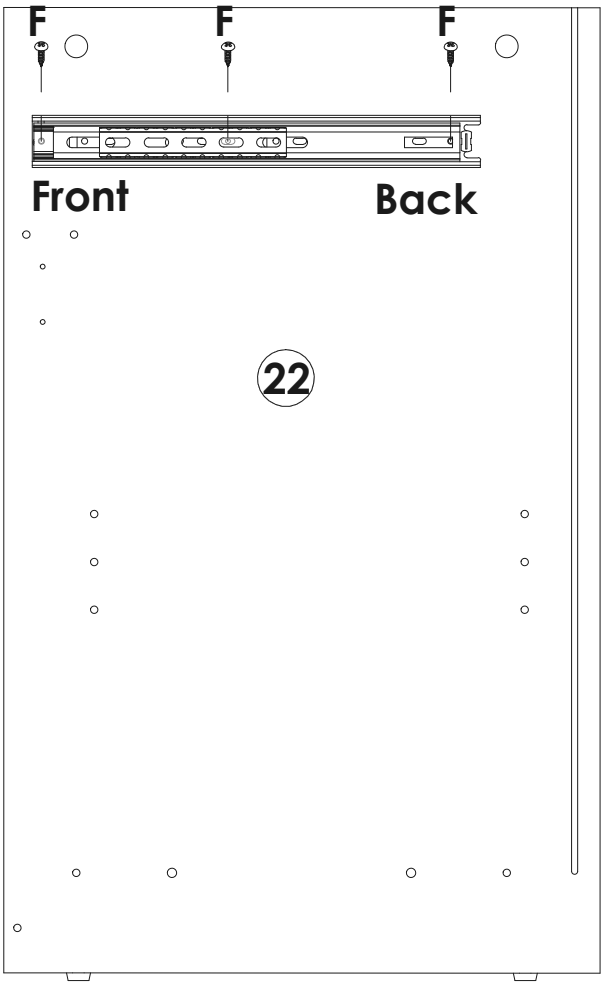


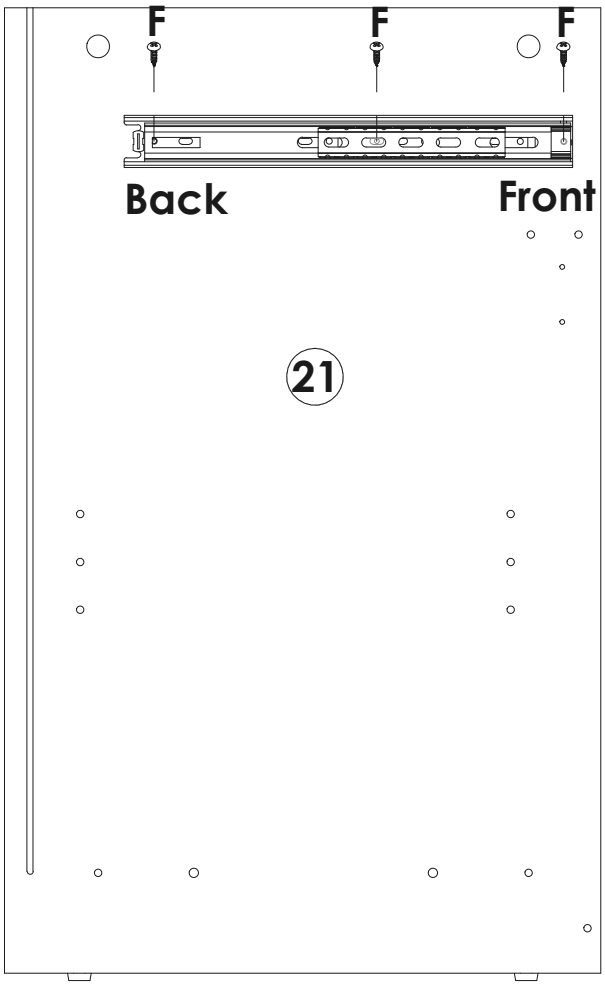

Assembly Instructions

STEP 19


A
A x 10

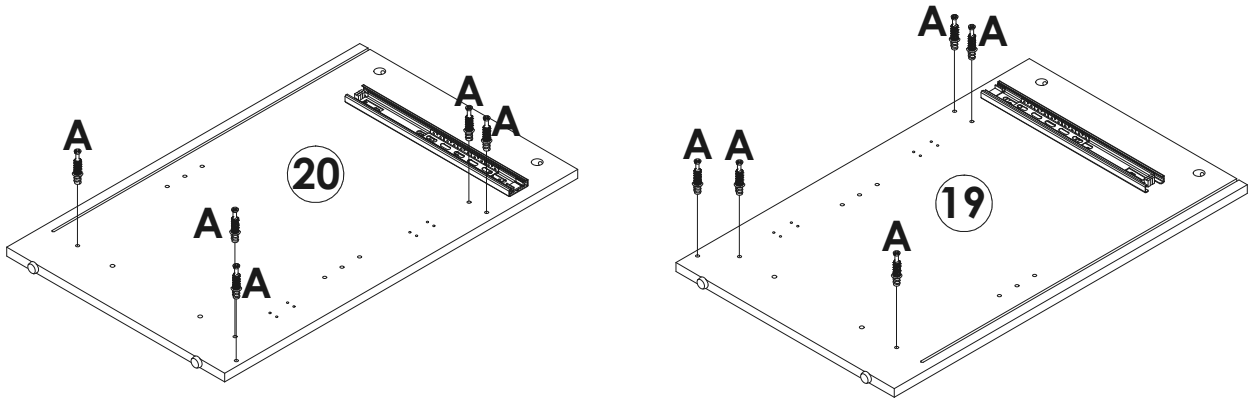

STEP 20

A
A x 7

I
I x 1

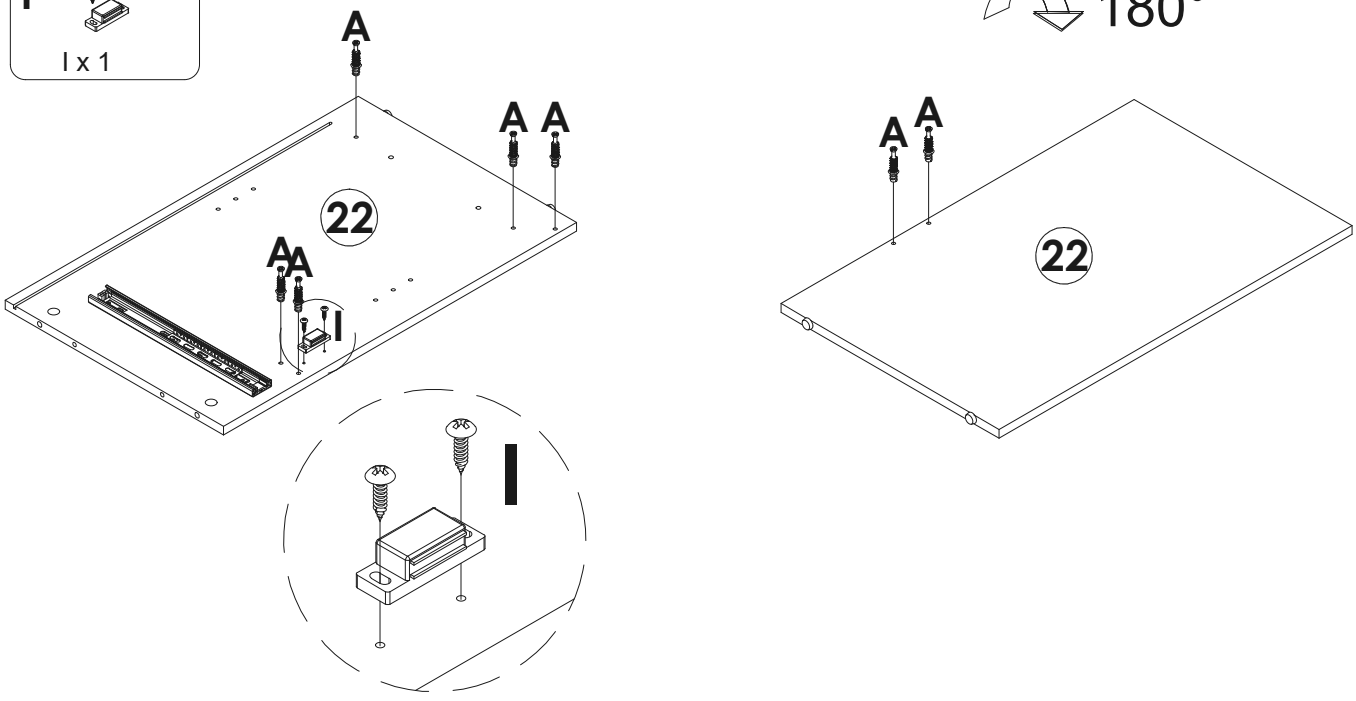


Assembly Instructions

STEP 21

A
A x 7

I
I x 1

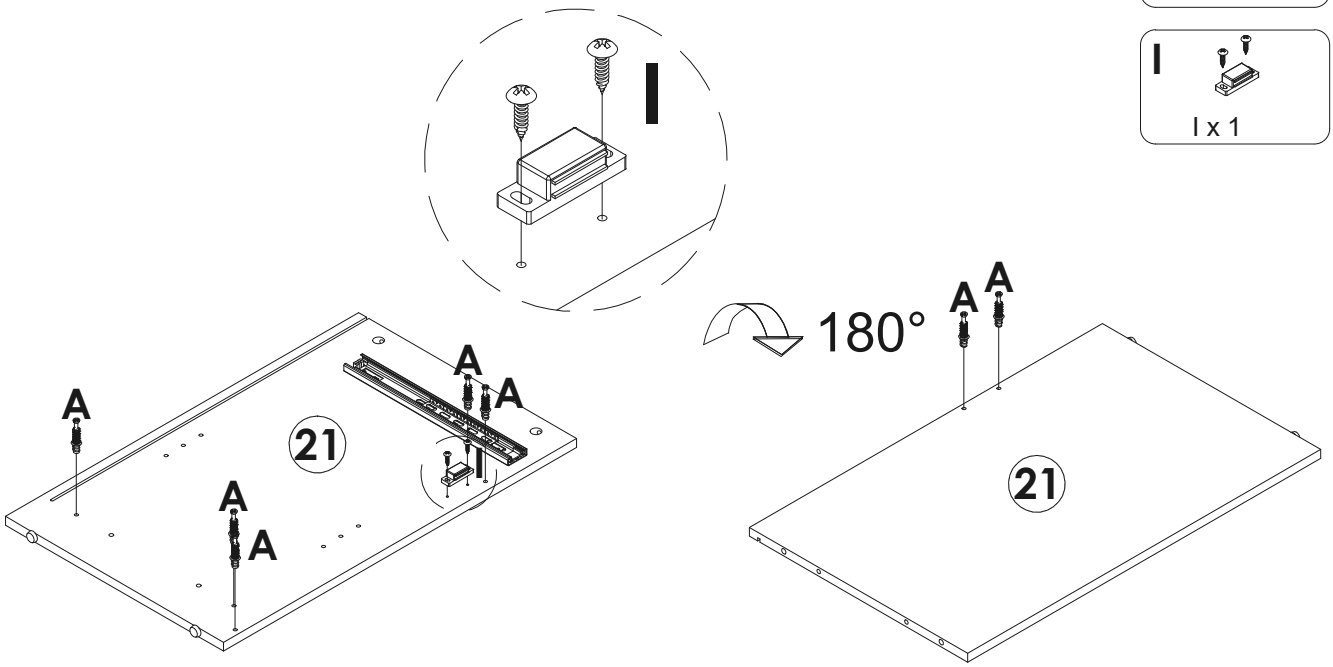


STEP 22


A
A x 2

B
B x 2


C
C x 4

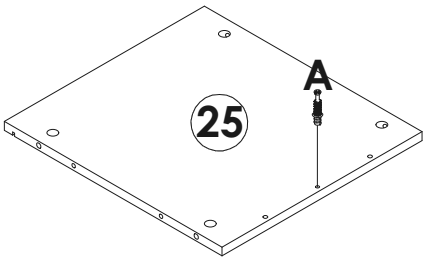

X2

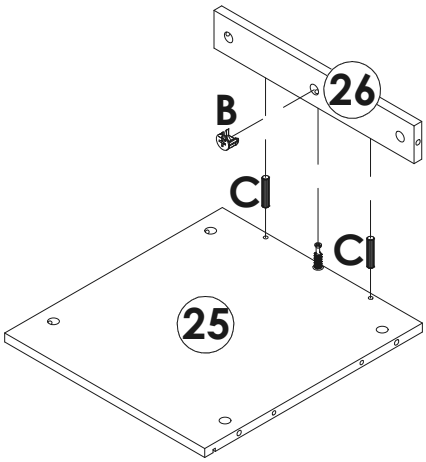



X2

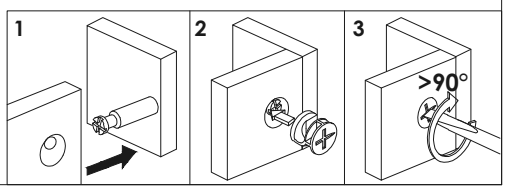



Assembly Instructions

STEP 23

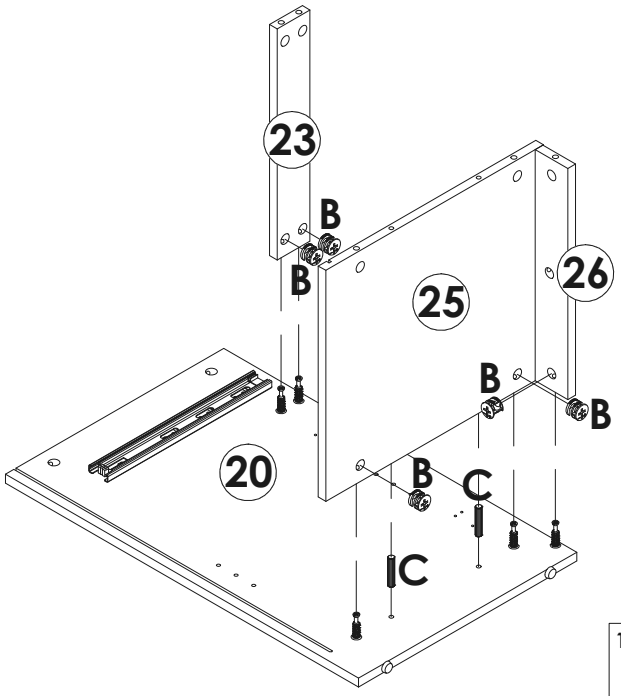


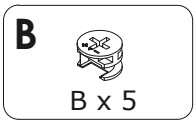


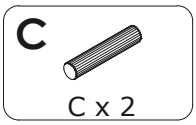


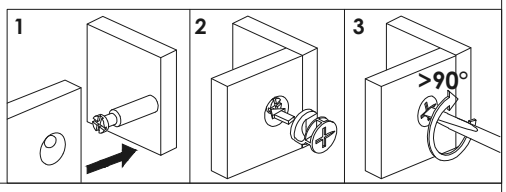


STEP 24

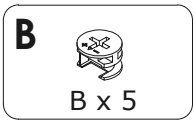

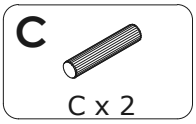


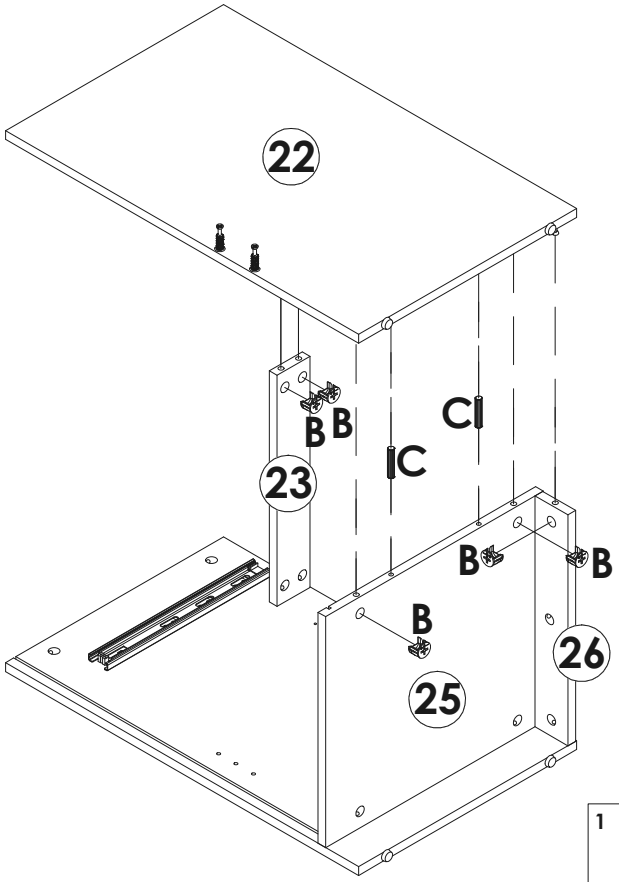

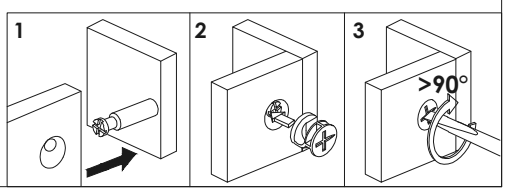

Assembly Instructions

STEP 25

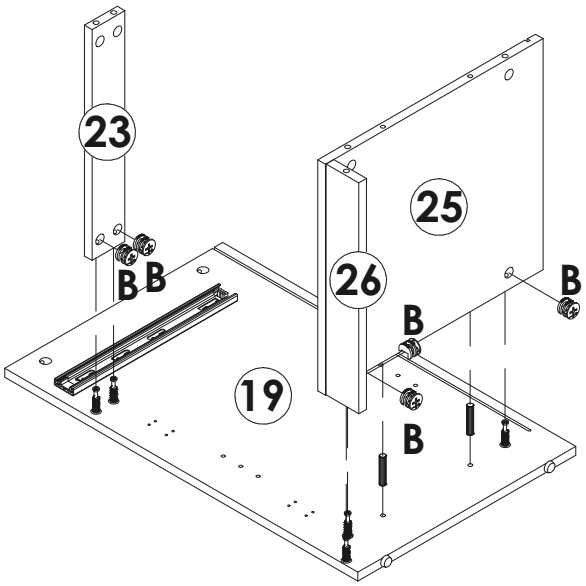


B

B x 5

C

C x 2

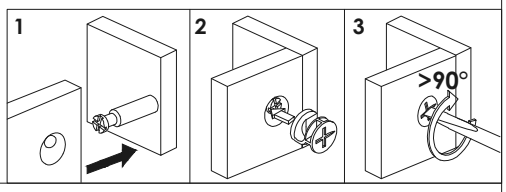


STEP 26


B

B x 5

C

C x 2

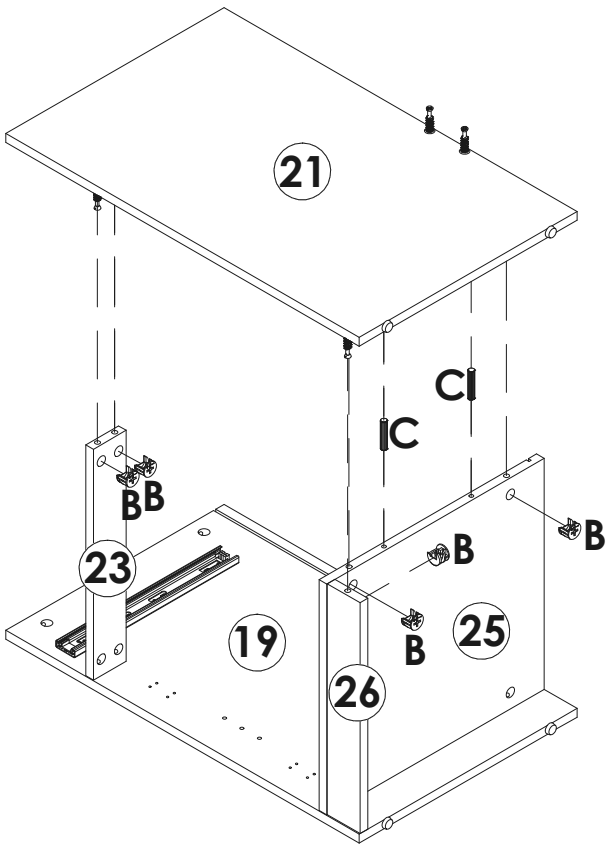

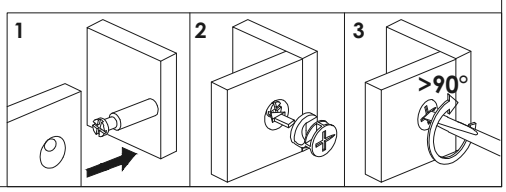


Assembly Instructions


STEP 27

B




B x 4

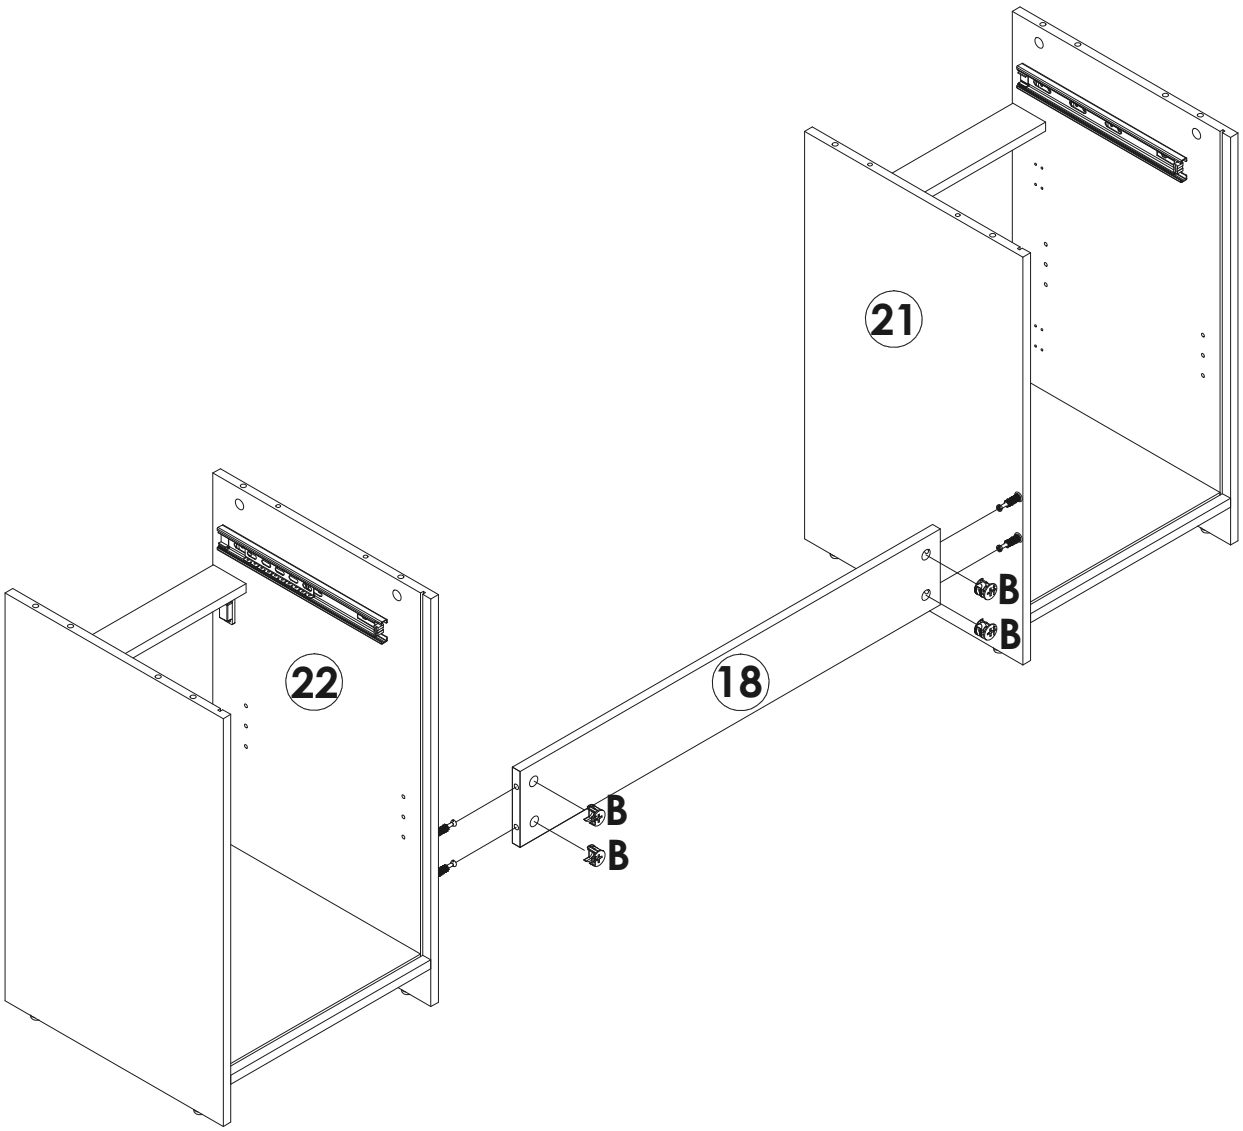


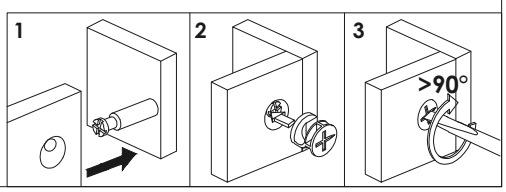

Assembly Instructions

STEP 28

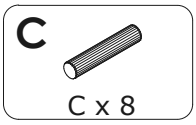

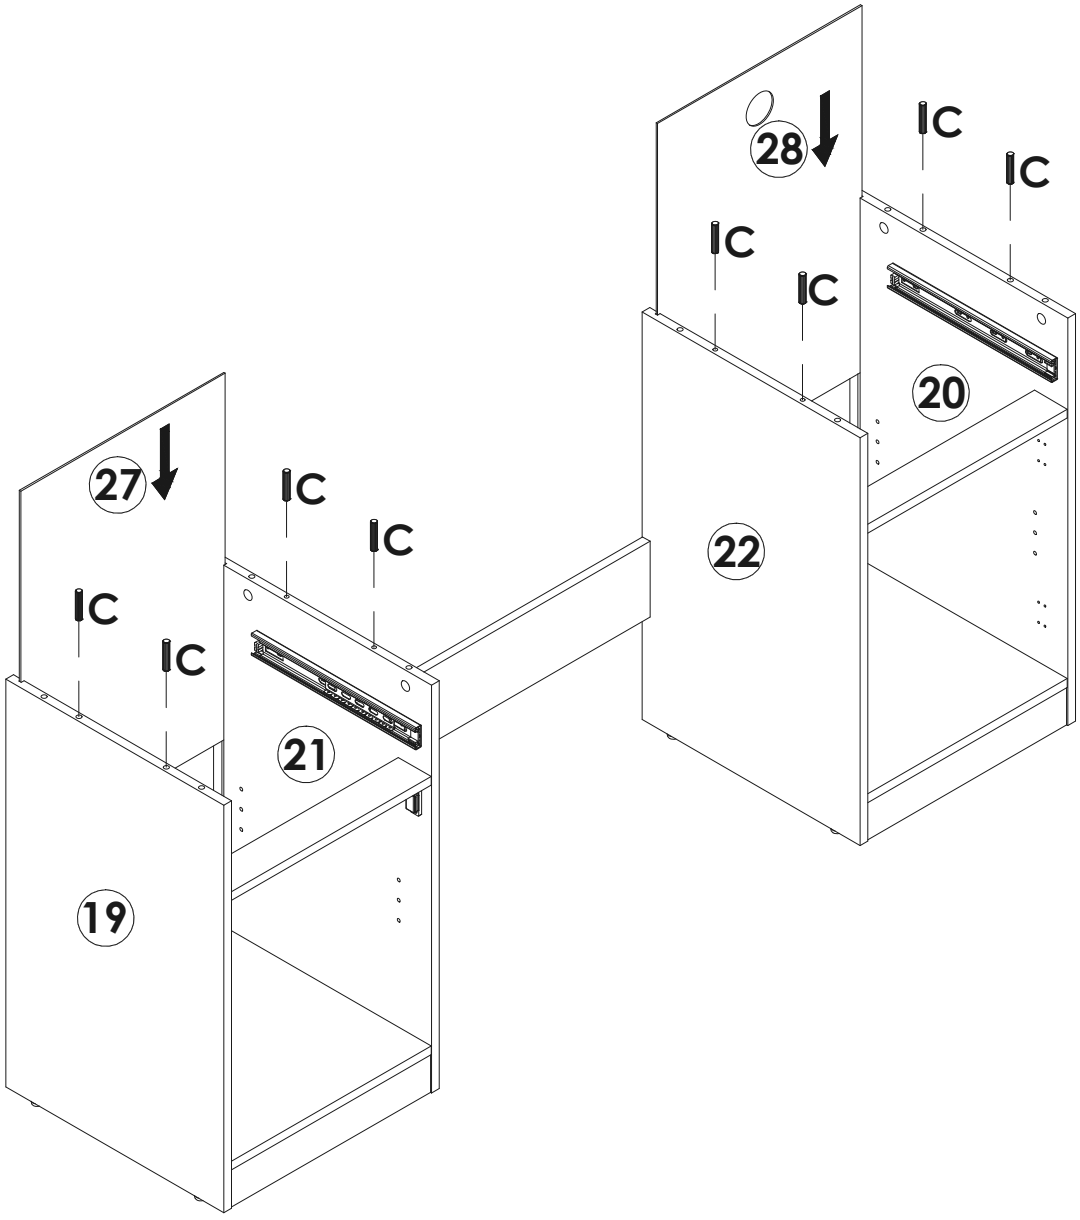


Assembly Instructions

STEP 29

B

B x 8

“Requires 2 people to assemble,
Please be careful."

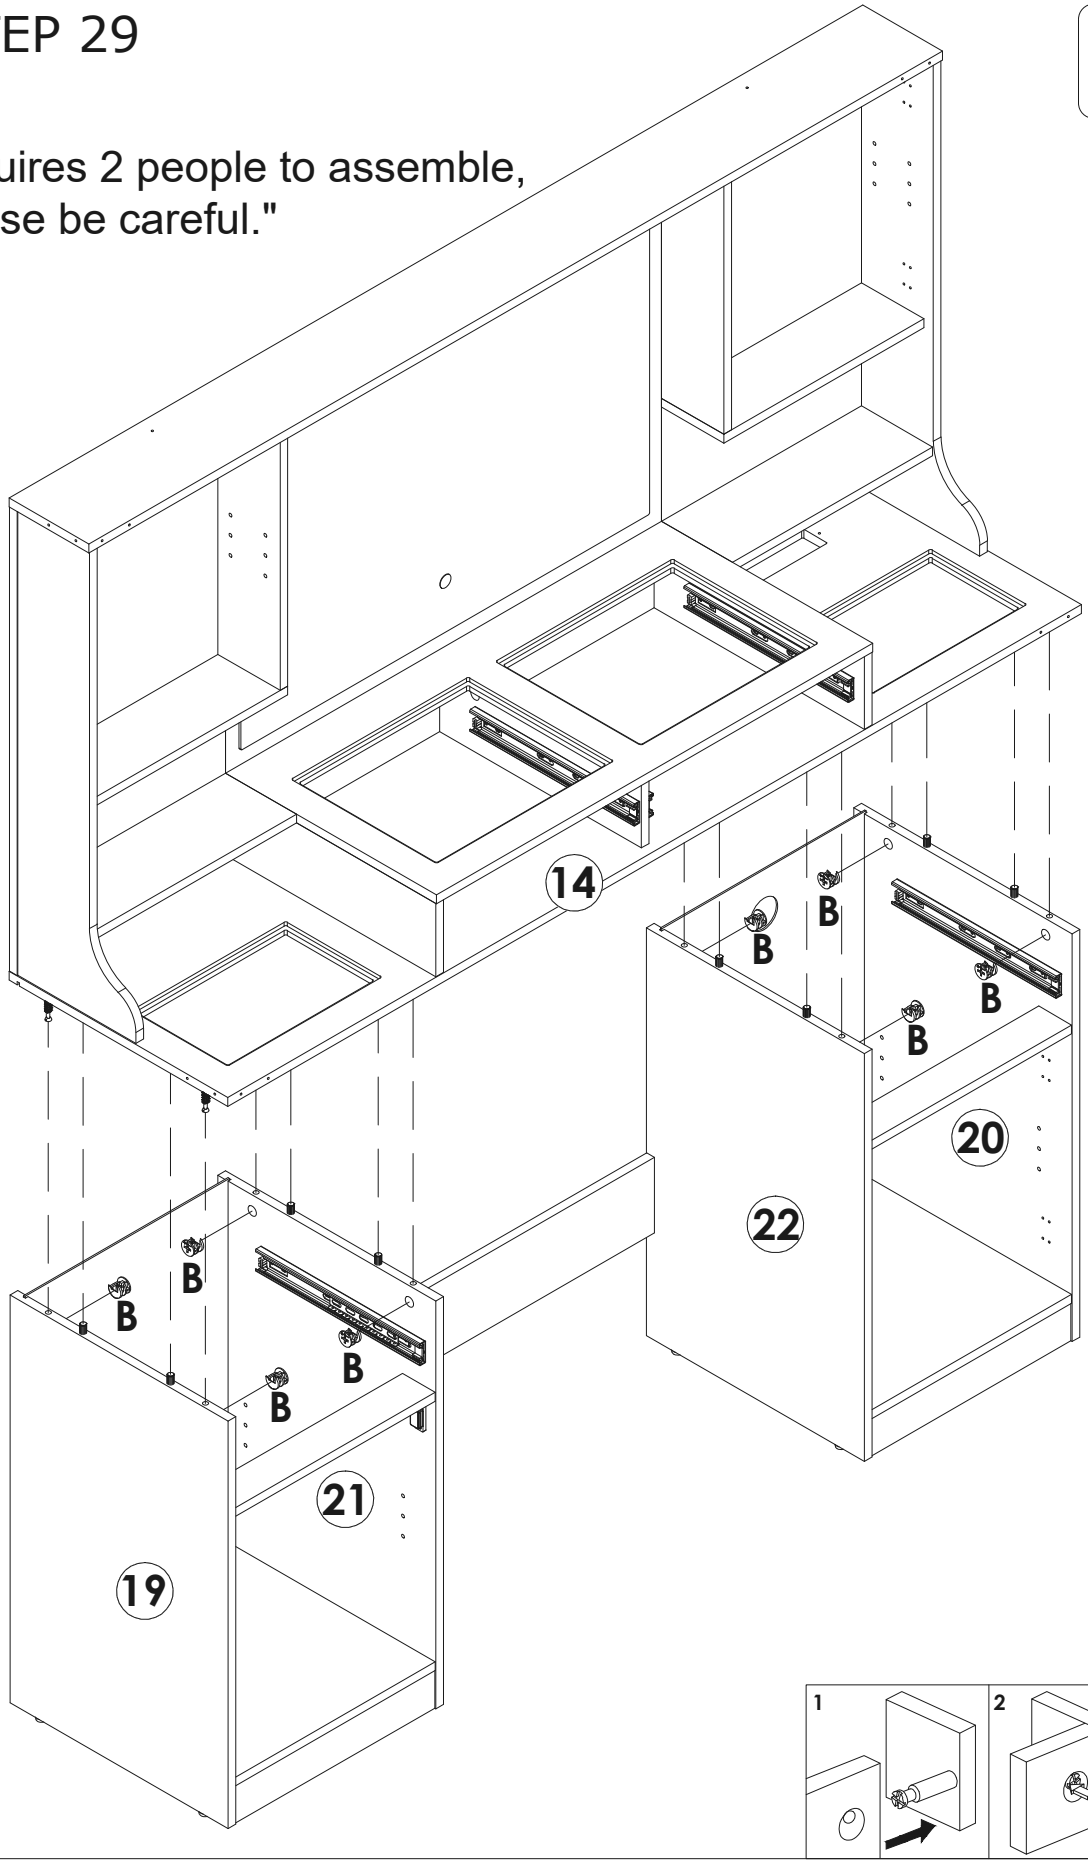

Assembly Instructions

STEP 30

T





T x 1

U



U x 2

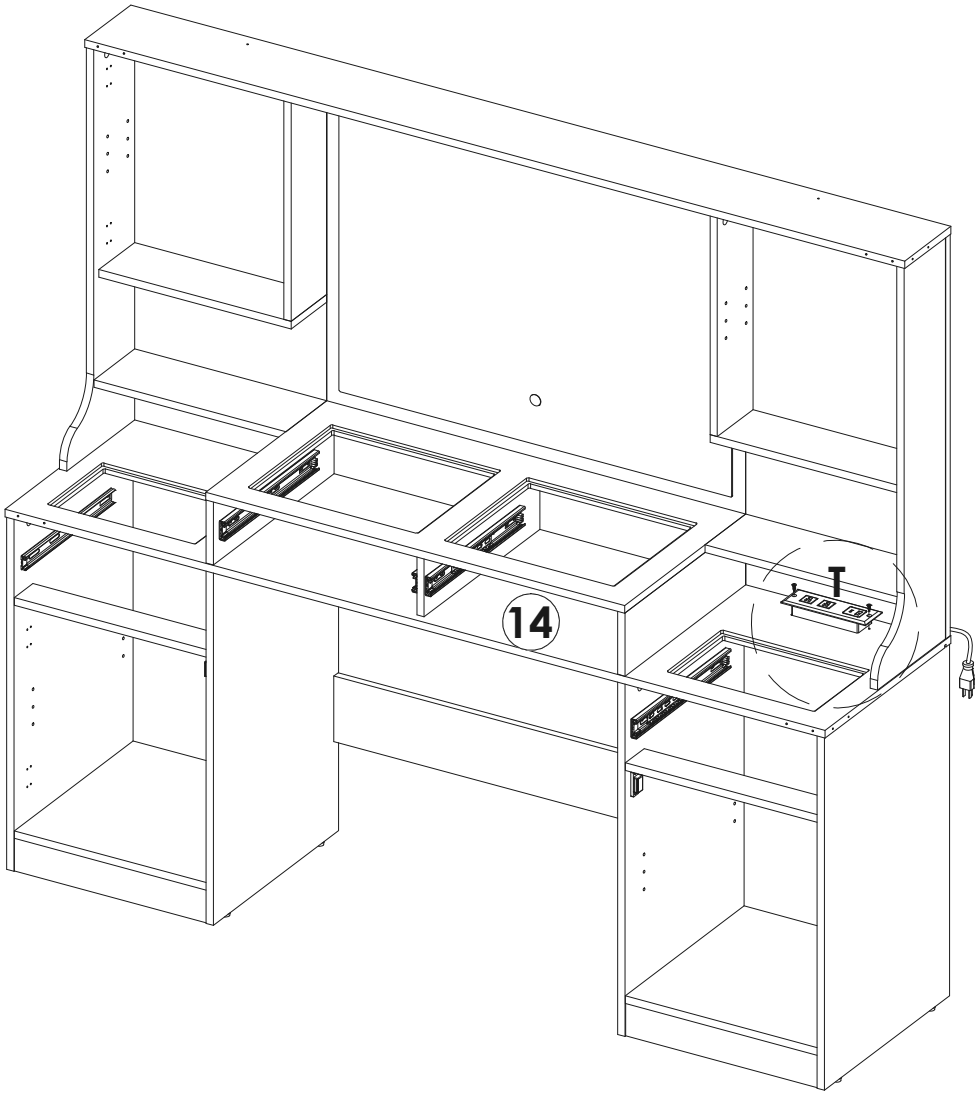

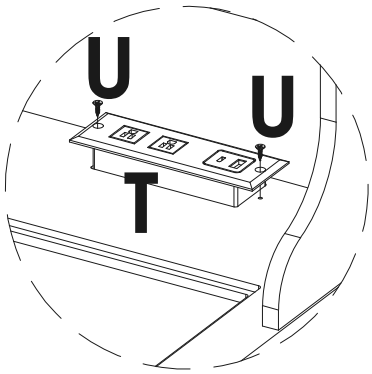


Assembly Instructions

STEP 31

S


S x 12

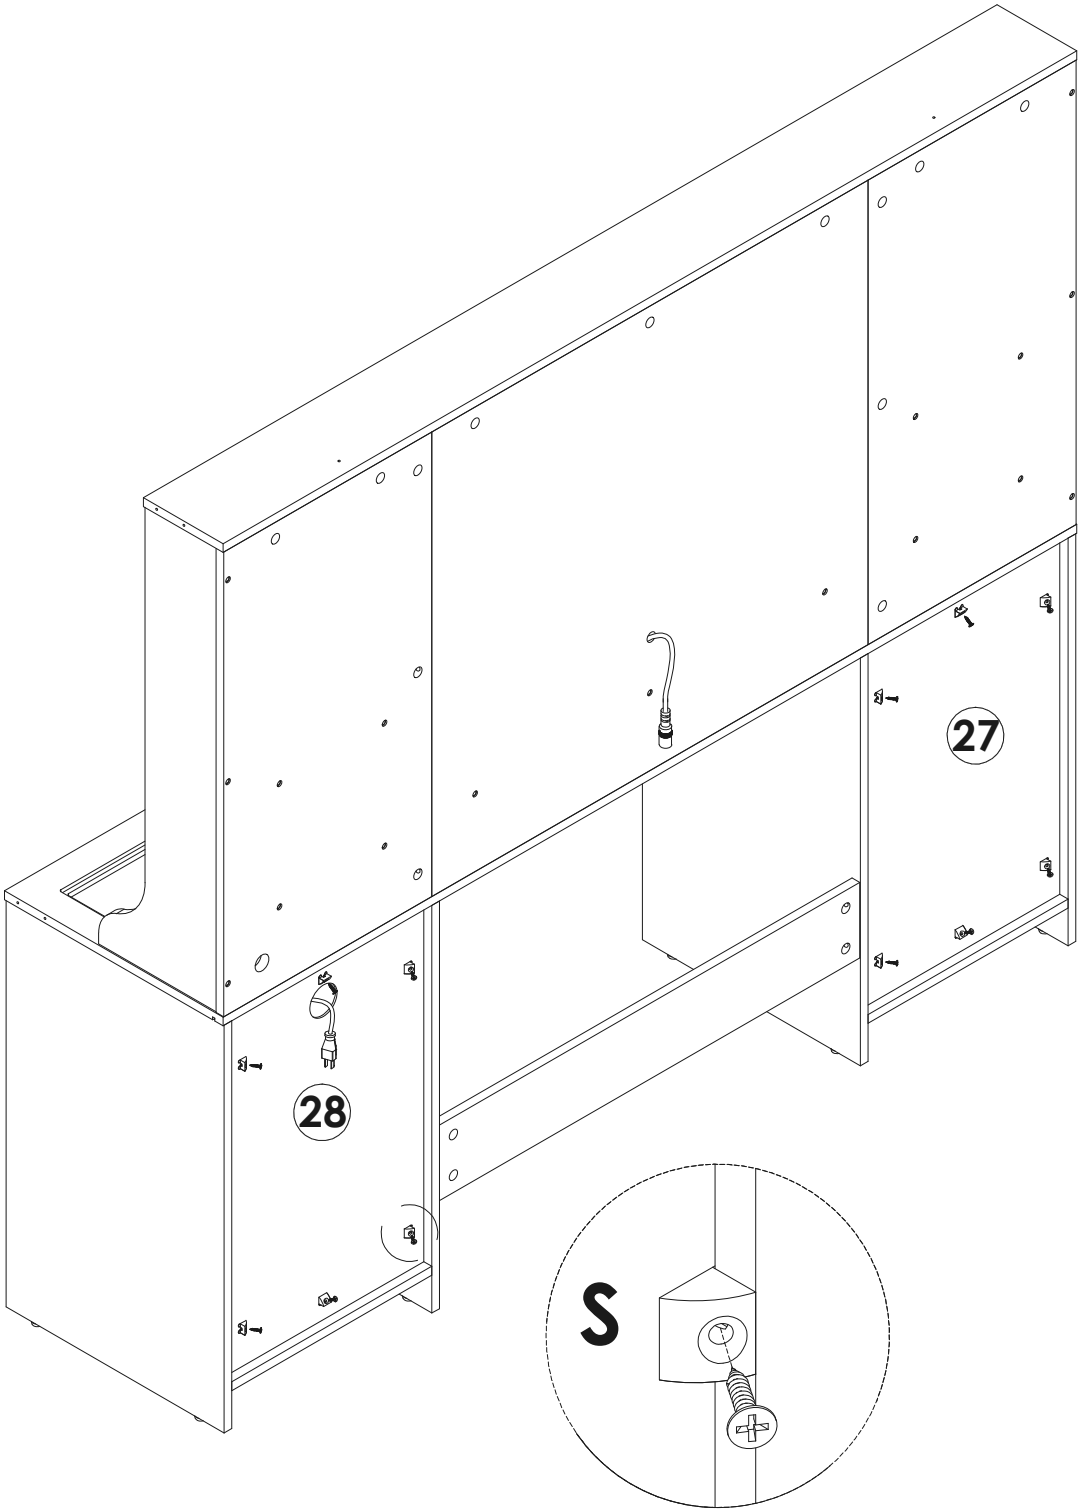


As the picture shows,Fix hardware "S" into the gap with screwsto make the back panel more stable.

Assembly Instructions

STEP 32

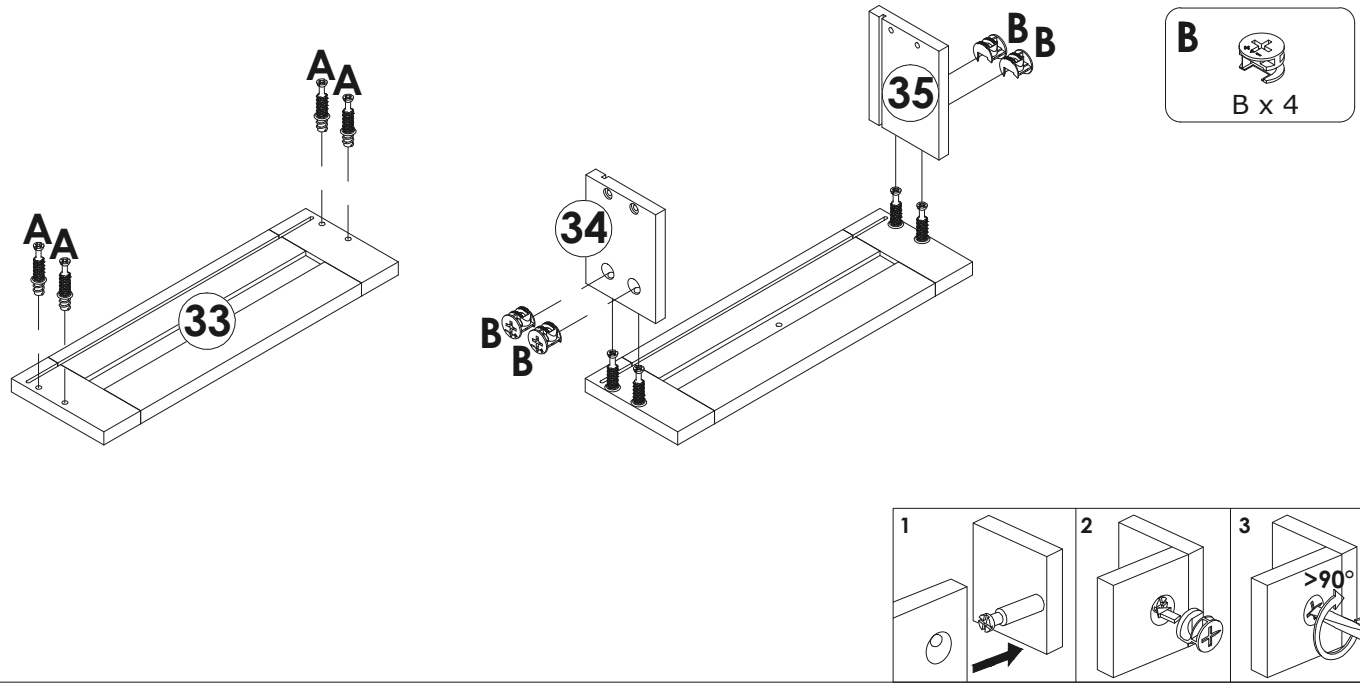



STEP 33

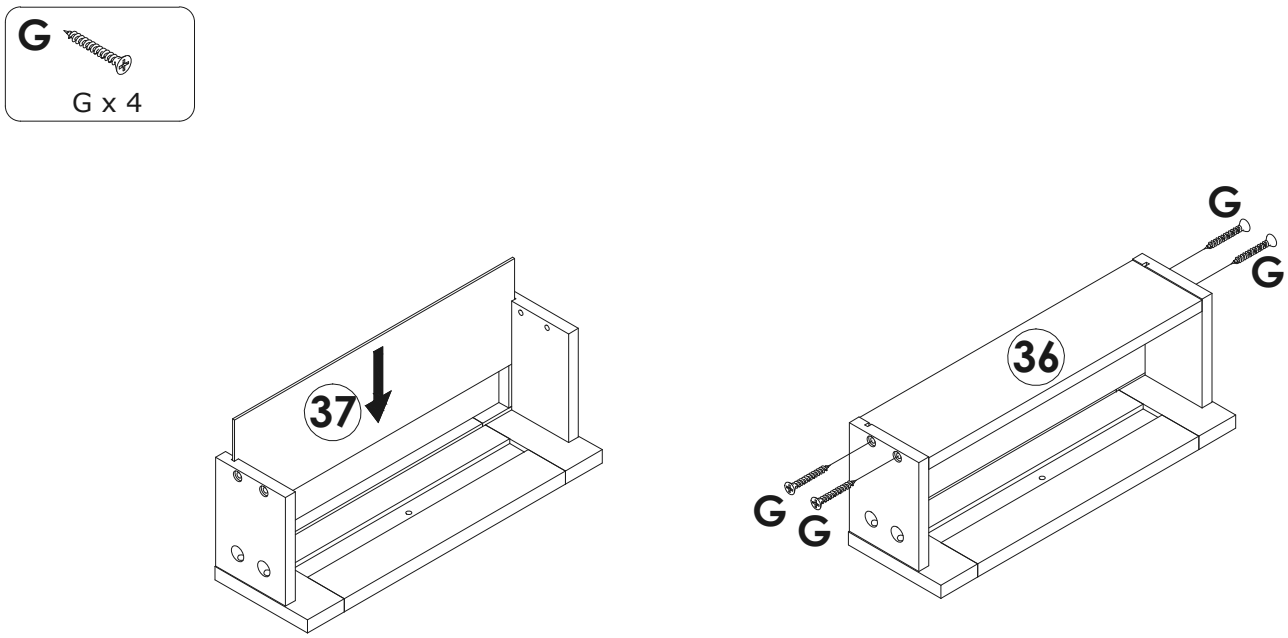


Assembly Instructions


STEP 34

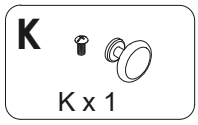


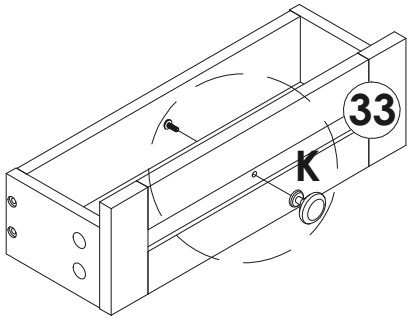


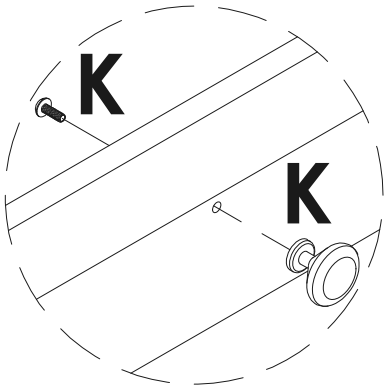


STEP 35

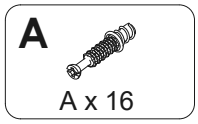

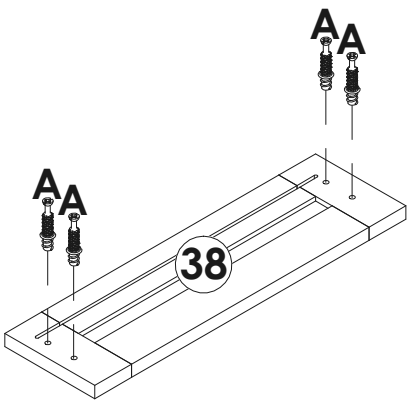


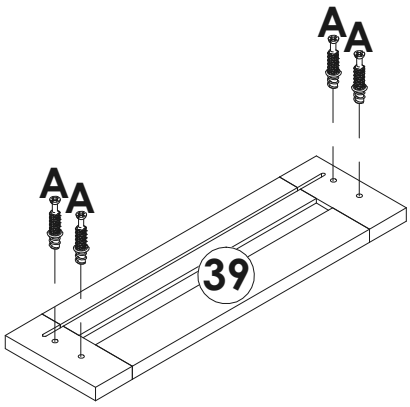


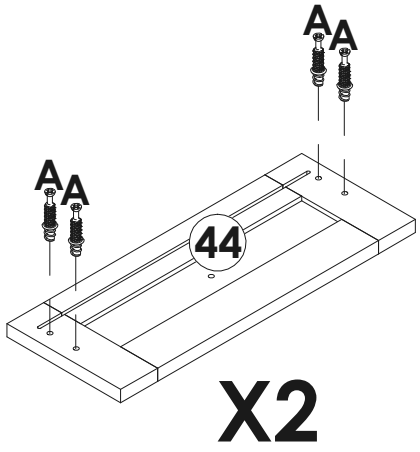



Assembly Instructions

STEP 36

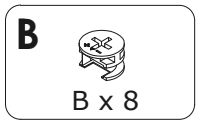


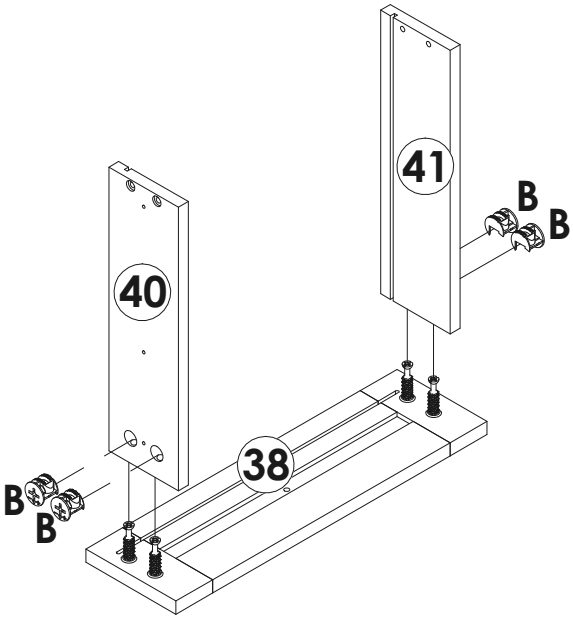


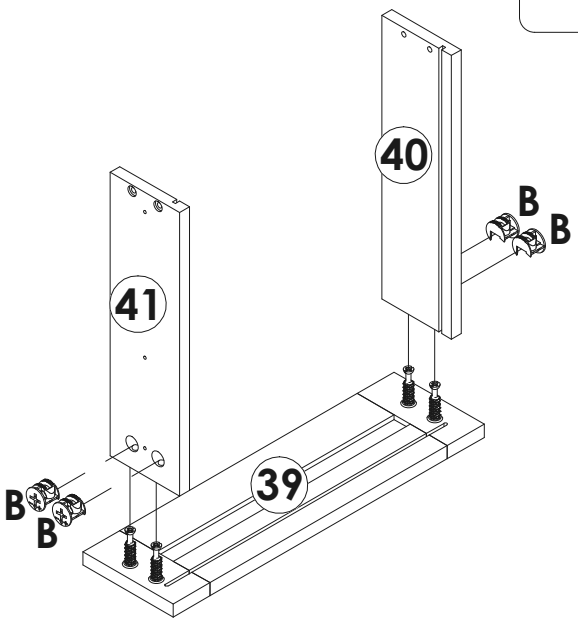

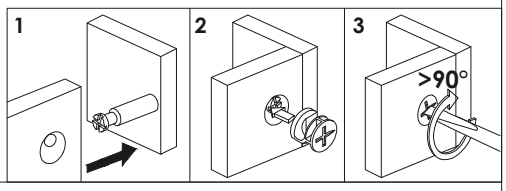

STEP 37

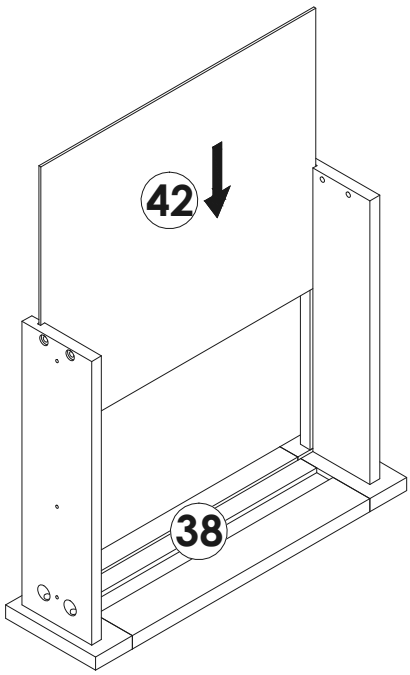


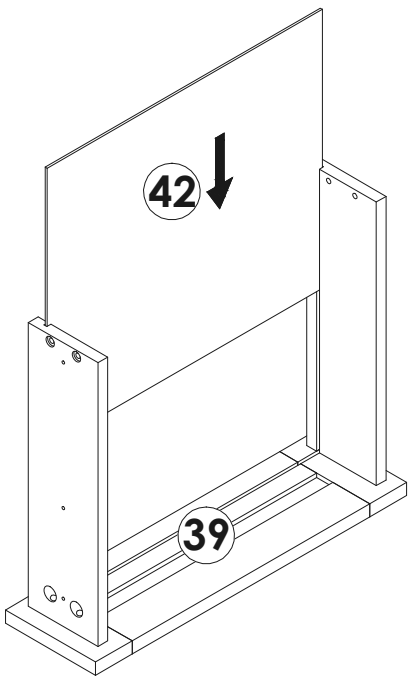

Assembly Instructions


STEP 38


G x 8

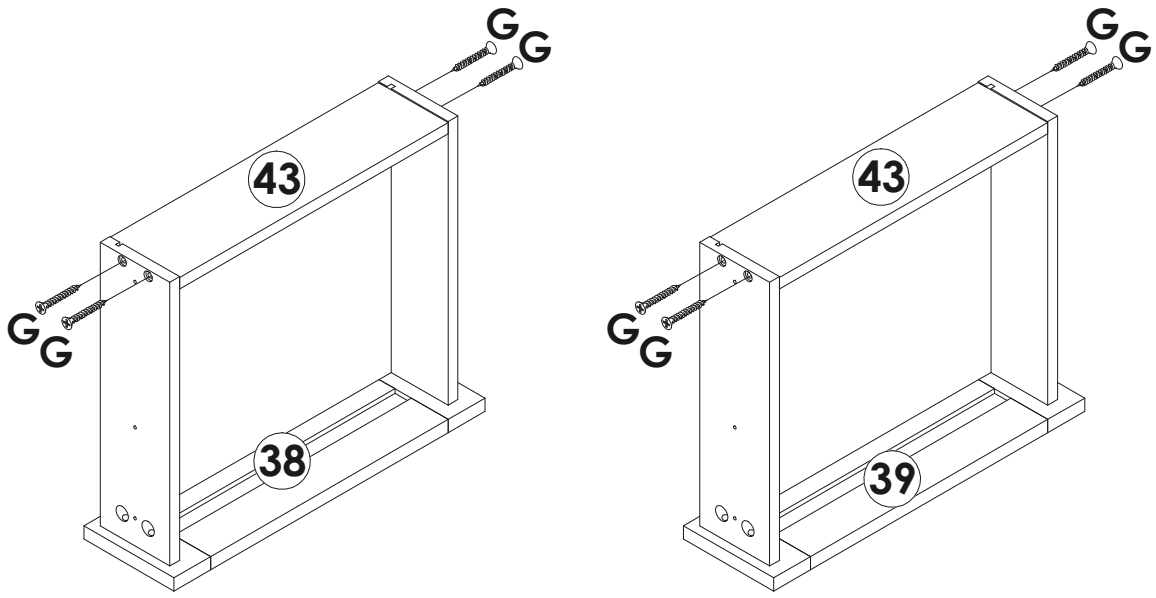

STEP 39

B x 8

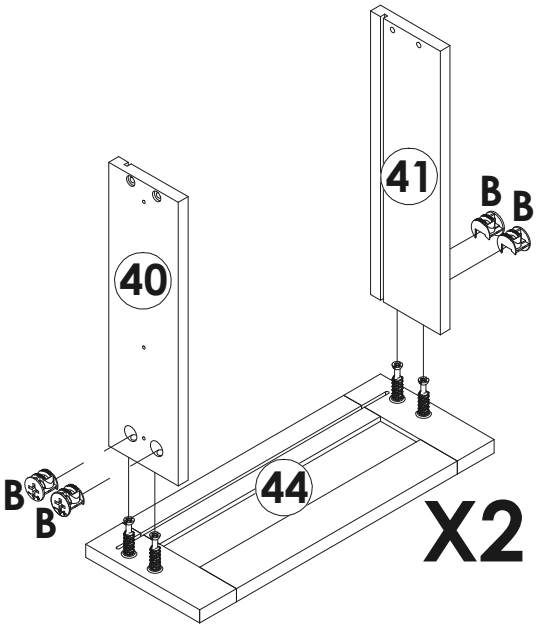

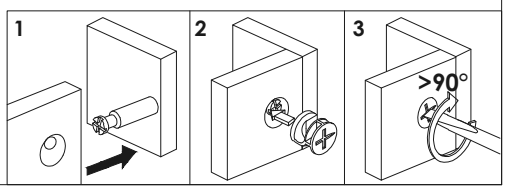


Assembly Instructions


STEP 40

G

G x 8

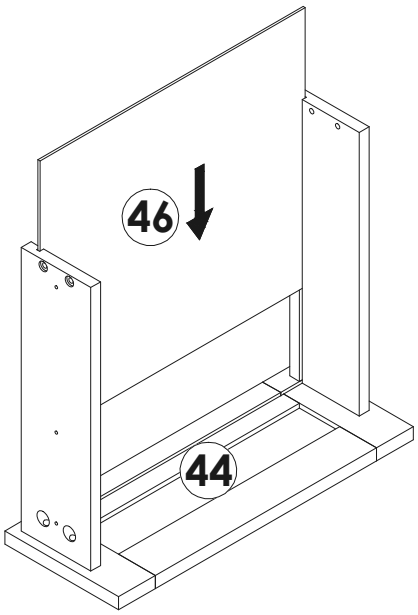


X2

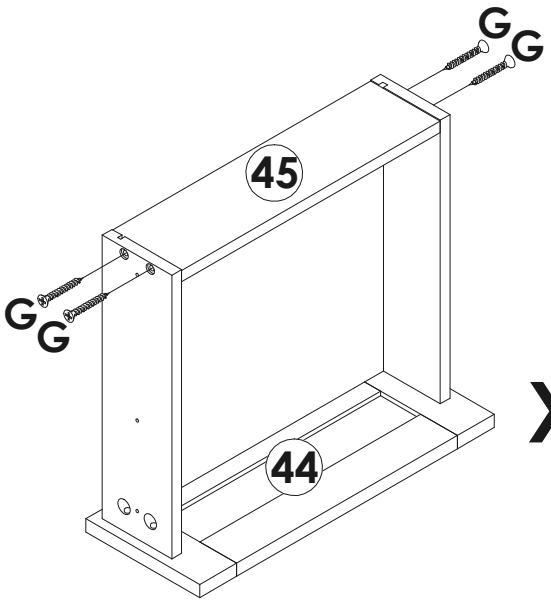



X2


Assembly Instructions


STEP 41

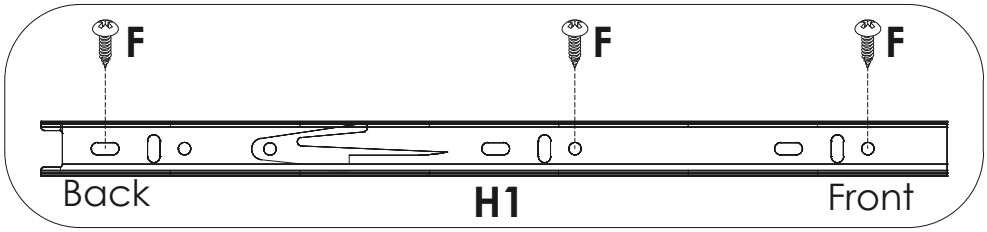


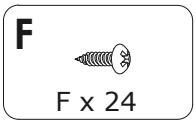


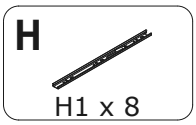


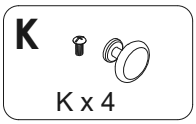

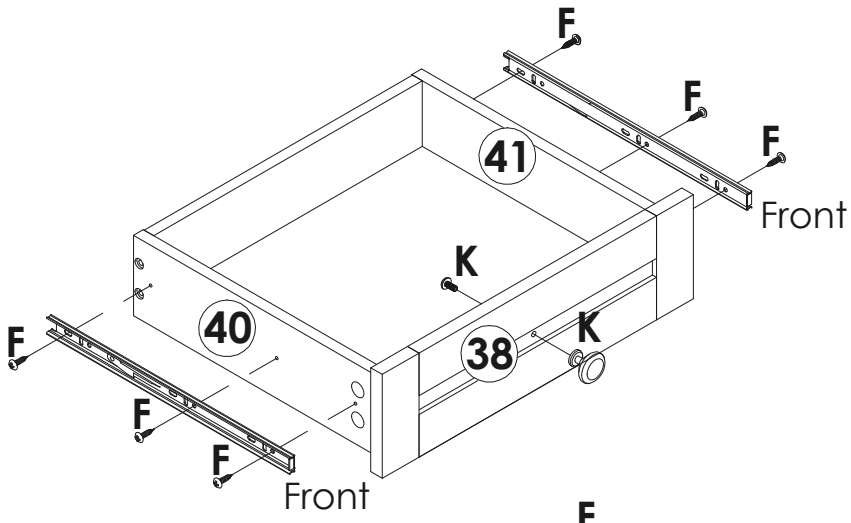

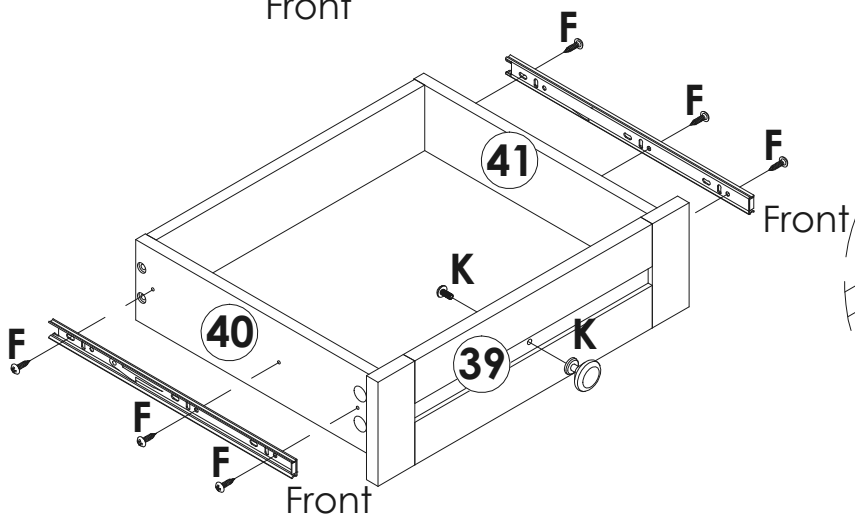


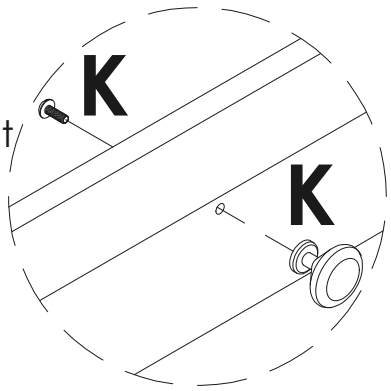

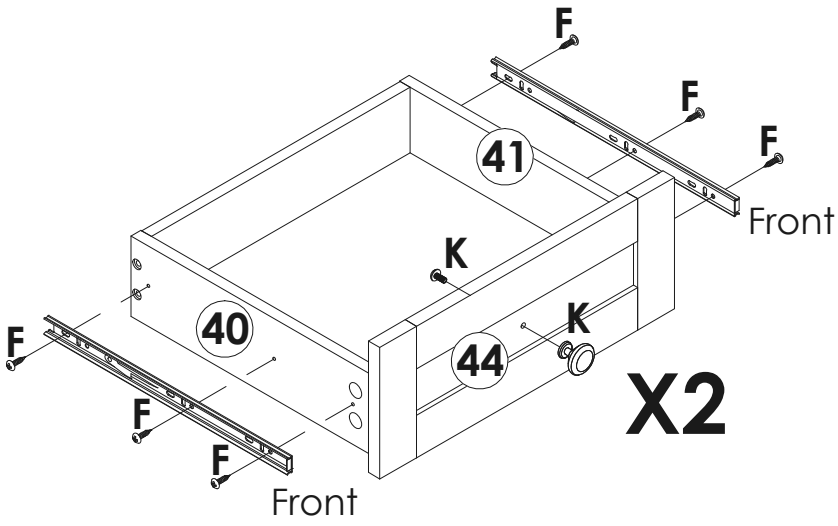


Assembly Instructions

STEP 42

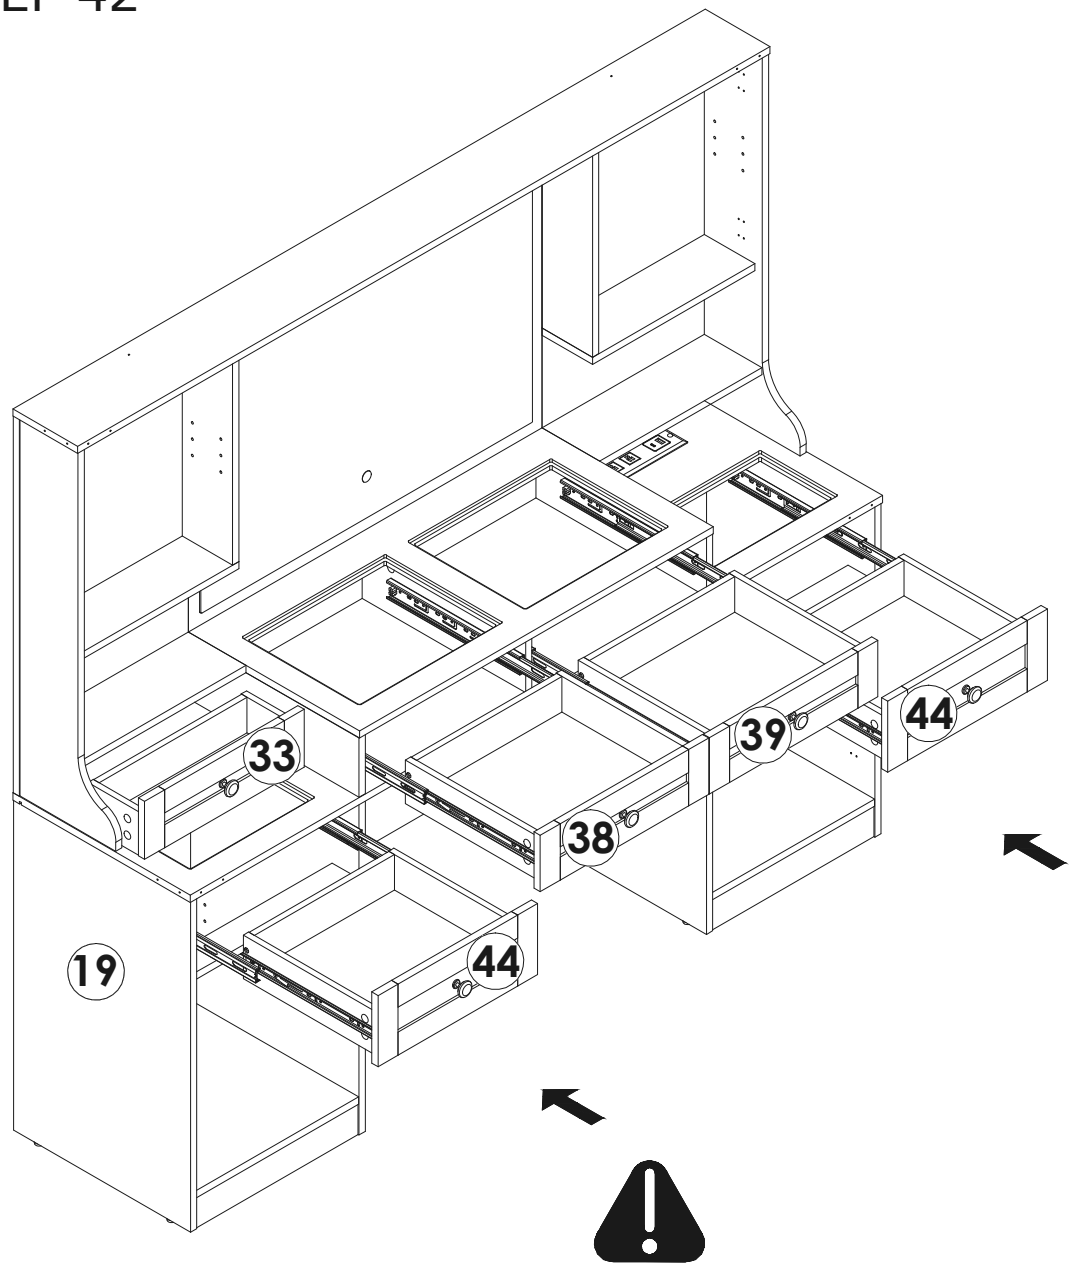


1, Drawers must be horizontally put into the cabinet
2, Make sure both side sliders match well to avoid damage

Wrong: H1 and H2 are not be horizontally placed and pushed

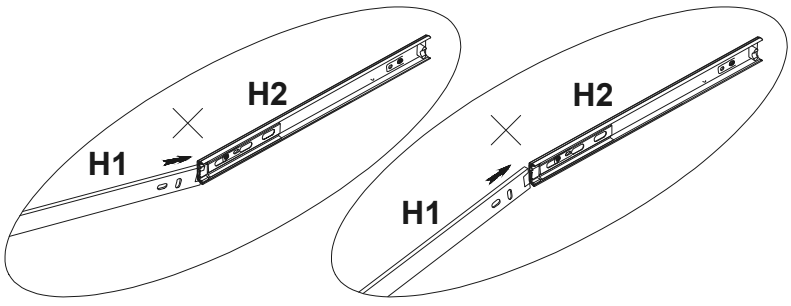

Right: Push H1 and H2 horizontally until you hear a "click"

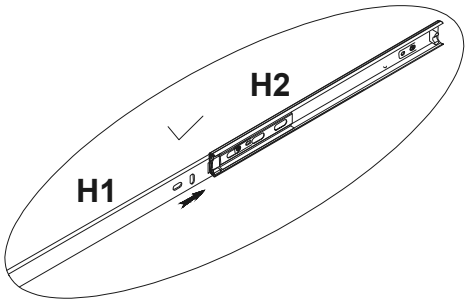


Assembly Instructions

STEP 43

P x 8

R x 16

J x 2

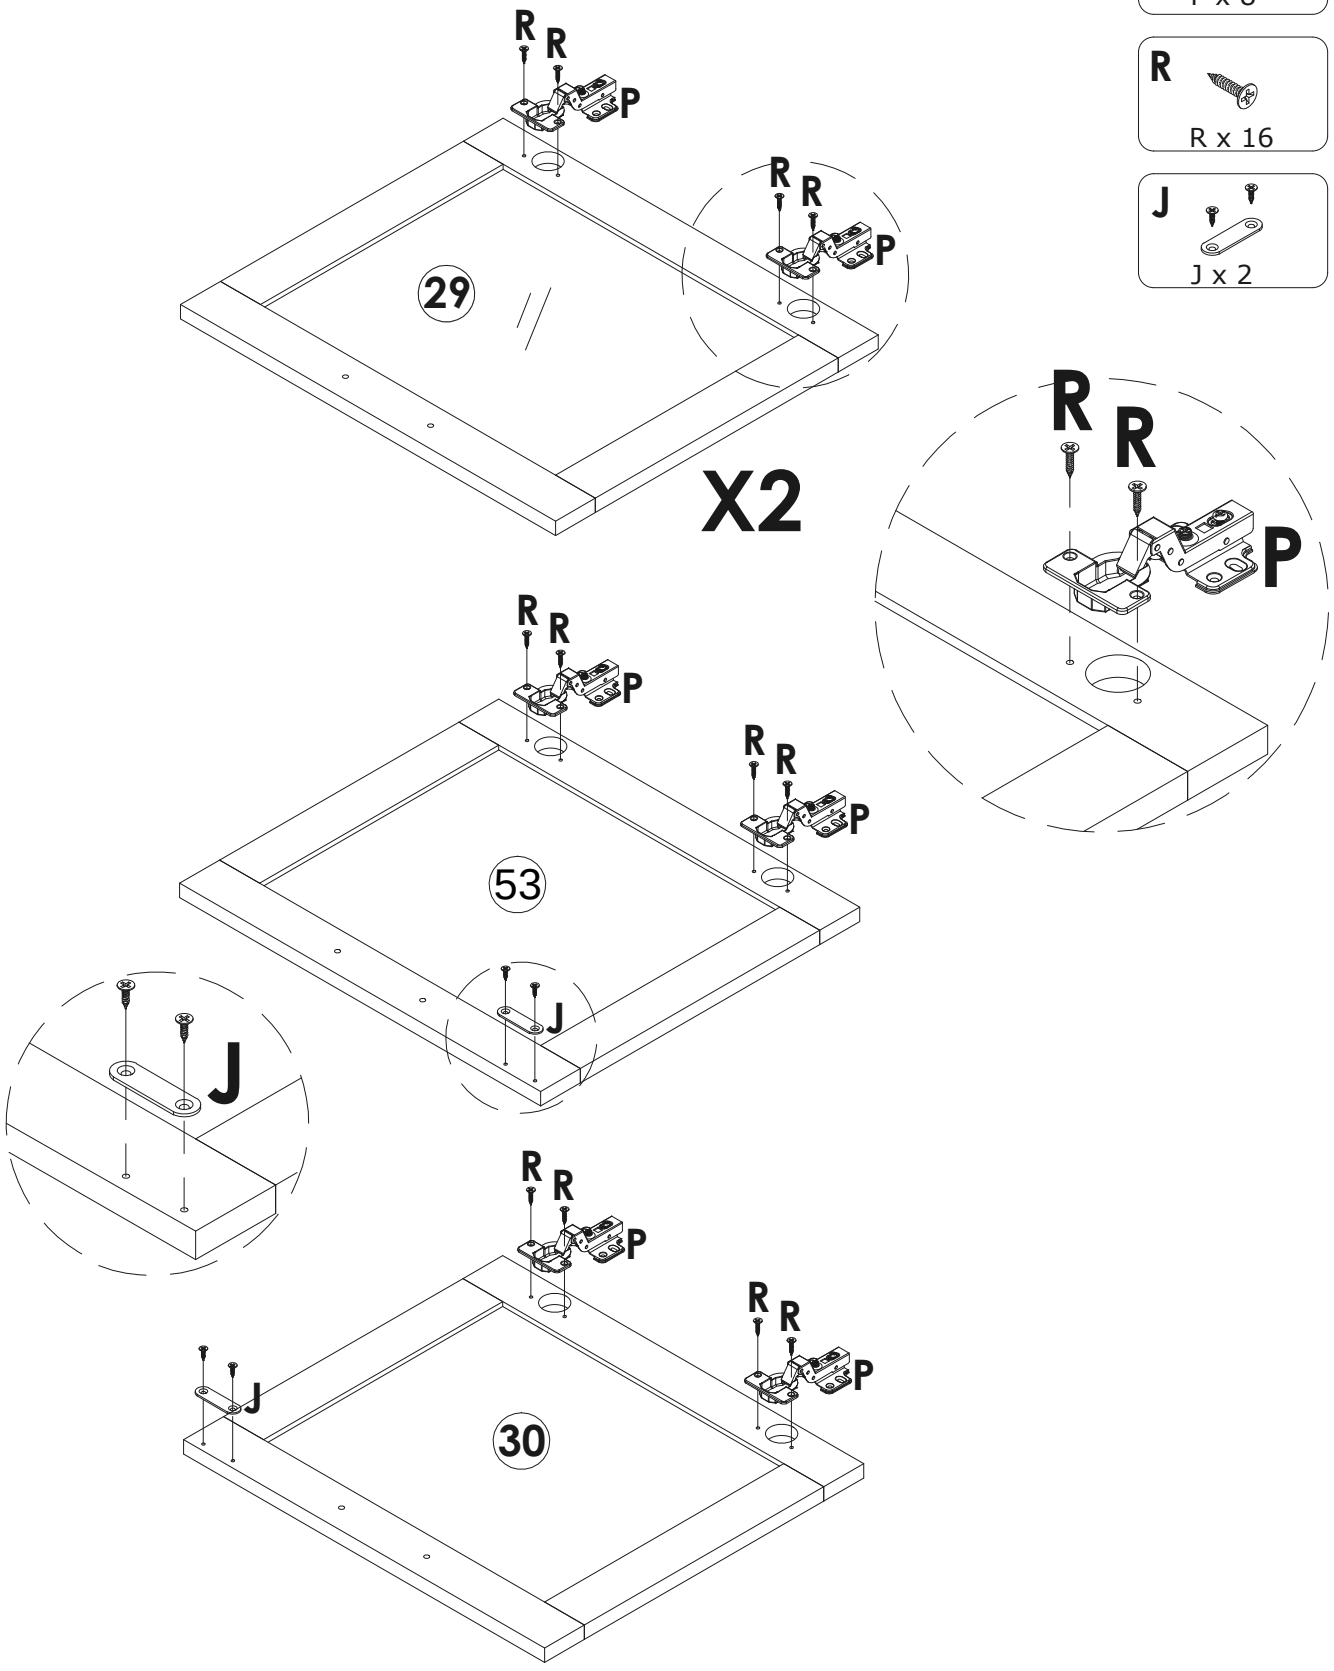

Assembly Instructions


STEP 44

R

R x 32

L


L x 4

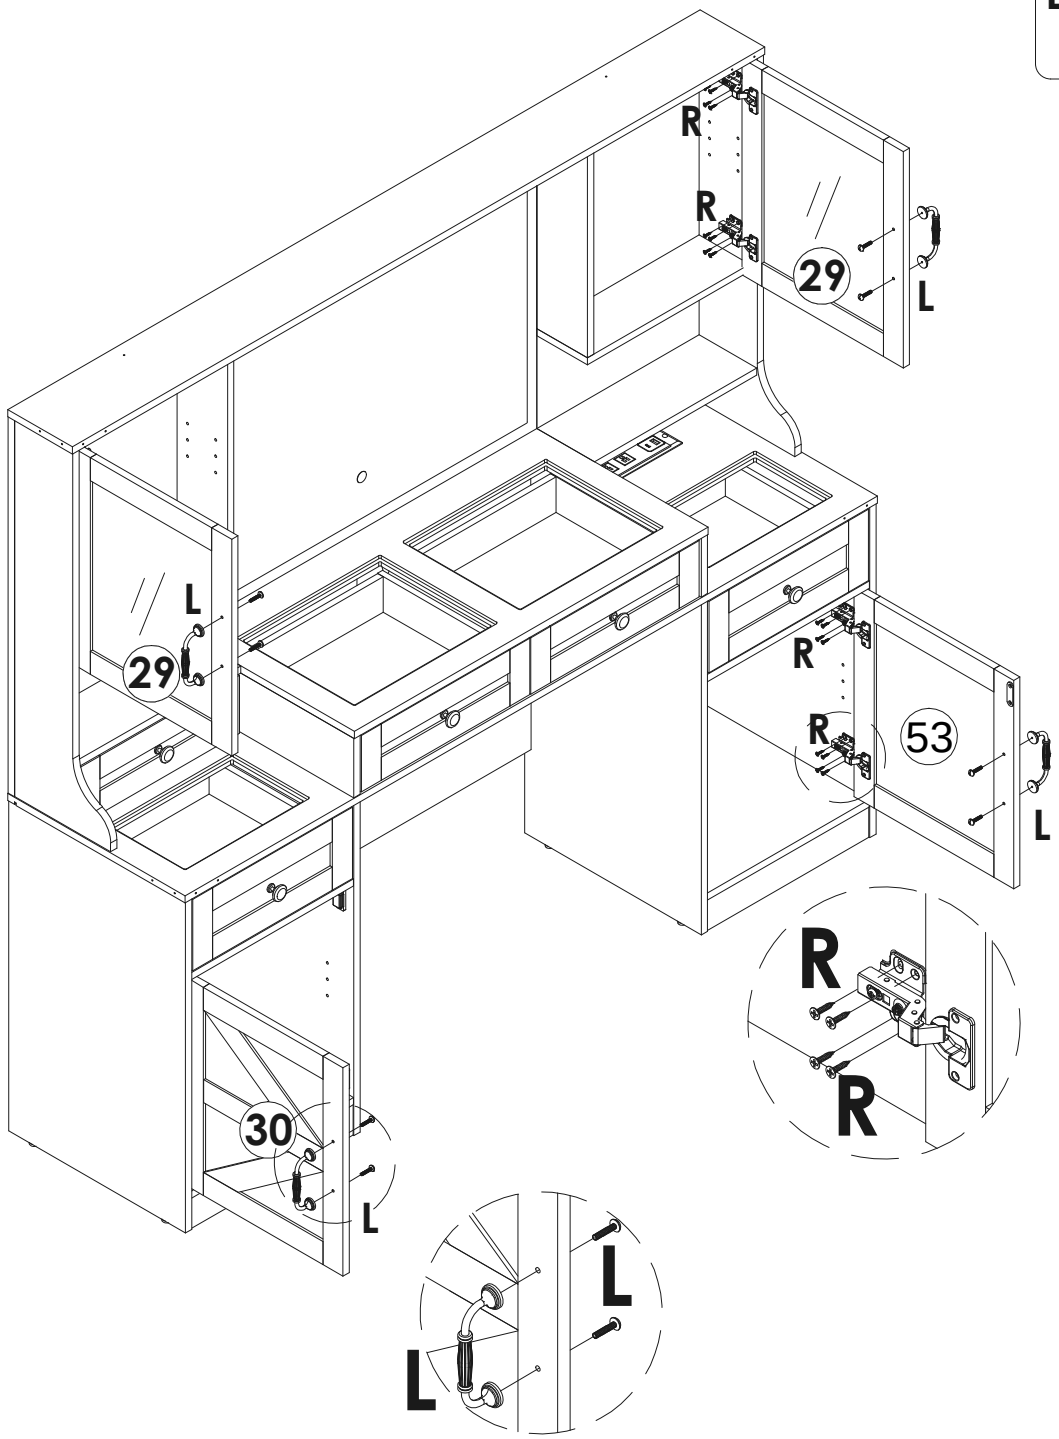


Assembly Instructions


STEP 45

When the hinges are installed, you can refer to the pictures to adjust the screws of the doors till it's perfect.

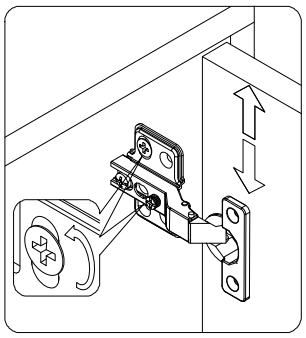



1. Adjust the screws shown in Figure 1 to adjust the door up and down.

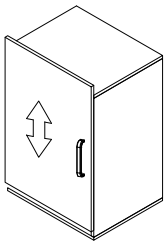

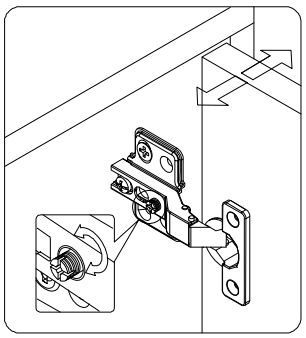



2. Adjust the screws shown in Figure 2 to adjust the door left and right to the right position.

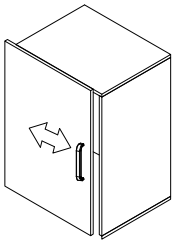

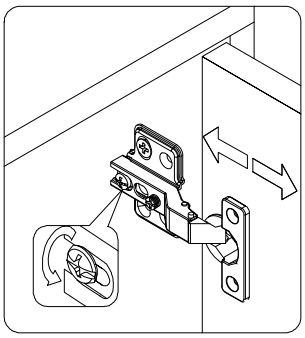

3. Adjust the screws shown in Figure 3 and pull the door back and forth so that it can be opened smoothly.

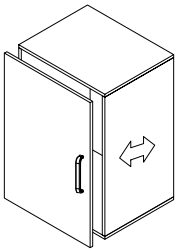


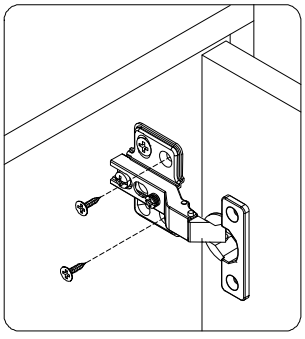


4. After the adjustment is complete, secure the remaining two screws to secure the door in place.

Assembly Instructions

STEP 46

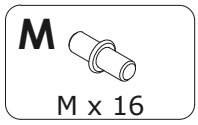

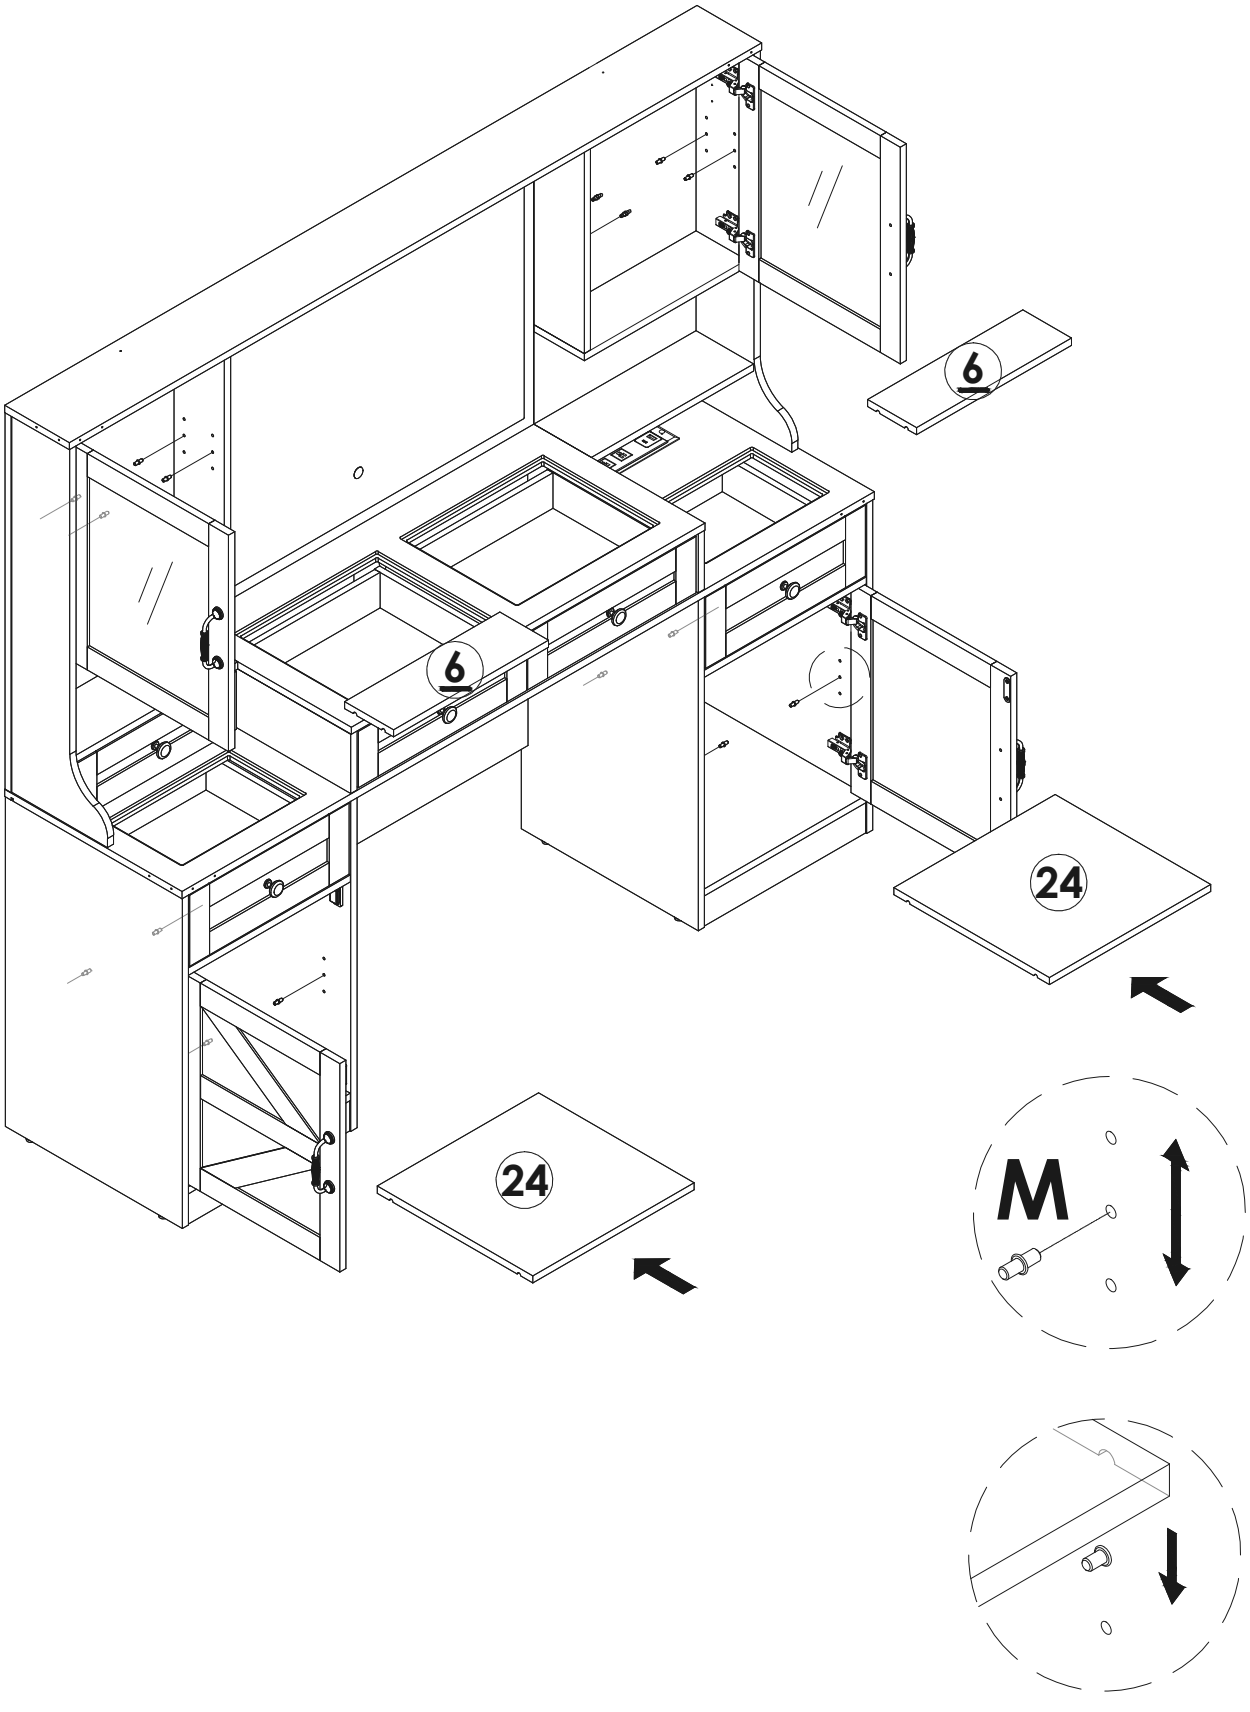


Assembly Instructions

STEP 47

O x 16


N x 4


Y x 2

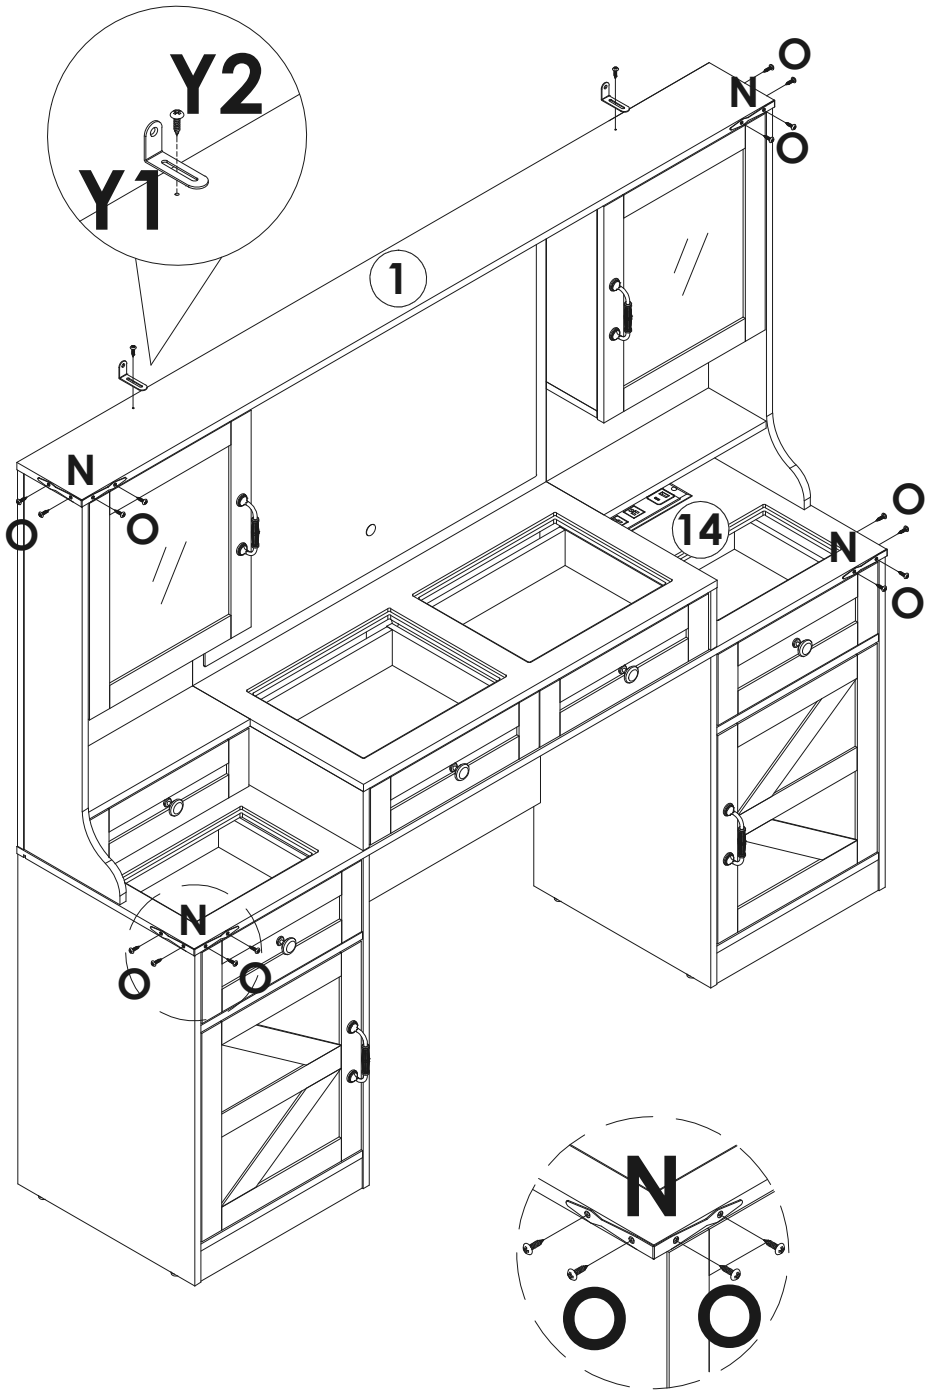


Assembly Instructions

STEP 48

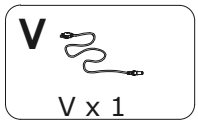


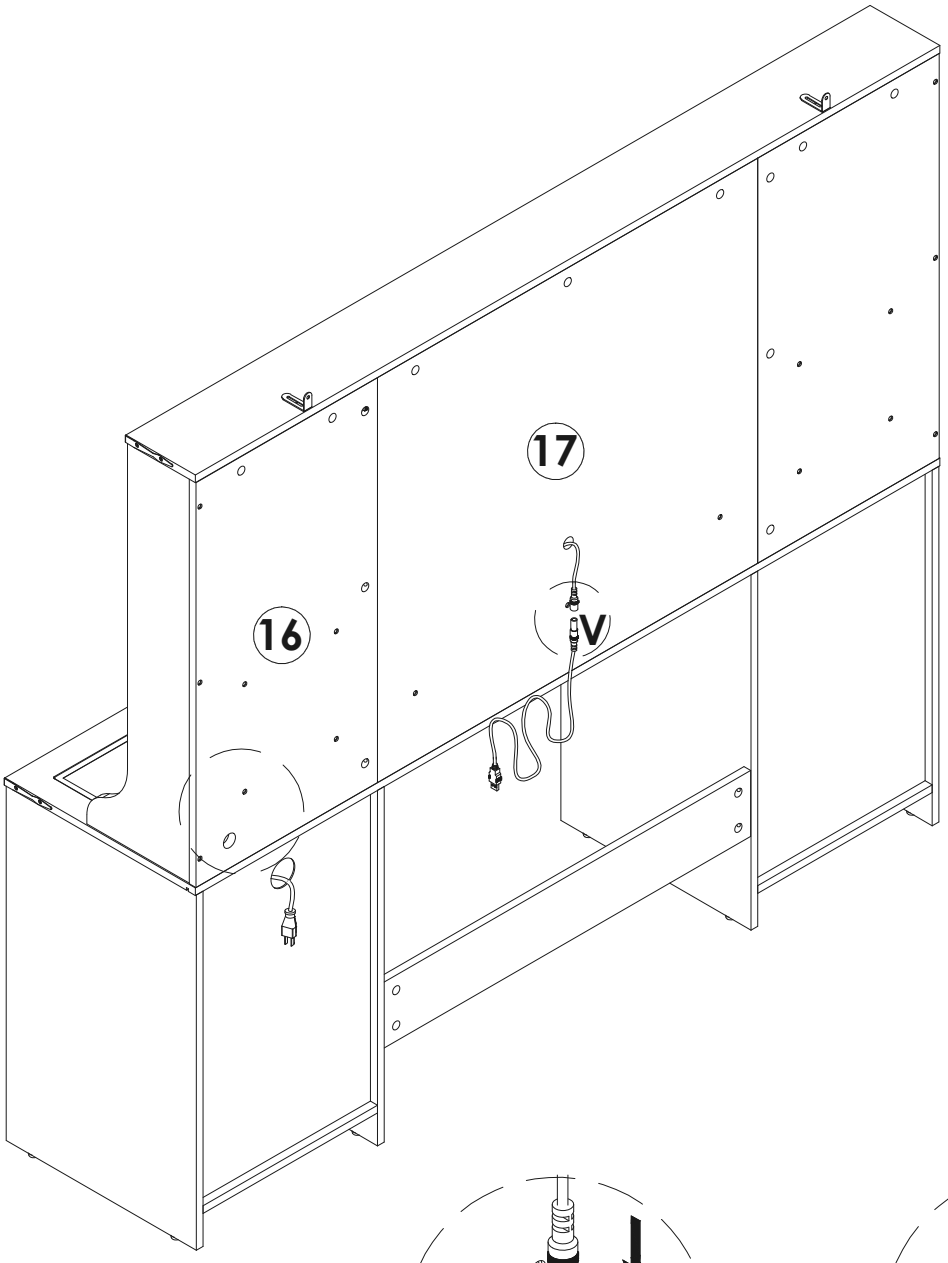

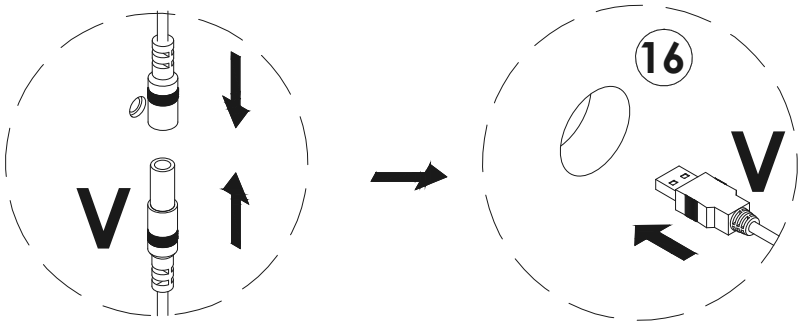

Assembly Instructions


STEP 49

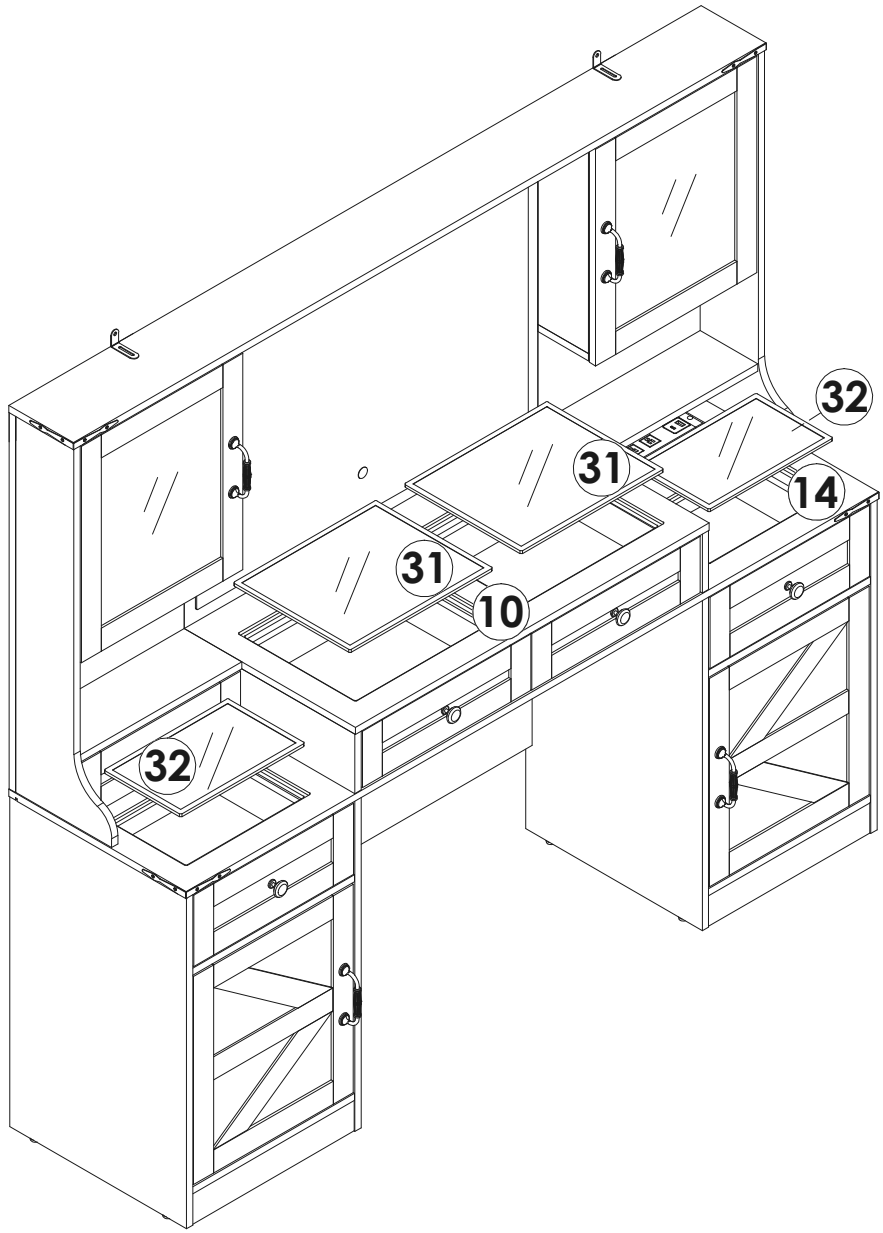


Assembly Instructions

STEP 50

Y
Y4
Y3
Y x 2

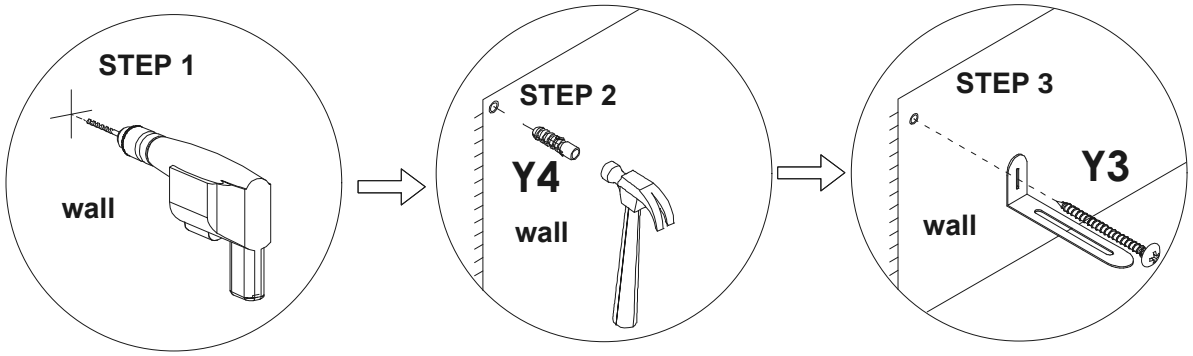



WALL

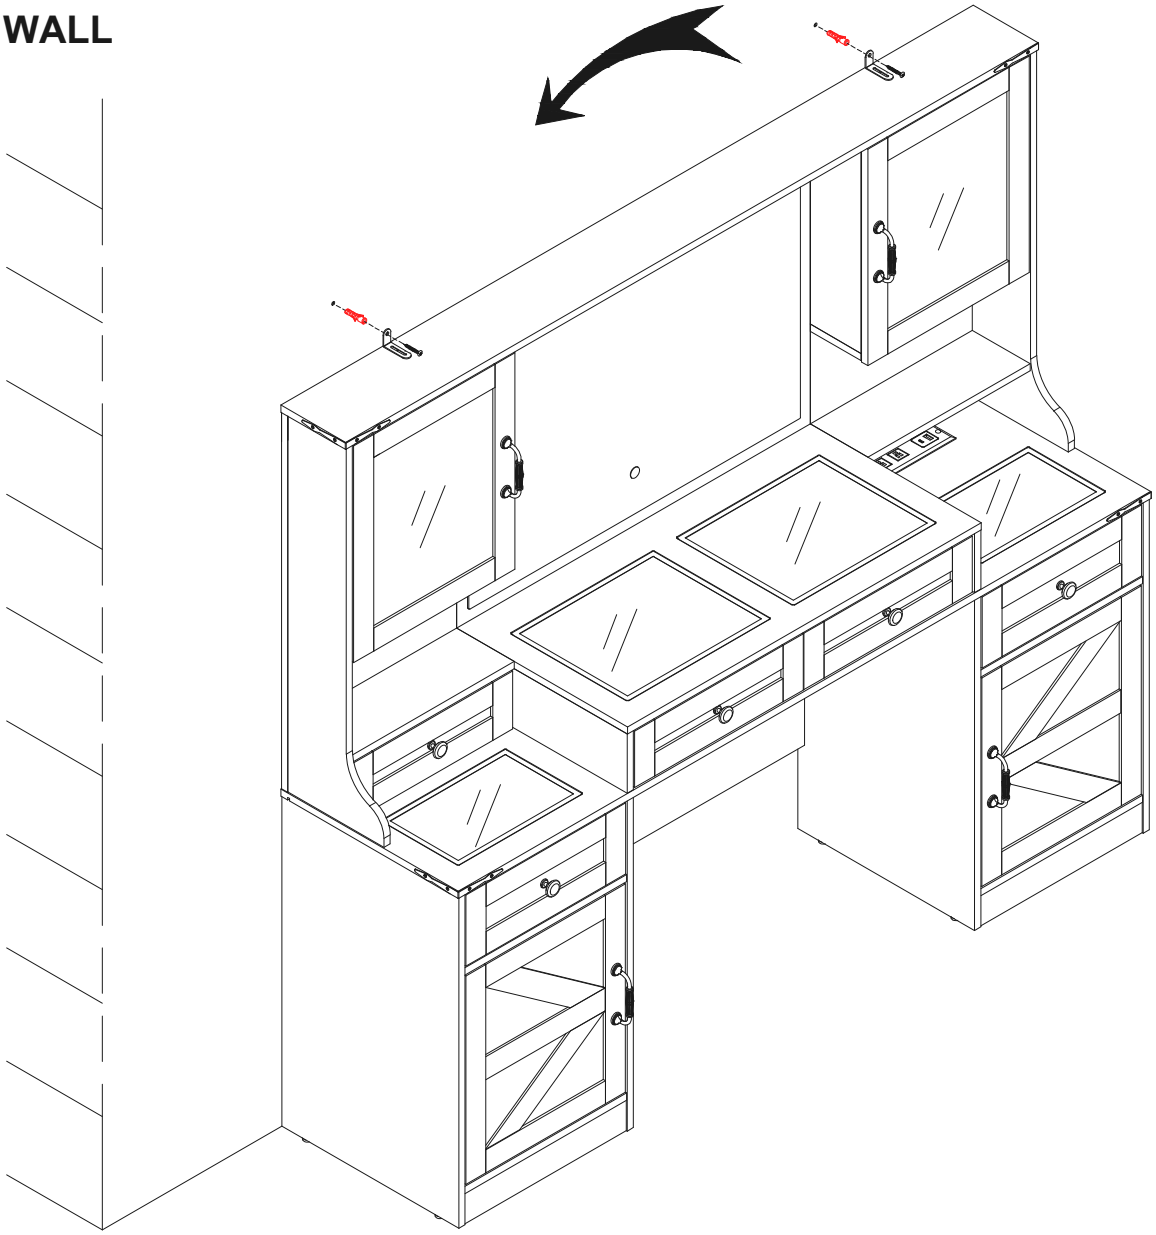


Assembly Instructions


STEP 51

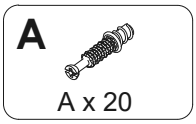

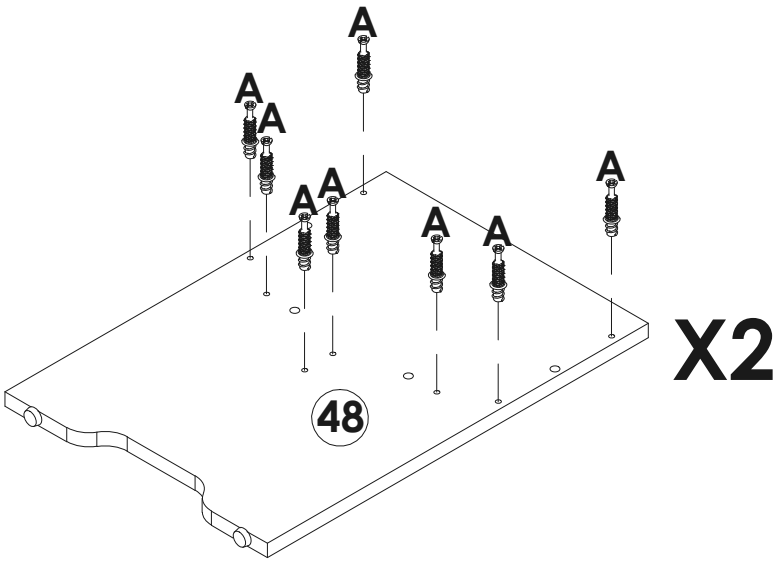

X2

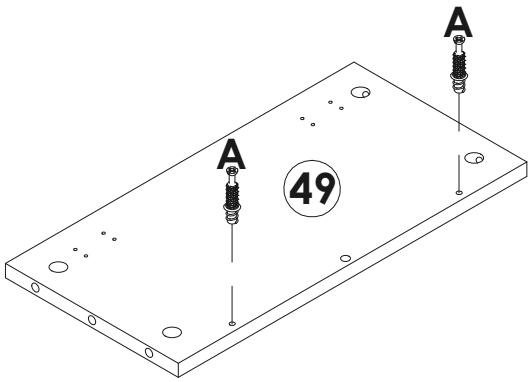

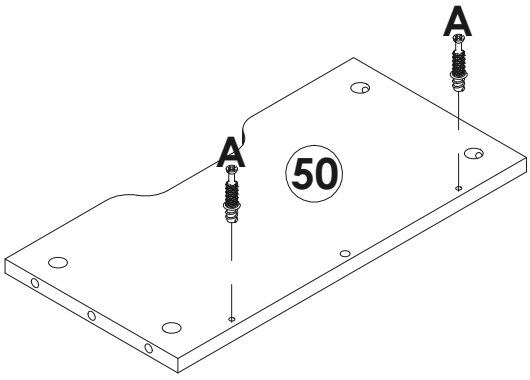

Assembly Instructions


STEP 52


B

B x 2

D

D x 1

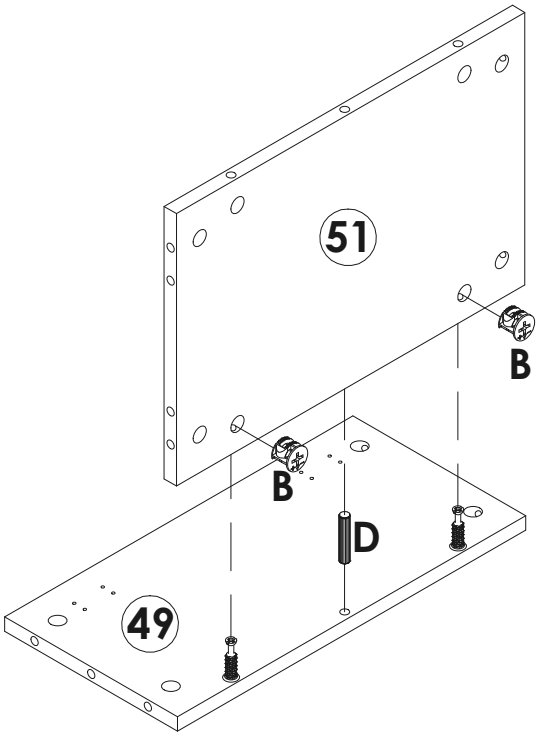

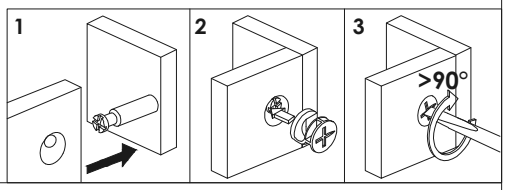


STEP 53


B

B x 2

D


D x 1

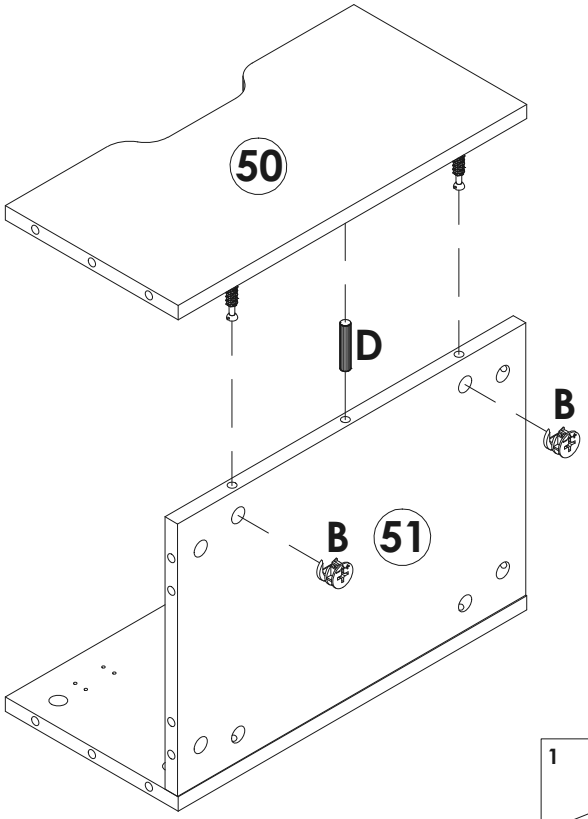


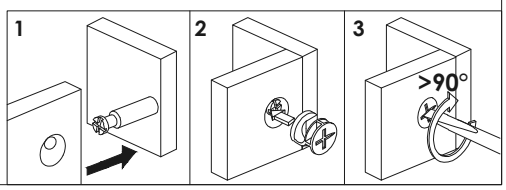

Assembly Instructions

STEP 54

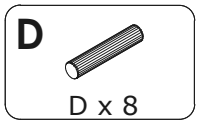

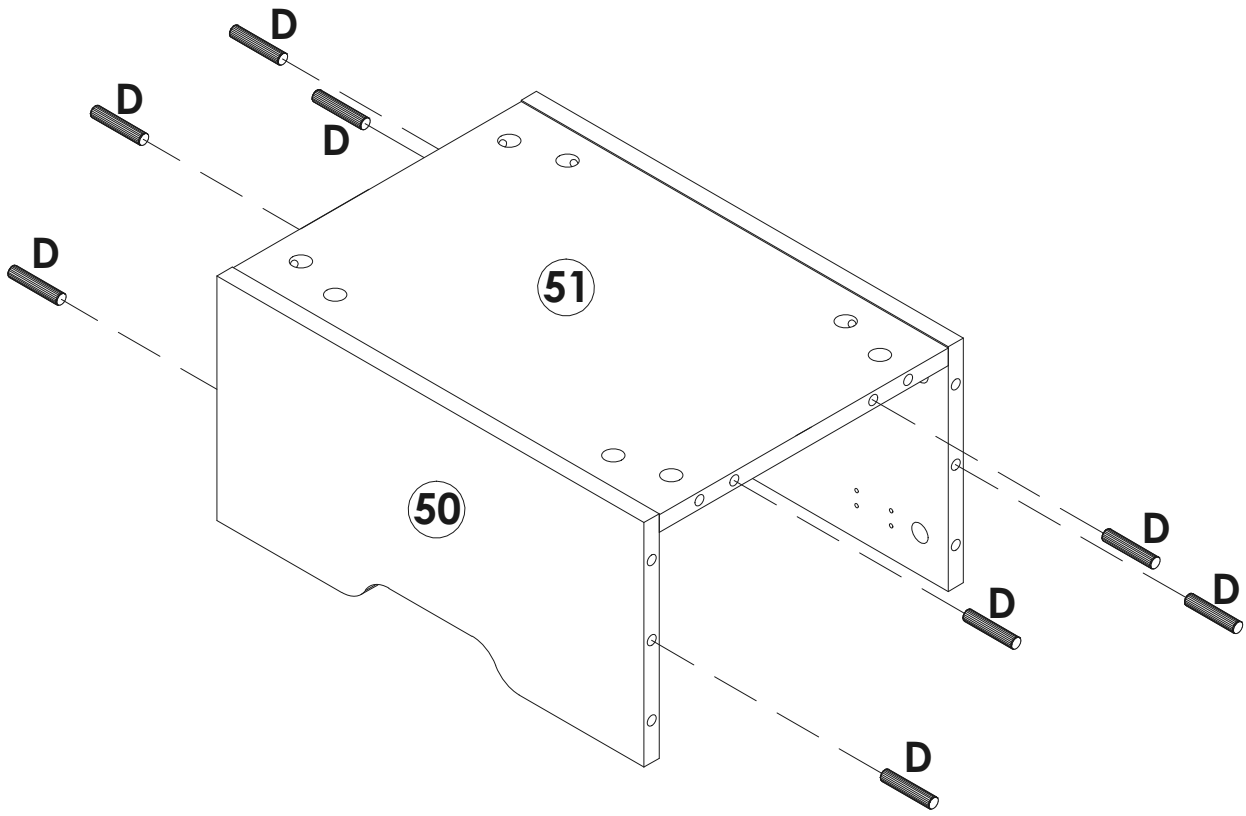



Assembly Instructions

STEP 55

B

B x 4

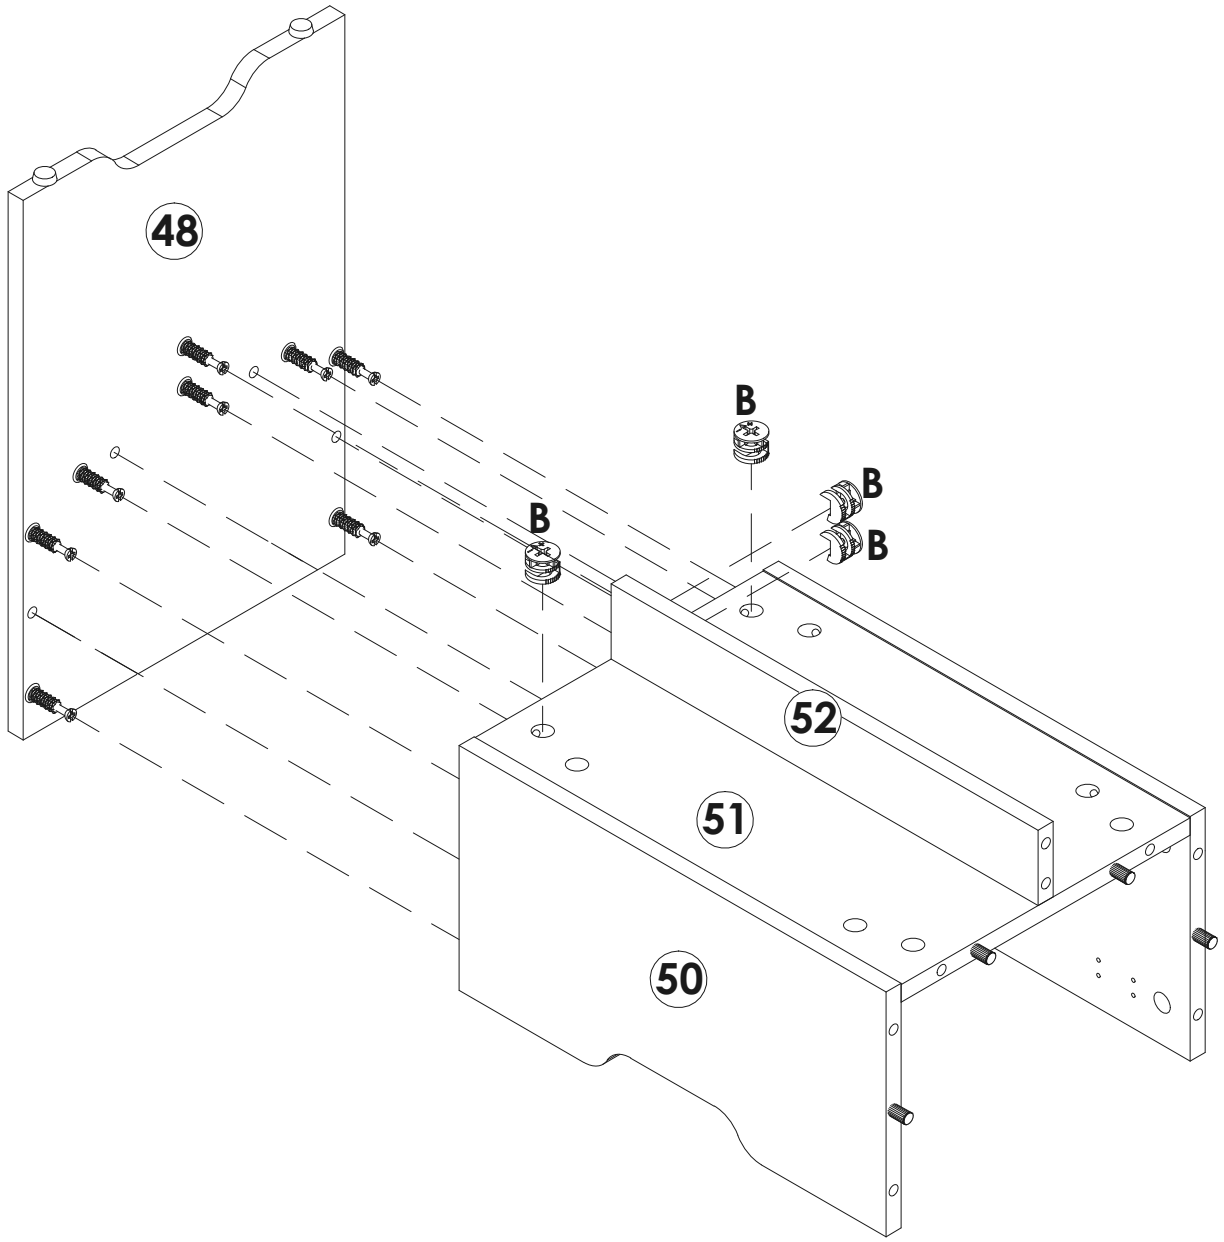

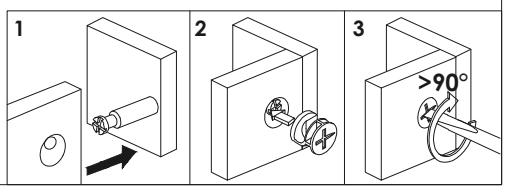


Assembly Instructions


STEP 56

B




B x 4

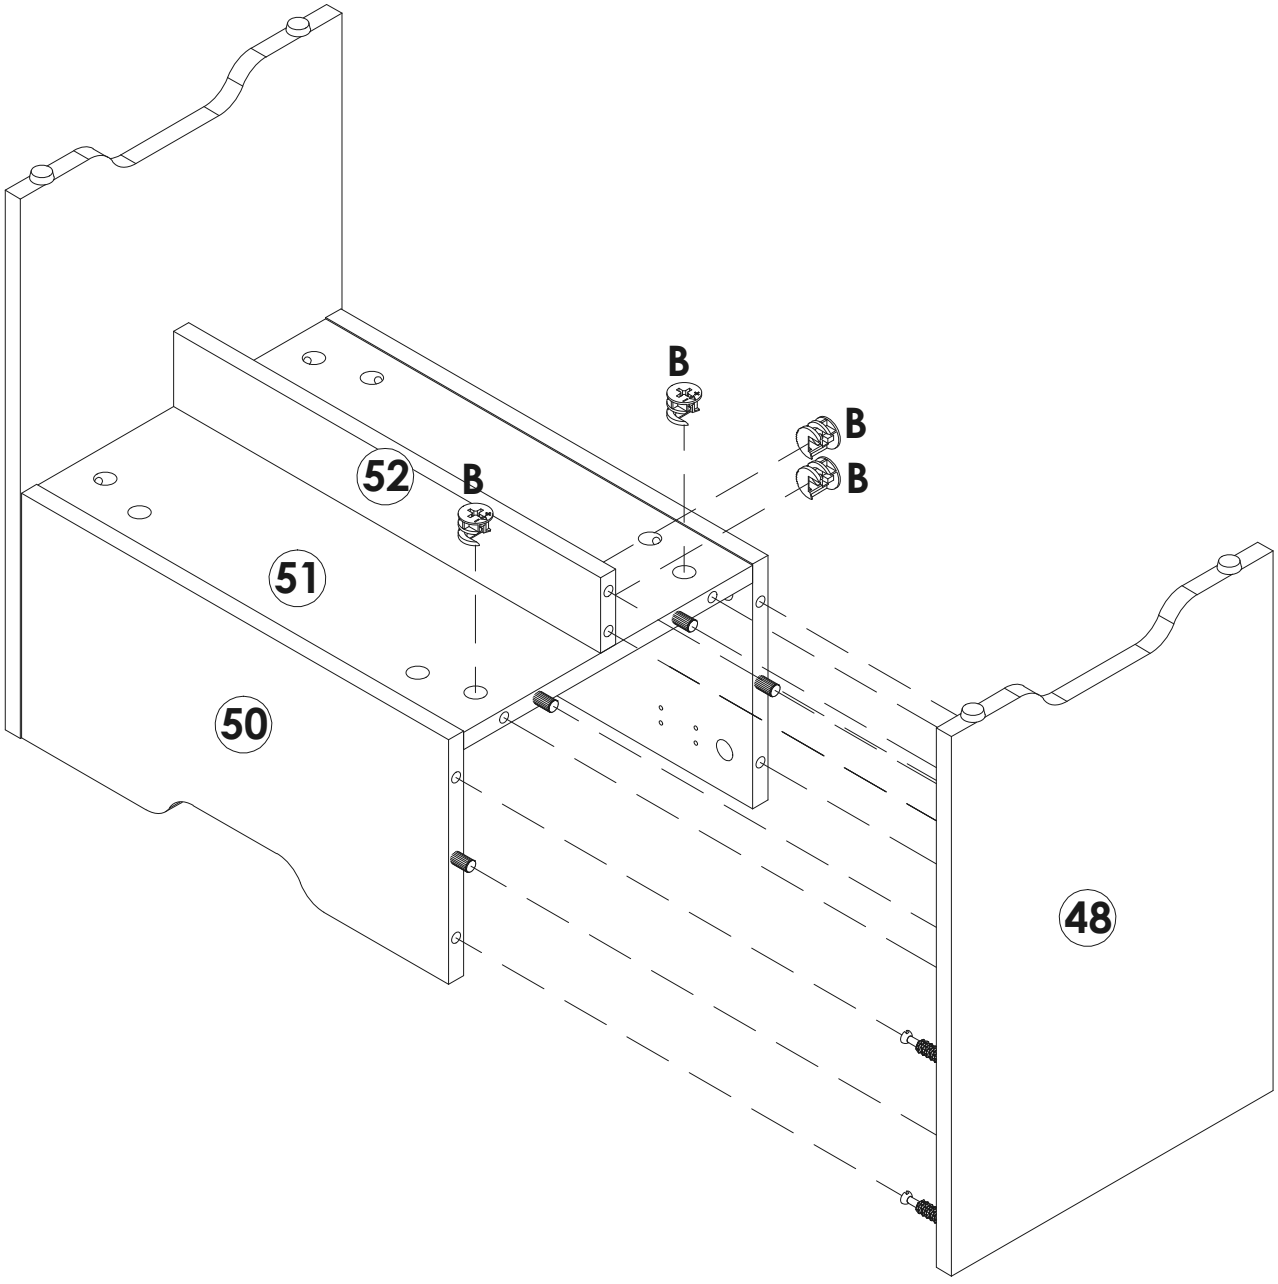

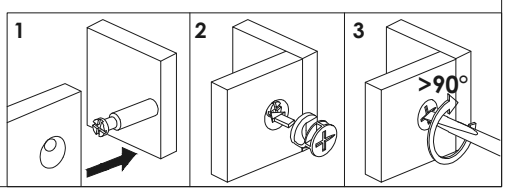

Assembly Instructions

STEP 57

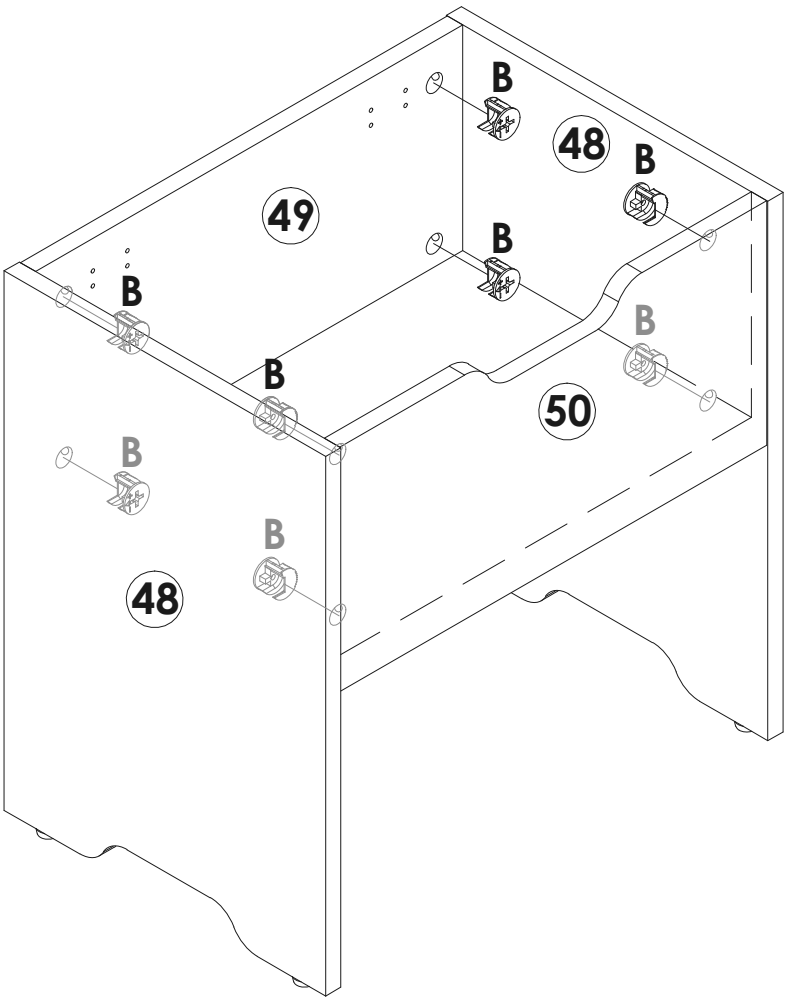


B
B x 8

180°

STEP 58


Q
Q x 2


R
R x 4

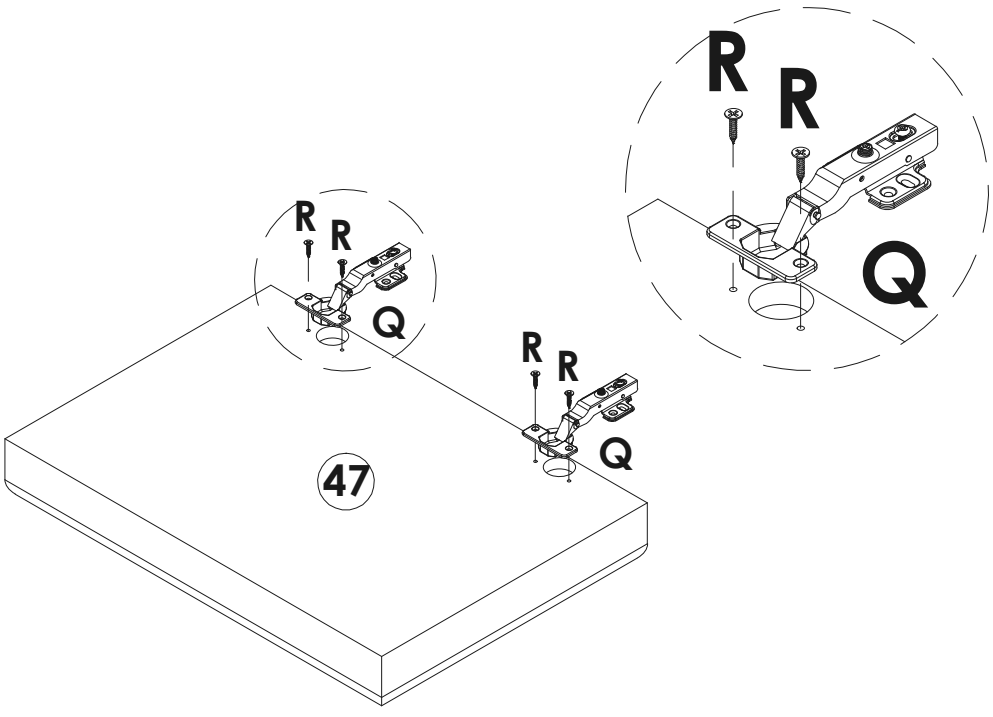


Assembly Instructions

STEP 59

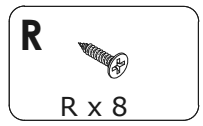

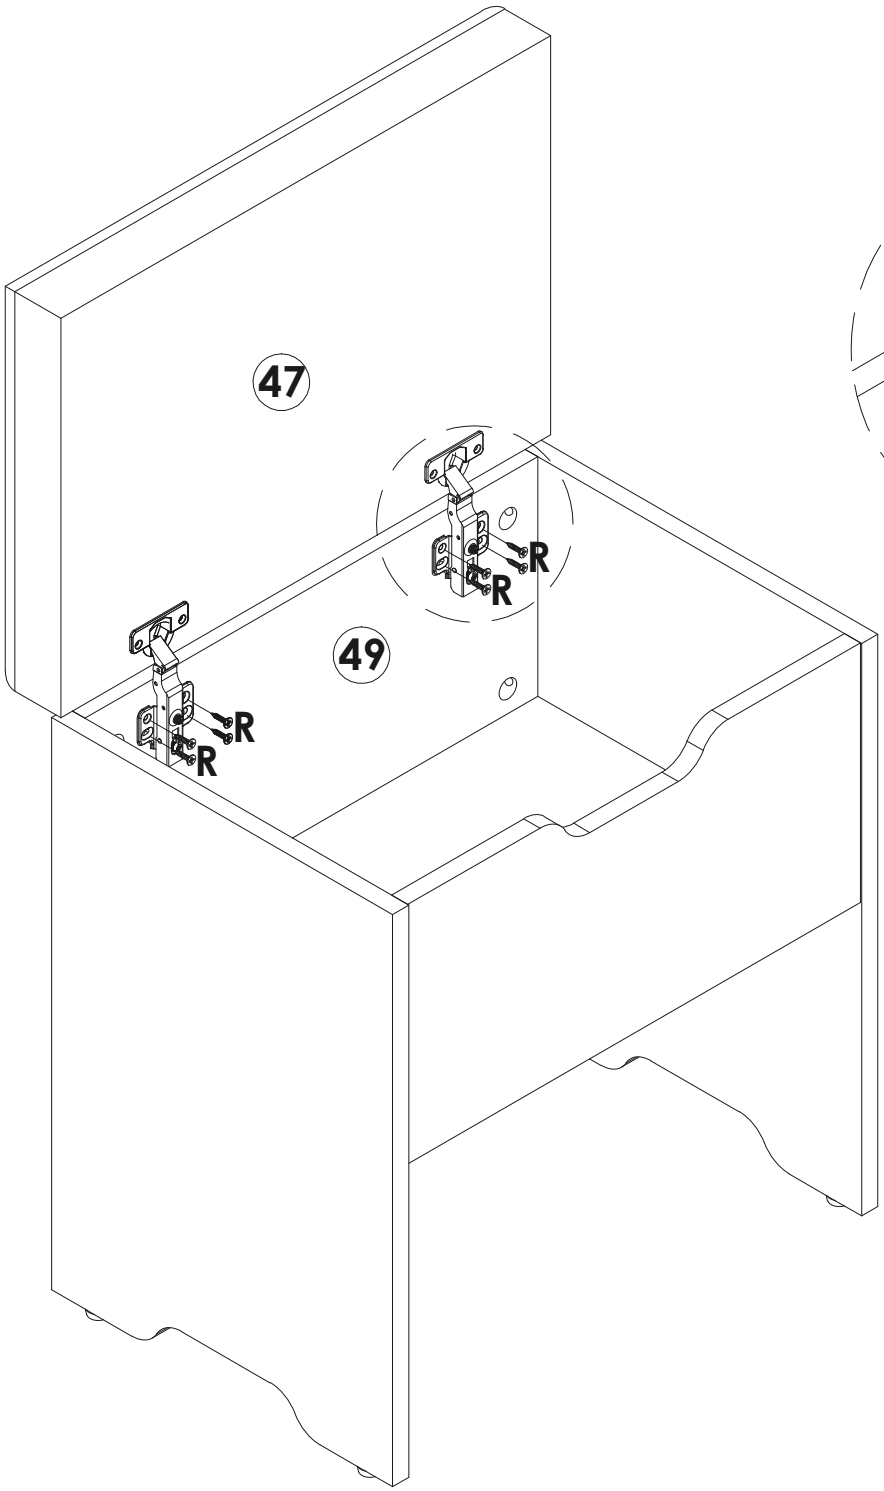

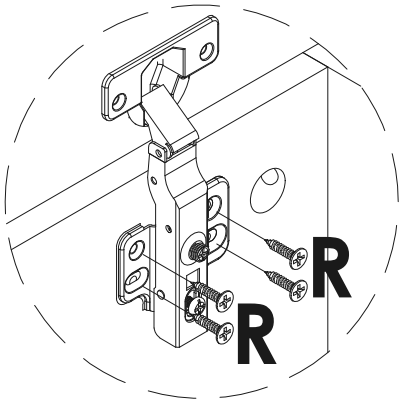

Assembly Instructions

