

ASSEMBLY INSTRUCTIONS


ITEM	PART NAME	QTY	ITEM	HARDWARE NAME	QTY
1	Back Rest & Leg 	2 PCS	A	JCBC BOLT M6 X 60mm 	4 PCS
2	Back Cushion 	1 PC	B	CSK Screw 4 X 28mm 	8 PCS
3	Seat Cushion 	1 PC	C	JCBC BOLT M6 X 40mm 	1 PC
4	Corner Block (Long) 	1 PC	D	ALLEN KEY 	1 PC
5	Corner Block (Short) 	1 PC	E	Wood Button 	4 PCS
			F	JCBC BOLT M6 X 28mm 	4 PCS
			G	SPRING WASHER 	4 PCS




1 STEP 1, ATTACH BOTH BACK REST & LEGS TOGETHER



2 STEP 2, SCREW IN PARTS #1 ON THE SEAT CUSHION

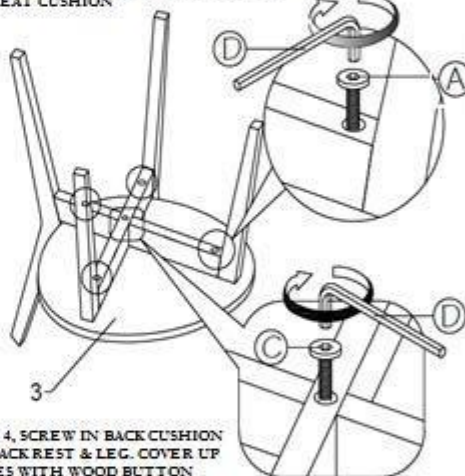

3 STEP 3, SCREW IN CORNER BLOCK (LONG) & CORNER BLOCK (SHORT) ON BACK REST & LEG

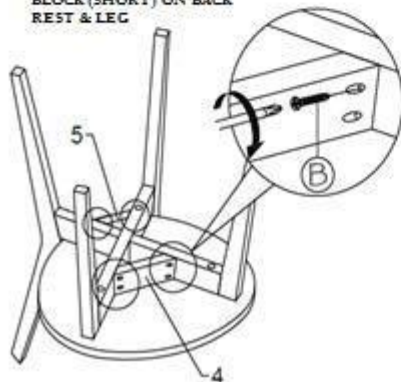

4 STEP 4, SCREW IN BACK CUSHION ON BACK REST & LEG. COVER UP HOLES WITH WOOD BUTTON

