


ASSEMBLY INSTRUCTIONS

266-030

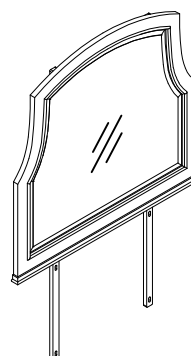

TOOLS REQUIRED:

Allen wrench (supplied, part # D)

BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

INSTRUCTIONS:

1. Attach the mirror to the Dresser back panel with Bolt (A), Lock washer (B) and Flat washer (C). Tighten all bolts with Allen Wrench (D) as shown in Figure 1.

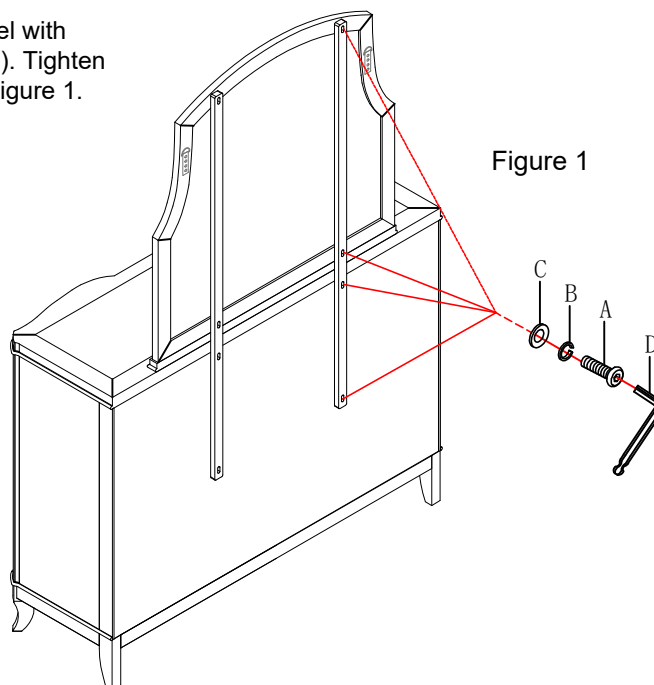


Figure 1

No.	Hardware List		Q' ty
A		Bolt (Ø1/4"x1-9/16")	8pcs
B		Lock Washer (Ø1/4")	8pcs
C		Flat Washer (Ø1/4"*19*1.5mm)	8pcs
D		Allen Wrench (110*60*4mm)	1pc

Thank you for purchasing furniture
from american drew!