


Twin Over Full Bunk Bed
 ASSEMBLY INSTRUCTIONS
 MF191290AAD - MF191291AAD


Weight Limits : 222 lbs

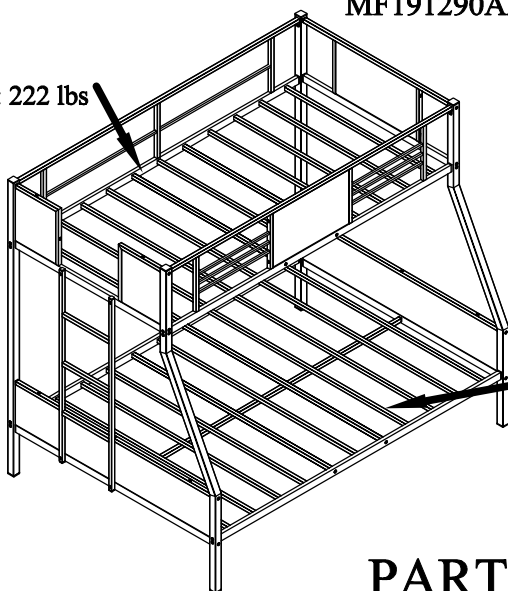

Weight Limits : 352 lbs


PART LIST

1

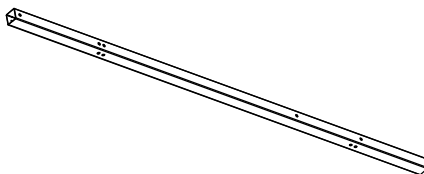


2PCS

2

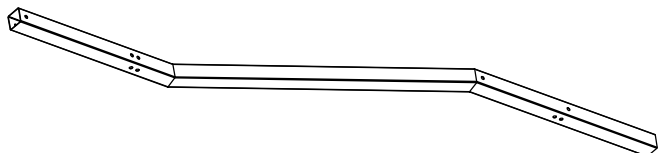


1PC

3

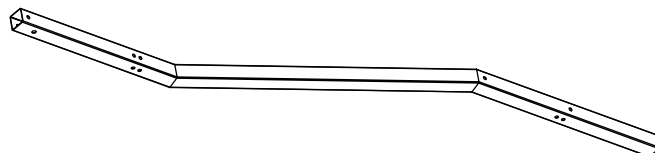

1PC

4




1PC

5




2PCS

6

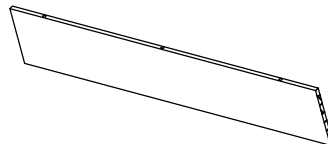


2PCS

7




1PC

8

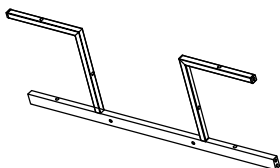


1PC

9

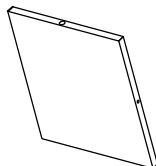


2PCS

10

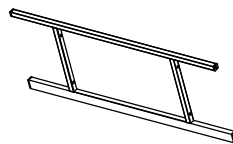


1PC

11

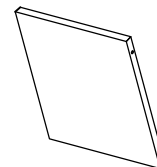




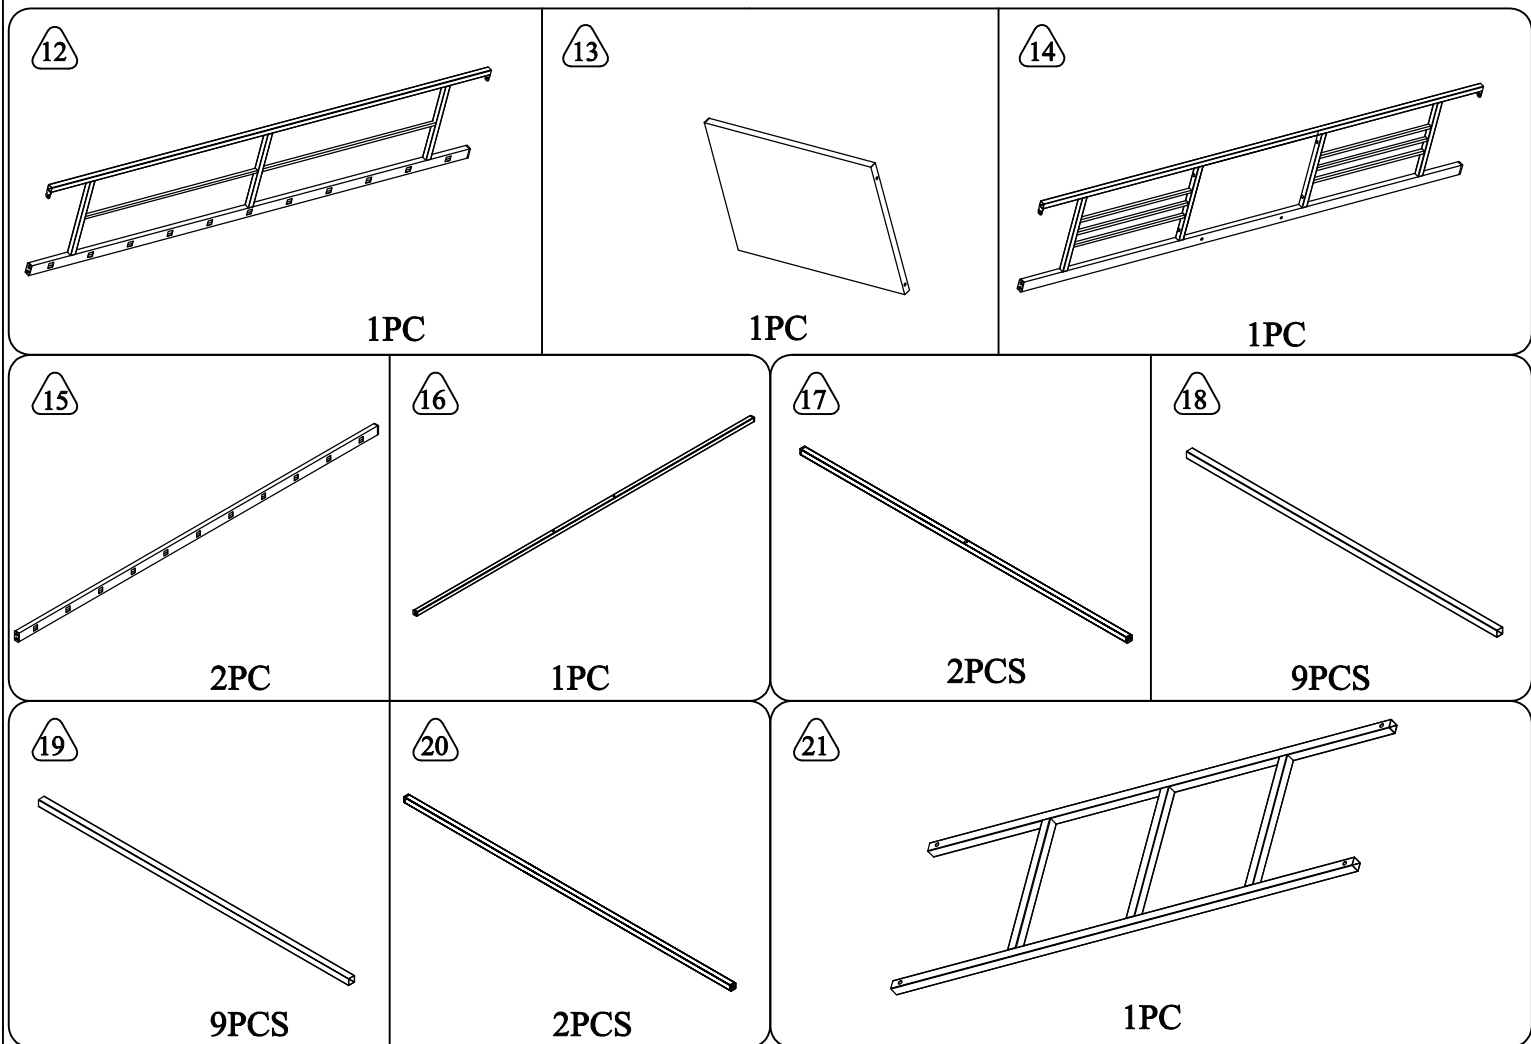





1PC

Twin Over Full Bunk Bed
ASSEMBLY INSTRUCTIONS
MF191290AAD - MF191291AAD



HARDWARE LIST


 A 1/4"*60 37PCS	 B 1/4"*40 4PCS	 C 1/4"*30 2PCS	 D 1/4"*15 12PCS	 E 20x20x10 4PCS	 F 40x40x10 8PCS	 H 4x60 2PCS	 J 1/4"*50 6PCS	 K 1/4"*30 18PCS
--	--	--	---	---	--	---	--	---



IMPORTANT SAFETY NOTICE: READ CAREFULLY BEFORE BEGINNING ASSEMBLY!

- ⚠ Hardware packs and small components should be away from the children, avoid eating and being injured
- ⚠ Please, follow with the assembly steps in order
- ⚠ Please, do not tighten any screw before each assembling unit is well placed in appropriate position
- ⚠ Please, make sure all components are fixed firmly locked without any potential safety hazard
After assembly and before using
- ⚠ Please, use this product correctly, according to its purpose to avoid danger happened
- ⚠ Please, do not stand on any component of this product, except the ladder of this product after fixing locked safely
- ⚠ Such as the wall fastening devices are essential parts of this product. Please fix firmly locked without any potential safety hazard before using
- ⚠ Please check all contents of this product inside of carton (s) carefully, small parts may have been lost during shipment, if any! contact further with the retailer from which you purchased this product to obtain, do not use any substitute part
- ⚠ This assembly instructions booklet contains important safety information, please read and keep for further reference
- ⚠ The Steel and wood combination furnishings, As for the portion of non-loading wood products (such as headboard, tailboard, bed side guard board ---etc.), in case of screwing loose, do not strongly lock, please just slight pressure on it appropriately, Avoid to be nuts loose

Twin Over Full Bunk Bed
ASSEMBLY INSTRUCTIONS
MF191290AAD - MF191291AAD

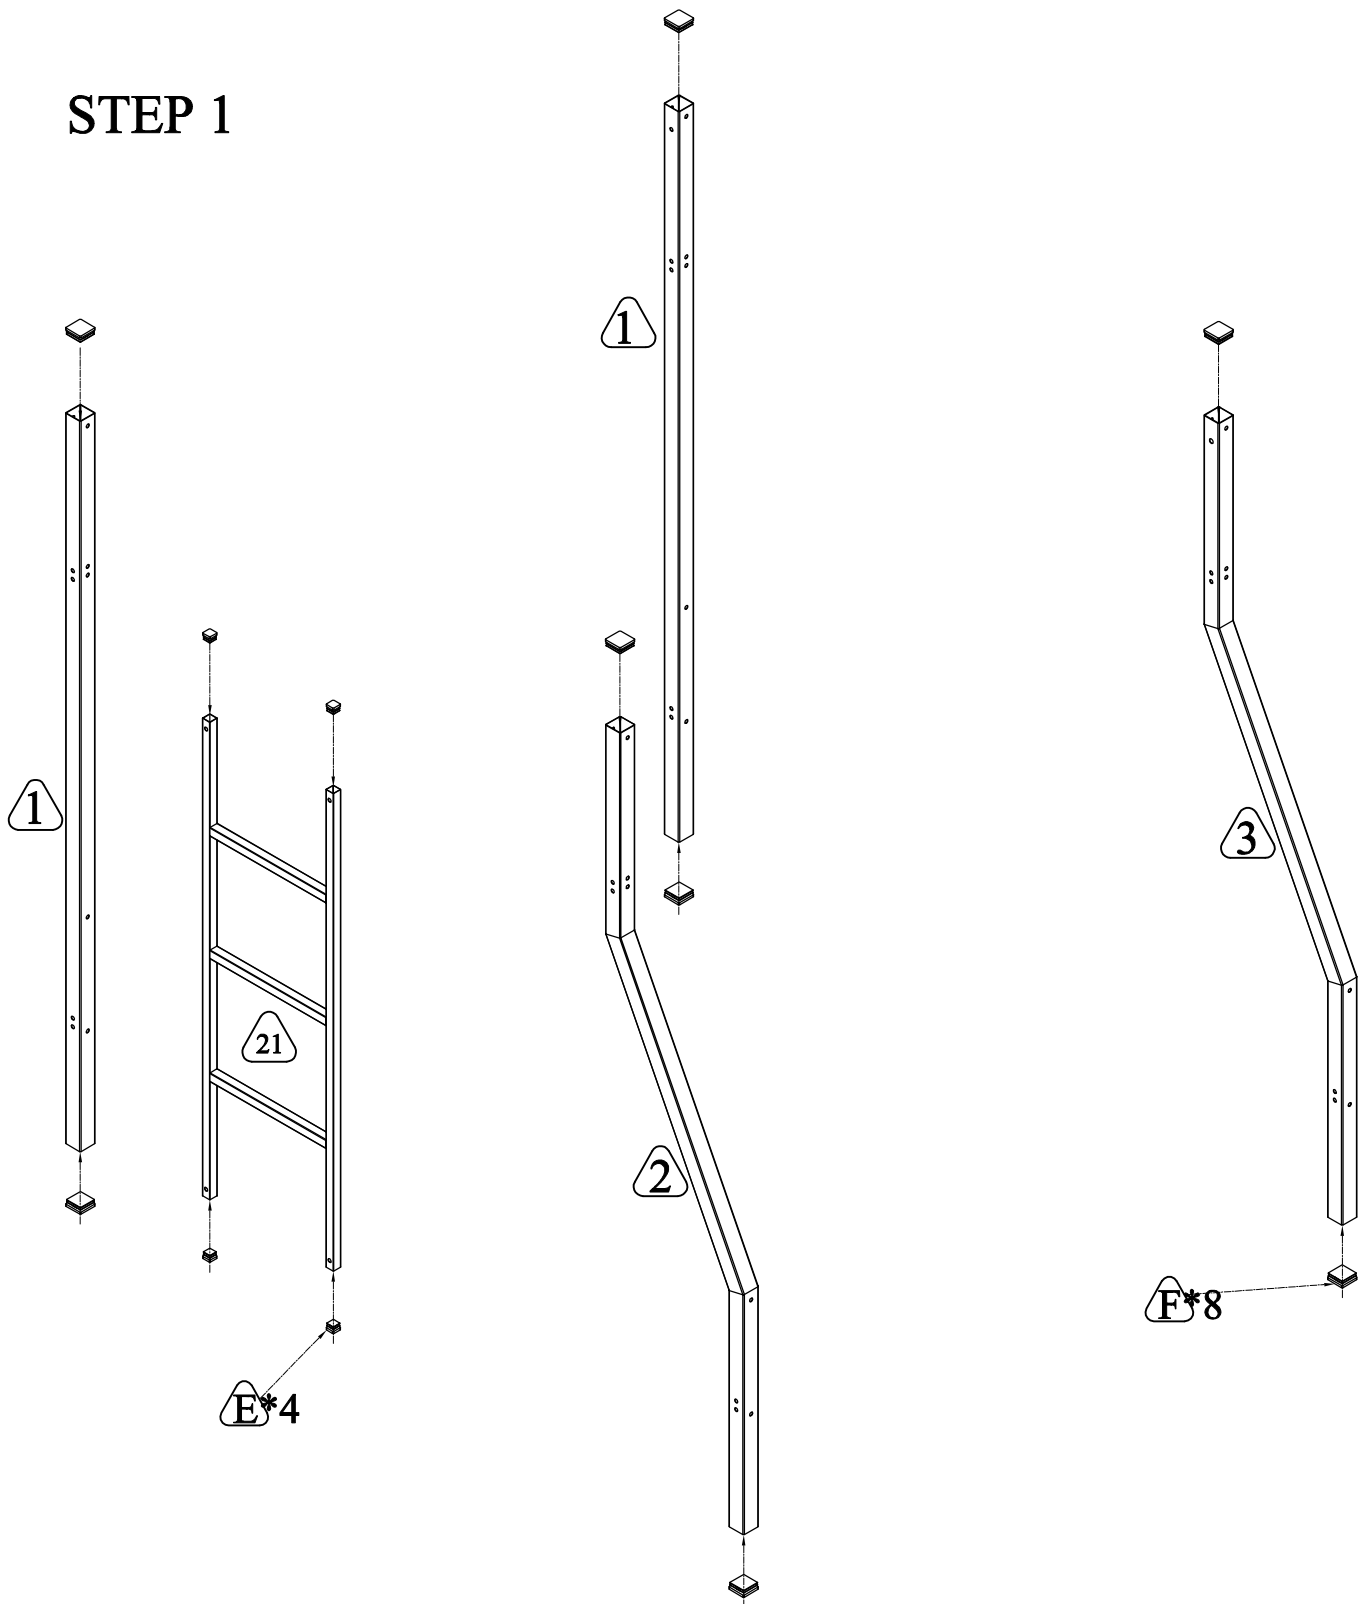
STEP 1







 20x20x10 4PCS	 40x40x10 8PCS
--	---

Twin Over Full Bunk Bed
 ASSEMBLY INSTRUCTIONS
 MF191290AAD - MF191291AAD


STEP 2

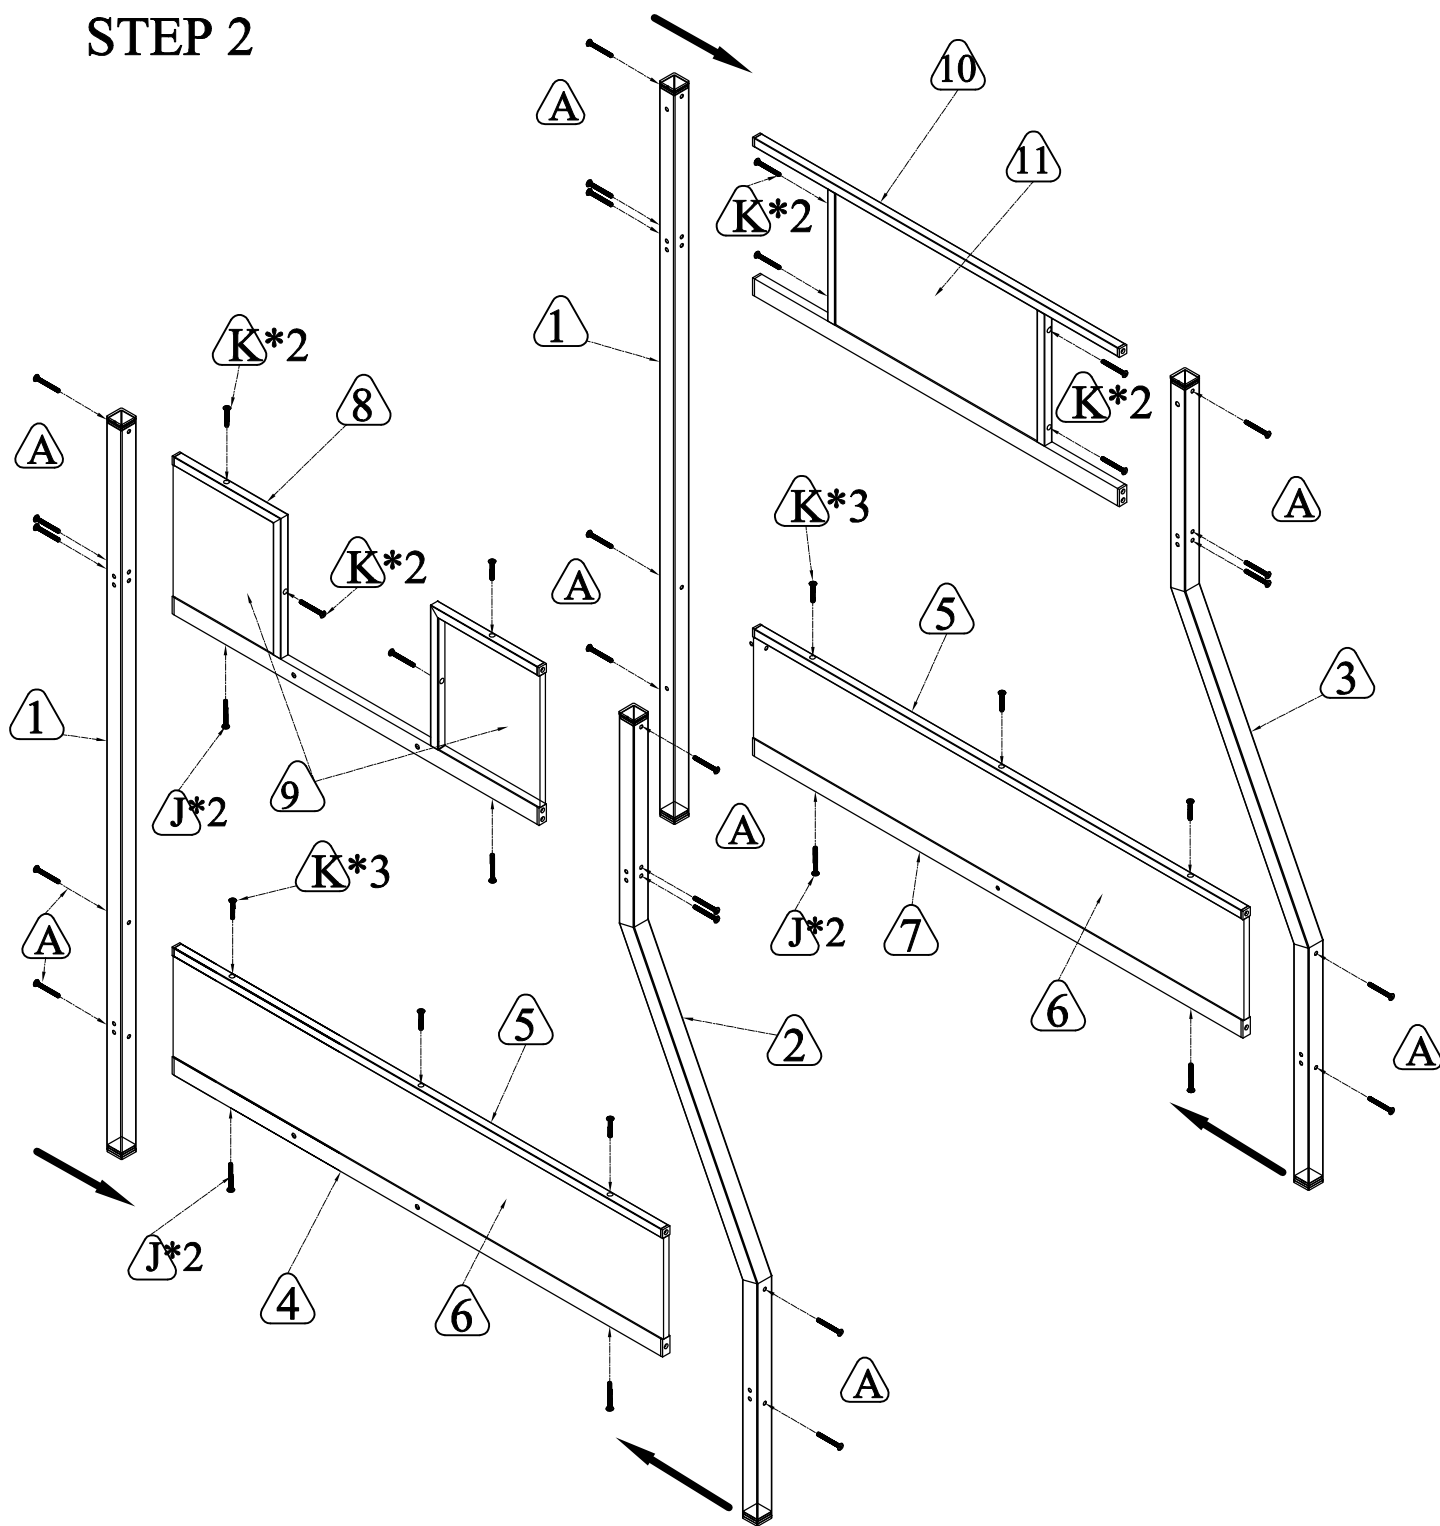





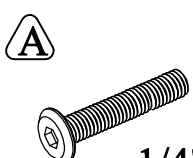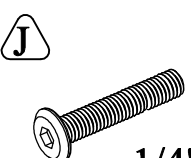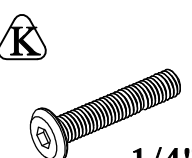
 A 1/4"*60 20 PCS	 J 1/4"*50 6 PCS	 K 1/4"*30 14 PCS	 H 4x60 2PCS
--	---	--	---

Twin Over Full Bunk Bed
ASSEMBLY INSTRUCTIONS
MF191290AAD - MF191291AAD


STEP 3

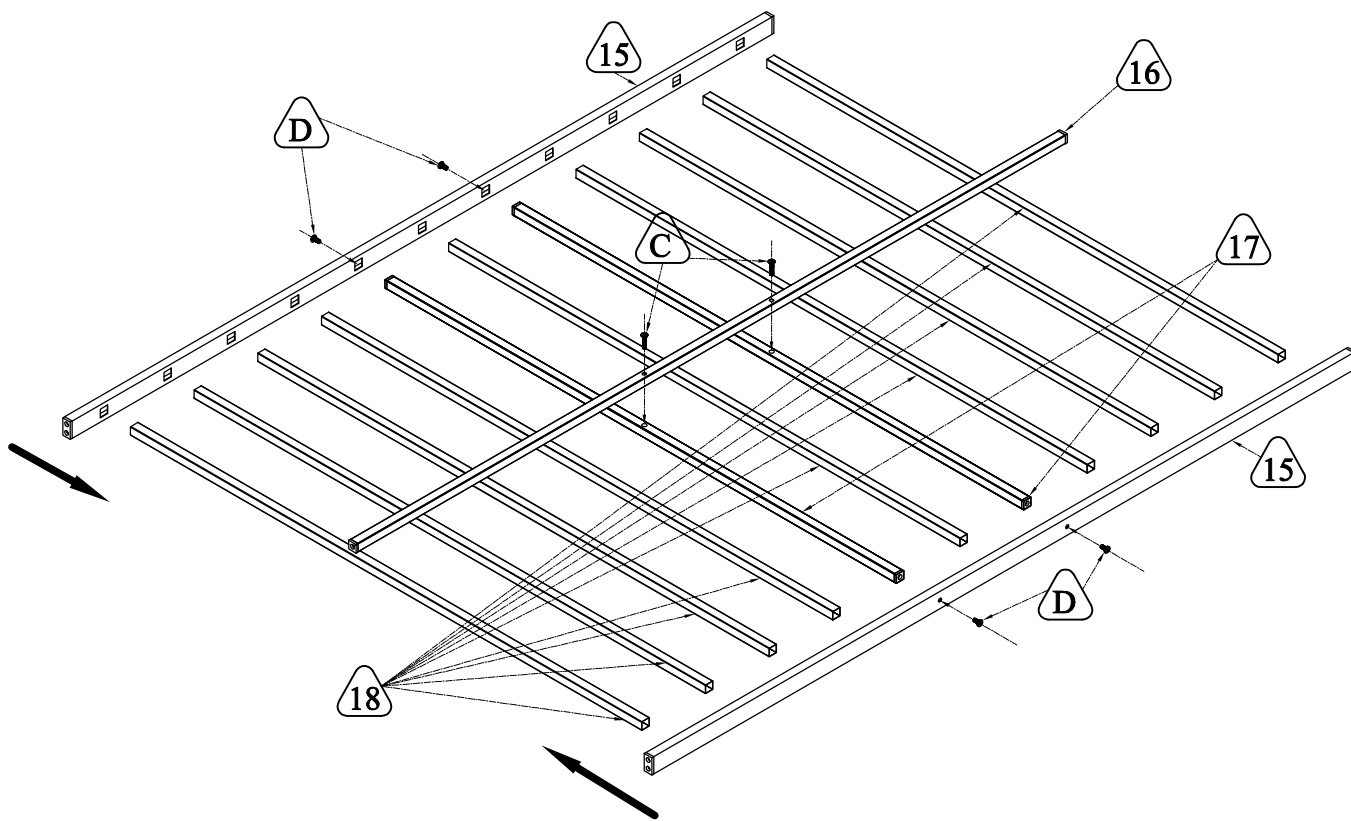







  1/4"*30 2PCS	  1/4"*15 4 PCS	 4x60 2PCS
---	---	---

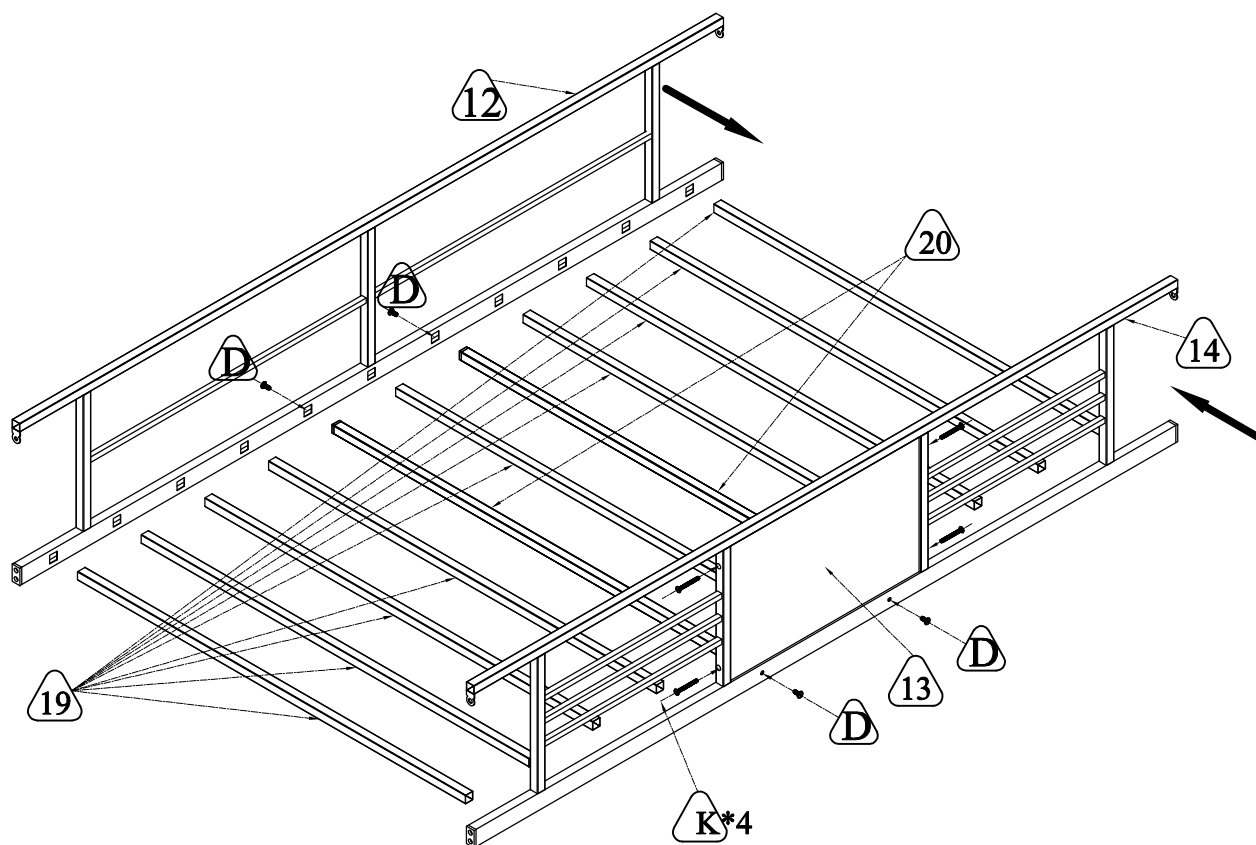Twin Over Full Bunk Bed
ASSEMBLY INSTRUCTIONS
MF191290AAD - MF191291AAD






STEP 4



  1/4"*15 4 PCS	  1/4"*30 4 PCS	  4x60 2PCS
--	---	--


Twin Over Full Bunk Bed
ASSEMBLY INSTRUCTIONS
MF191290AAD - MF191291AAD

STEP 5= (STEP 2+STEP 3+STEP 4)

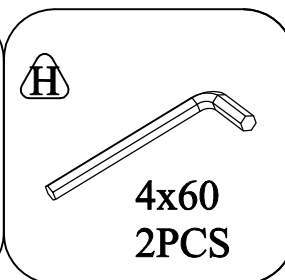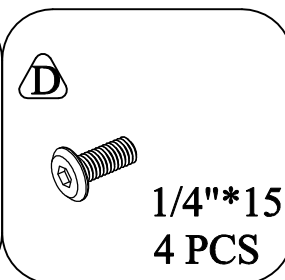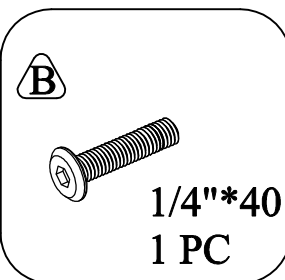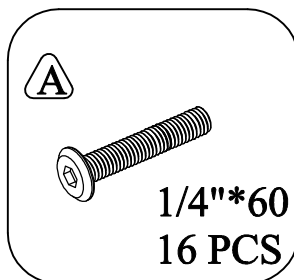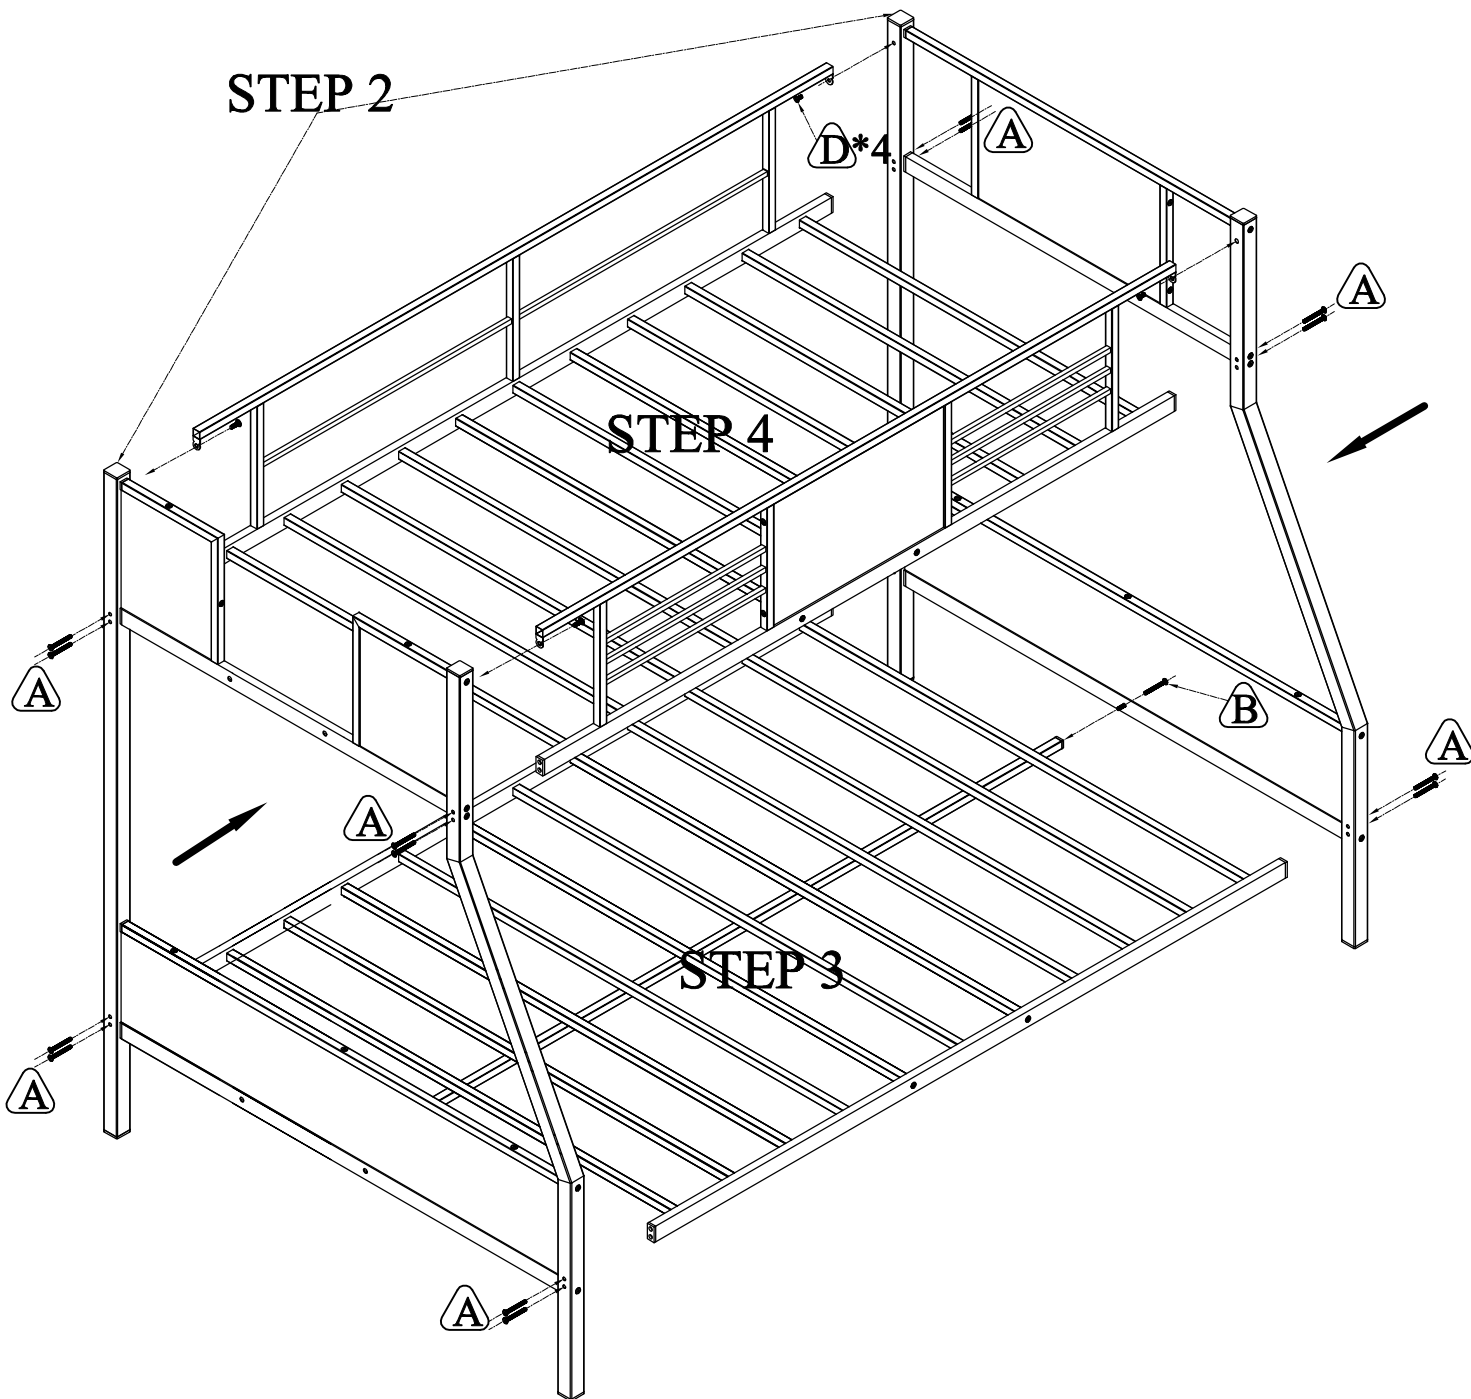


Twin Over Full Bunk Bed
ASSEMBLY INSTRUCTIONS
MF191290AAD - MF191291AAD

STEP 6

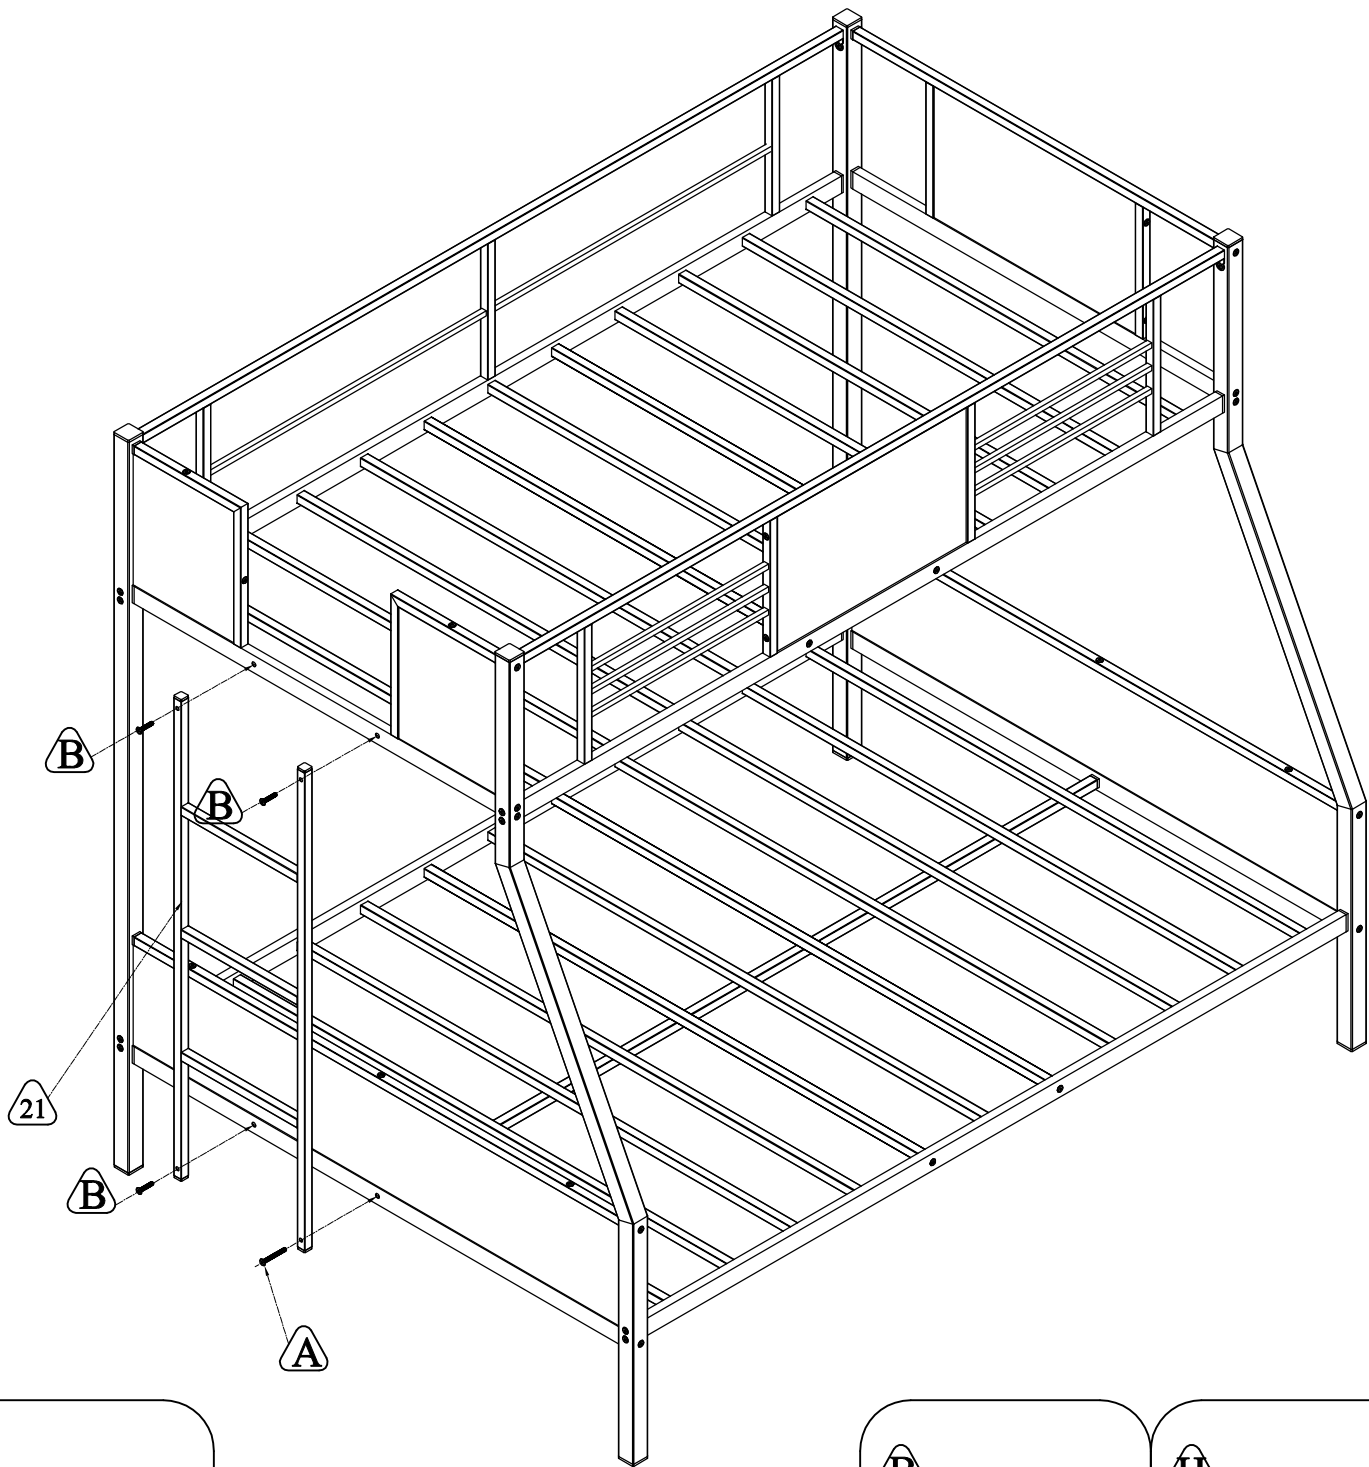


A




1/4"*60
1 PC

B



1/4"*40
3 PCS

H



4x60
2PCS