

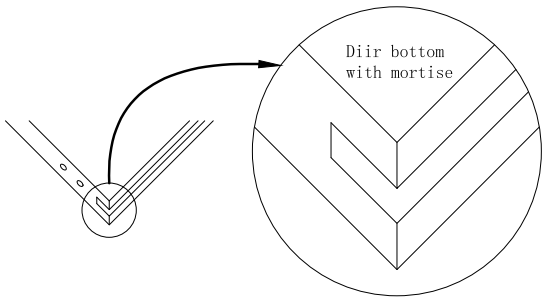



Assembly Instructions

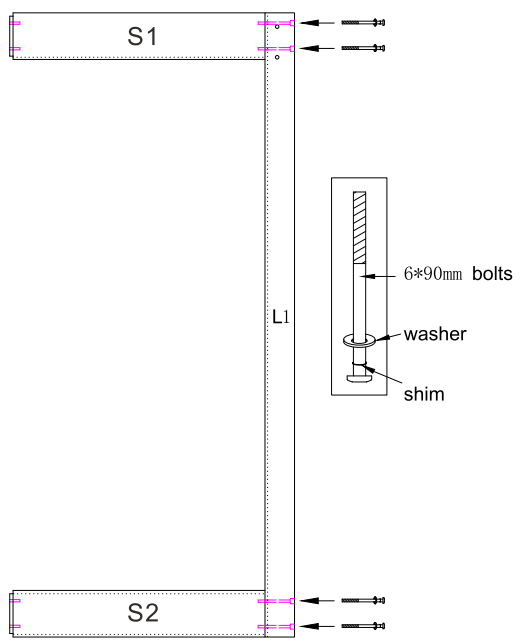

Attention: please make sure the groove is facing to floor when you install the the guide

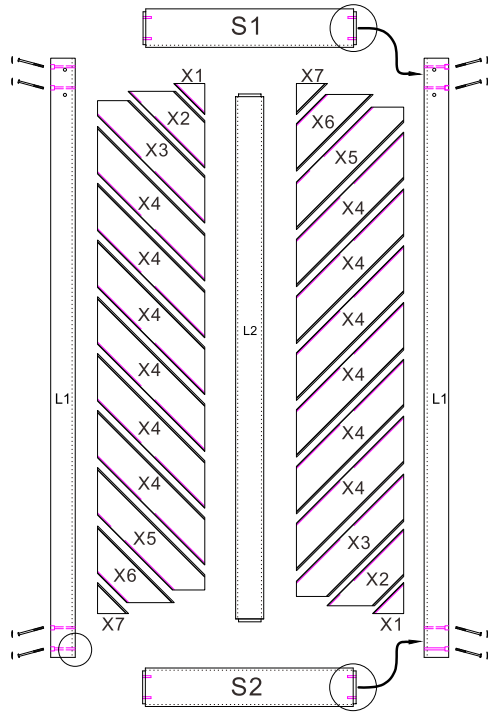


1. Attach S1 (top slat) and S2 (lower slat) to L1 by inserting the tongues into the groove of L1, aligning the holes and fastening with four carriage bolts. Then cover the bolt holes with stickers

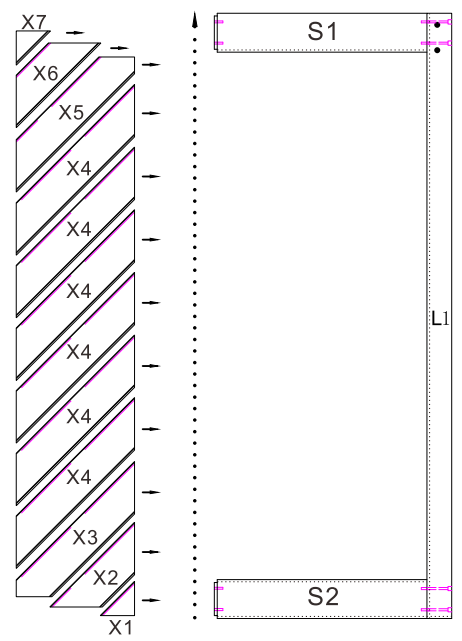


2. Gently slide all slats X1-X7 into place as shown in the drawing below and make sure following the direction in picture.

Assembly Instructions

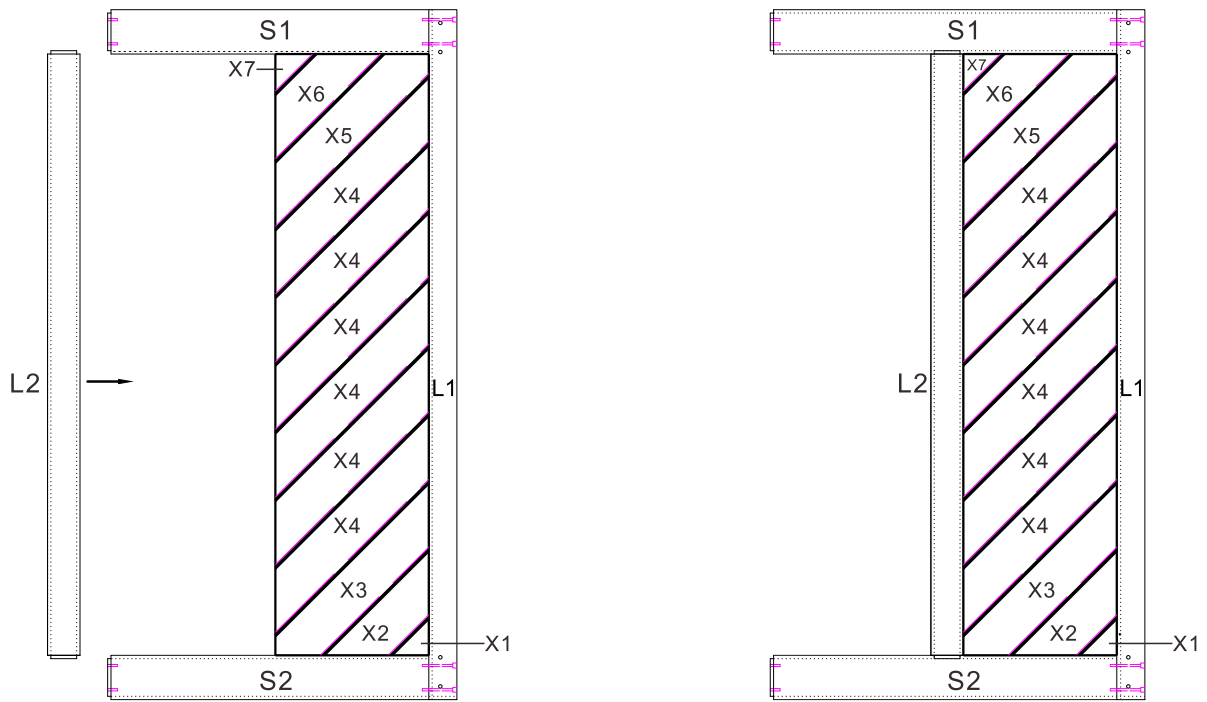

3. Insert middle stile (L2) into frames in the direction of instruction. Make sure every slat is in right position.

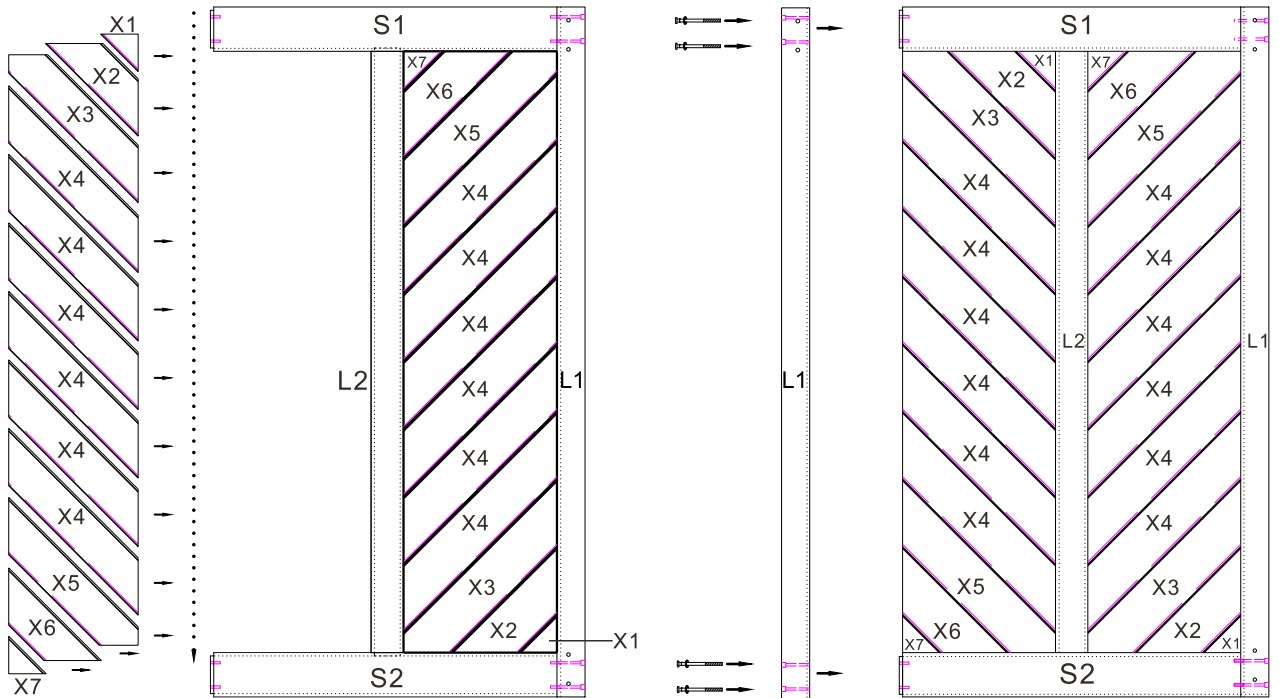

4. Gently slide all slats X1-X7 into place as shown in the drawing below and make sure following the direction in picture.

5. Align stile L1's groove with tongue of X1 to X7, and fasten L1 with S1 and S2 with bolts. Then cover the bolt holes with stickers.