


INSTALLATION INSTRUCTIONS

Model#BD01

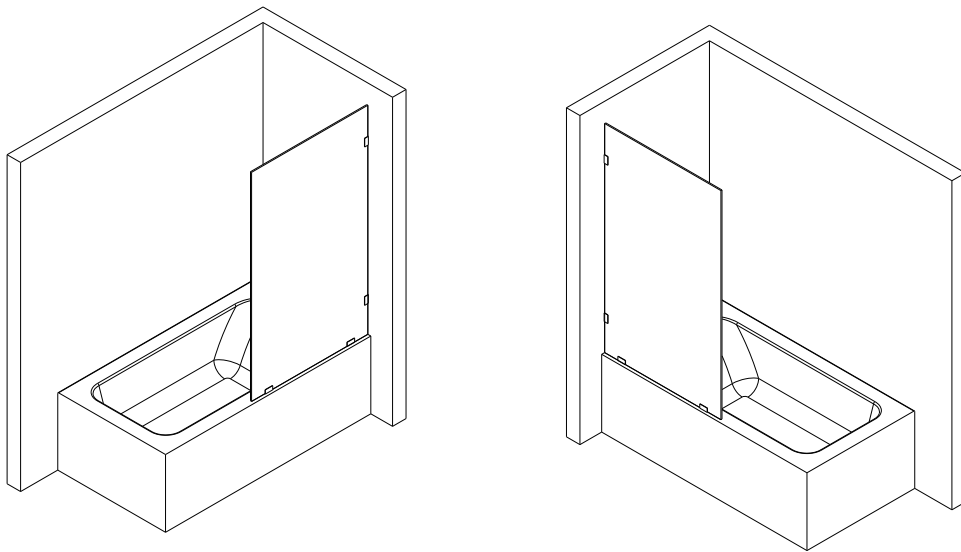

**THANK YOU FOR PURCHASING OUR PRODUCTS.
FOR IMMEDIATE HELP WITH ASSEMBLY OR
PRODUCT INFORMATION EMAIL US:**



SUPPORT@CUSTOMERSERVICEYIBAI.COM

Please offer your order ID and the product model number

Our staff is ready to provide assistance M-F 8:00 AM to 5:00 PM PST

▲ Important Notice Before Installation:

Please prepare Silicone Sealant in advance (not included). It is crucial to use the Silicone Sealant in the final step to prevent the risk of water leakage. Refer to Page 6 for its application location.

◆ General Information

Inspect the product immediately upon receipt for transit damage, missing packs/parts or manufacturing fault. Damage reported later will not be accepted. Handle the product with care avoiding knocks and shock loading to all sides and edges of the glass.

◆ Notes: Safety glass can not be re-worked

Read these instructions carefully before start of installation.

Special care should be taken when drilling walls to avoid hidden pipes or electrical cables.


Note: This product is heavy and may require two people to install.

◆ Aftercare instructions


After use, your shower should be cleaned with soap and water. This is particularly important in hard water districts where insoluble lime salts maybe deposited and allowed to build up. Cleaners of a gritty or abrasive nature should not be used. Care should be taken to avoid contact with strong chemicals, they can be used but with caution, if in doubt contact the manufacturer of the cleaner in question.

Keep these instructions for aftercare and customer service details.


Tools Required

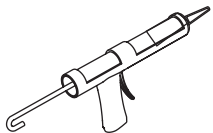


Silicone Sealant

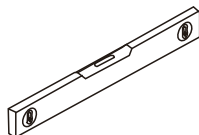


Level

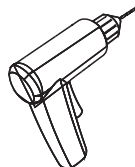


Drill



**Ø 1/4"
Drill Bit**




**Screwdriver
(Phillips)**




Hammer



Pencil

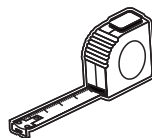

Tape Measurer




**Sealant
Finishing Tool**



**Painters
Tape**



Safety Glasses




Knife





Work Gloves

PARTS LIST

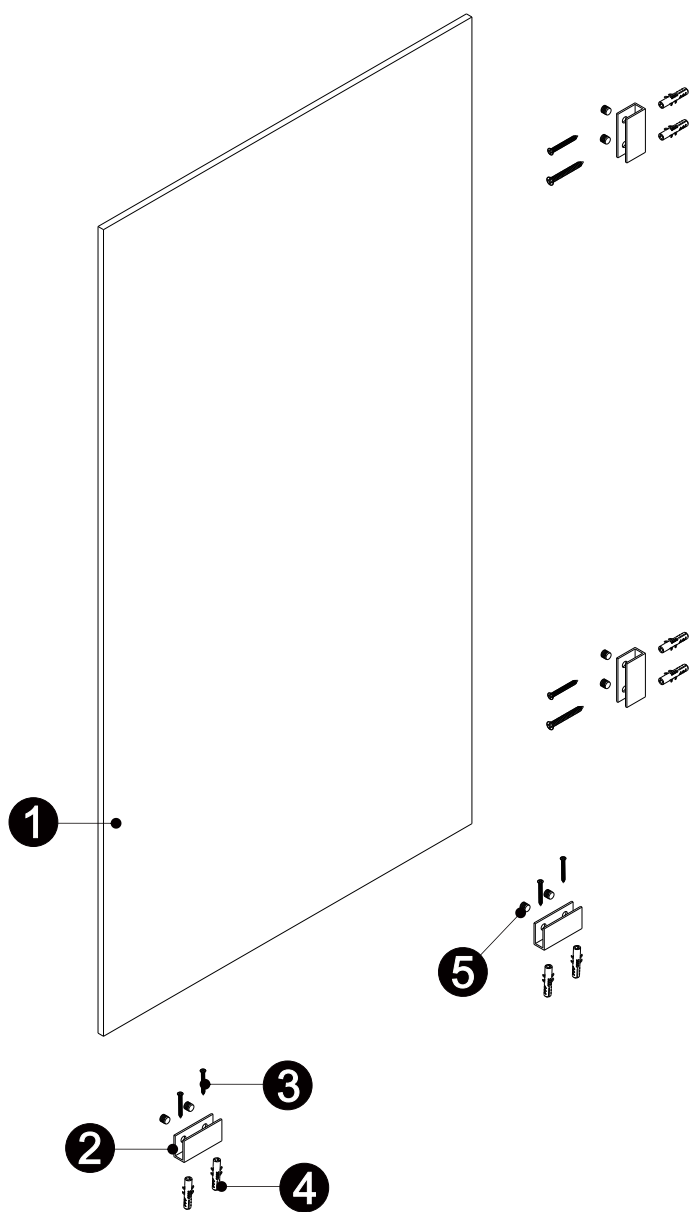

 keep small parts away from children

PACKING LIST




Glass Door	Glass Fixing Component	ST4x30 Self-Tapping	Drywall Anchor	Set Screw
				
1 1 PC	2 4 PCS	3 10 PCS	4 10 PCS	5 8 PCS

INSTALLATION STEPS

STEP 1-Glass Fixing Component Installation

Parts Required:

Part No.	Description	Qty
1	Glass Door	1
2	Glass Fixing Component	4
5	Set Screw	8

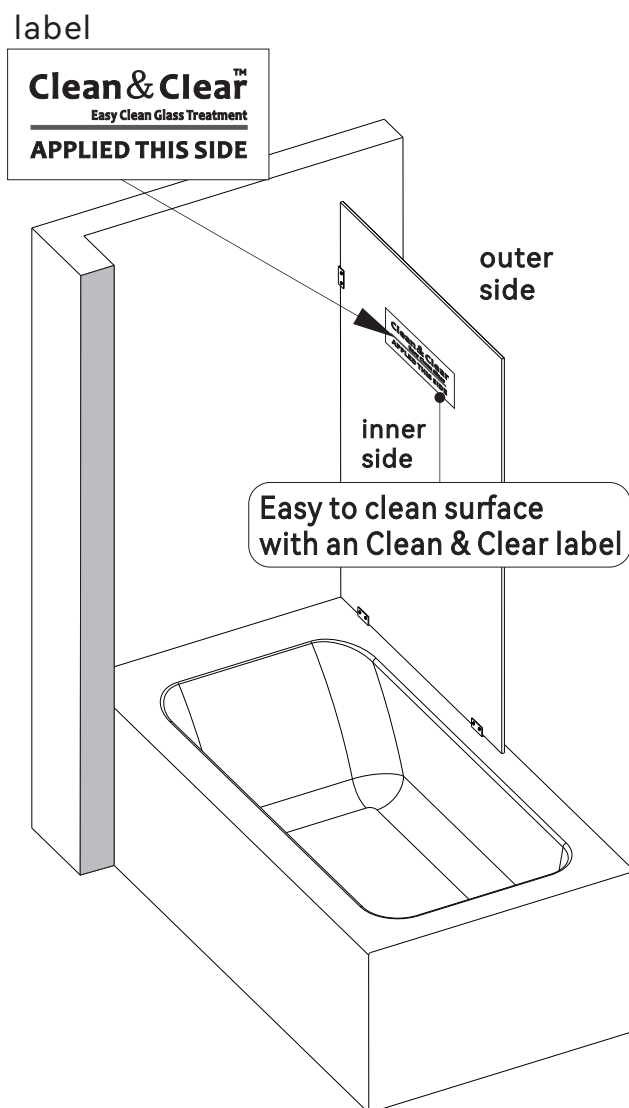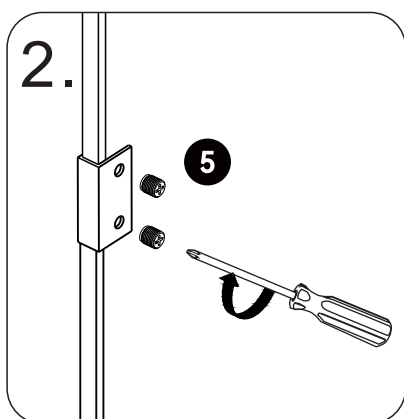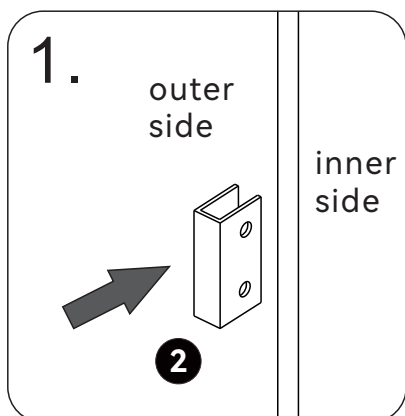





1. Clip the glass fixing component (#2) onto the edge of the glass door (#1).
2. Thread the set screw (#5) through the glass fixing component (#2) and tighten it against the glass.

INSTALLATION STEPS

STEP 1-STEP 1-Mark Positioning Lines on the Wall

Parts Required:

Part No.	Description	Qty
1	Glass Door	1
2	Glass Fixing Component	4
5	Set Screw	8

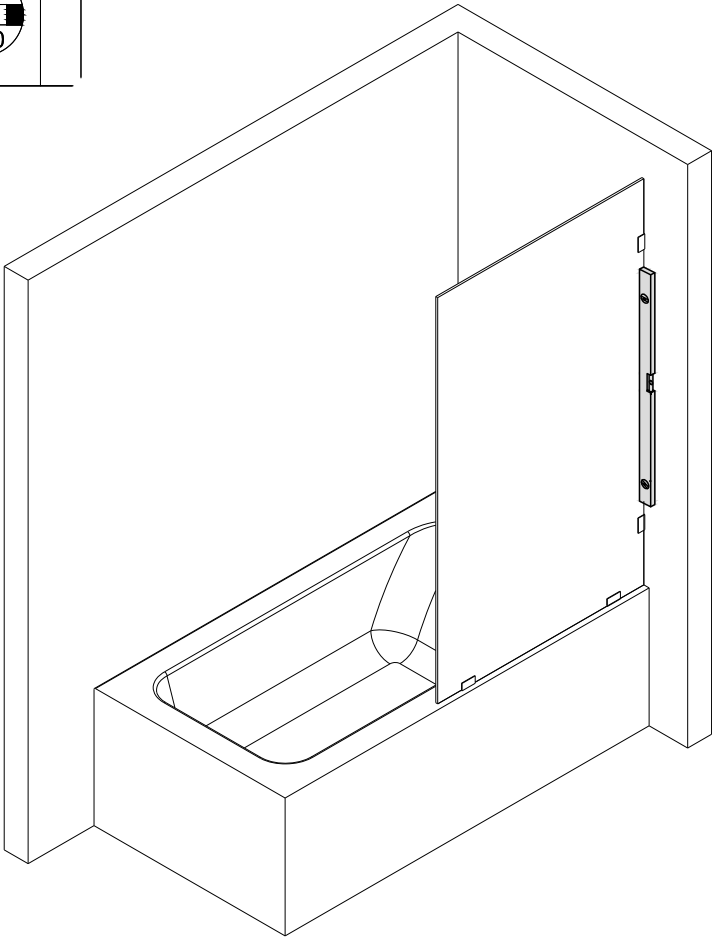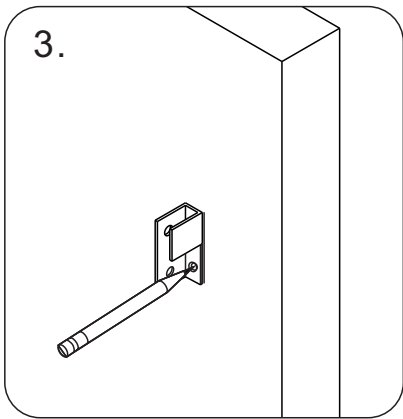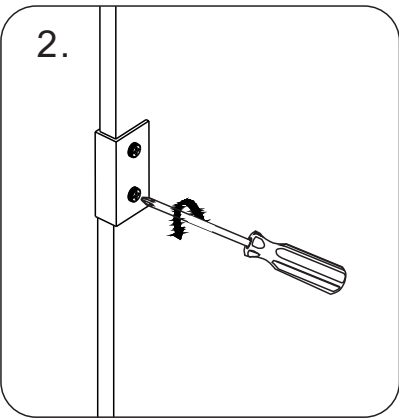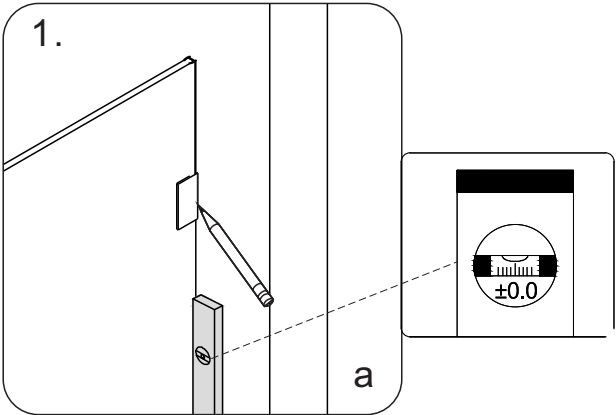






1. Place the glass door against the wall; use a level to check vertical alignment, then mark the outer edge of the glass fixing component (#2) with a pencil.
2. Remove the glass fixing component(#2).
3. Align the glass fixing component (#2)with the previously marked lines, then mark reference points on it with a pencil.

INSTALLATION STEPS

STEP 3 - Secure the Glass Shower Door

Parts Required:

Part No.	Description	Qty
4	Drywall Anchor	8
2	Glass Fixing Component	4
3	ST4x30 Self-Tapping	8
5	Set Screw	8

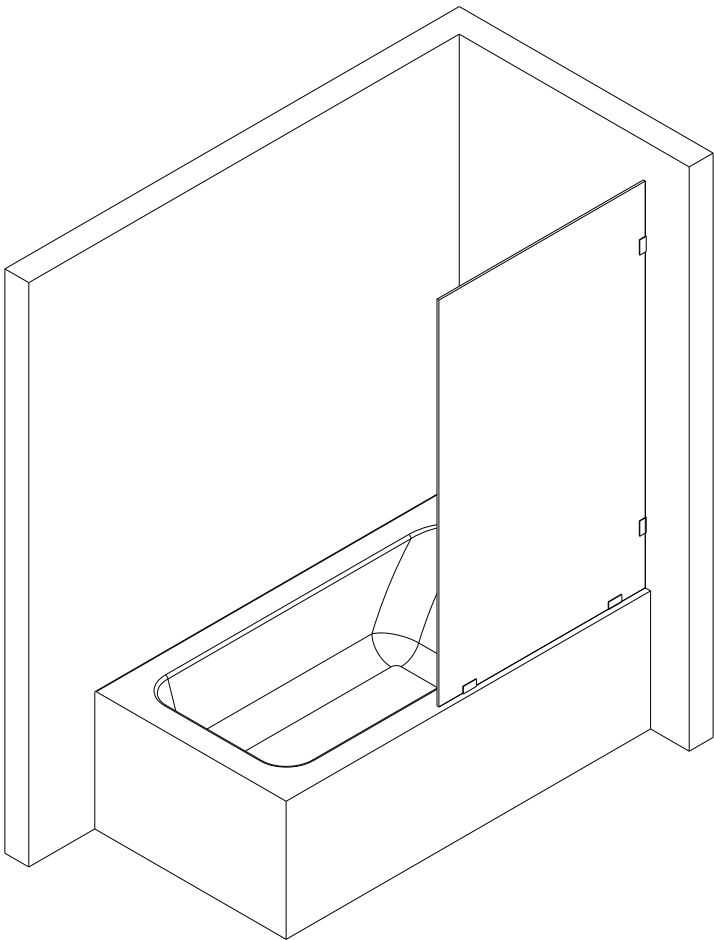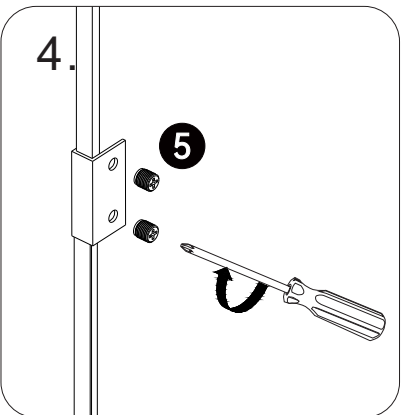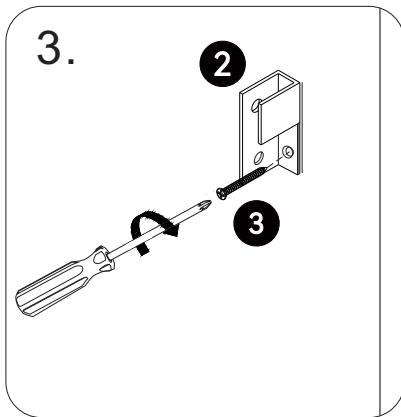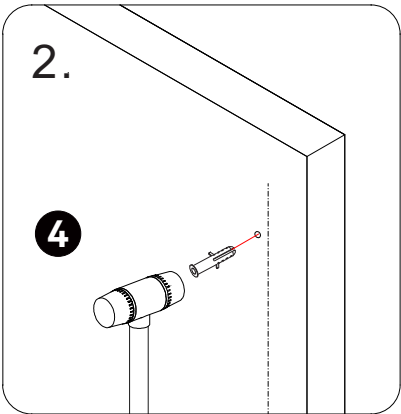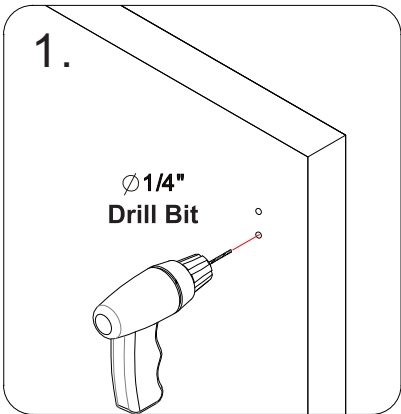

1. Drill holes at the marked points using an electric drill with a 1/4-inch drill bit.
2. Gently tap the wall anchors (#4) into the holes with a hammer.
3. Attach the glass fixing component (#2) to the wall by securing it with ST4 x 30 self-tapping screws (#3) using a Phillips screwdriver.
4. Secure the glass door (#1) to the wall by tightening the set screws (#5) with a Phillips screwdriver.

INSTALLATION STEPS

STEP 4-Sealing



The surfaces need to be clean and free of debris before applying silicone



Apply a good quality silicone sealant along the wall jamb ,door side seal and bottom seal.



Allow 24 hours for the silicone to cure before using the shower.

