OWNER'S MANUAL

Contact Us


If you have any questions,
Please contact customer servicce.

Email: service@cozfurn.com


Scan the QR code to watch the installation video.




Assembly Checklist

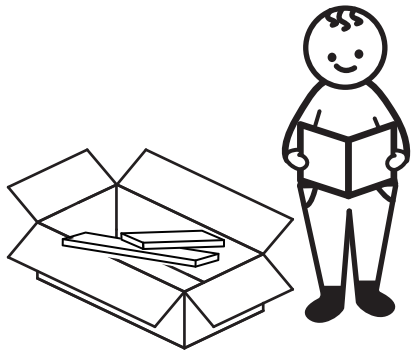


Read through the instructions carefully before you begin.

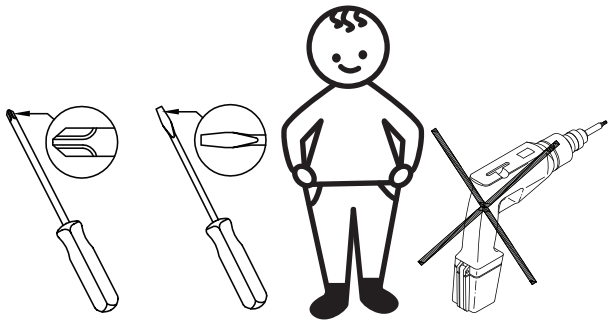

Make sure you have all the required tools. Never use power tools unless instructed.

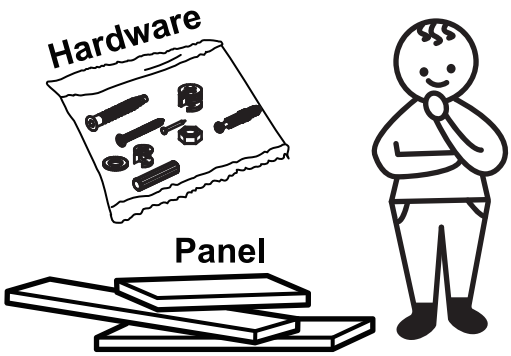

Identify and lay out all of the components before you begin assembly.

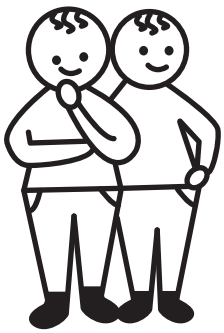


Two people are required to assemble.

Useful Information

! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
! Never use any glue until you are certain that the parts belong together.
! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
! If you are having any difficulties assembling your product, missing any hardware or components please email us.


SAFETY PRECAUTIONS

QUICKFIT

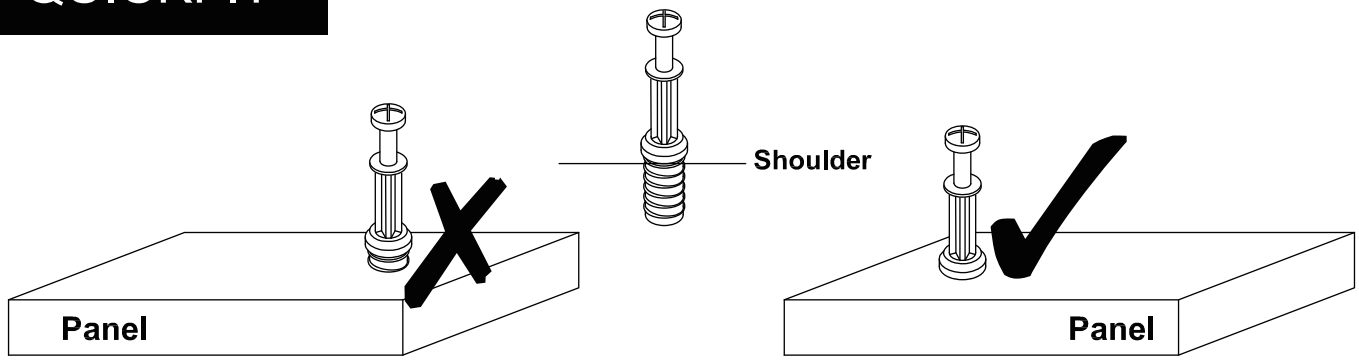


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

CAM LOCK

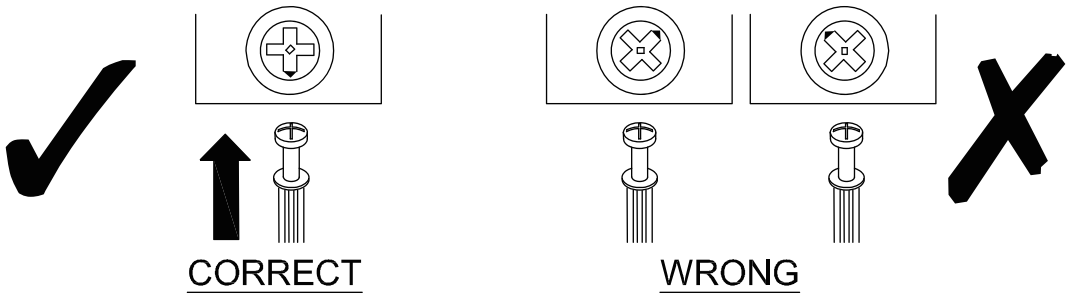

When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

Quickfit head should be in the centre of the cam lock when the two panels are joined. Cam lock should be inserted before quickfit.

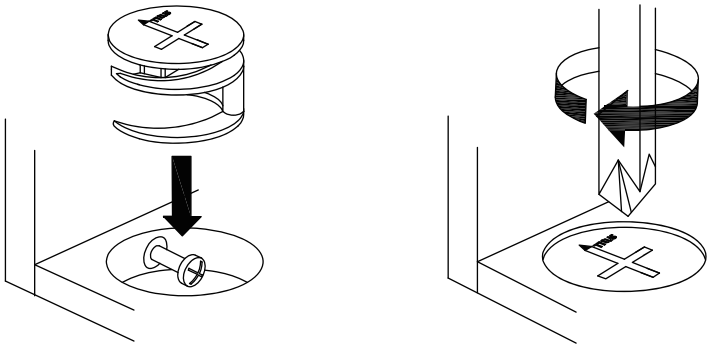

Turn cam lock clockwise to tighten.

SAFETY PRECAUTIONS

Wall Mounting & Fixing Guide

NOTE: Supplied wall plugs are only suitable for use in masonry walls.

If you have any doubts about using the correct plug for your wall, please seek professional advice. Failure of the product due to using incorrect fixings is the responsibility of the installer.

IMPORTANT:
When drilling into walls, always check for hidden wires or pipes, etc.


Tips & Tricks

Make sure that the hardware used is suitable for supporting your unit. Please consult a qualified tradesperson if unsure.


- ☑ If you are unsure, please select a larger screw and wall plug.
- ☑ Ensure that you use the recommended drill bit to match the wall plug and hole size.
- ☑ Take extra care when drilling high walls, ceiling and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid splitting or cracking.
- ☑ Ensure that wall plugs are well fitted and are a tight fit in the drilled hole.

Types Of Walls


Use one of the following types of wall plug (not included) if your walls are made of brick, breeze block, concrete, stone or wood. Screws may be able to be fixed directly to solid wood walls as they will provide a secure anchor point.

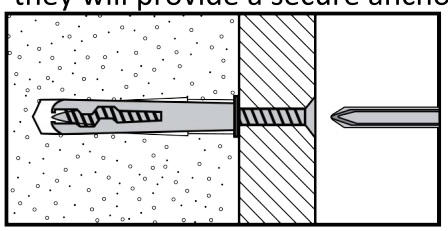


1. General Purpose Wall Plug
Generally, aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

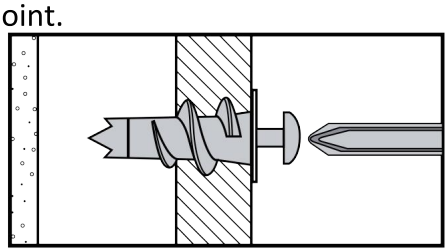


2. Plasterboard Wall Plug
For use when attaching light loads onto plasterboard partitions.

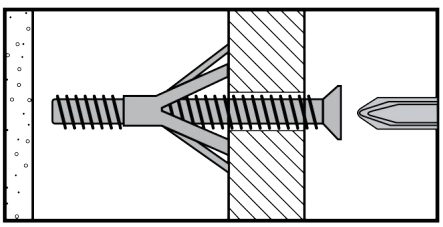


3. Cavity Fixing Wall Plug
For use with plasterboard partitions or hollow wooden doors.

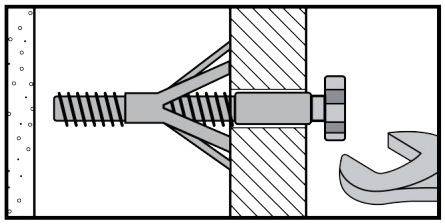

4. Cavity Fixing Heavy Duty Wall Plug
For use when fitting or supporting heavy loads such as shelving and wall cabinets.

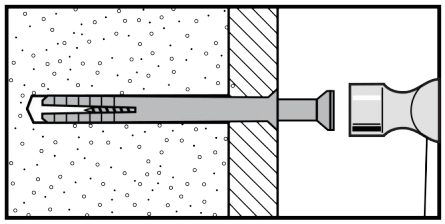

5. Hammer Fixing Wall Plug
For use with concrete block or brick walls, or walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

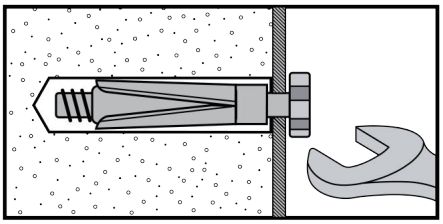

6. Shield Anchor Wall Plug Heavy Loads
For use with concrete or brick walls, or for use with heavier loads such as TV & HiFi speakers and satellite dishes, etc.

PRODUCT WARRANTY INSTRUCTION

Free Warranty Period:

The free warranty period starts from the product receipt date andasts one year.

Coverage during the Free Warranty Period:

1. If any components of the purchased product are damaged dueto non-human-induced reasons natural wear and tear excludedcorresponding new parts will be replaced free of charge.

2.If the entire purchased product is damaged due to non-human-induced reasons natural wear and tear excluded and cannot befurther used, corresponding parts or a brand-new product will bereplaced free of charge.

Coverage after the Free Warranty Period:


After the warranty period expires, replacement components will beprovided to customers at cost price for continued service.

Additional Services:

















After purchasing the product, customers can consult our staff for anyproduct-related inguiries.

Contact Email : Service@cozfurn.com

ACCESSORIES DISPLAY

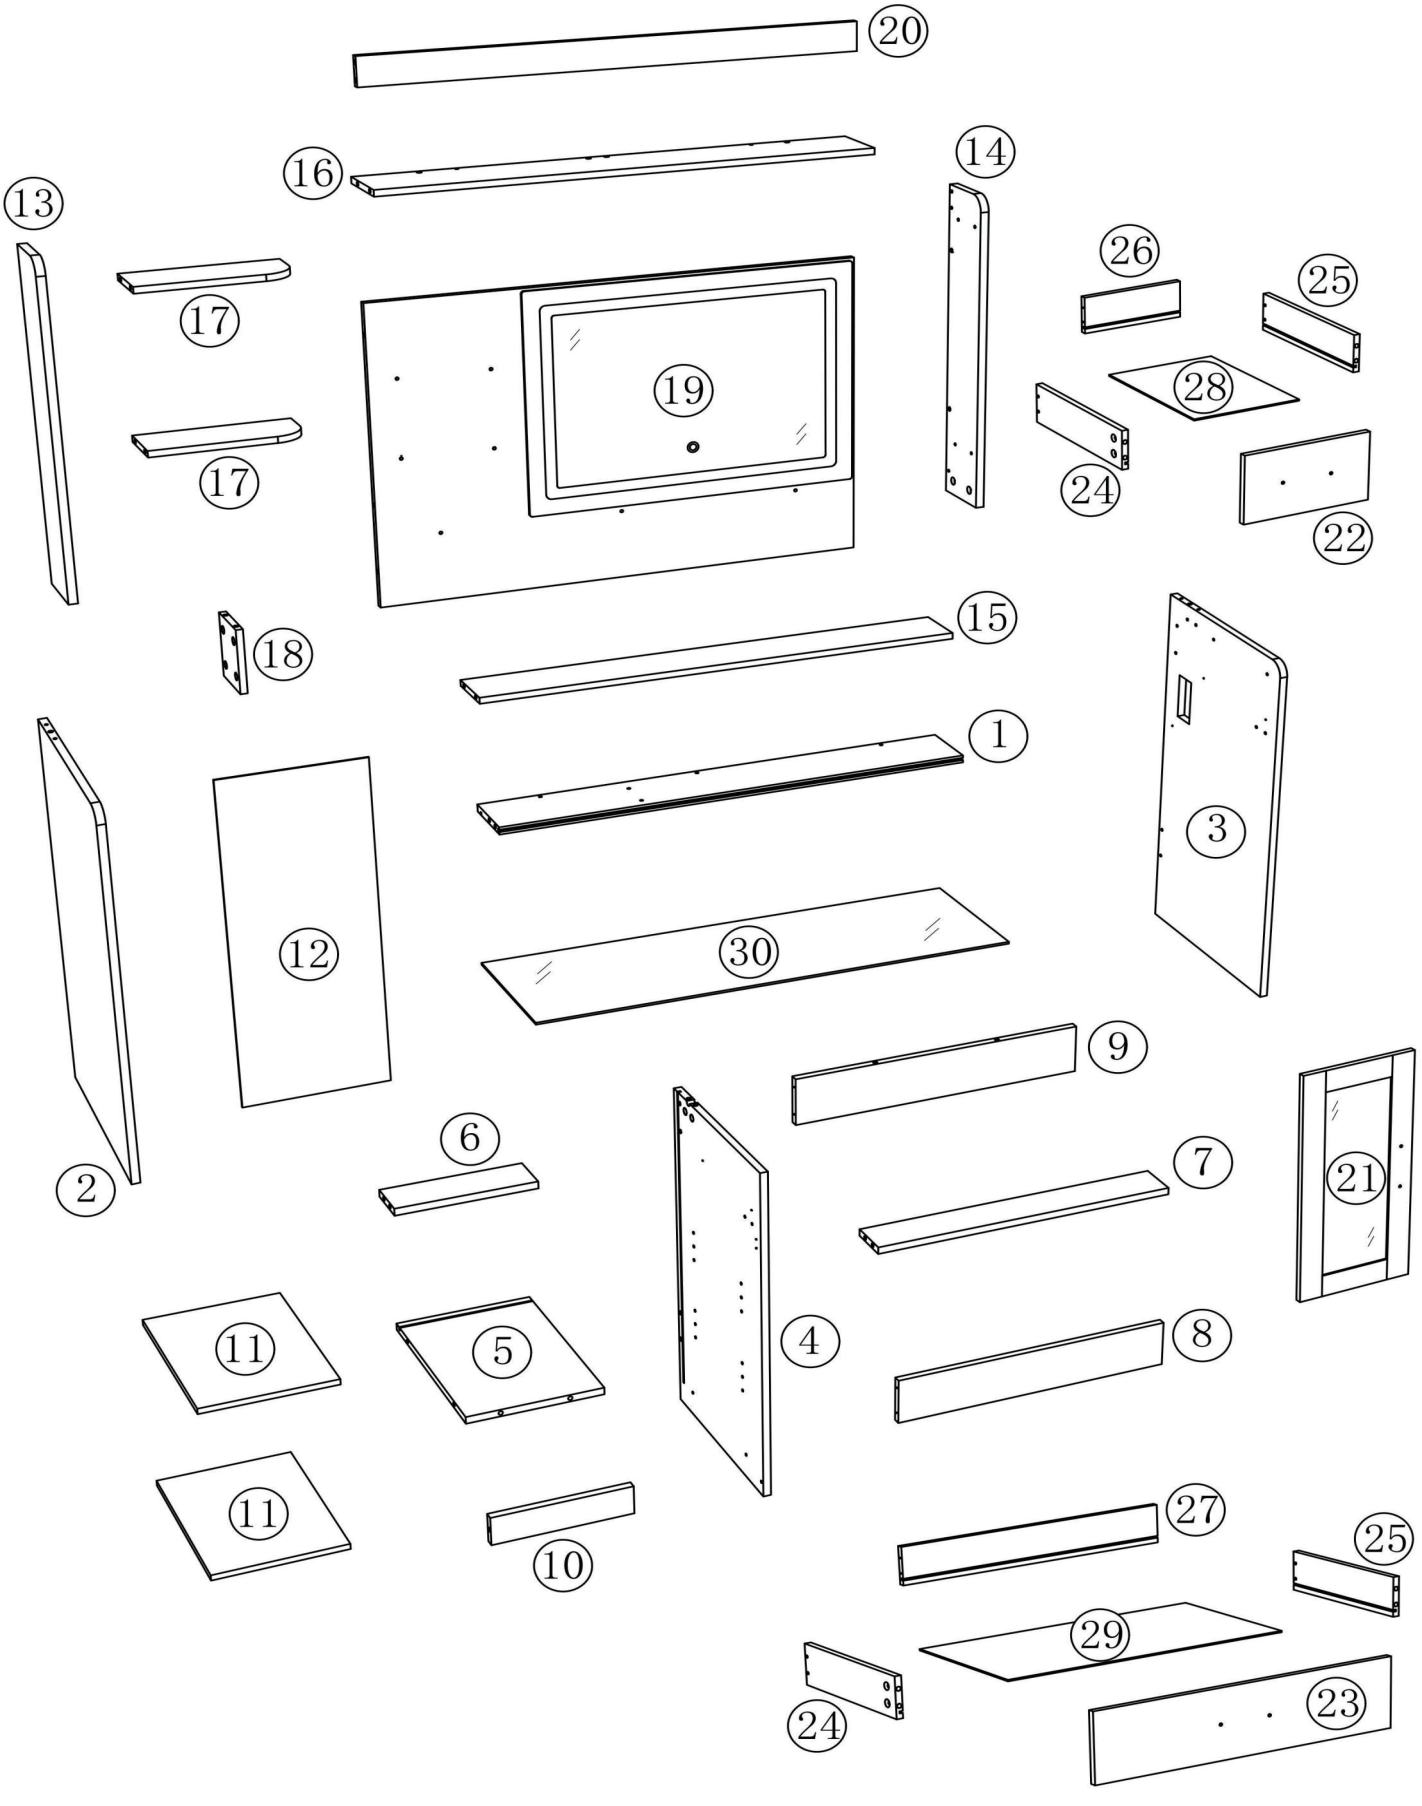


ACCESSORIES DISPLAY

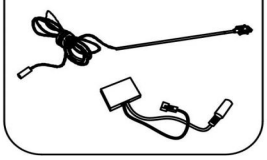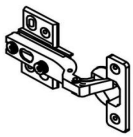
A X66 	B X32  ϕ15X12	C X34  ϕ15X10	D X6  M4X16	E X6 
F X27  M4X40	G X2  M4X14	H X26  M3X14	I X1 	J X3  M8X40
K X2 	L X2 	M X12  M3X12	N X2  M8X30	O X3  96MM
P X4 	Q X1 	R X1 	S X8 	T X2 
U X2 	V X1 	W X6 	X X1 	
DR X2 	CR X2 			
DL X2 	CL X2 			

PRODUCT ASSEMBLY

STEP1

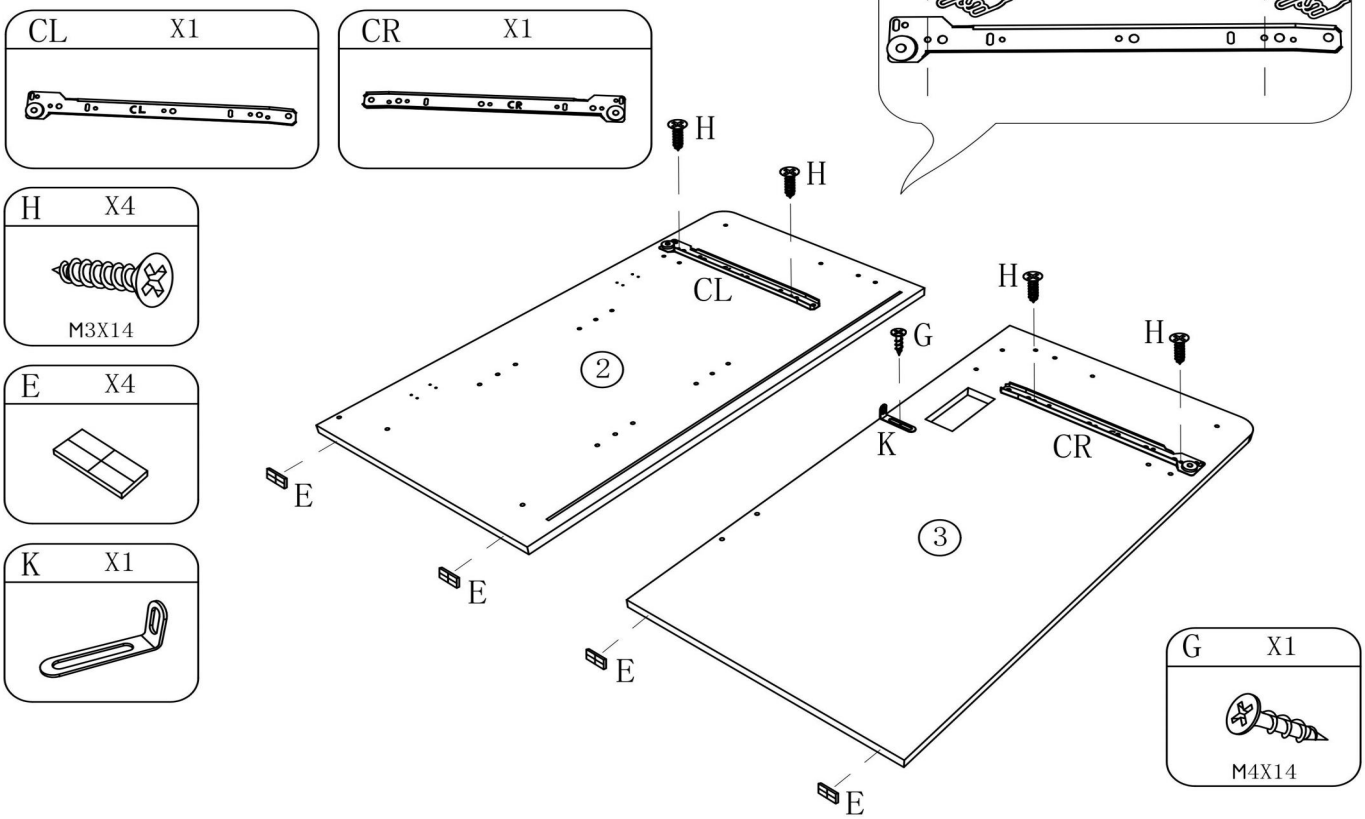


STEP2

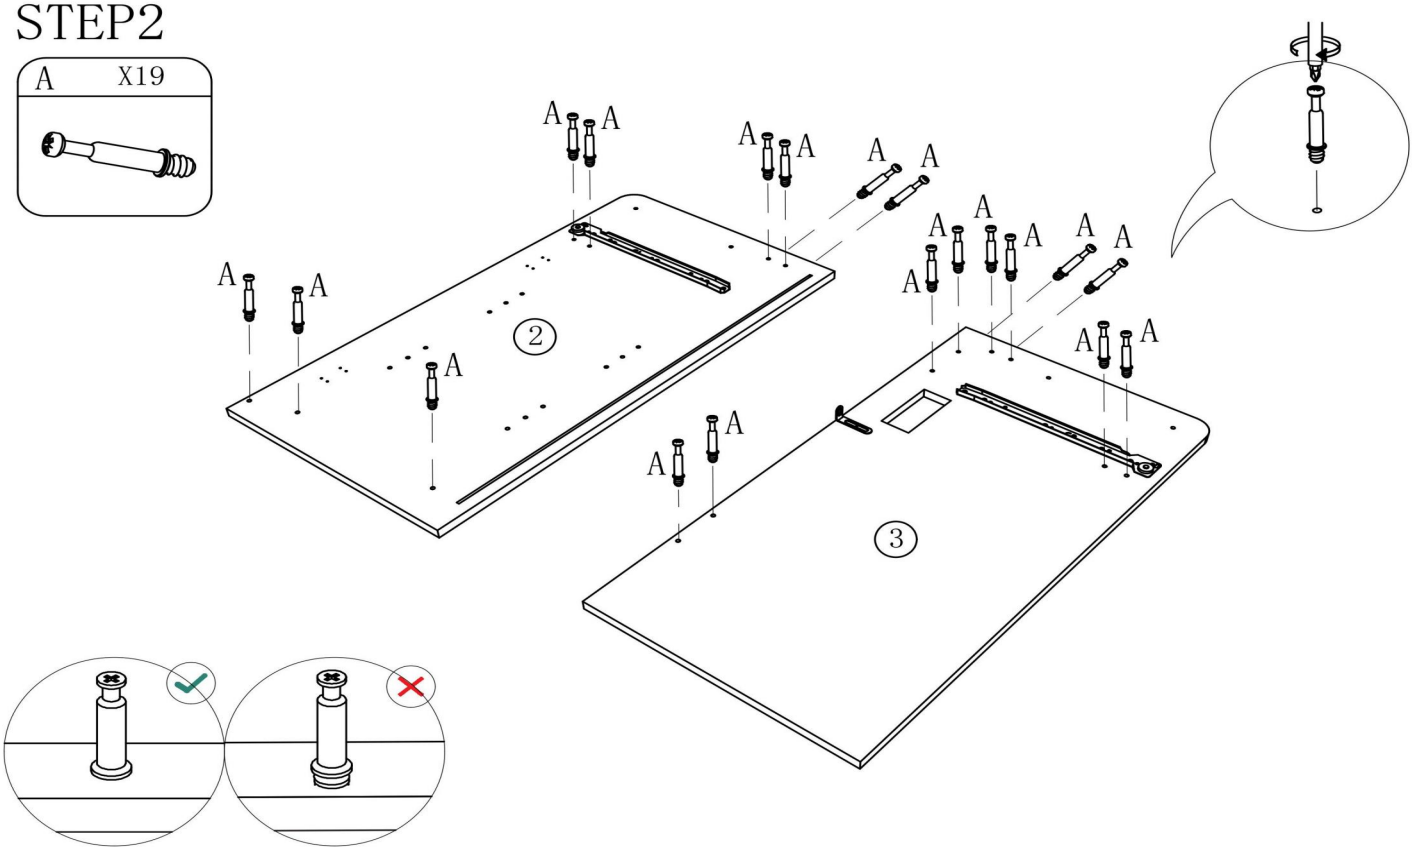



Email:Service@cozfurn.com


PRODUCT ASSEMBLY


STEP3

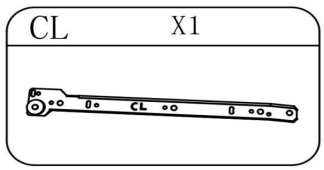


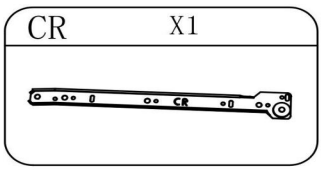

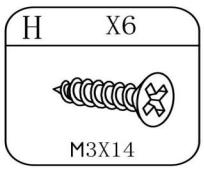


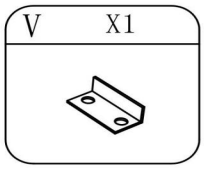


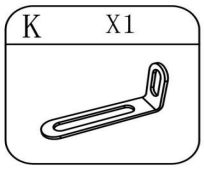


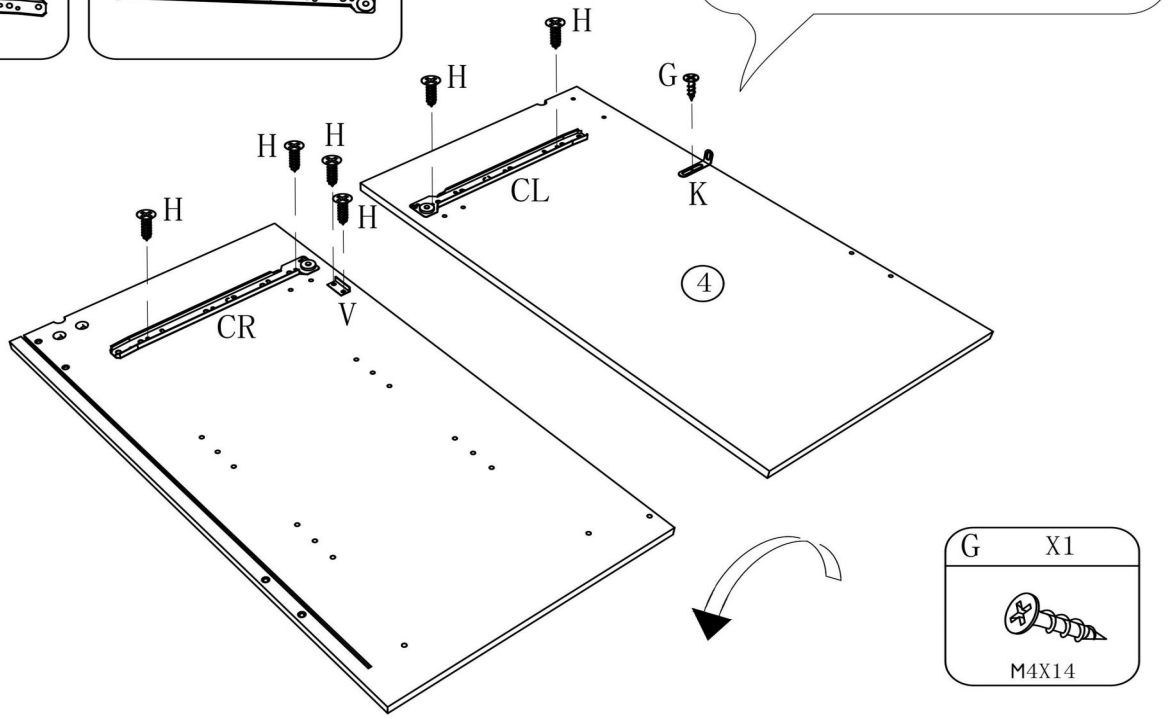


STEP4

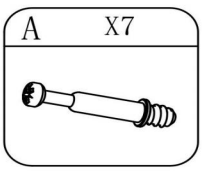

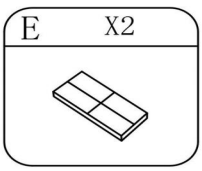

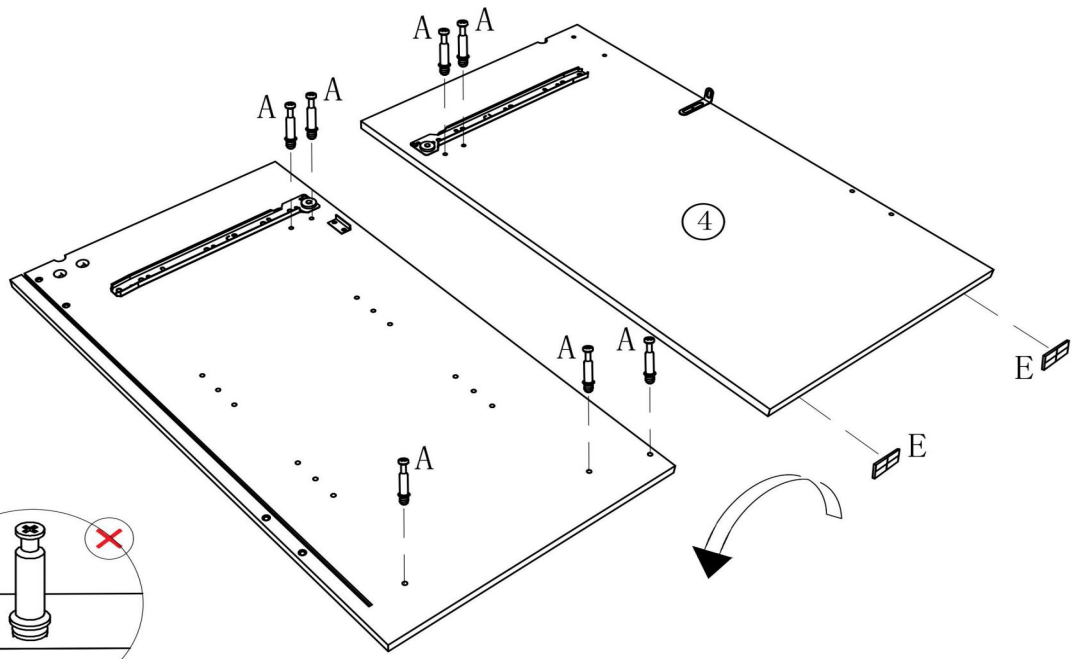


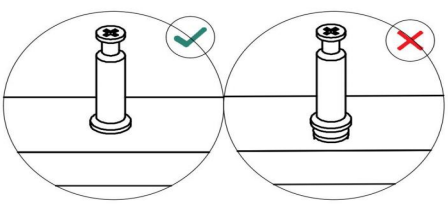



Email:Service@cozfurn.com

PRODUCT ASSEMBLY


STEP5

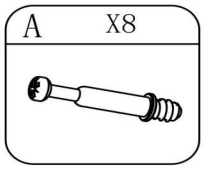


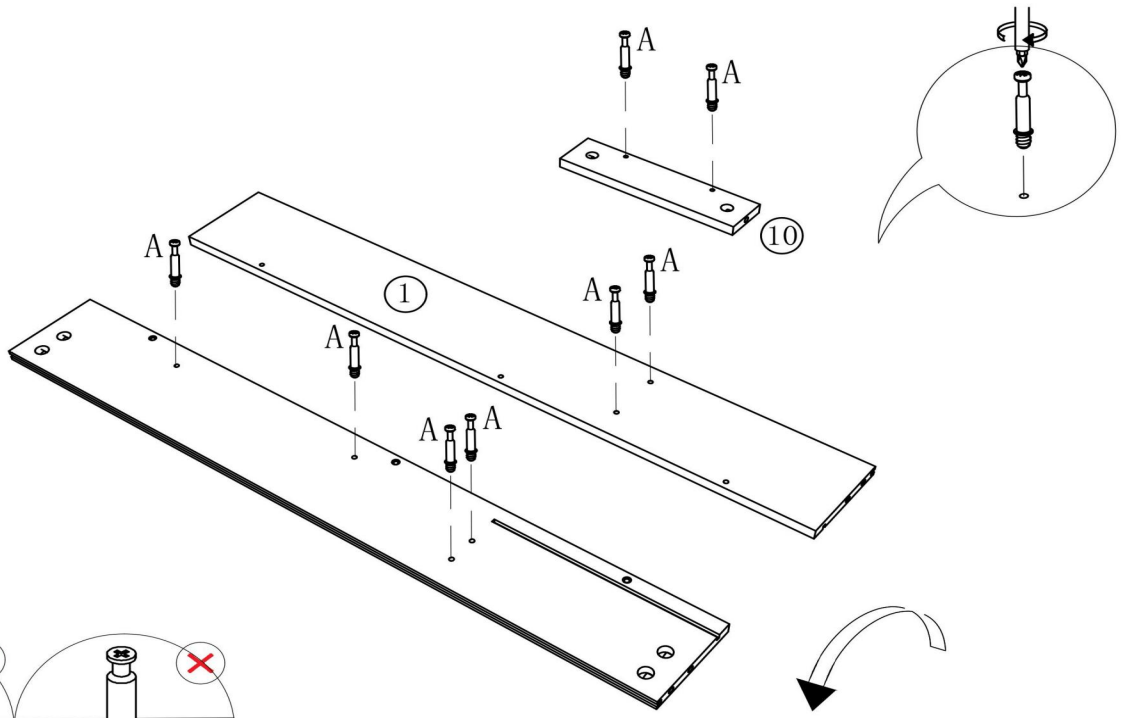


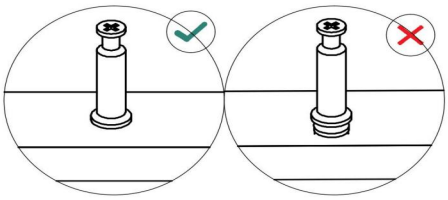

STEP6

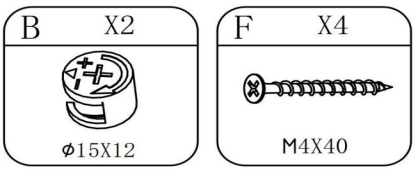


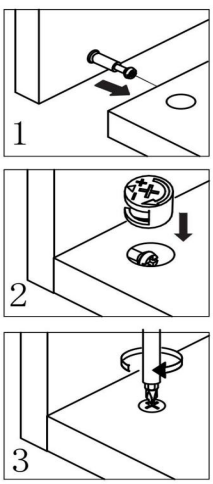


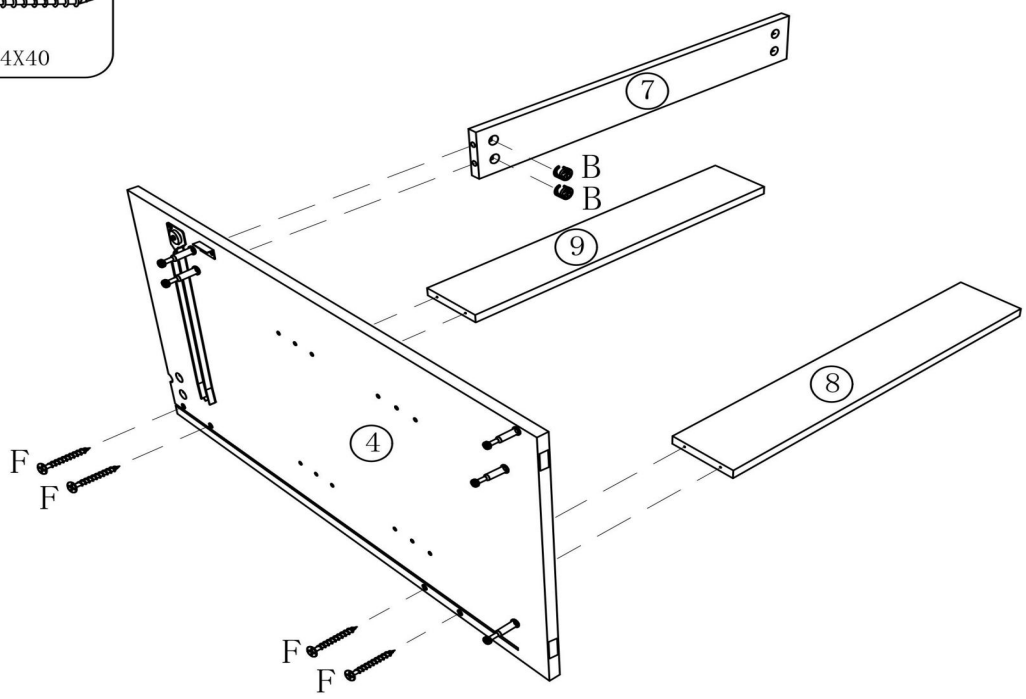


Email:Service@cozfurn.com


STEP7

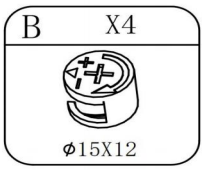


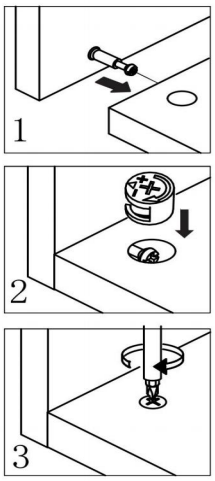


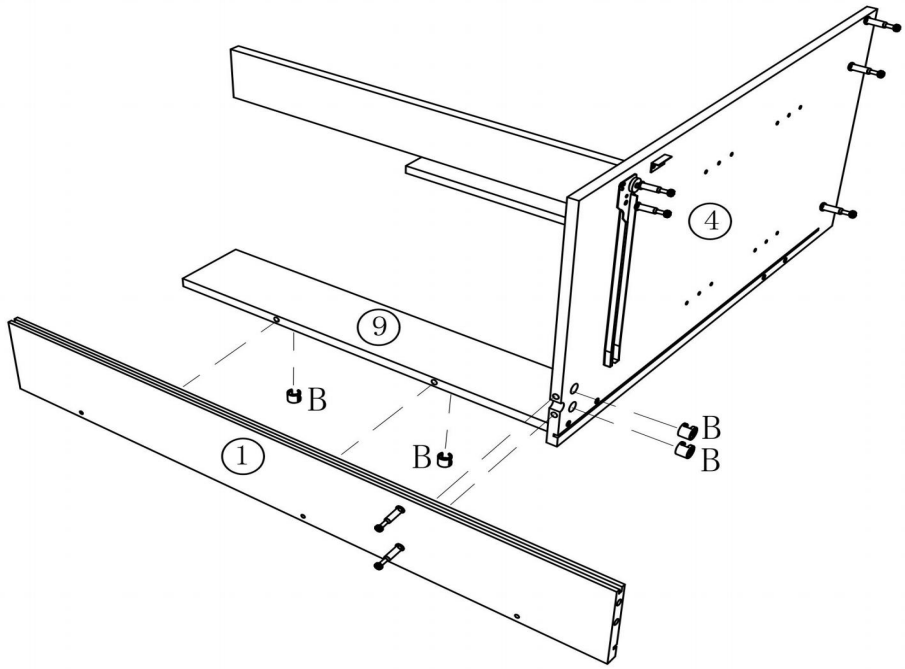

STEP8

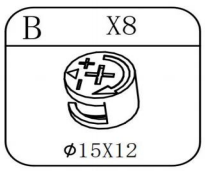

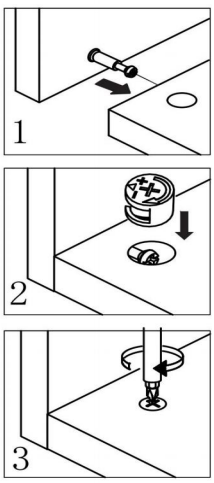


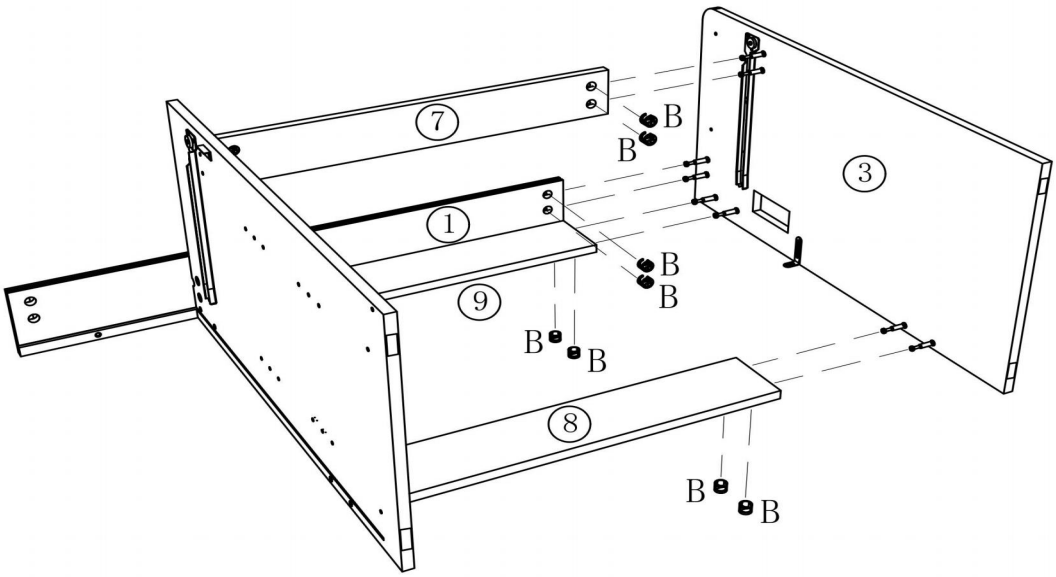



Email:Service@cozfurn.com

PRODUCT ASSEMBLY


STEP9

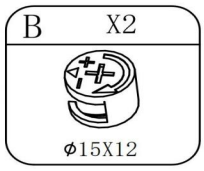


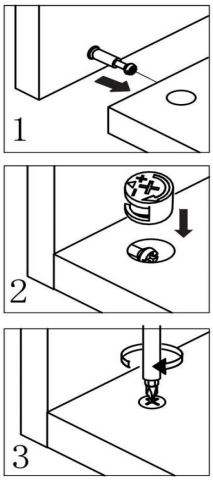


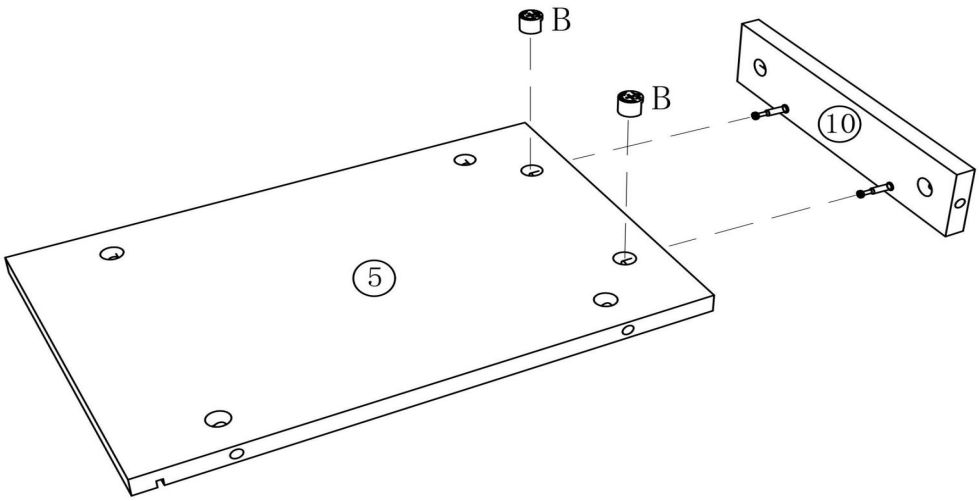

STEP10

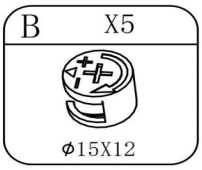


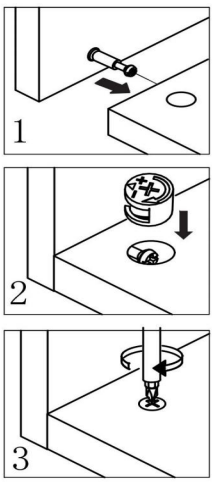

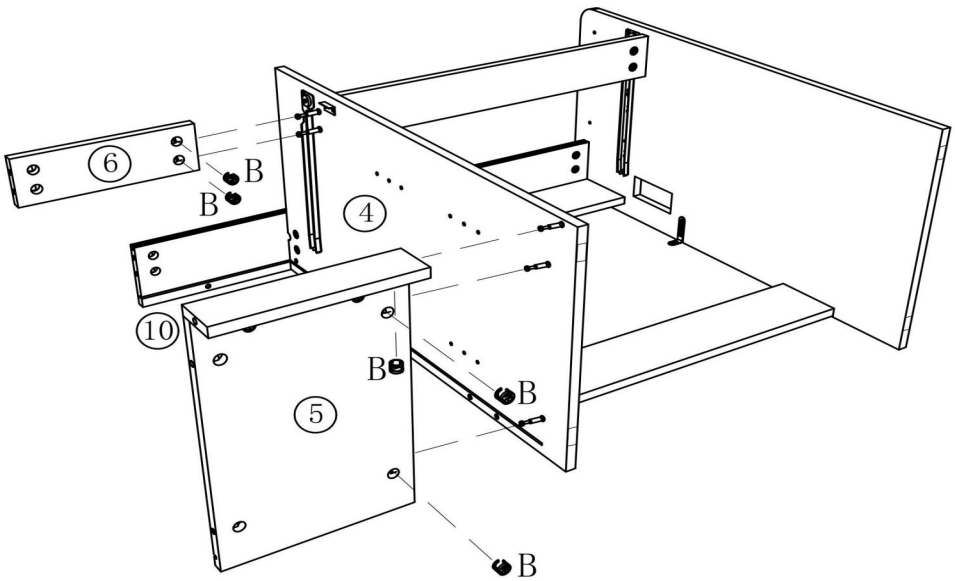



Email:Service@cozfurn.com


STEP11

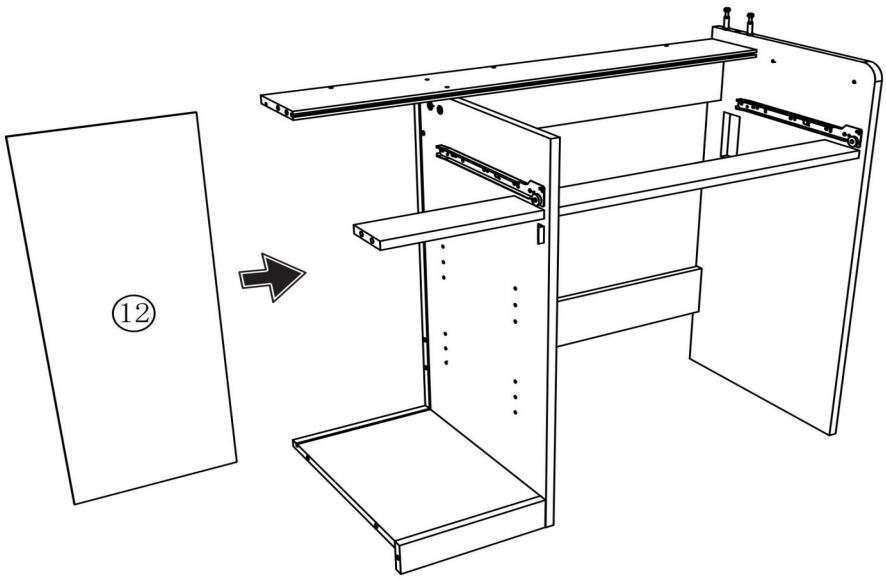

STEP12

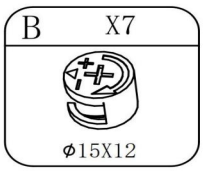


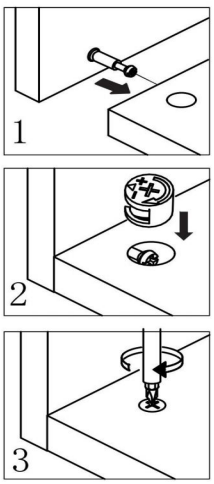


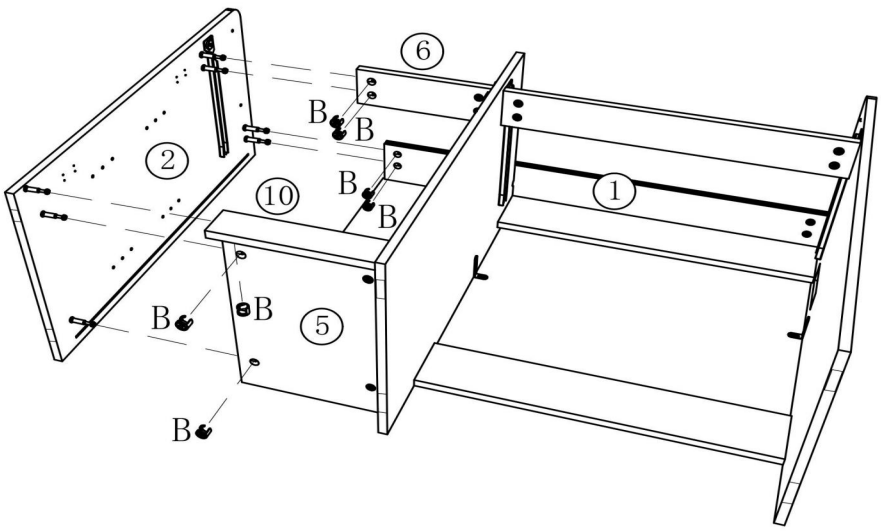


Email:Service@cozfurn.com


STEP13

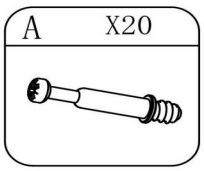


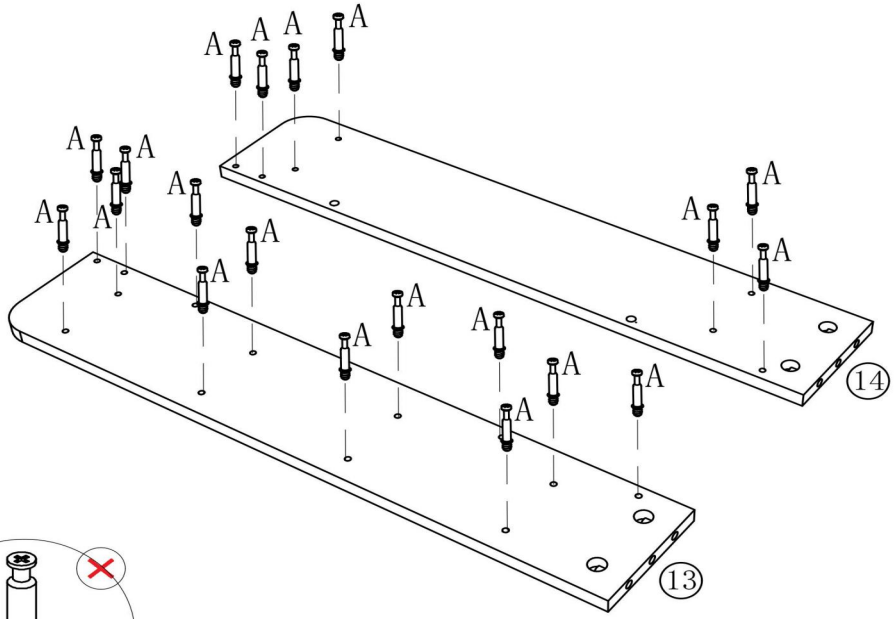


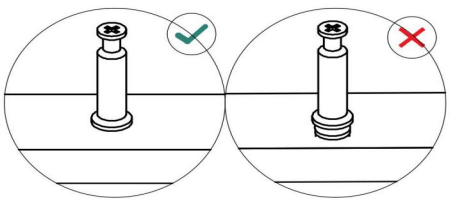

STEP14

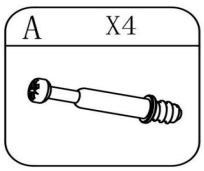


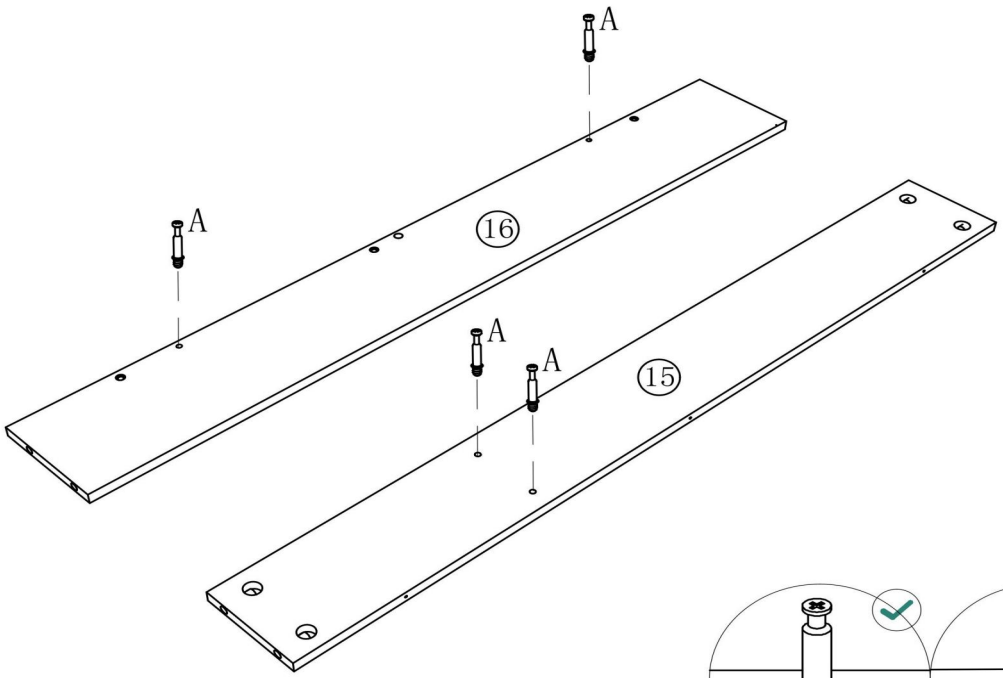


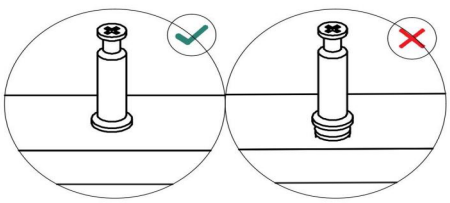


Email:Service@cozfurn.com


STEP15

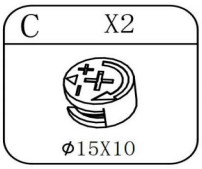


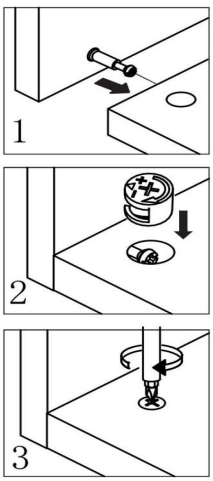

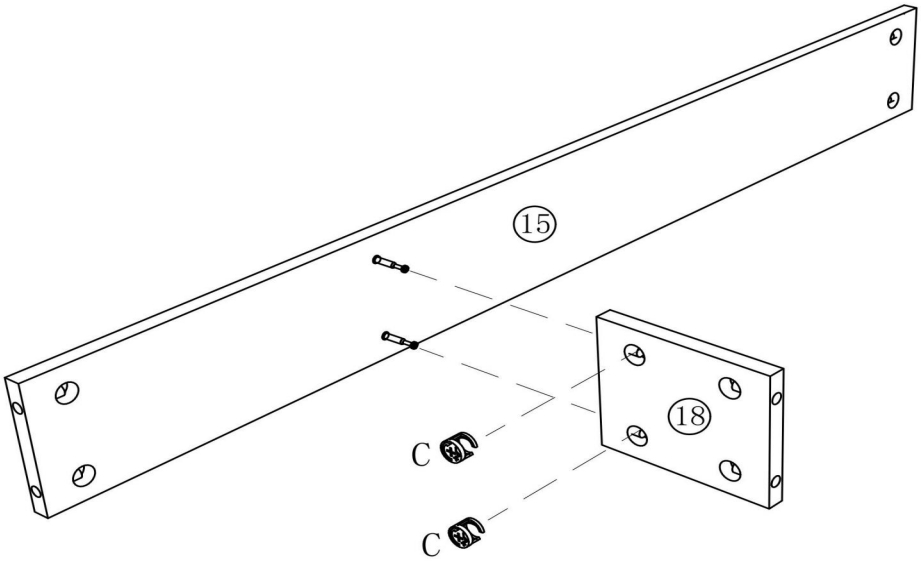


STEP16

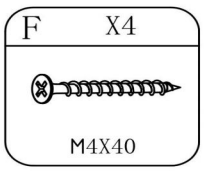


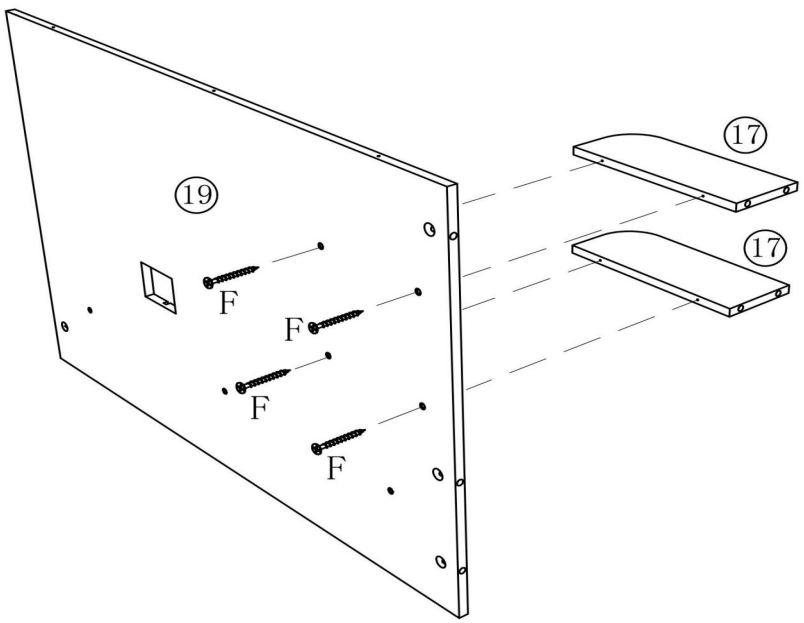


Email:Service@cozfurn.com


STEP17

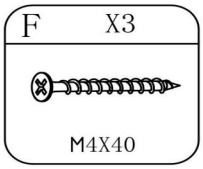

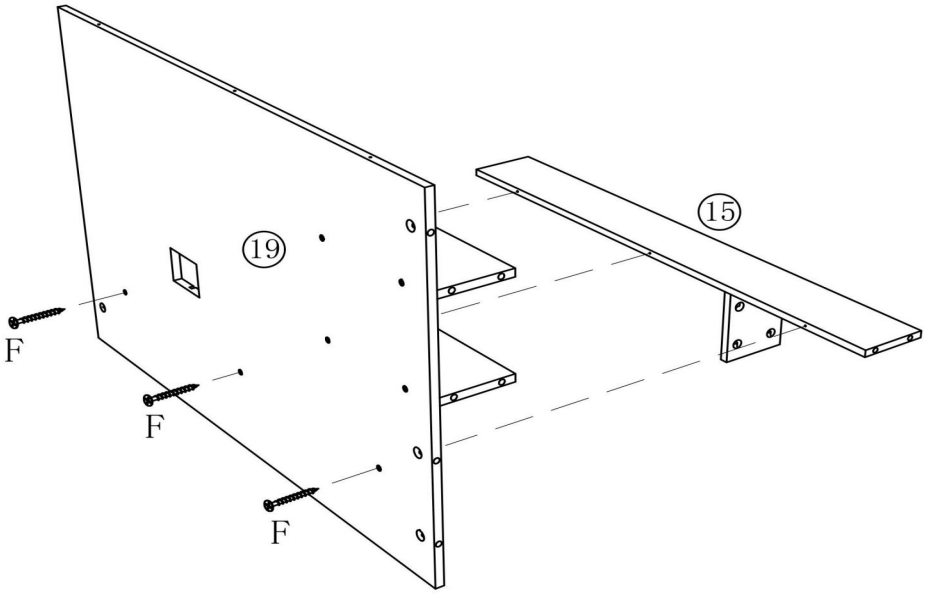


STEP18

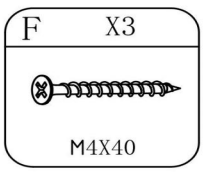


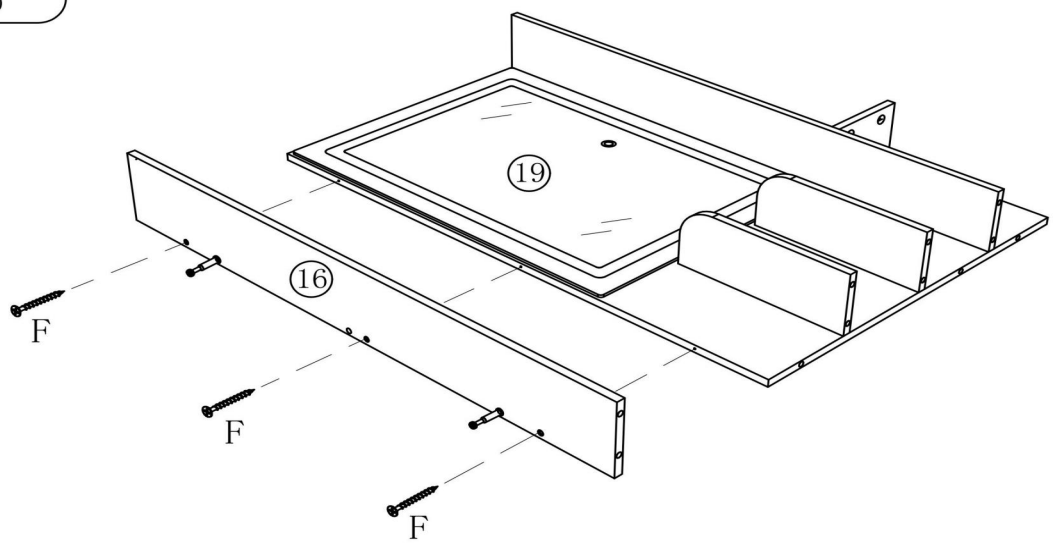


Email:Service@cozfurn.com


STEP19

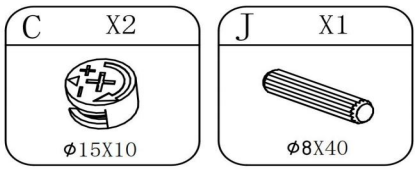


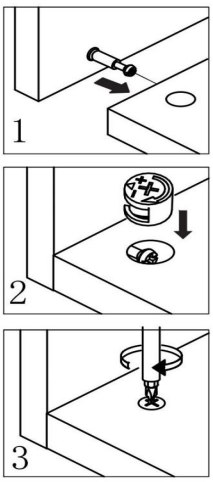


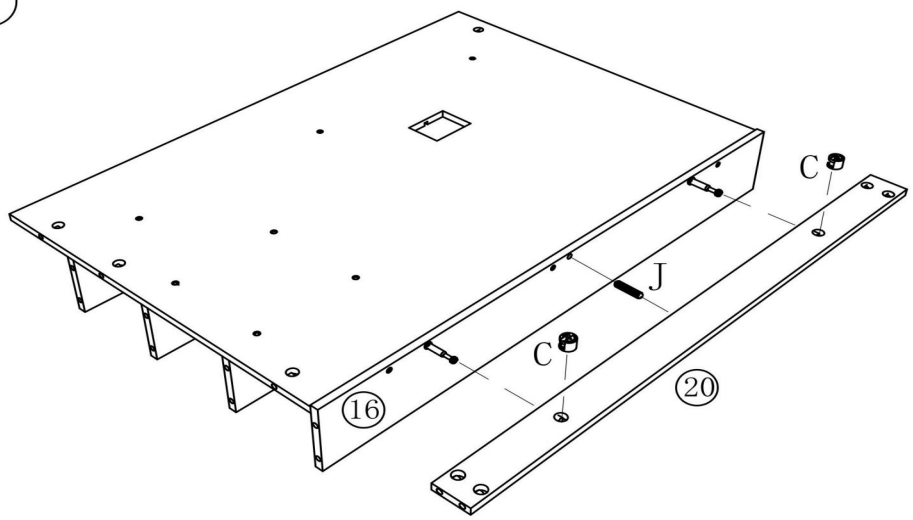

STEP20

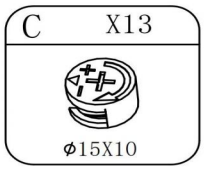


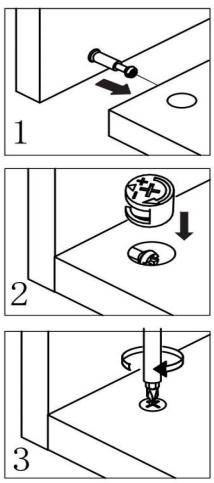


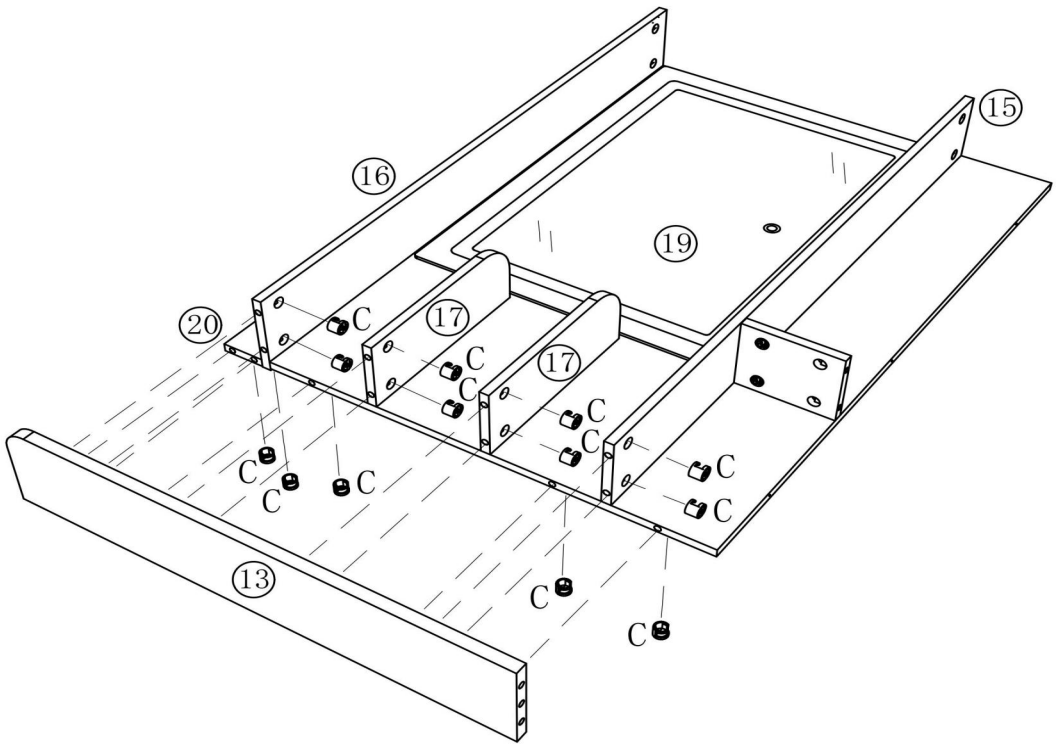


Email:Service@cozfurn.com


STEP21

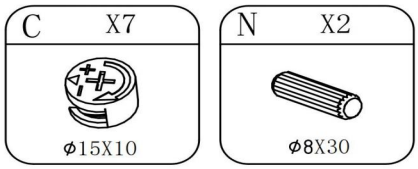


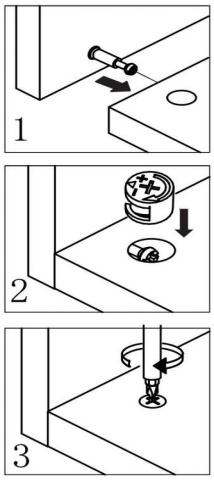


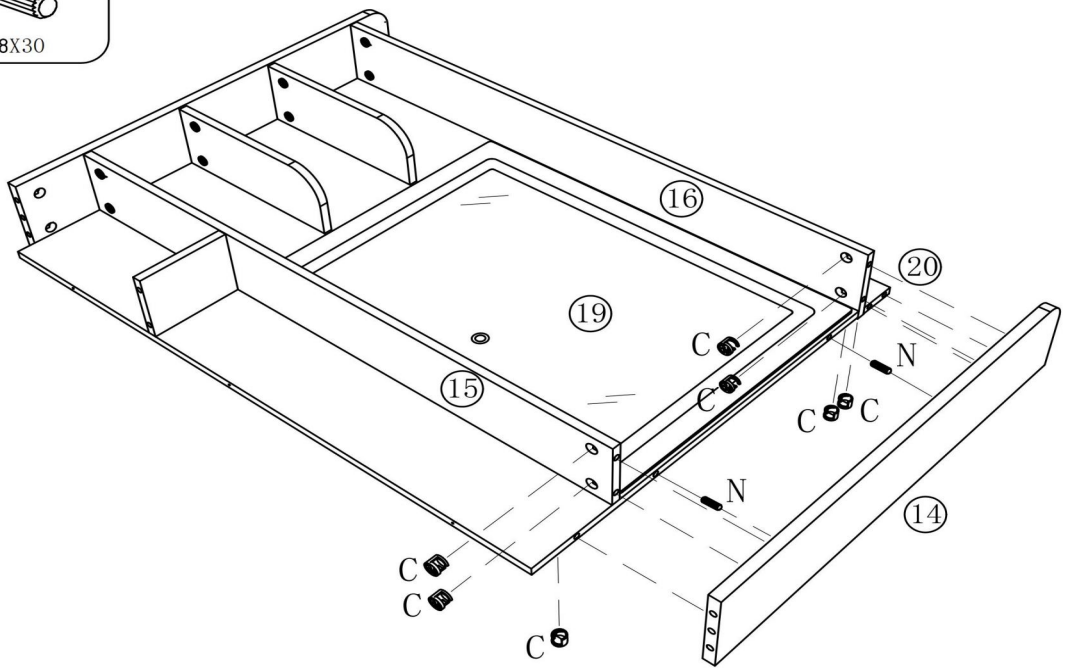

STEP22

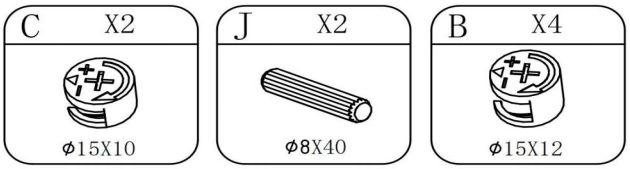


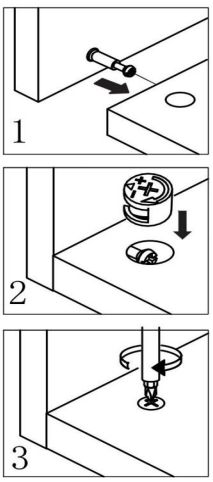


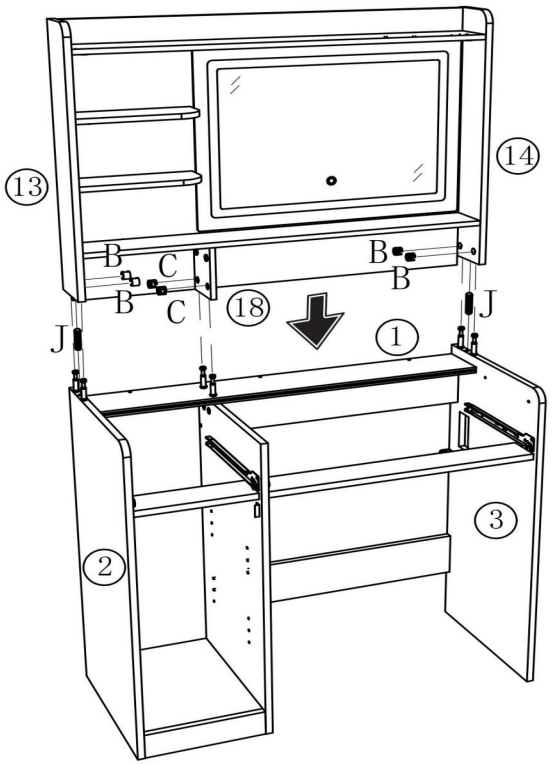


Email:Service@cozfurn.com


STEP23

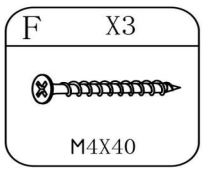


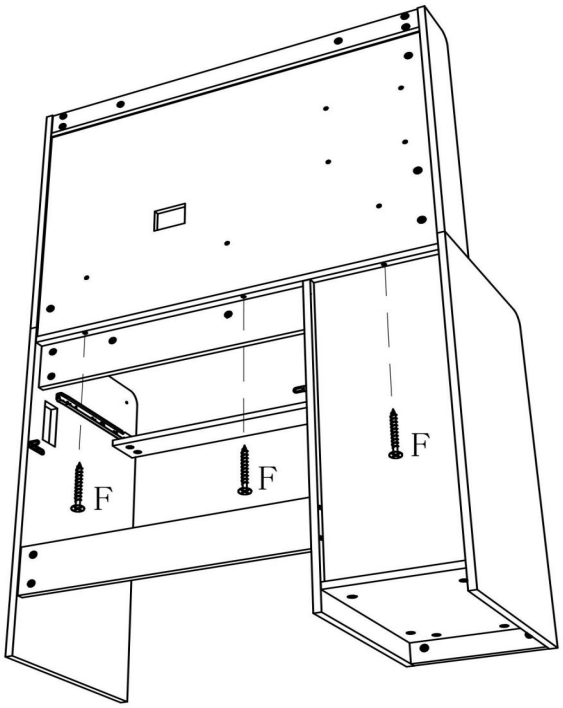


STEP24

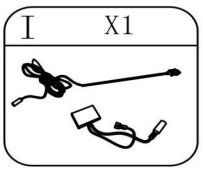

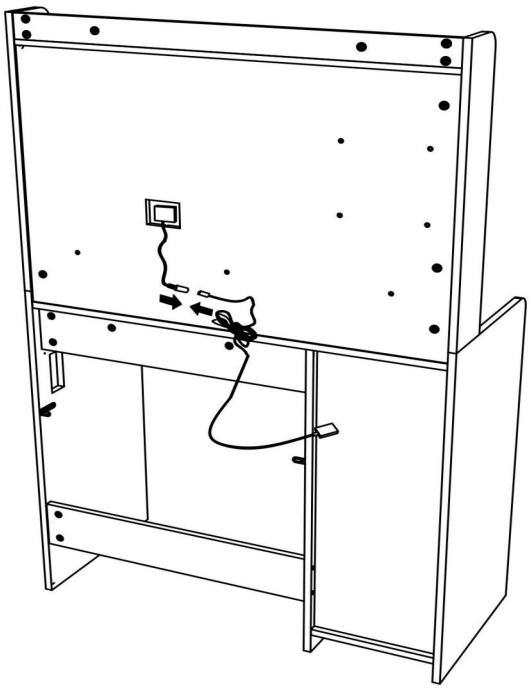

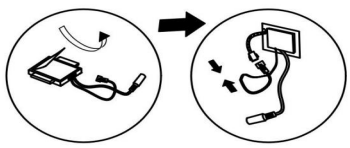


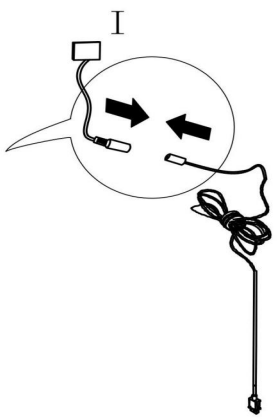


Email:Service@cozfurn.com

STEP25

R X1

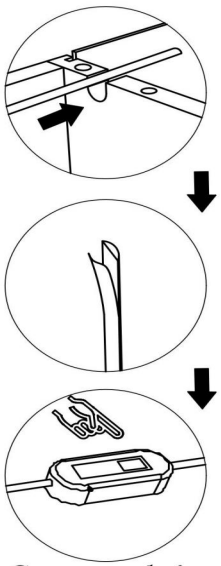


Scan this
QR code

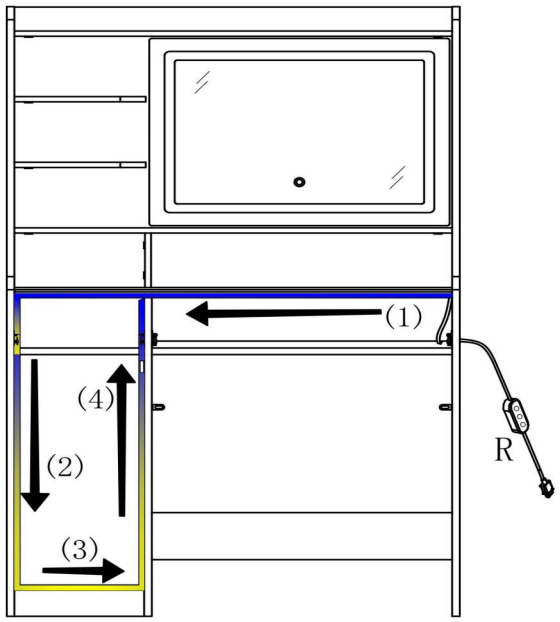


For reference only,
you can also DIY.


STEP26

H X2

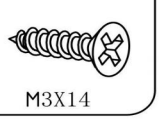

Q X1



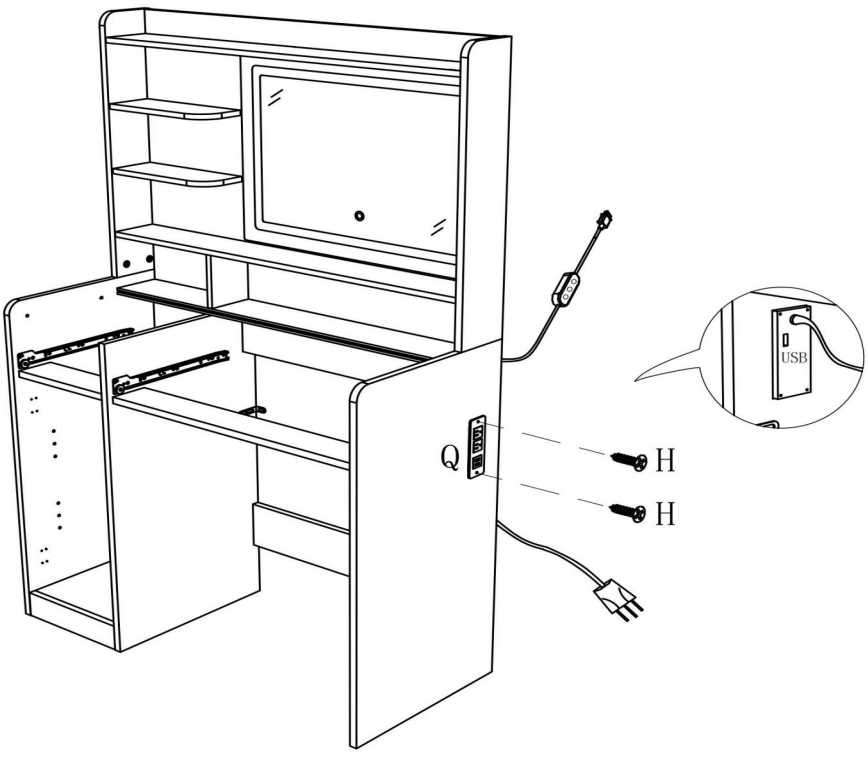

Email:Service@cozfurn.com

PRODUCT ASSEMBLY


STEP27


H X6




M3X14

W X6




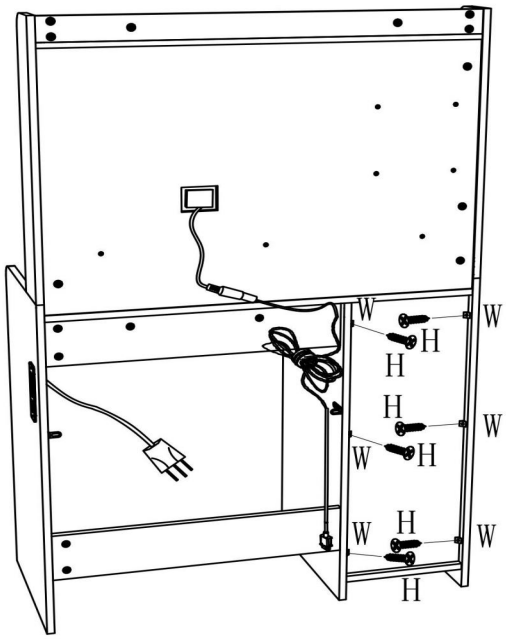

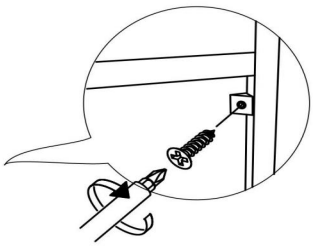


STEP28

A X8



O X2





96MM

D X4




M4X16

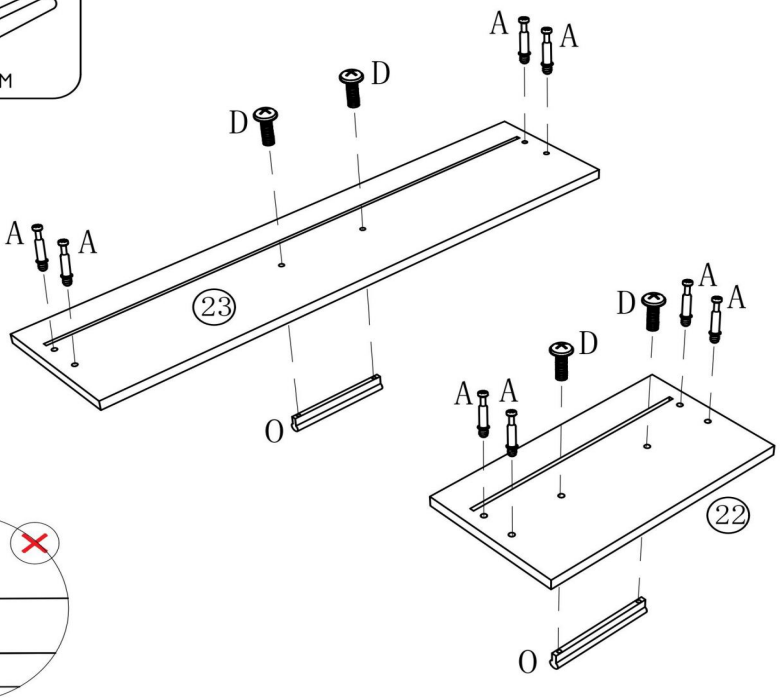


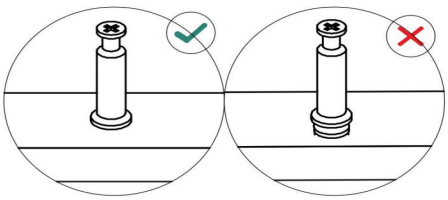


Email:Service@cozfurn.com


STEP29

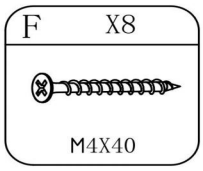


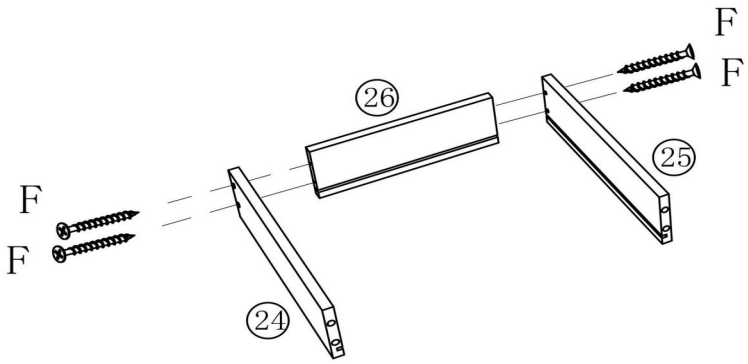


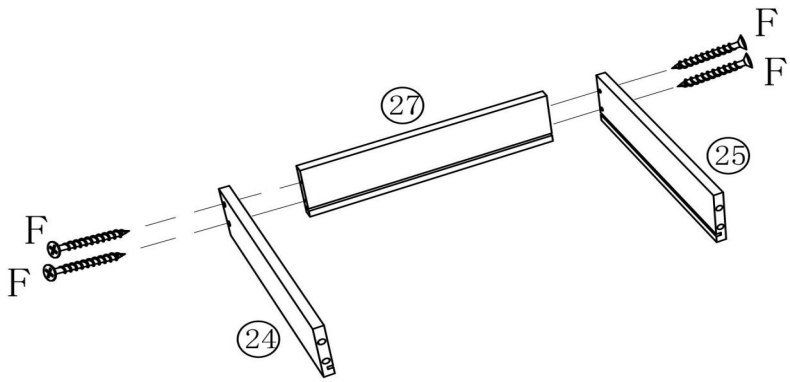


STEP30

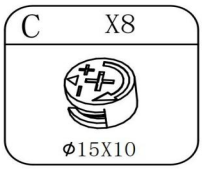

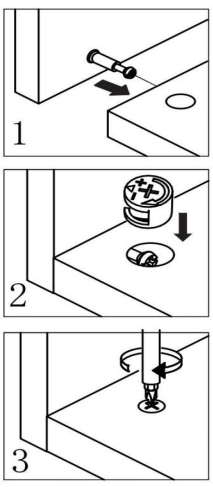


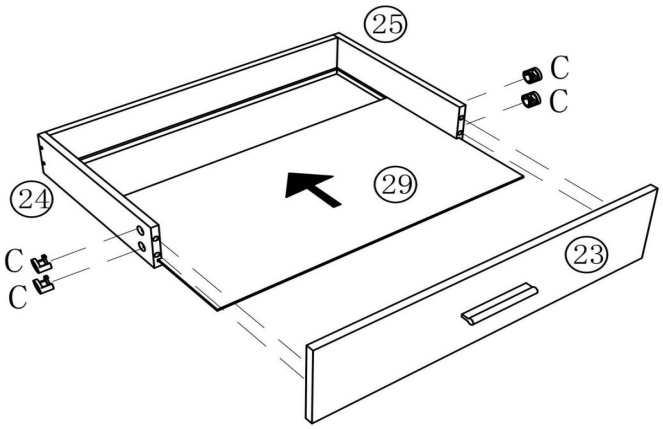

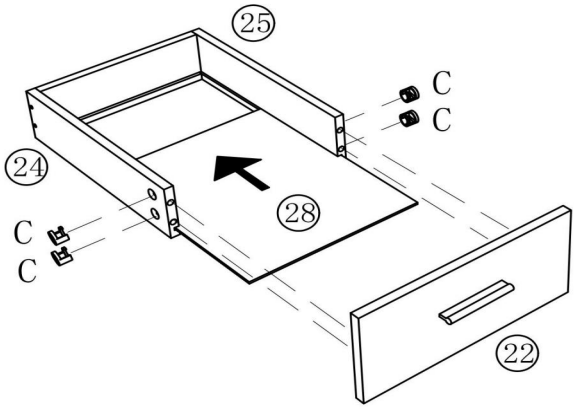



Email:Service@cozfurn.com

STEP31

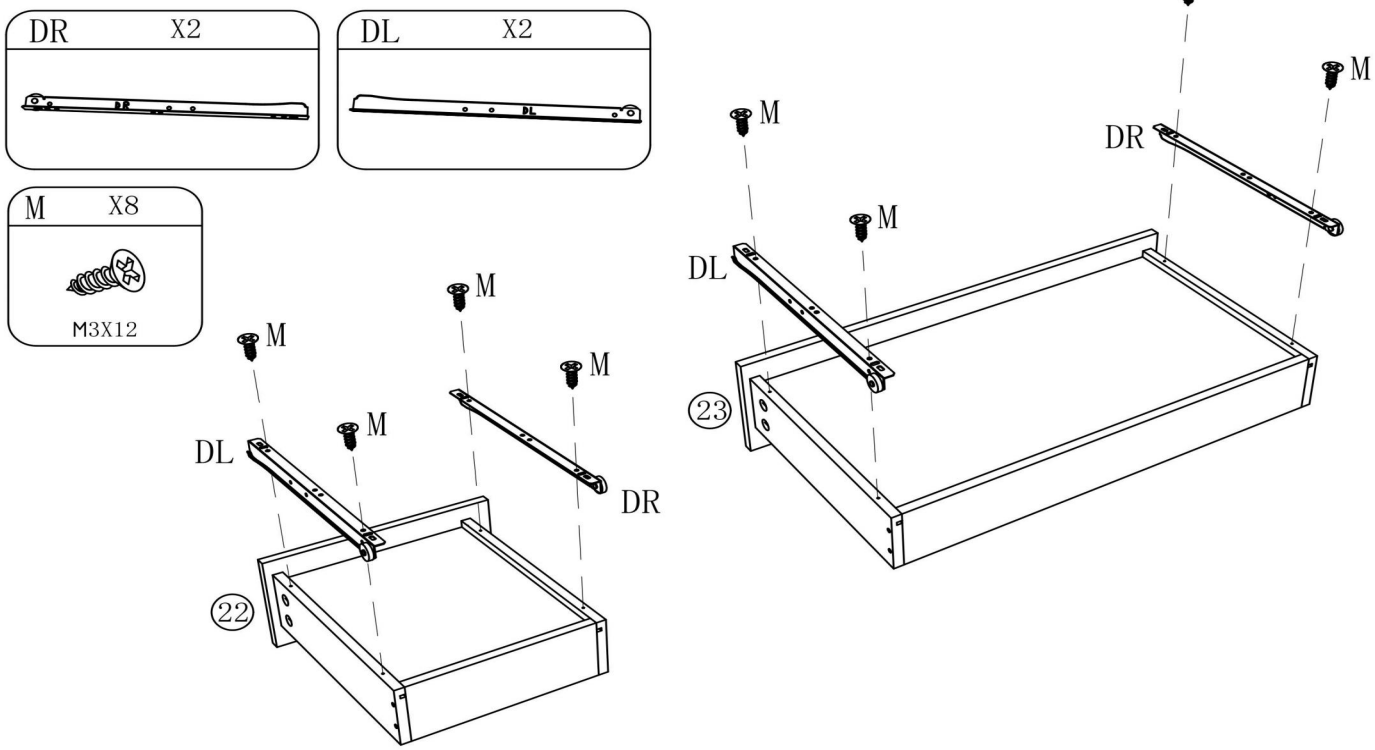


STEP32

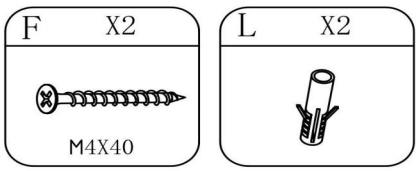


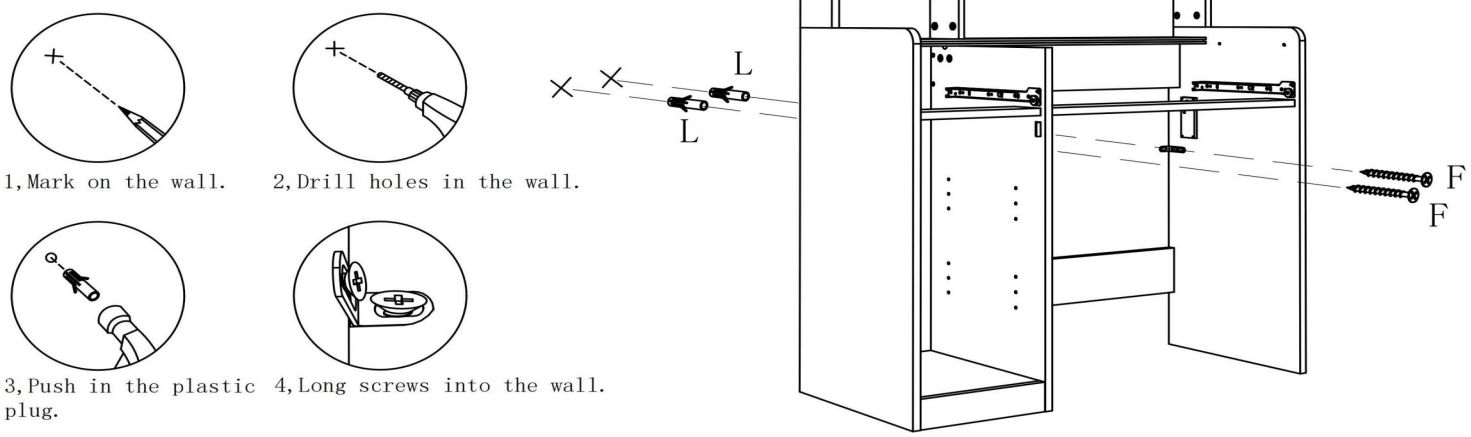


Email:Service@cozfurn.com


STEP33

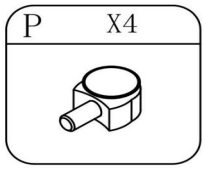

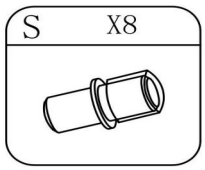


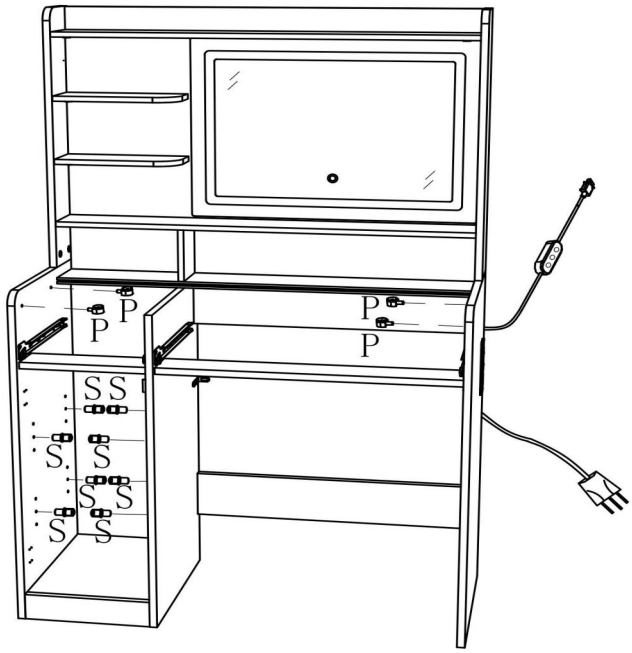


STEP34

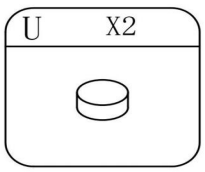




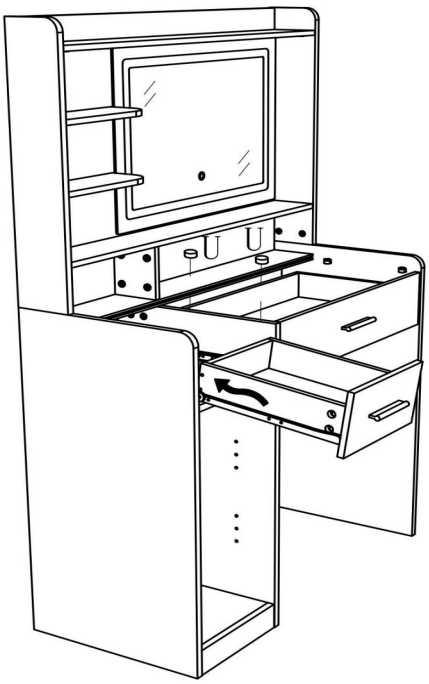


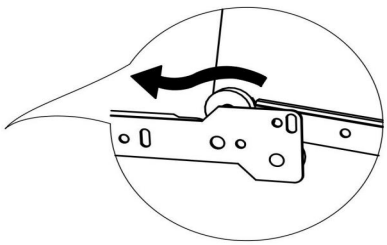


Email:Service@cozfurn.com

STEP35

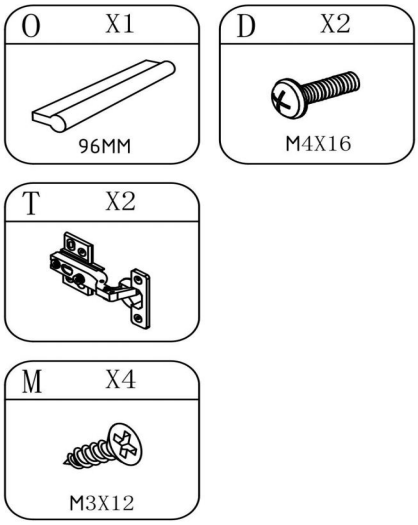

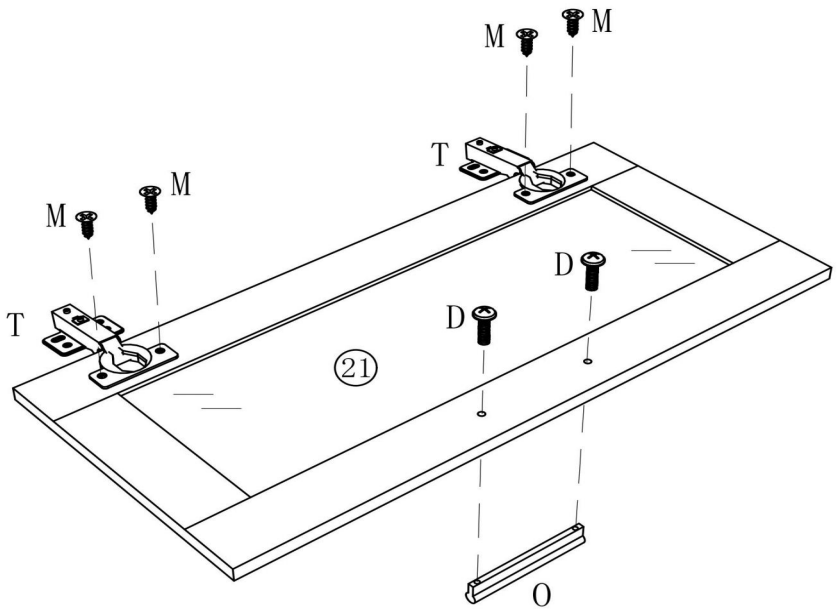



STEP36

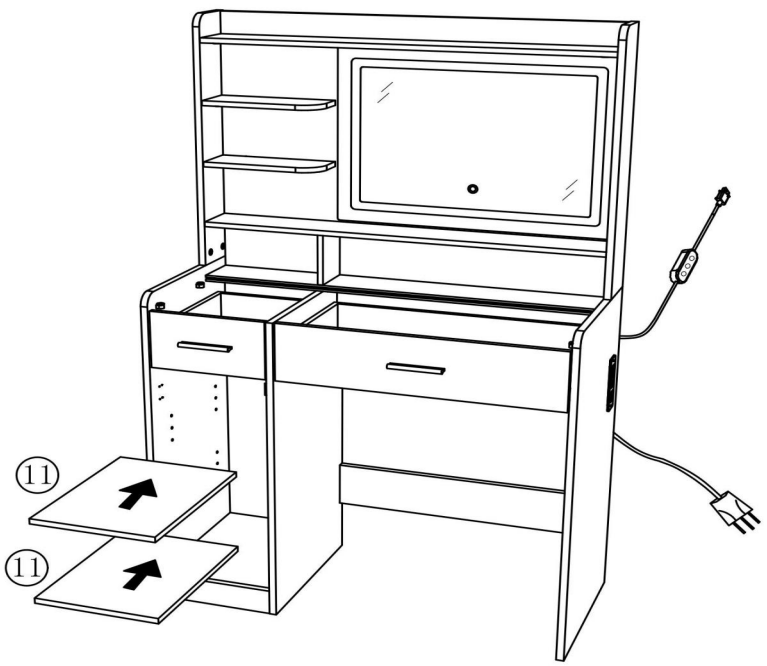

Email:Service@cozfurn.com


STEP37

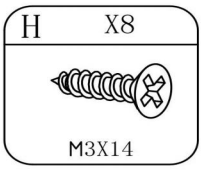

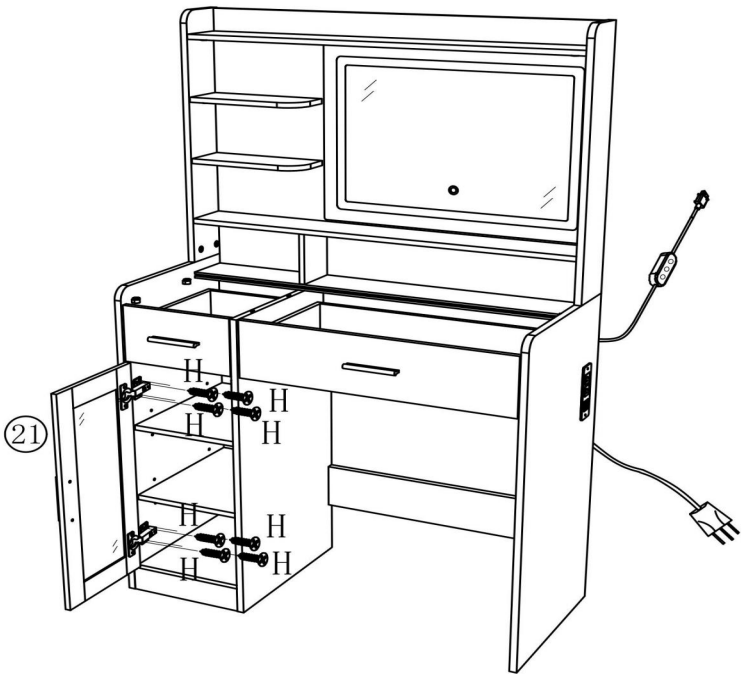


STEP38

Adjust front and back.

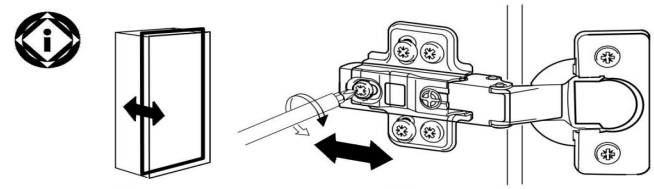

Adjust left and right.

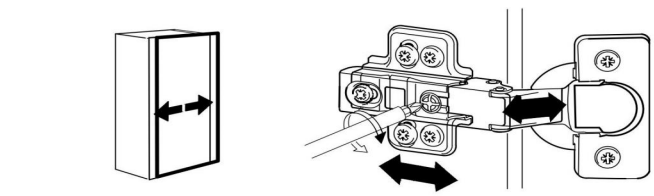

STEP39

The suction cup adheres to the glass.

