



ASSEMBLY INSTRUCTIONS

SKU: AJ-DJ505452_2
AJ-DJ505452_3

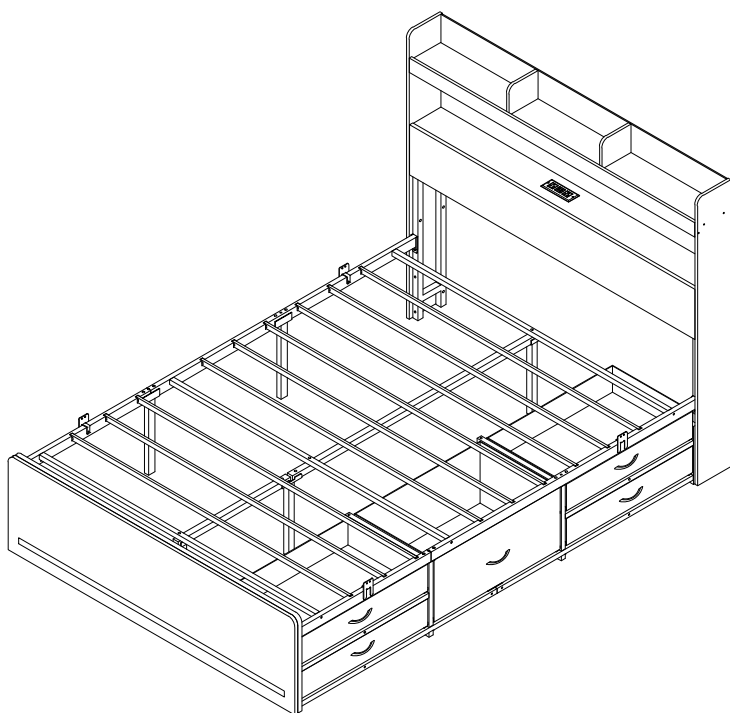

When installing the drawer on the left side, please follow the installation steps on page 4-20.

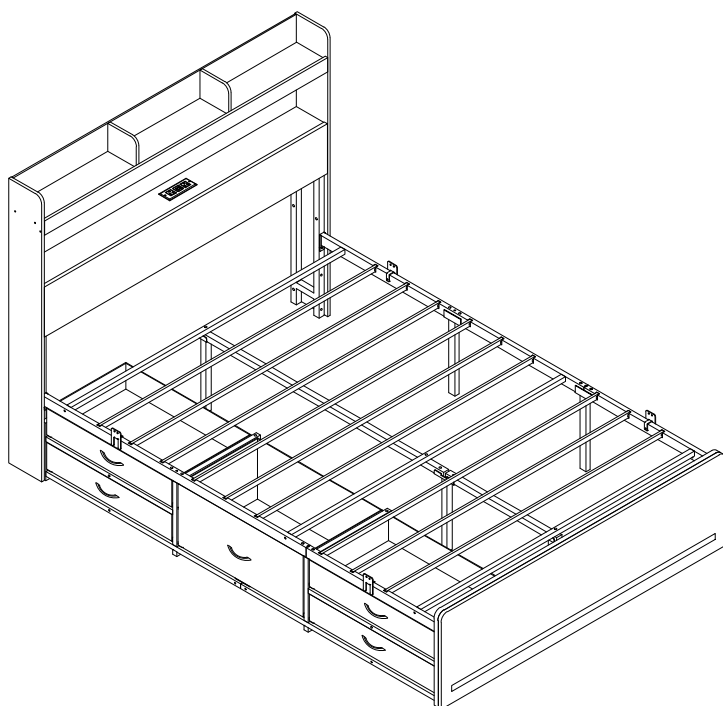


When installing the drawer on the right side, please follow the installation steps on page 21-37.


Package Contents

Plates and iron components	Assembly tool kit	Instruction manual
----------------------------	-------------------	--------------------


Precautions

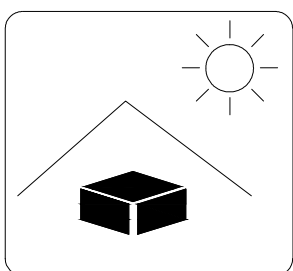


1.Avoid long-term direct sunlight exposure

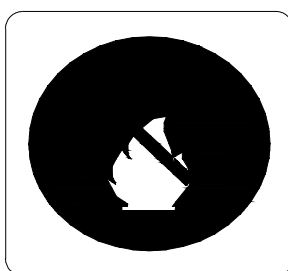


2.Stay away from fire

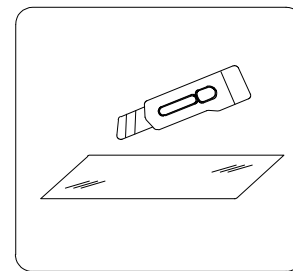


3.Keep away from sharp objects

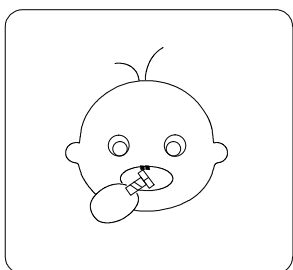


4.Keep infants/children away from assembly parts to avoid choking and suffocation.

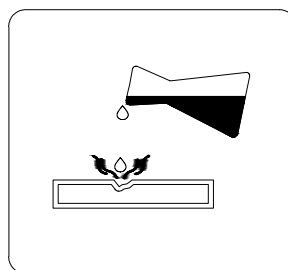


5.Keep away from corrosive substances

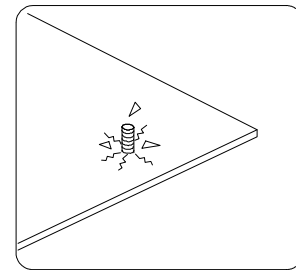


6.Please use the correct screws, otherwise the plate will be damaged.

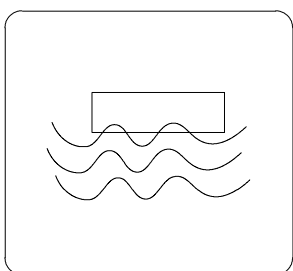

7.Prevent objects from being damaged by immersion in water

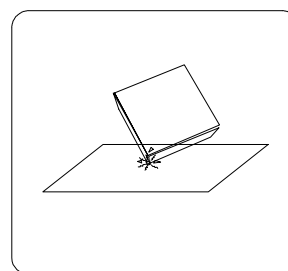

8.Prevent object collision and damage

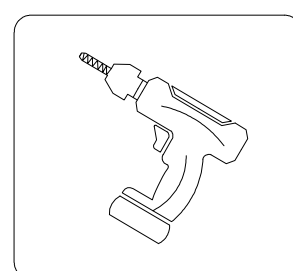

9.Use an electric screwdriver for installation, please be careful not to set the speed too high.

Problems You May Encounter

PART	PROBLEM	SOLUTION
Whole Product	Parts are missing, defective or having wrong parts in package.	You can contact us and we will get back to you within 24 hours
	Having issue(s) while reading the instruction or completing the assembly.	Feel free to contact us and we will get back to you within 24 hours.
	Encountering non-human caused damage during usage.	If the product is damaged due to non-human causes, please keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution.
Product Surface	Board Surface is broken, scratched or lack of some screw holes.	Feel free to contact us and we will get back to you within 24 hours.
	The screw holes on the wooden board and other wooden boards are not aligned.	1.Please tighten the screws on the board by 70 %, do not tighten completely. 2. Adjust the wooden board and board. Until the holes are arranged neatly, then tighten all screws
	Uneven countertop	Please loosen the fixing screws to 50% or 70%, align the components, and then tighten all screws.
Parts	Metal accessories are damaged, rusted, bent, and broken.	Feel free to contact us and we will get back to you within 24 hours.
	unstable after being assembled.	1.Check if the screws are tightened. 2.Read throughout the manual, check if there are any parts installed incorrectly or some parts are missed to be installed. 3.If the problem still can't be solved, please feel free to contact us.
	Encountering non-human caused damage during usage.	If the product is damaged due to non-human causes, please keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution.

DEAR CUSTOMER,

Caution:


















1. Please read all instructions before assembly and check the carton for any parts that may have come loose during shipment. It is recommended to use two or more persons during the assembly process.
2. Please do not discard any packaging before you have checked all the parts and fittings are included.
3. Assemble this product on a flat and clean surface to avoid scratching.
4. Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other !
















Mobile phone control steps:

1. Connect LED Lamp and RF RGB Controller.
2. Plug in the Adaptor Power supply.
3. Scan the RF RGB Controller QR code on the controller and download the software Lotus Lantern.
4. Turn on the Bluetooth function of the mobile phone and search for Bluetooth pairing "Trinoes".
5. Open the "Lotus Lantern" APP and switch colors change.
Click the music switch to realize the skip mode of different LED lights.
Press the timing switch to realize the automatic light off function, etc.




Part list

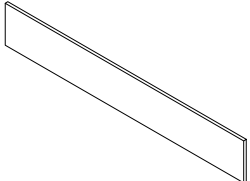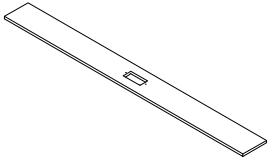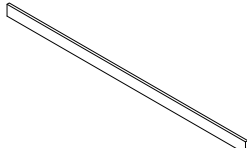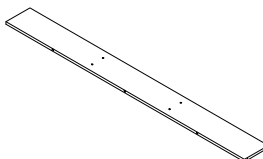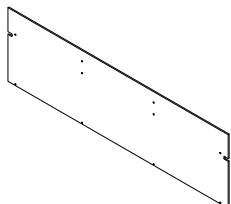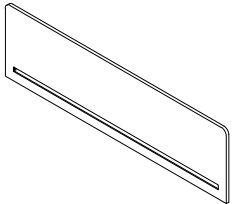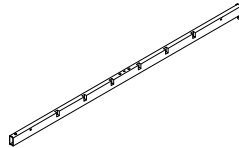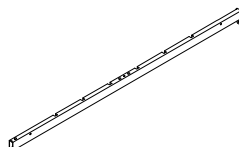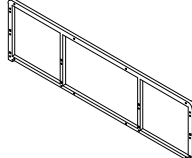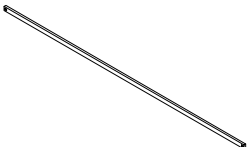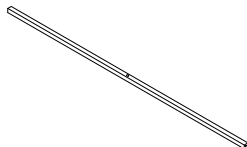1	 1PC	2	 1PC	3	 1PC	4	 1PC
5	 1PC	6	 1PC	7	 2PCS	8	 1PC
9	 1PC	10	 2PCS	11	 1PC	12	 1PC
13	 1PC	14	 1PC	15	 2PCS	16	 1PC
17	 1PC	18	 9PCS	19	 3PCS	20	 2PCS
21	 1PC	22	 1PC	23	 2PCS	24	 1PC

Part list

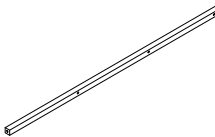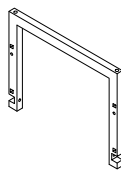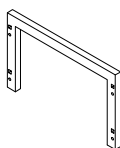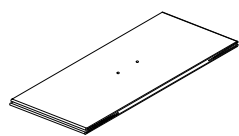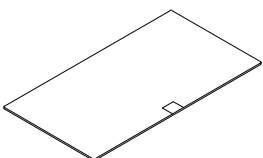
25  5PCS	26  5PCS	27  4PCS	28  2PCS
29  1PC	30  4PCS	31  4PCS	32  1PC
33  4PCS	34  1PC	35  5PCS	36  5PCS
37  4PCS	38  1PC	39  1PC	40  1PC
41  1PC	42  4PCS		

Hardware list

A  M6*35mm 3PCS	B  M6 3PCS	C  M5*40mm 20PCS	D  M6*33mm 18PCS	E  M6*28mm 49PCS
F  M6*55mm 4PCS	G  M8*55mm 6PCS	H  M8*35mm 10PCS	J  M4*8mm 10PCS	K  M3*15mm 2PCS
L  S5 1PC	M  S4 1PC	N  S3 1PC	P  PH2 1PC	

Note:


1. should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.

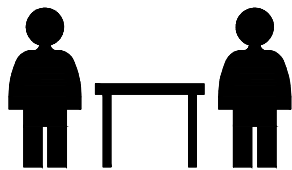


It needs at least two people to install.




Before starting the assembly, you must read the whole manual and follow the instructions

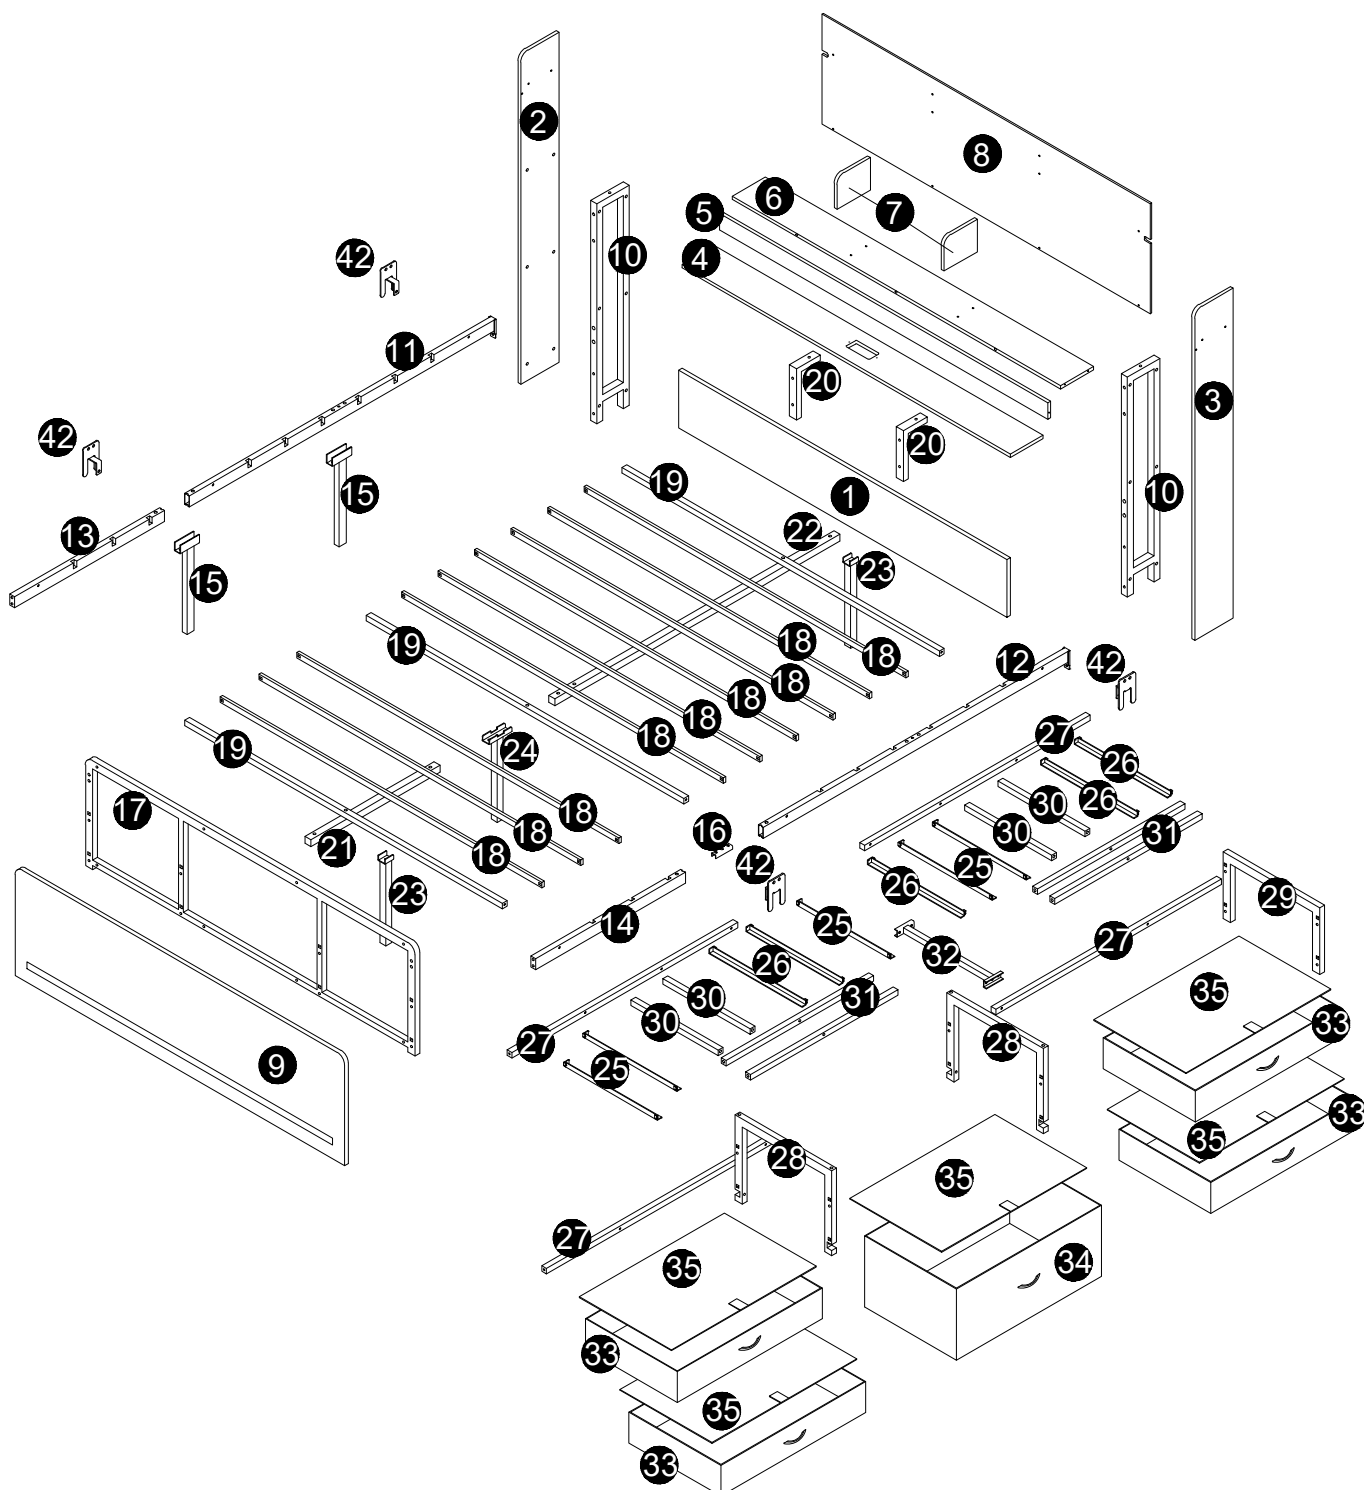

Step1			
A		M6x35mm	3pcs
P		PH2	

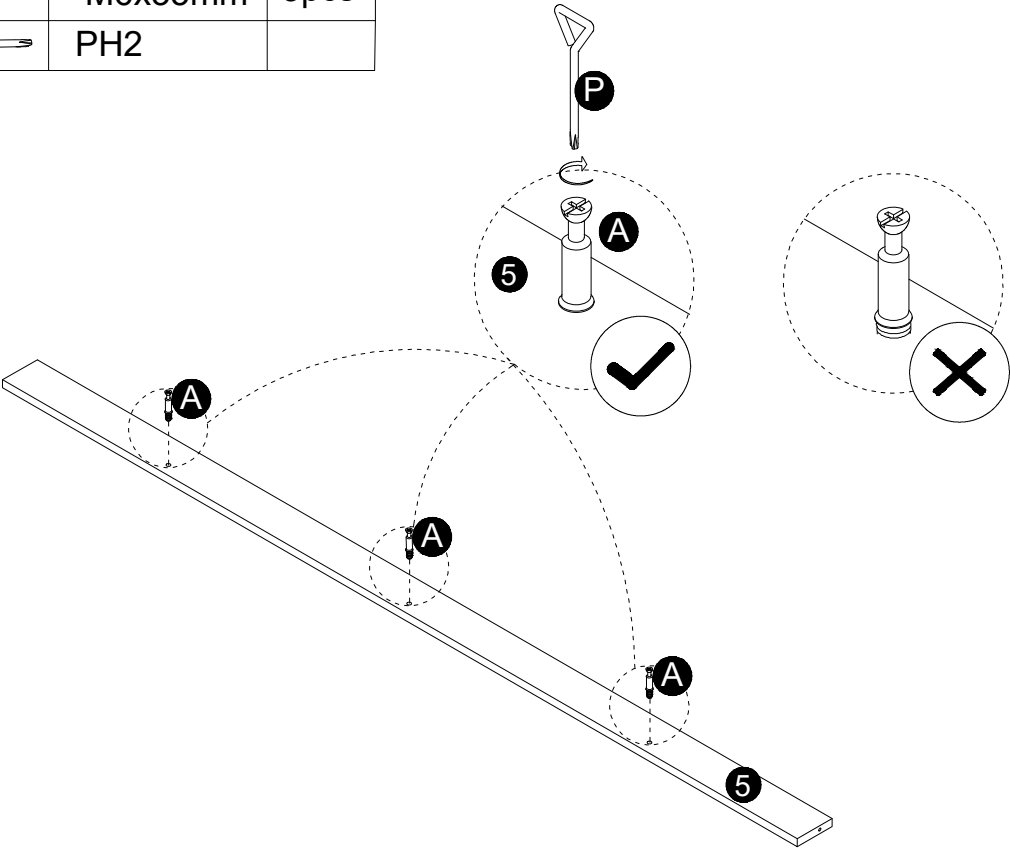


Step2			
B		M6	3pcs
P		PH2	

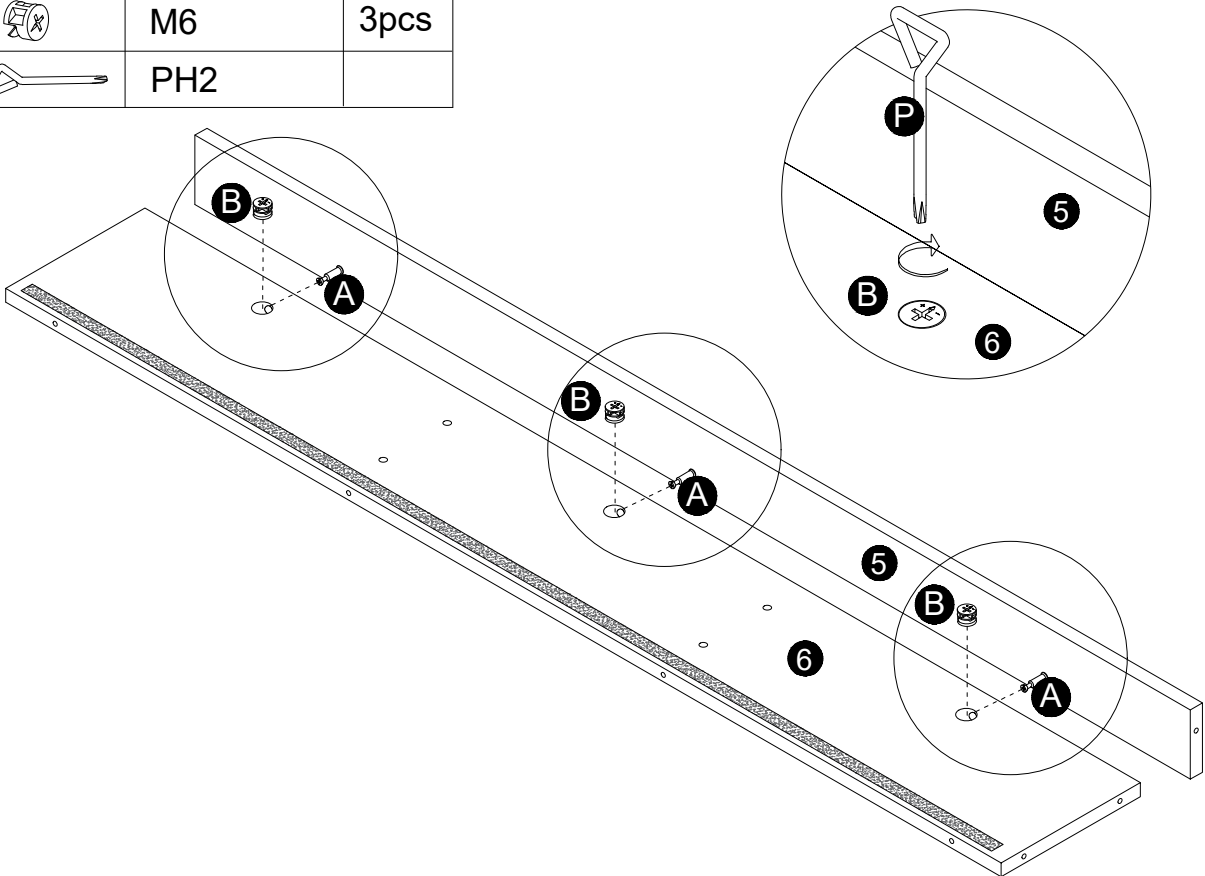


Step3

C		M5x40mm	4pcs
N		S3	

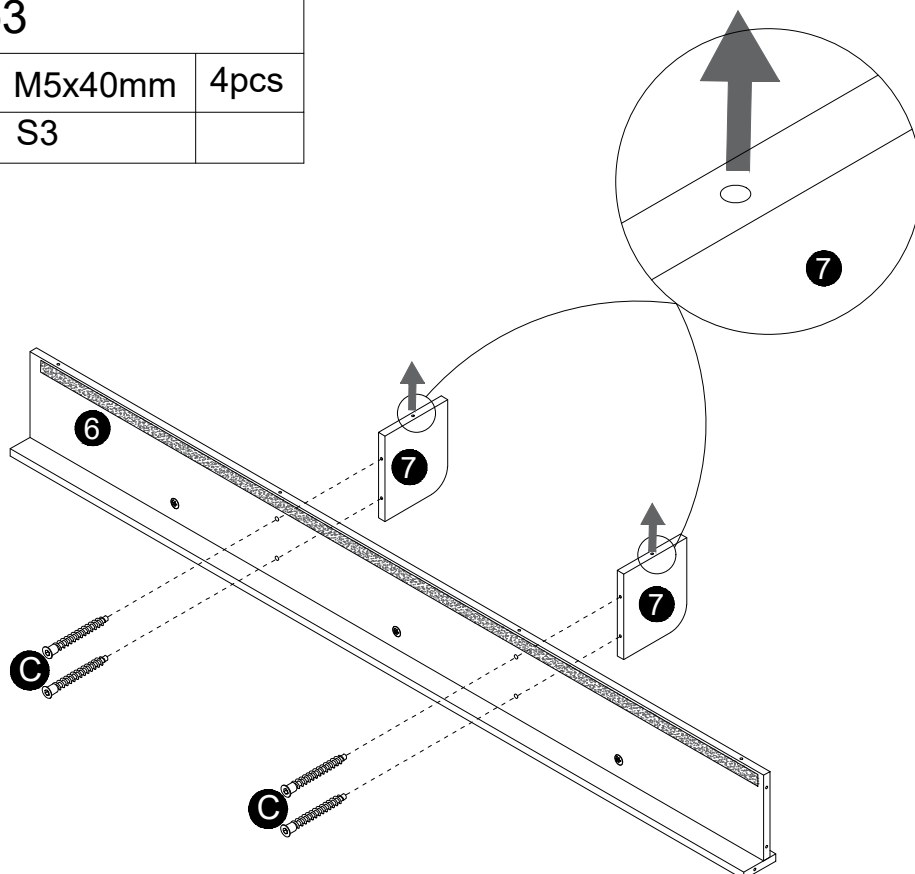

Step4


D		M6x33mm	2pcs
---	---	---------	------

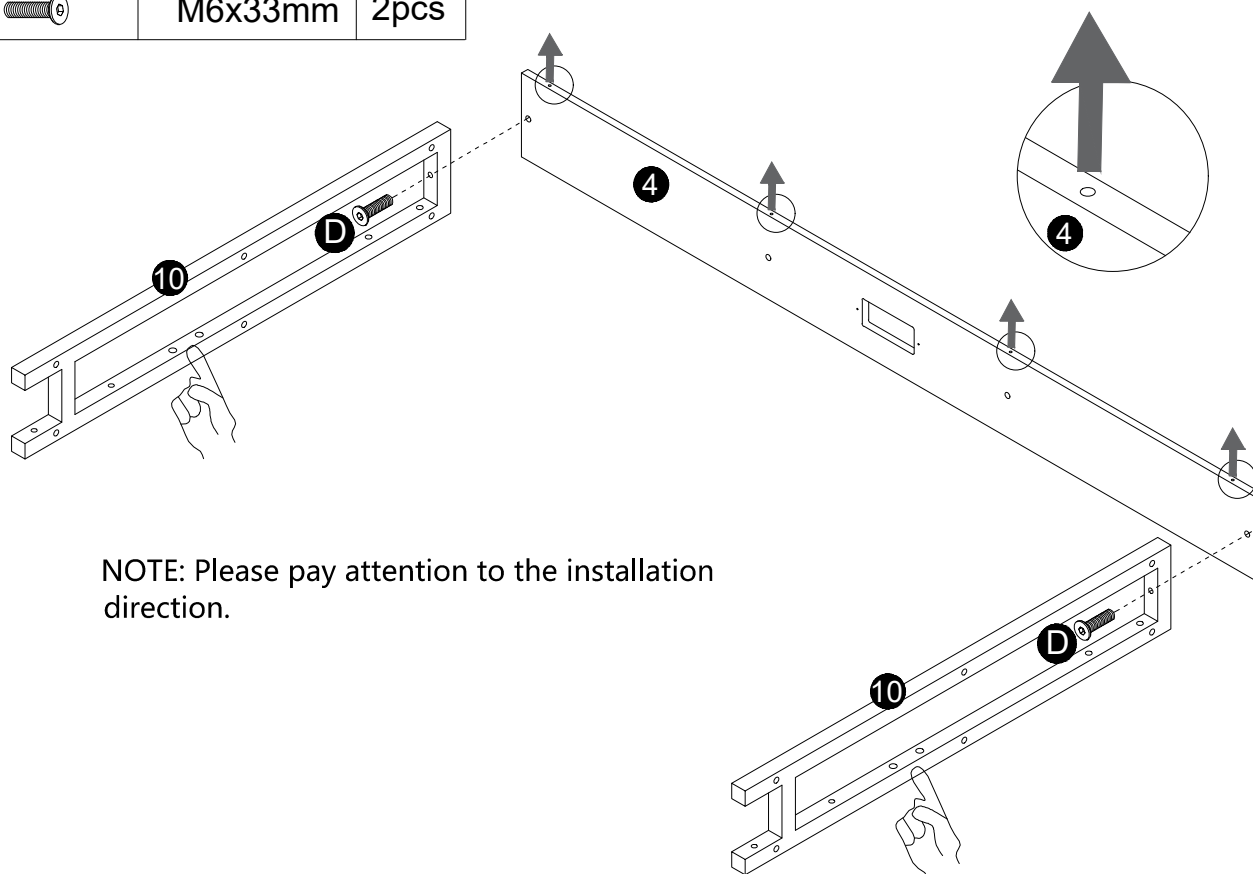

NOTE: Please pay attention to the installation direction.


Step5

D		M6x33mm	4pcs
E		M6x28mm	4pcs

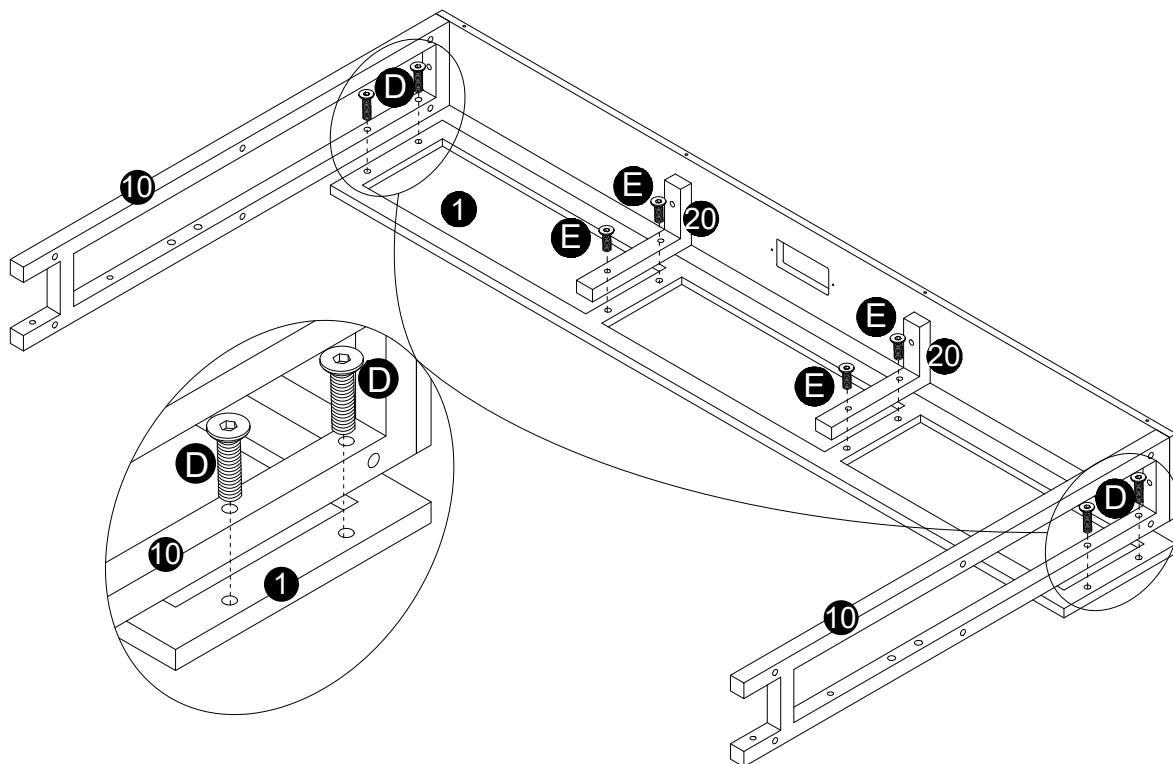


Step6

E		M6x28mm	2pcs
---	---	---------	------


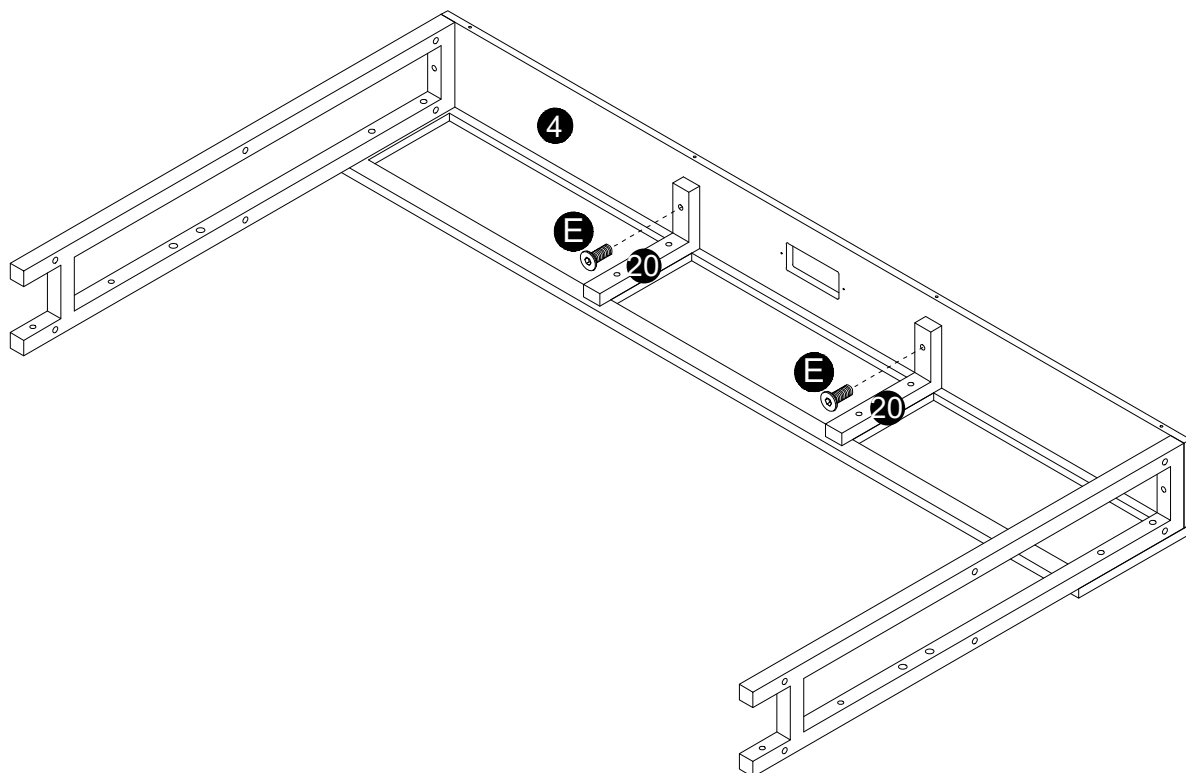


Step7


C		M5x40mm	6pcs
D		M6x33mm	12pcs

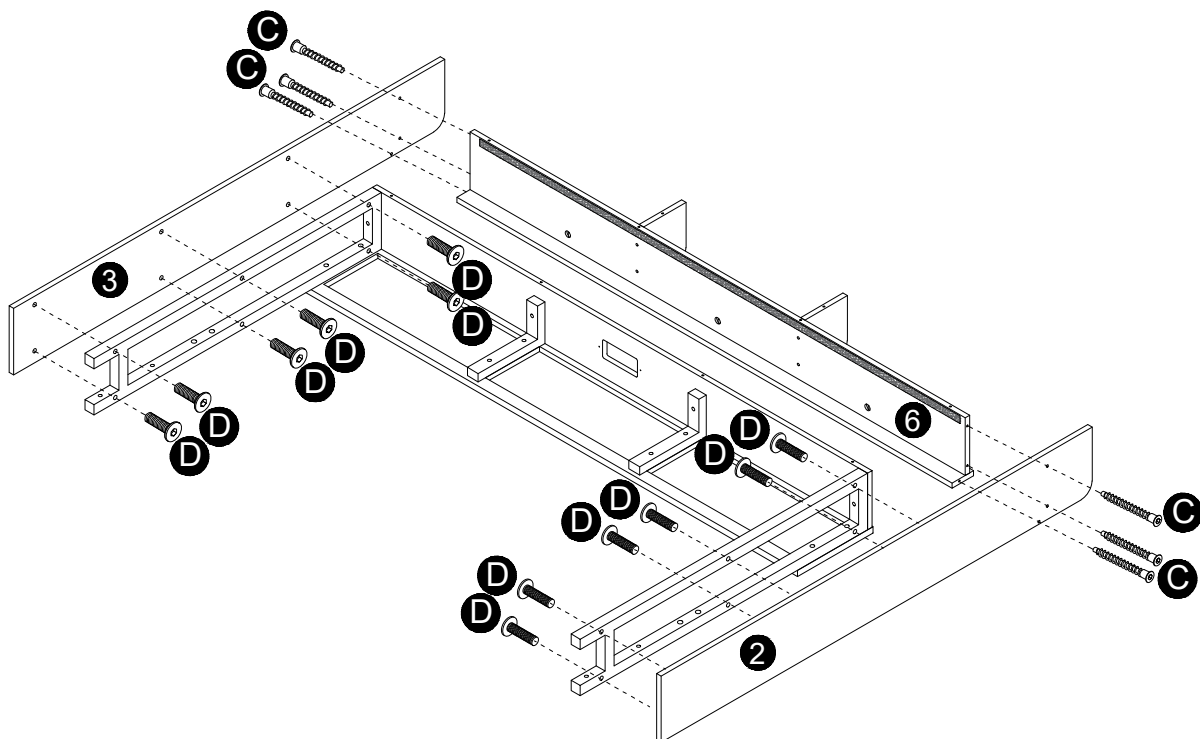


Step8

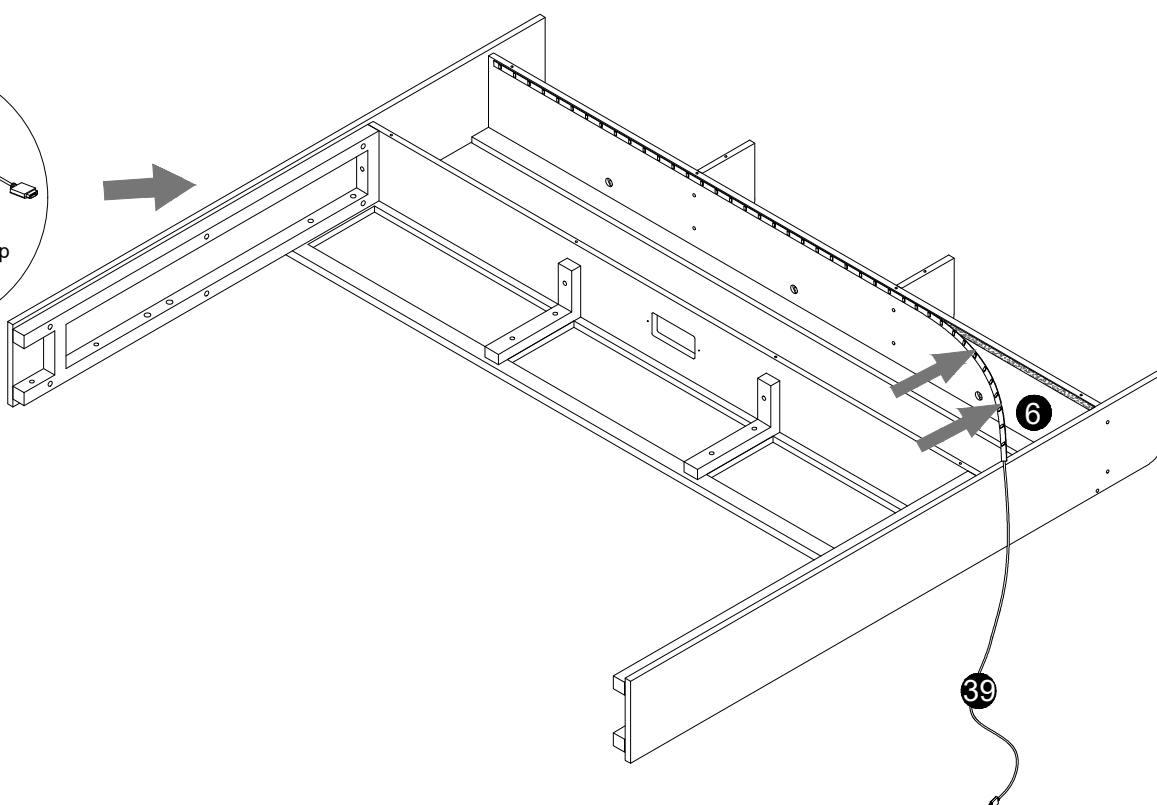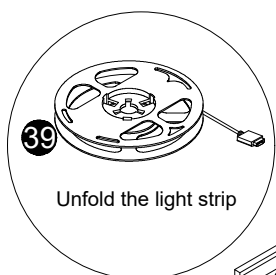


Step9

C		M5x40mm	10pcs
---	---	---------	-------

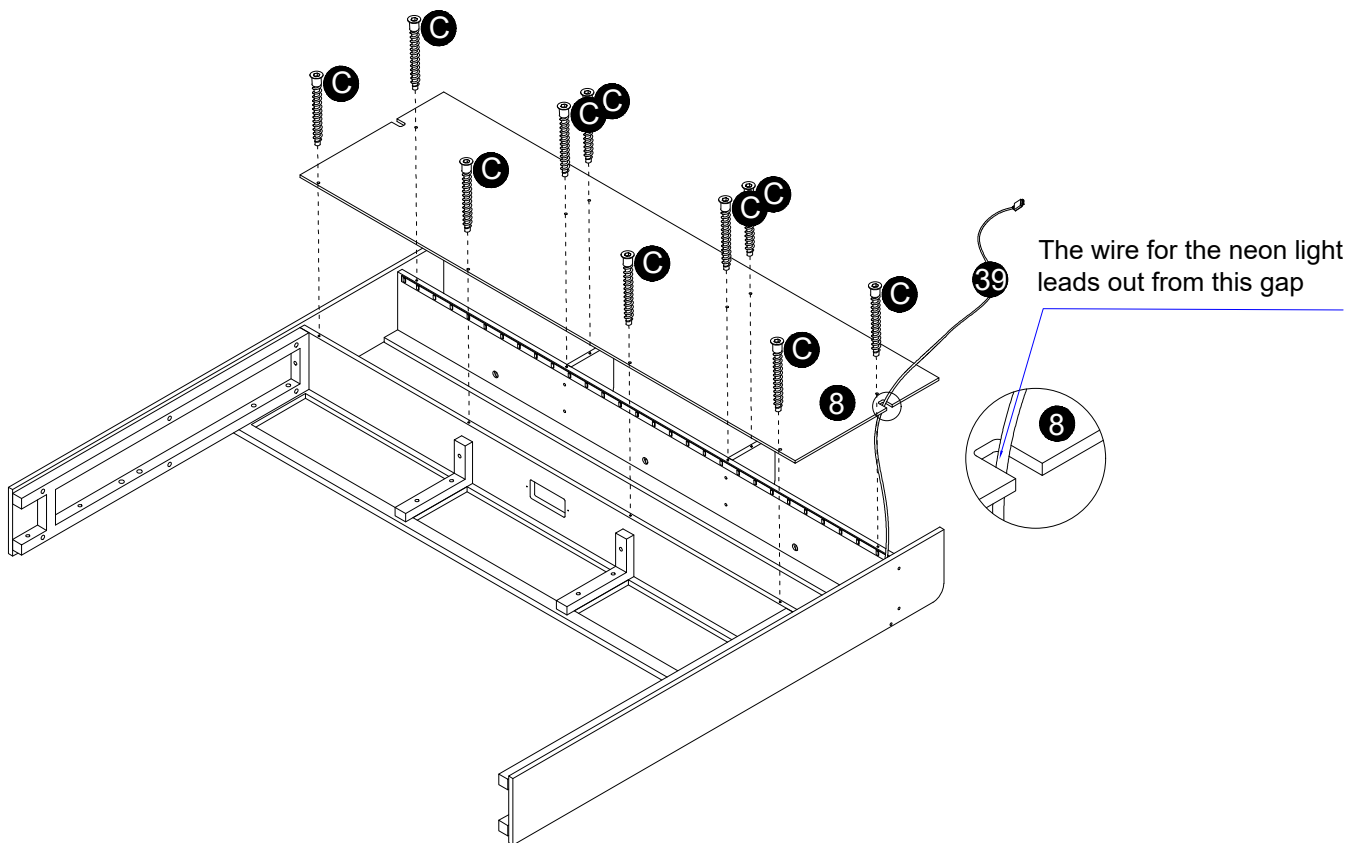

Step10

E		M6x28mm	2pcs
---	---	---------	------

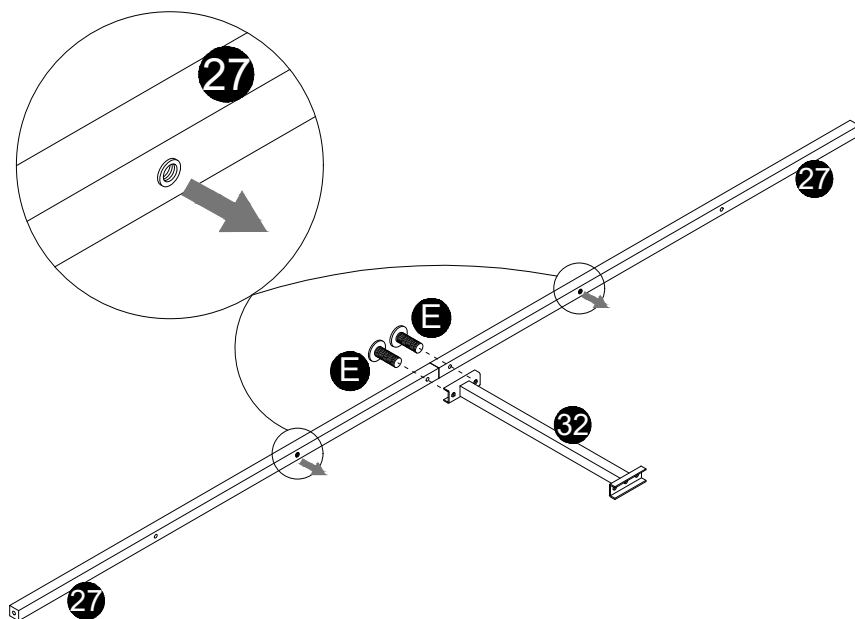


Step11

E



M6x28mm

4pcs

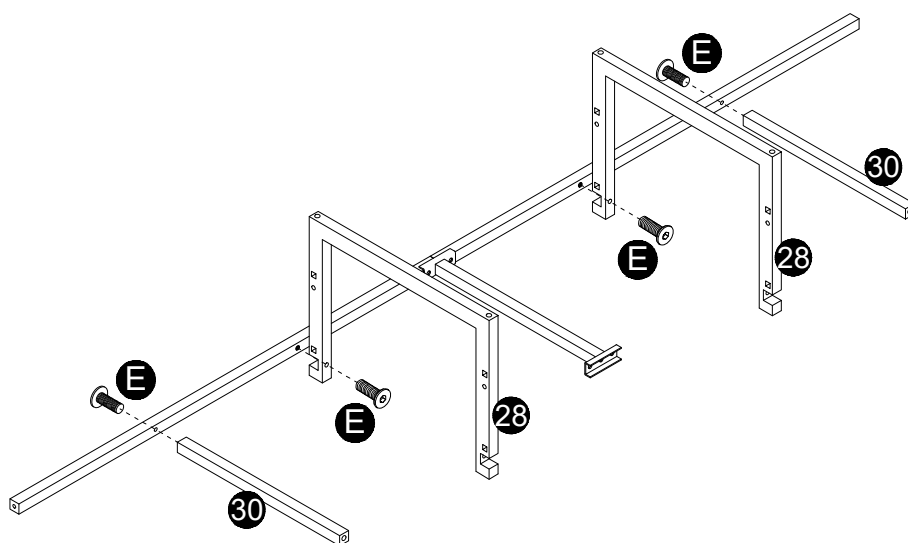


Step12

E



M6x28mm

6pcs

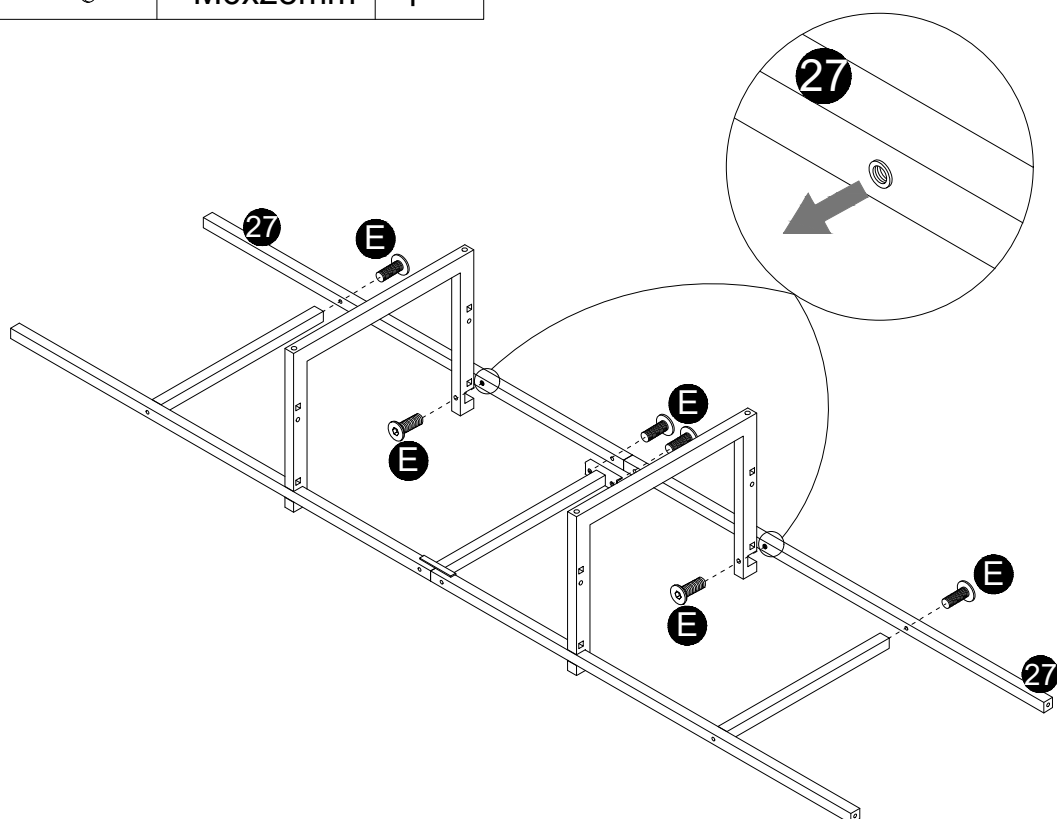


Step13

E



M6x28mm

4pcs

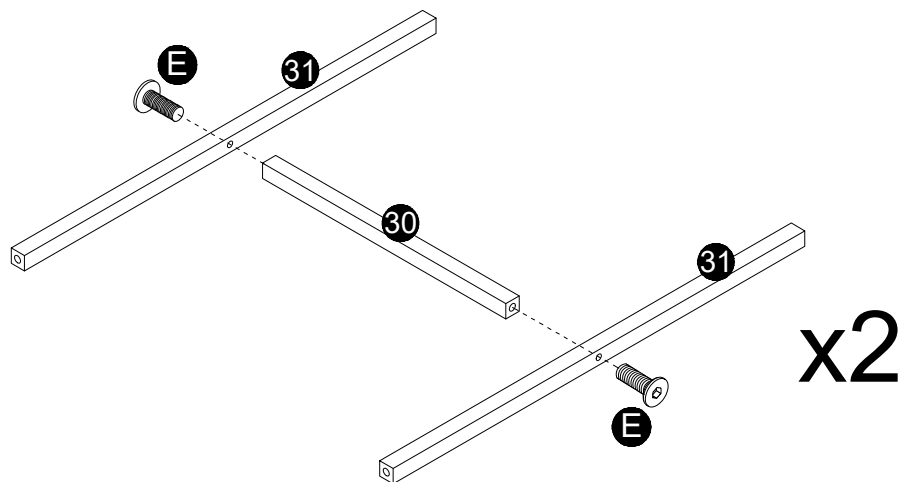


Step14

E




M6x28mm

4pcs

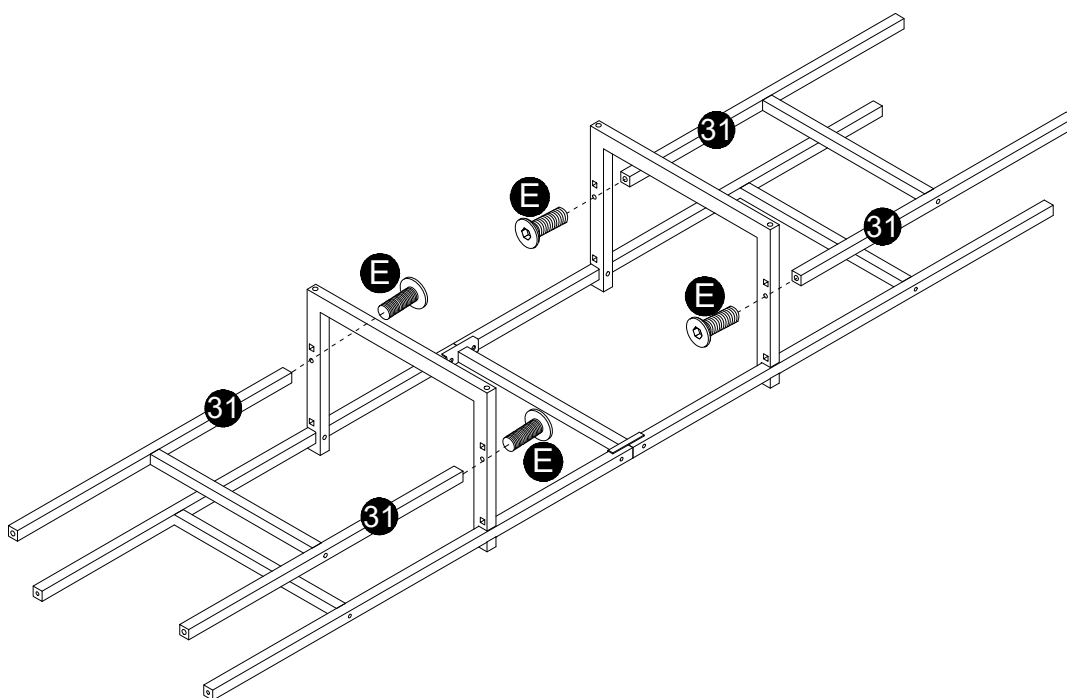


Step15

E		M6x28mm	2pcs
F		M6x55mm	2pcs

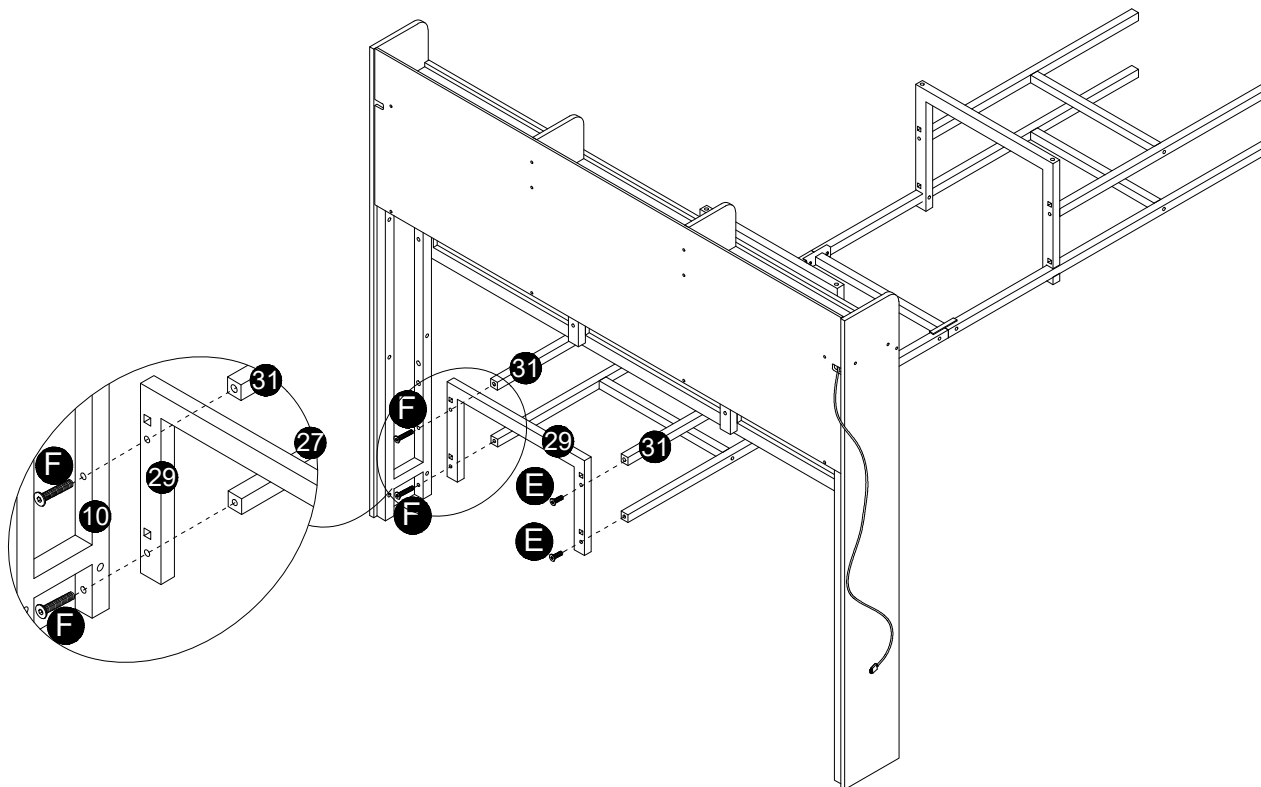

Step16

E		M6x28mm	2pcs
---	---	---------	------

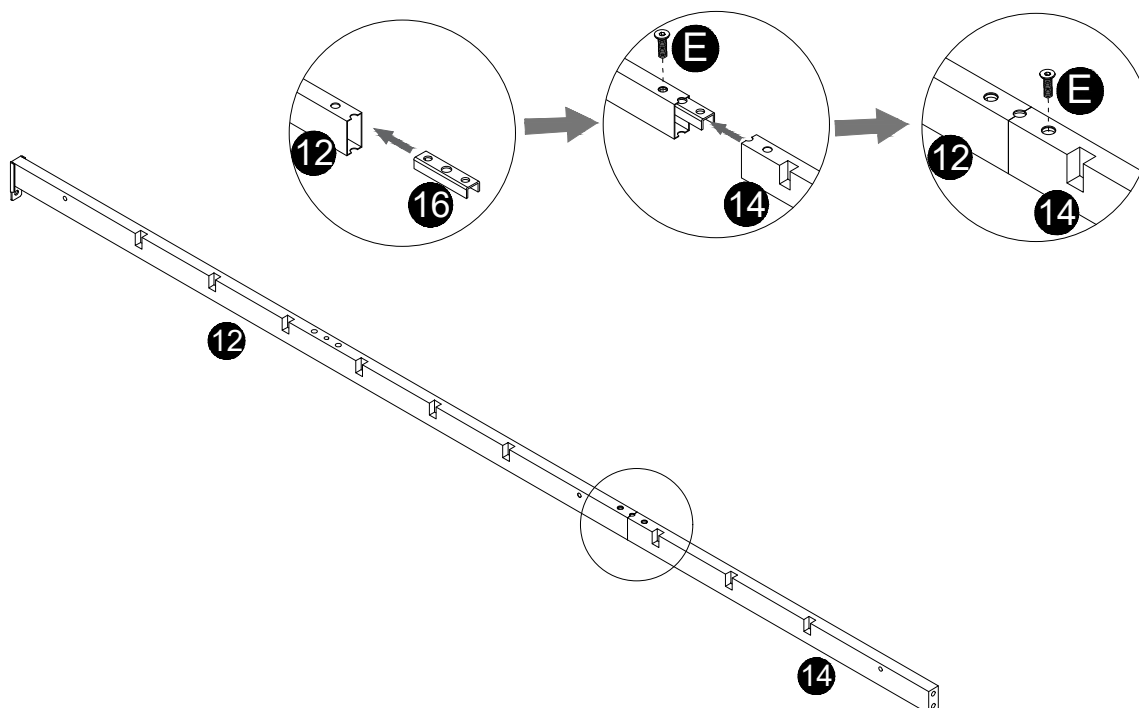


Step17

G



M8x55mm

4pcs

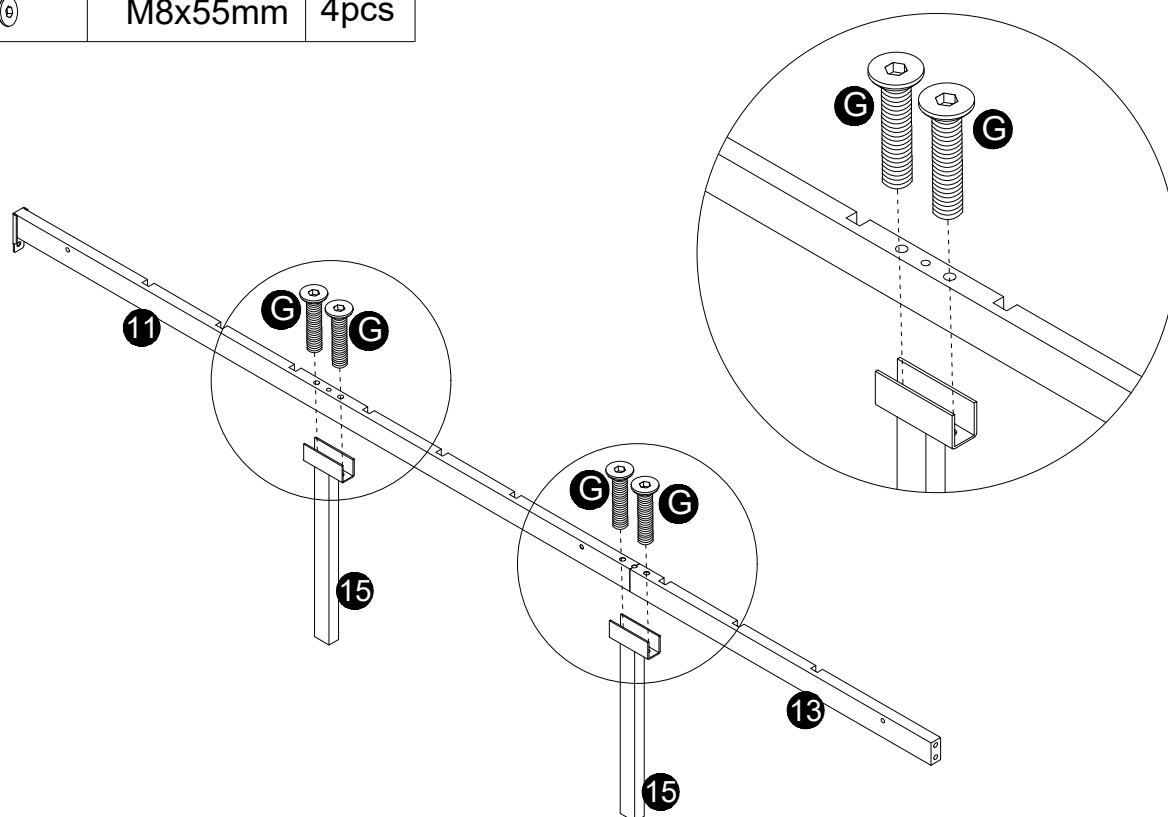


Step18

H



M8x35mm

4pcs

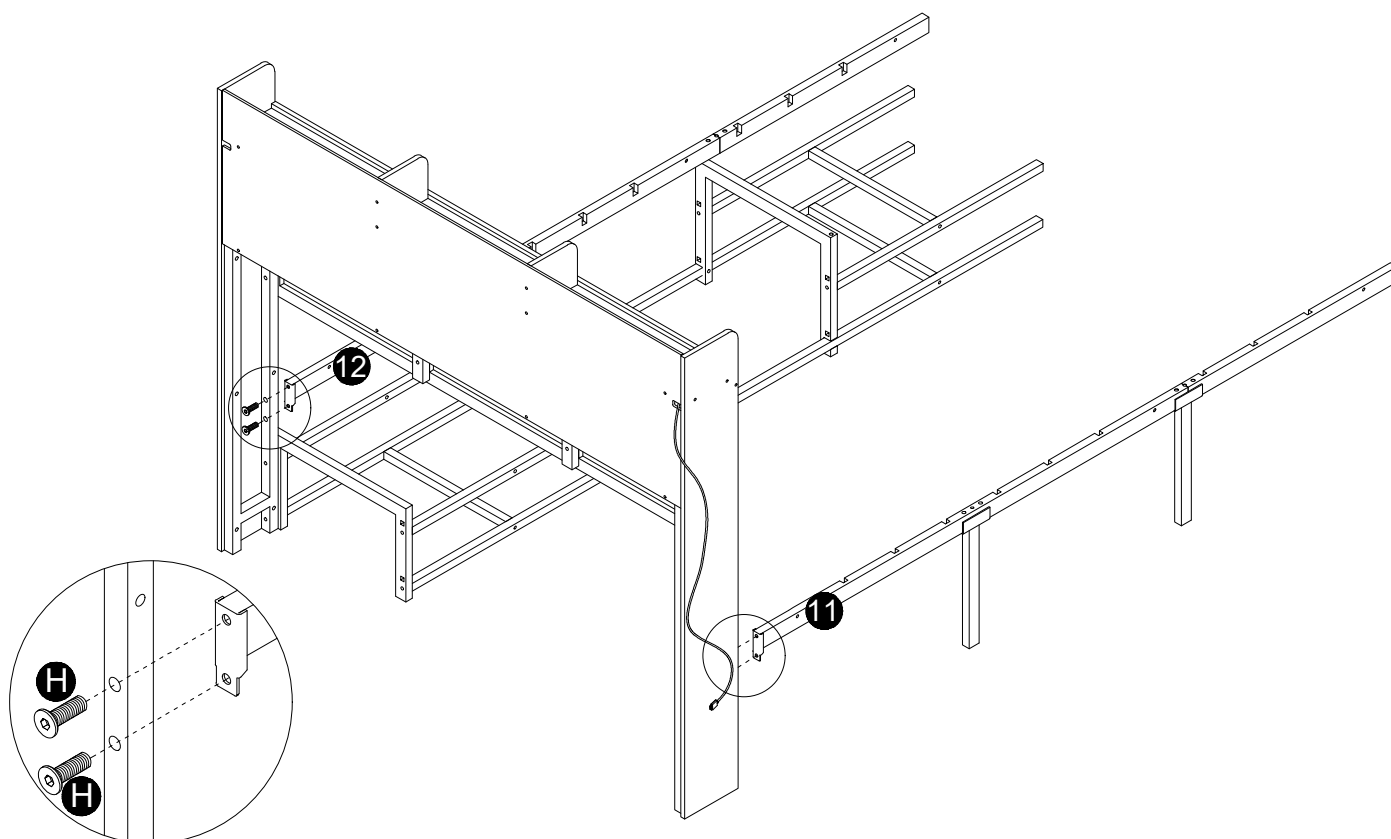


Step19

F



M6x55mm

2pcs

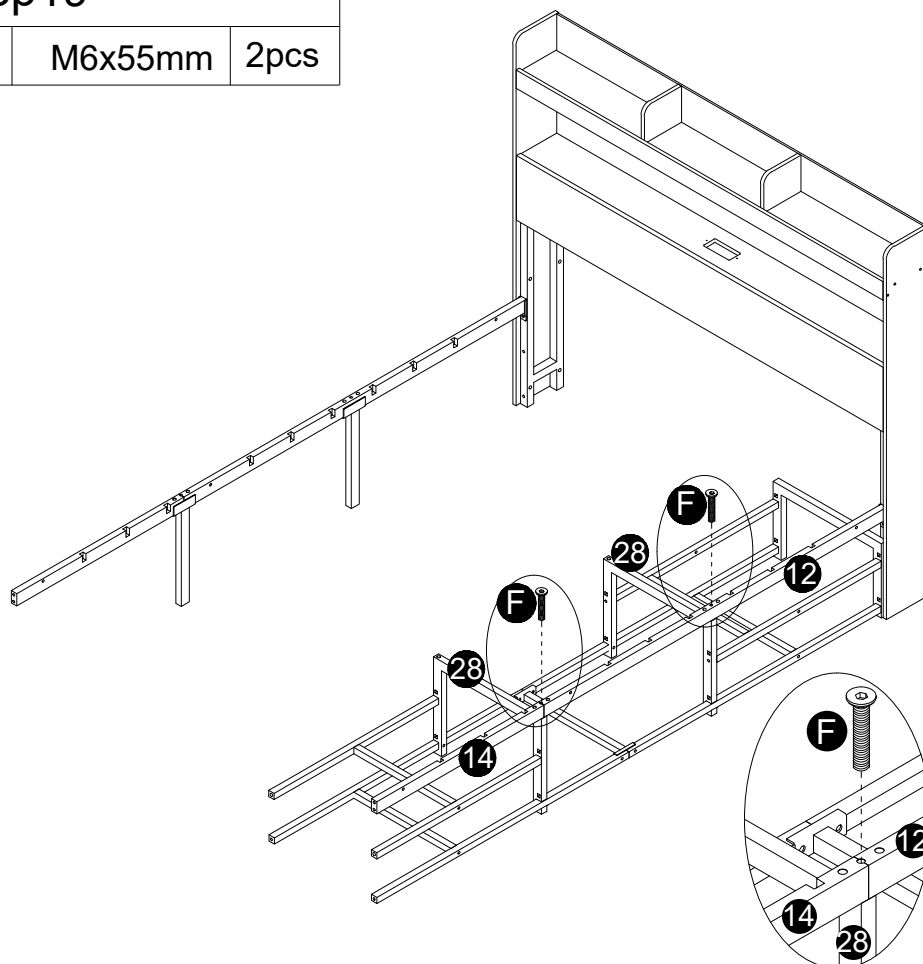

Step20

E



M6x28mm


4pcs

H



M8x35mm

4pcs

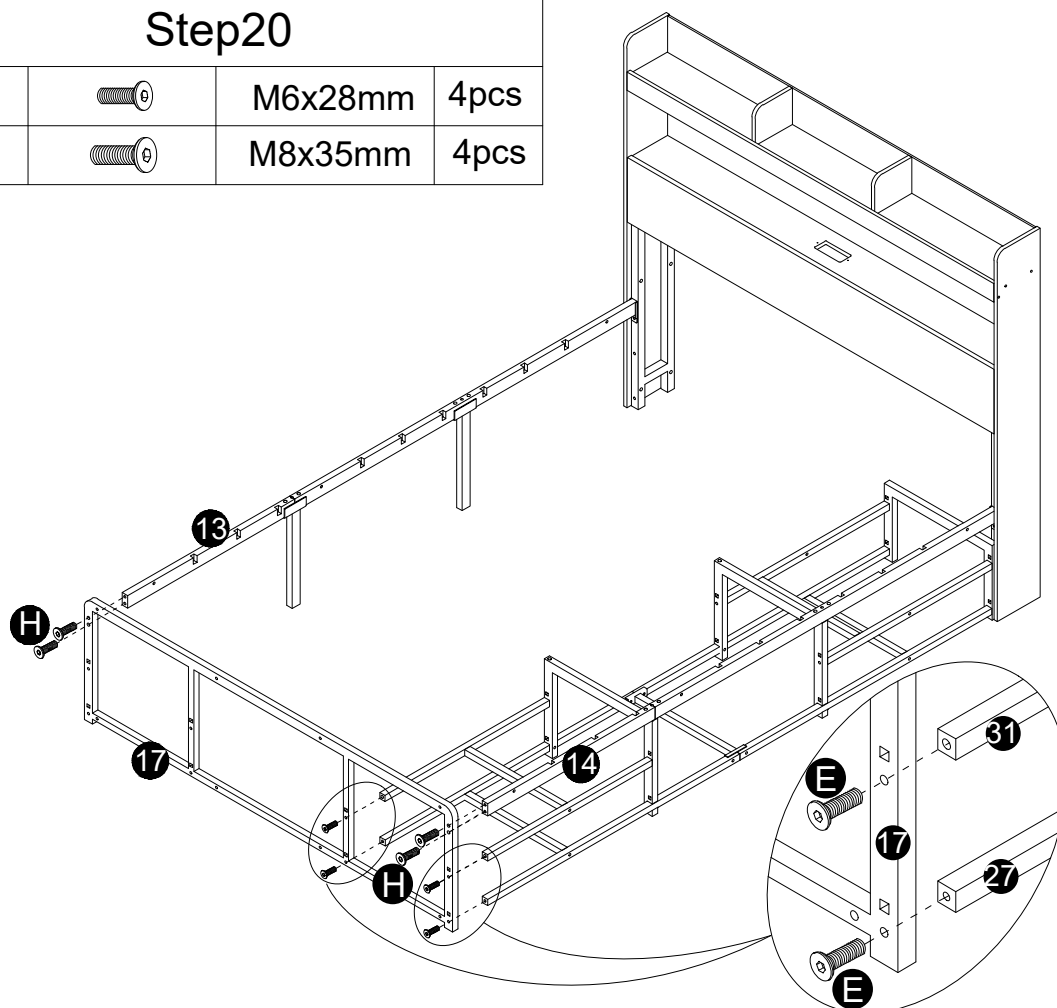


Step21

E




M6x28mm

8pcs

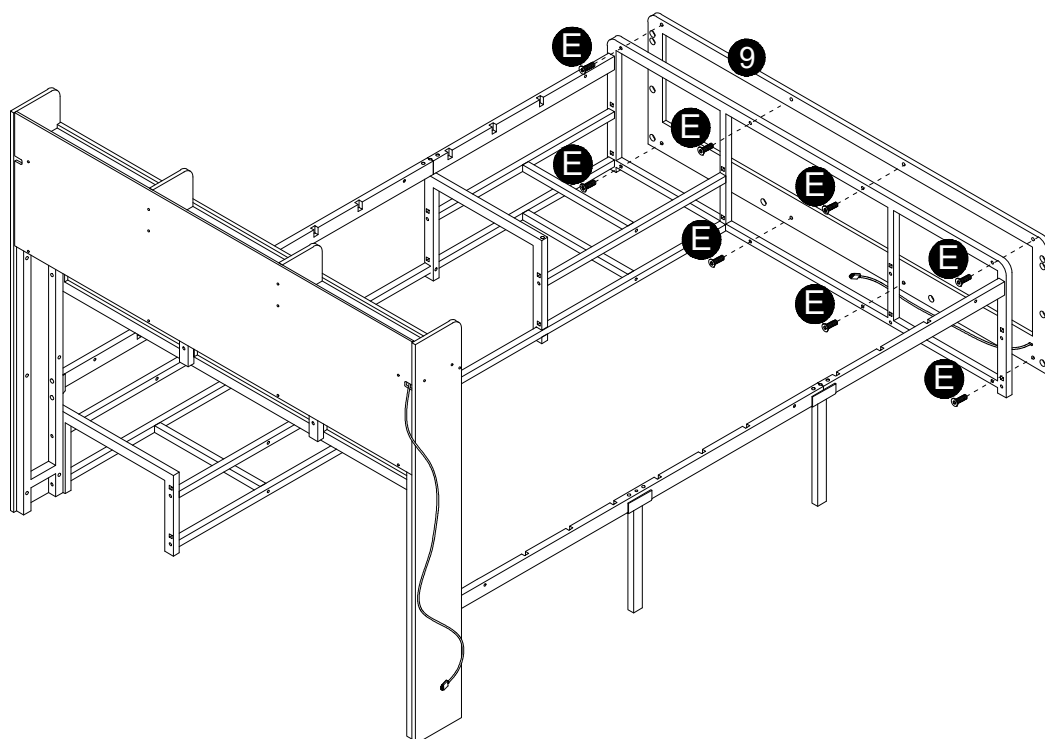

Step22

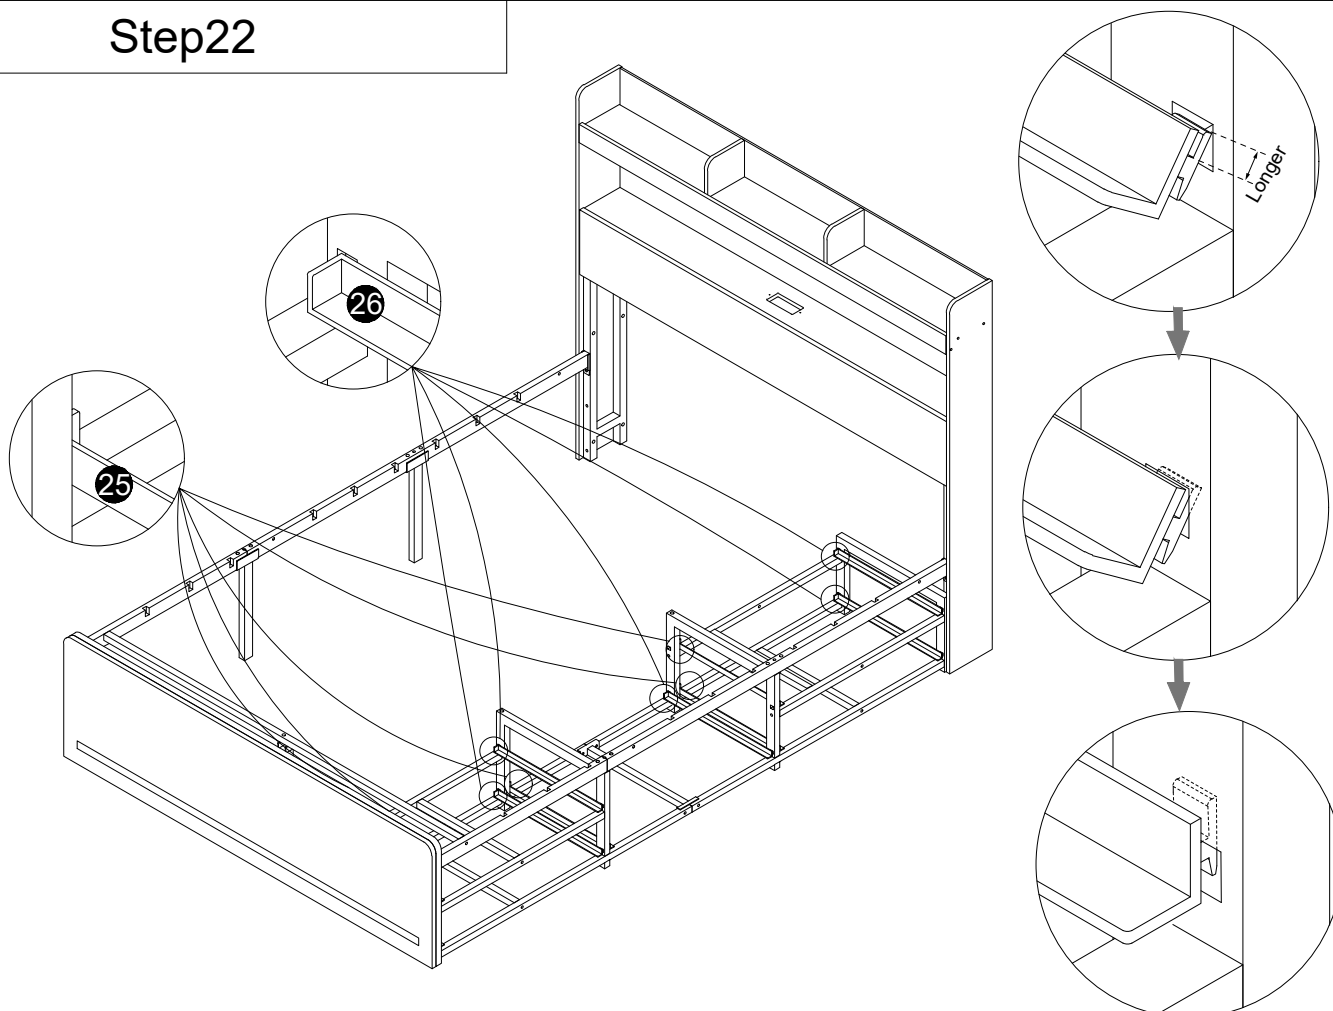


Step23

E



M6x28mm

6pcs

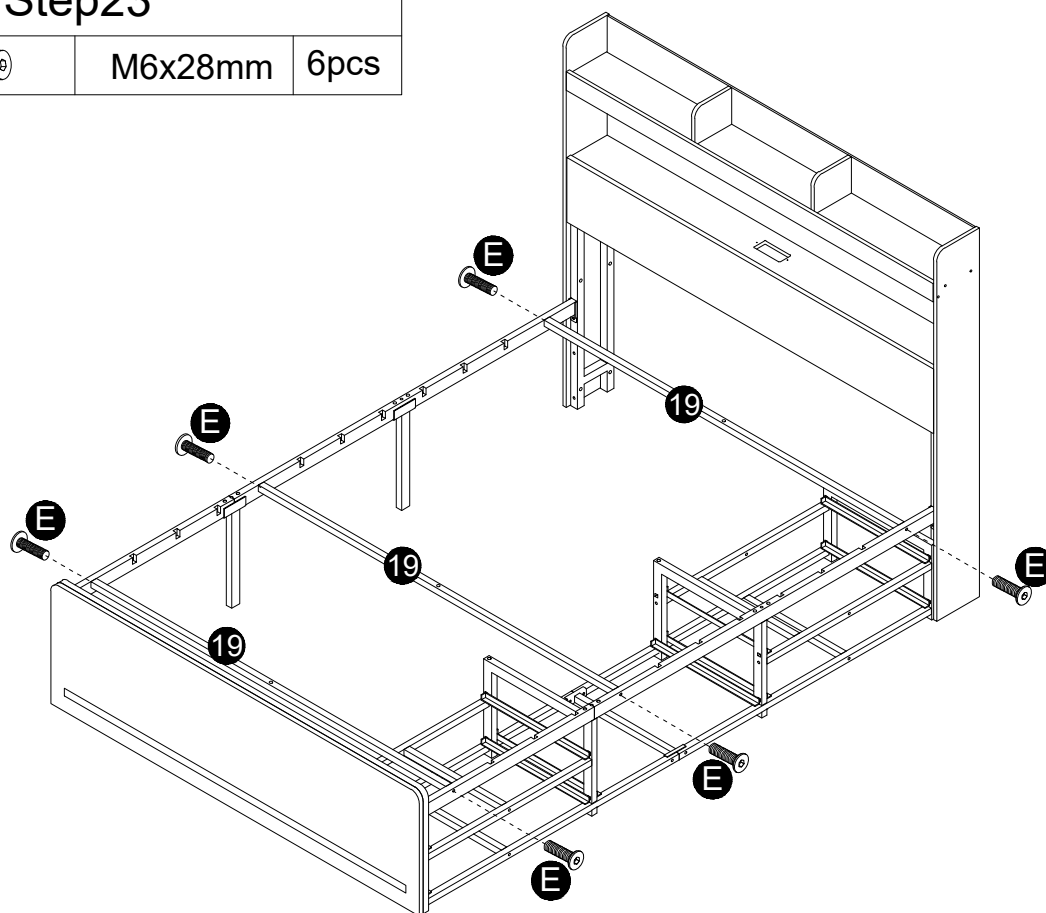


Step24

H



M8x35mm


2pcs

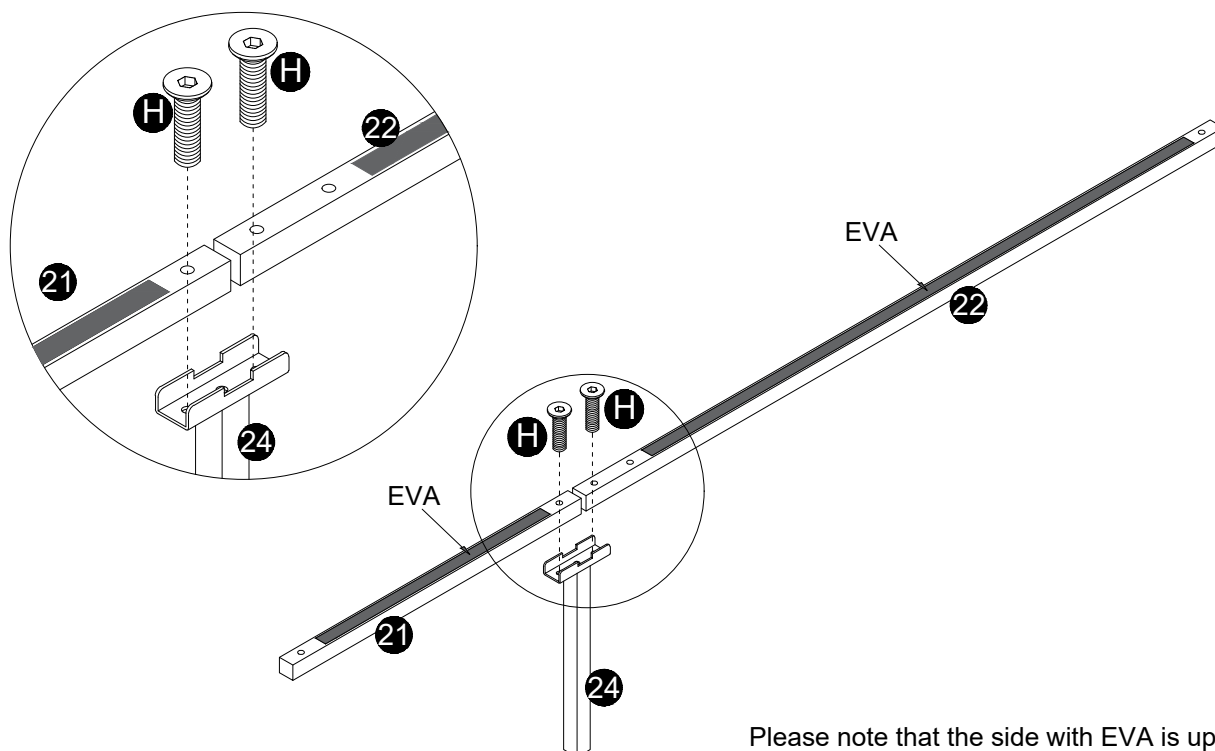

Please note that the side with EVA is upward during installation.


Step25

G		M8x55mm	2pcs
E		M6x28mm	1pc

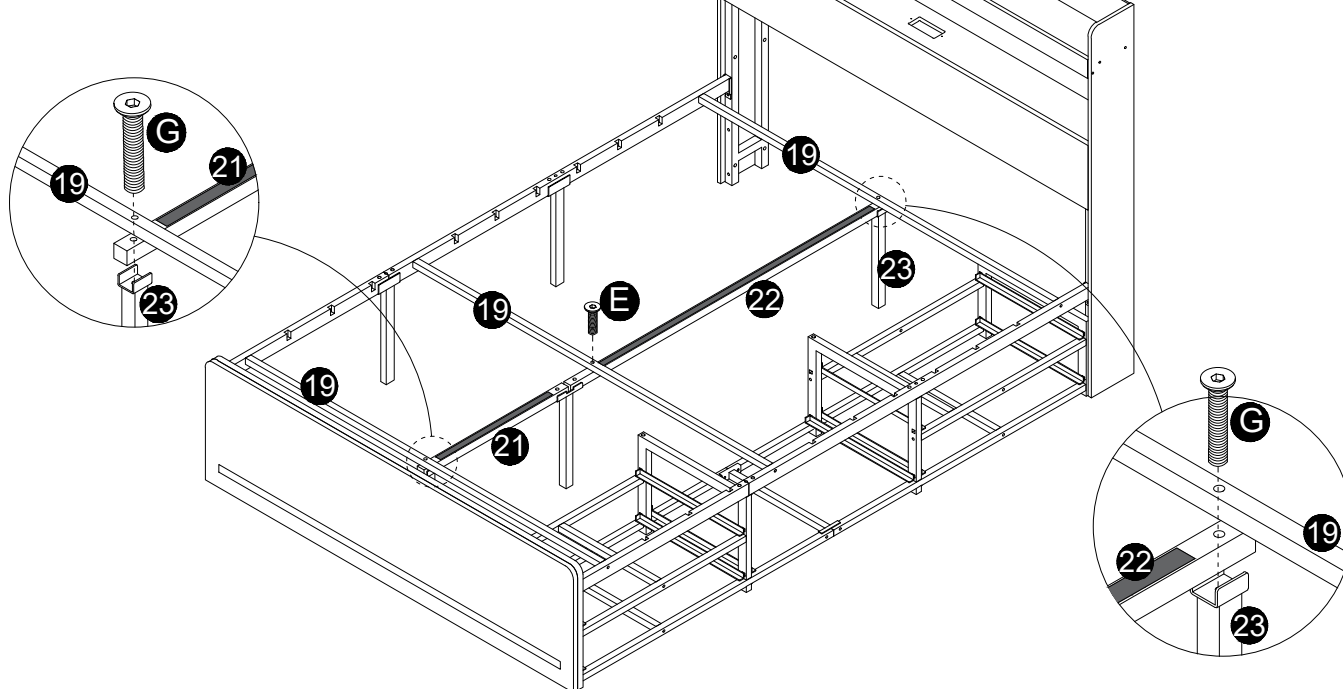


Step26


K		M3x15mm	2pcs
---	---	---------	------

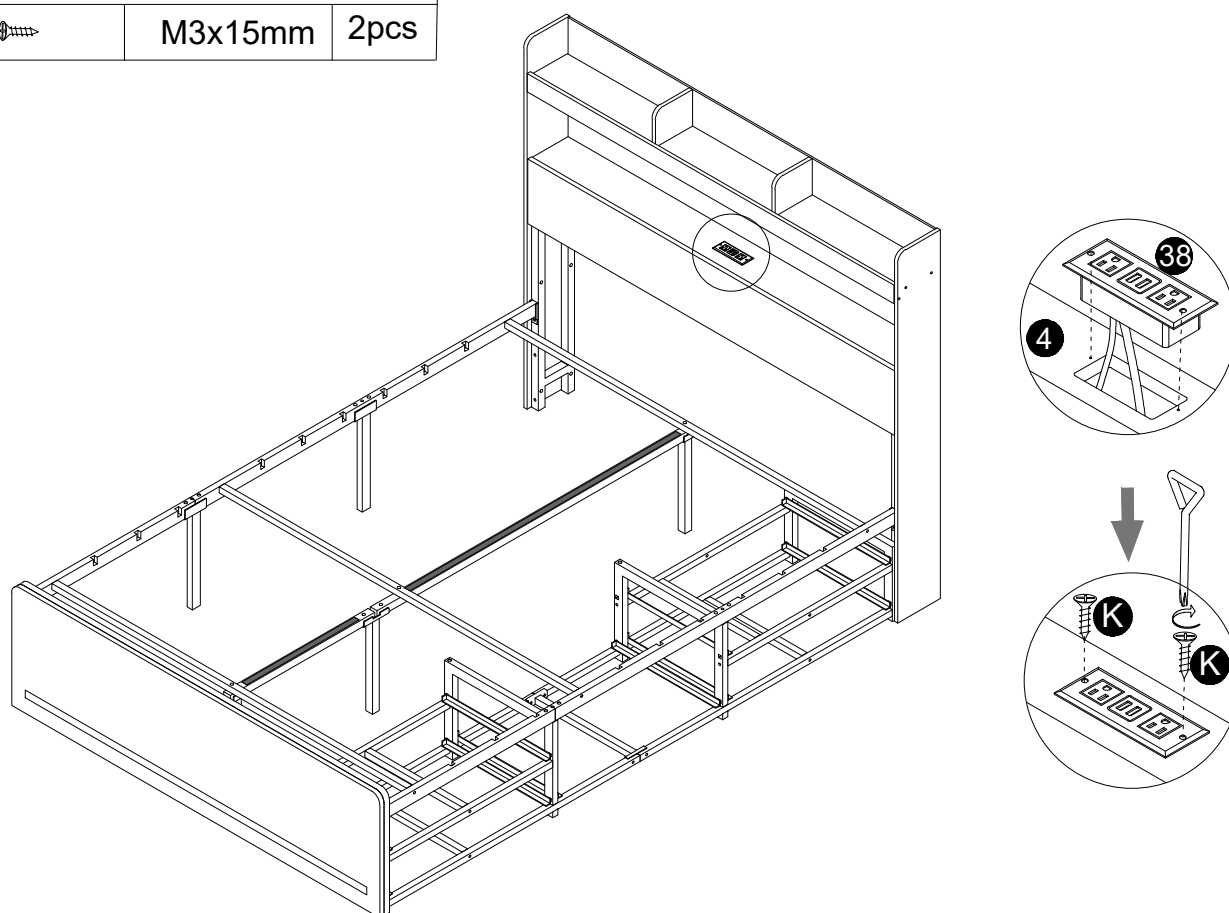

Step27

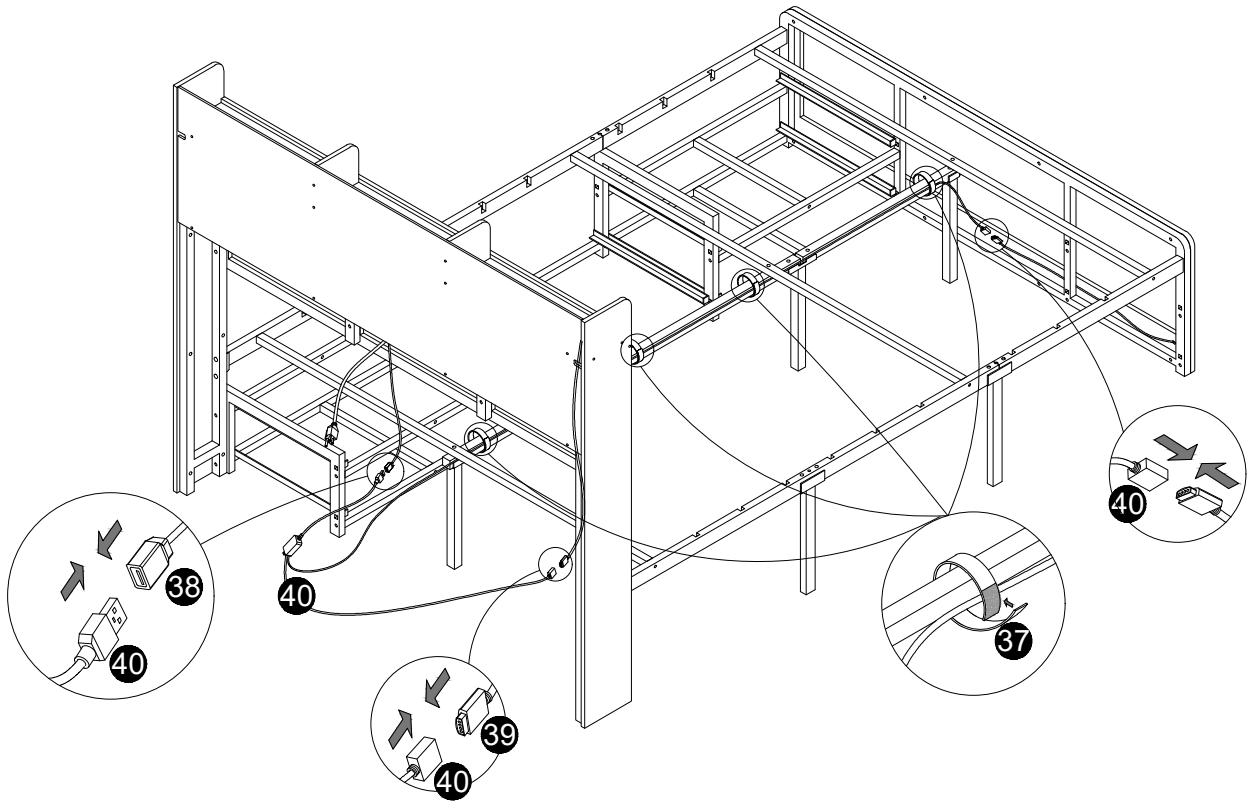

Step28

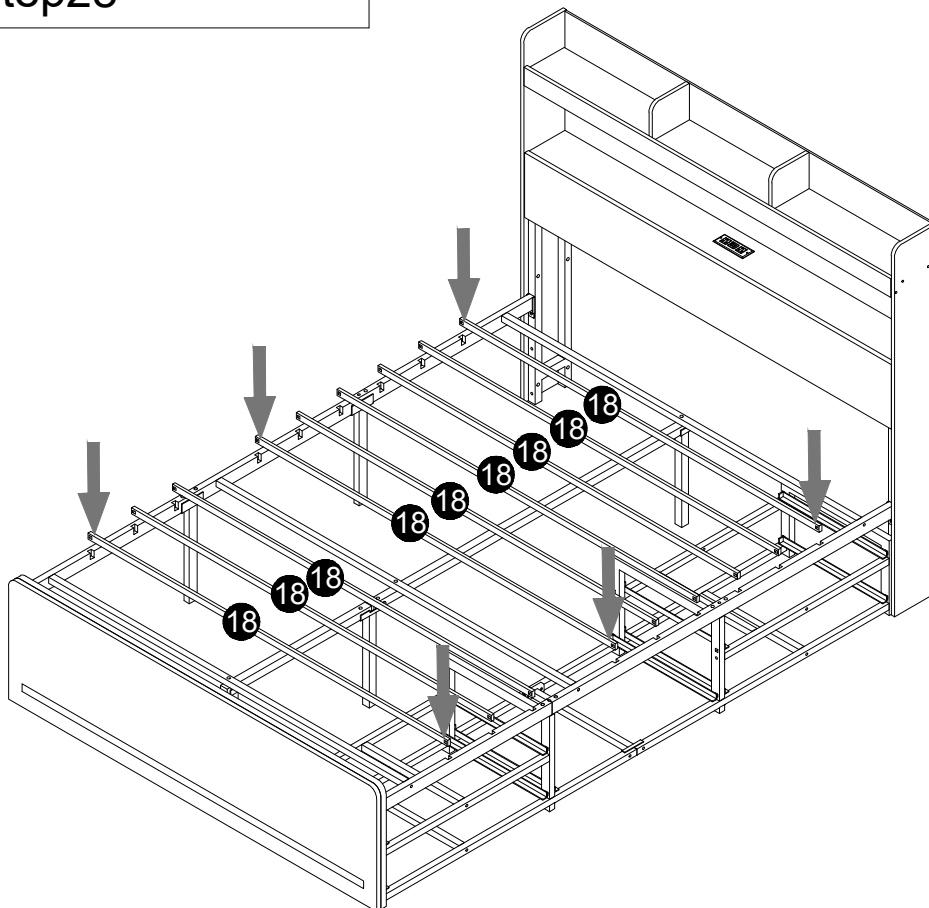


Step29

J




M4x8mm


8pcs

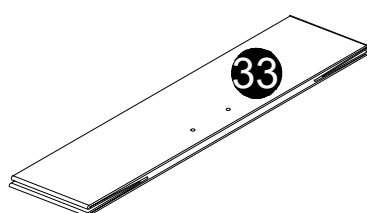


x4

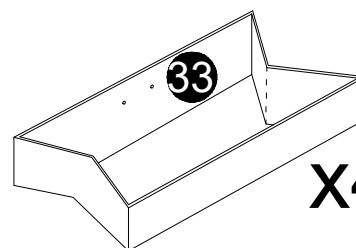

x4

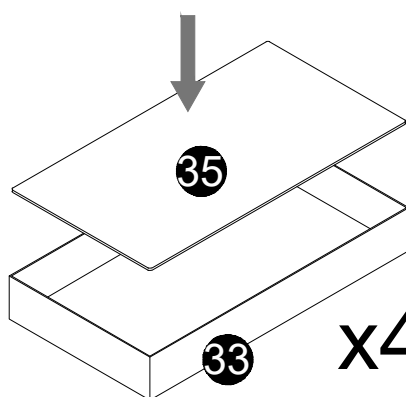

x4

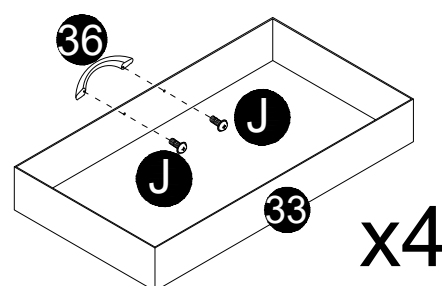

x4




Step30

J




M4x8mm

2pcs

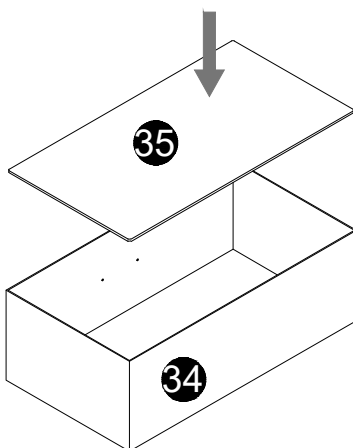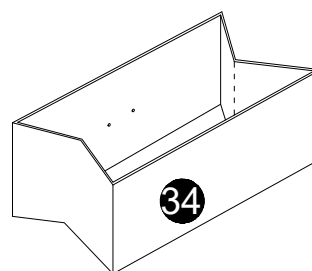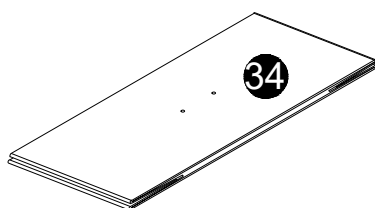


34

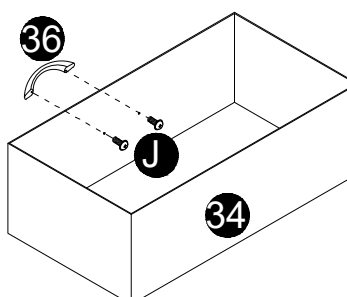


34

Step31

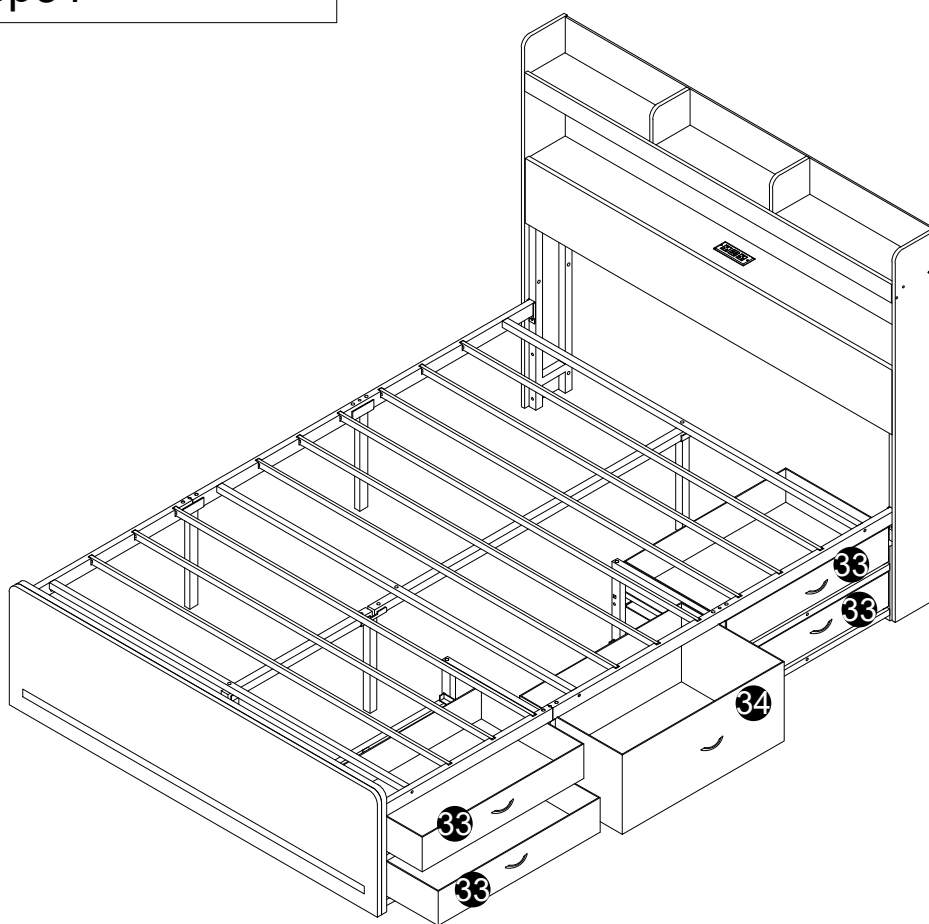


Step32

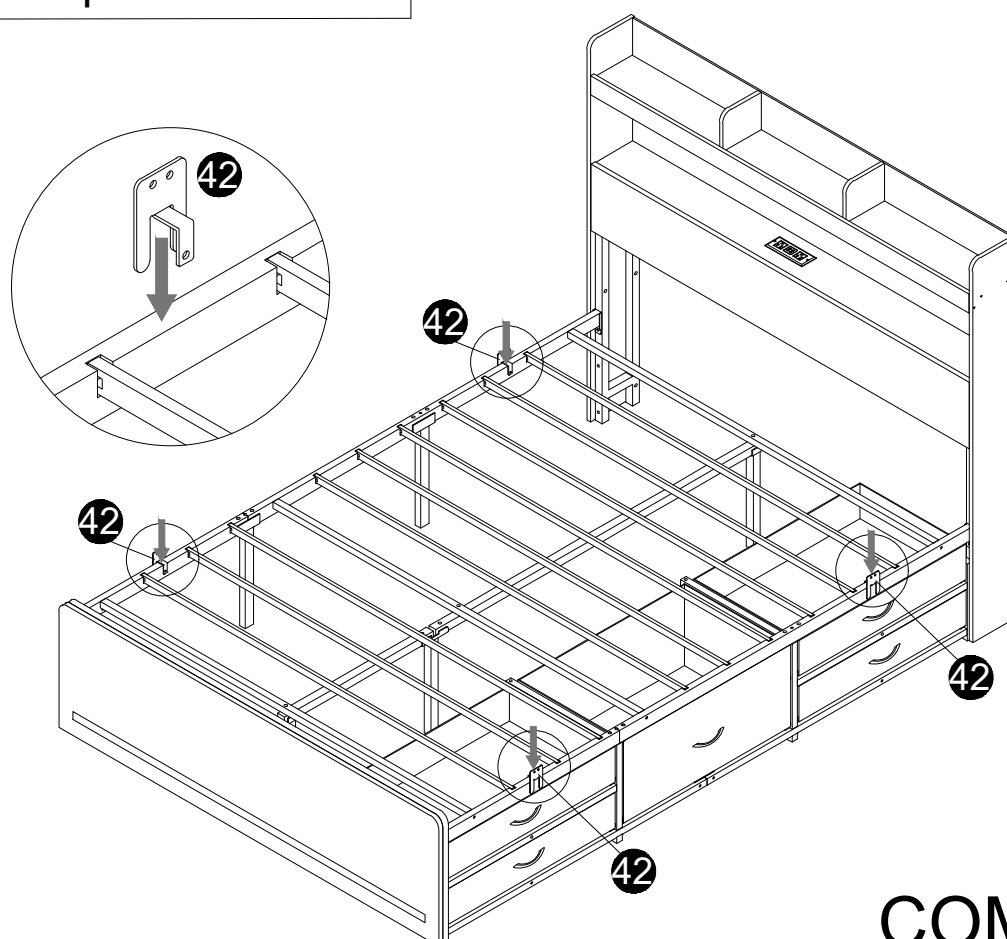


COMPLETE

Note:


1. should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.

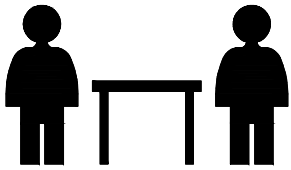


It needs at least two people to install.

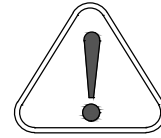


Before starting the assembly, you must read the whole manual and follow the instructions

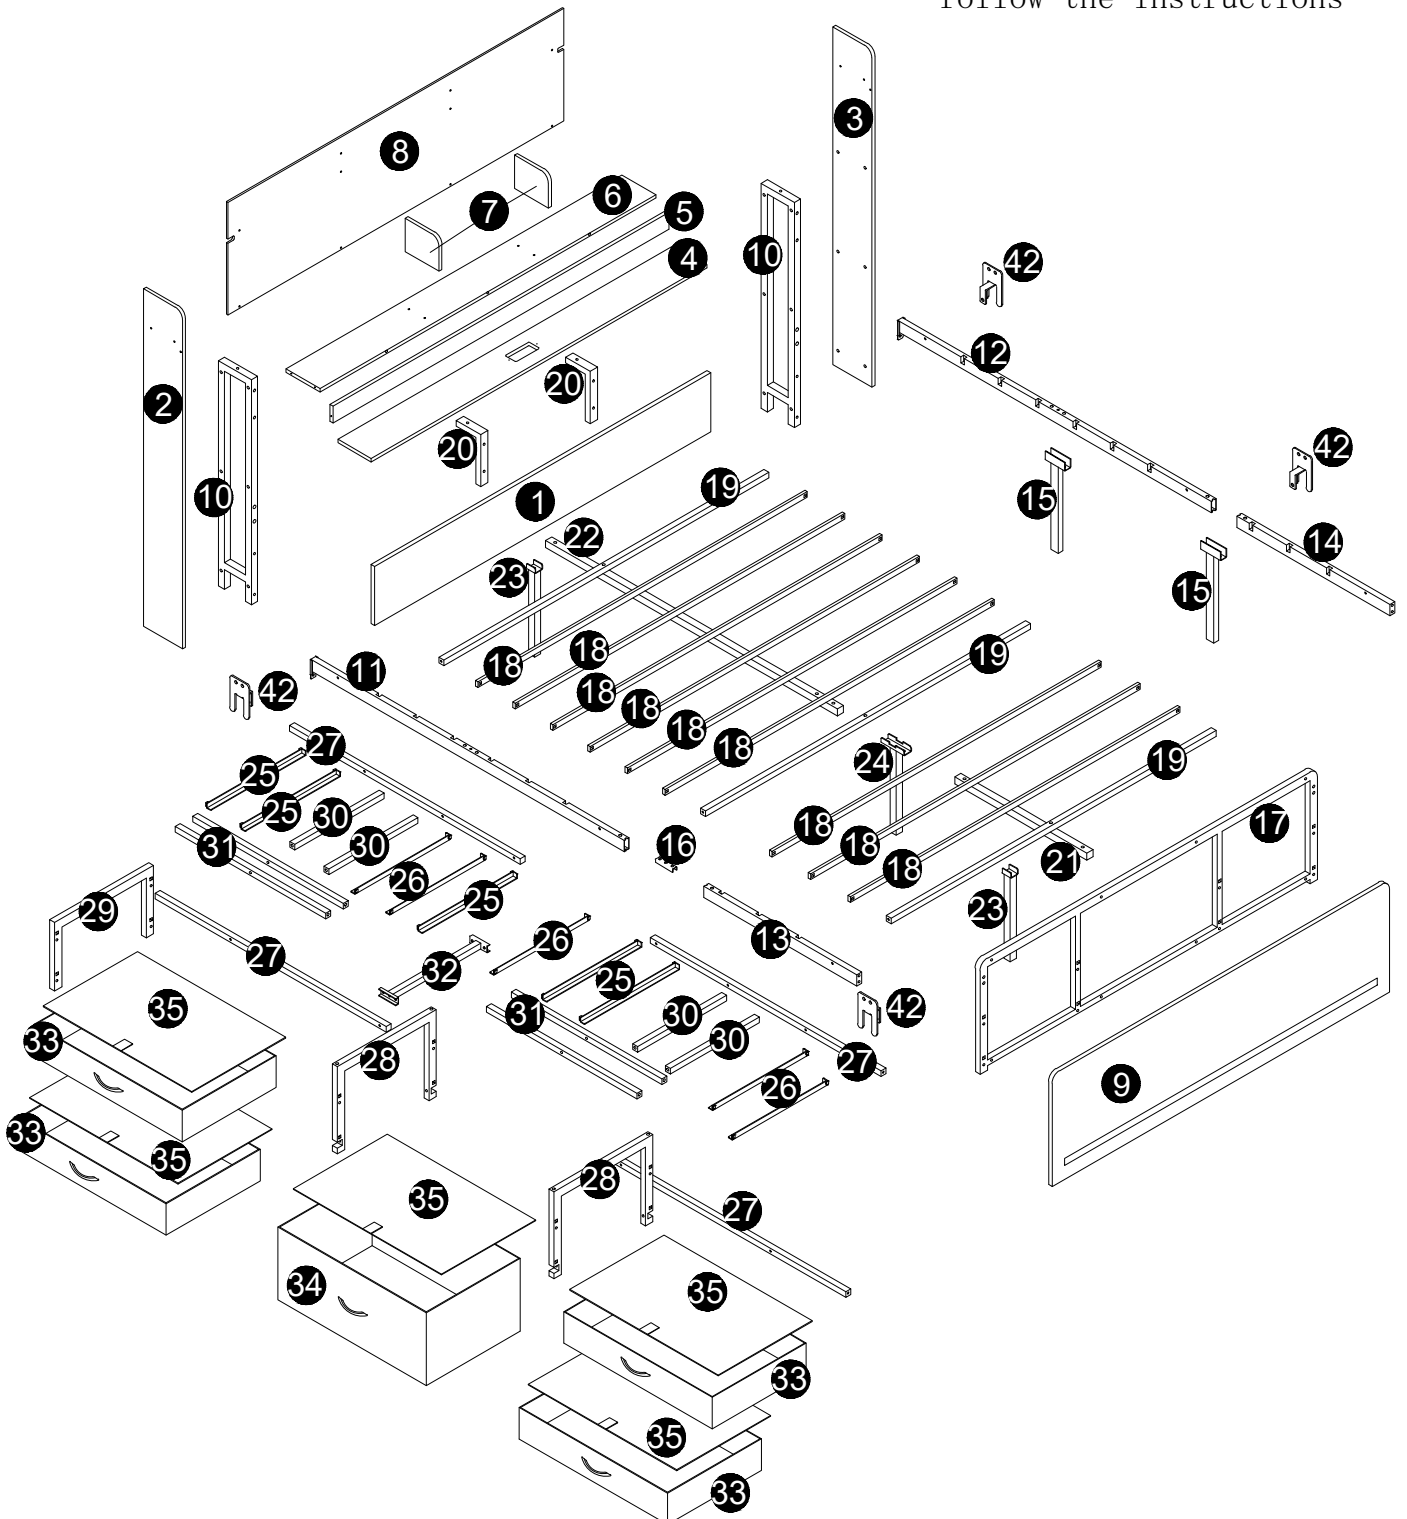

Step1			
A		M6x35mm	3pcs
P		PH2	

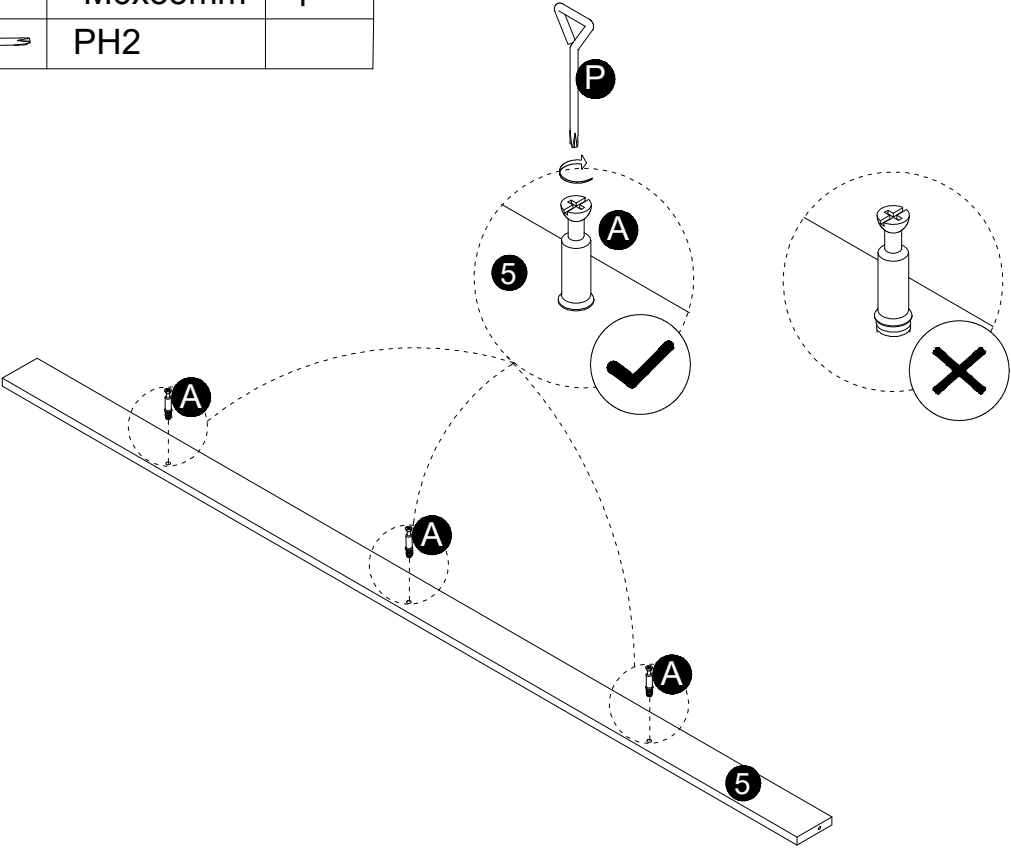


Step2			
B		M6	3pcs
P		PH2	

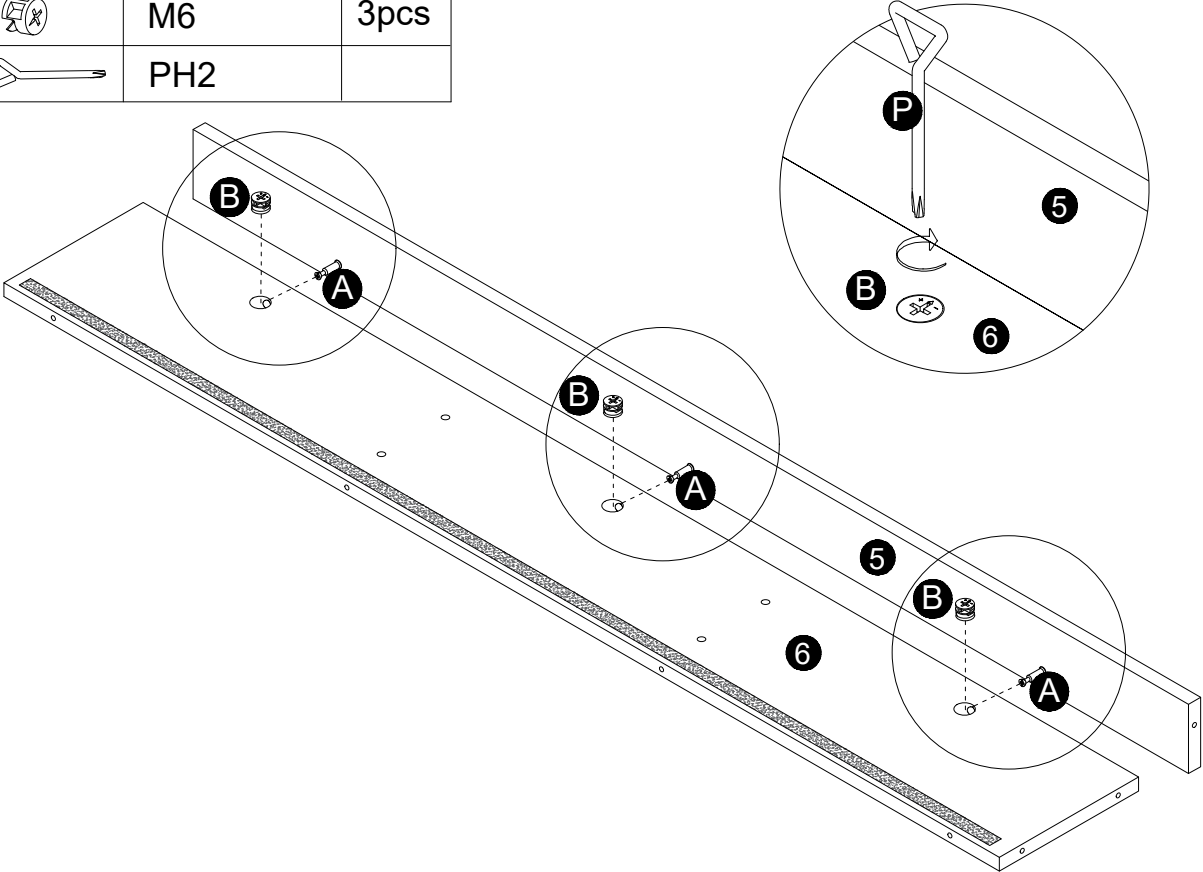


Step3

C		M5x40mm	4pcs
N		S3	

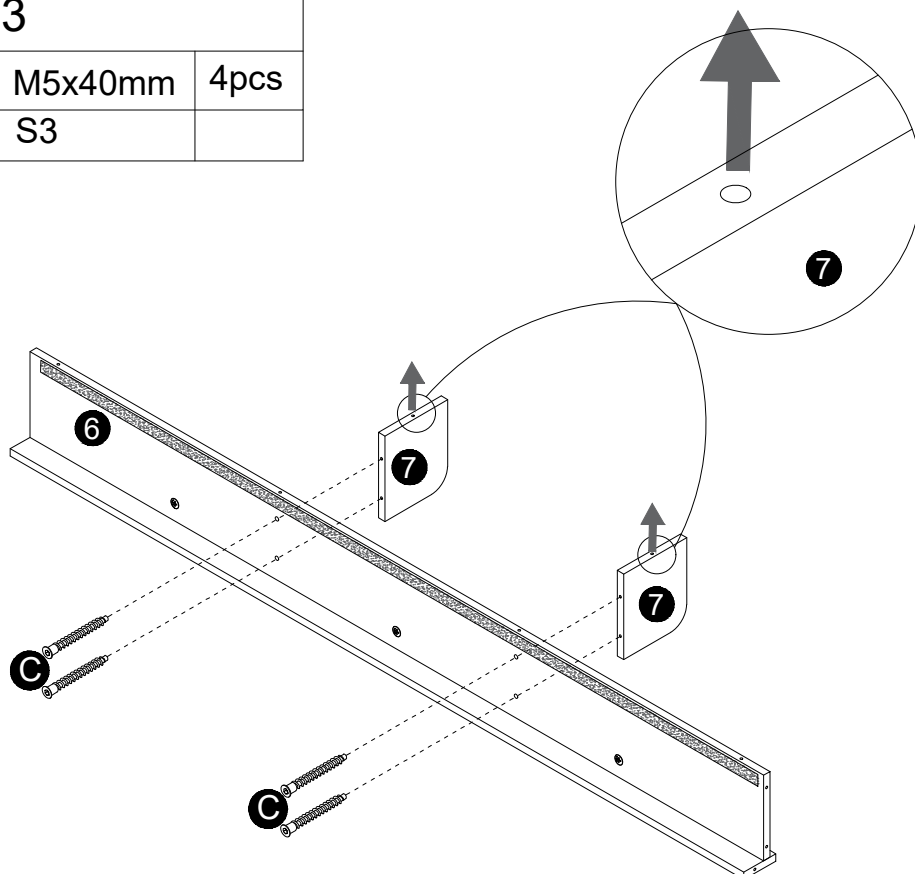

Step4


D		M6x33mm	2pcs
---	---	---------	------

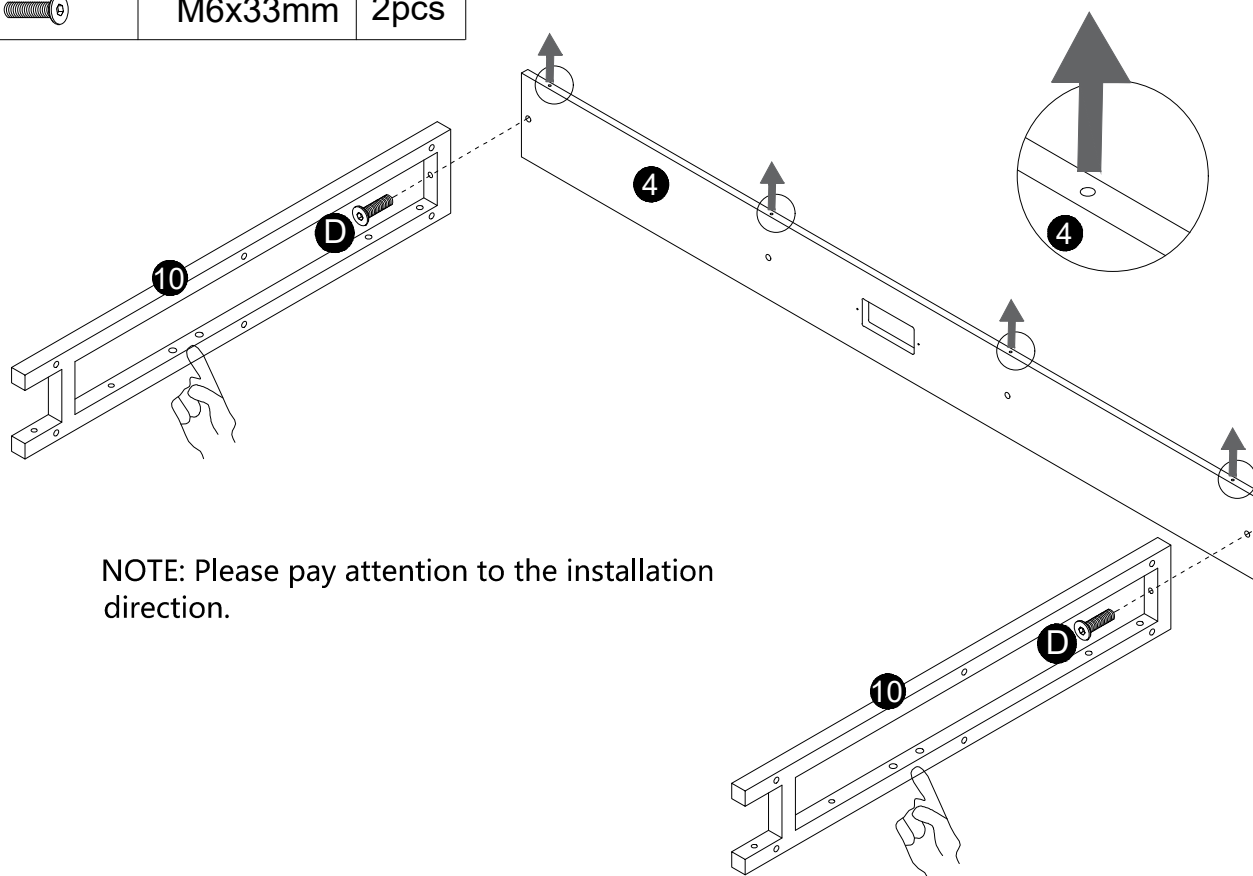

NOTE: Please pay attention to the installation direction.


Step5

D		M6x33mm	4pcs
E		M6x28mm	4pcs

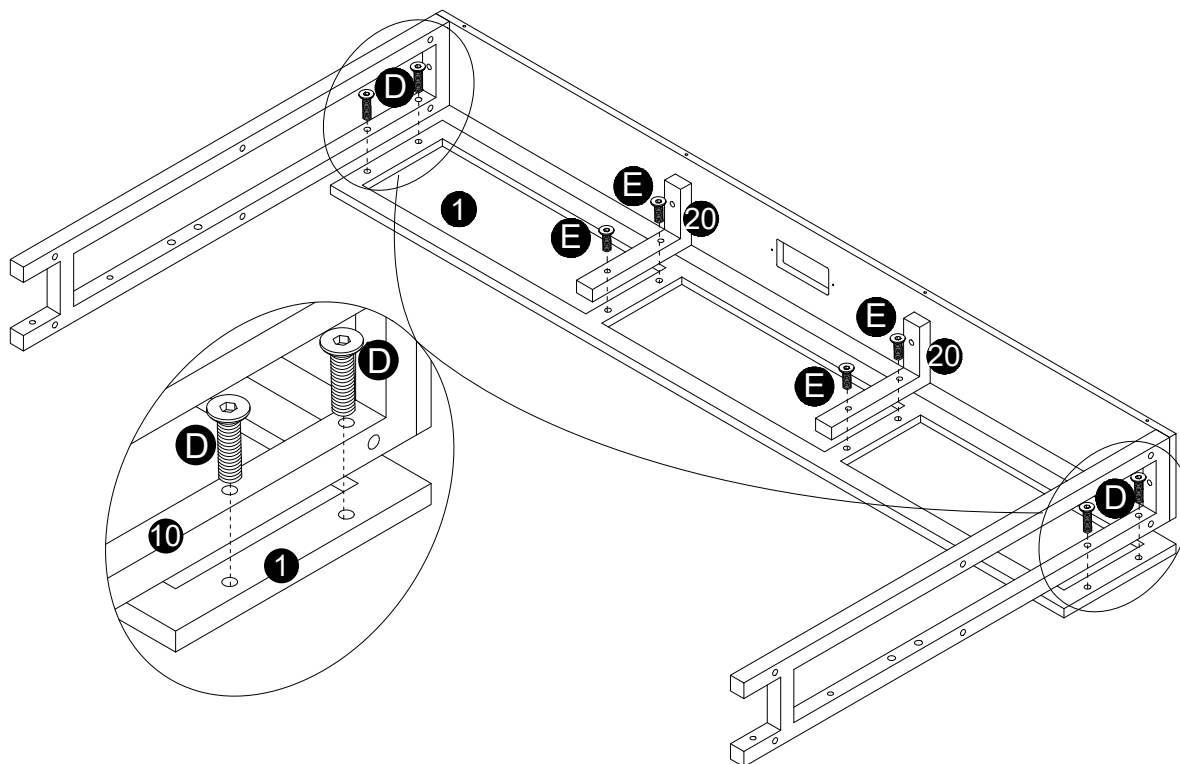


Step6

E		M6x28mm	2pcs
---	---	---------	------


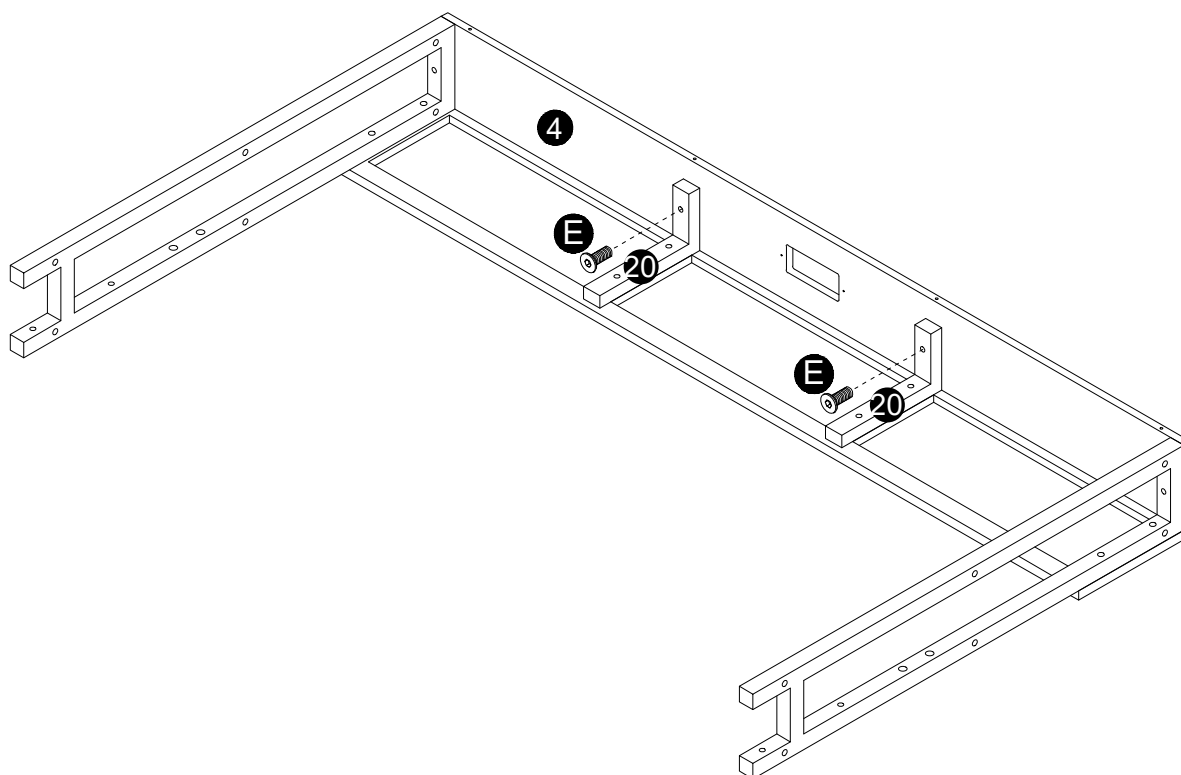


Step7


C		M5x40mm	6pcs
D		M6x33mm	12pcs

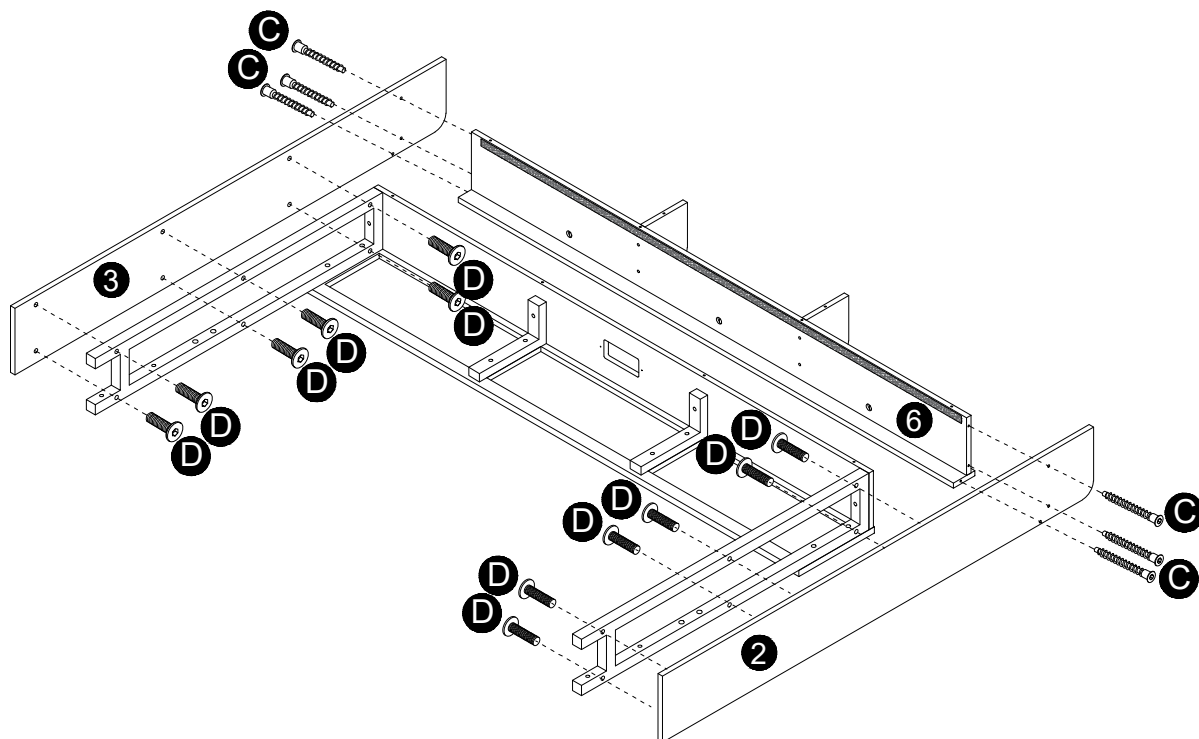


Step8

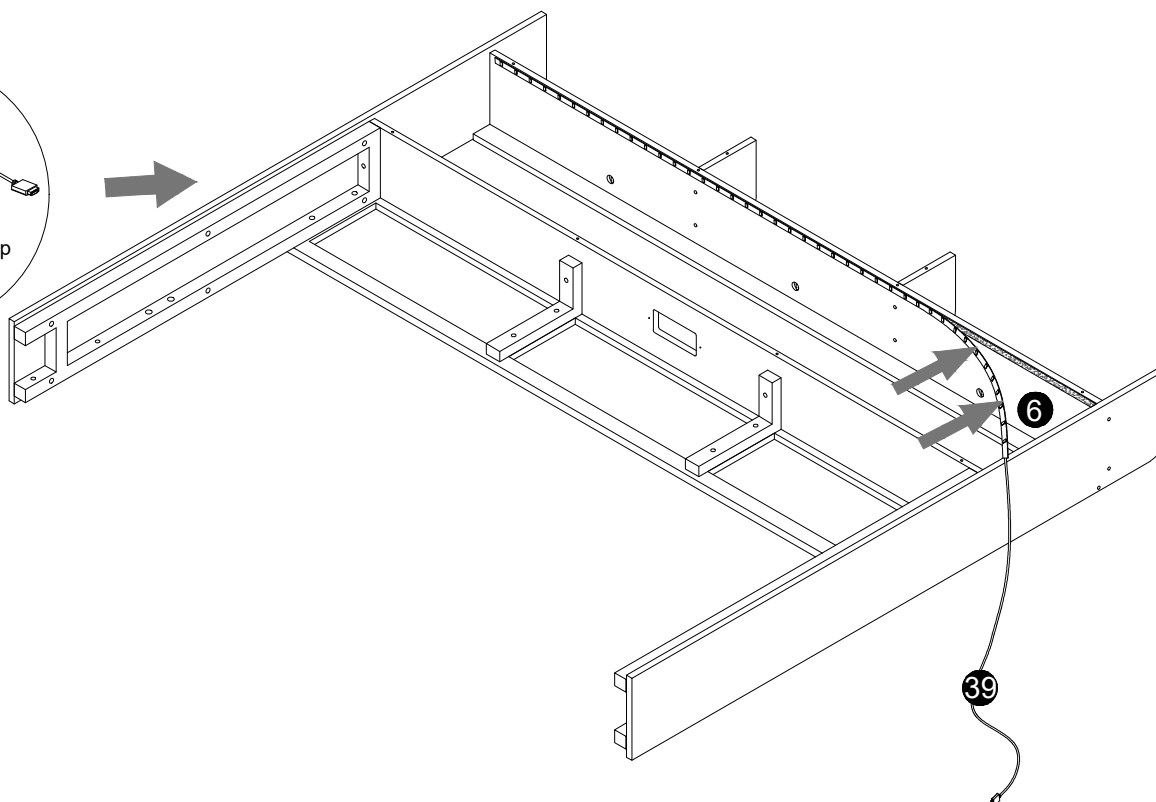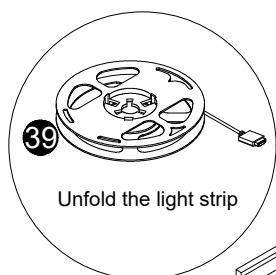


Step9

C		M5x40mm	10pcs
---	---	---------	-------

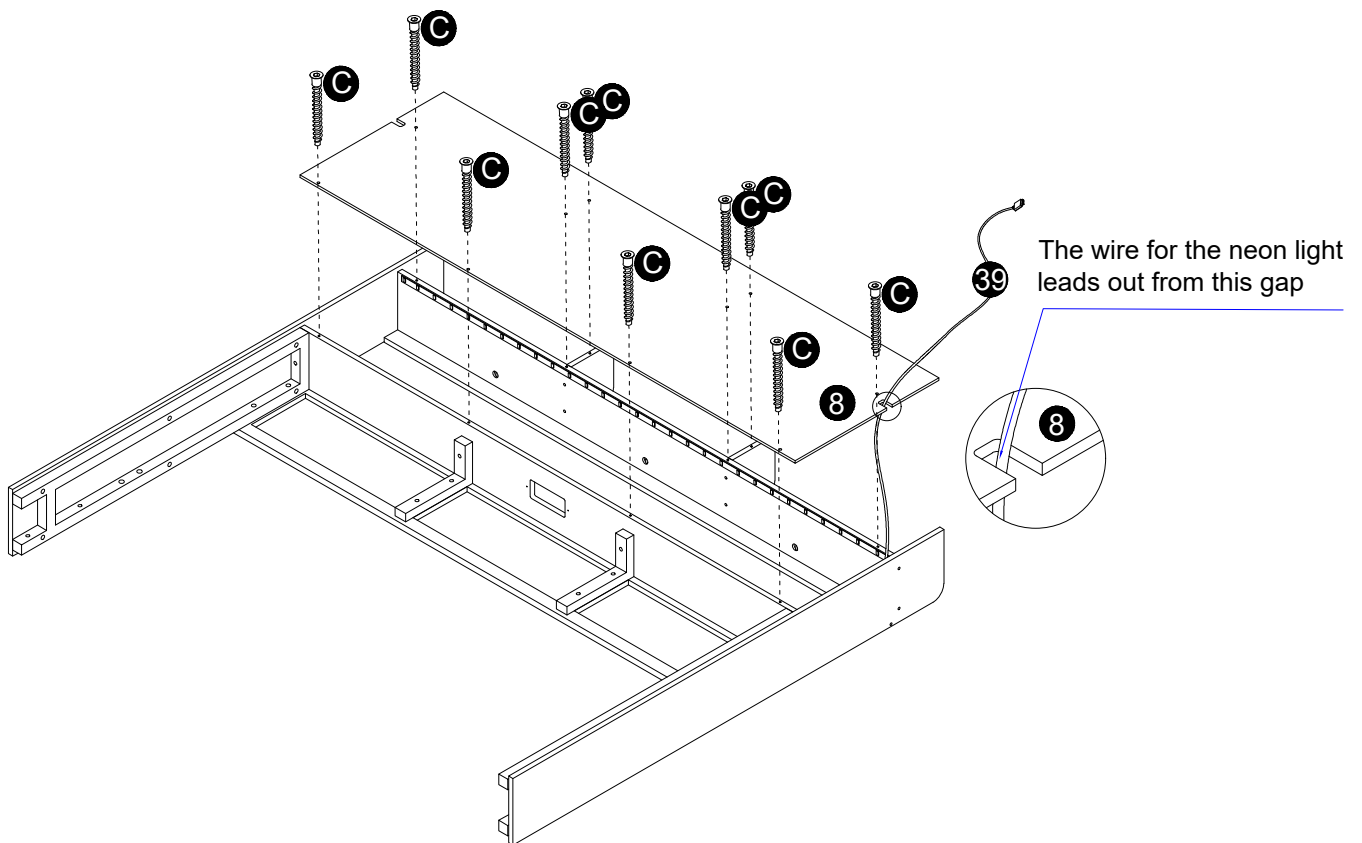

Step10

E		M6x28mm	2pcs
---	---	---------	------

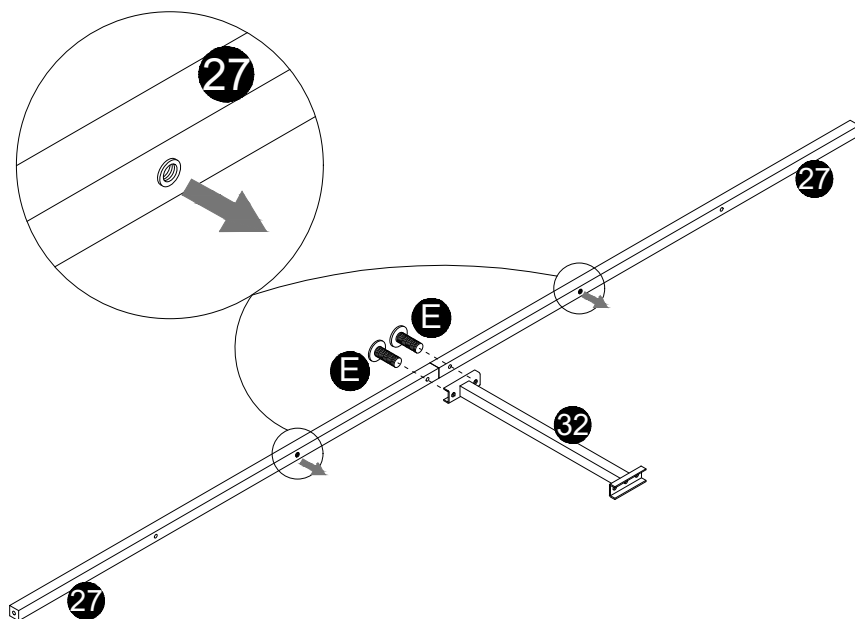


Step11

E



M6x28mm

4pcs

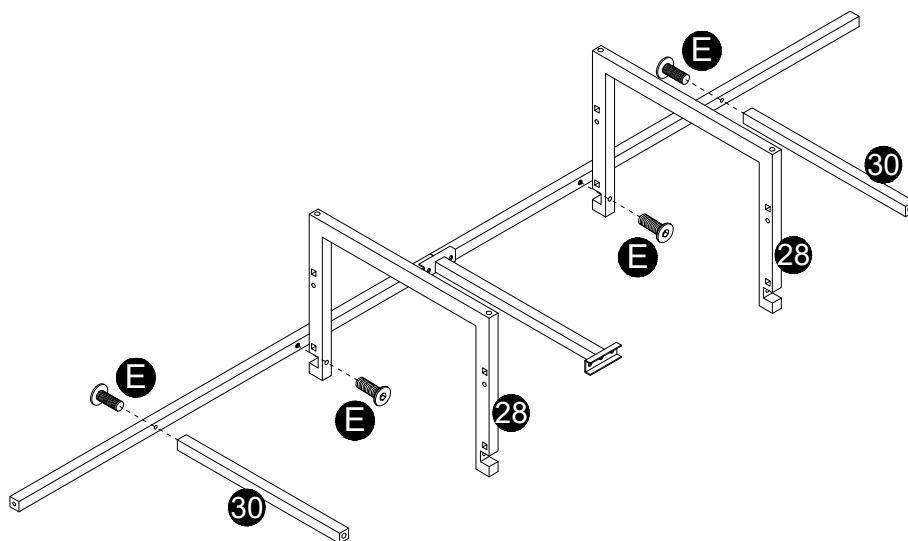


Step12

E



M6x28mm

6pcs

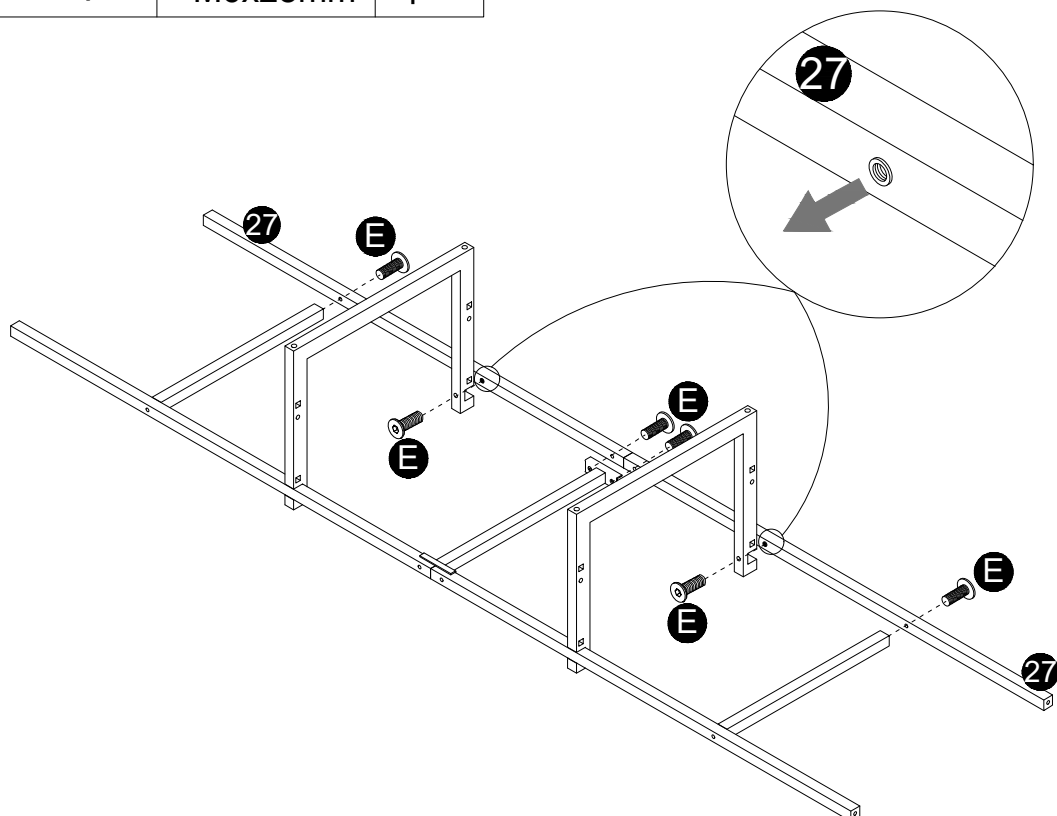


Step13

E



M6x28mm

4pcs

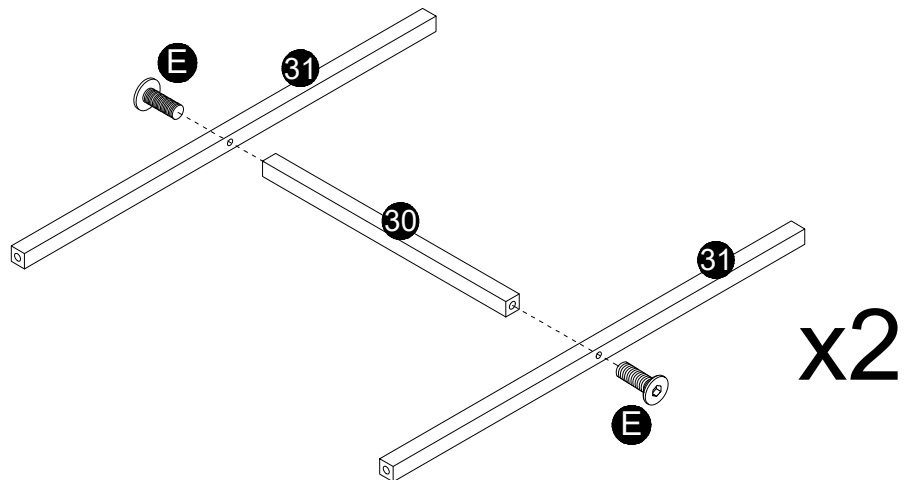


Step14

E




M6x28mm

4pcs

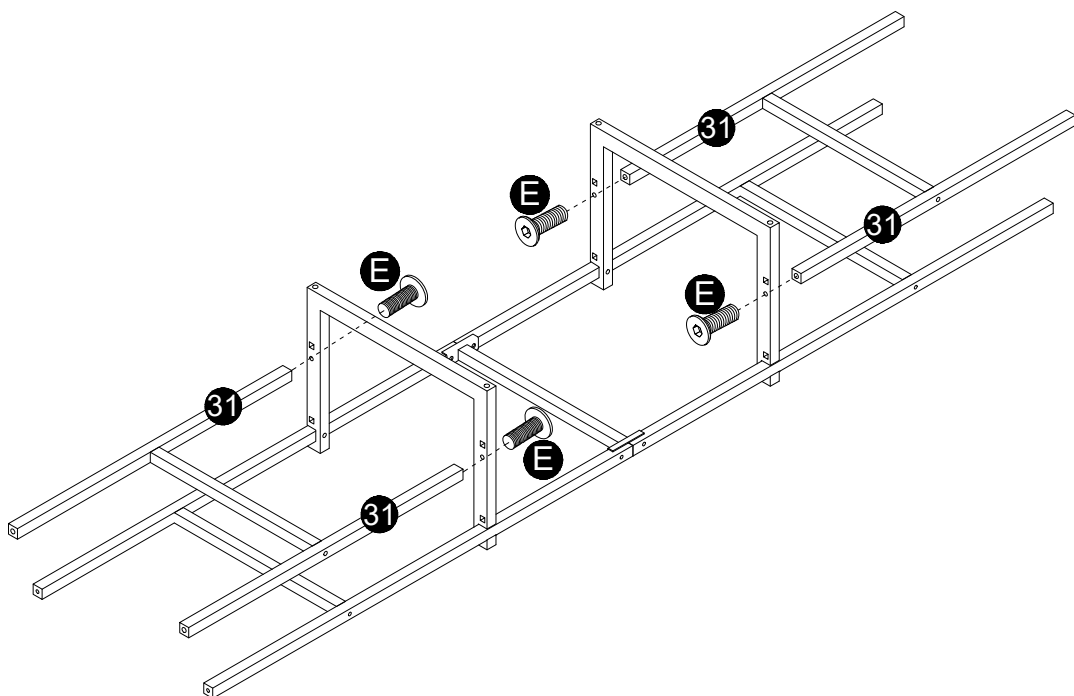


Step15

E		M6x28mm	2pcs
F		M6x55mm	2pcs

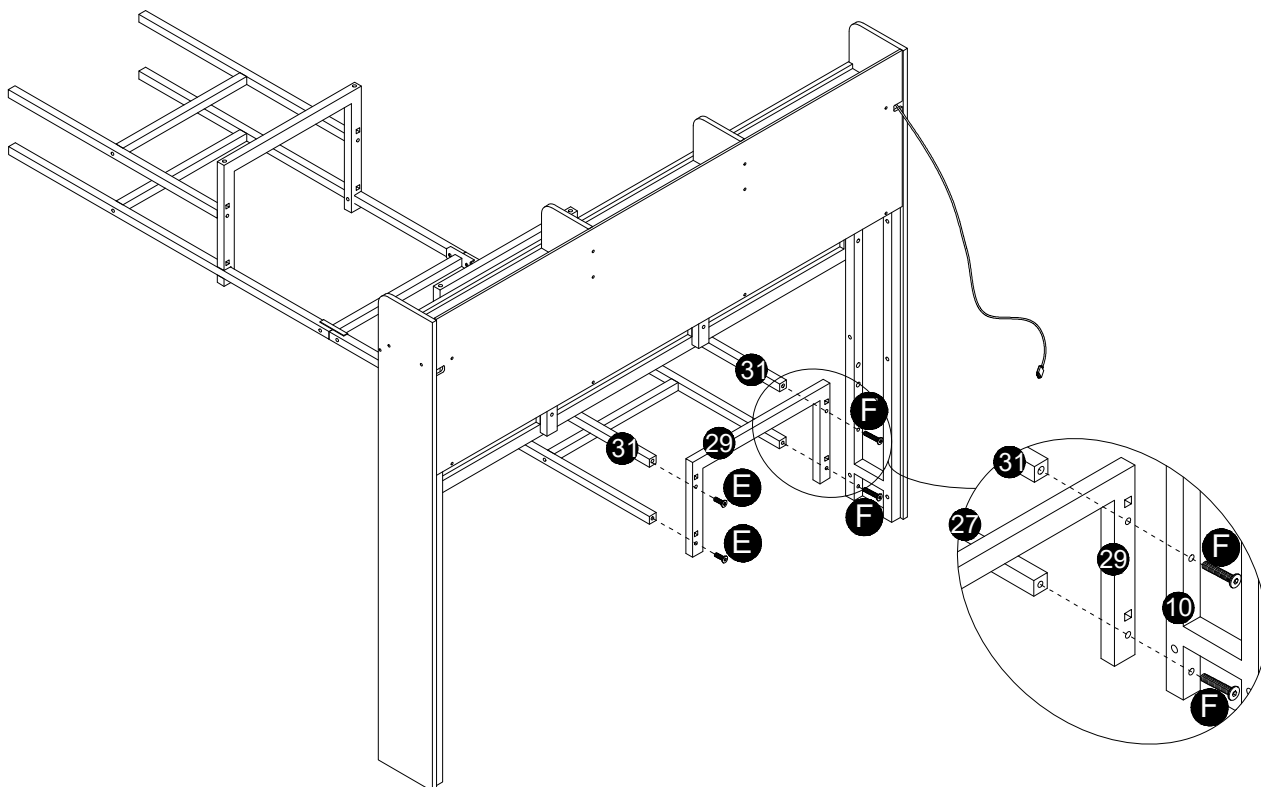

Step16

E		M6x28mm	2pcs
---	---	---------	------

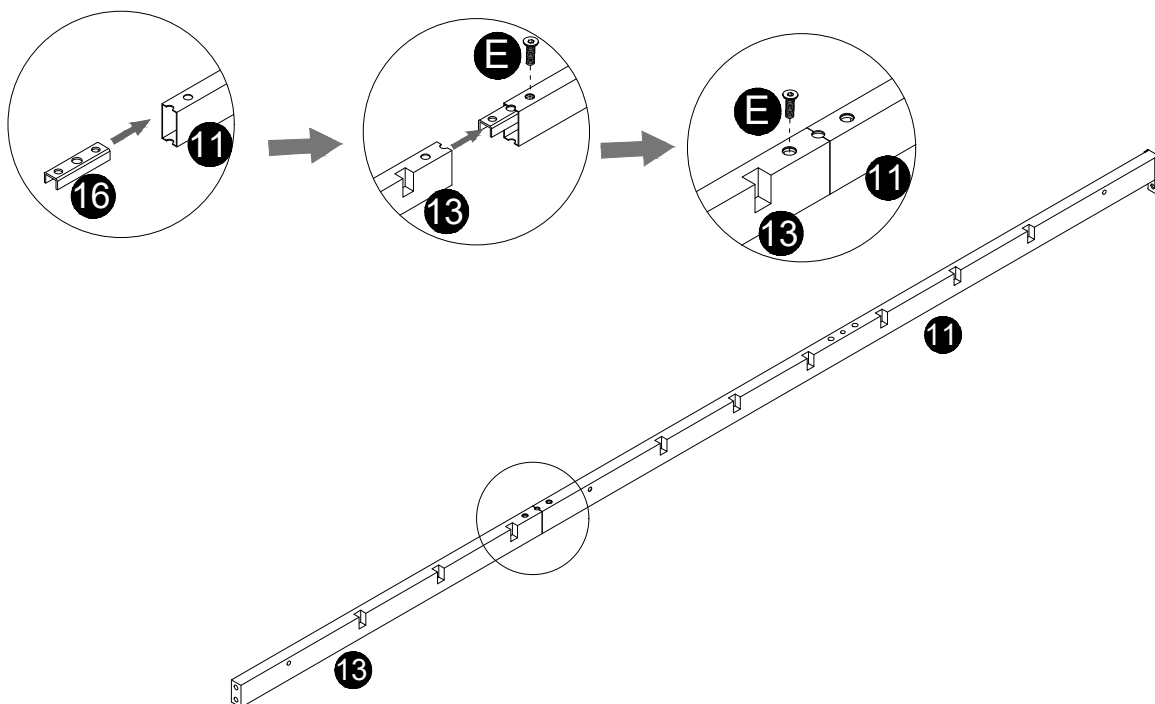


Step17

G



M8x55mm

4pcs

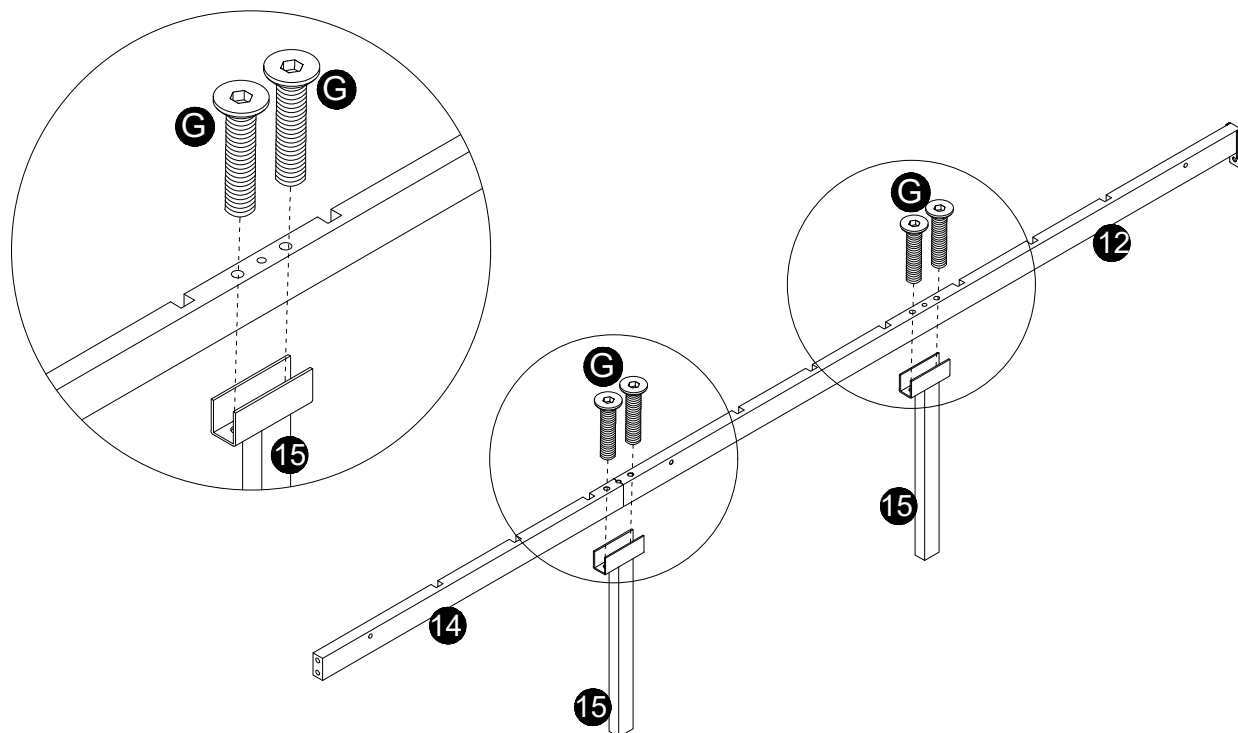


Step18

H



M8x35mm

4pcs

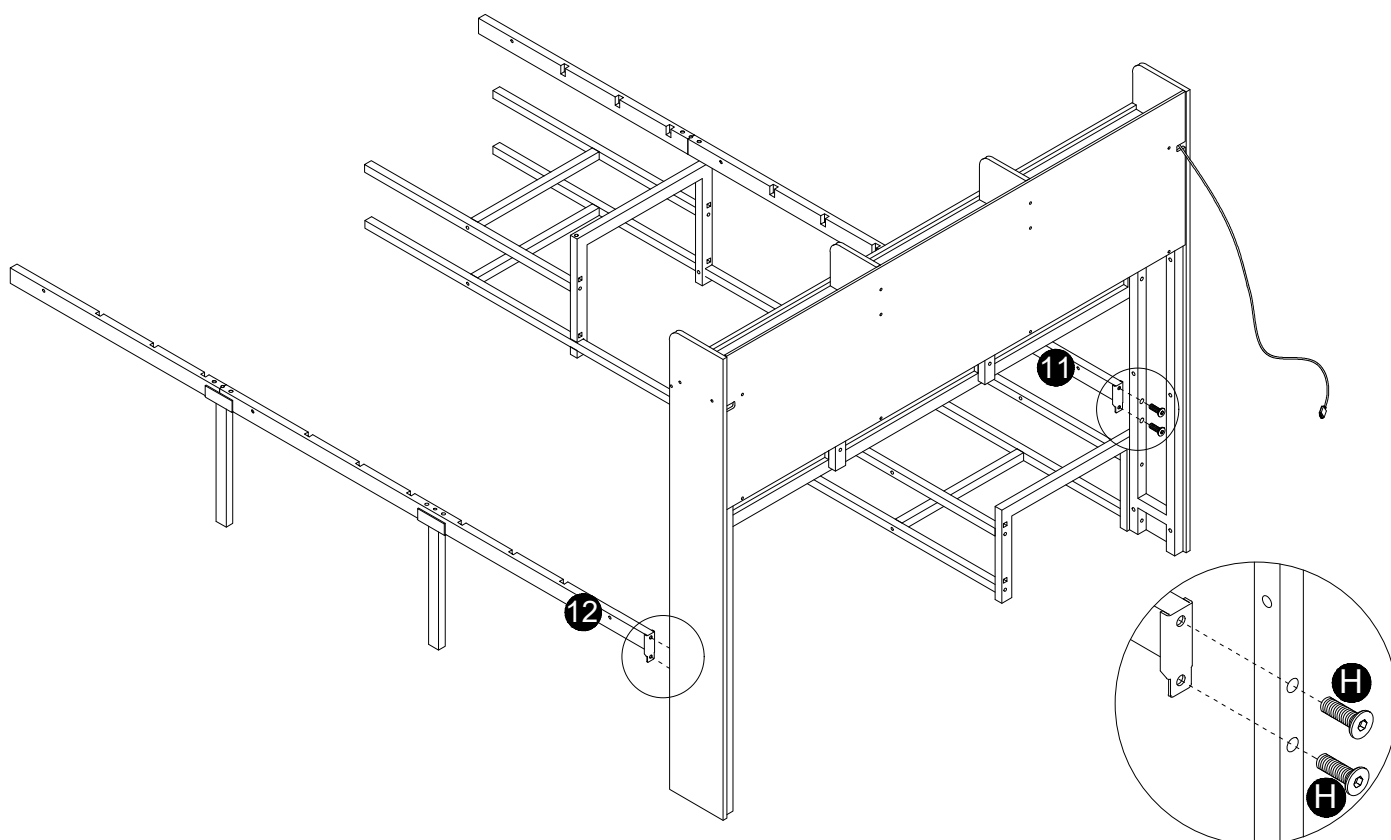



Step19

F



M6x55mm

2pcs

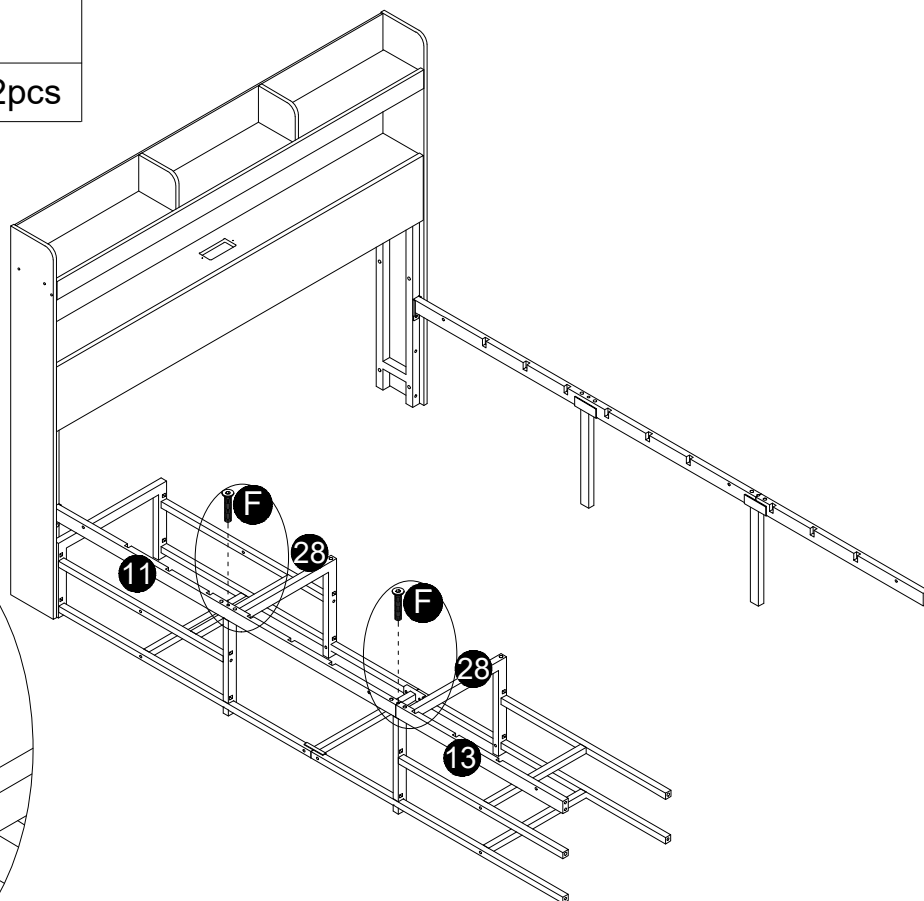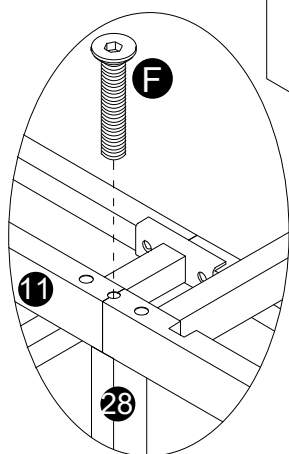

Step20

E



M6x28mm


4pcs

H



M8x35mm

4pcs

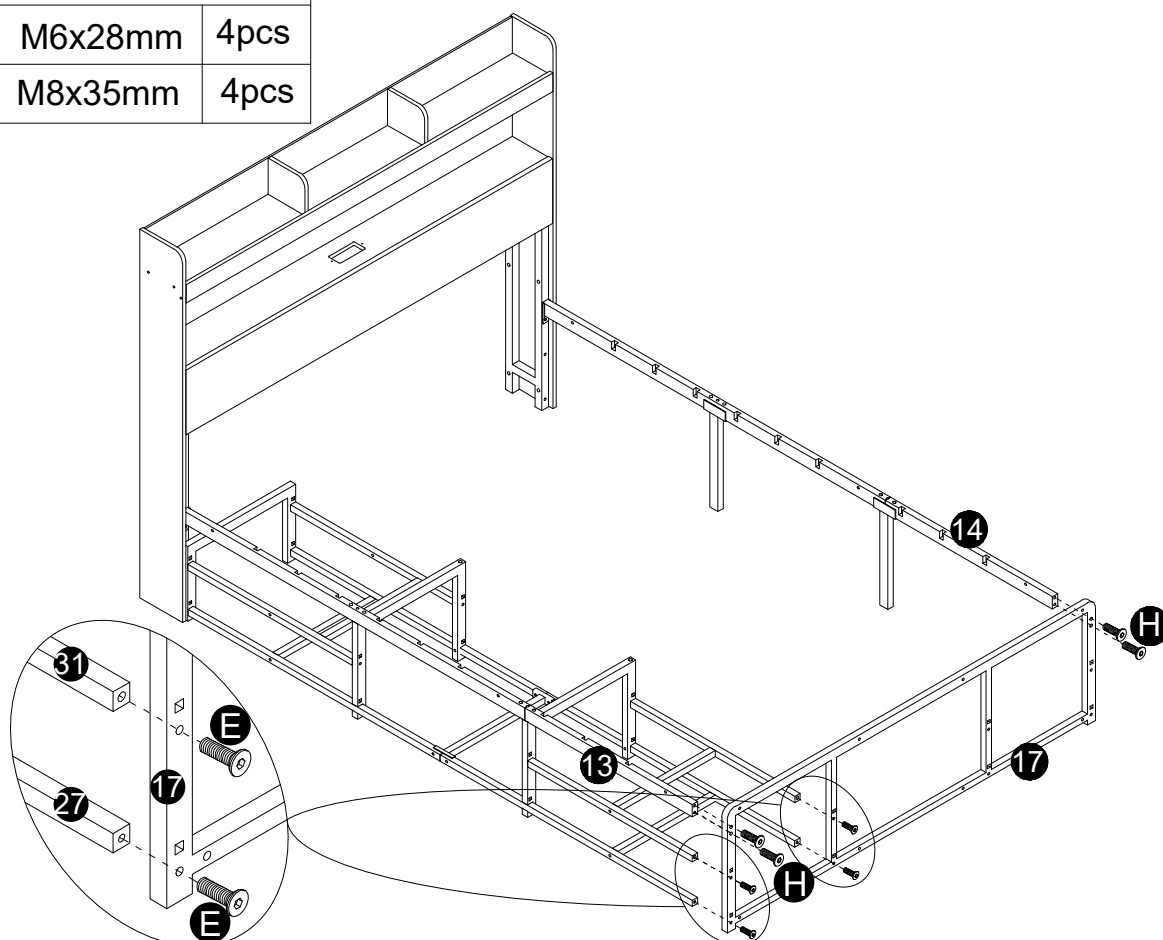


Step21

E





M6x28mm

8pcs

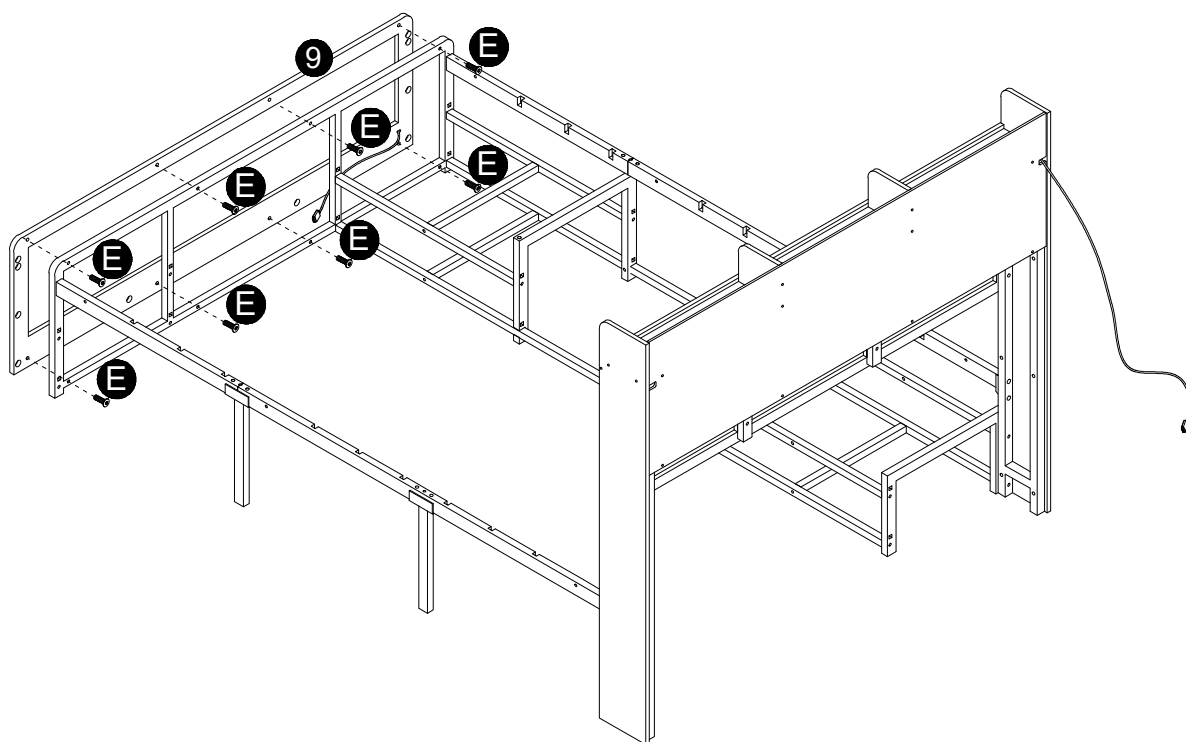

Step22

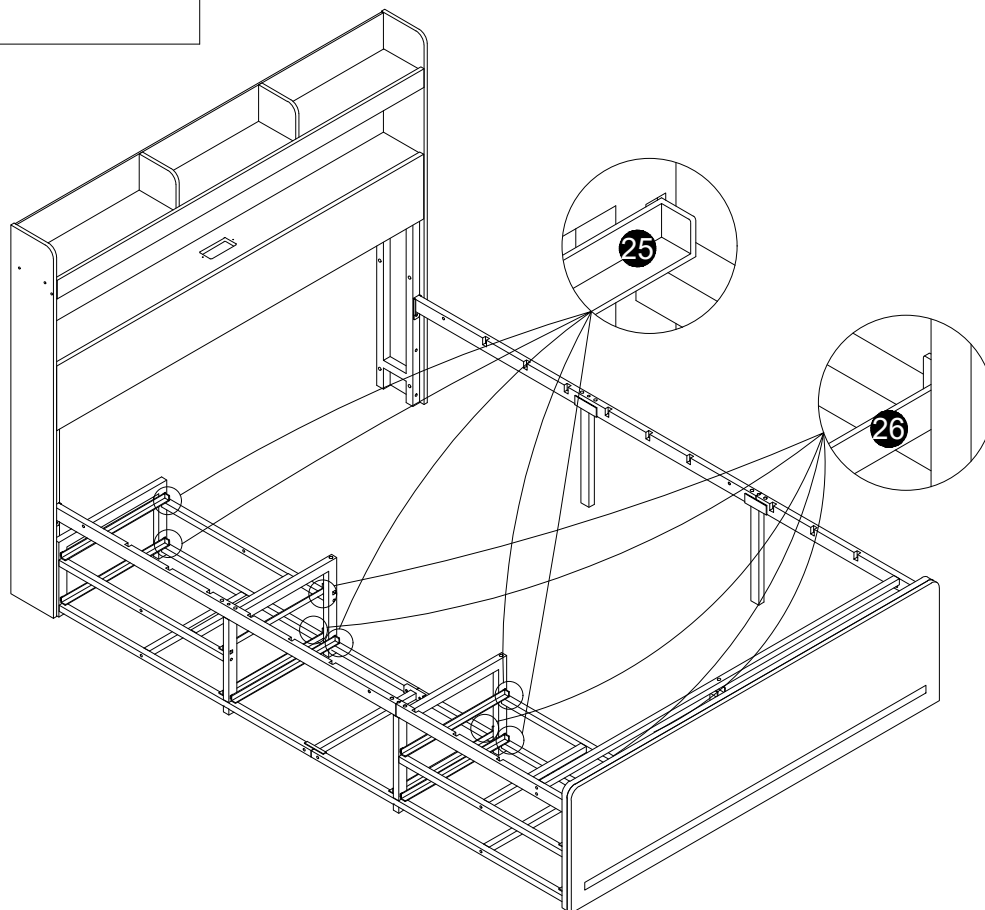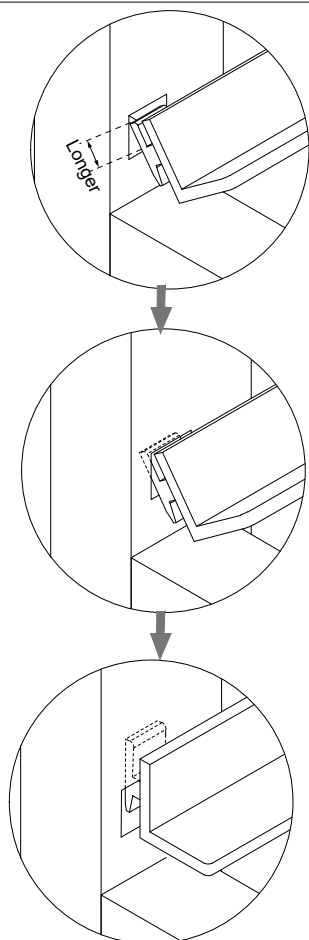


Step23

E



M6x28mm

6pcs

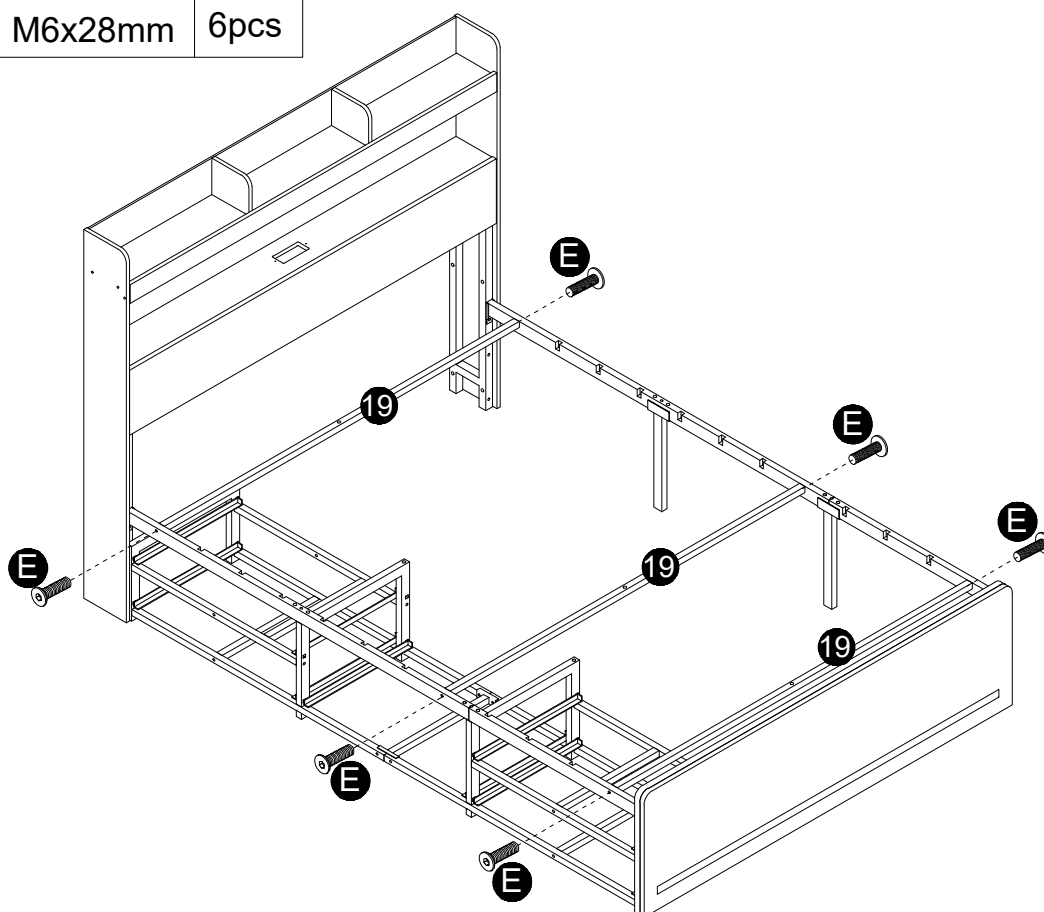



Step24

H



M8x35mm


2pcs

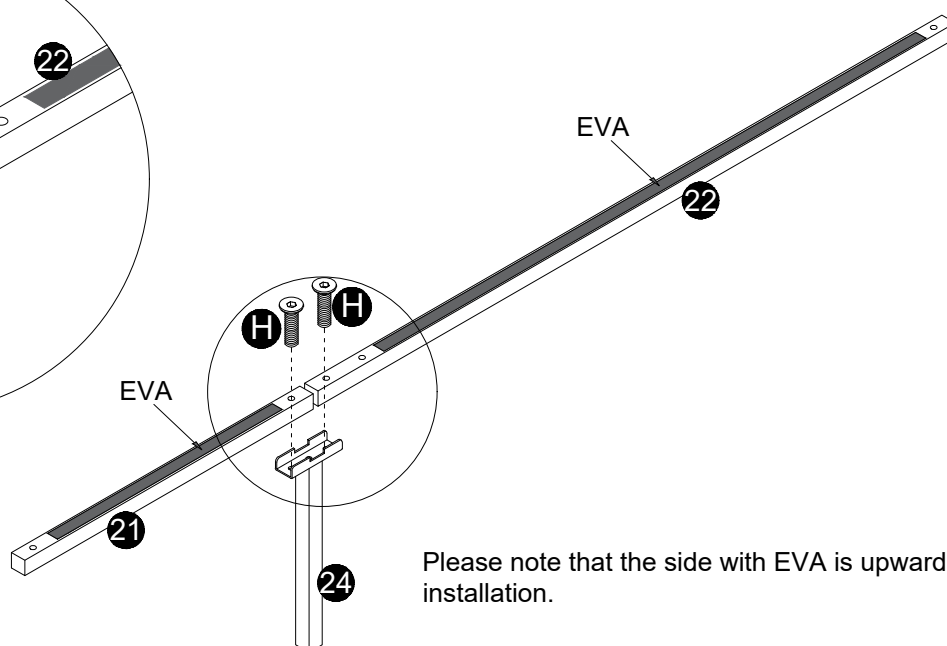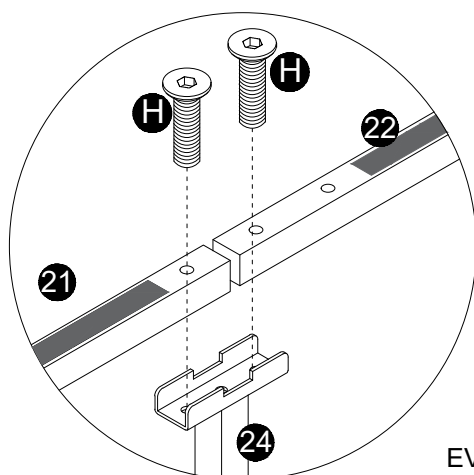

Please note that the side with EVA is upward during installation.




Step25

G		M8x55mm	2pcs
E		M6x28mm	1pc

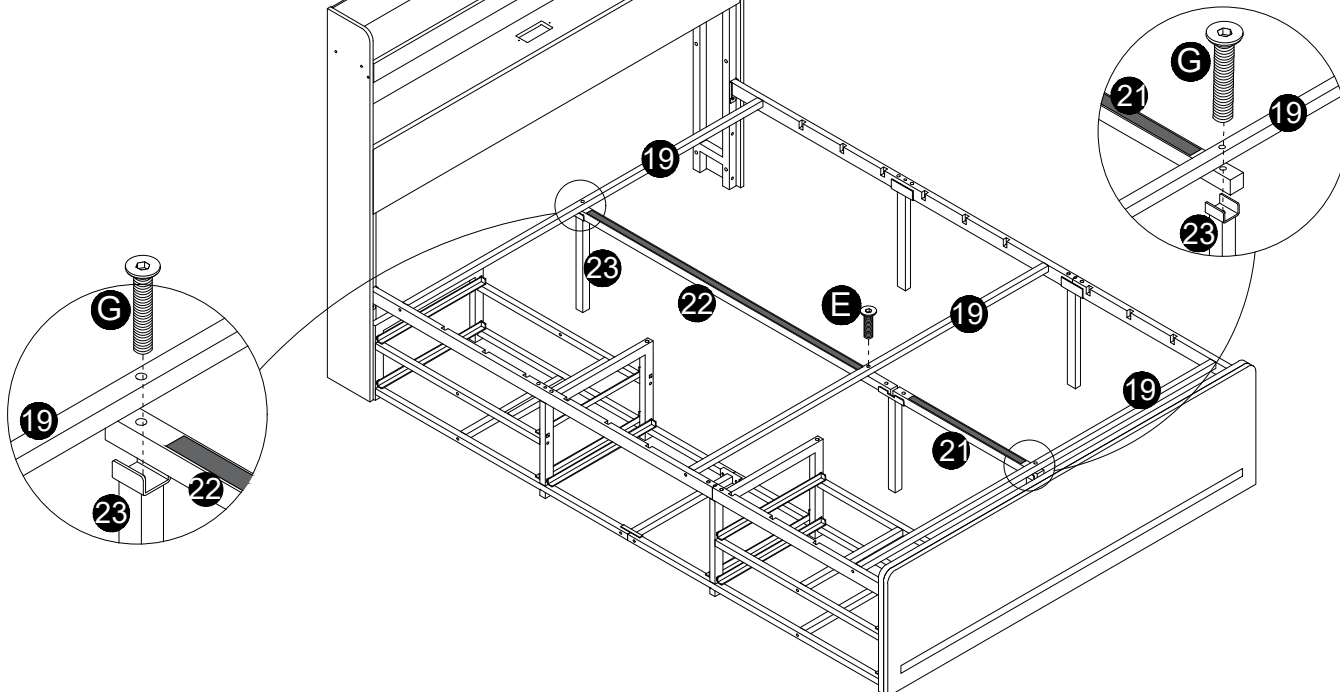


Step26


K		M3x15mm	2pcs
---	---	---------	------

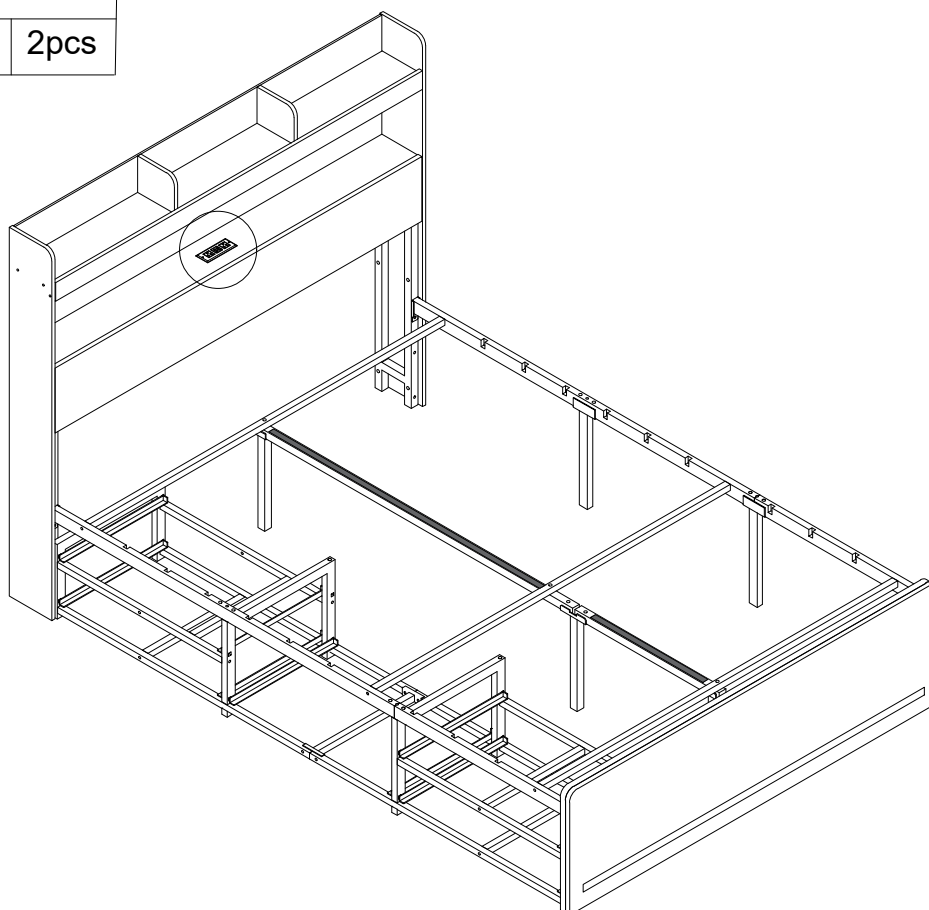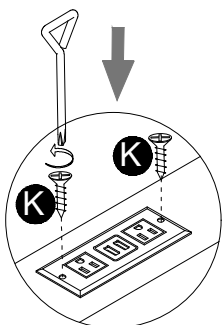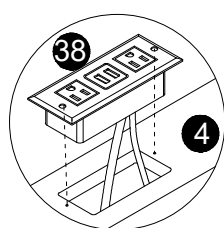

Step27

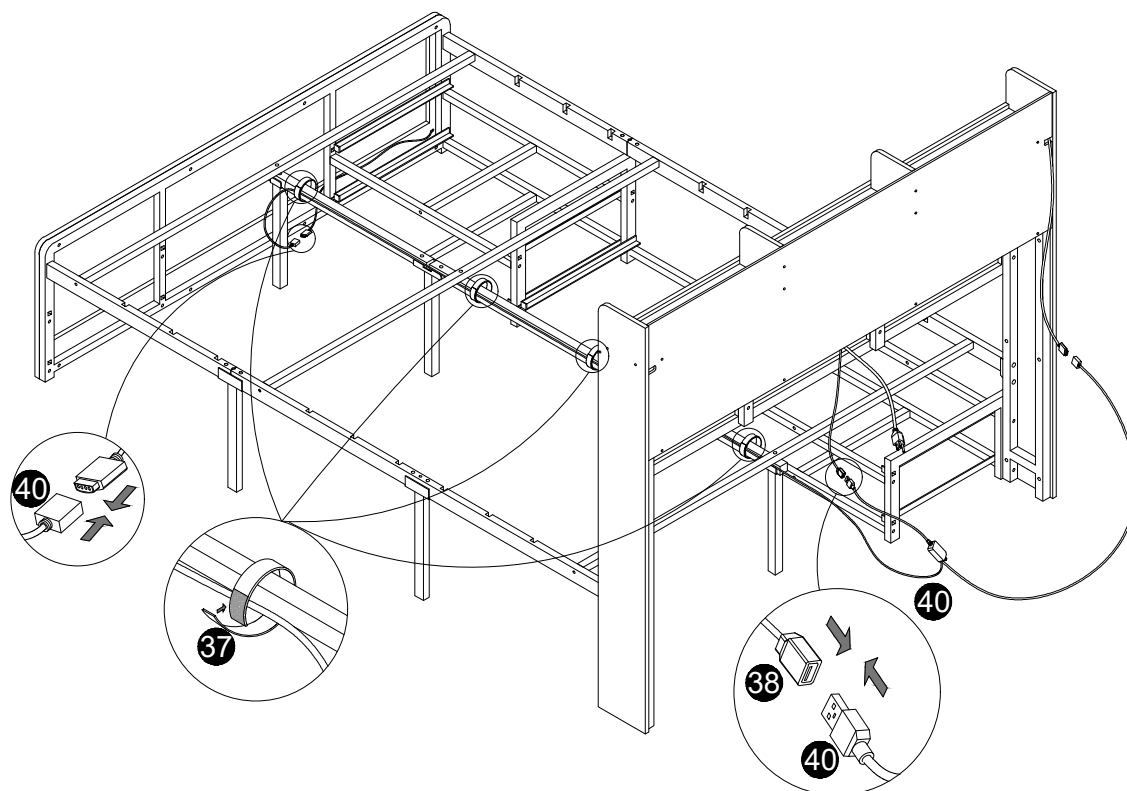

Step28

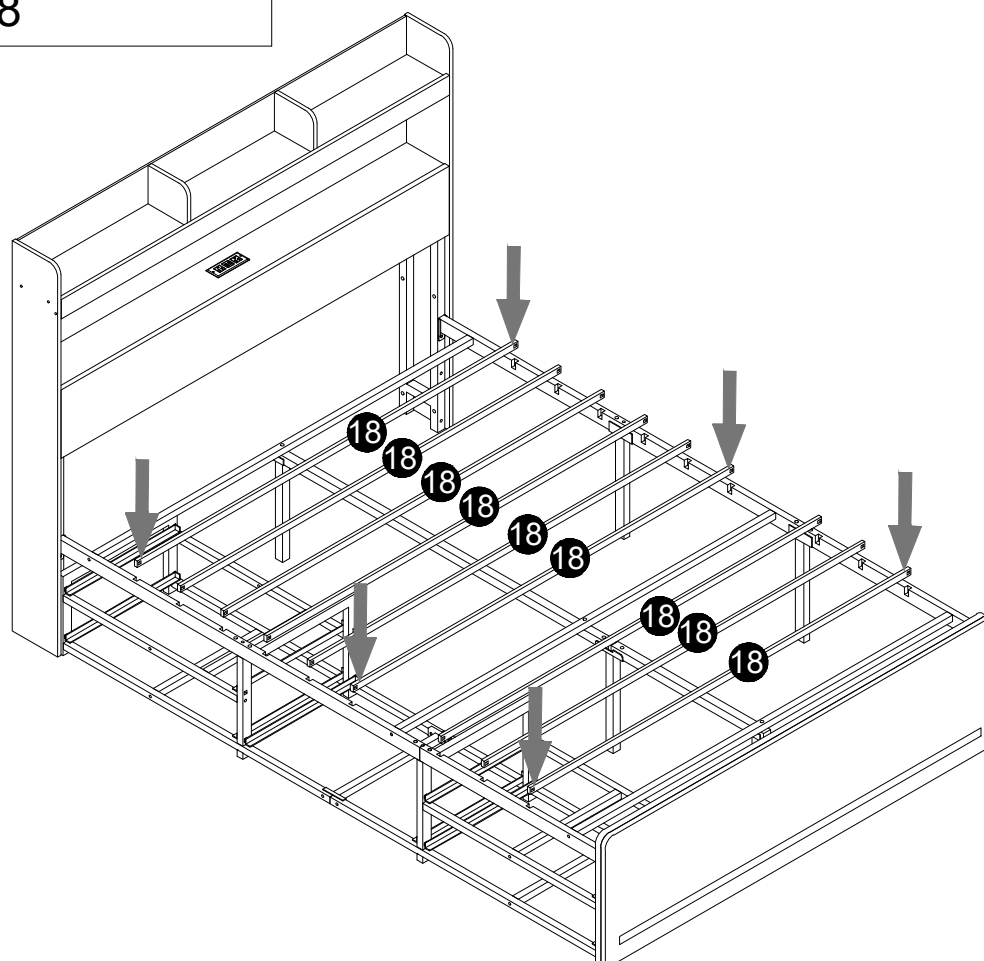





Step29

J



M4x8mm

8pcs

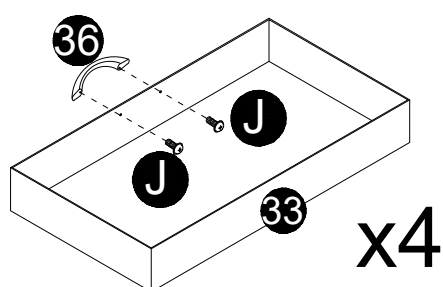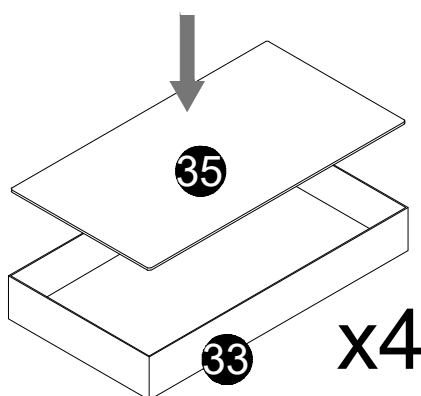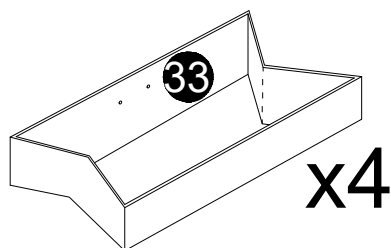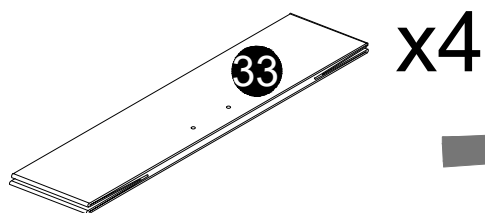





Step30

J




M4x8mm


2pcs

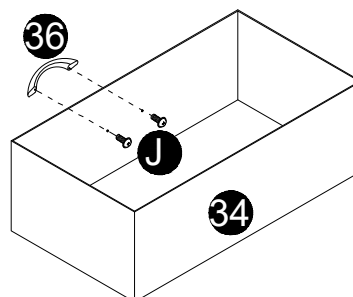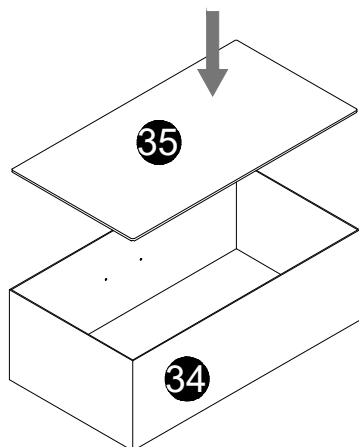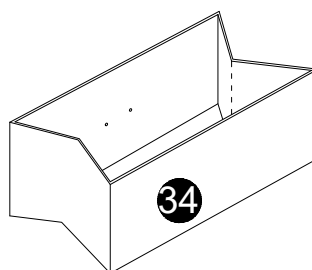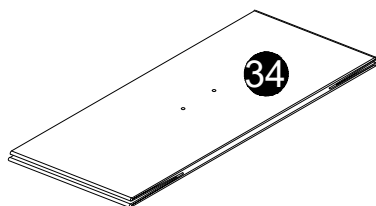

Step31

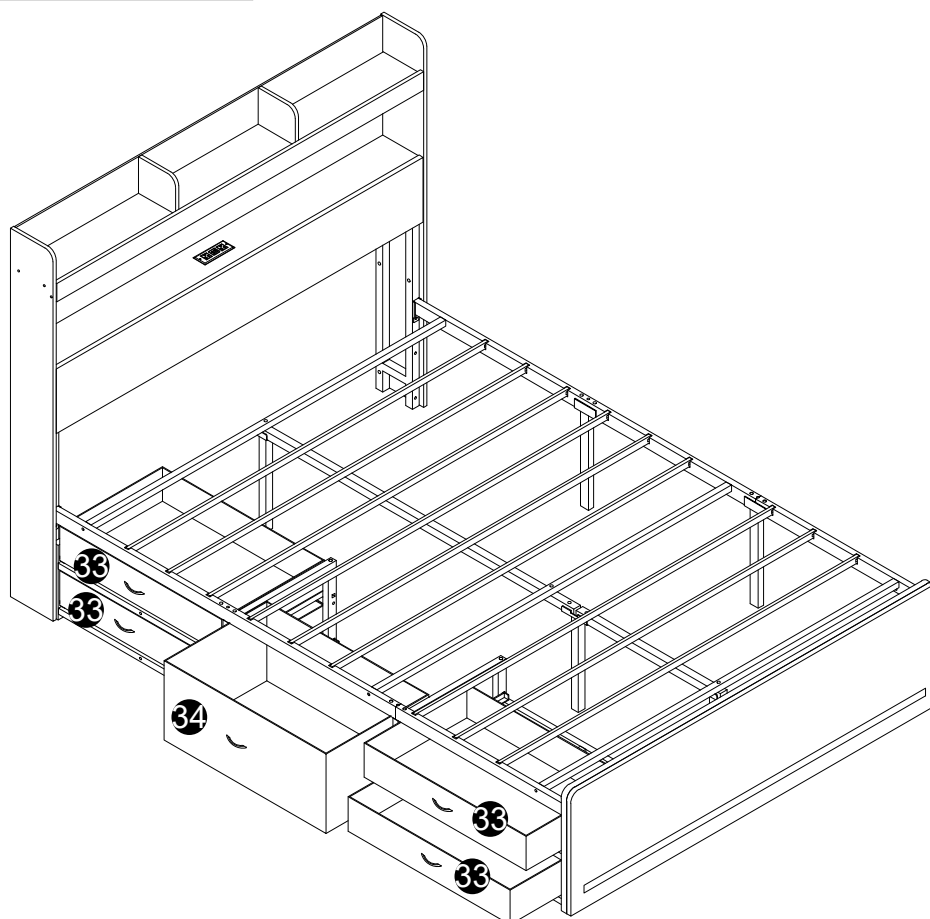

Step32

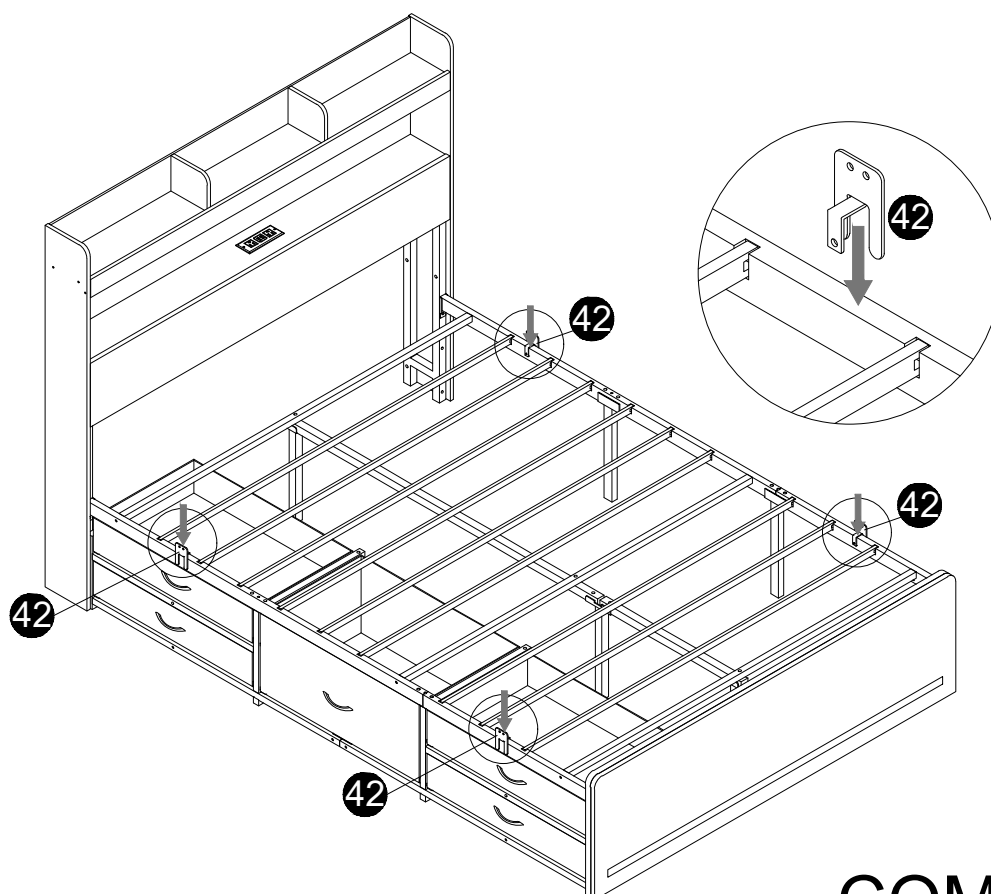

COMPLETE