



WORKSTATION SINK INSTALLATION GUIDE

MATERIAL

- Premium 11-gauge thickness
- 304 Grade Stainless Steel
- R10 rounded corner design, modern and easy to clean
- Anti-condensation coating, thick silicone padding for noise reduction
- Various user-friendly accessories

SPECIFICATION

- Model: SC-KS-30L-WF
- Material: SUS304 Grade stainless steel
- Material thickness: 11-gauge
- Outer Sizes: 30" x 18" x 10"
- Inner Sizes: 28" x 16" x 10"
- Installation Type: Undermount

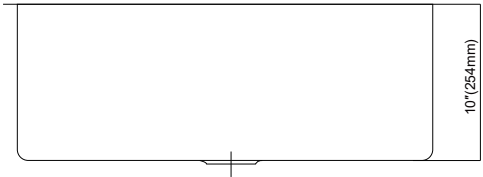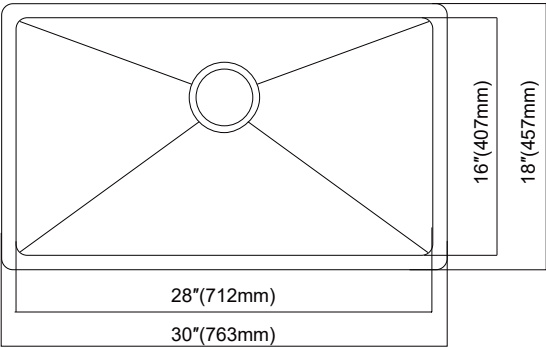

Attention



1. Always use the sink and keep it dry and clean after use.
2. If there is rust on the sink, wipe it off with a gentle cloth soaked in vinegar and warm water. (Rust stains are the results of iron particles introduced by water, cookware, and steel wool pads that react with water to create rust)
3. For stubborn stains, use a mild cleanser and gently rub it along the lines.
4. Dry the sink as much as possible after use to prevent water stains.
5. Avoid leaving water in the sink for extended periods or using water containing heavy metals to prevent rust.
6. Please avoid leaving sponges, cloths, pads, soap, or other items on the sink surface for long periods to prevent iron precipitation and potential color changes or rust.
7. Be mindful of sharp and hard knives, forks, cooking utensils, and other objects that may impact the sink to avoid scratches or dents.
8. The decoration of the house should pay attention to the window ventilation to avoid the decoration materials issuing corrosive gas, and oxidation of the sink's surface, resulting in floating rust in the sink

STEP1

Position the Template

1. Verify the accuracy of the cut-out template by aligning it with the actual sink to ensure a precise fit for the cut-out.
2. Position the cut-out template in the intended spot on the countertop.
3. Use a pencil to trace the template on the countertop.


NOTE: Ensure that there is adequate clearance for the backsplash, faucet, and plumbing in relation to the sink.

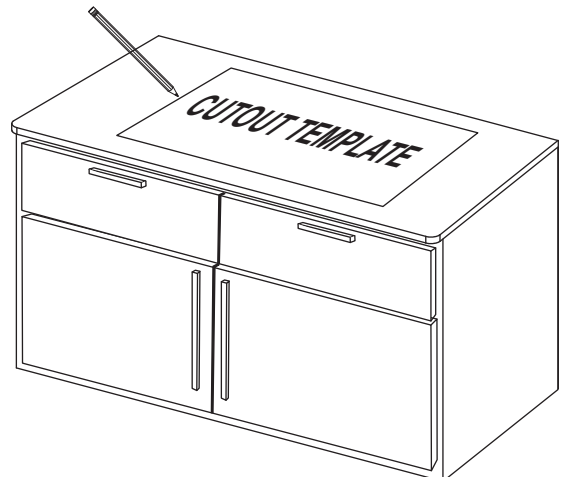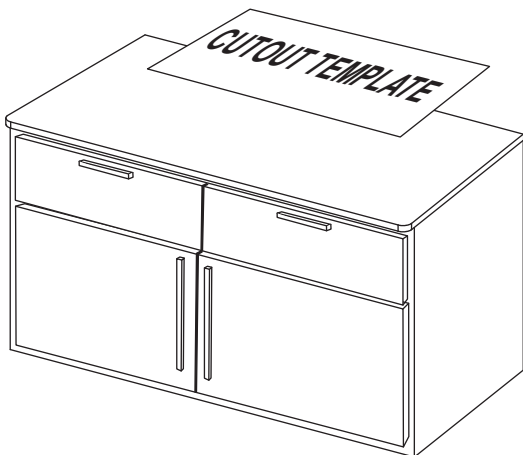

STEP2

Cut Countertop

Carefully cut the countertop along the traced line to create the opening.


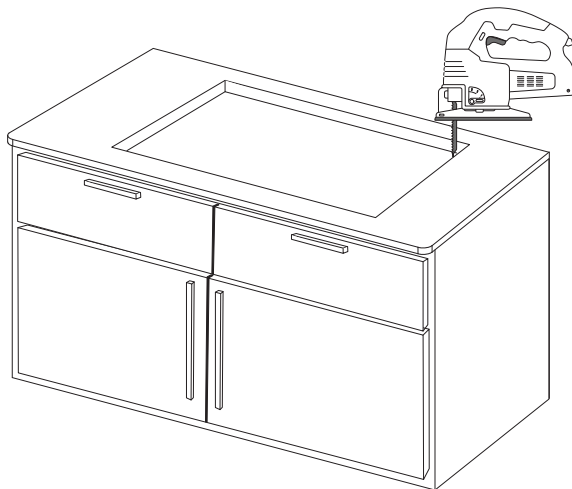


STEP3

Set up Mounting Brackets

Turn countertop over and align sink with countertop. Decide location for mounting brackets


Mark holes

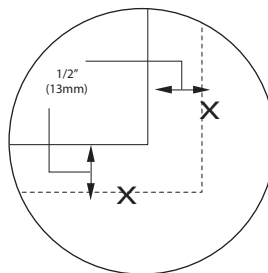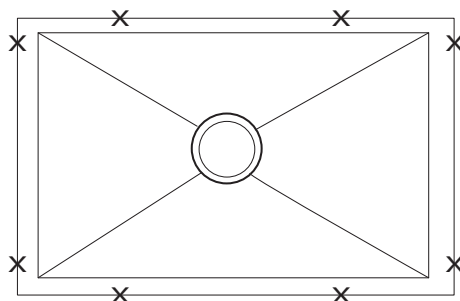

STEP4


Drill Hole in Countertop

Use a drill with a 3/8" diameter bit to create hole in the countertop. Drill the hole to a depth of 1/2".

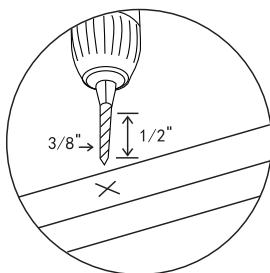

Install Anchors


Insert anchors into the drilled holes and gently tap them with a hammer until they are flush with the surface.

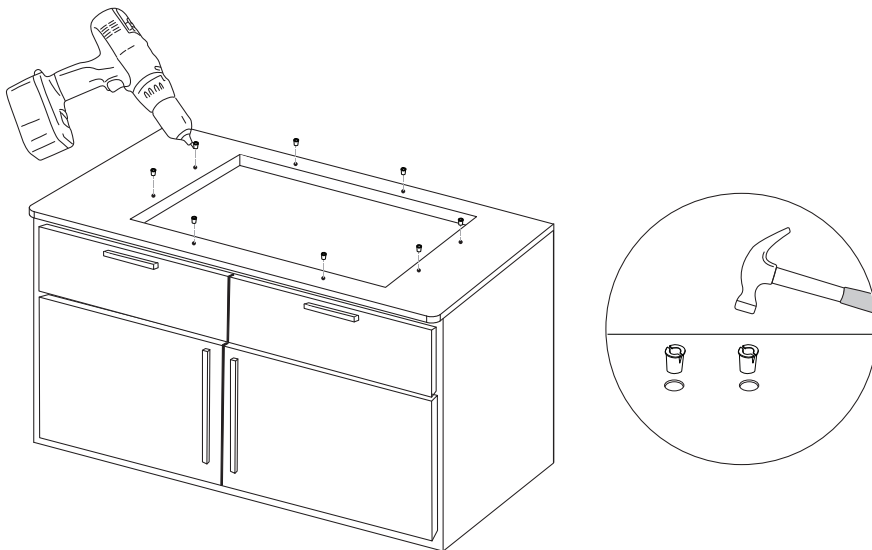

STEP5

Secure Sink to Countertop



Apply a bead of silicone or your preferred adhesive around the rim of the sink. Ensure the alignment of the sink with the cutout in the countertop. Carefully position the sink over the cutout hole and firmly press it down into place.

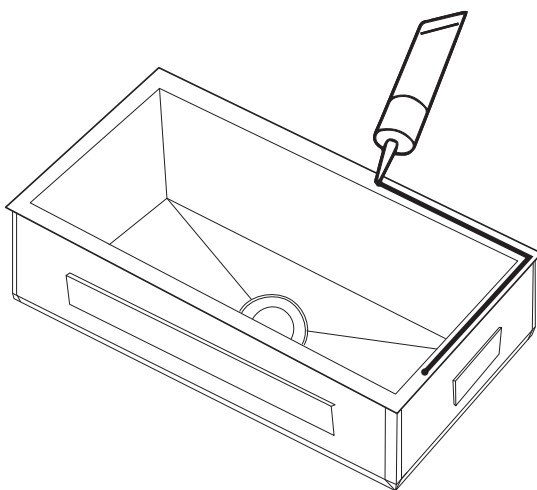

STEP6

Attach Mounting Hardware

1. Attach the sink clips by placing the long end of the bracket flat against the sink lip. Screw the wing bolts through the brackets and bolt holes, and tighten them snugly.
2. Allow sealant to set for 30 – 60 minutes

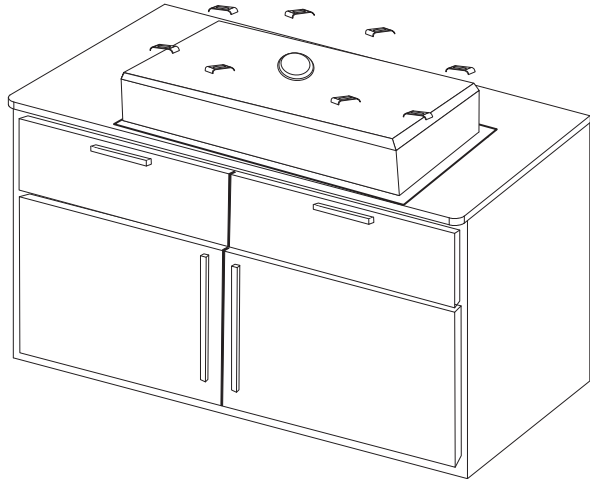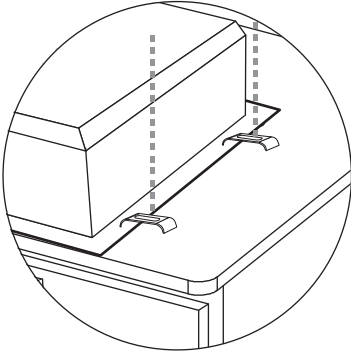

STEP7

Carefully turn the countertop and

attached sink over. Remove any excess silicone and let silicone dry

