
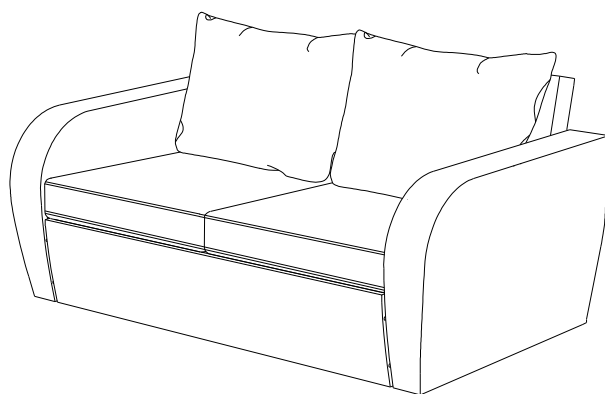
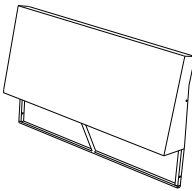

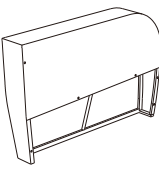
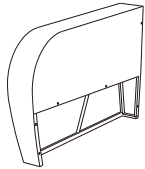
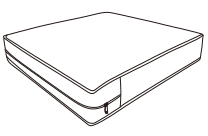
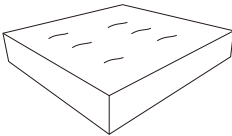
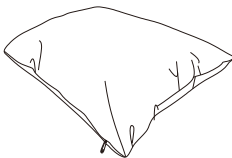
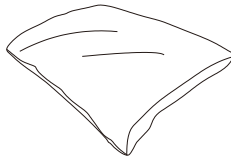








PART LIST

A 	B 	C 	D 	E 
Back Panel 1 PC	Seat Panel 1 PC	Right Arm Panel 1 PC	Left Arm Panel 1 PC	Cover of Seat Cushion * 2 PCS
F 	G 	H 	*Please note cushion covers will ship separately.	
Core of Seat Cushion 2 PCS	Cover of Back Cushion * 2 PCS	Core of Back Cushion 2 PCS		

HARDWARE LIST


#1 	#2 	#3 	#4 	#5 
M6*55mm	M6*65mm	M6mm	M6mm	M6mm
Short Bolt 8 PCS	Long Bolt 6 PCS	Hex Nut 14 PCS	Flat Washer 28 PCS	Wrench 1 PC
#6 				
M6mm				
Allen Wrench 1 PC				

EXTRA HARDWARE LIST

#1 	#2 	#3 	#4 
M6*55mm	M6*65mm	M6mm	M6mm
Short Bolt 1 PC	Long Bolt 1 PC	Hex Nut 1 PC	Flat Washer 1 PC


Step 1. Lay left arm panel (part D) down on a soft flat surface, such as carpet, as shown below. Attach back panel (part A) to left arm panel (part D) using short bolts (part #1), flat washers (part #4), hex nuts (part #3), wrench (part #5) and allen wrench (part #6).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

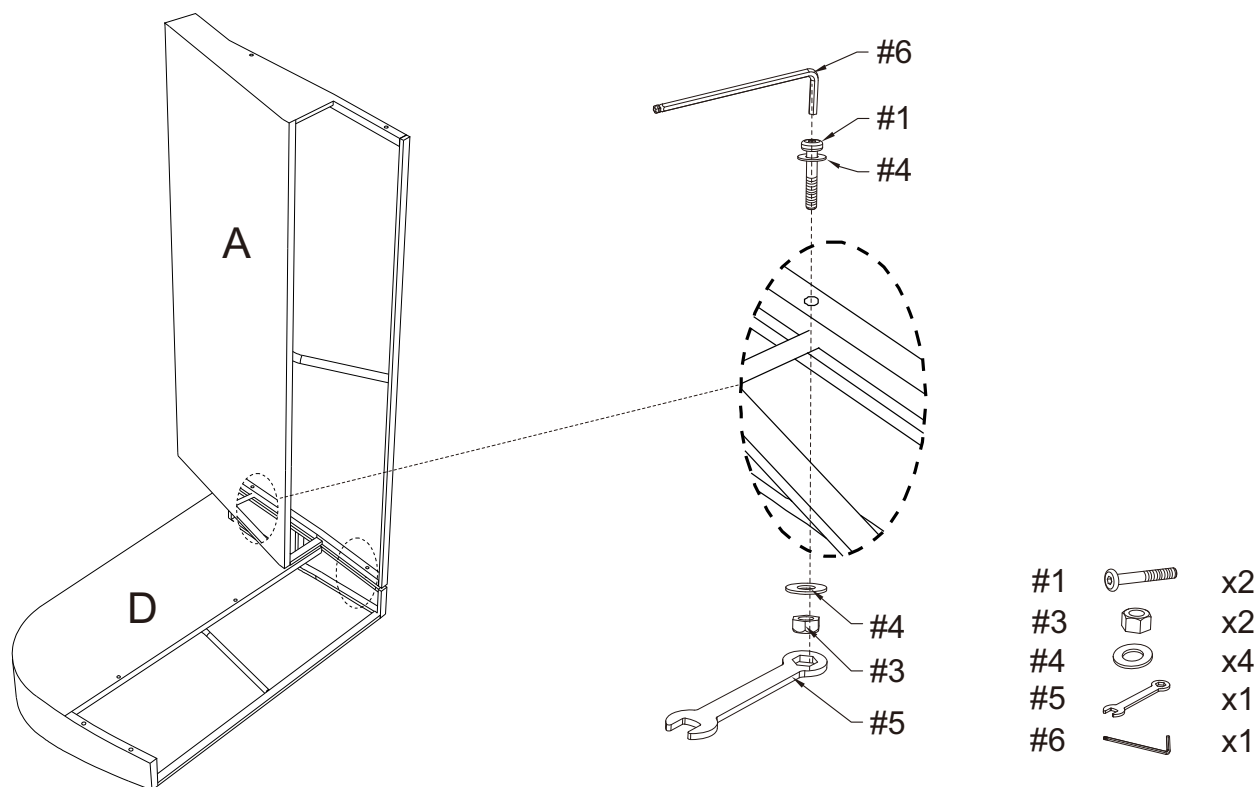


Step 2. Attach seat panel (part B) to back panel (part A) and left arm panel (part D) using short bolts (part #1), long bolts (part #2), flat washers (part #4), hex nuts (part #3), wrench (part #5) and allen wrench (part #6).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

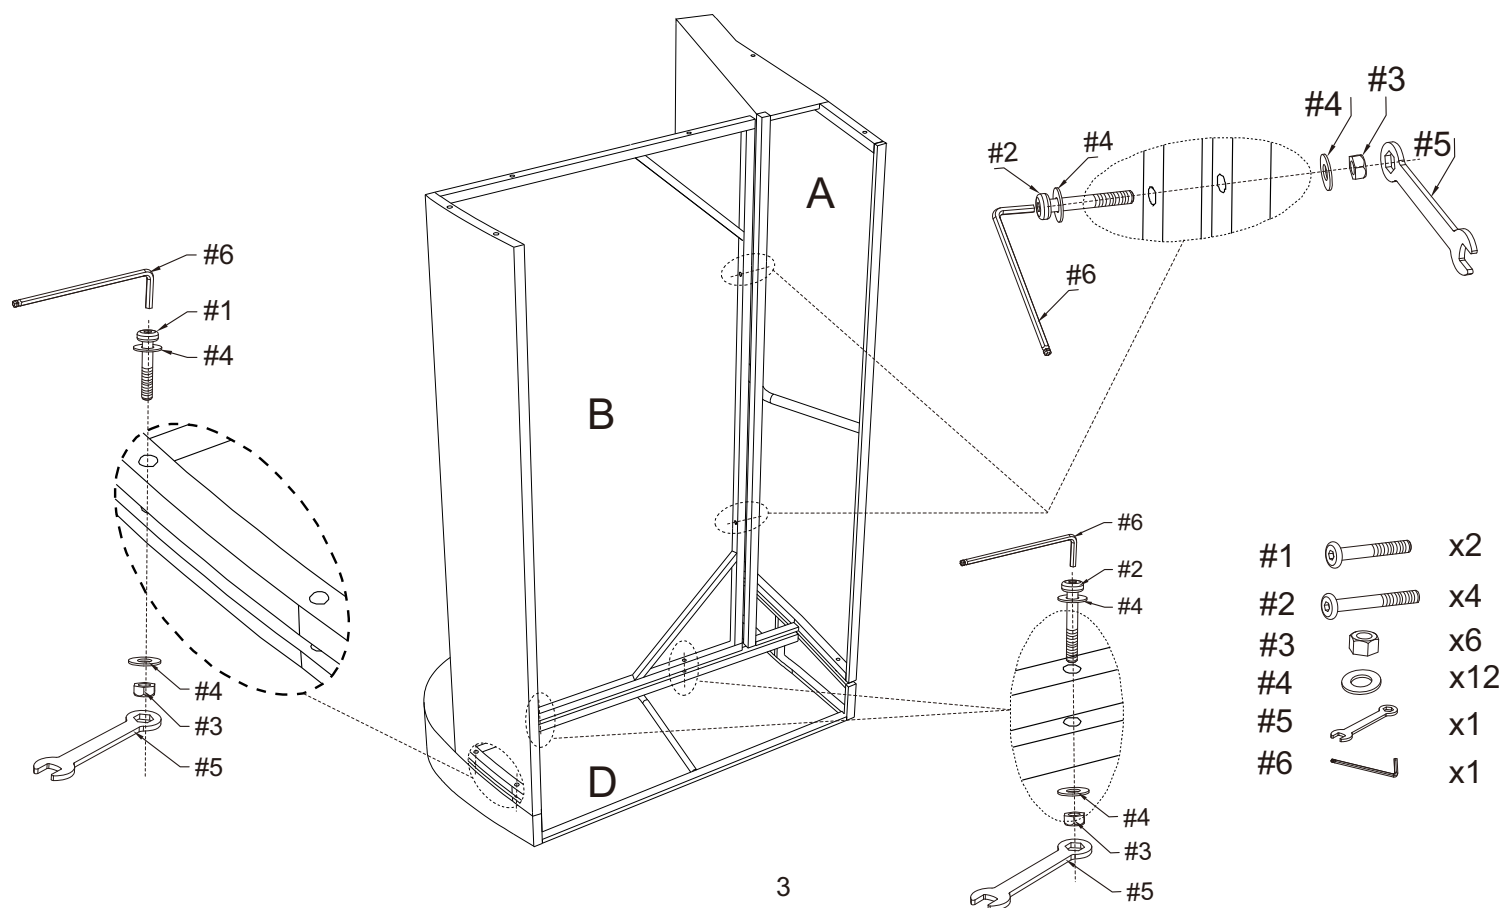

NOTE: Please fully tighten all bolts at this time.



Step 5. Carefully turn the assembled loveseat upright and add cushions as shown below.

