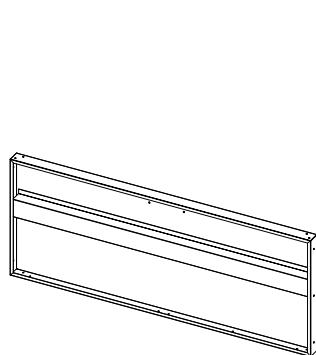


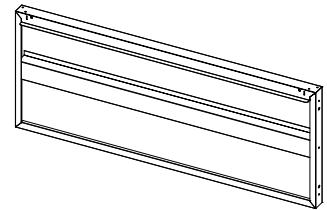
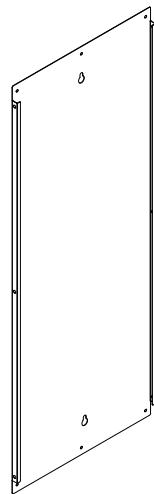
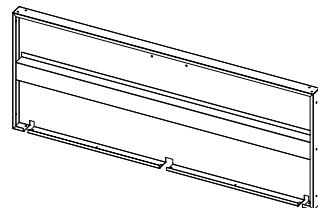
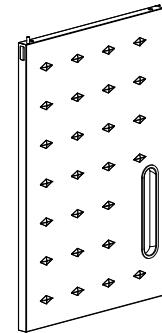
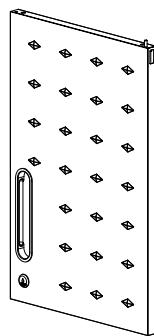
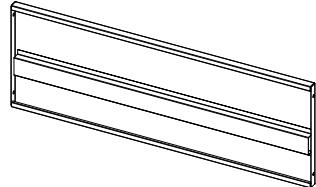

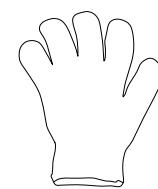

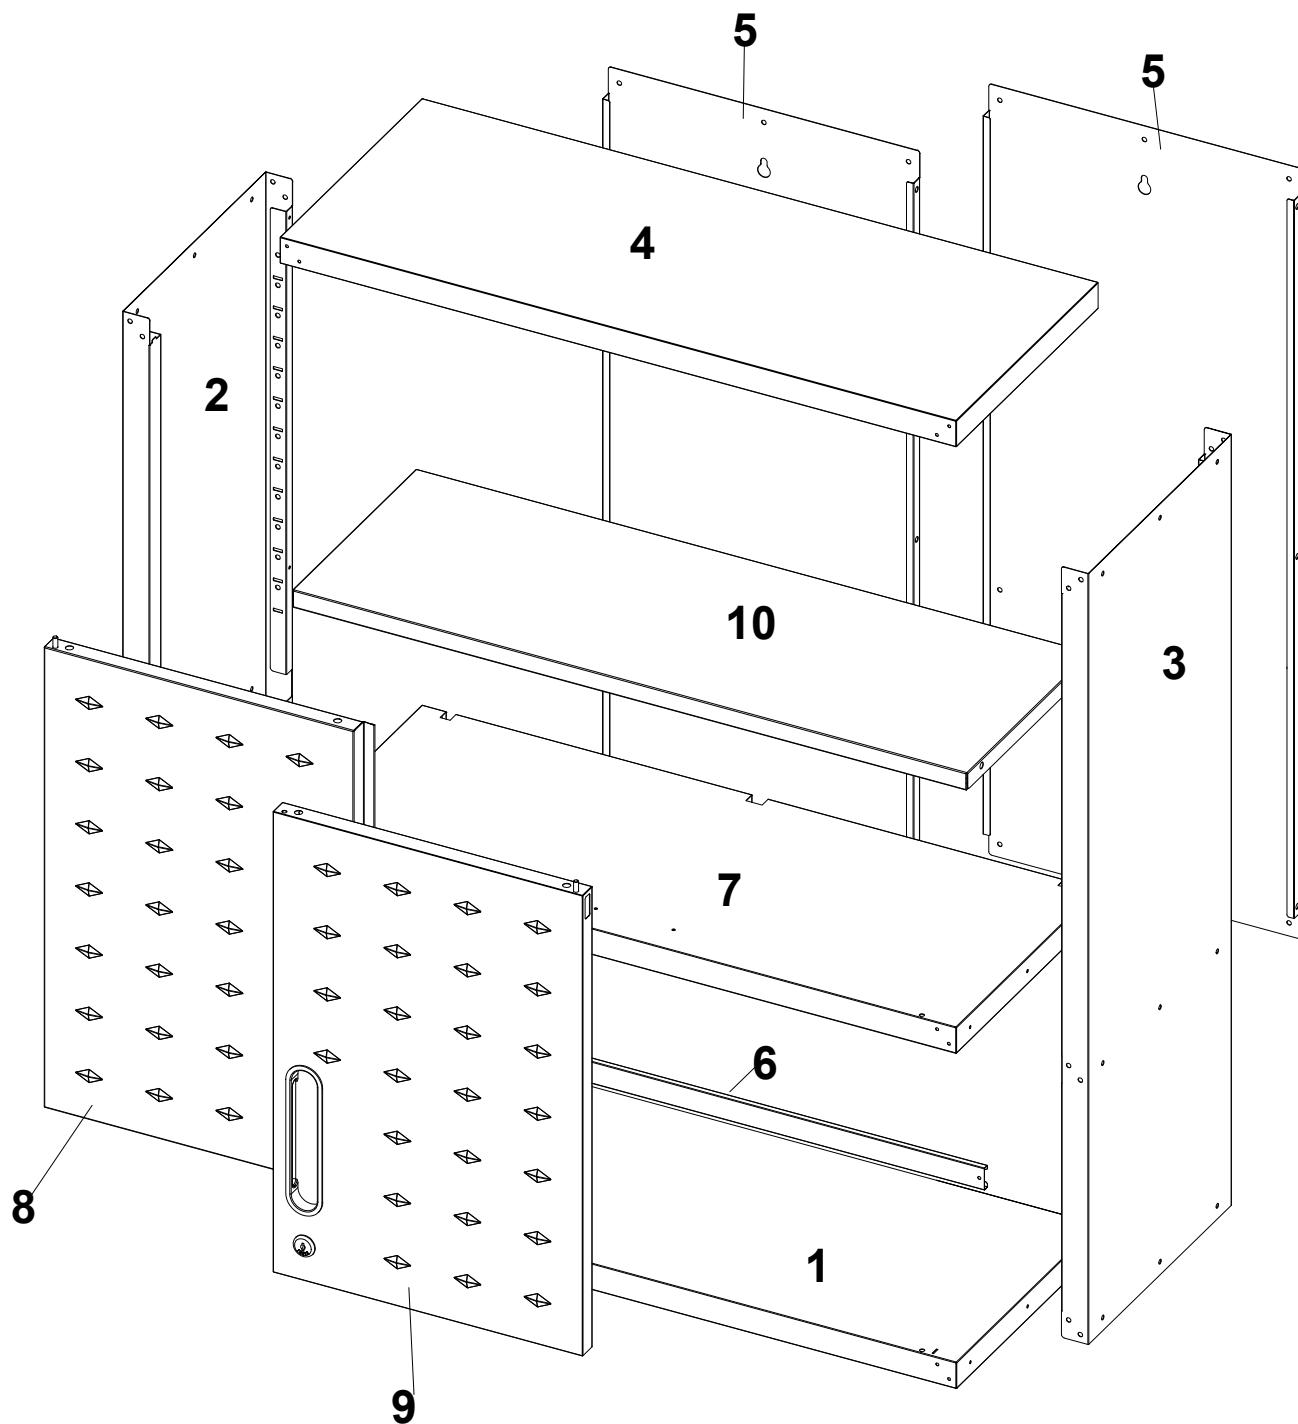


1×1**2×1****3×1****4×1****5×2****6×1****7×1****8×1****9×1****10×1****A×64**M4×
8mm
0.3inch**C×3****F×4pcs****Q×4****S×1****R×2****U×4****V×4**

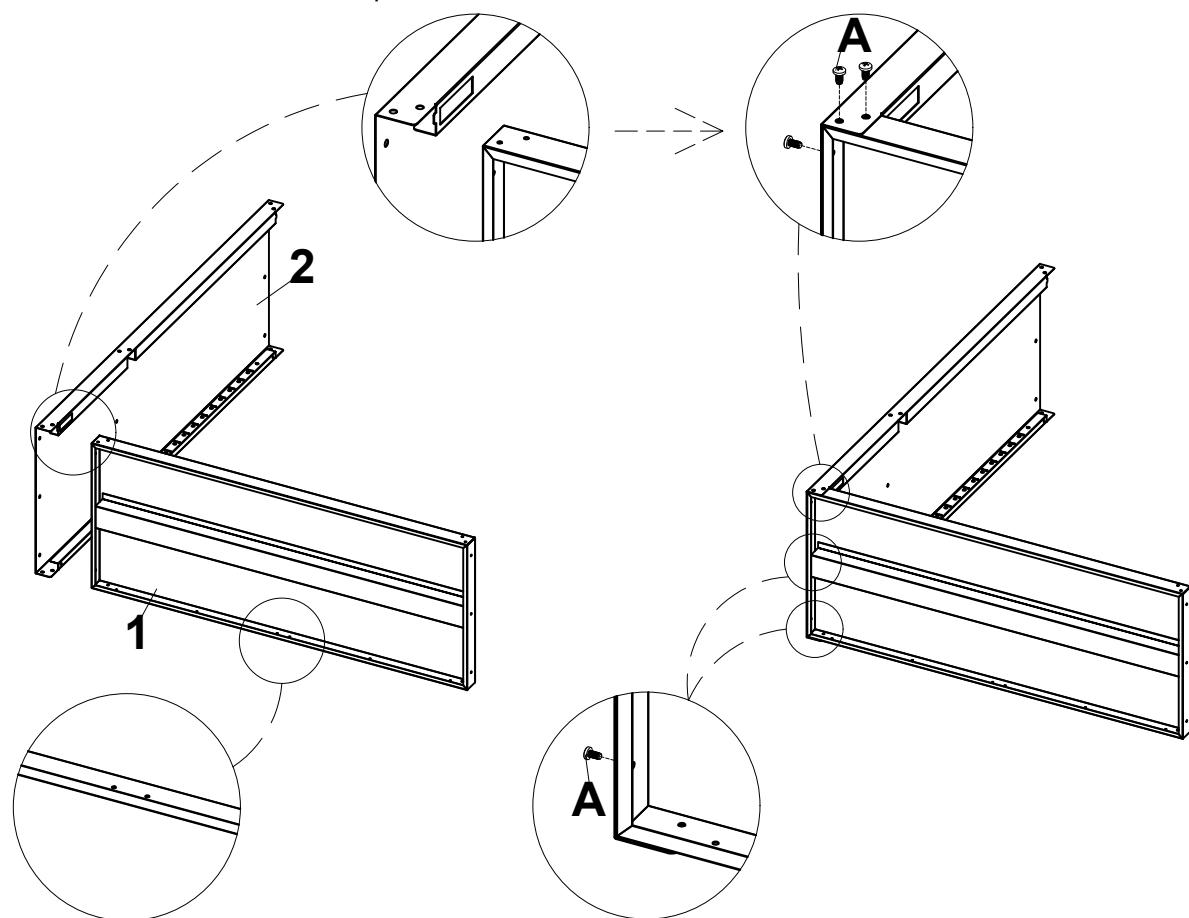
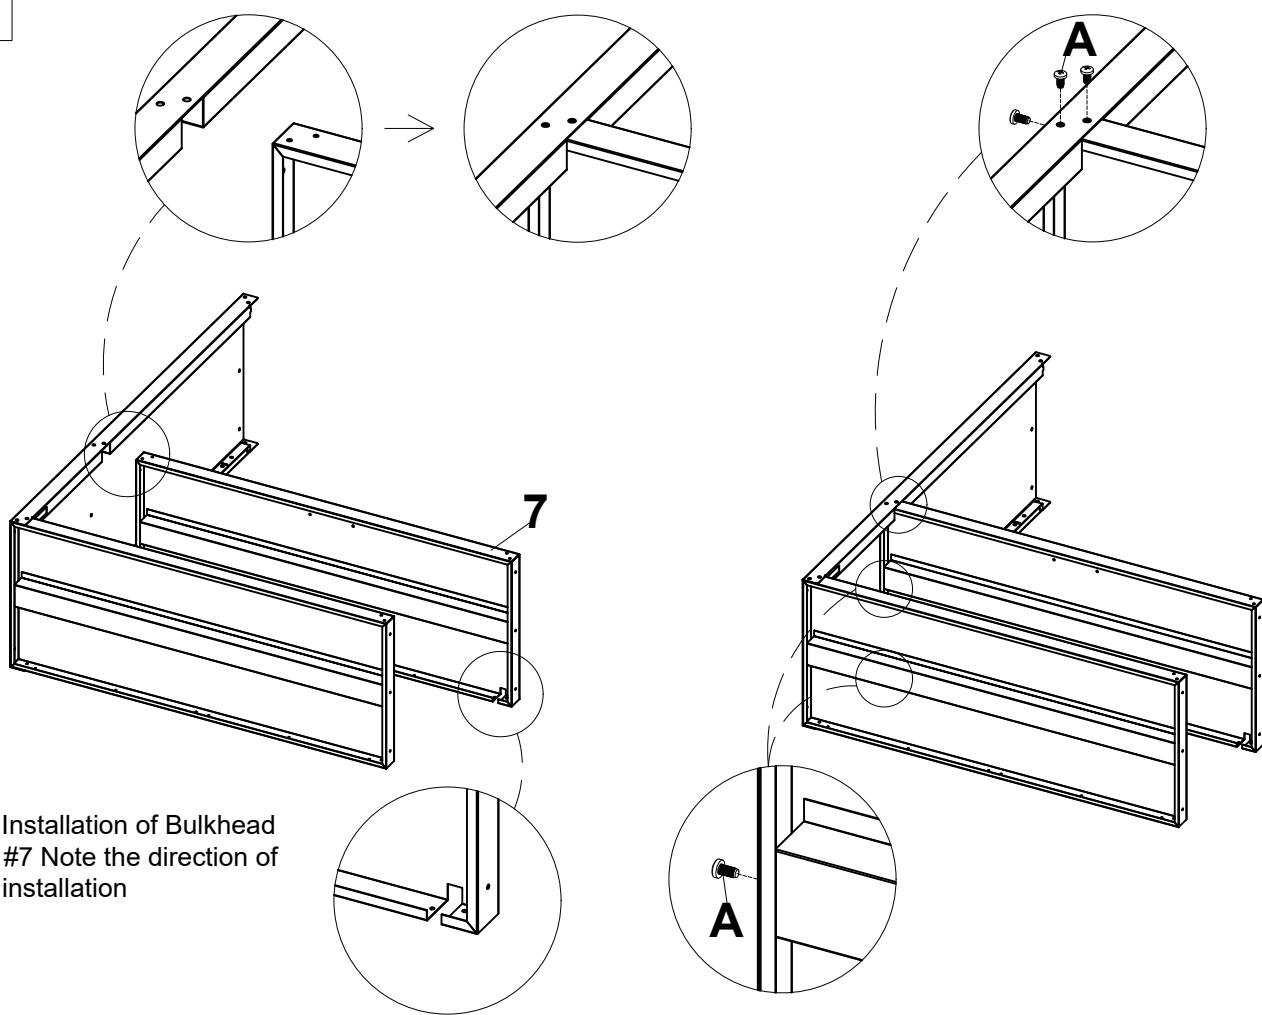
C
M8
0
M5
M5×40 mm





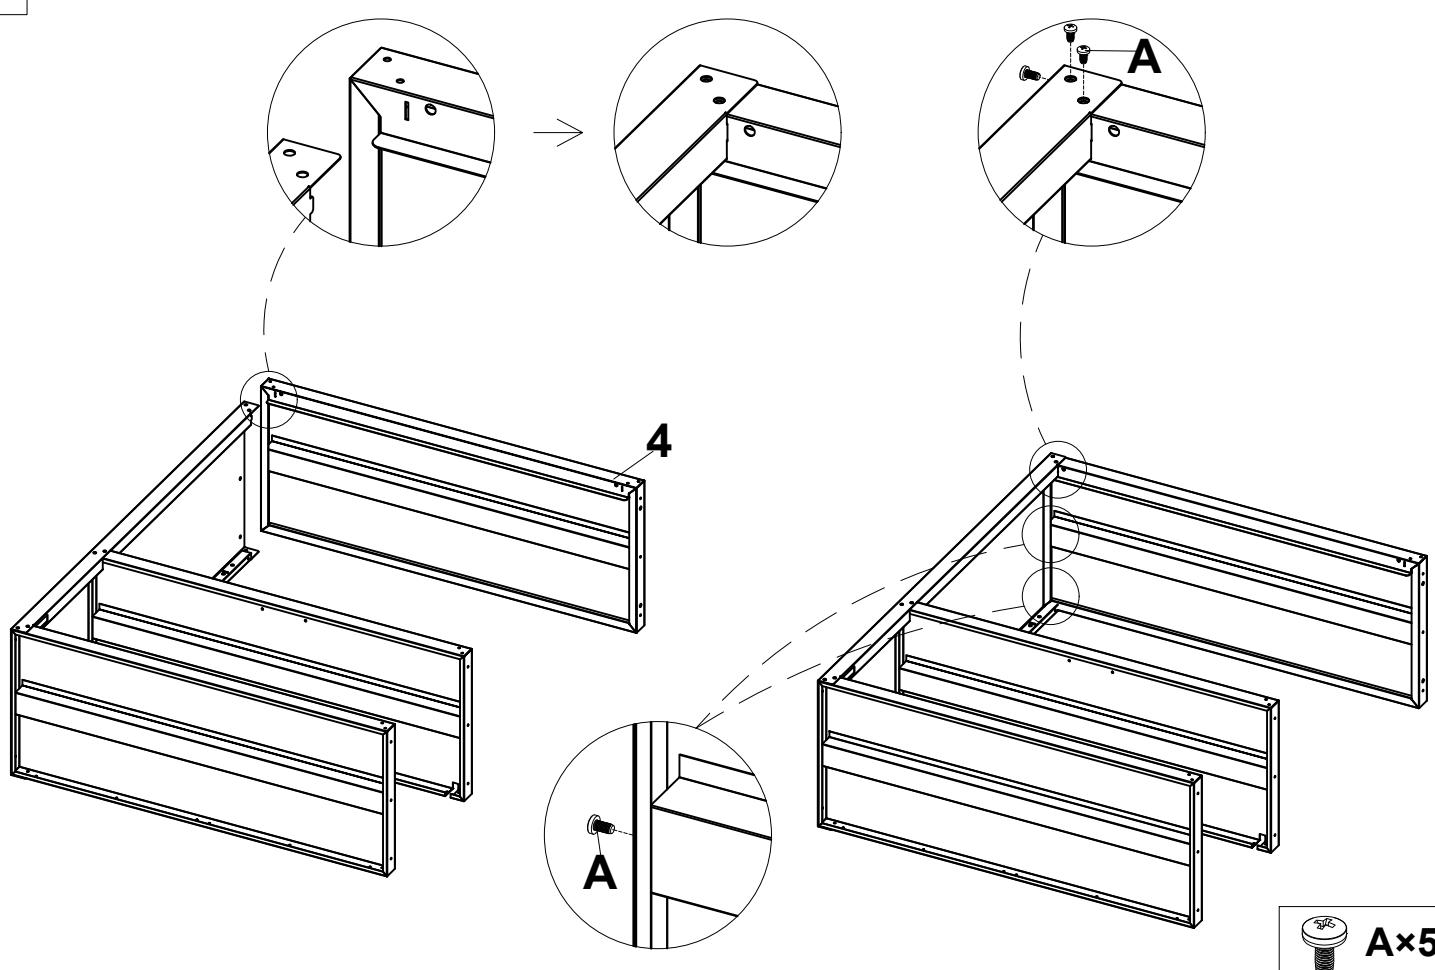
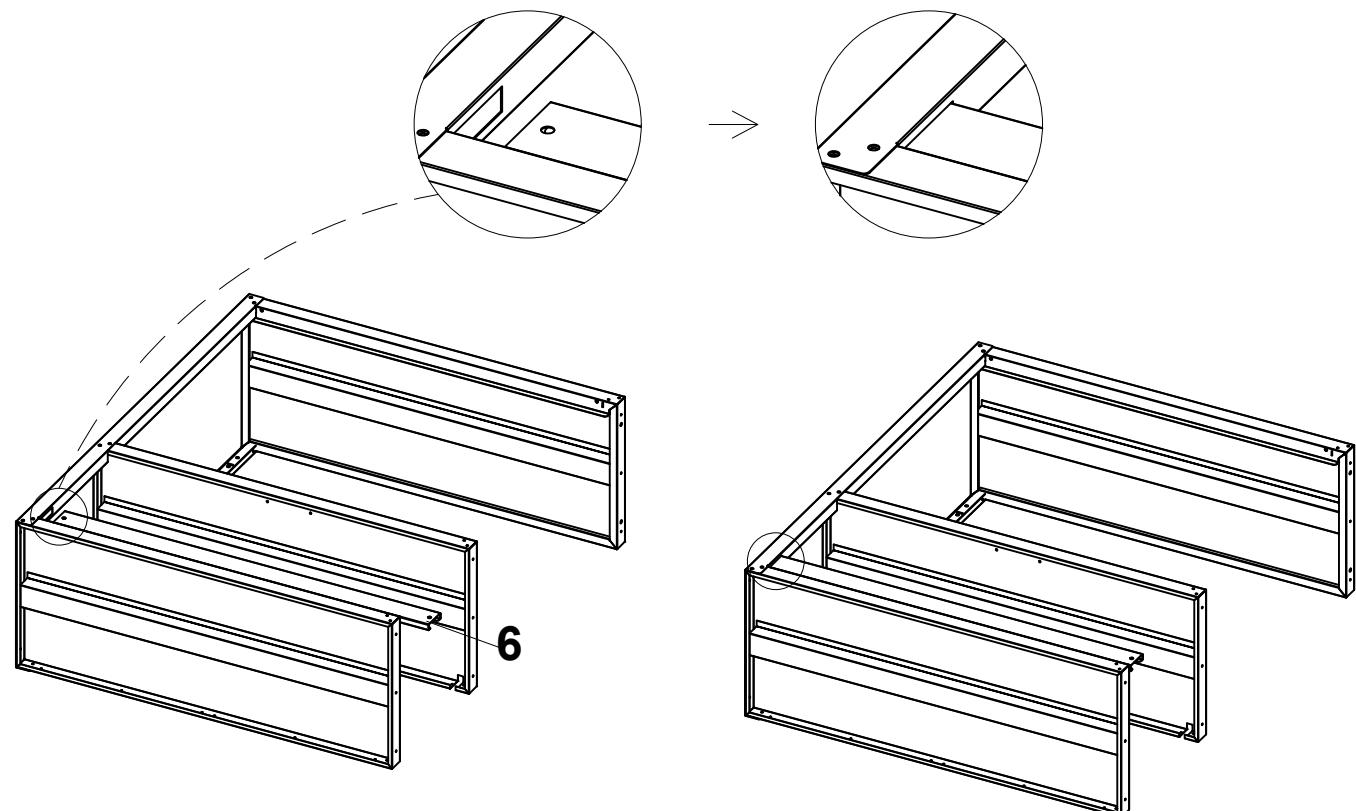
1

Align the lower buckle of side panel 2 with the slot at the top of the toolbox bottom plate, and then lower it down so that side panel 2 is stuck at the top of the toolbox floor

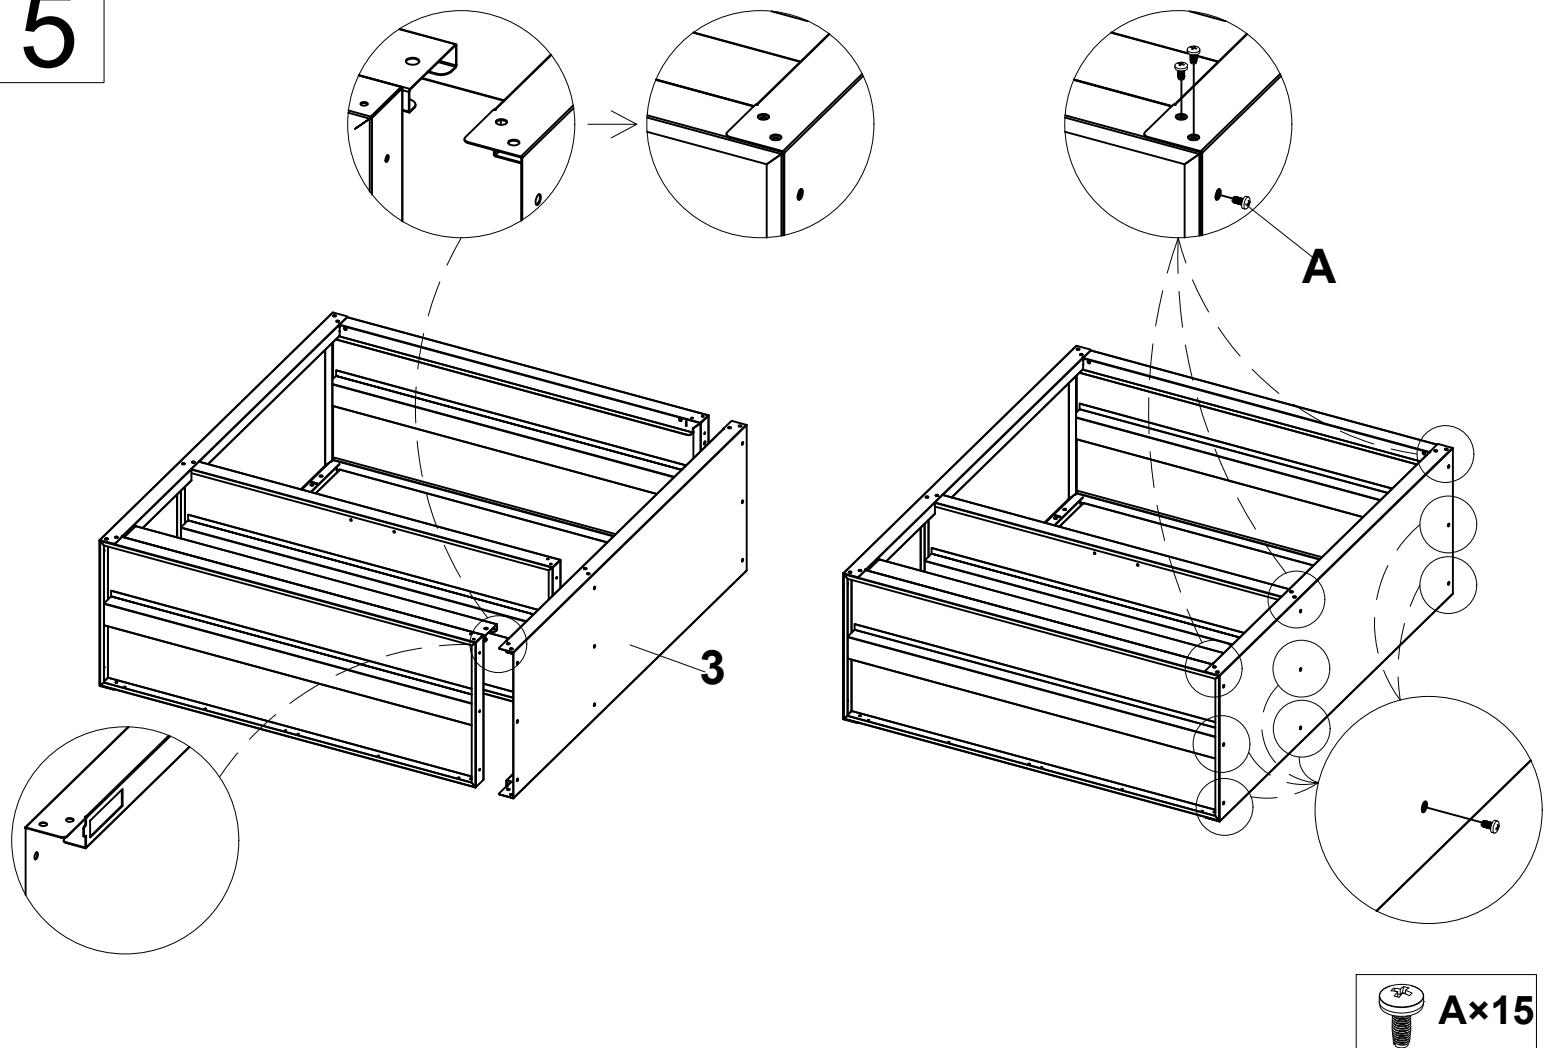
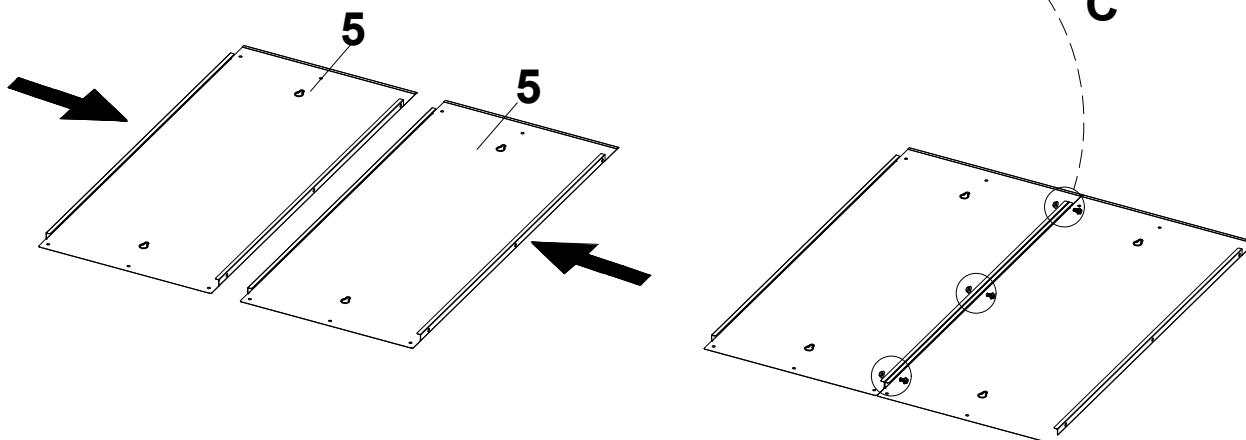
 **A×5****2**

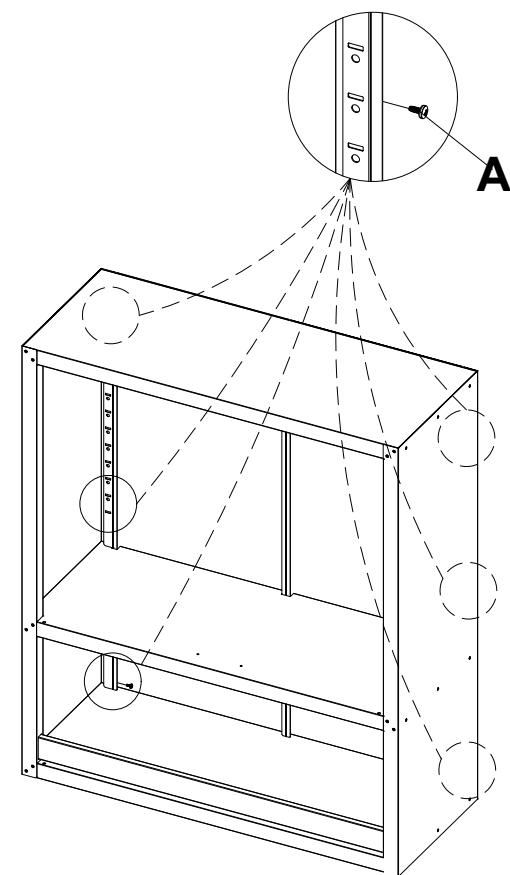
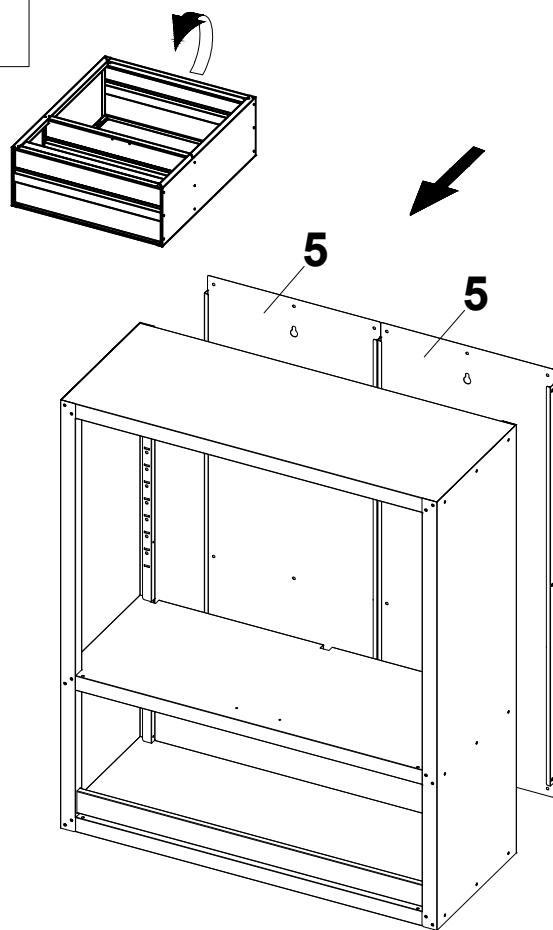
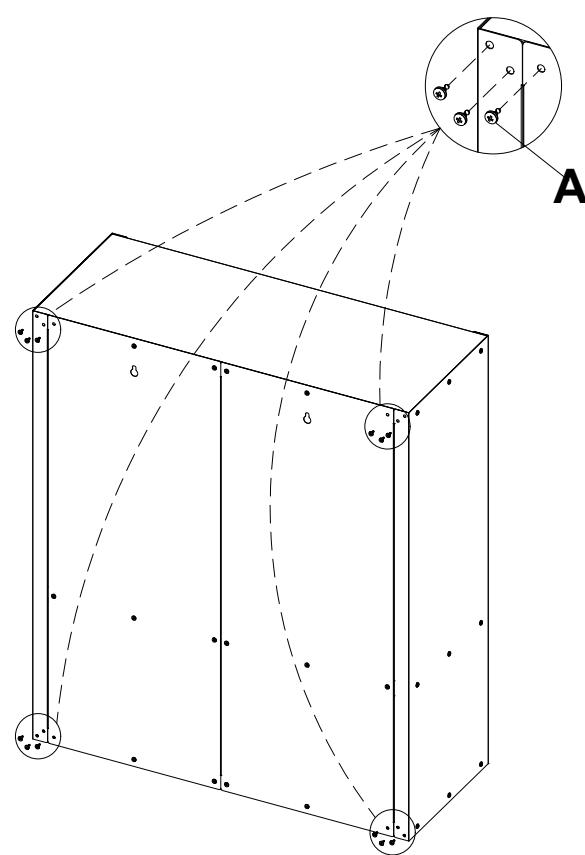
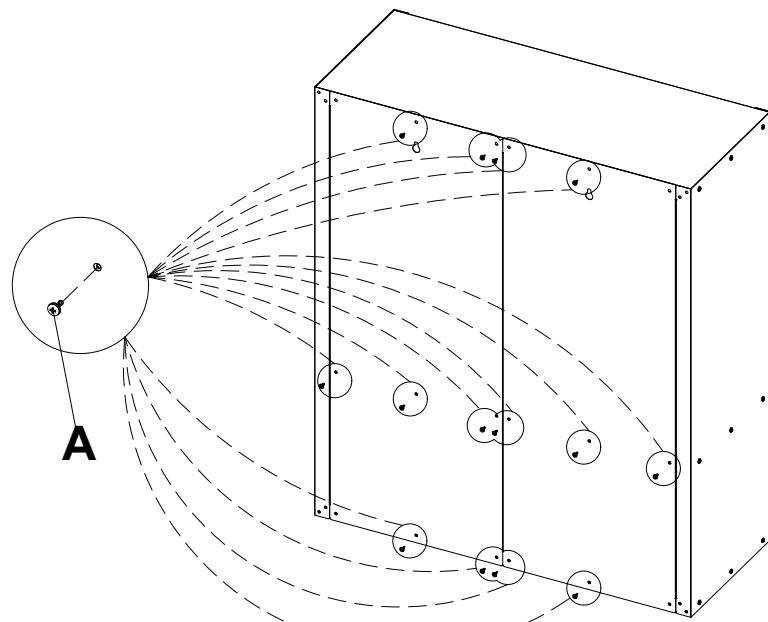
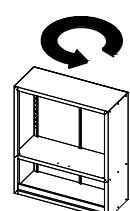
Installation of Bulkhead
#7 Note the direction of
installation

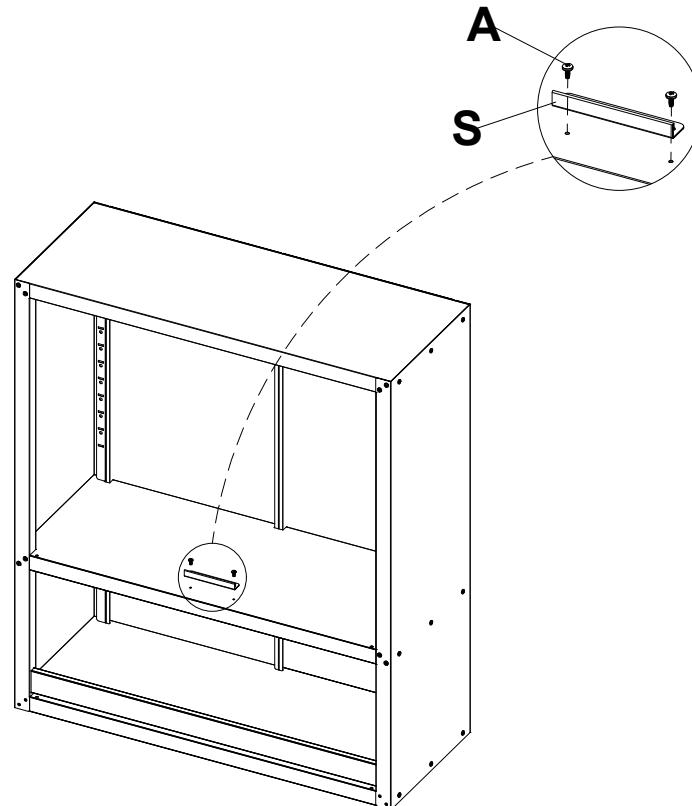


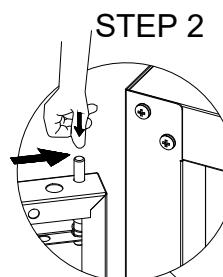
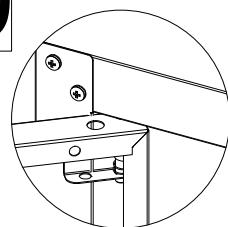
 **A×5**

3**4**

Installation of #6 crossbar Note the direction of installation

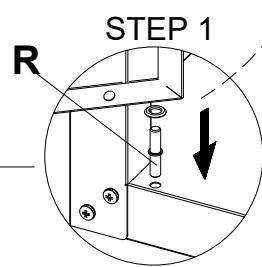
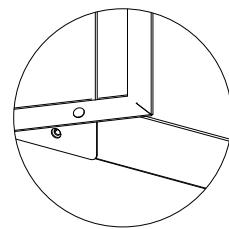
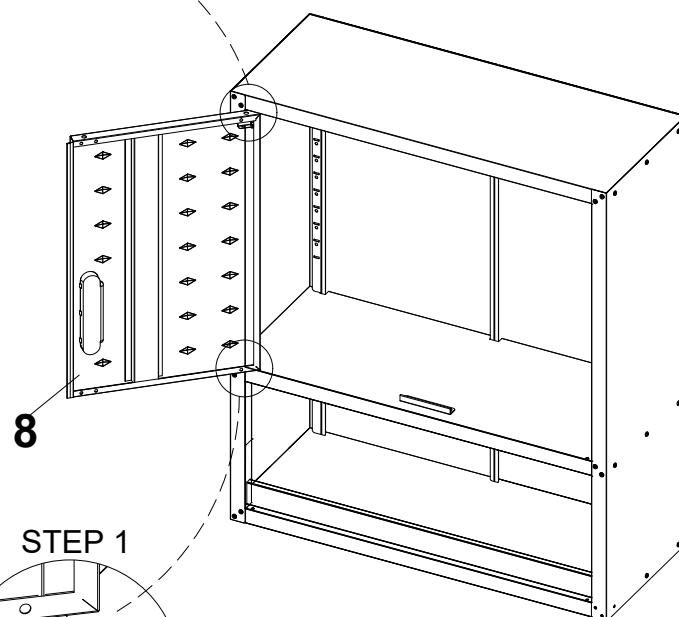
5**6** **Cx3**

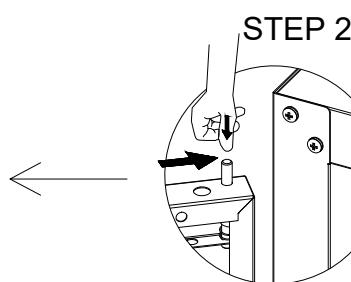
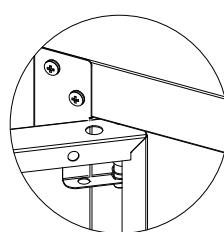
7**8** **A×26**

9**10**

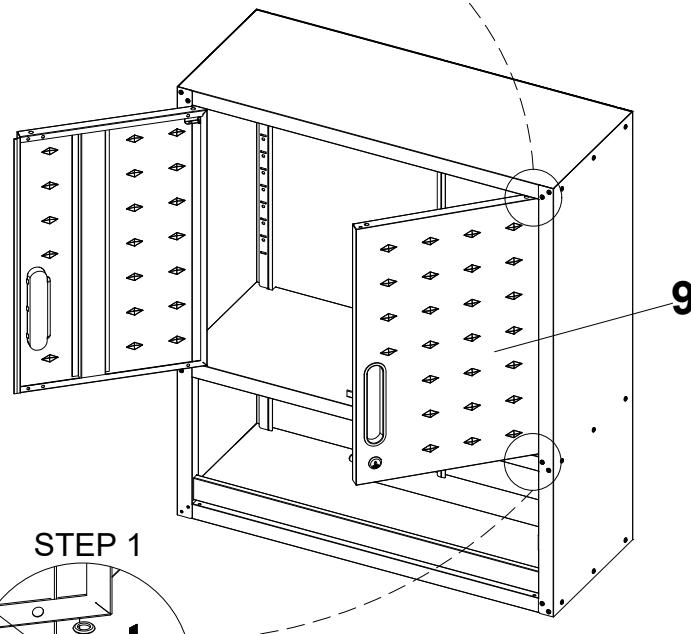
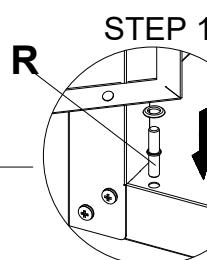
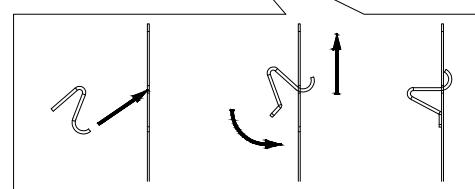
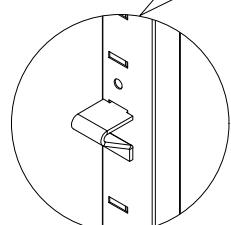
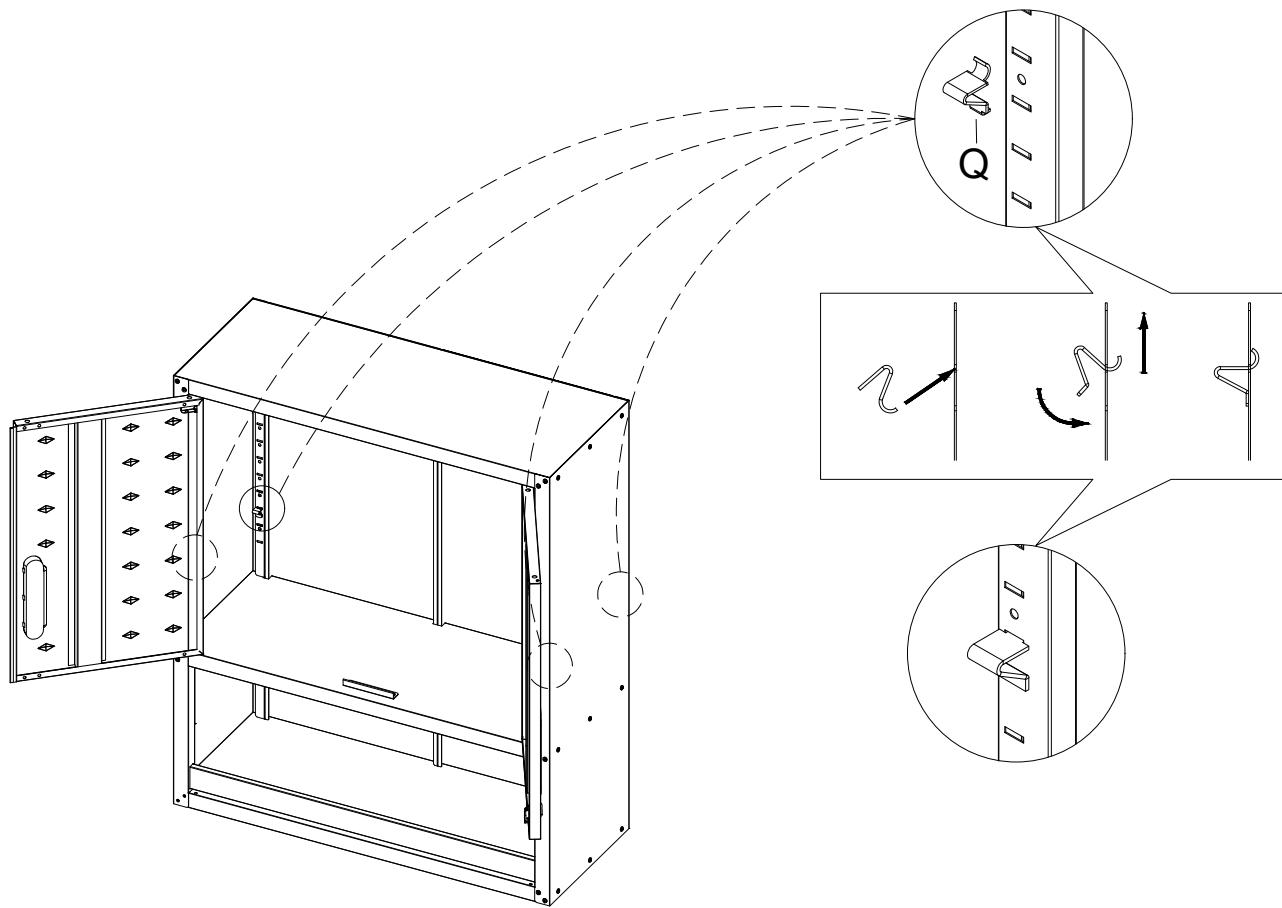
STEP 2

Installation according to step 1 and step 2

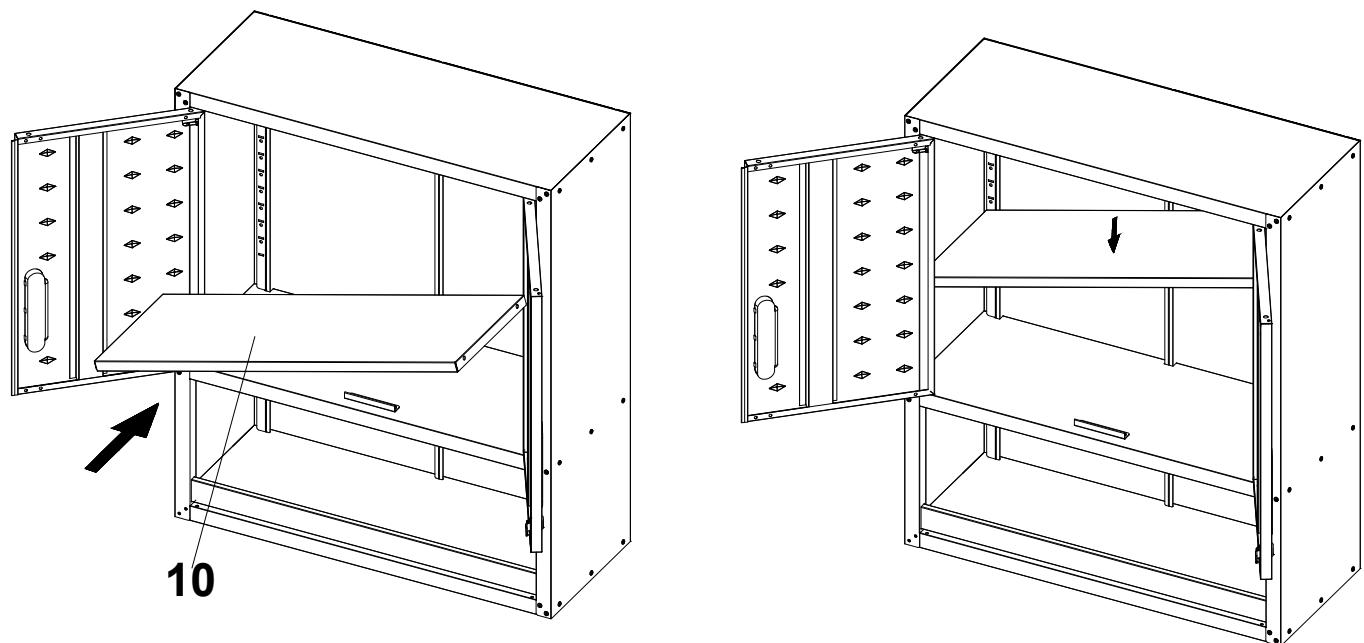


11

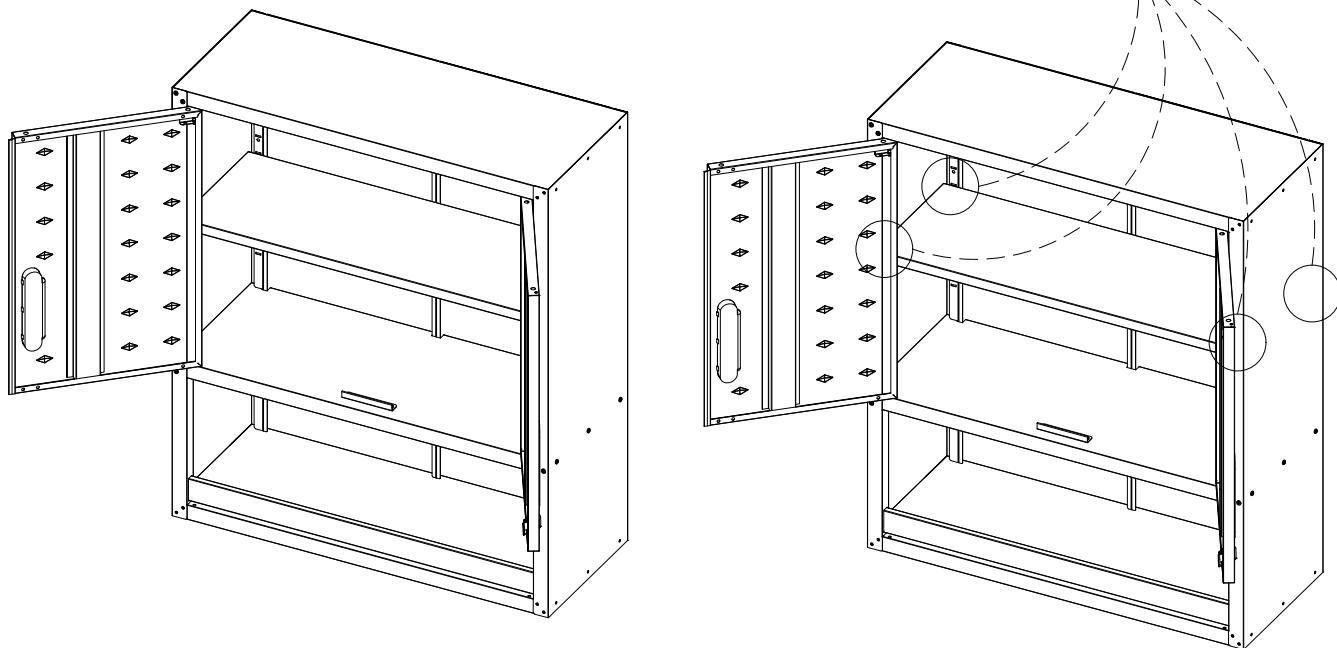
Installation according to step 1 and step 2

**9** **R×1****12****Q×4**

13

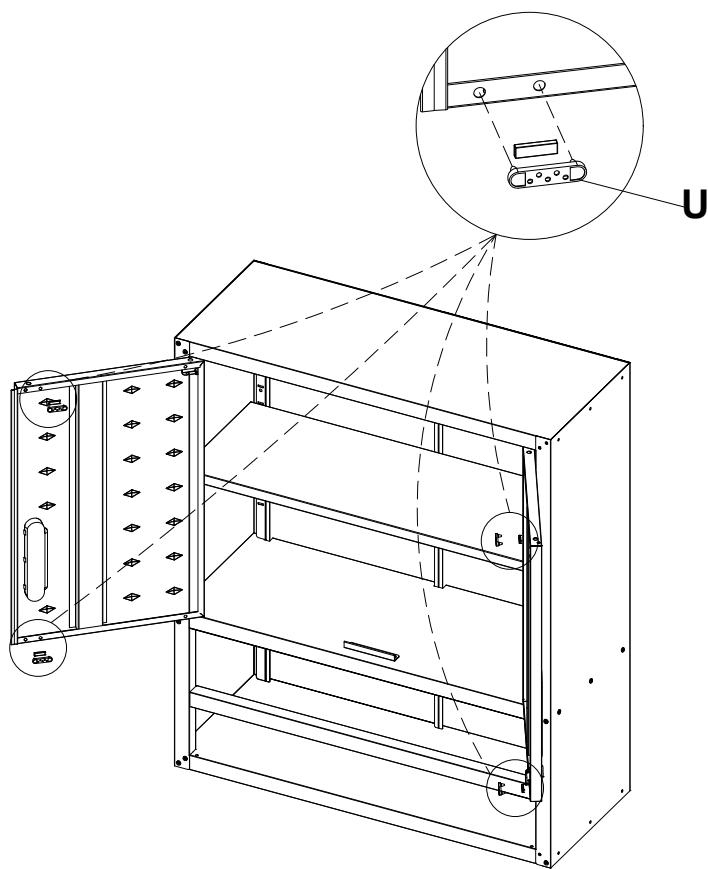


14



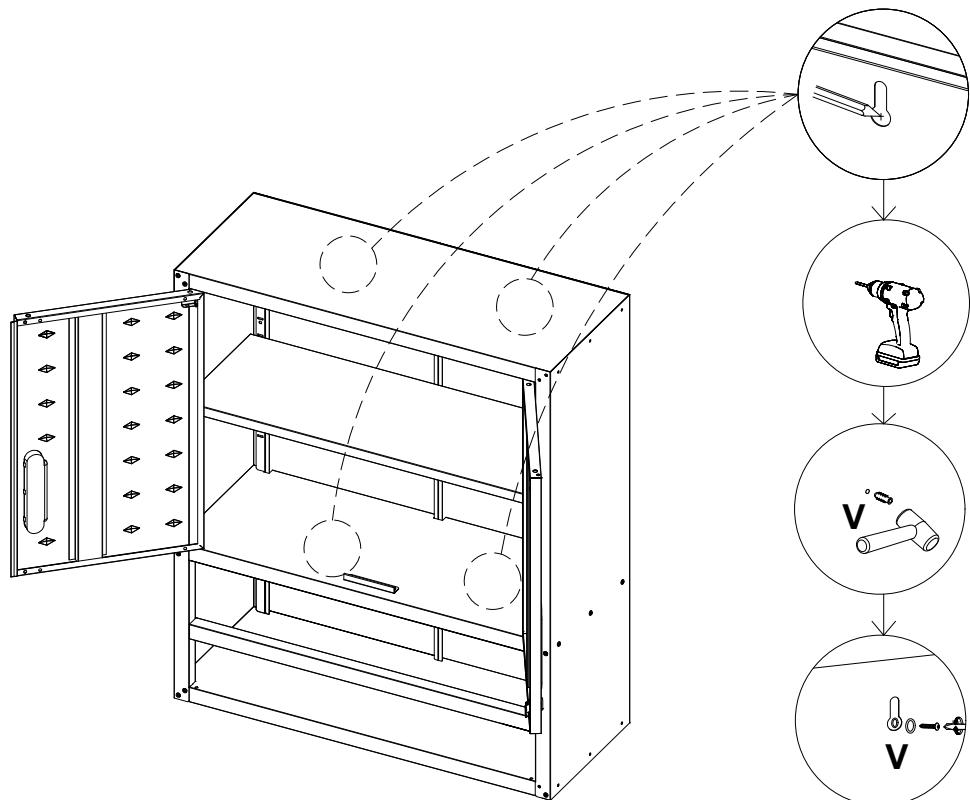
 **Fx4**

15



 **U×4**

16



 **V×4**

17

