

12 x 14FT

WQOT224TN-1/WQOT209MS-1

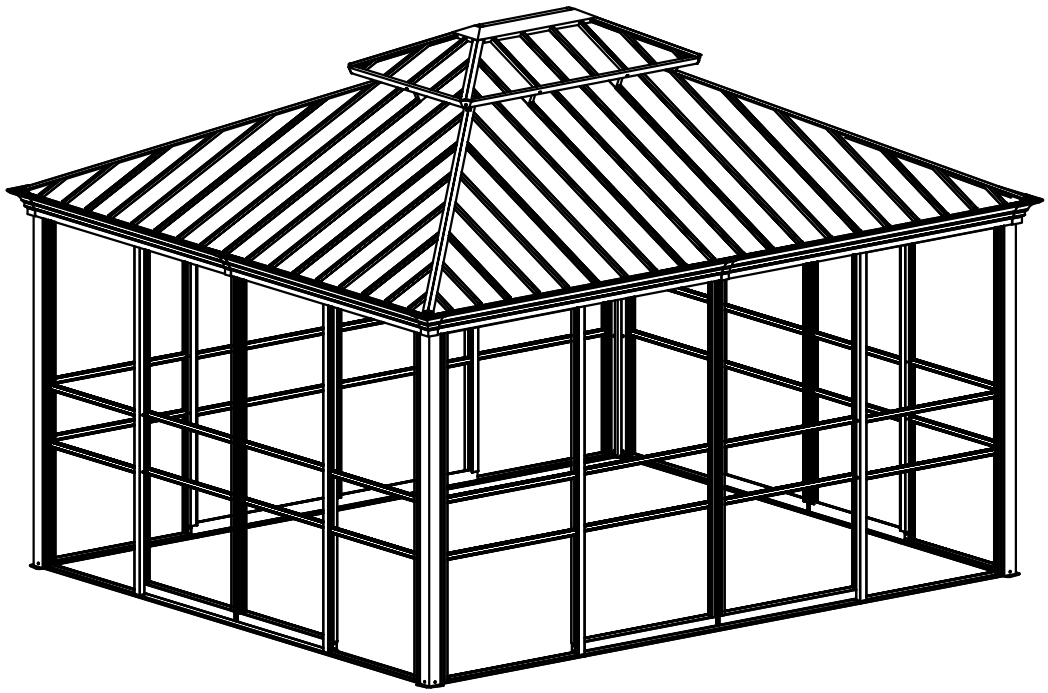

Note: The sunroom needs to be installed in cooperation with five people.


Assembly of this product requires the following tools, these tools are not included, please bring your own, if you have questions, please contact us.

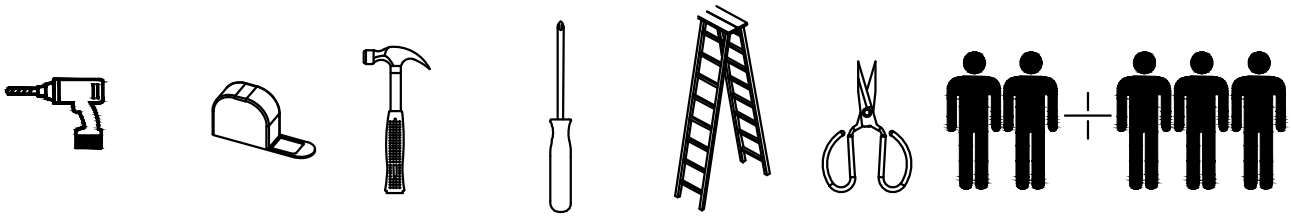



Pistol Drill Tape Measure Hammer Screwdriver Ladder Scissor 5 people


ATTENTION:

1. Please check the manual carefully and make sure you have received all the parts.
2. If any parts are missing, please let us know the letter marked on the part.
3. If any parts are damaged, please send us clear photos. We will review them and provide the best solution as soon as possible.
4. If you have any problems, please feel free to contact us. Our professional customer service and after-sales team are always ready to help you.
5. You can reach us via email at **customer01service@hotmail.com.**

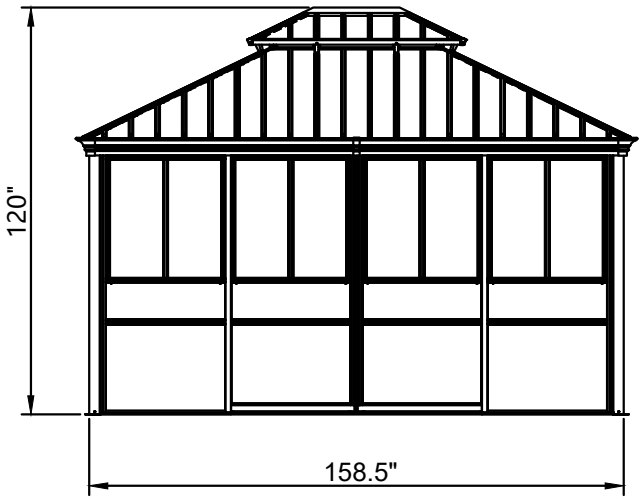
120"
158.5"

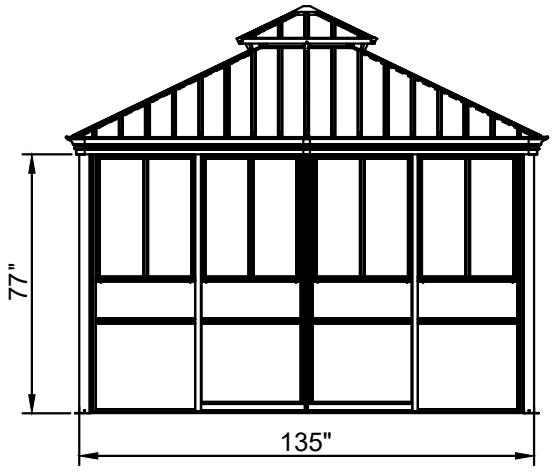
77"
135"

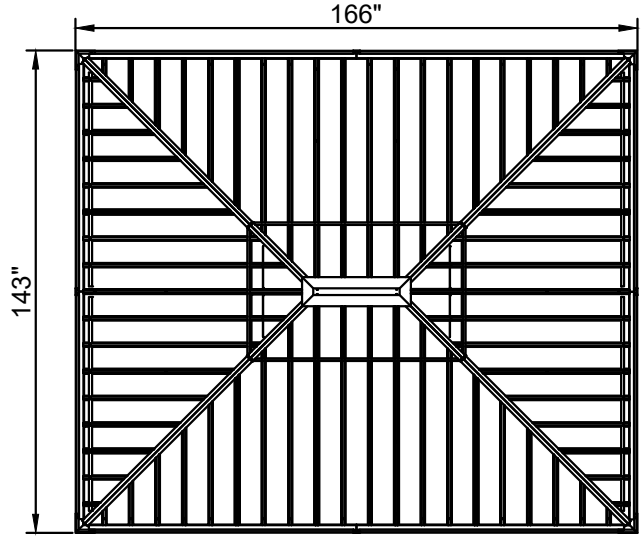
166"
143"

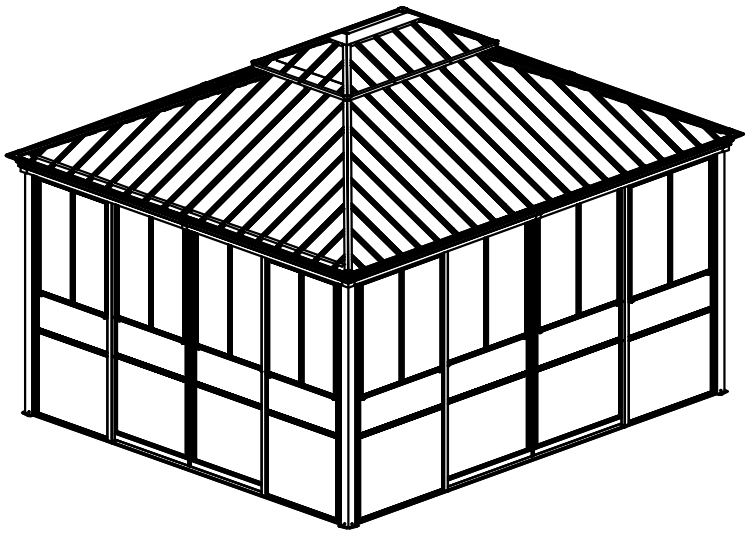

Box 1

Part #	Qty
AB1	2
AB2	2
D	2
D1	2
D2	2
D3	2
D4	2
M4N	2
JZ2	4
5-1	1
Y	88
E	4
U1	4
U2	4
U3	4
U4	4

12x14

AB	AB	AD	AD	AF	AF	AG	AG
BA	BA	DA	DA	AF	AF	AG	AG
AC	AC	AE	AE	AF	AF	AG	AG
CA	CA	EA	EA	AF	AF	AG	AG

1

Box 2

Part #	Qty
M6N	2
M1B	4
M2B	4
M5B	4
M6B	4
M2D	1
JZ1	6

3

W	4
W1	6
N	8
Z1	8
Z2	8
G1	2
G2	2
AB5	2
AB6	2
M1A	4
M2A	4
M1F	4

Box 3

Part #	Qty
JA1	4
I1	2
I2	2
M1C	1
M2C	4
M6J	2
M6P	4
M4P	4
M2D	3
M1G	16
M1E	4
MQ2	32
4-1	16
V1	2
V2	2

Box 4

Part #	Qty
JE2	6
M1D	4
M1C	3
M4J	2
M4K	4
M6K	4
M4M	4
M6M	4
M6H	4
M4H	4
E5	4
Z	64
P	4
K	4

Box 5

Part #	Qty
MS10	8
MS11	4
M1S	8
M3S	8
MS12	4
1R-1	16

Box 6

Part #	Qty
MS3	4
MS2	8

MS4	4
1R-2	16
MS1	16
MS9	16
M4L	16
M6L	16
M5G	16
M7G	16
1R-1	32
1.2.3.4.5.6.7.8.9 10.11.12.13.14.15 16.17.18.19.20.21 22.25. 26	1

Box 7

Part #	Qty
R1	4
R3	4
F1	8
F2	2
L2	1
K1	4
M2	1
S1	4
S2	4
S3	2
AJ1	4
M1E	28
MD1	64
5-1	1
23	88
24	1


MD2	128
MD3	32
MD4	17
MD5	17
3-1	17


Box 8

Part #	Qty
R2	4
R4	4
R5	4
R6	4
R7	2

The instruction manual is in Box A.

Take out the plastic (packing material) blocks at both ends of the parts M1E, M1G, M5G, M7G, M4H,M6H,M4L and M6L

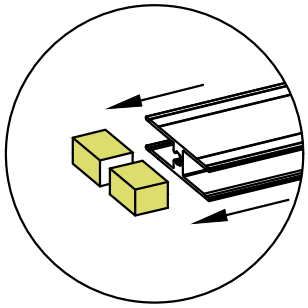



JA1 4x




AB1 2x



AB2 2x




AB5 2x




AB6 2x




E 4x

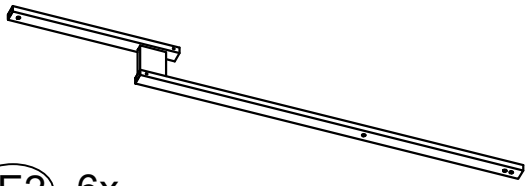


JE2 6x




D1 2x

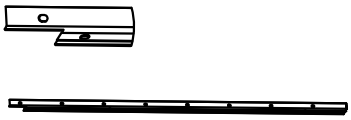


D2 2x

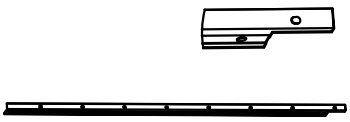

D3 2x



D4 2x

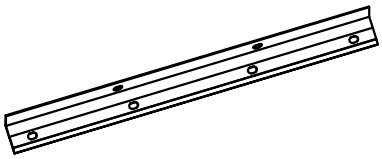


D 2x



E5 4x




F1 8x

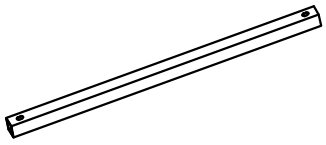


F2 2x

G1 2x

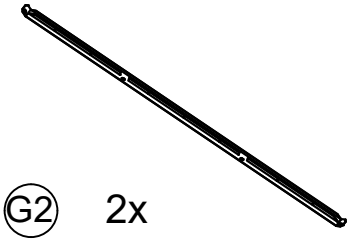


G2 2x



I1 2x




I2 2x



V1 2x



V2 2x




M2 1x



L2 1x




M2A 4x

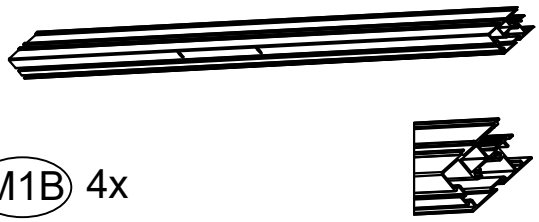

M1B 4x



M1A 4x

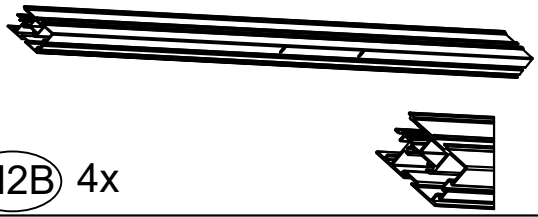

M2B 4x



M5B 4x




M6B 4x




M1D 4x



M2D 4x



M1C 4x



M2C 4x




M1F 4x




M4J 2x




M6J 2x

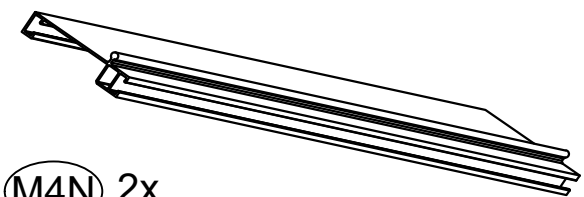

M4N 2x

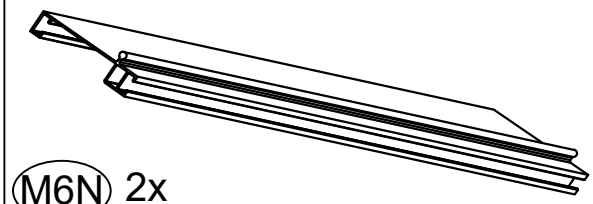

M6N 2x

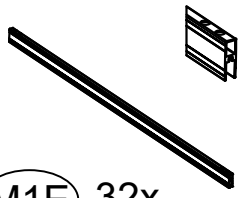


M1E 32x




M1G 16x




M5G 16x

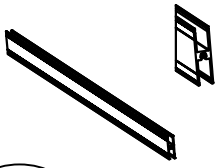


M7G 16x

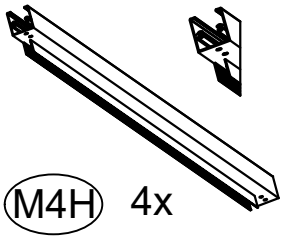


M4H 4x

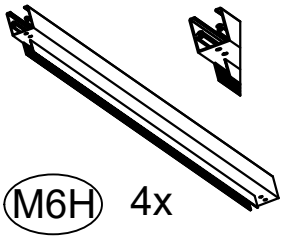


M6H 4x

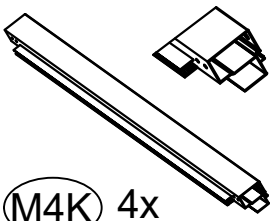


M4K 4x

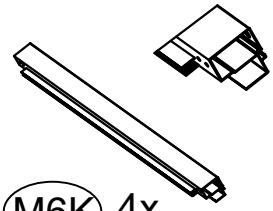


M6K 4x

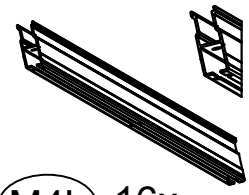


M4L 16x

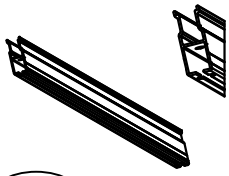


M6L 16x

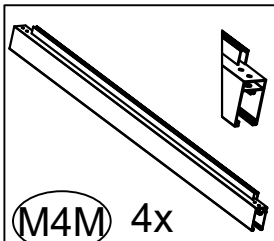


M4M 4x

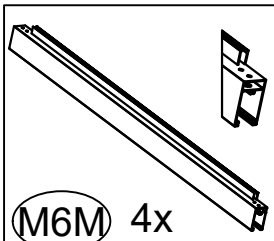


M6M 4x

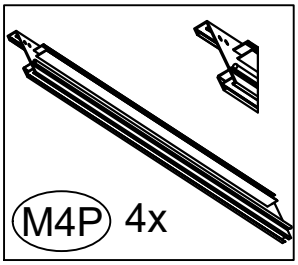

M4P 4x

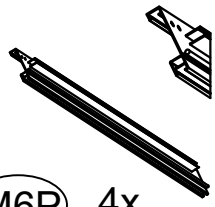


M6P 4x

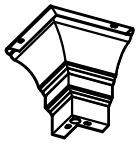

K 4x




K1 4x

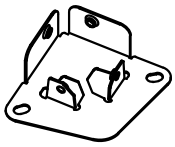


AJ1 4x



W 4x




W1 6x




P 4x




JZ1 6x




JZ2 4x

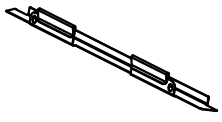


Z 64x

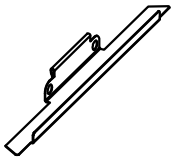

Z1 8x

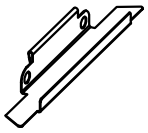

Z2 8x

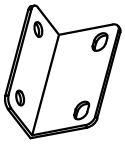


MQ2 32x




N 8x




Y 88x




MD1 64x




MD3 32x



MD4 16x




MD5 16x



6.2*11*15


3-1 16x

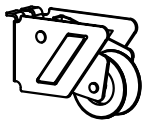


4-1 16x



5-1 2x

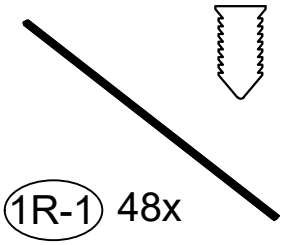


1R-1 48x

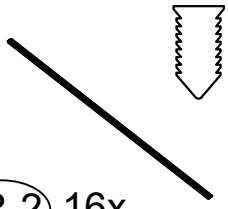


1R-2 16x




R1 4x




R2 4x




S1 4x




S2 4x



R3 4x




R4 4x




R5 4x




R6 4x




R7 2x

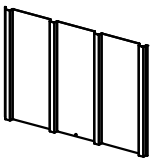


S3 2x




MS1 16x




MS2 8x

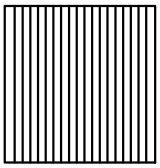


MS3 4x

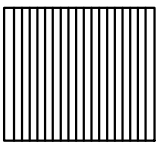


MS4 4x




MS9 16x




MS10 8x

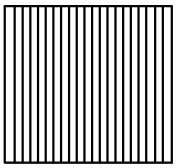


MS11 4x

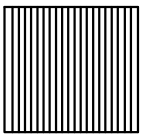

MS12 4x

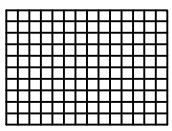


M1S 8x

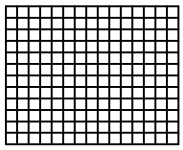

M3S 8x


12x14							
AB	AB	AD	AD	AF	AF	AG	AG
BA	BA	DA	DA	AF	AF	AG	AG
AC	AC	AE	AE	AF	AF	AG	AG
CA	CA	EA	EA	AF	AF	AG	AG




U1 4x



U2 4x



U3 4x



U4 4x



MD2 128x



M6x15

1 316x




M6x25

2 80x



ST 4.8x12

3 40x



4 **2x**



M6x50

5 8x



6 8x




M6x10

7 8x



8 8x




9 1x




M6

10 84x




M6

11 16x




M4x20

12 160x




M4x35

13 112x



M4x50

14 64x



15 24x




M5x6

16 96x




M5

17 48x



M5x12

18 48x



M6

19 88x




4mm

20 2x



2.5mm


21 2x

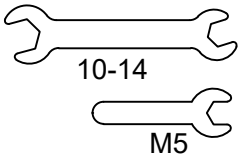

10-14


M5

22 1x




Rubber Gasket

23 88x

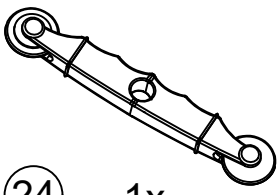

24 1x



M5x15

25 16x




M4x12

26 4x



JA1 4x

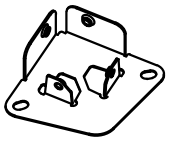


AJ1 4x





M6x15

1 8x


<1>

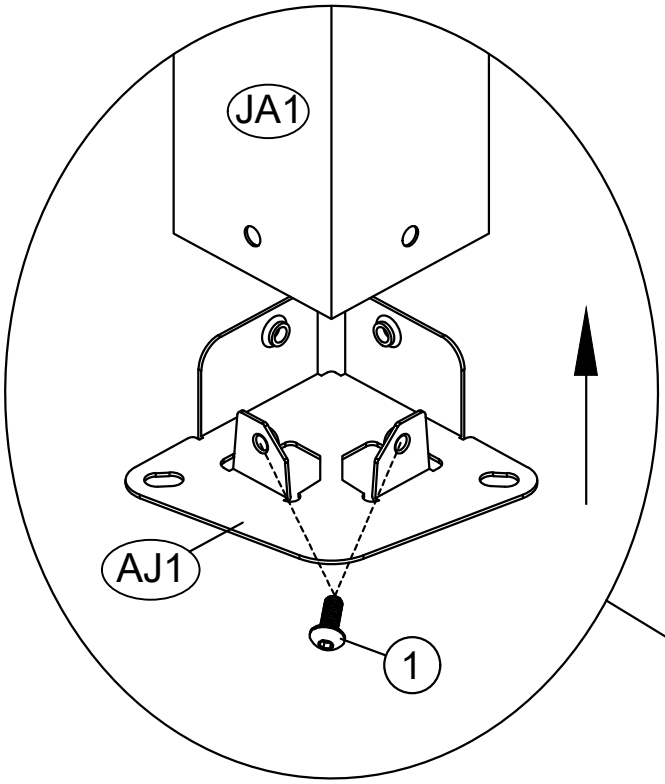

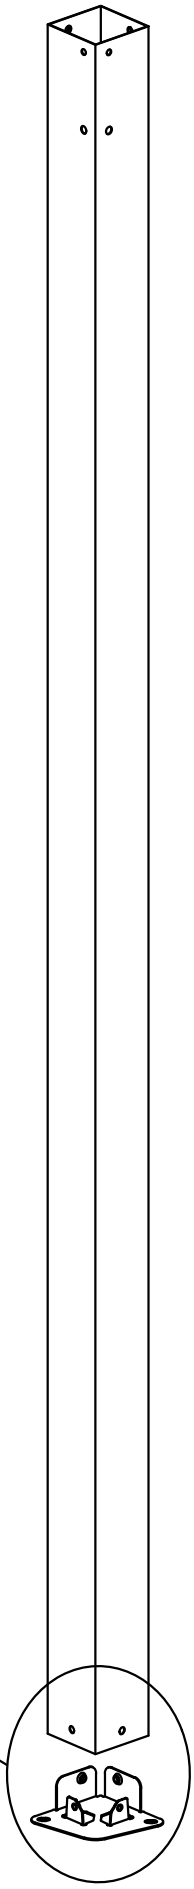


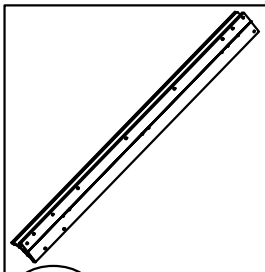


AB1 2x

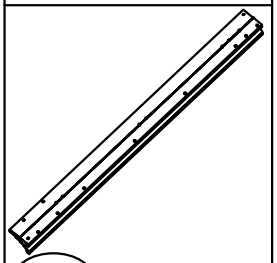


AB2 2x

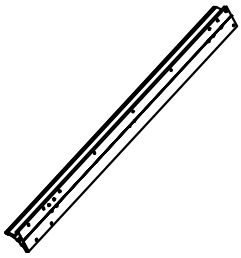

AB5 2x

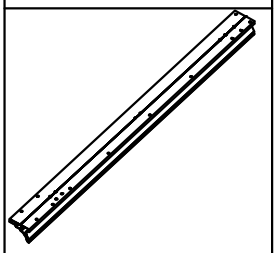

AB6 2x



P 4x




M6x15


1 68x



D1 2x

11

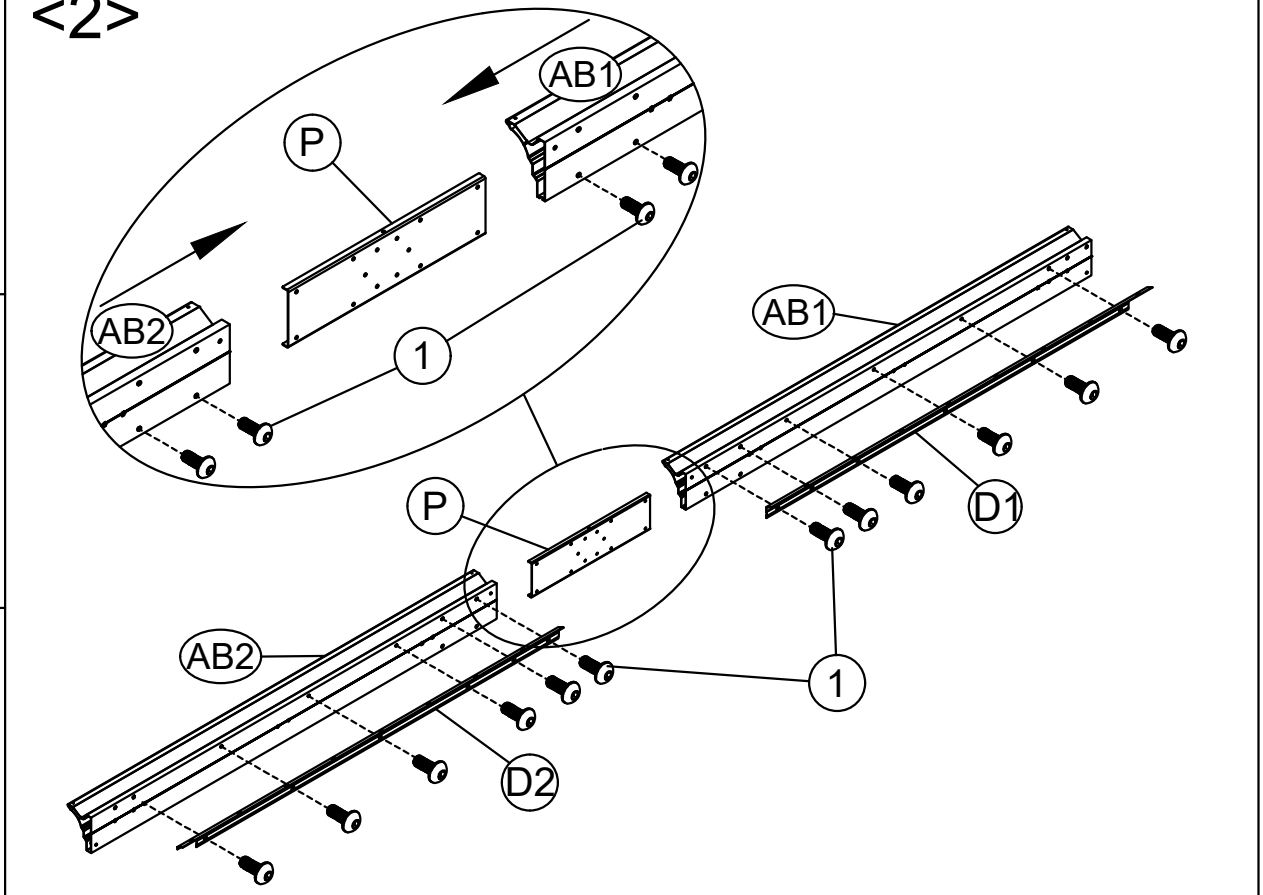

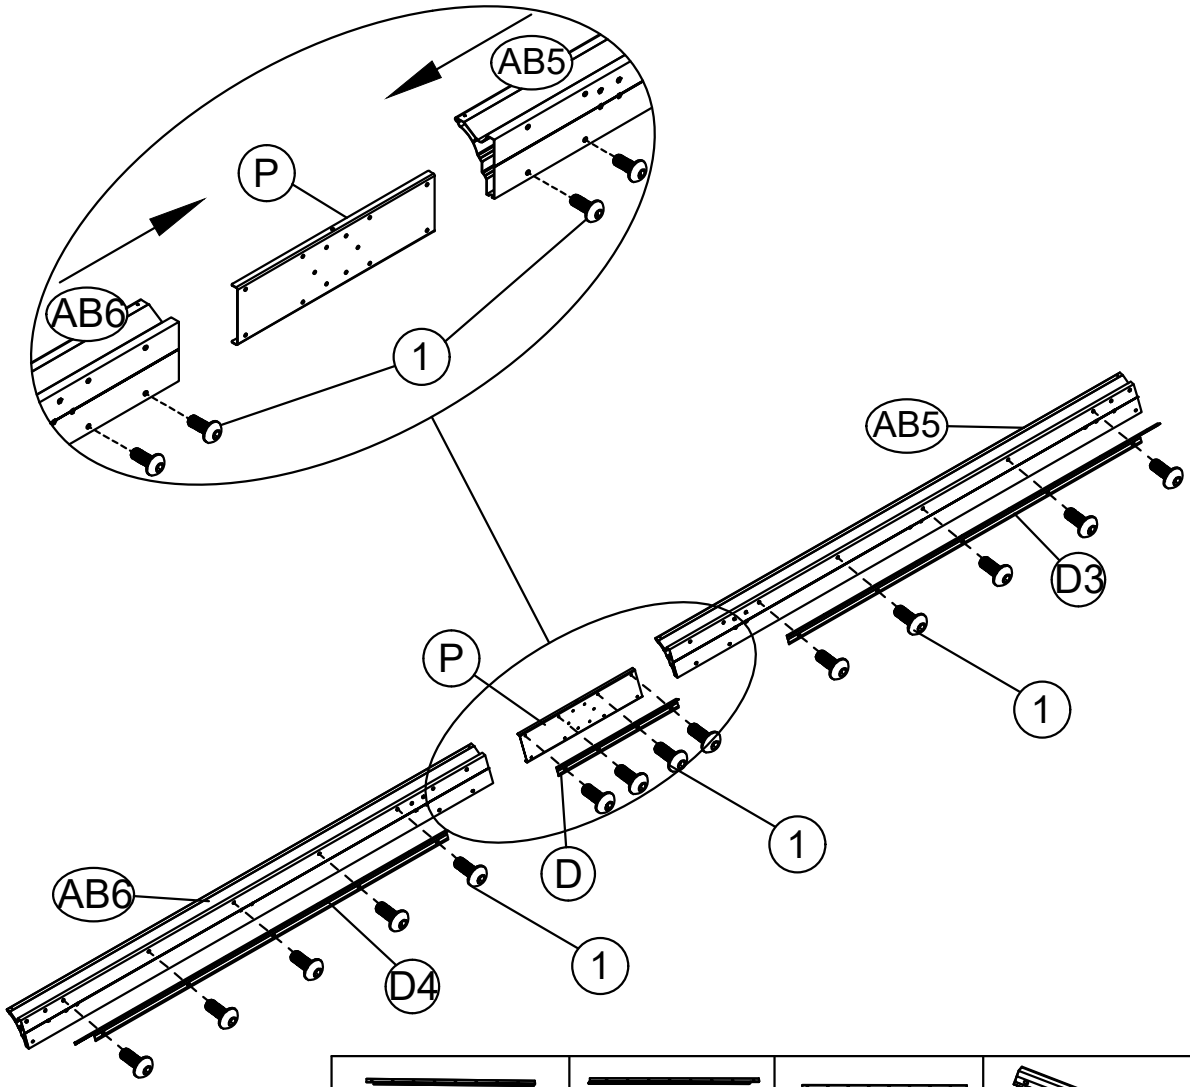


D2 2x

D3 2x

D4 2x




D 2x

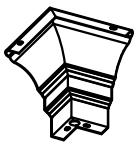

K 4x



K1 4x

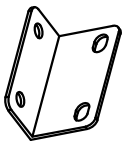

MQ2 8x



M6x15


1 36x




6 8x



3 24x

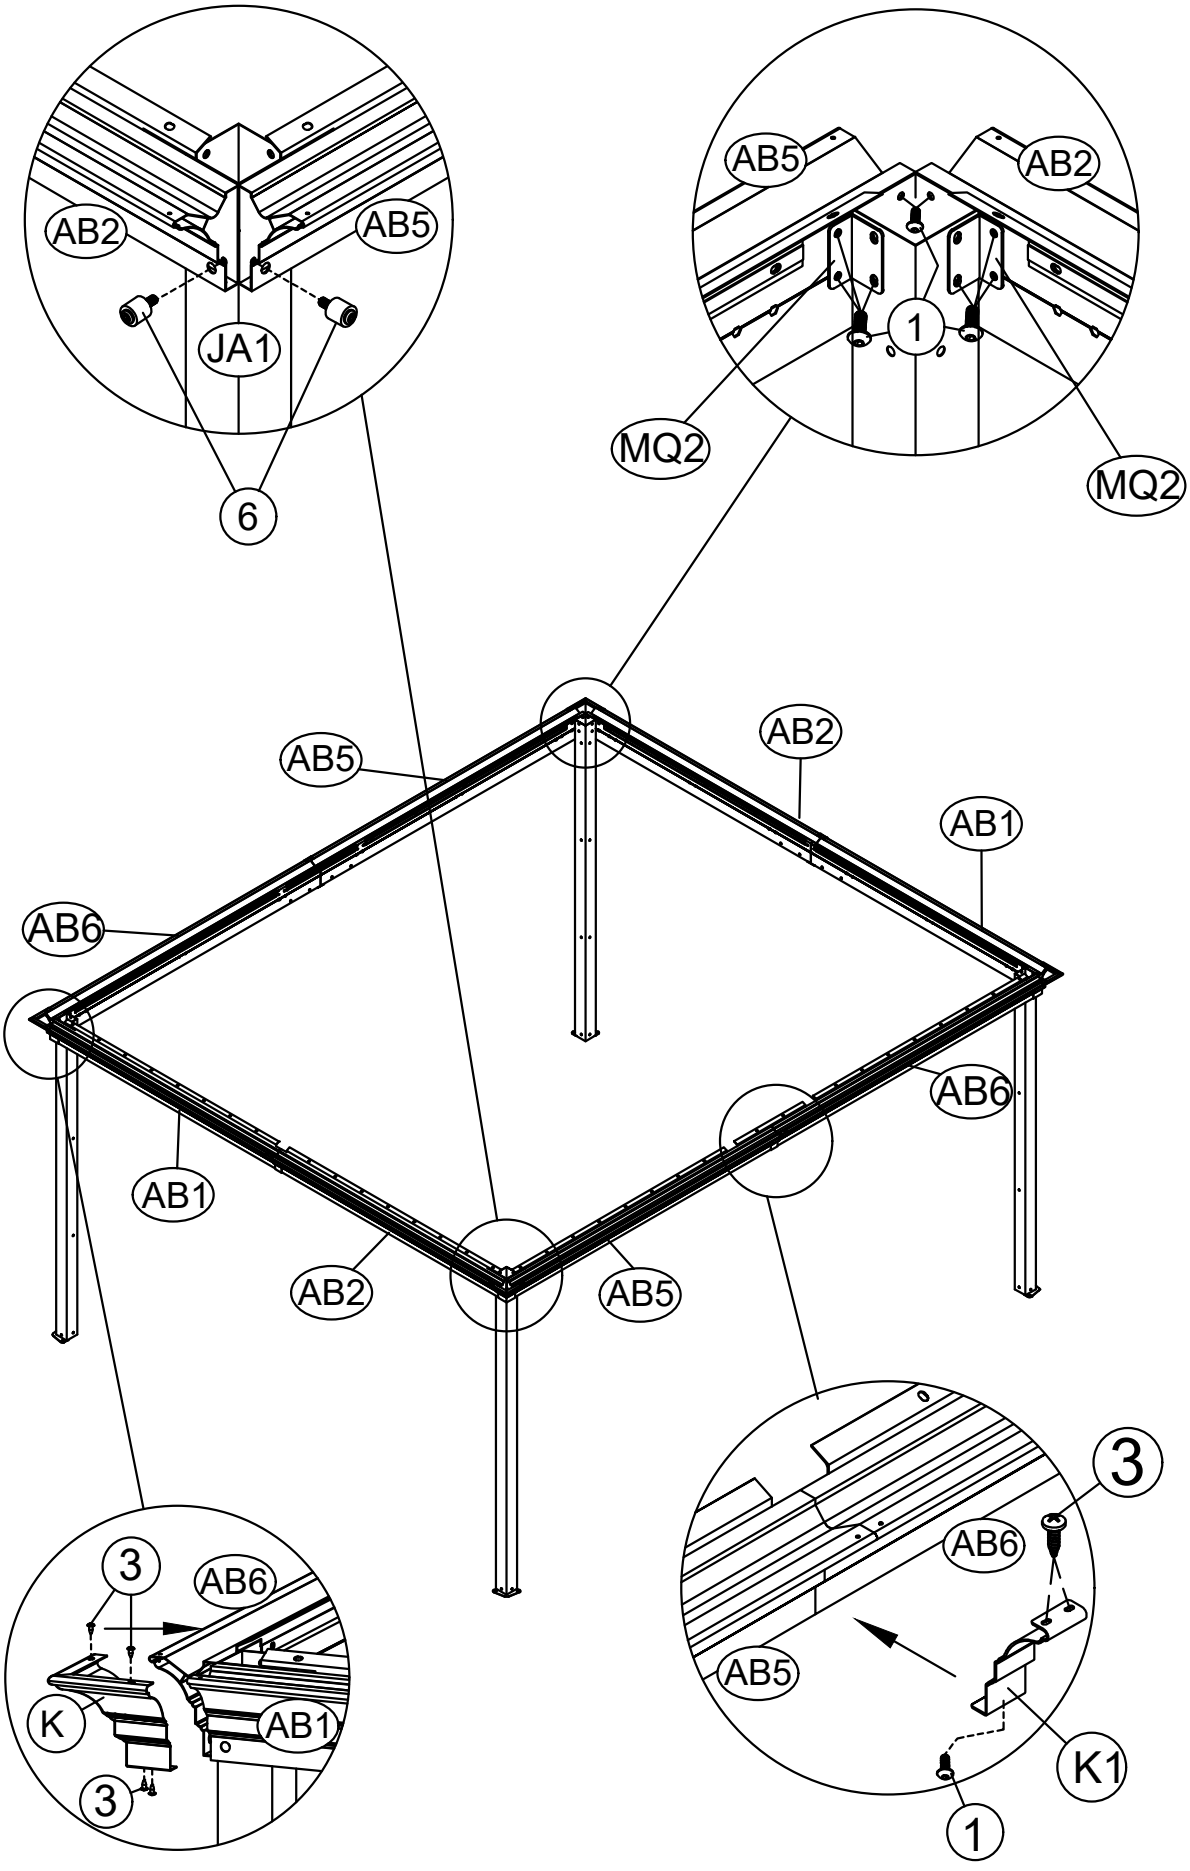

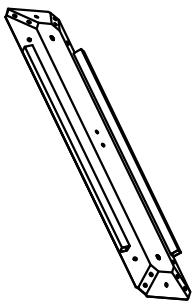


L2 1x



E 4x



E5 4x




JZ2 4x




M6x15


1 20x

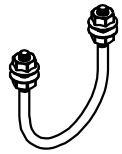

9 1x

13

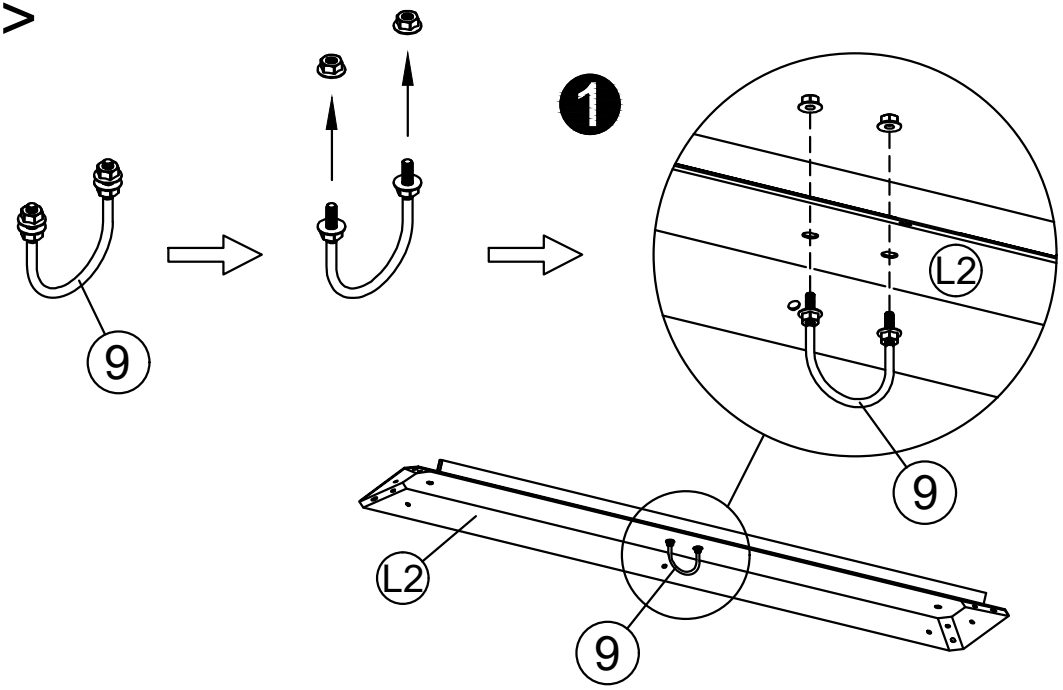


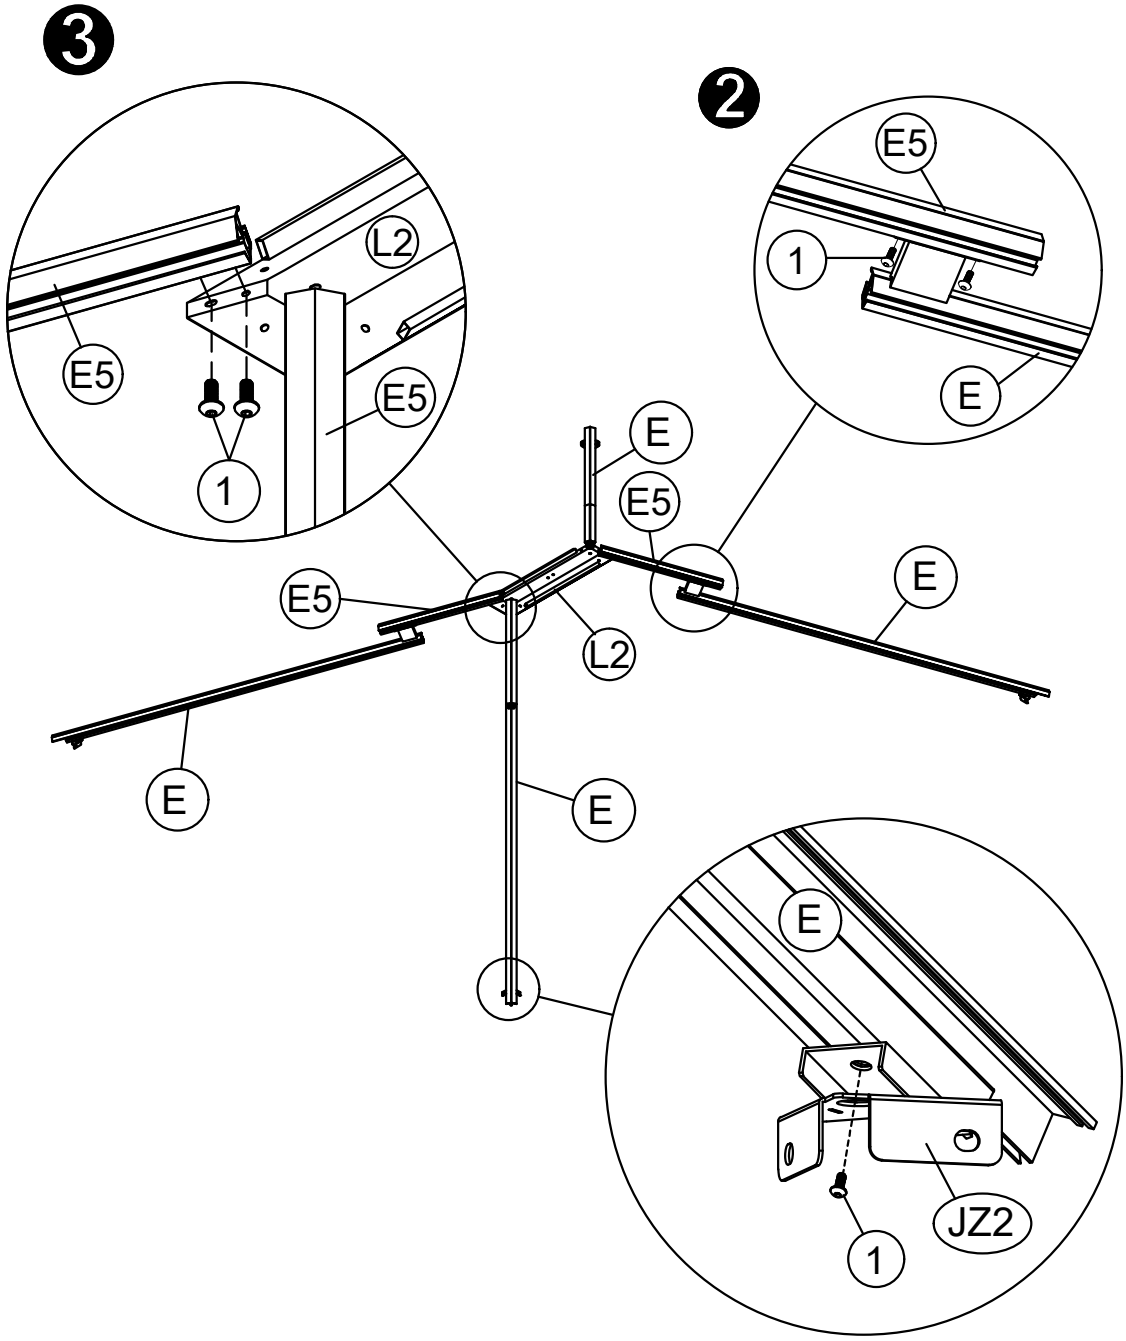


M6x15

① 8x


<5>

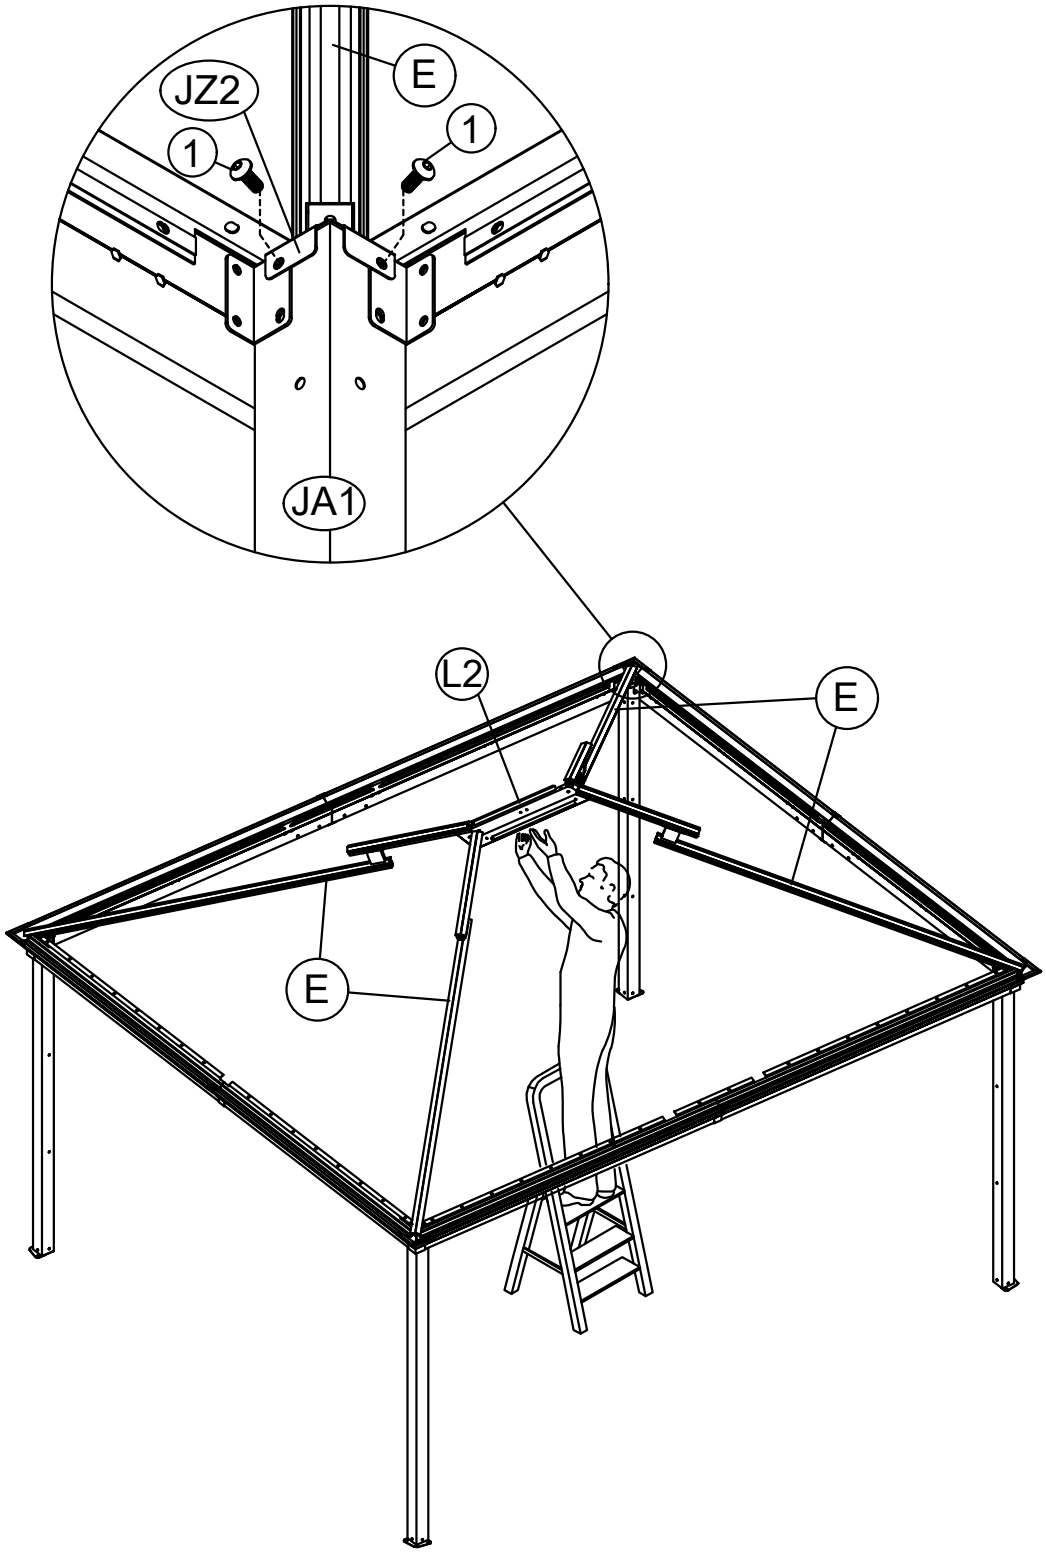

Note:
1. Have one person stand on the ladder to lift and hold L2, while others fasten the screws connecting both ends of JZ2. connecting both ends of JZ2.
2. Do not release L2 until all screws connecting JZ2 are fully installed.

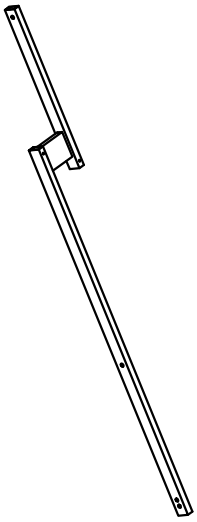

JE2 6x




JZ1 6x




M6x15

1 30x

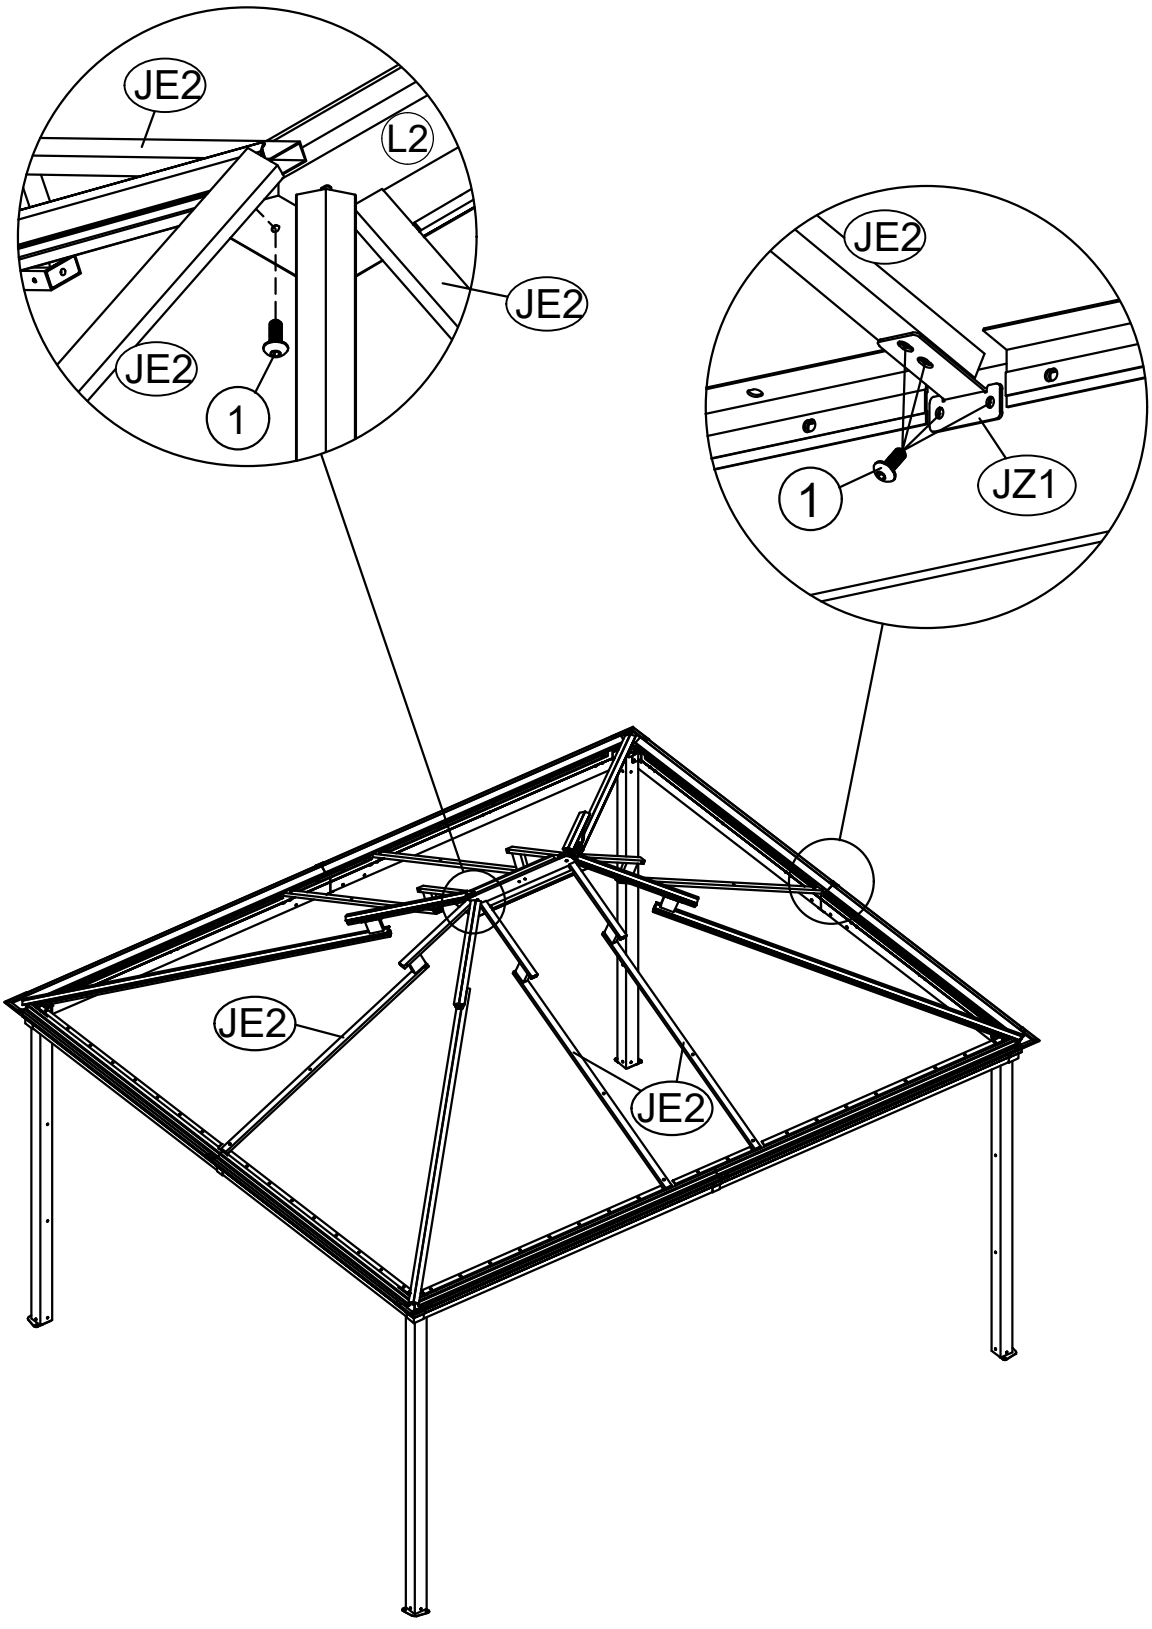



G1 2x

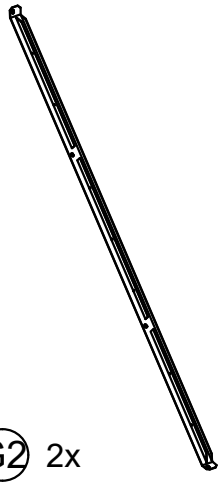

G2 2x



N 4x





M6x15

1 10x


16


<7>

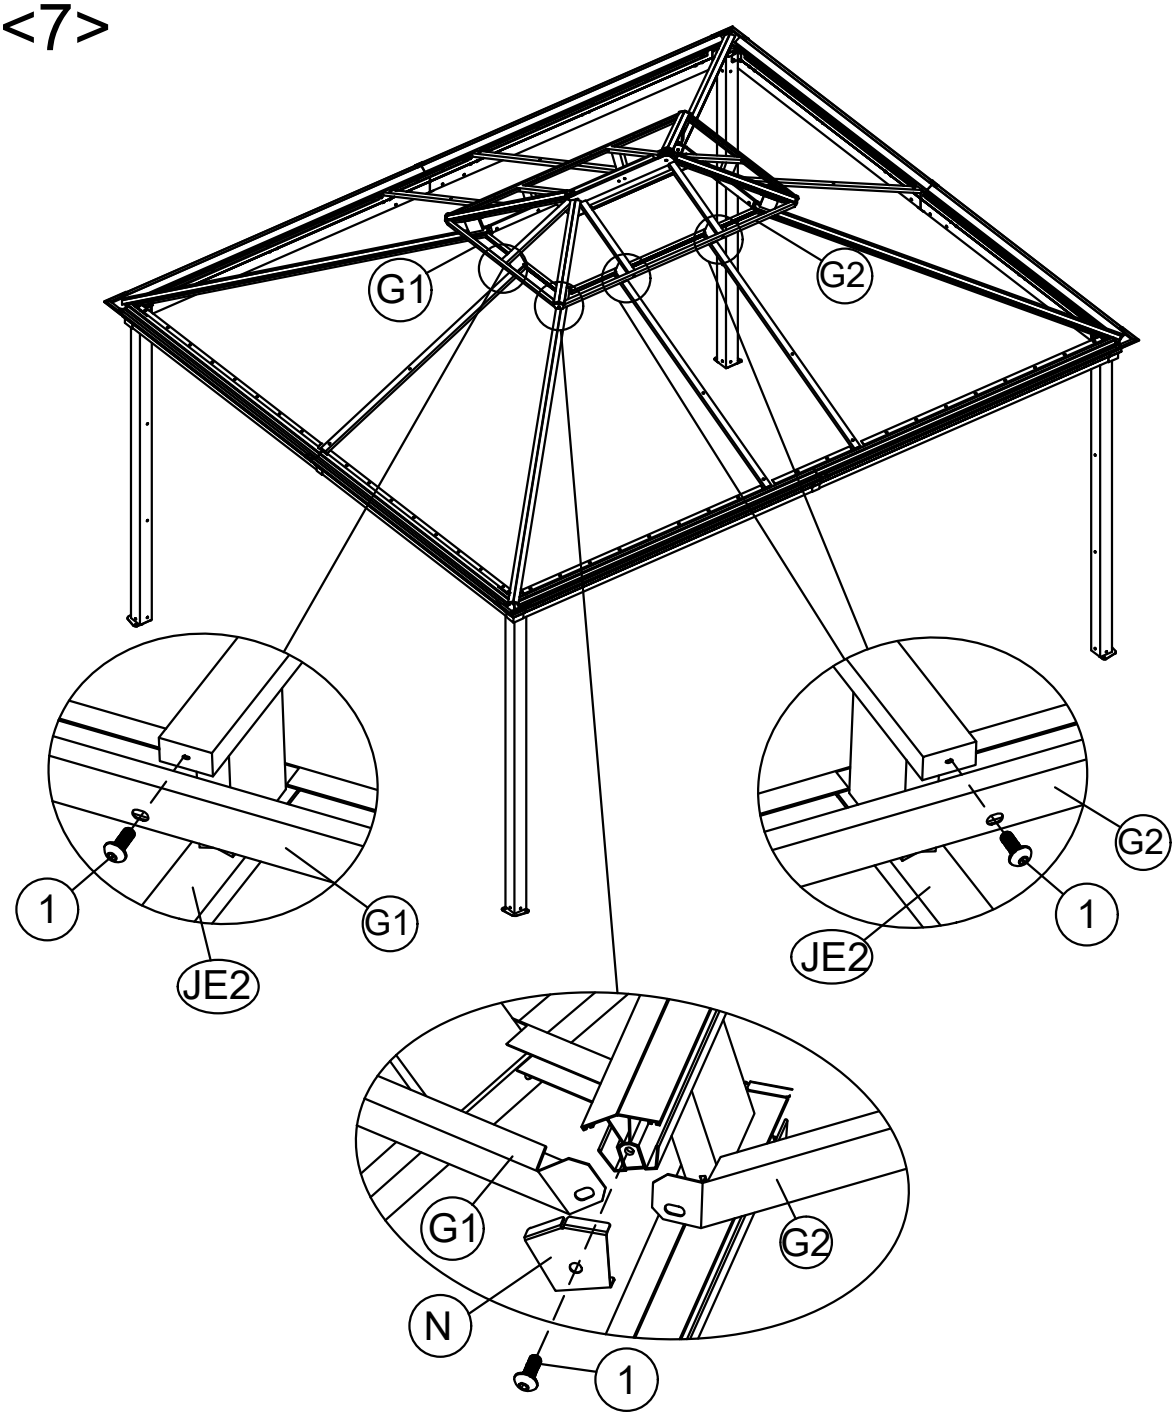


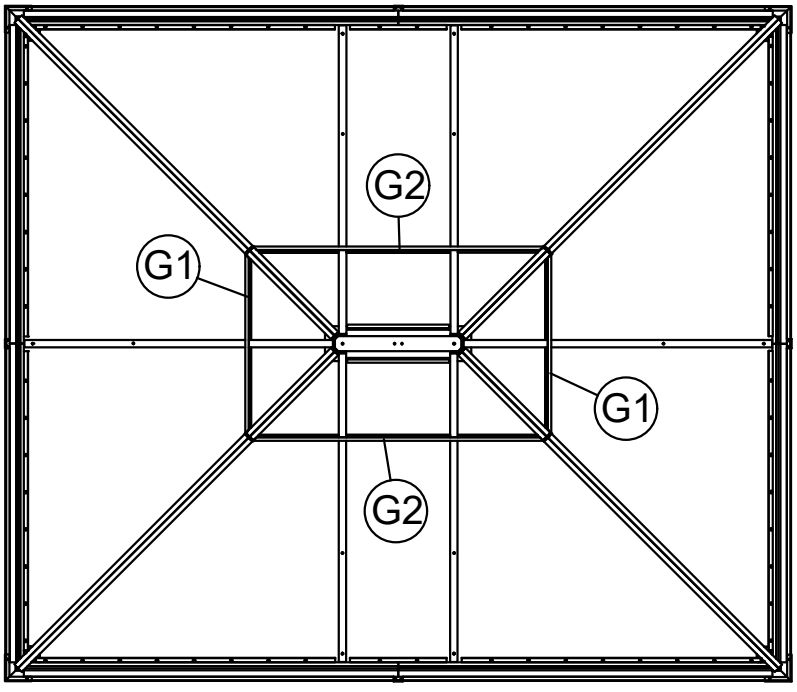

<8>

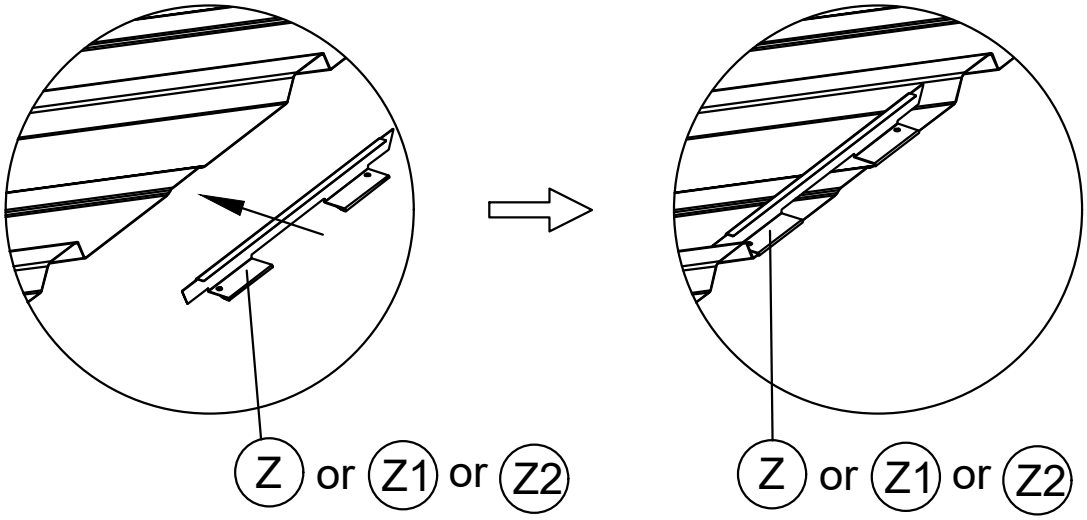

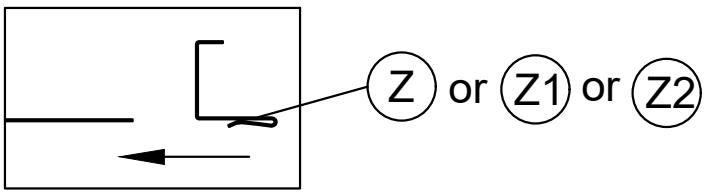

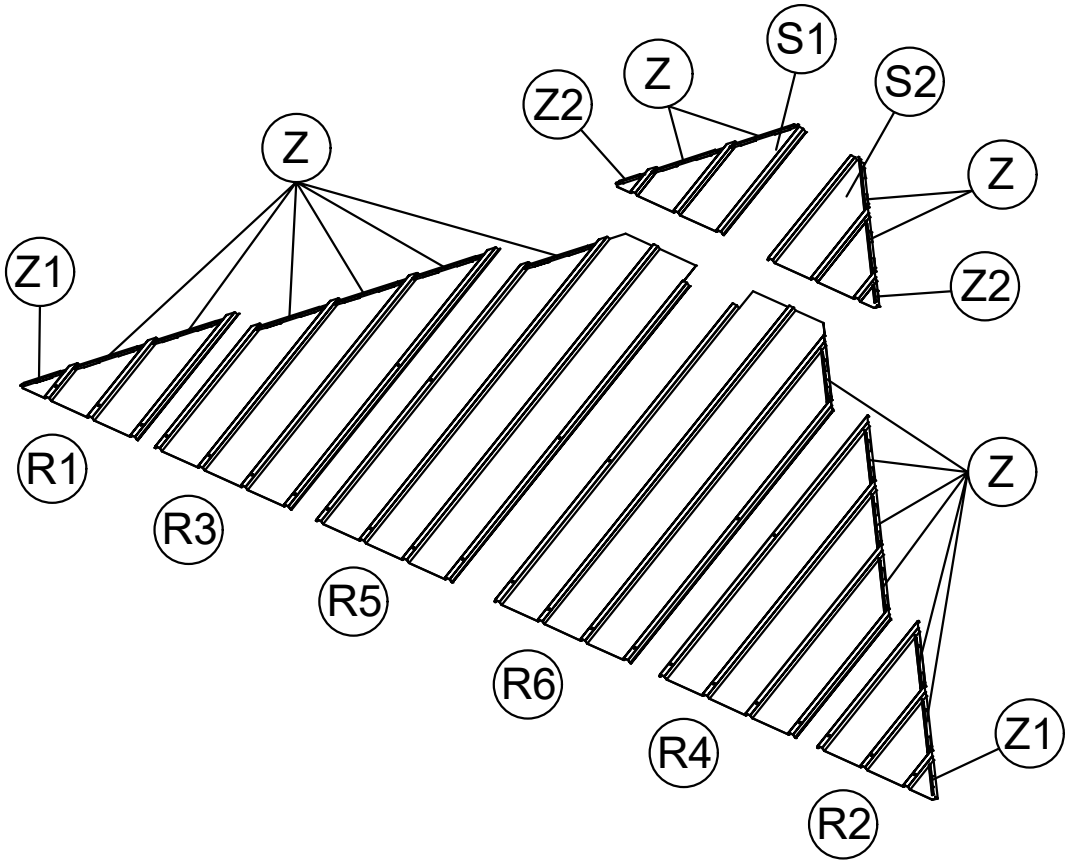

S1 2x S2 2x

R1 2x R2 2x

R3 2x R4 2x

R5 2x R6 2x

Z 32x

Z1 4x

Z2 4x

<9>

S1 2x S2 2x

R1 2x R2 2x

R3 2x R4 2x

R5 2x R6 2x


S3 2x


R7 2x


Z 32x

Z1 4x


Z2 4x

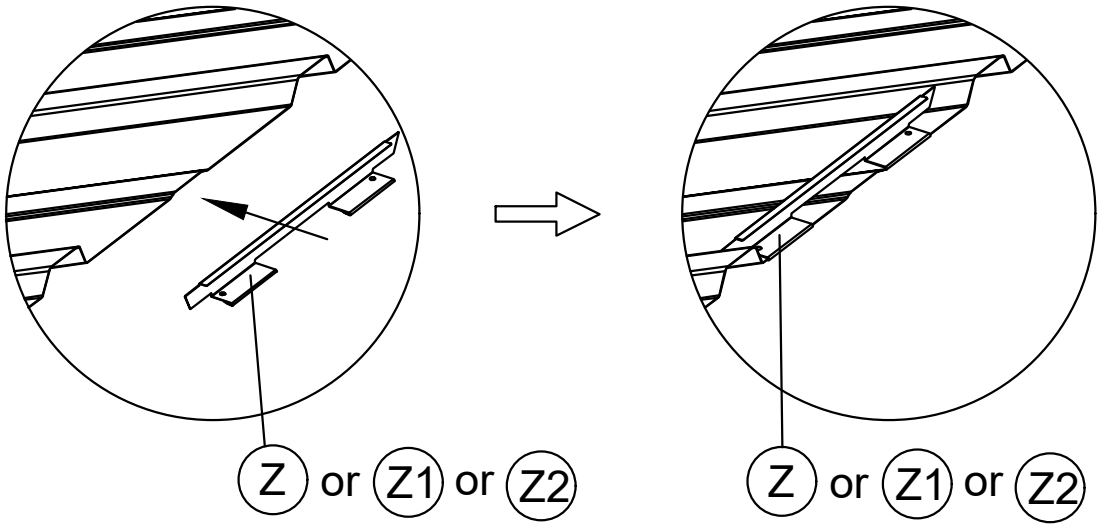

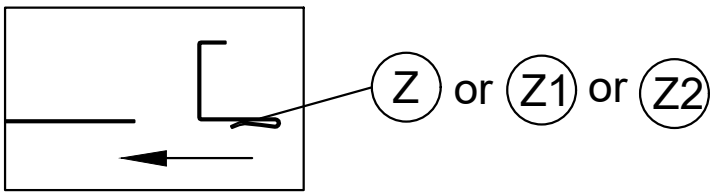


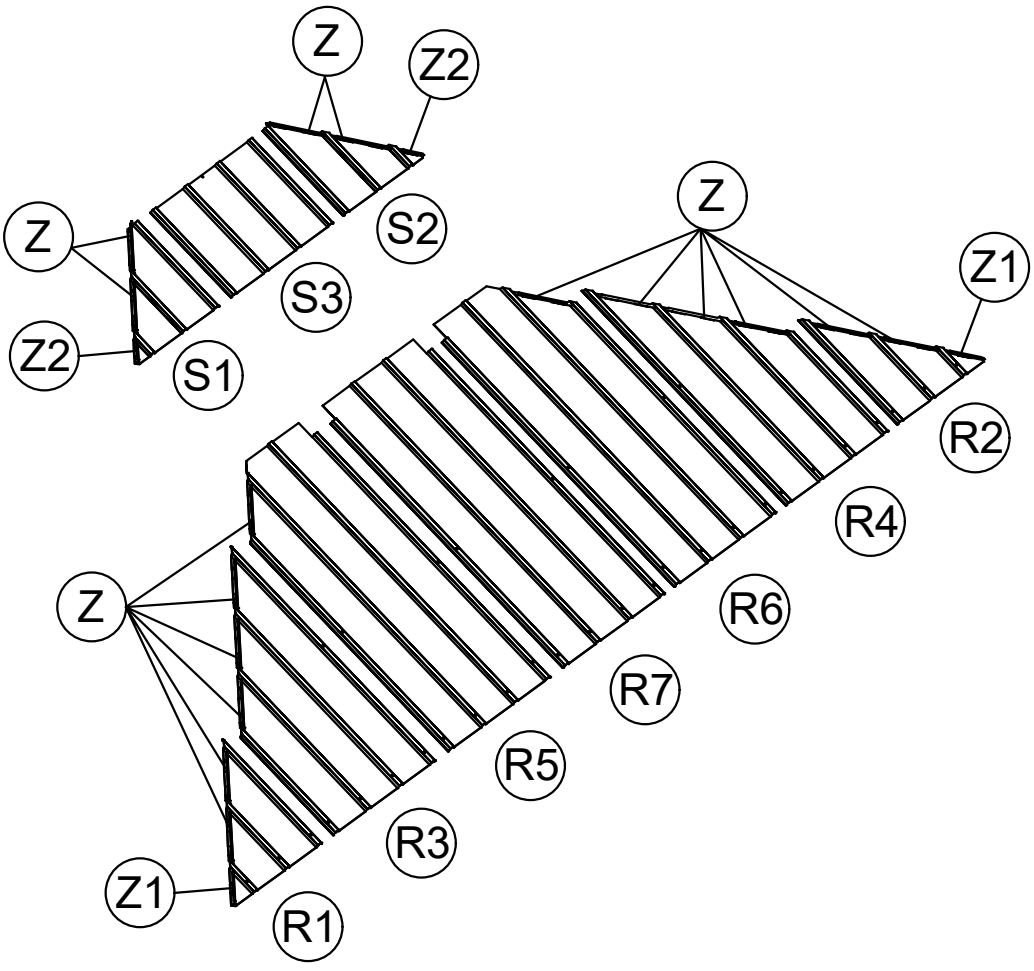



<10>

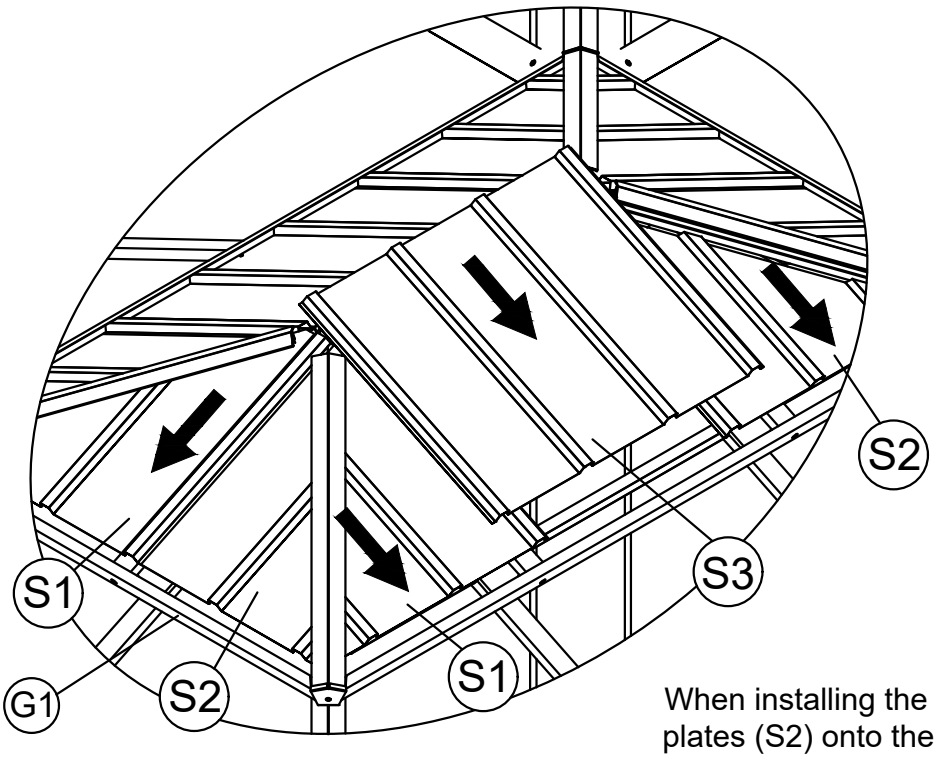

When installing the Roof plates (S2) onto the short side, pls detach the right end of the Roof Rib(G1) first. And then install the right end of Roof Rib (G1) again after S2 is installed.

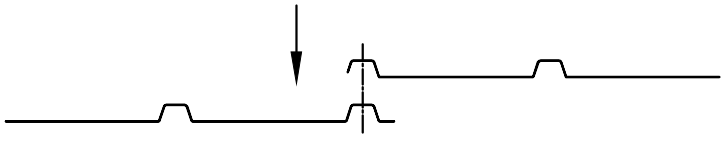

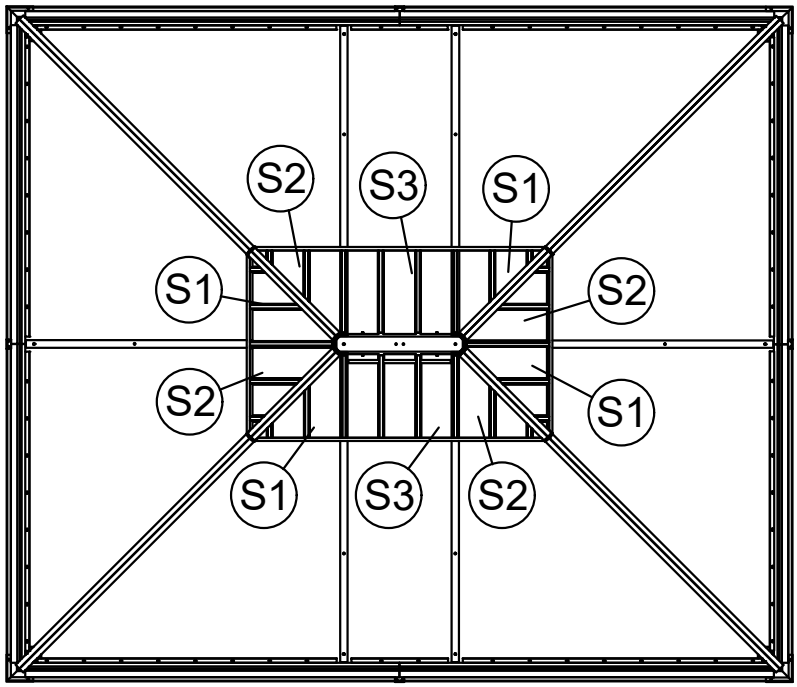

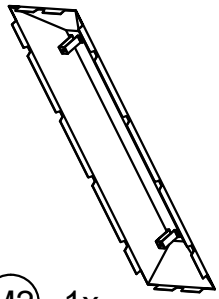



M2 1x




4 **2x**

<11>

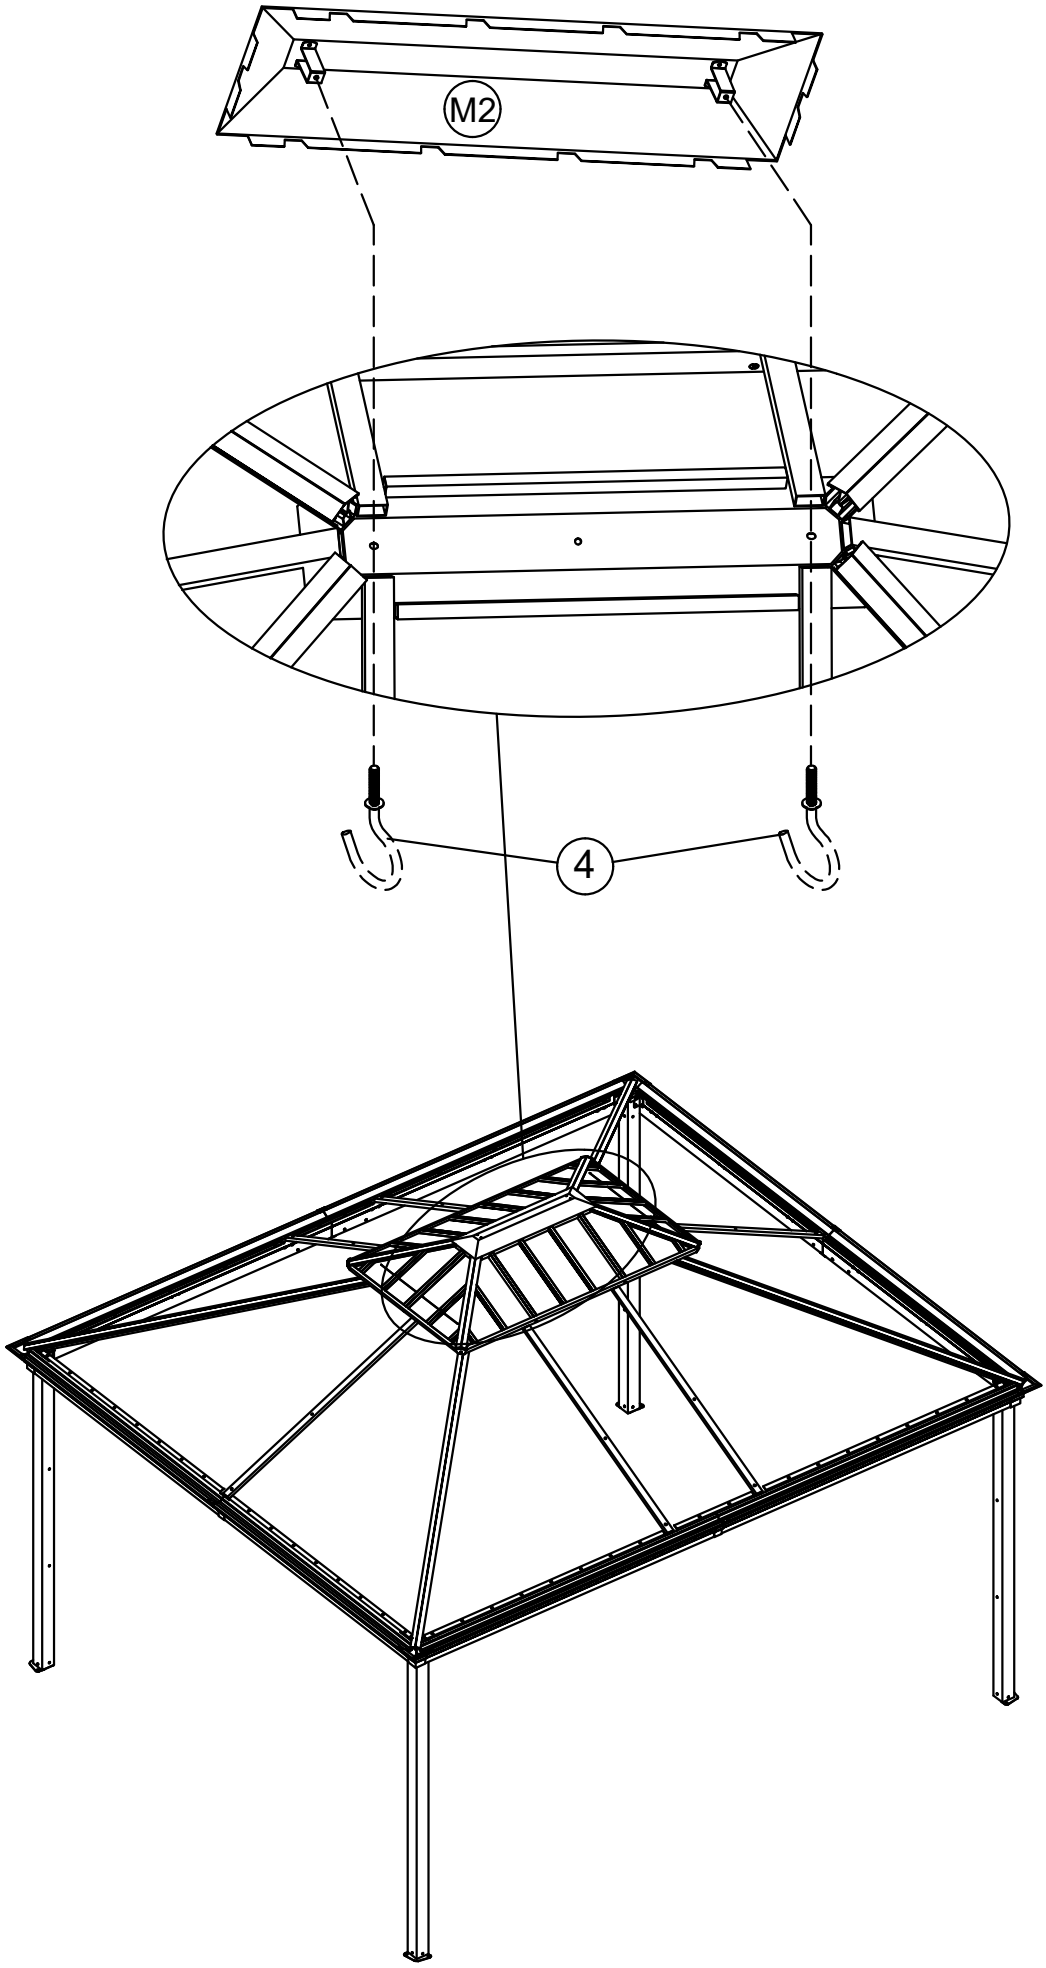

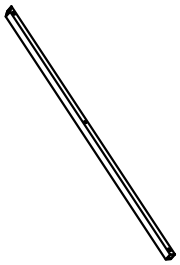


F1 8x

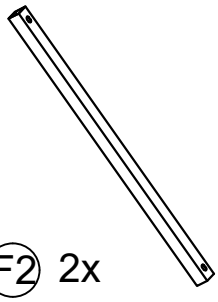

F2 2x



W 4x




W1 6x




M6x15


1 30x


21

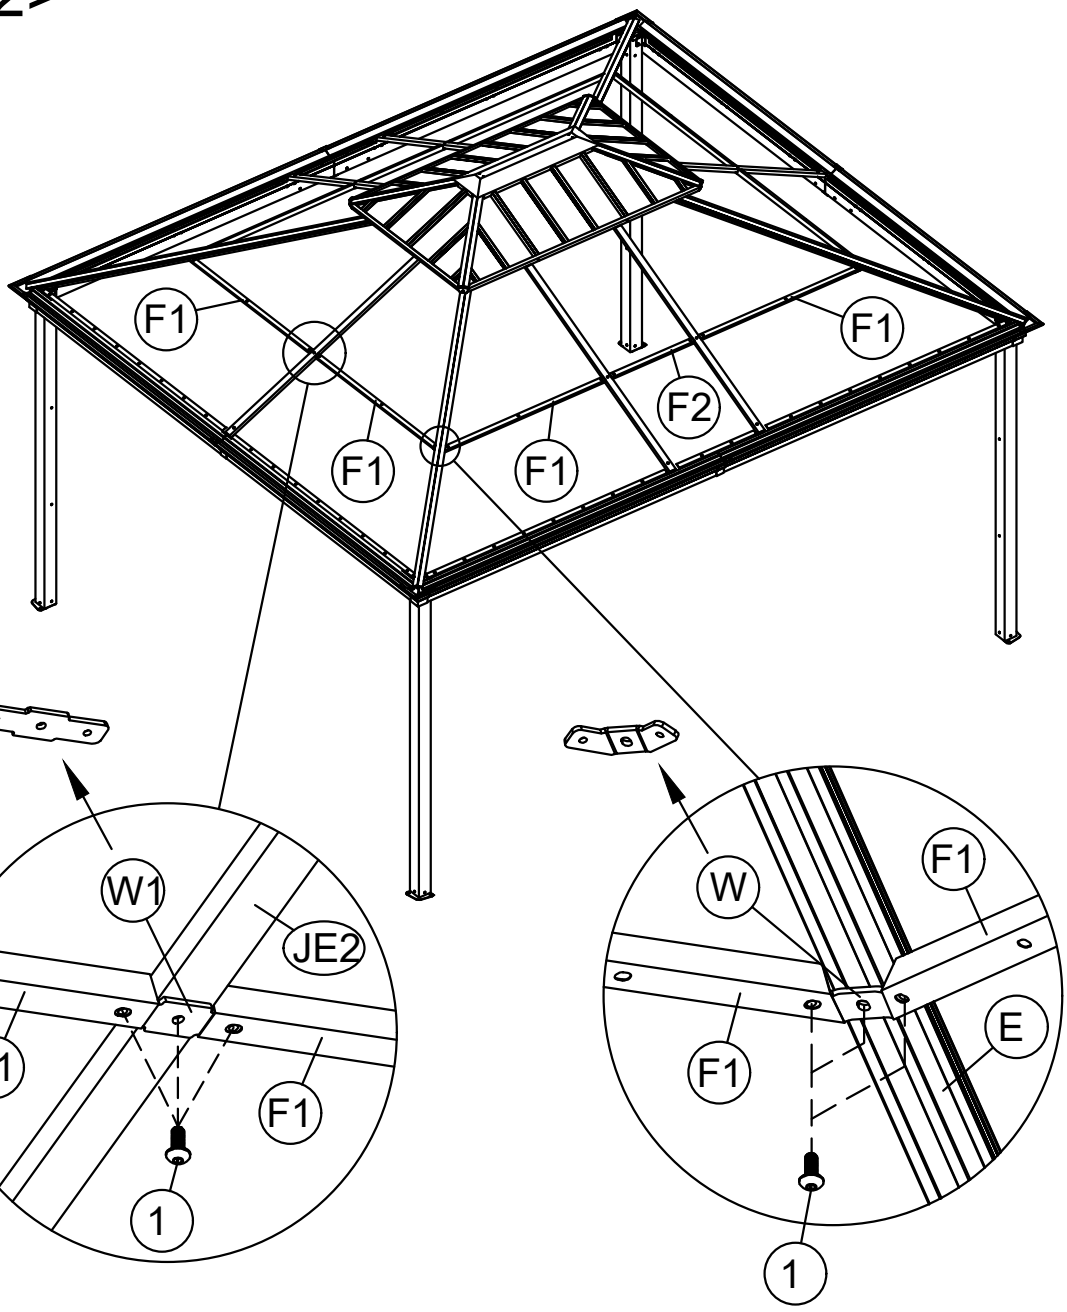


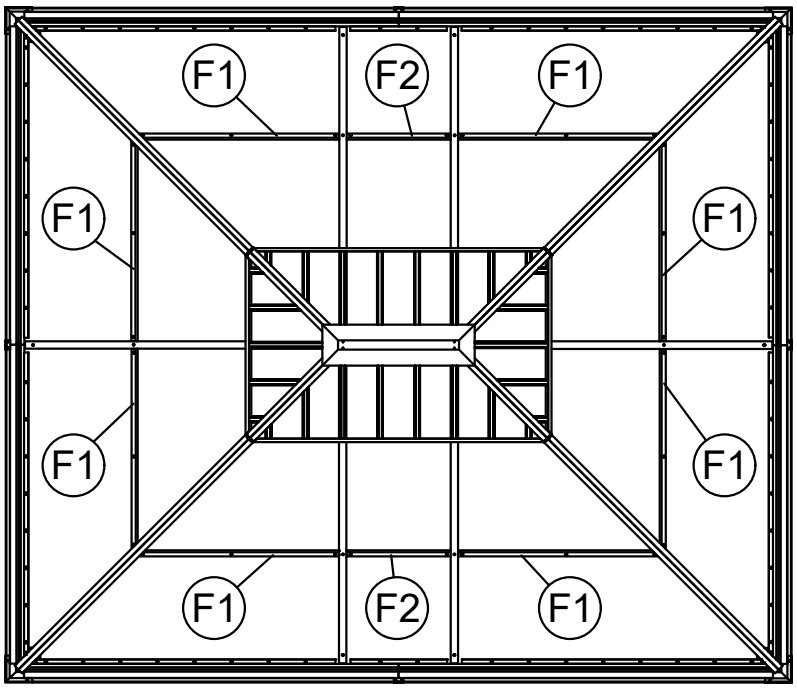


<13

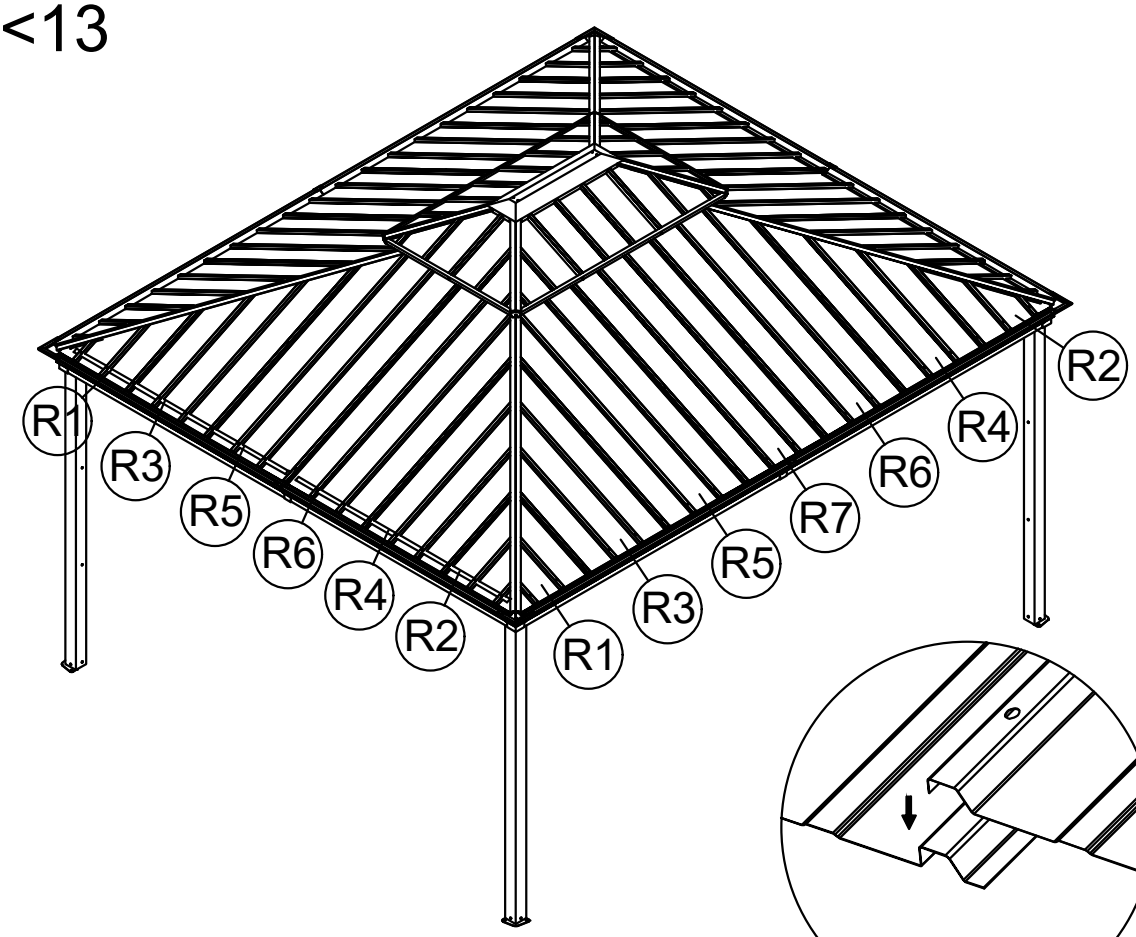
R1
R3
R5
R6
R4
R2
R1
R3
R5
R7
R6
R4
R2

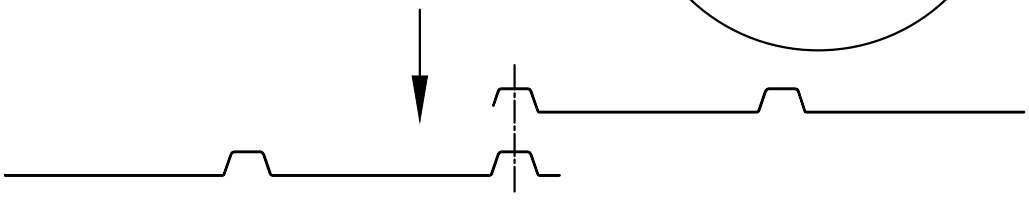


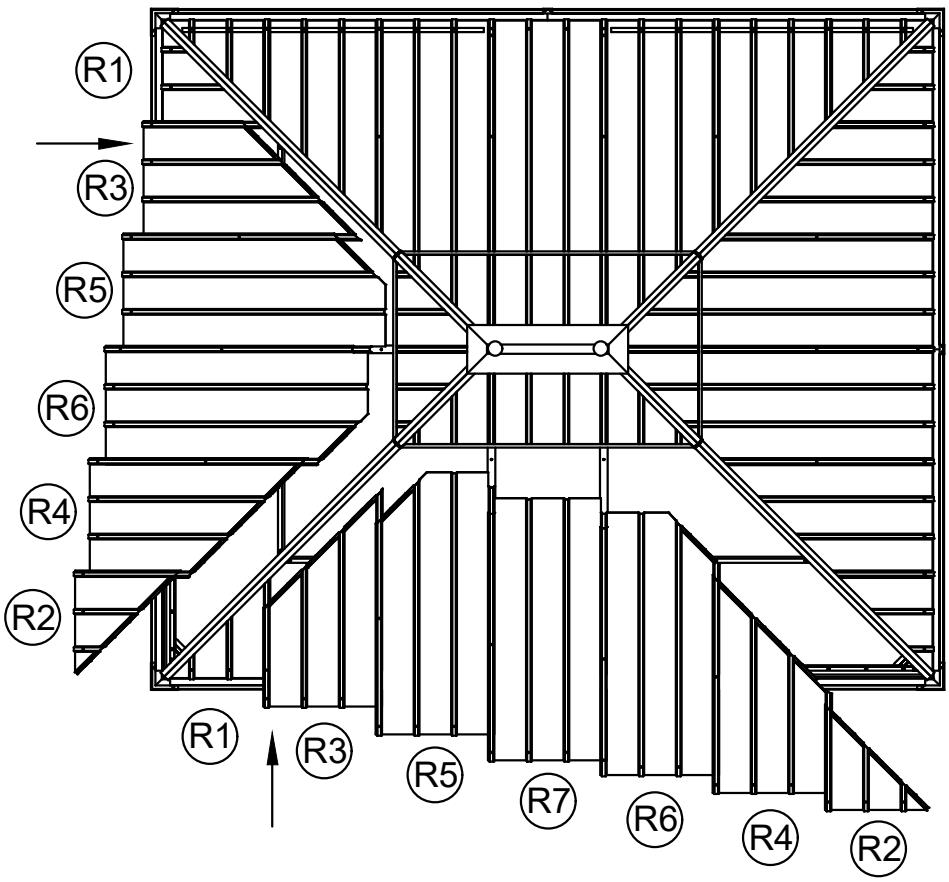
R1
R3
R5
R6
R4
R2
R1
R3
R5
R7
R6
R4
R2

<14>

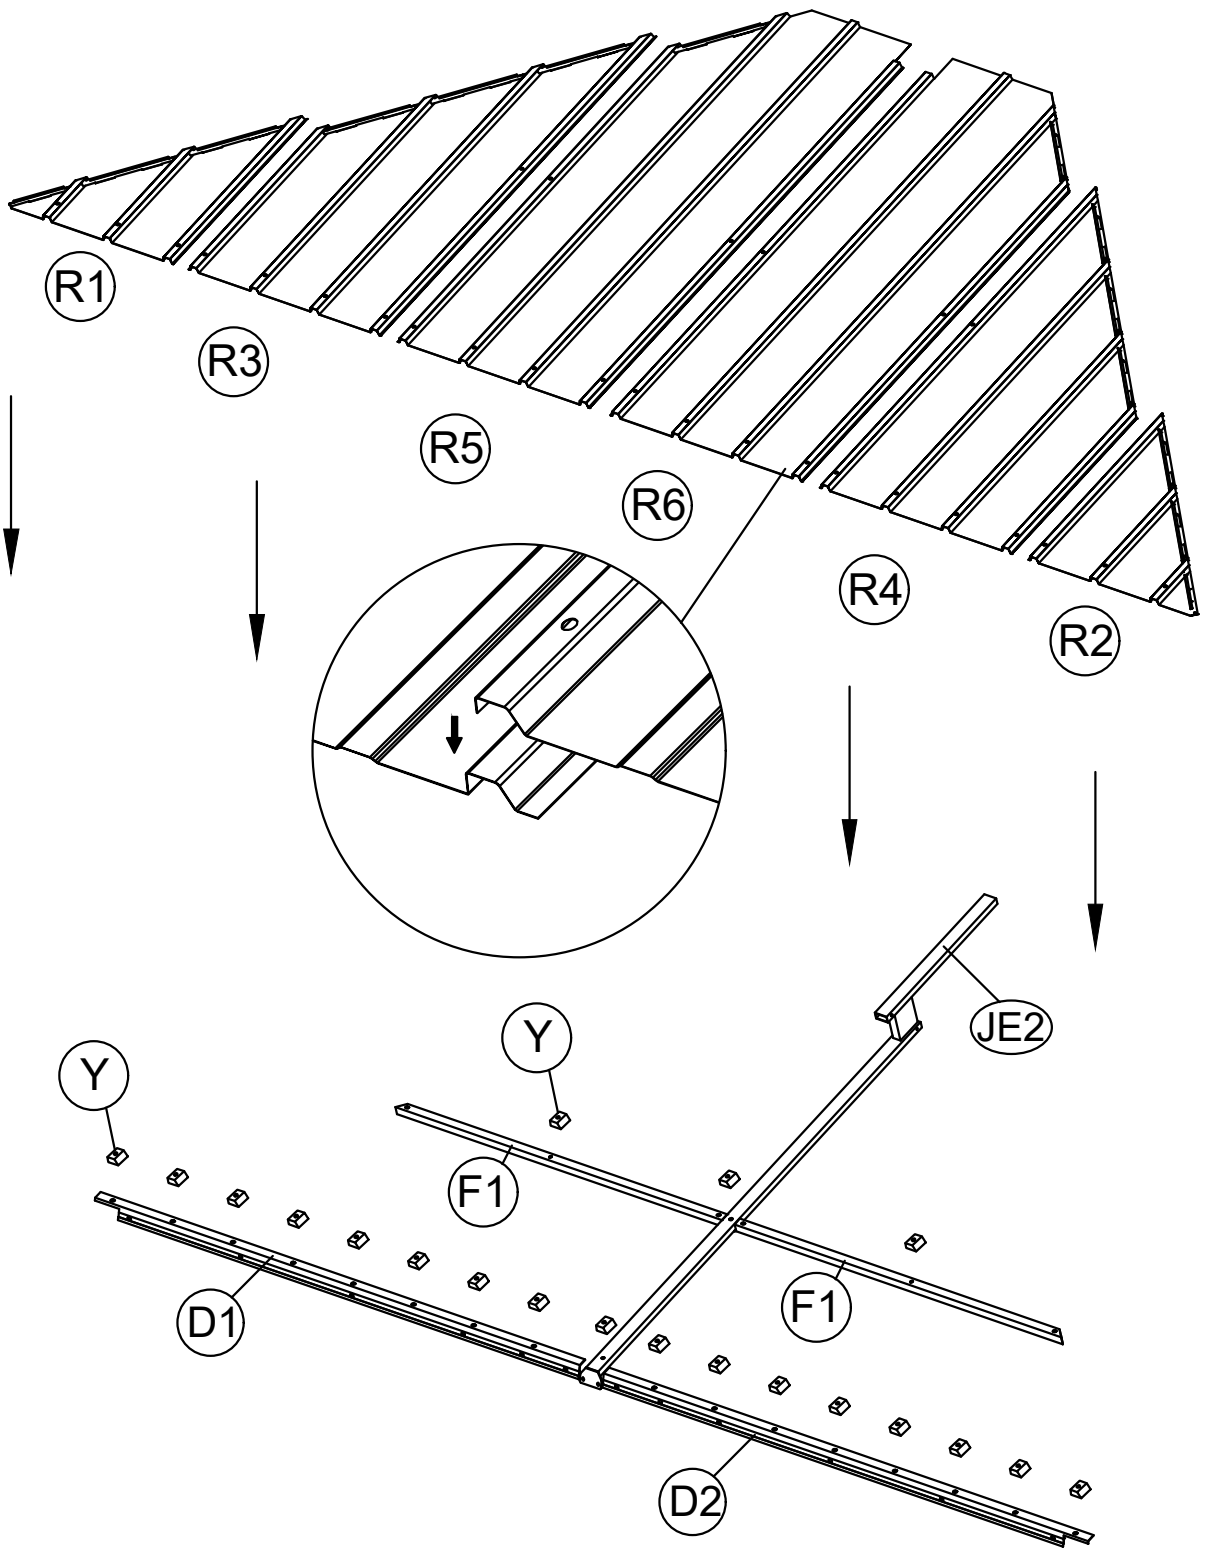

<15>

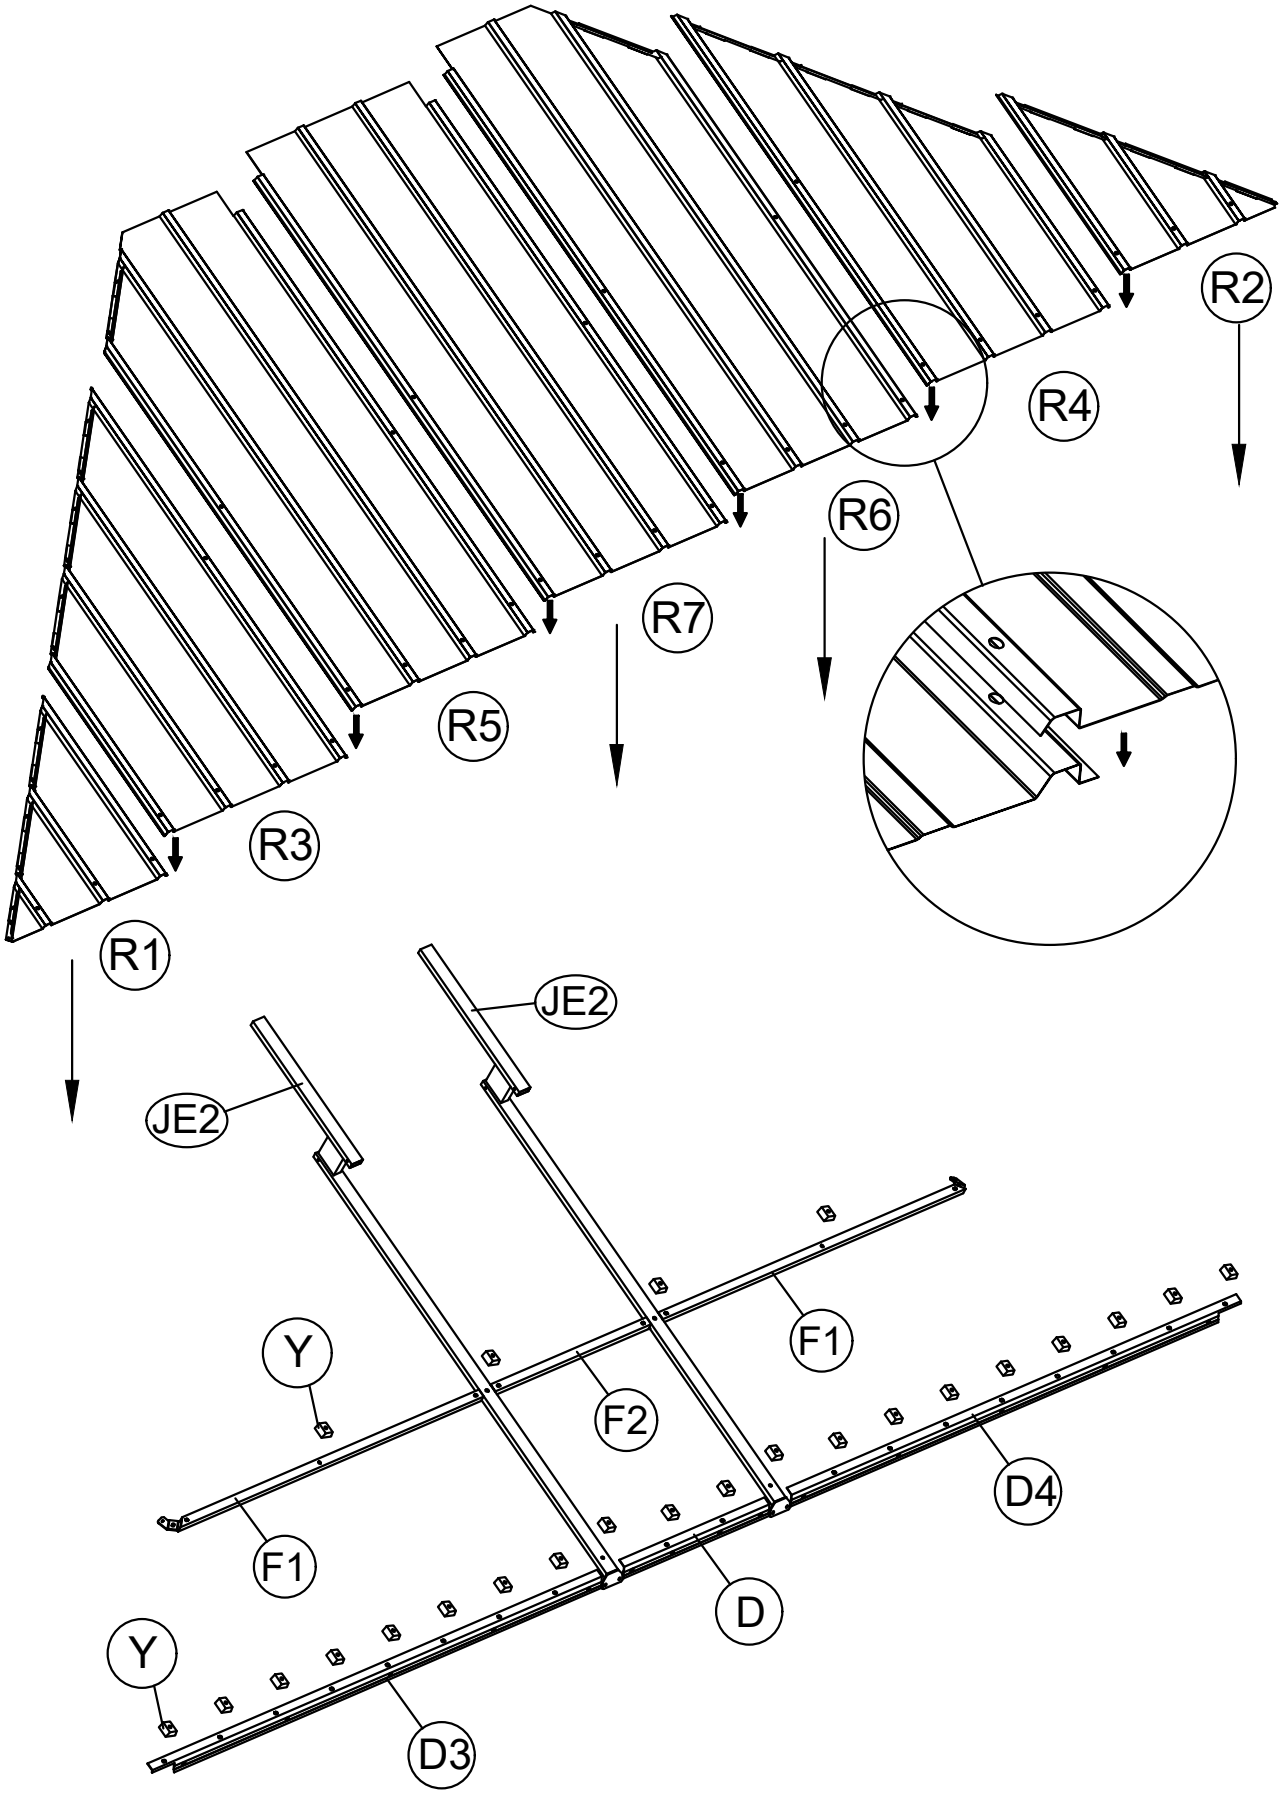

M6x25

2 80x

M6x50

5 8x

M6

10 76x


M6

19 88x


Rubber Gasket

23 88x


Y 88x

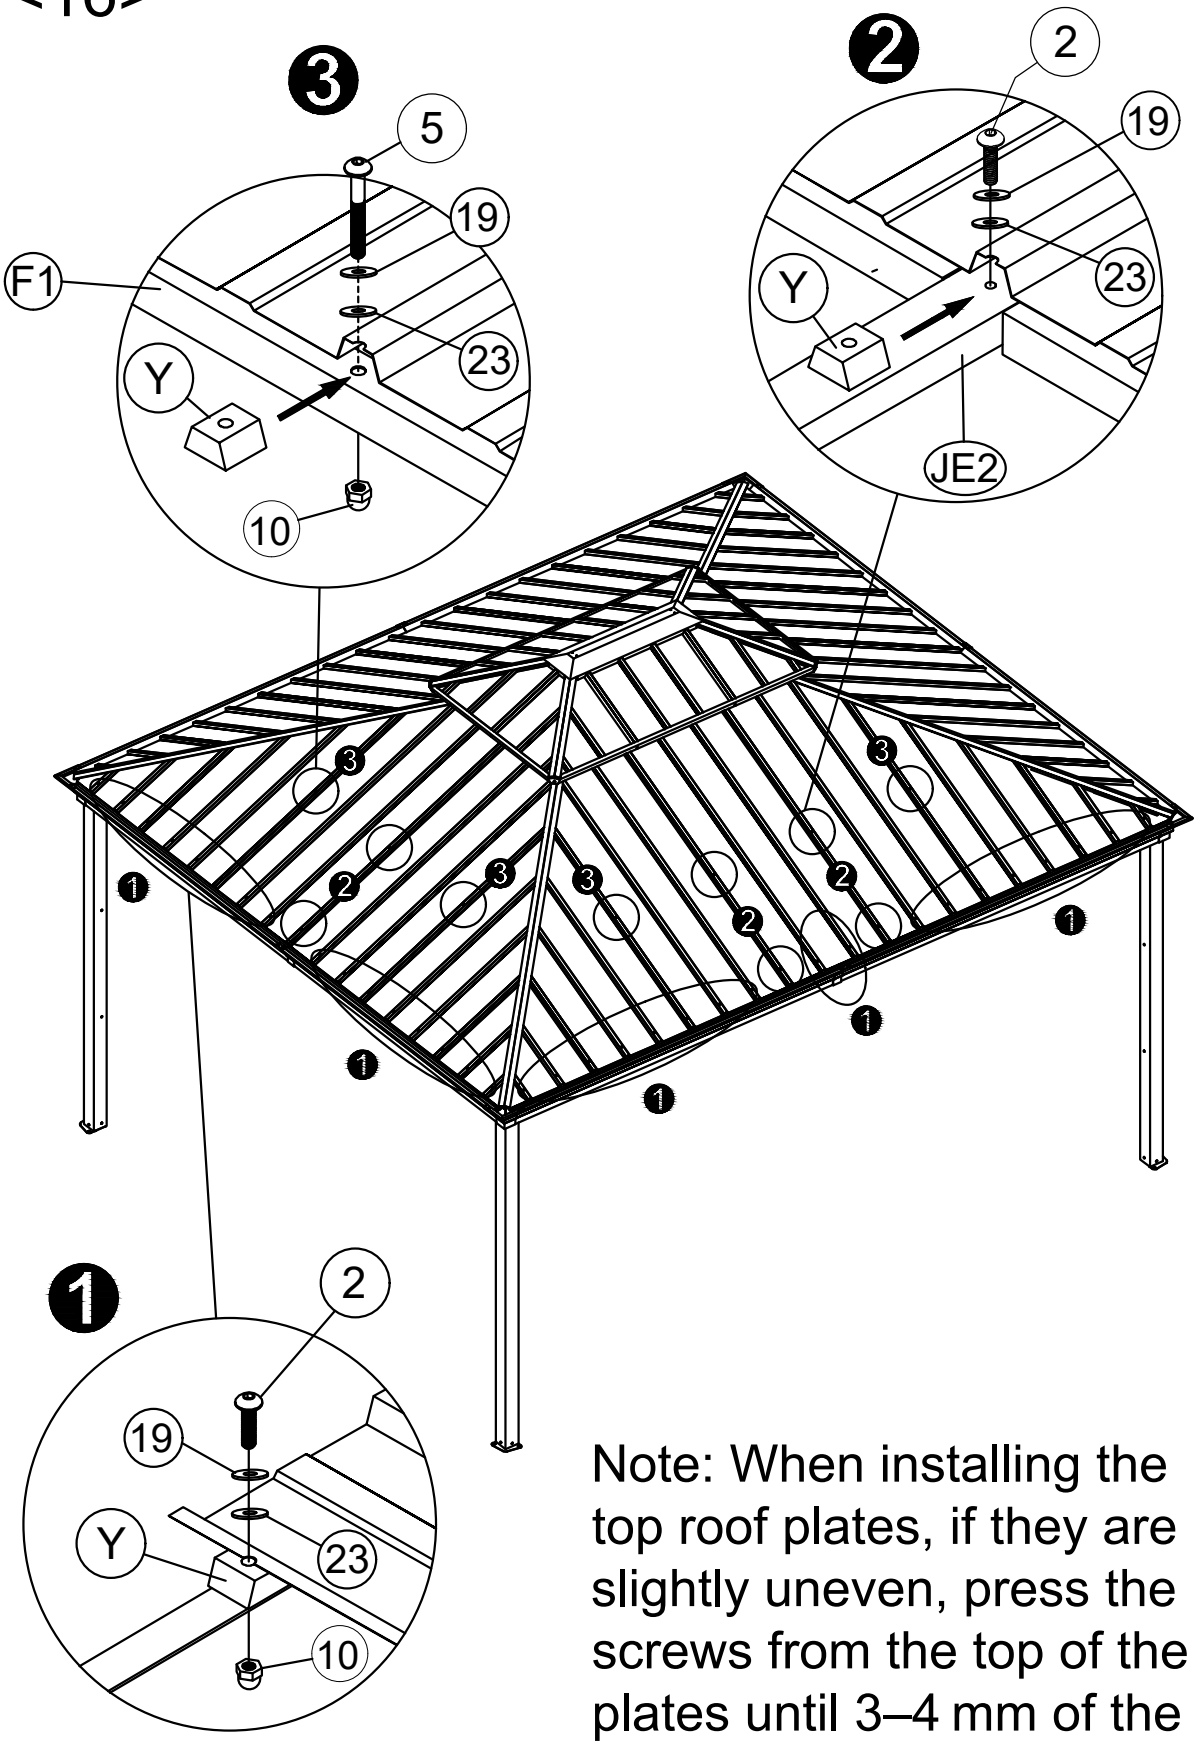

Note: When installing the top roof plates, if they are slightly uneven, press the screws from the top of the plates until 3–4 mm of the bottom screw thread is exposed, then fasten the nuts.

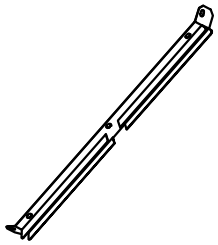


I1 2x

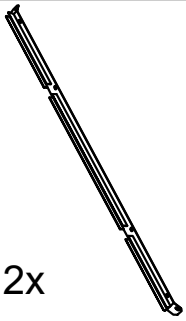


I2 2x



N 4x



V1 2x

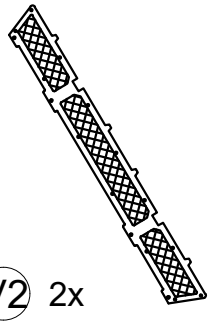

V2 2x



M6x15

1 10x




M6x10


7 8x




M6

10 8x

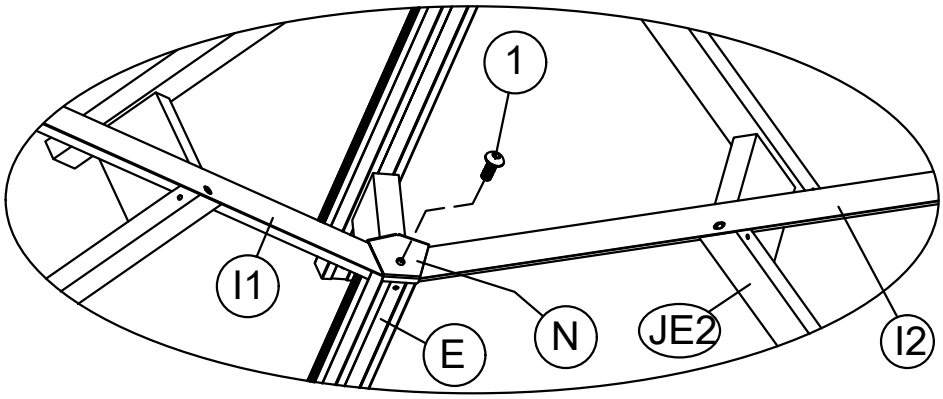


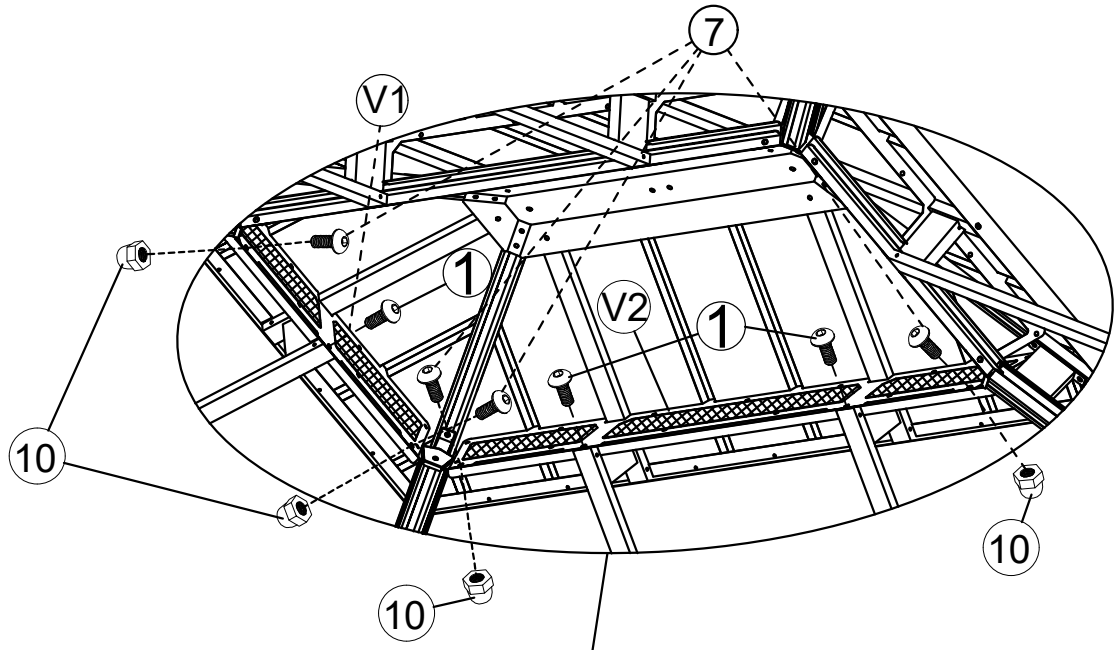




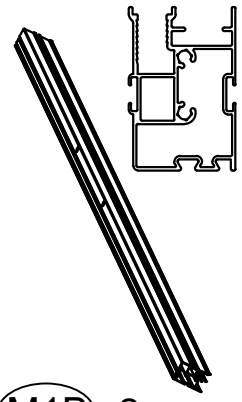


M1B 2x

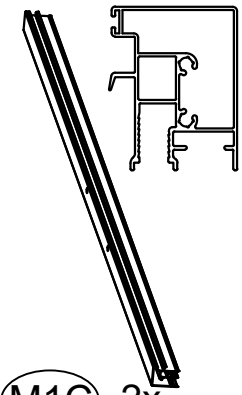


M1C 2x

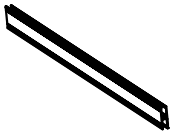

M5G 4x



MS2 2x

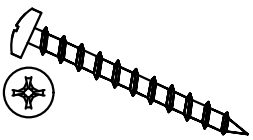



M4x50

14 8x


For component AB, repeat two times.

AB 2x

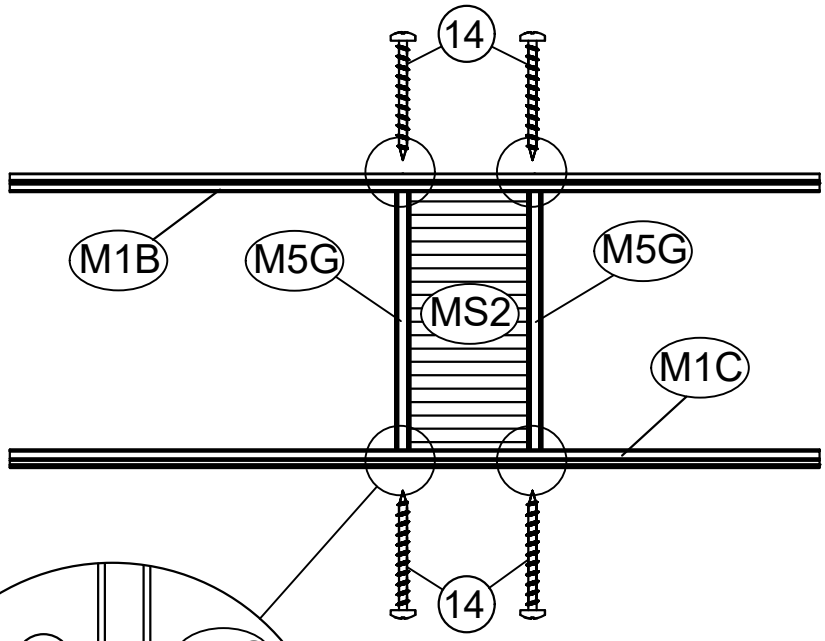

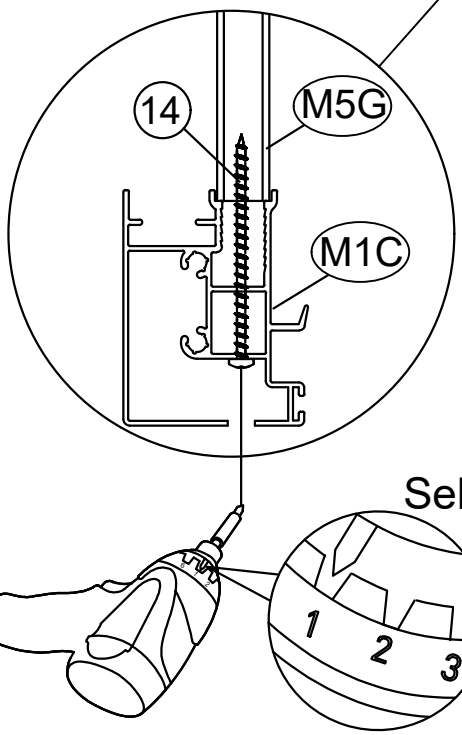


Select the low gear.

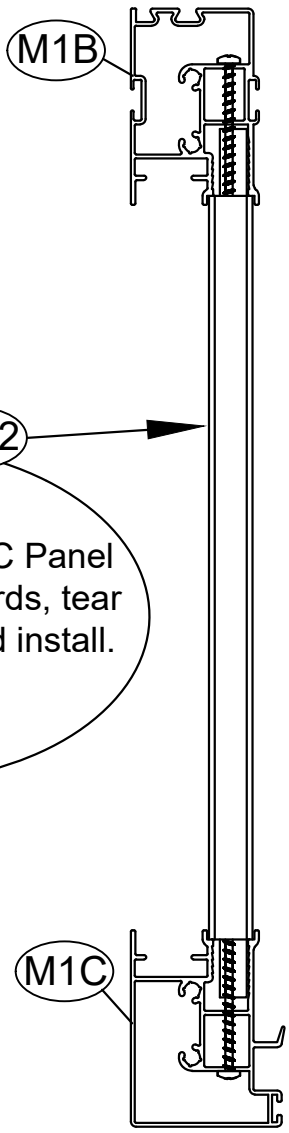


With the side of the PC Panel with text facing outwards, tear the protective film and install.


Install all door frames according to the instructions on pages 27 to 33.

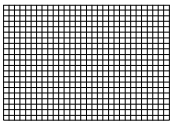

M1S 2x

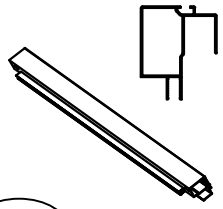

M4K 2x




M4x20


12 8x

<19>

For component AB, repeat two times.


AB 2x

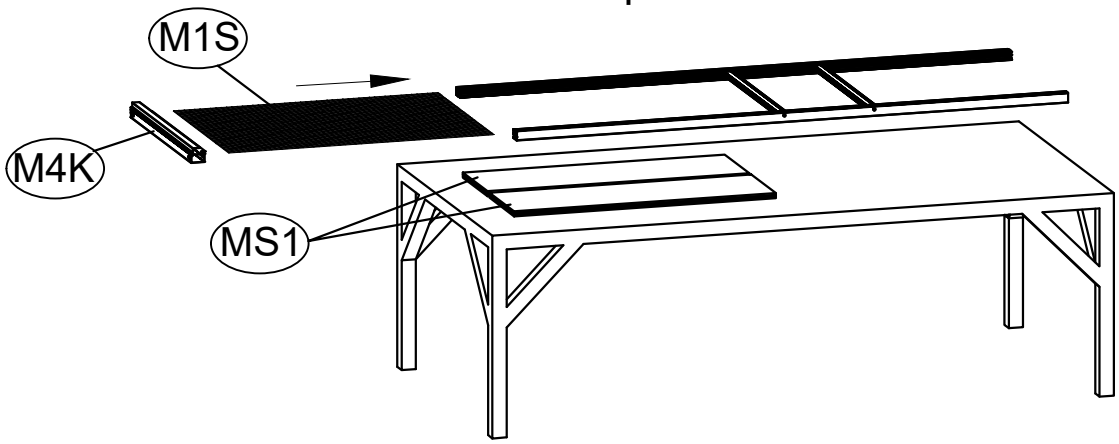

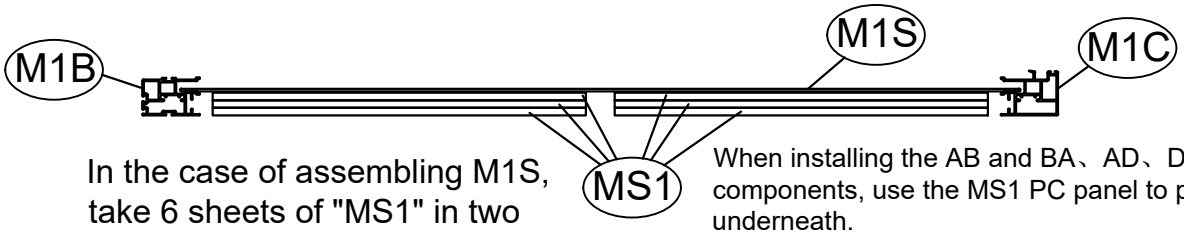

In the case of assembling M1S, take 6 sheets of "MS1" in two piles and stack the bottom, lift the "M1S".


When installing the AB and BA、AD、DA components, use the MS1 PC panel to pad underneath.
When installing the AC and CA 、AE、EA components, use the MS9 PC panel to pad underneath.

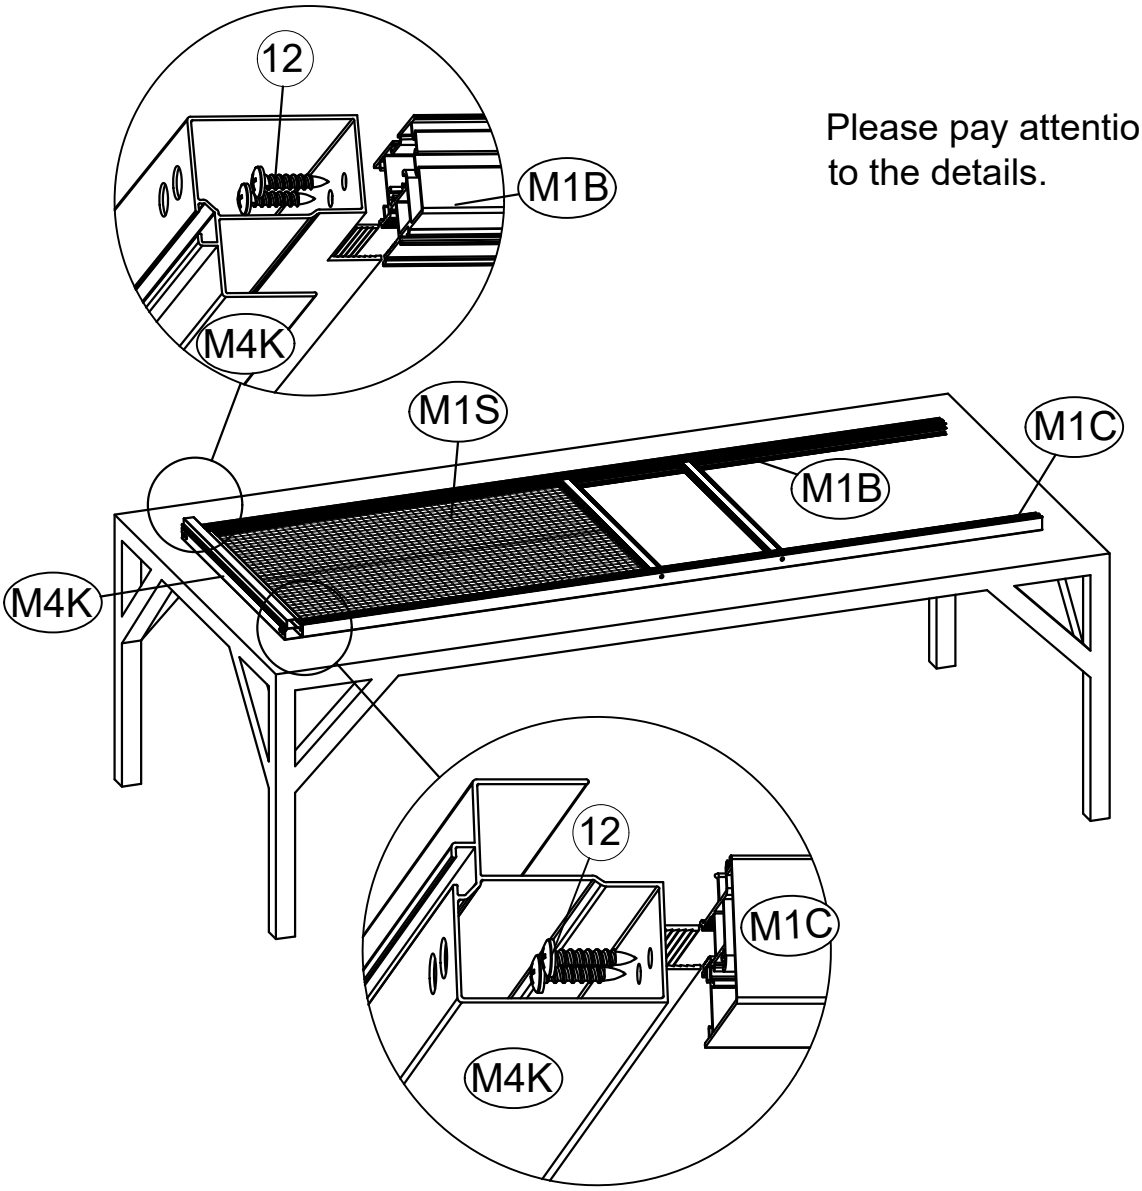


Please pay attention to the details.

<20>

For component AB, repeat two times. AB 2x

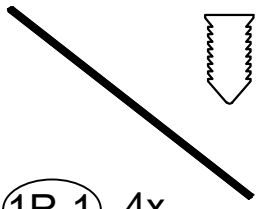



1R-1 4x

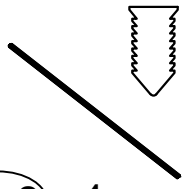



1R-2 4x

Before installing the parts (1R-1 and 1R-2)，move the mesh by hand to ensure makes enough space around the mesh.

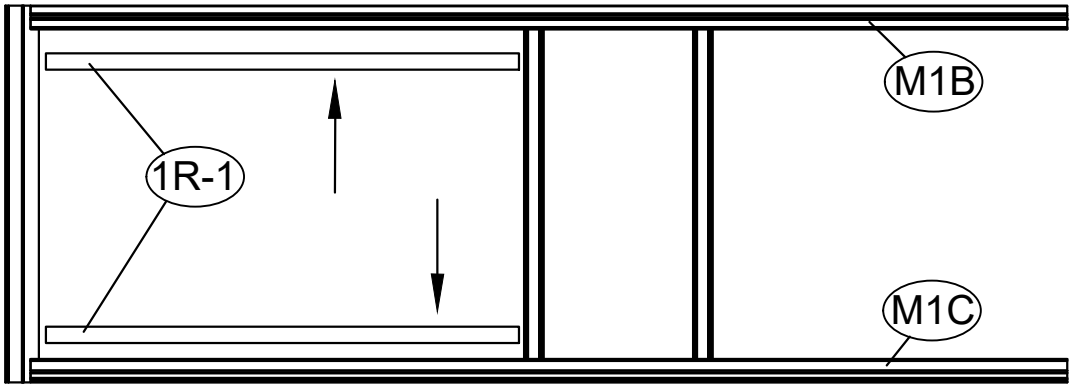

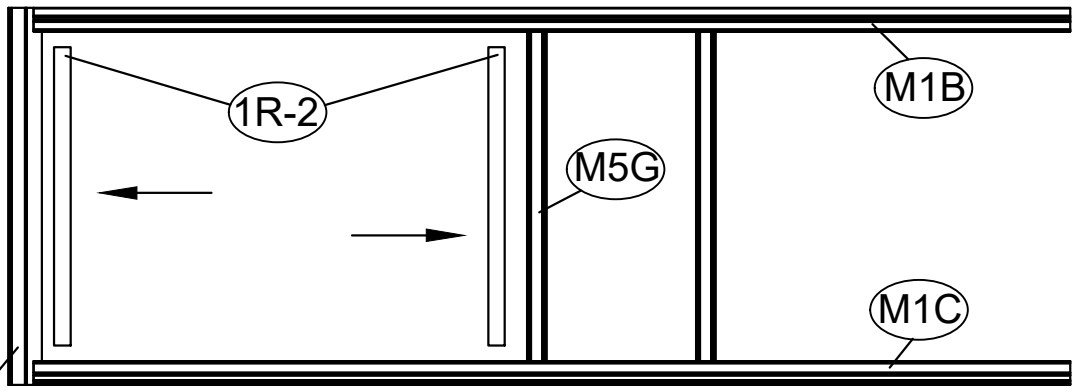


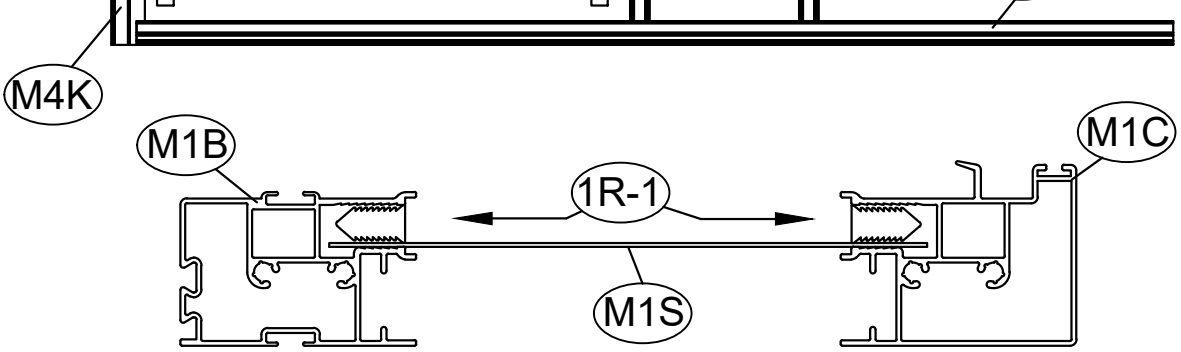

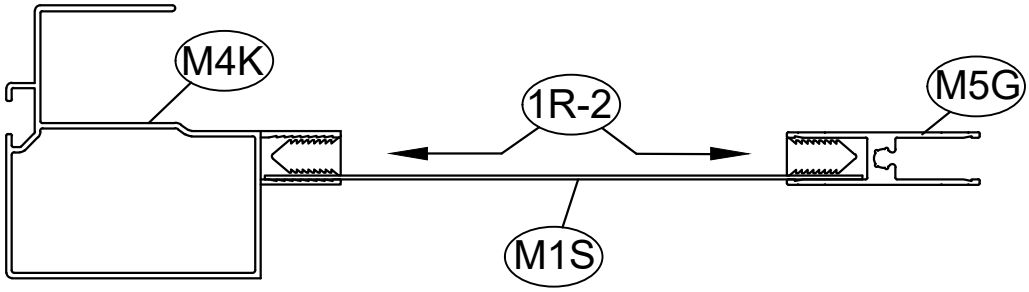


<21>

This diagram is for subsequent reference

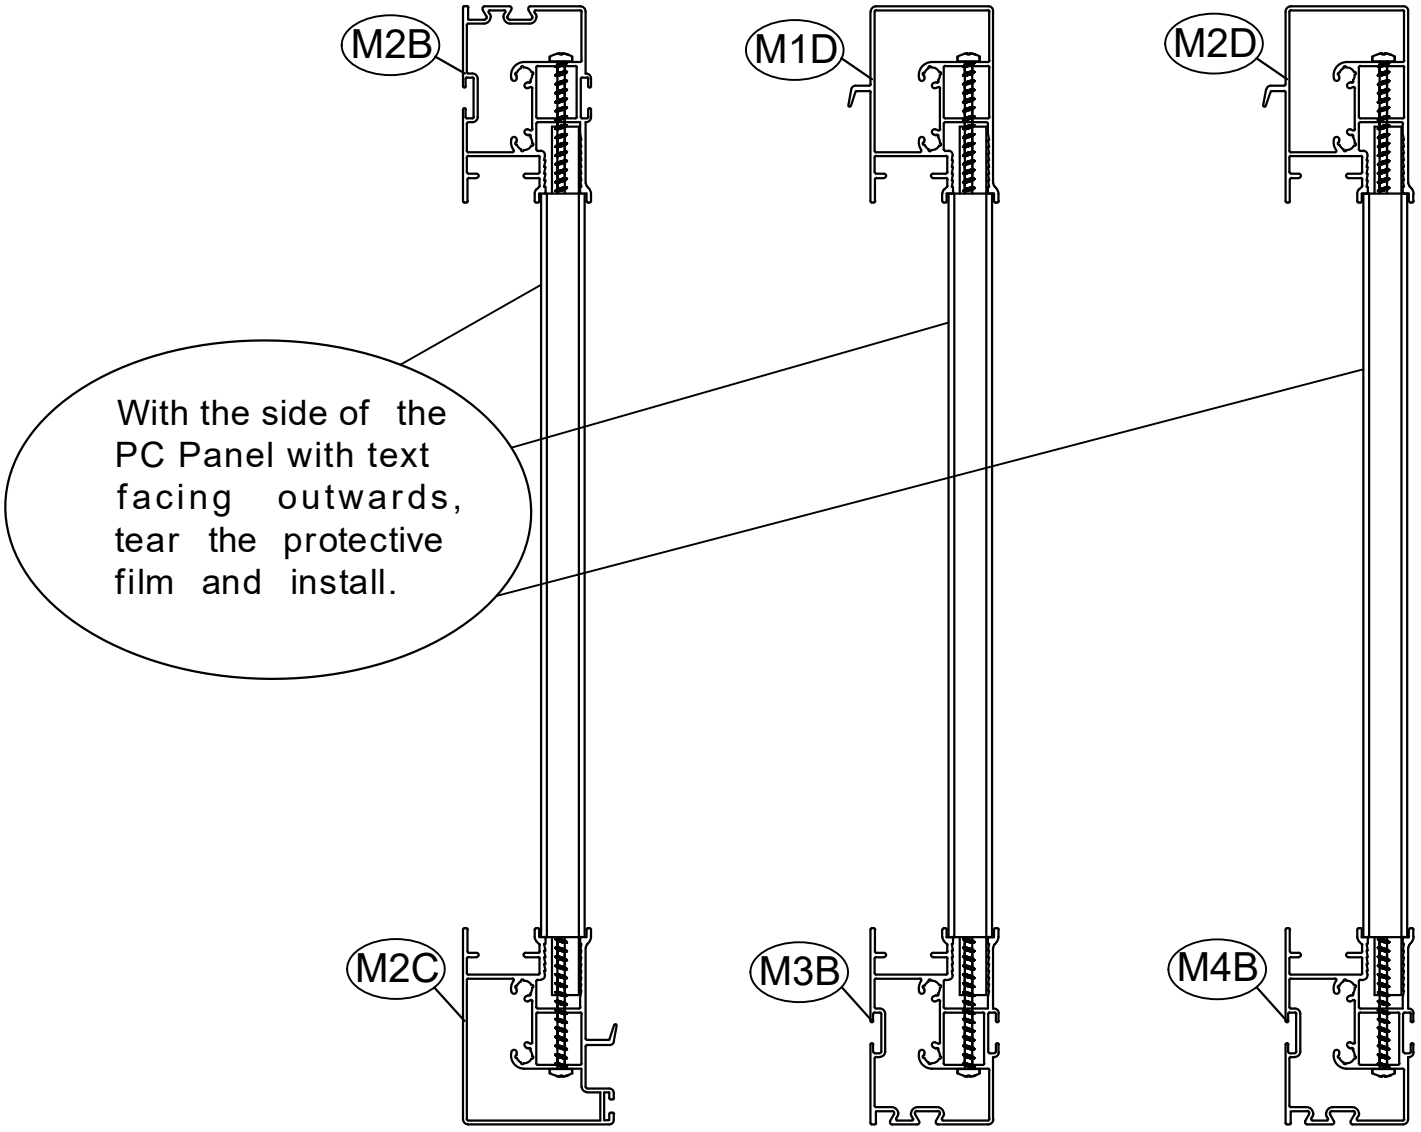


<22>

This diagram is for subsequent reference.

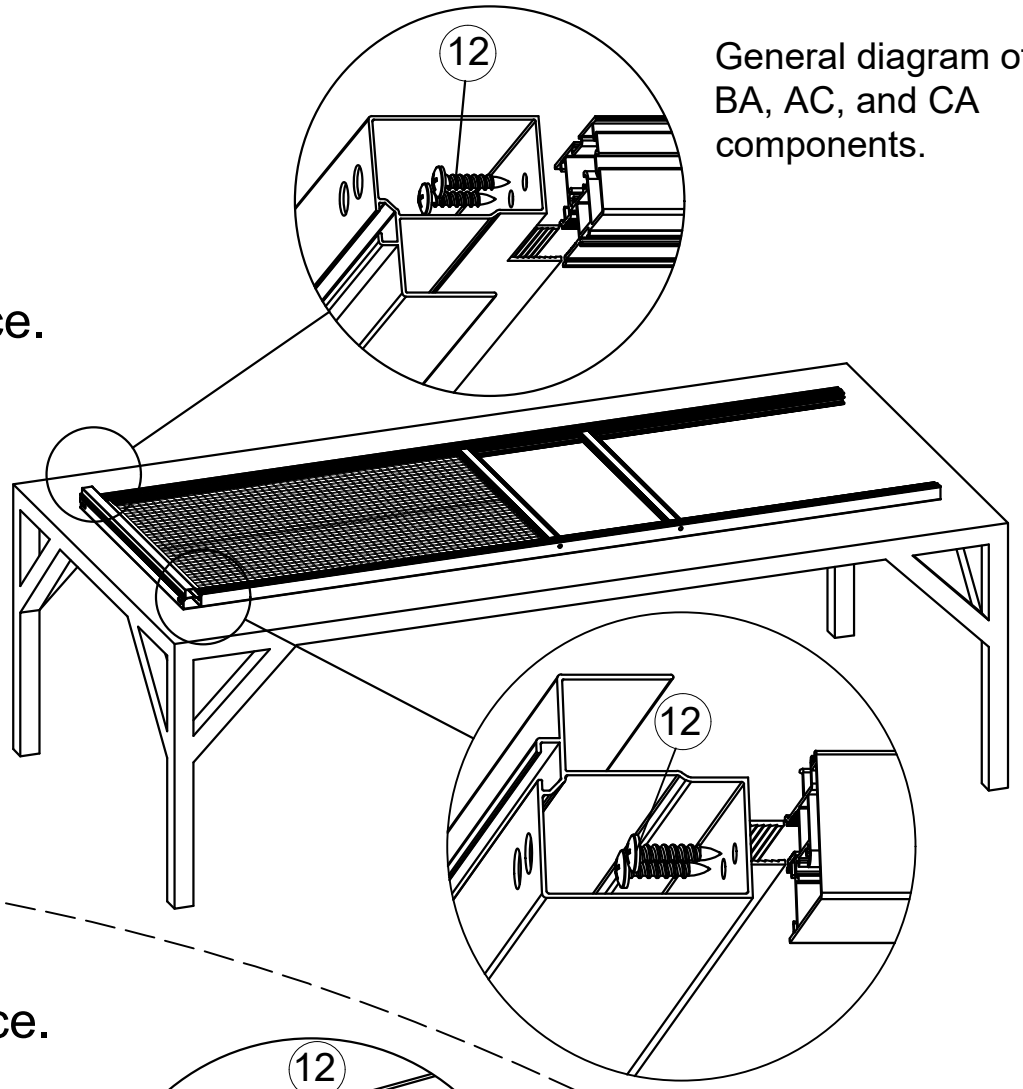

General diagram of BA, AC, and CA components.

This diagram is for subsequent reference.

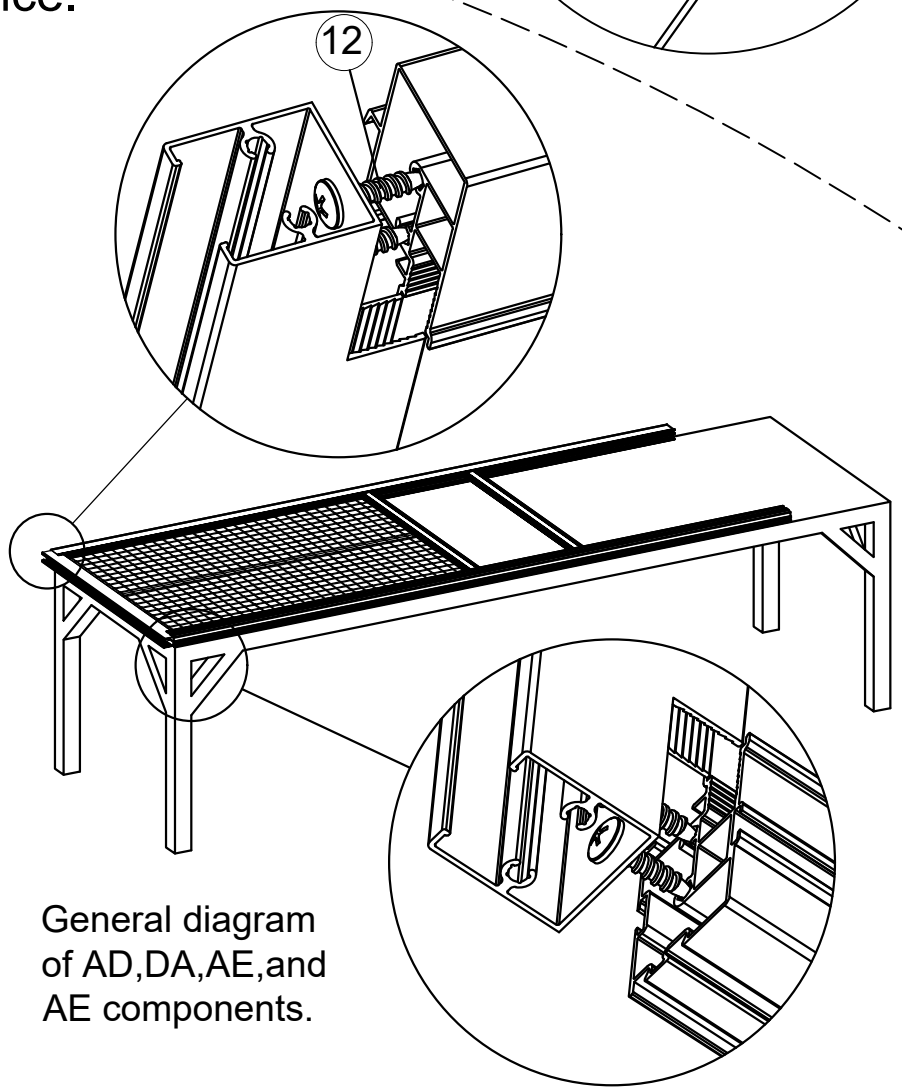


General diagram of AD,DA,AE,and AE components.

<23>

Install door frames BA, AC, CA, AD, DA, AE, and EA according to the instructions on pages 27 .


M4K	2x
1R-1	4x
1R-2	4x
M5G	4x
M1S	2x
MS2	2x
M2B	2x
M2C	2x
14	8x
12	8x

For component BA, repeat two times. BA 2x

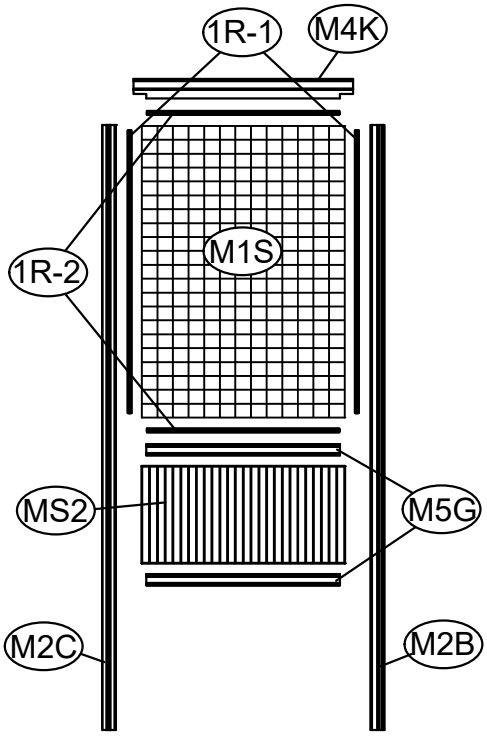


M6K	2x
1R-1	8x
M7G	4x
M3S	2x
MS10	2x
M1B	2x
M1C	2x
14	8x
12	8x

For component AC, repeat two times. AC 2x

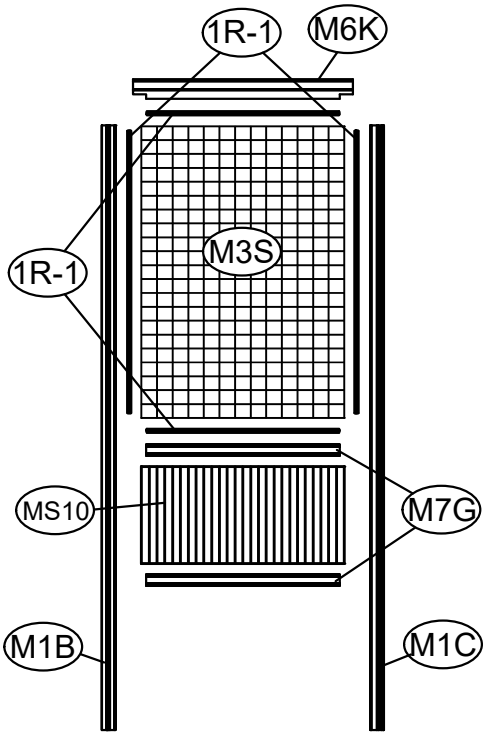

M6K	2x
1R-1	8x
M7G	4x
M3S	2x
MS10	2x
M2B	2x
M2C	2x
14	8x
12	8x

For component CA, repeat two times. CA 2x

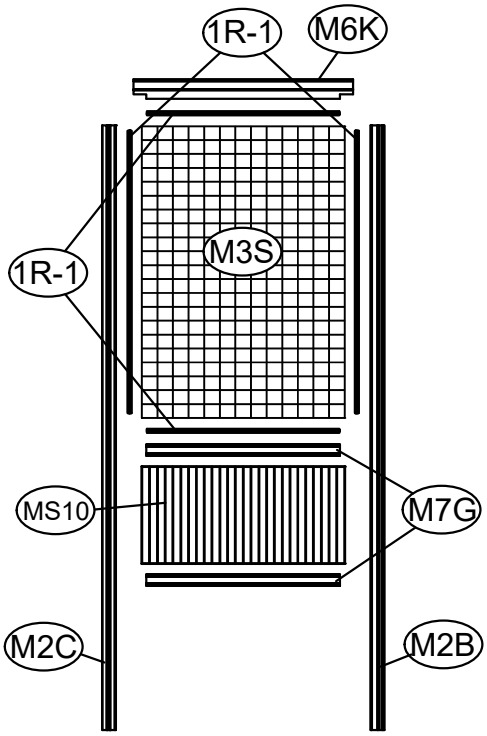


Component AB is symmetric to BA, and AC is symmetric to CA.

M4H	2x
1R-1	4x
1R-2	4x
M5G	4x
M1S	2x
MS2	2x
M5B	2x
M1D	2x
14	8x
12	8x

<24>

AD 2x


For component AD, repeat two times.

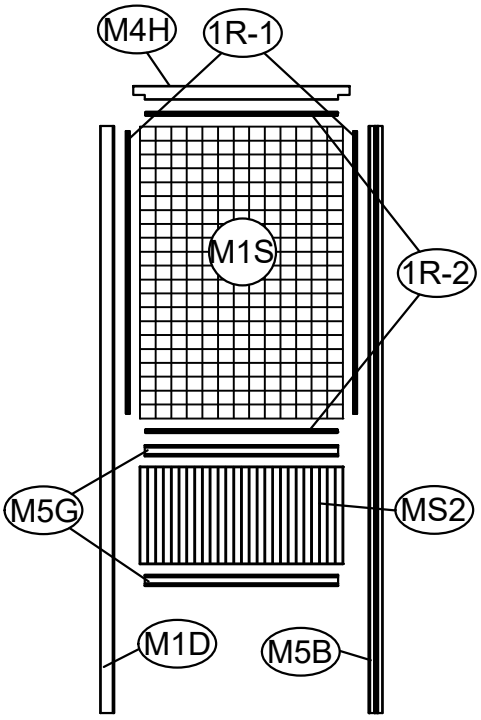

M4H	2x
1R-1	4x
1R-2	4x
M5G	4x
M1S	2x
MS2	2x
M6B	2x
M2D	2x
14	8x
12	8x

For component DA, repeat two times.


DA 2x

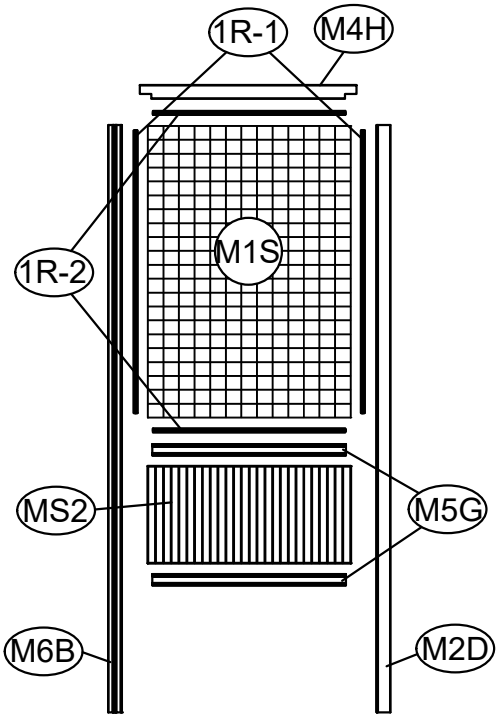

M6H	2x
1R-1	8x
M7G	4x
M3S	2x
MS10	2x
M5B	2x
M1D	2x
14	8x
12	8x

For component AE, repeat two times.


AE 2x

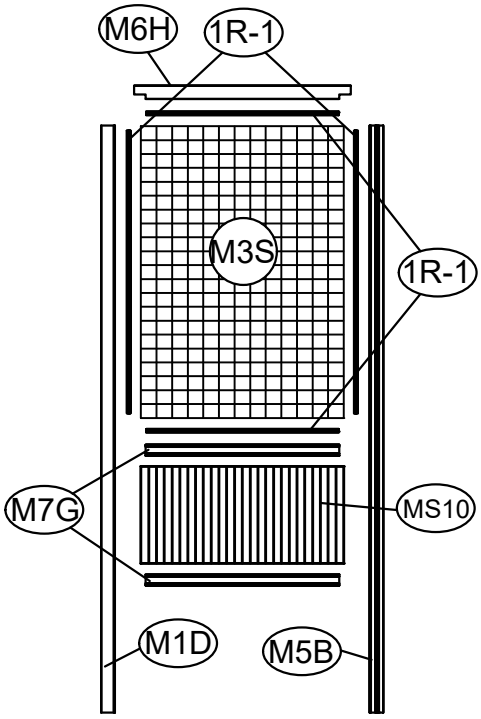


M6H	2x
1R-1	8x
M7G	4x
M3S	2x
MS10	2x
M6B	2x
M2D	2x
14	8x
12	8x

For component EA, repeat two times.


EA 2x

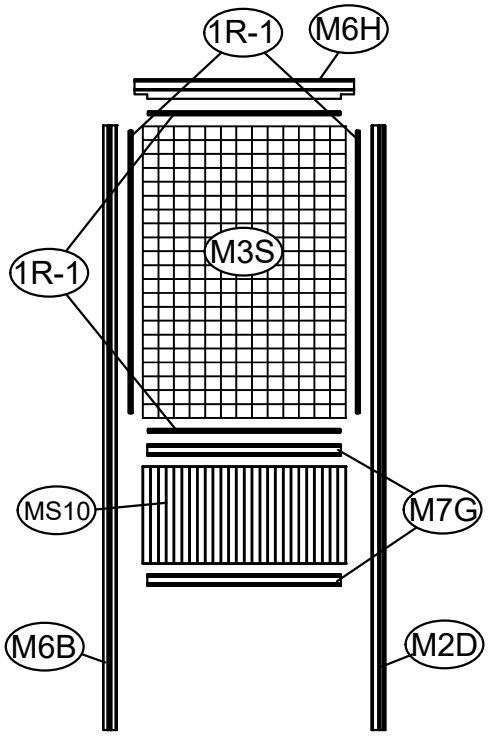


Component AD is symmetric to DA, and AE is symmetric to EA.

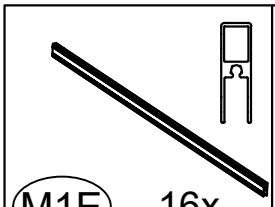


M1E 16x

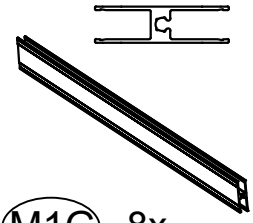


M1G 8x

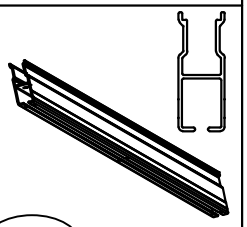

M4L 16x



MS1 16x




M4x35

13 48x


<25>

For component AF, repeat eight times.

AF 8x

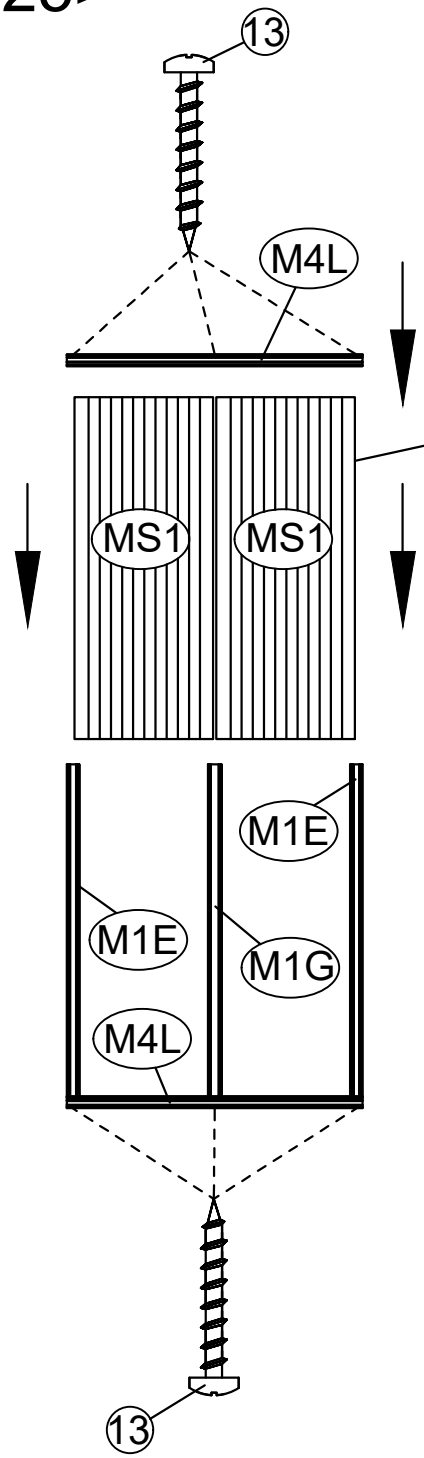

With the side of the PC panel with the text facing outward, tear off the protective film and installing. After installation, be sure to leave the front side unchanged for the next step.

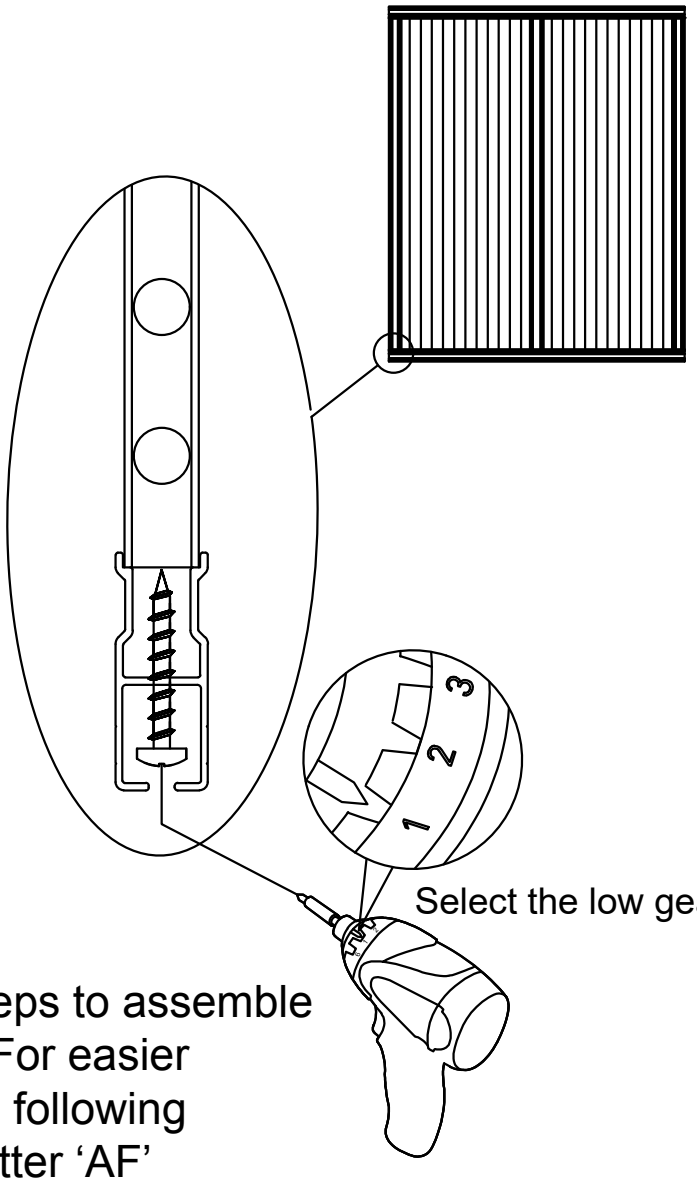

Select the low gear.

Repeat the previous steps to assemble eight AF components. For easier identification during the following assembly, attach the letter ‘AF’ to a clearly visible position on the front.

For component AG, repeat eight times.

AG 8x

M1E 16x


M1G 8x

M6L 16x


MS9 16x

M4x35

13 48x

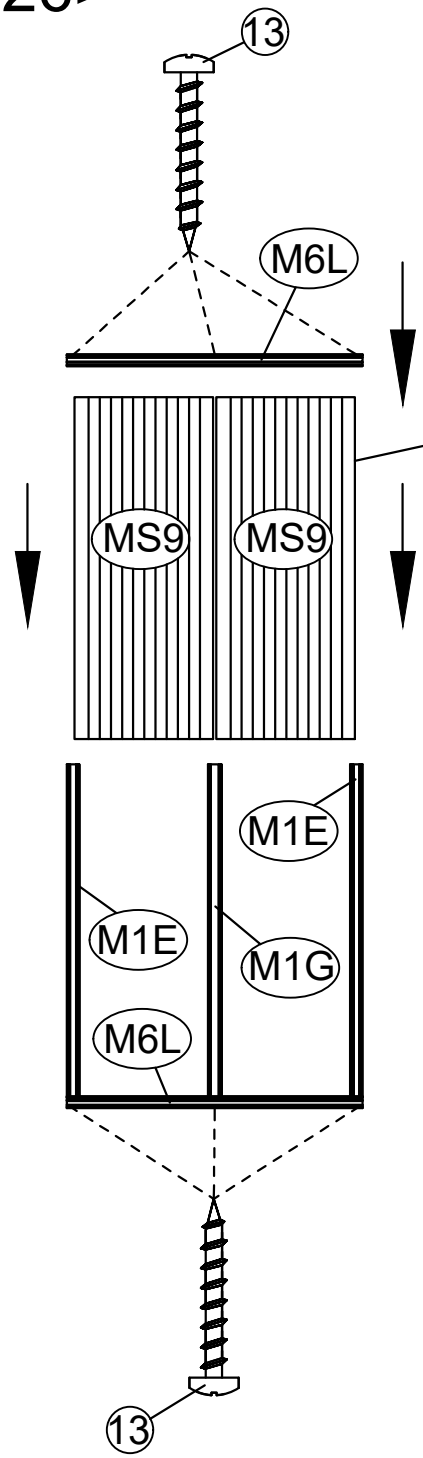


With the side of the PC panel with the text facing outward, tear off the protective film and install. After installation, be sure to leave the front side unchanged for the next step.

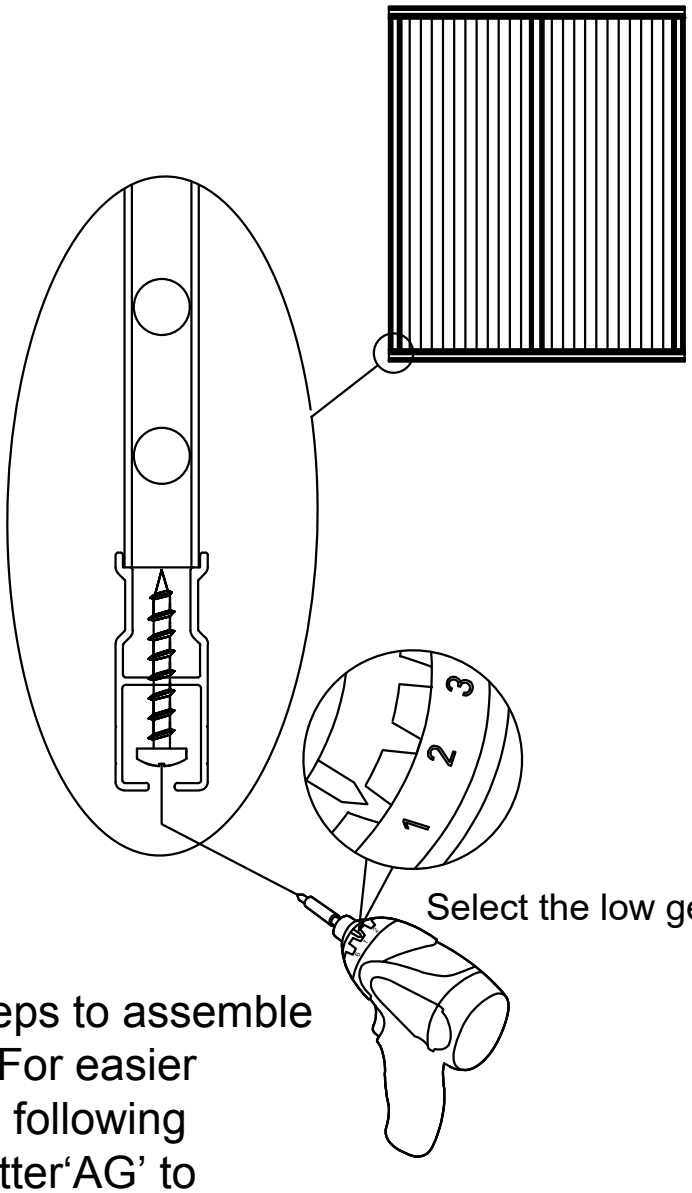

Select the low gear.


Repeat the previous steps to assemble eight AG components. For easier identification during the following assembly, attach the letter‘AG’ to a clearly visible position on the front.



MD1 64x



MD2 128x




MD3 32x


<27>

AF 8x

AG 8x

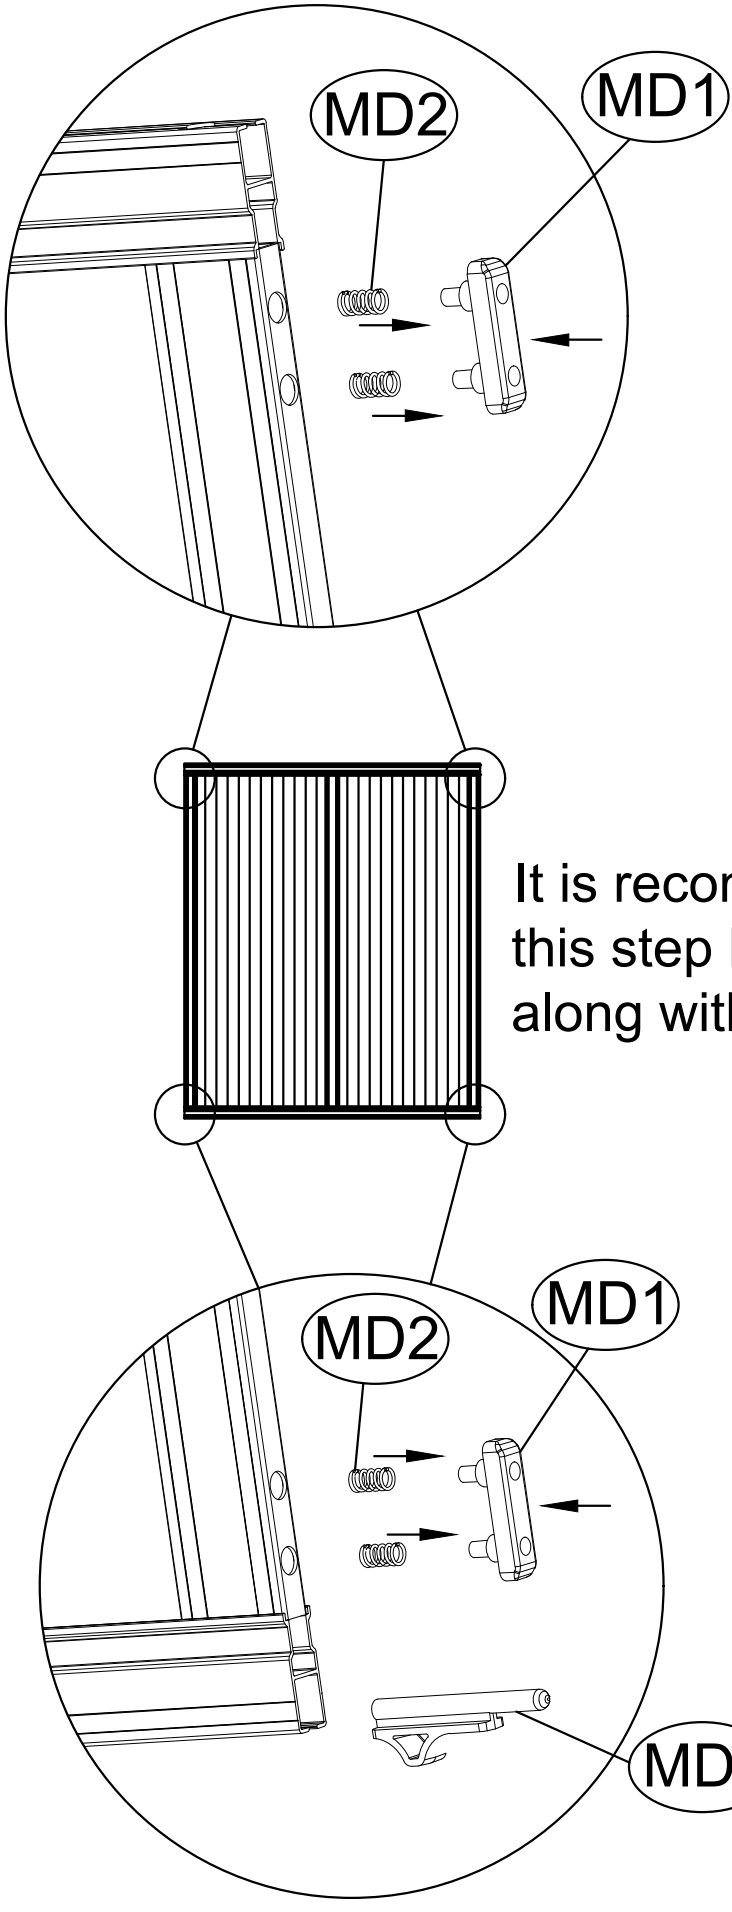


It is recommended that this step be assembled along with the next step.

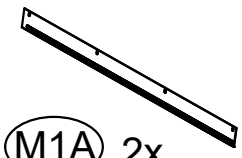


M1A 2x




M2A 2x

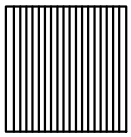

MS3 4x

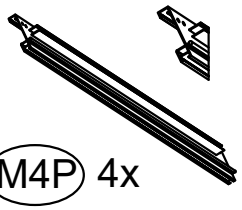

M4P 4x





M4x20

12 16x

<28>

AB 2x BA 2X

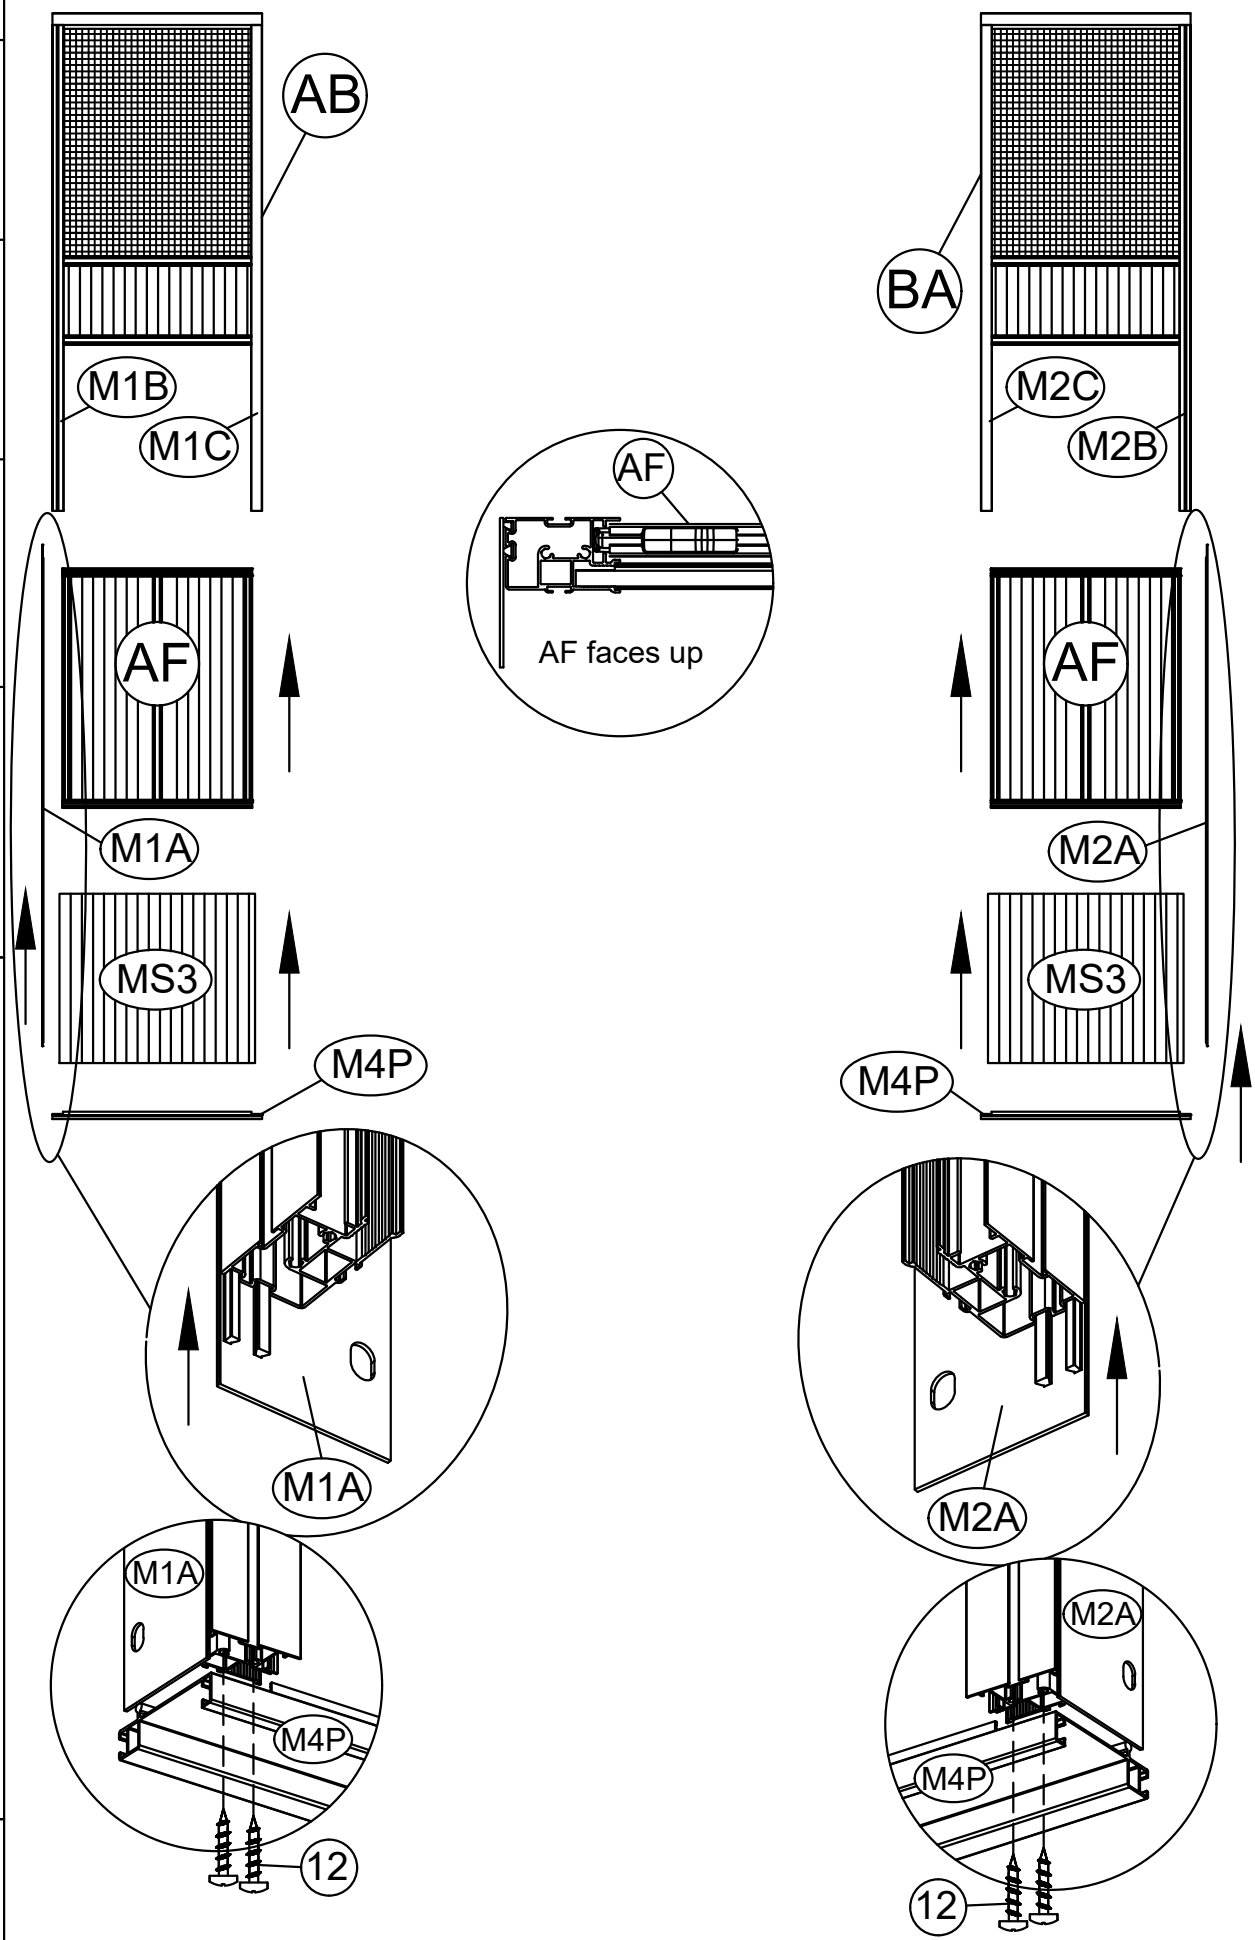


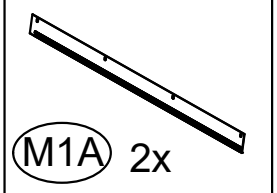


M1A 2x




M2A 2x

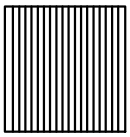

MS11 4x

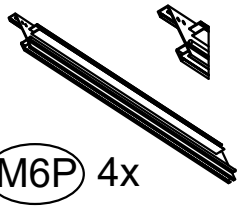


M6P 4x




M4x20


12 16x

AC 2x CA 2X

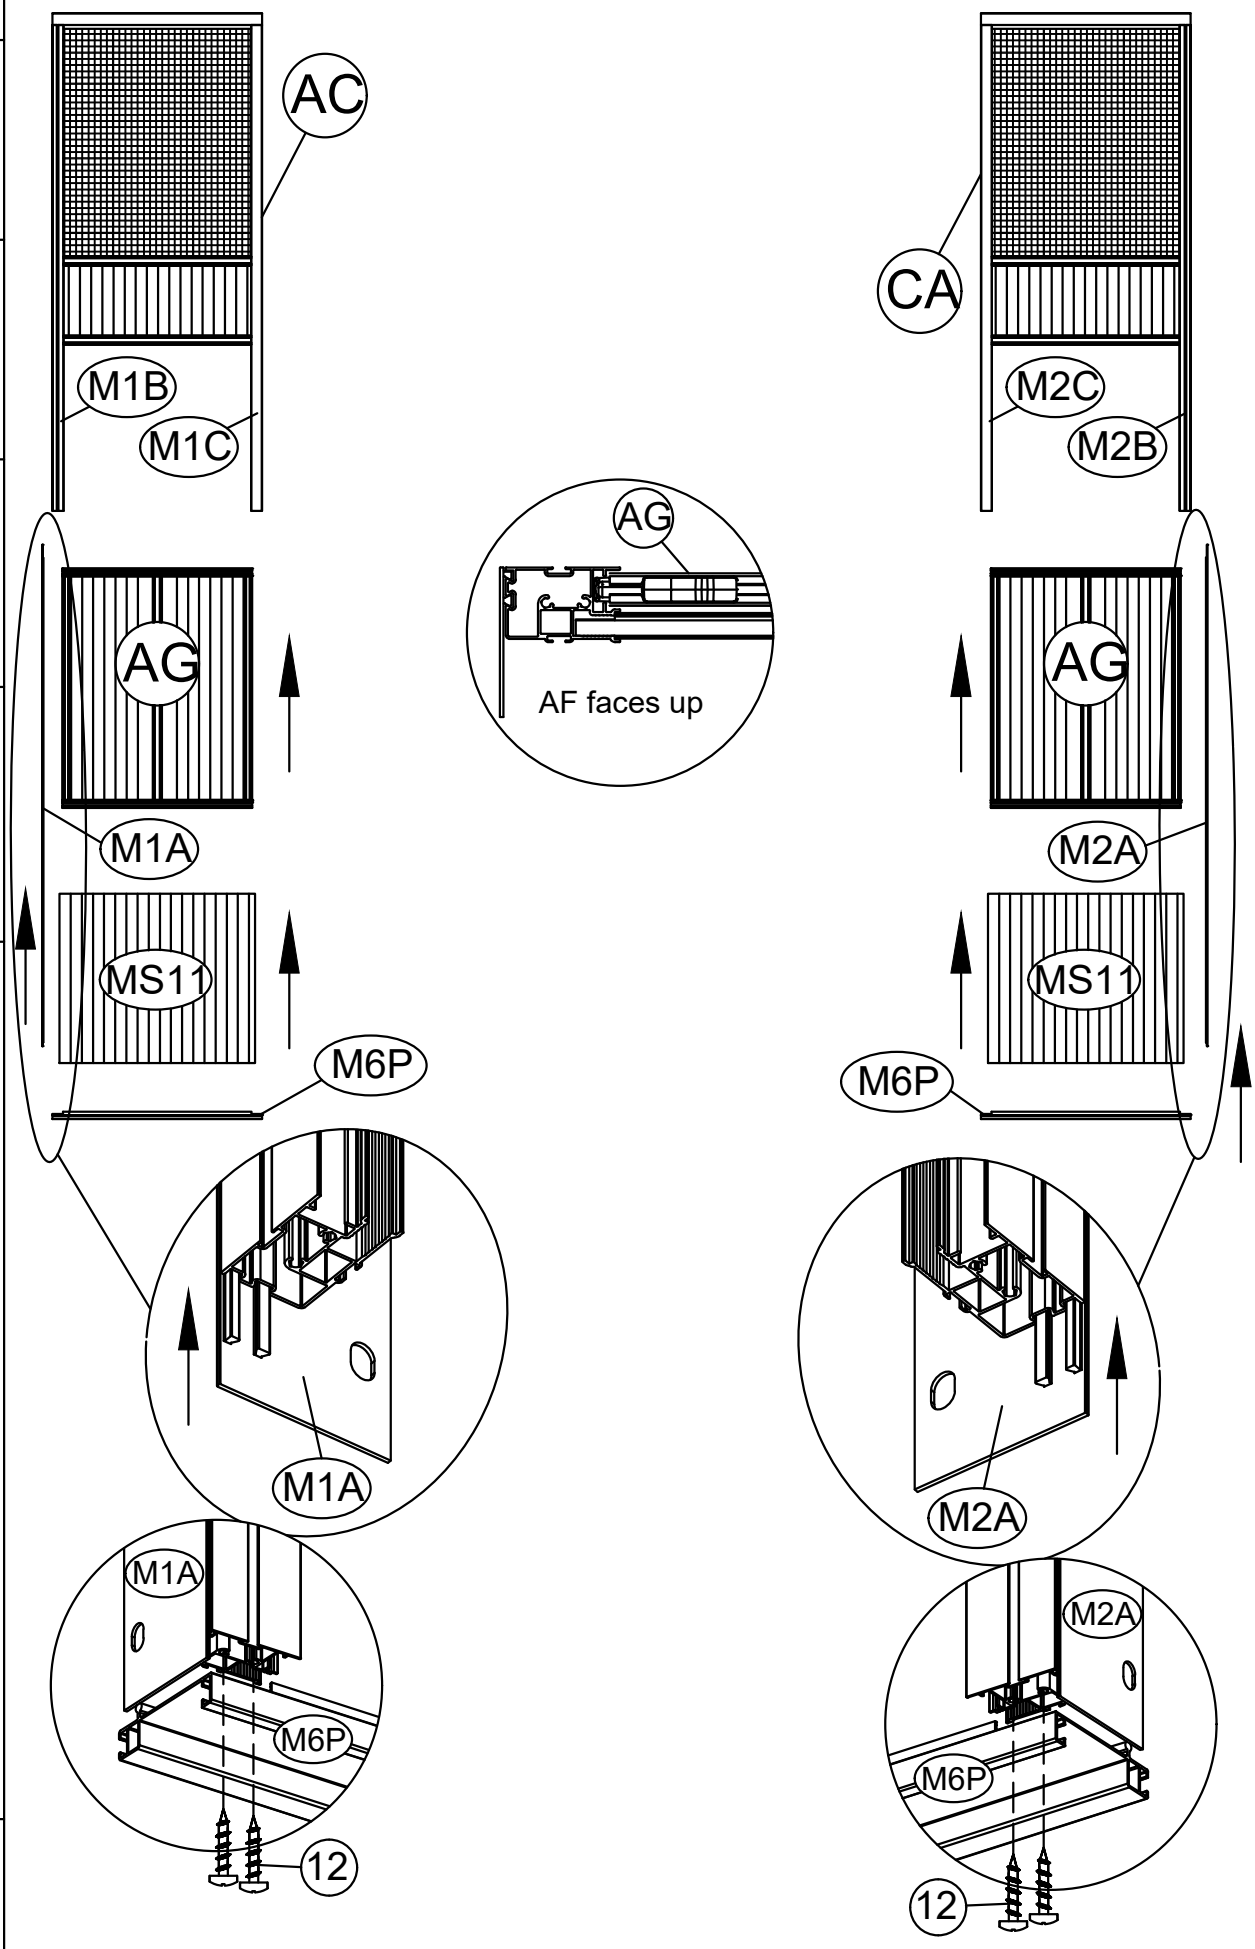


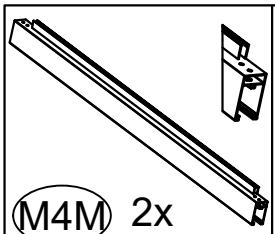

M4M 2x

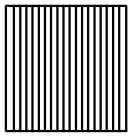

MS4 2x




M4x20

12 16x




MD5 4x



MD4 4x




4-1 4x




M4x35

13 4x

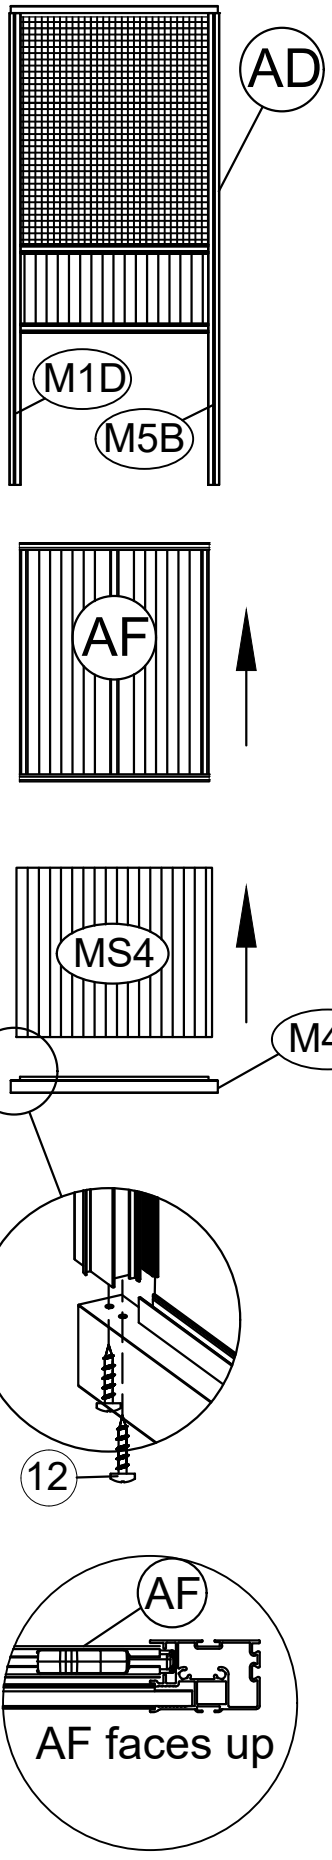

AD 2X

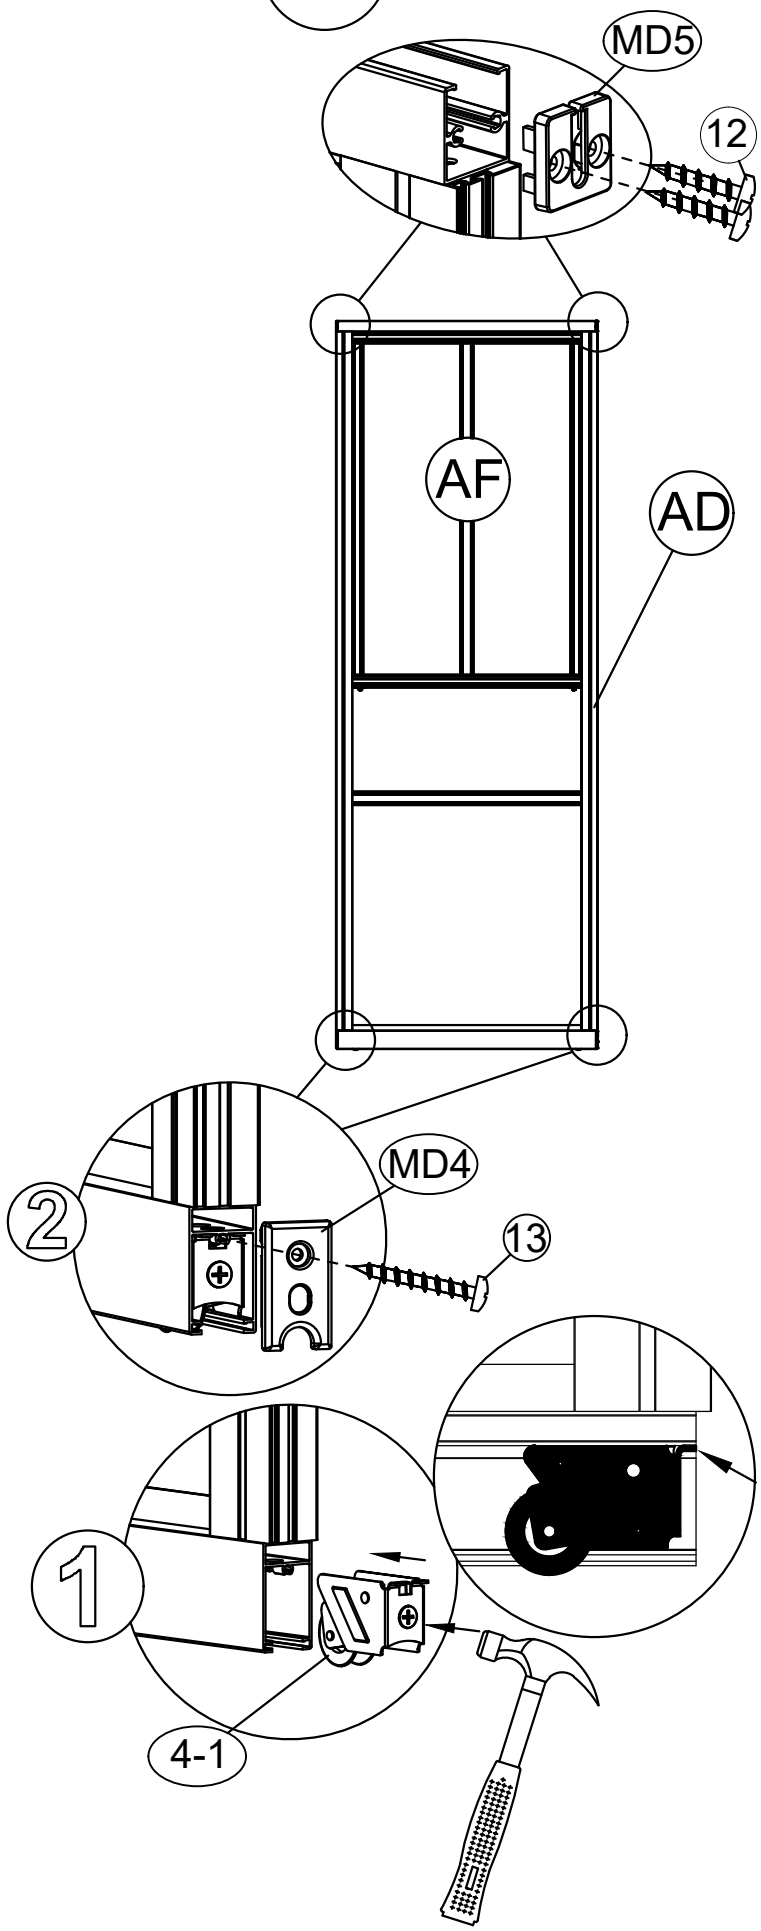


Tap gently so that the pulley is flush with the profile.

<31>

Install door frames DA, AE and EA according to the instructions on pages 39 to 40.


M4M	2x
MS4	2x
MD4	4x
MD5	4x
4-1	4x
12	16x
13	4x

DA 2x

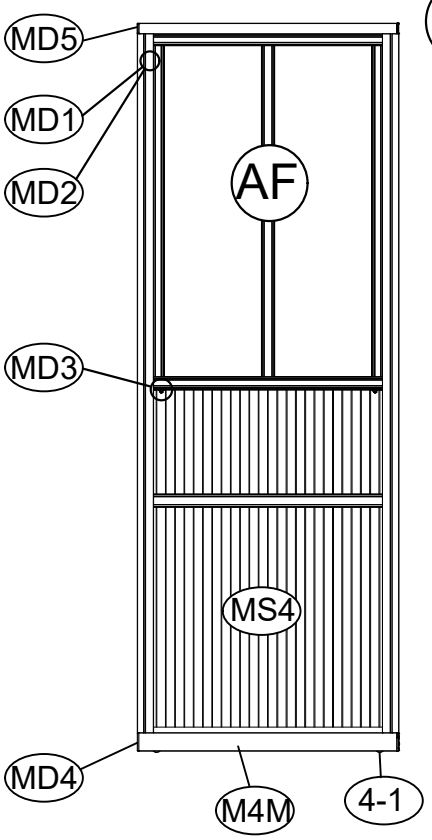


M6M	2x
MS12	2x
MD4	4x
MD5	4x
4-1	4x
12	16x
13	4x

AE x2

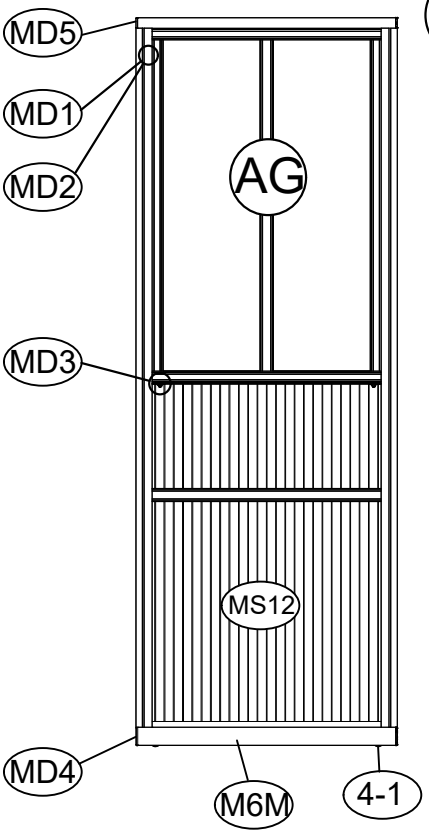

M6M	2x
MS12	2x
MD4	4x
MD5	4x
4-1	4x
12	16x
13	4x


EA x2

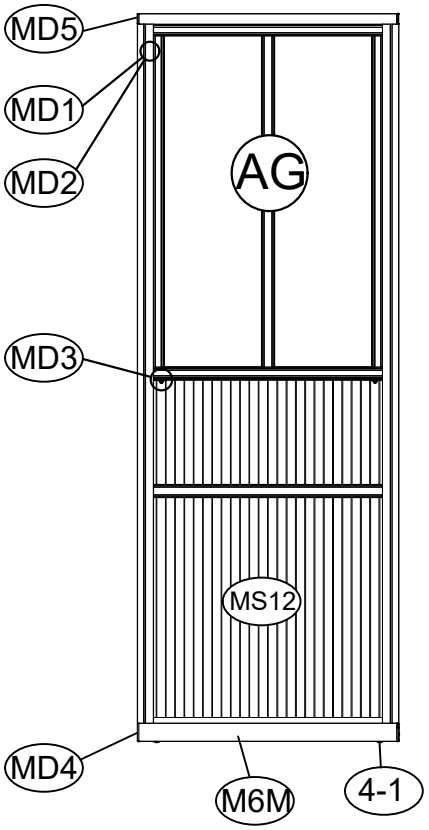

Component AD is symmetric to DA, AE is symmetric to EA.




5-1 2x

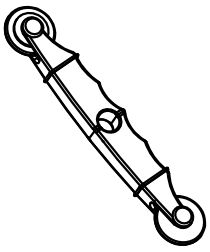


24 1x


<32> Before installation, wet the rubber strips "5-1" with water to make it easier to stick into the slot.

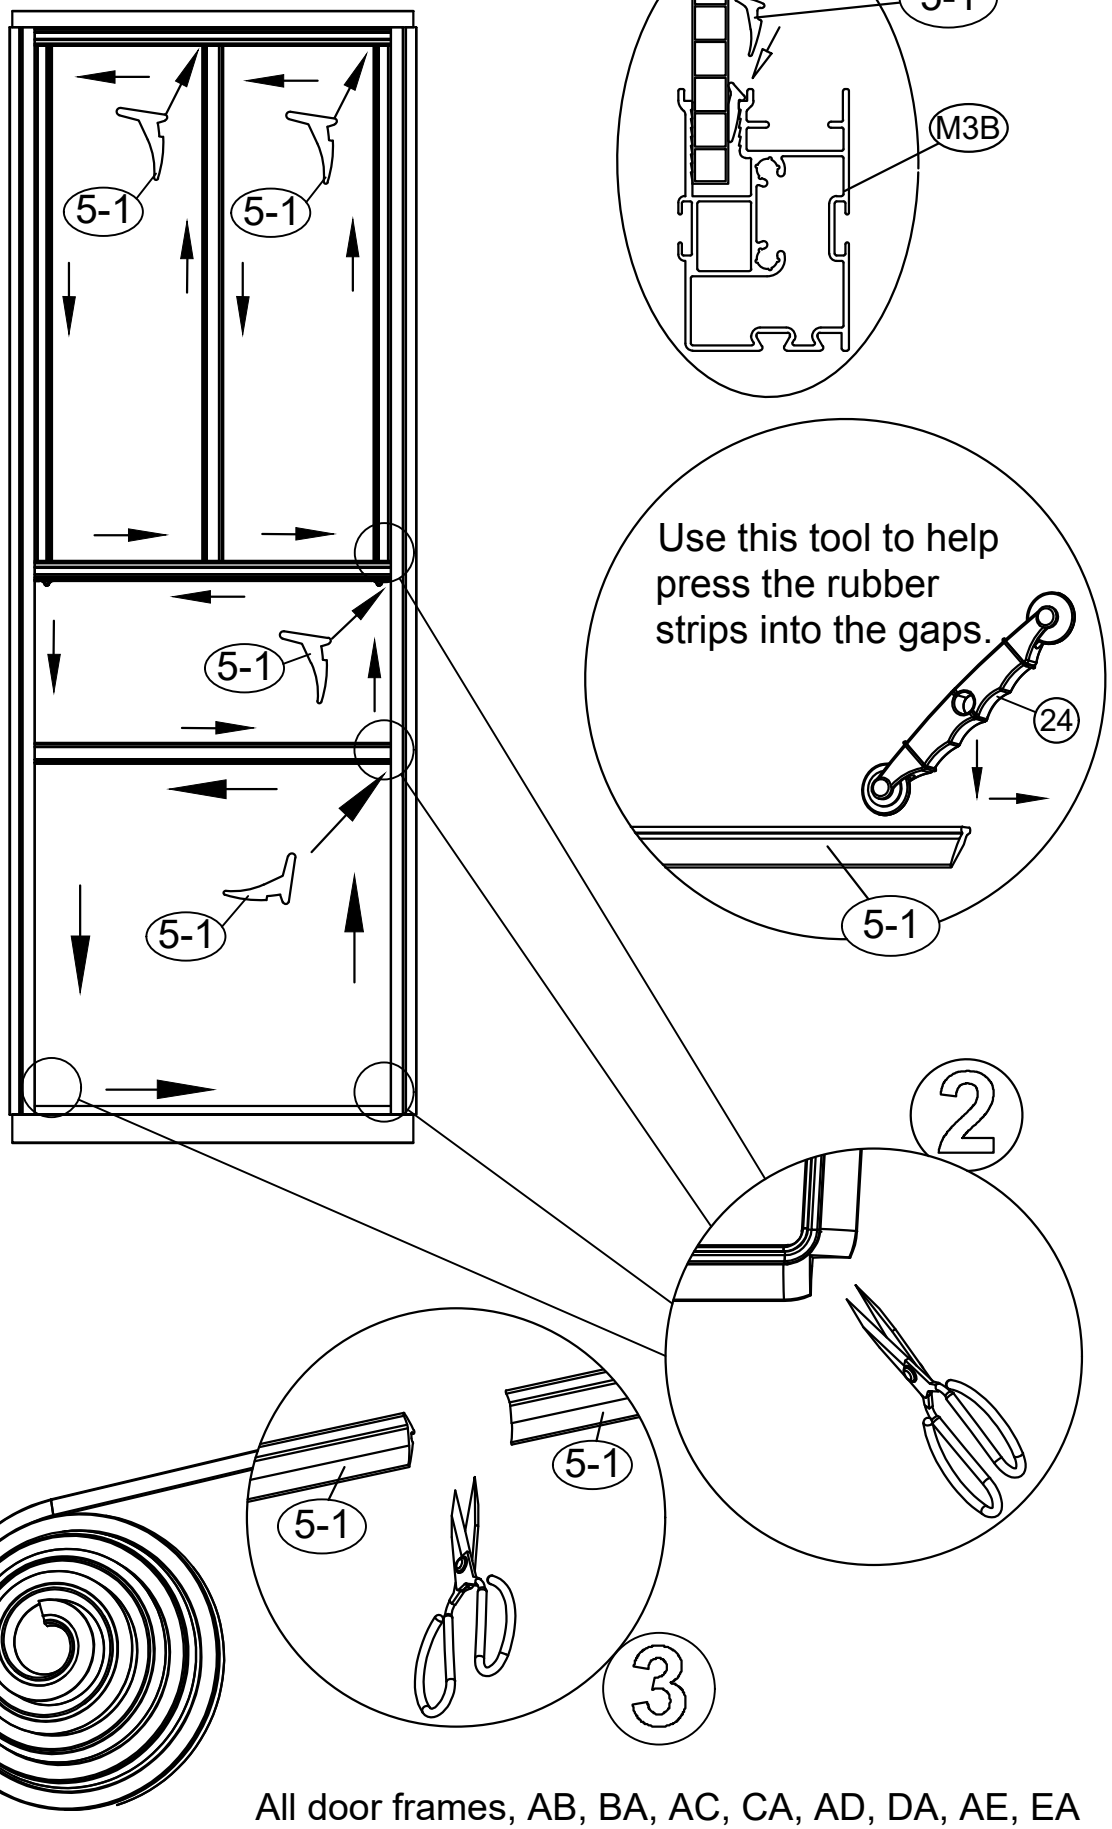


All door frames, AB, BA, AC, CA, AD, DA, AE, EA are installed in the same way.

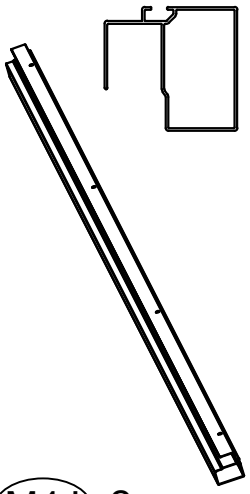

M4J 2x

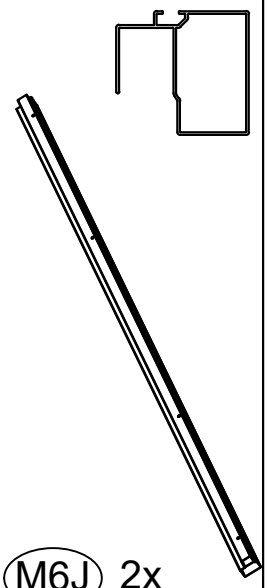


M6J 2x



6.2*11*15

3-1 16x



M6


11 16x





M6x15


1 16x

42

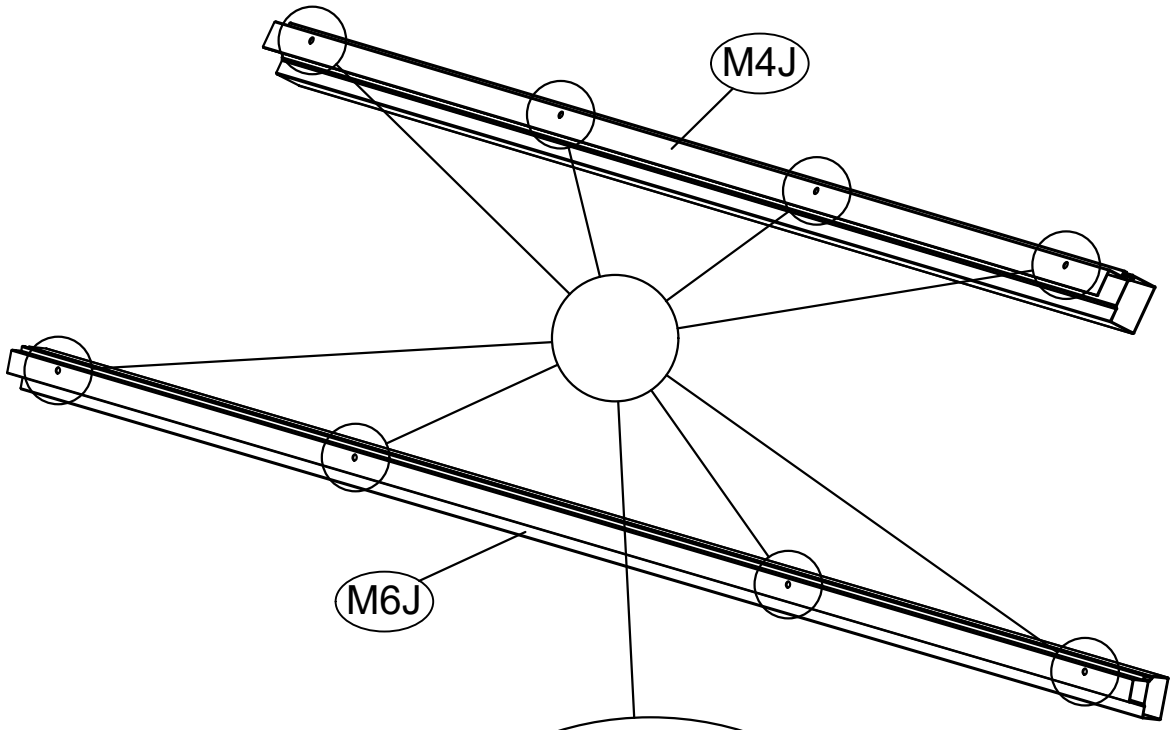


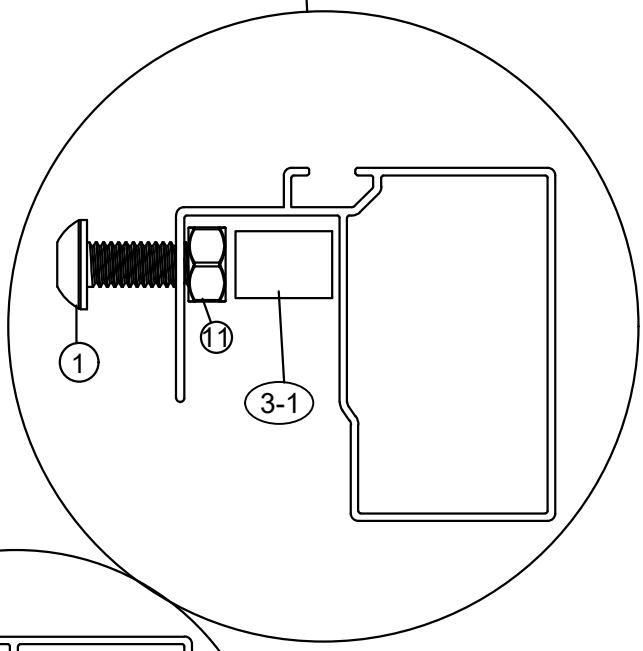

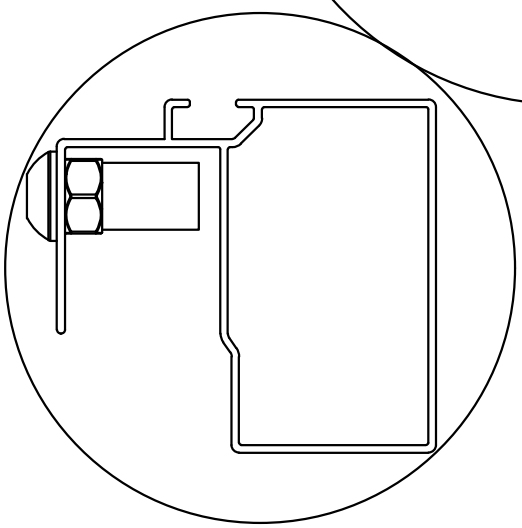

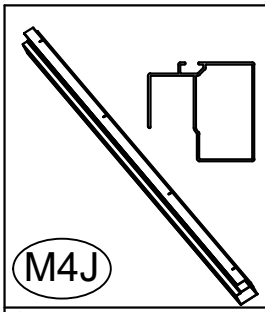

M4J

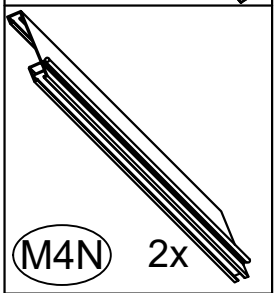

M4N 2x




15 12x




M5*6


16 48x

<34>

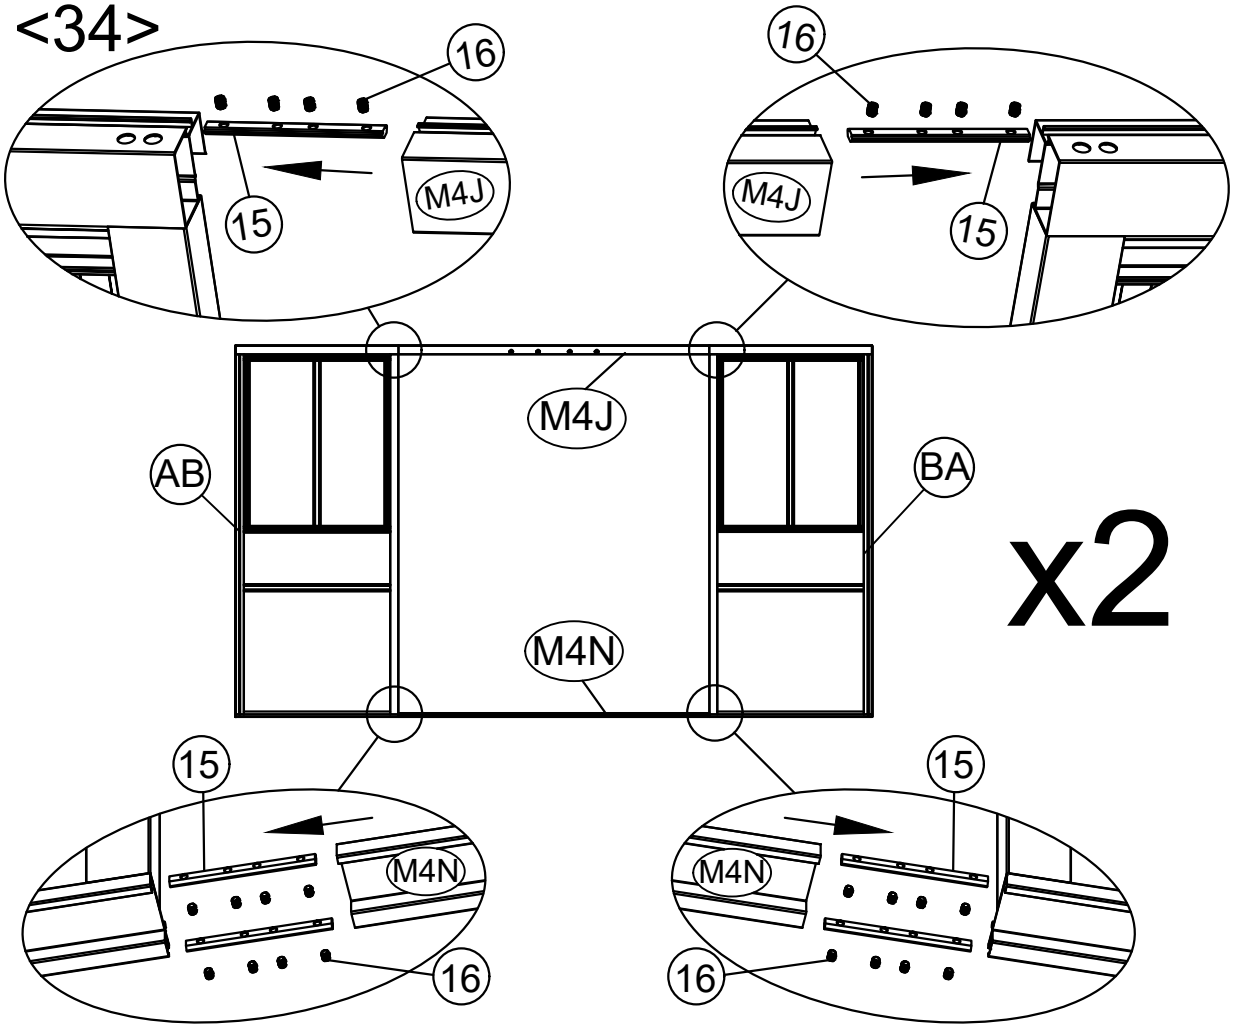

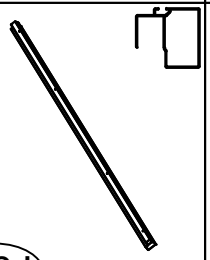

M6J

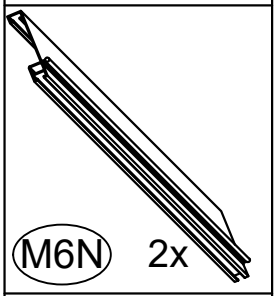

M6N 2x




15 12x





M5*6

16 48x

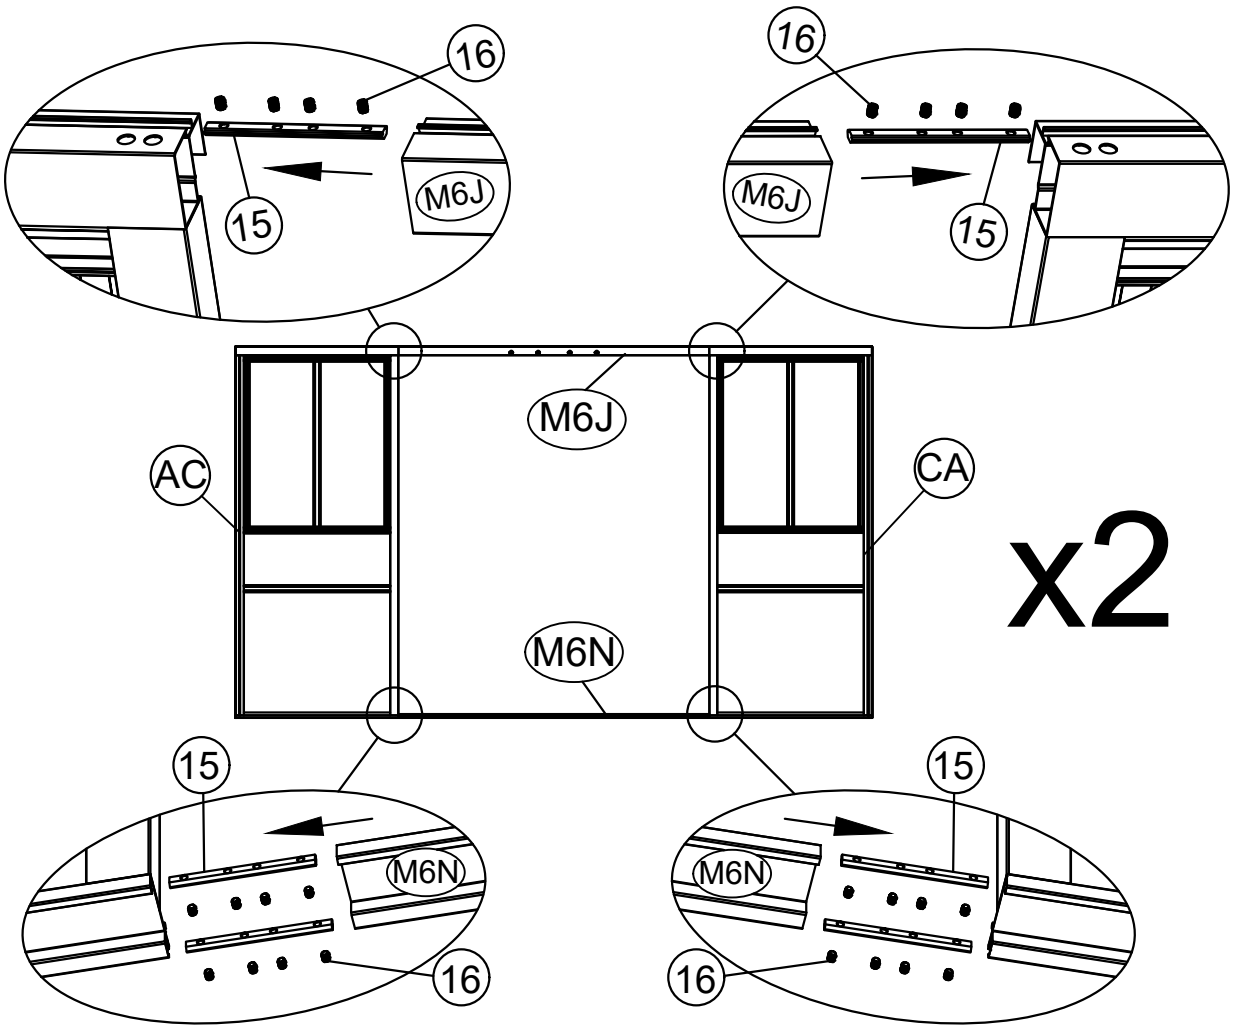

<35>

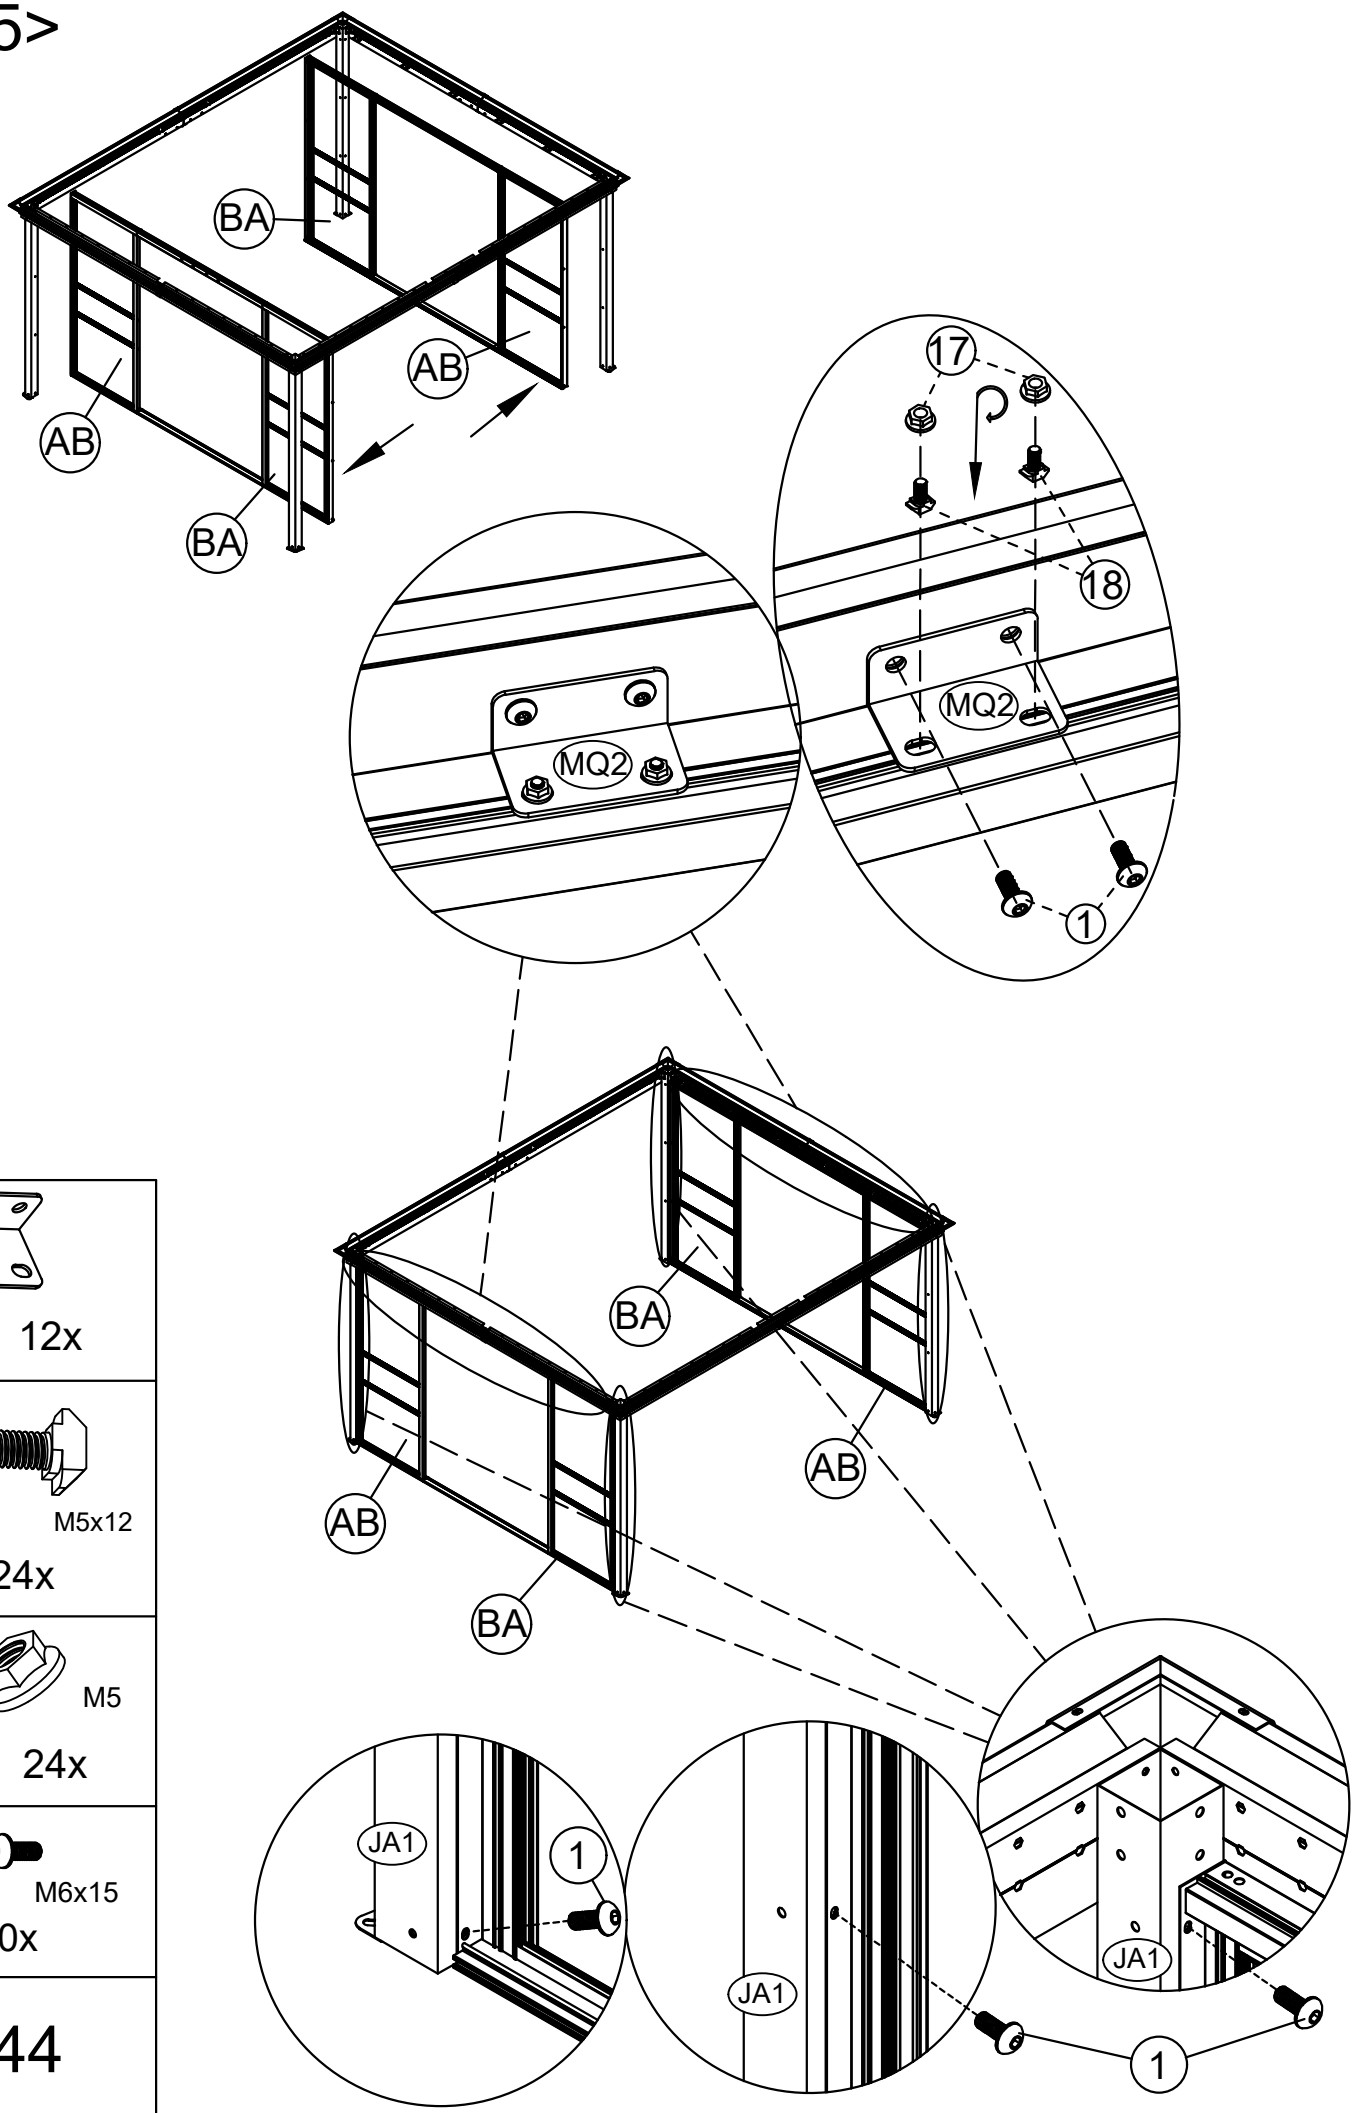



MQ2 12x

M5x12

18 24x


M5


17 24x


M6x15


1 40x


<36>

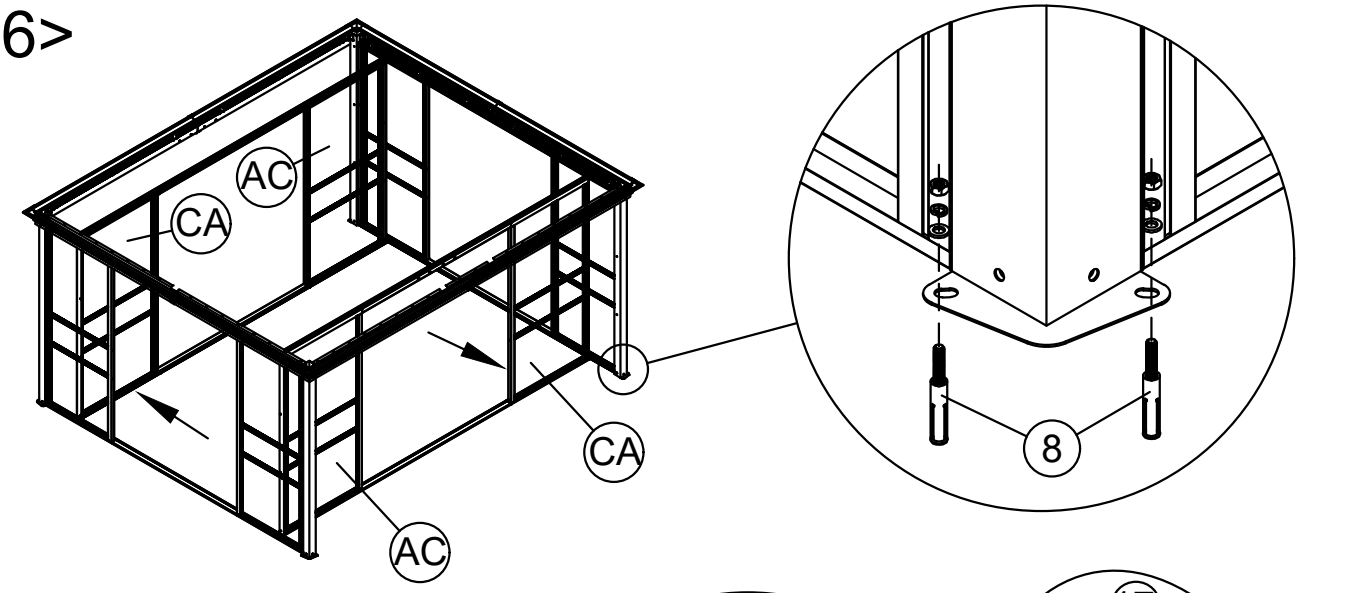

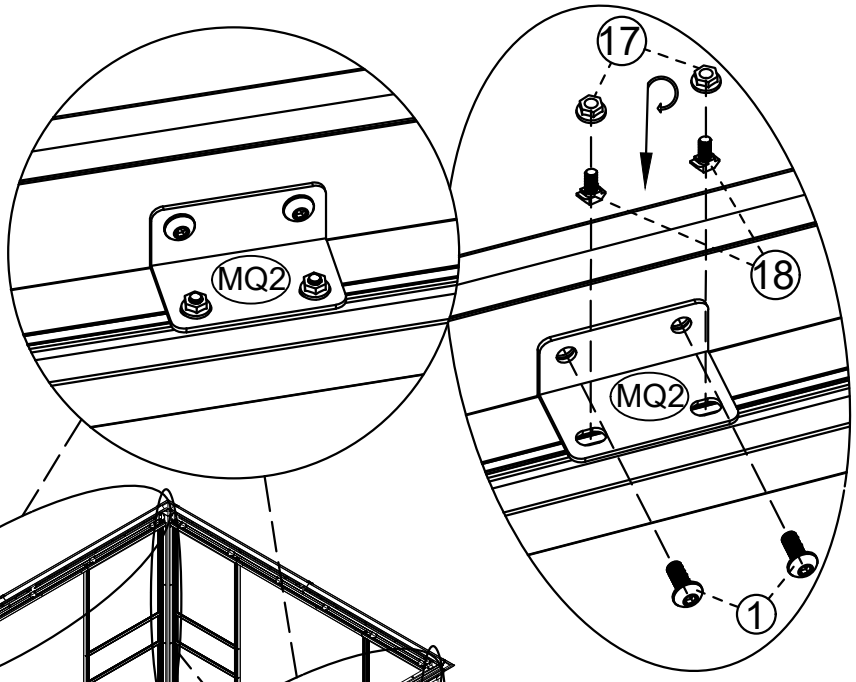


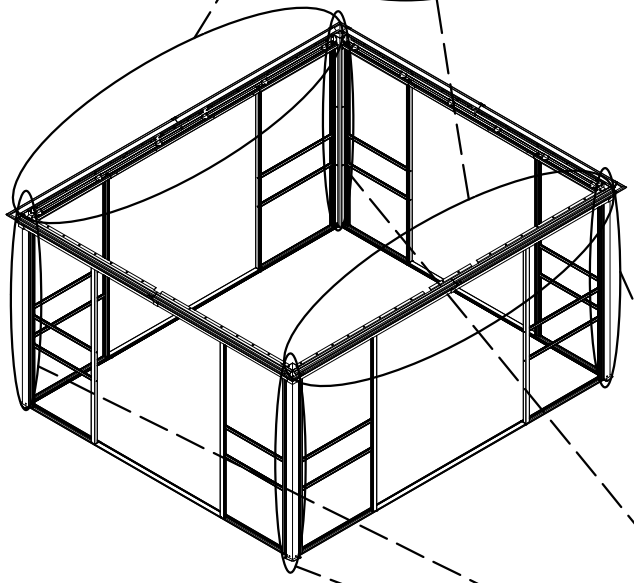

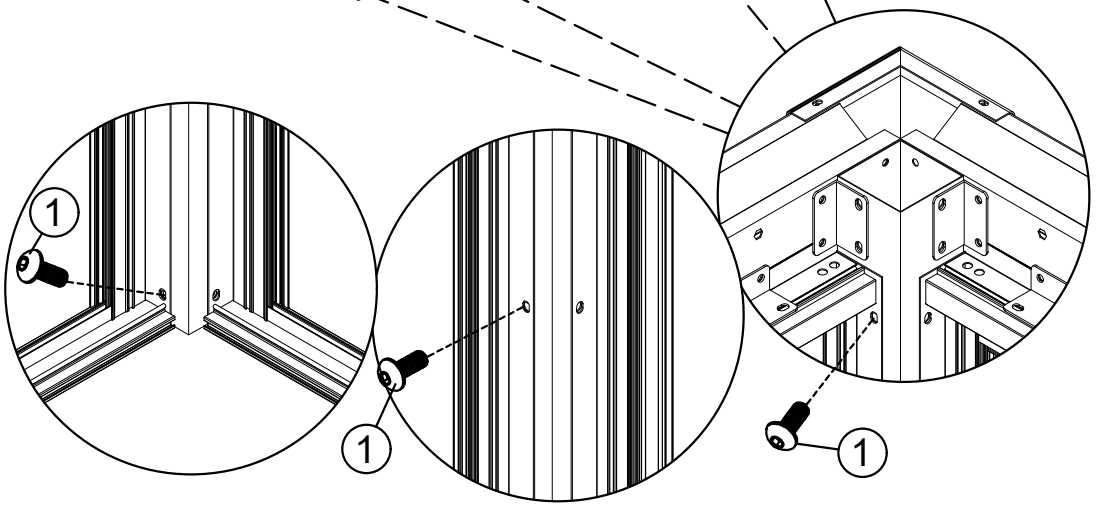


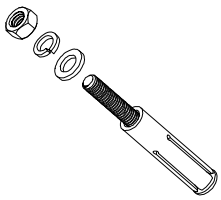

8 8x



MQ2 12x



M5x12

18 24x



M5


17 24x



M6x15

1 40x

45

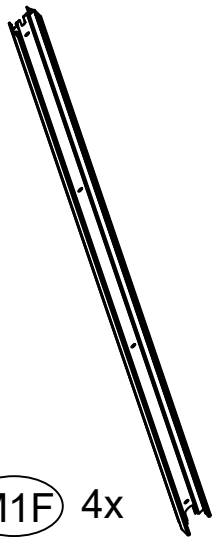

M1F 4x


ST 4.8x12


③ 16x

<37>

DA 2x EA 2x

Pay attention to the left and right orientation when installing the door.

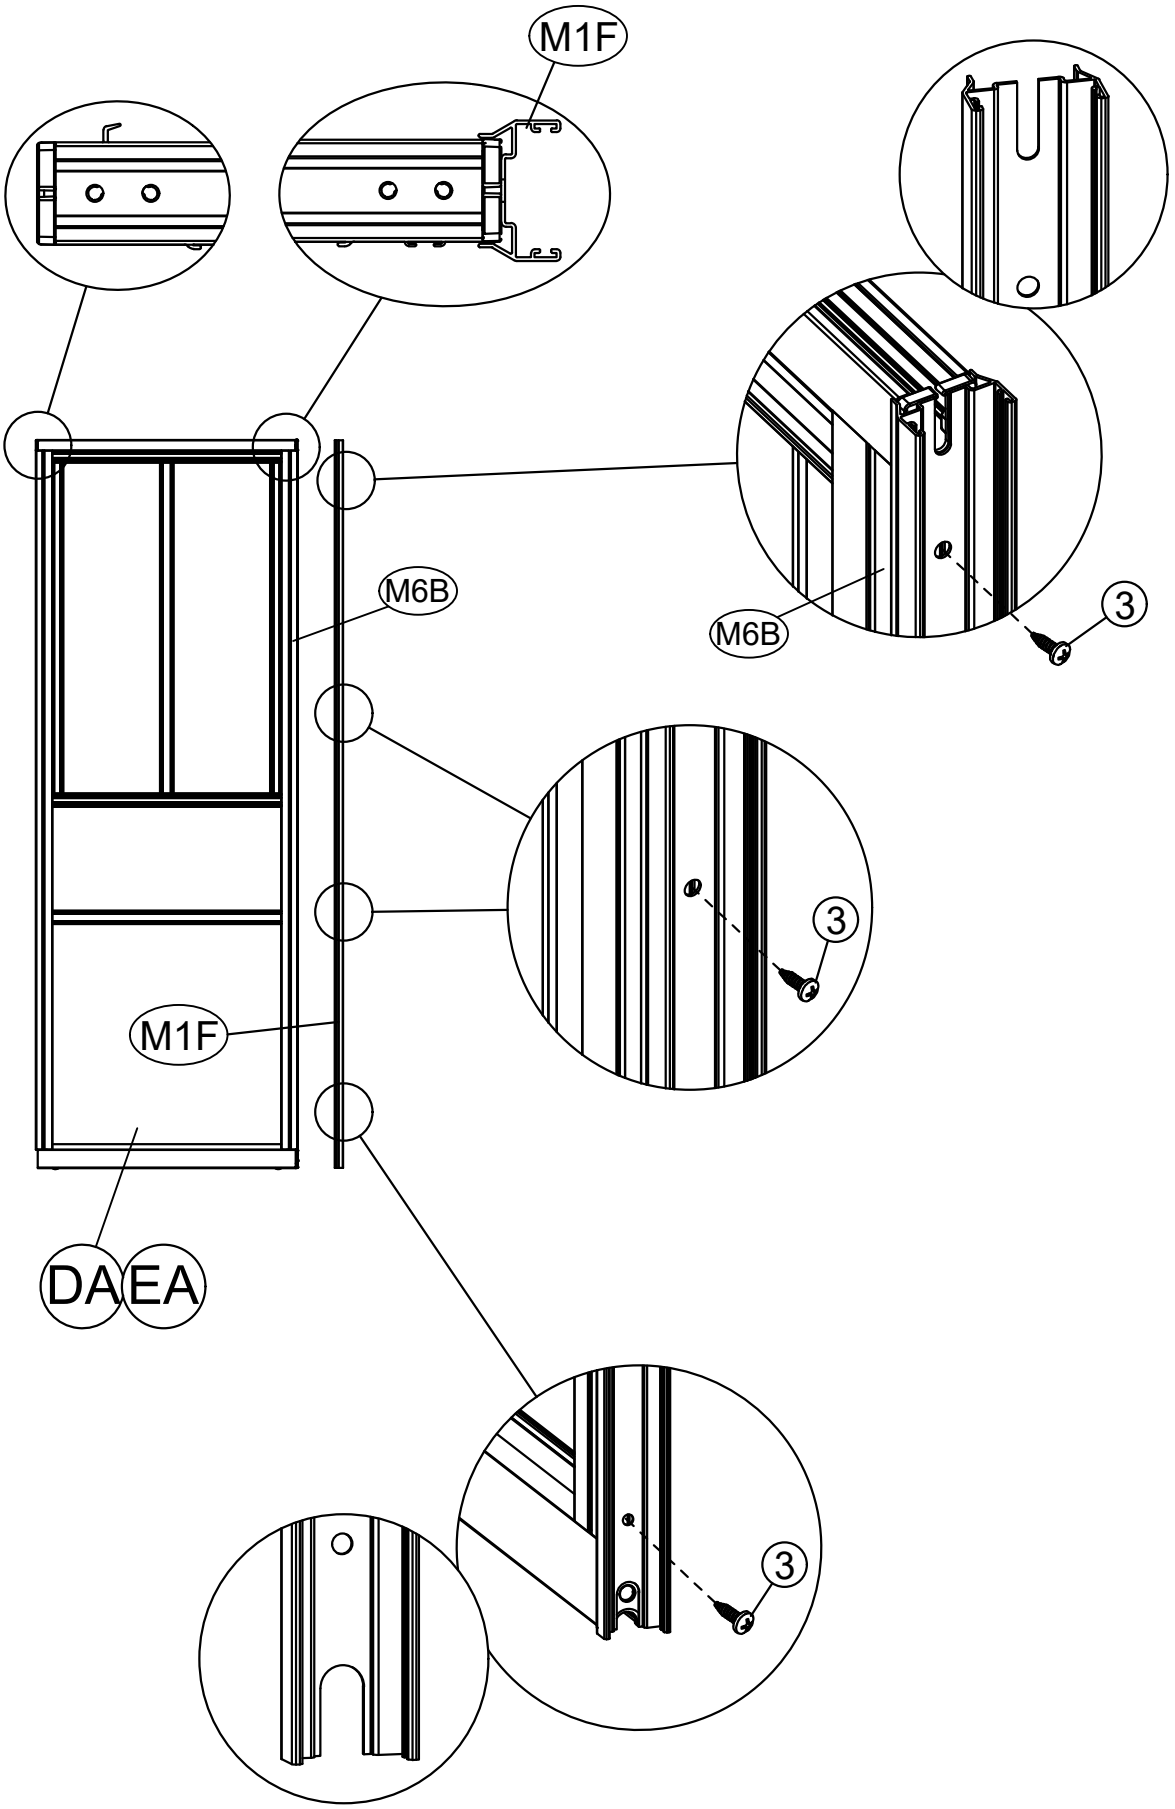




U1 4x



U2 4x




U3 4x



M4x12

26 4x



U4 4x




M5x15


25 16x

47


DA 2x EA 2x

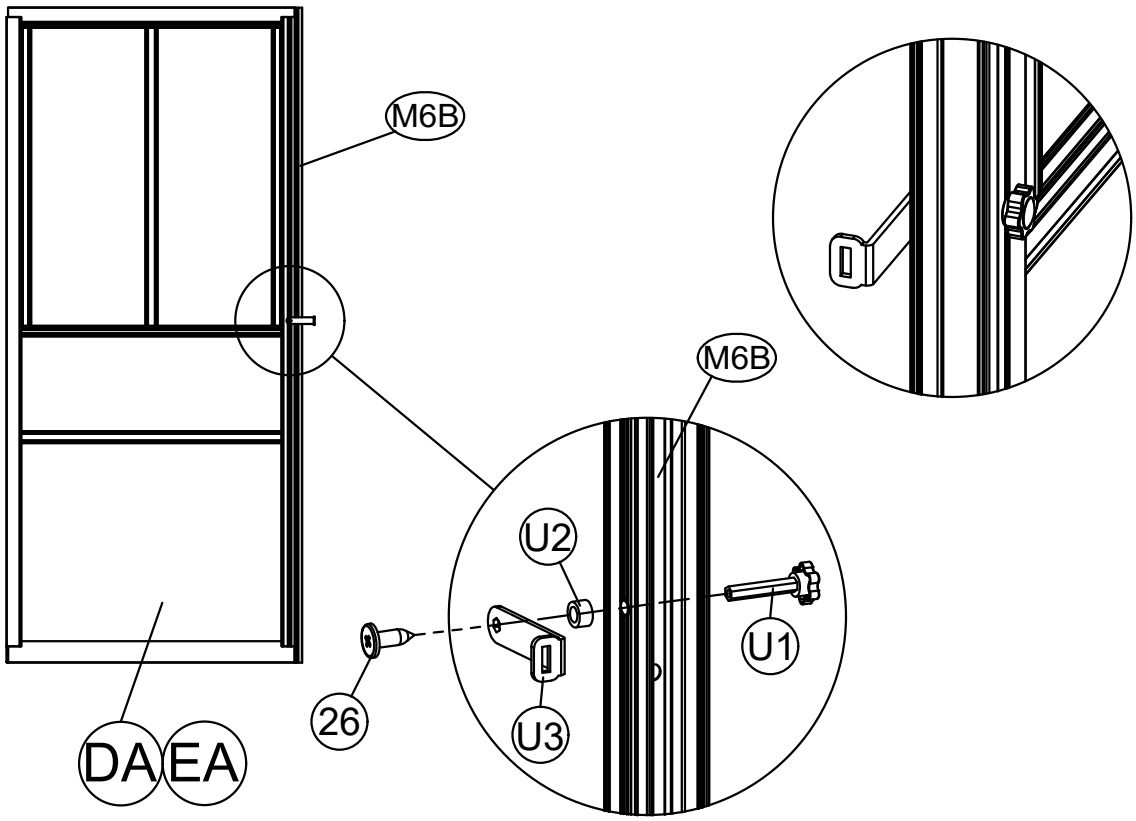


AD 2x AE 2x

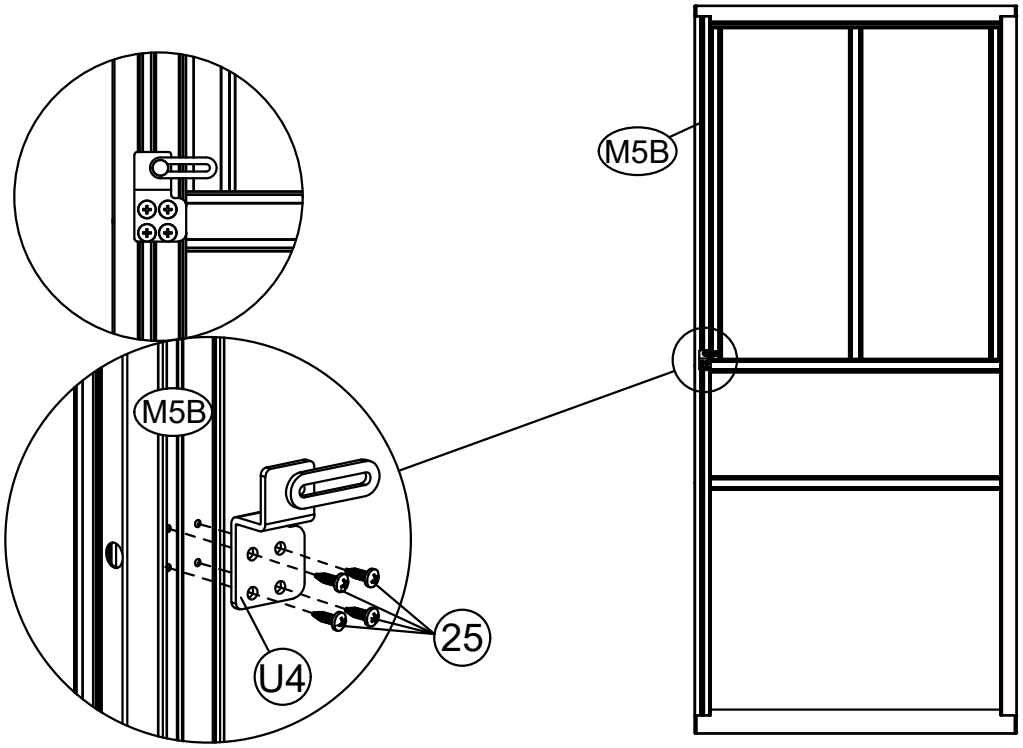

<39>

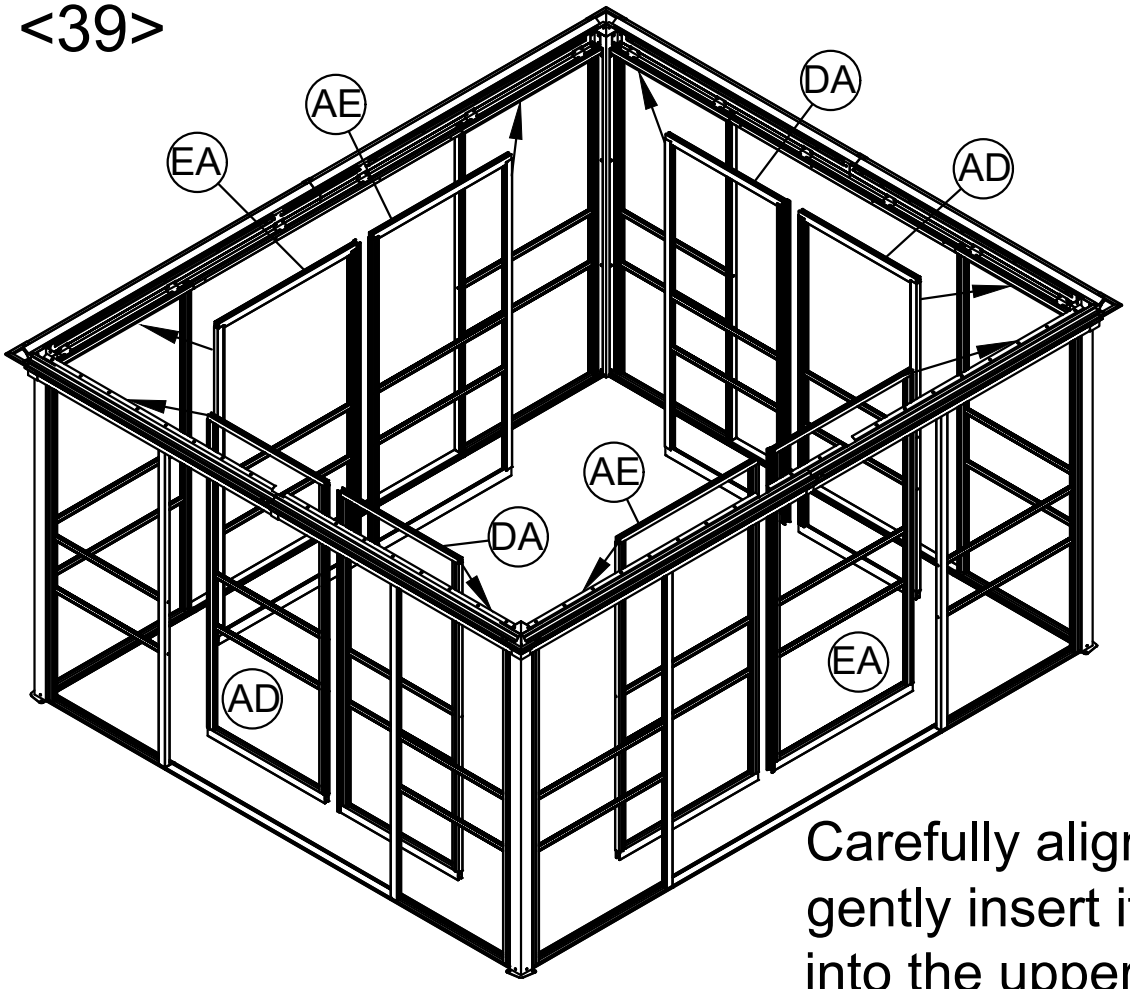



Carefully align the door and gently insert it from the inside into the upper slot.

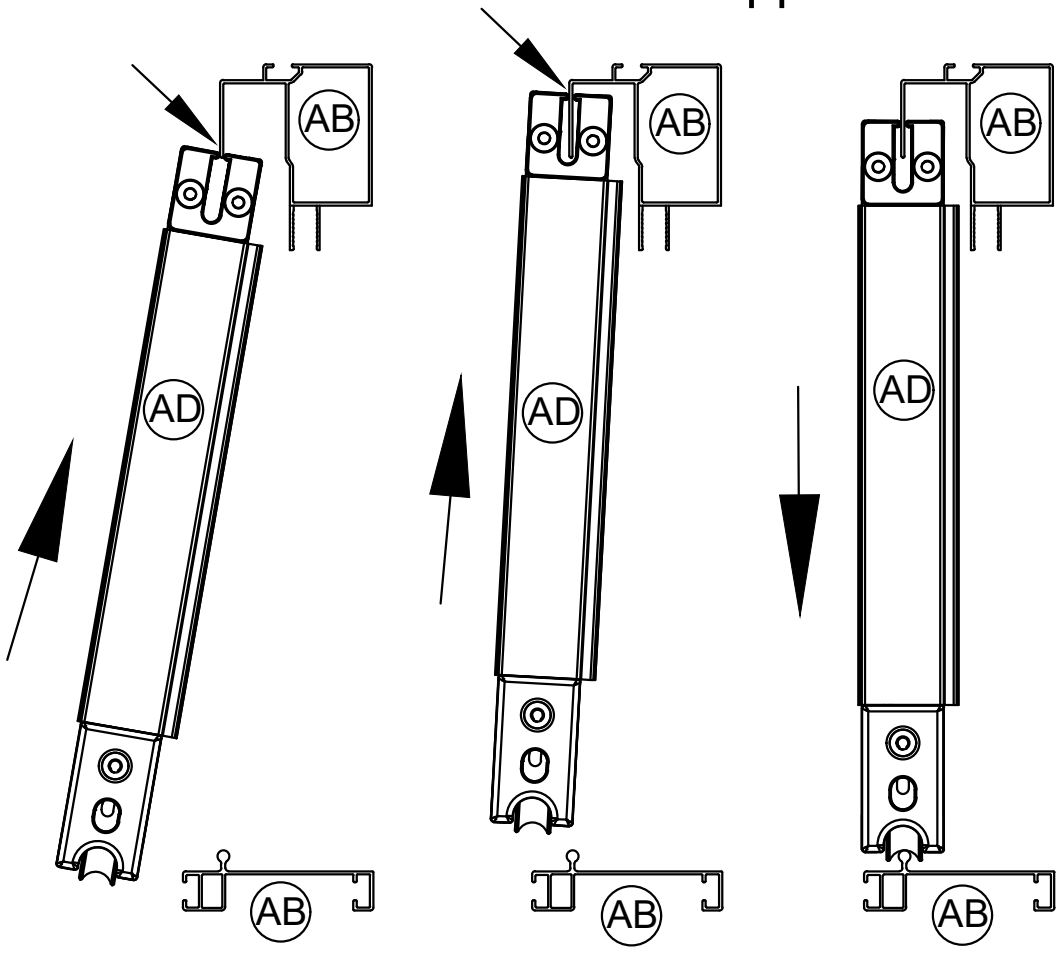

Repeat the previous steps for other components.

<40>

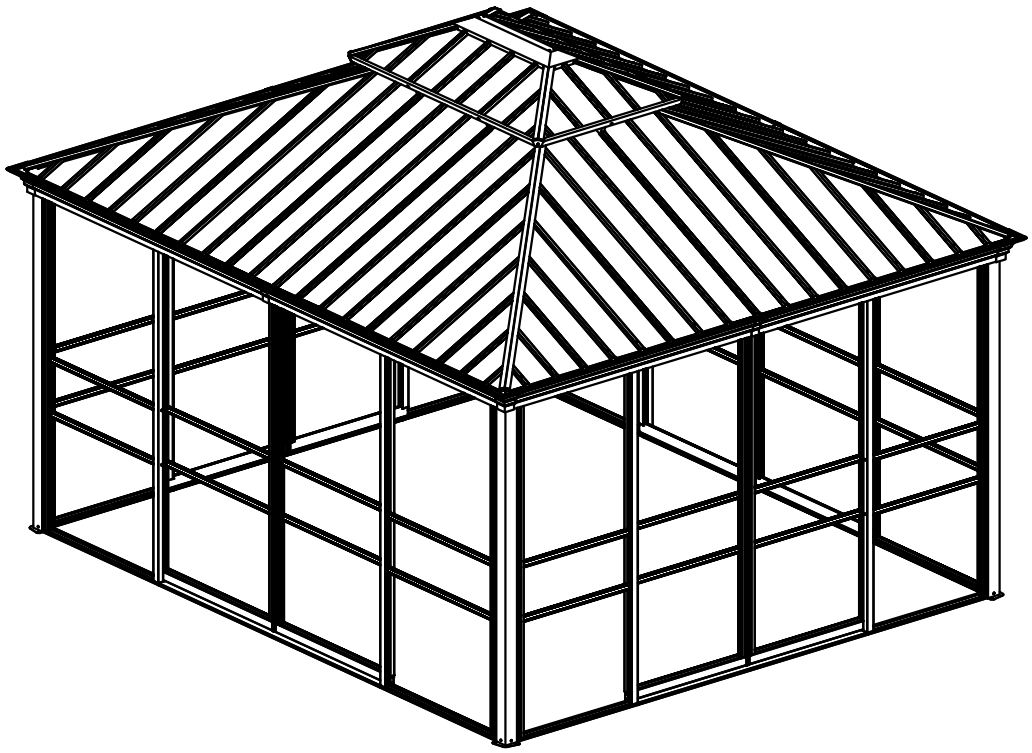

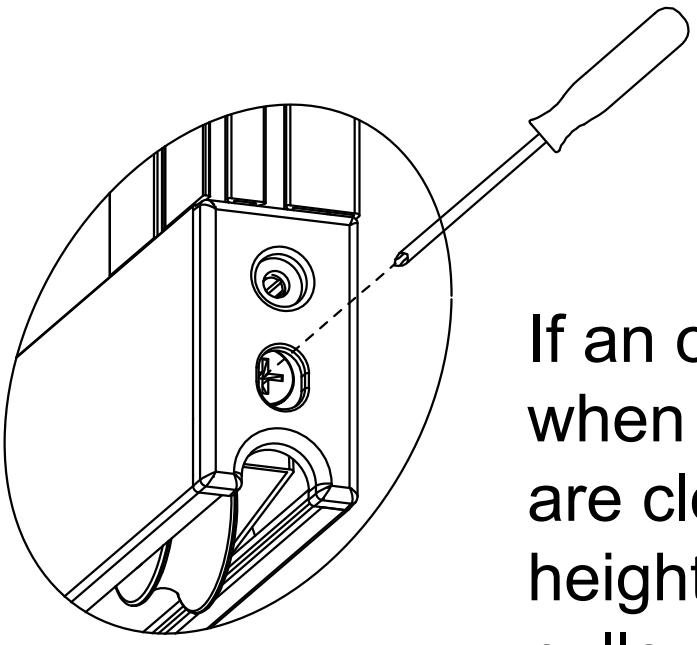

If an obvious gap appears when the two sliding doors are closed, adjust the pulley height using the screw on the pulley.

<41>

