




5/8" BAY WINDOW DRAPERY ROD INSTALLATION INSTRUCTIONS

Care Instructions: Clean with a soft cloth. Do not use abrasive cleaning agents, solvents or polishes.


SET INCLUDES:

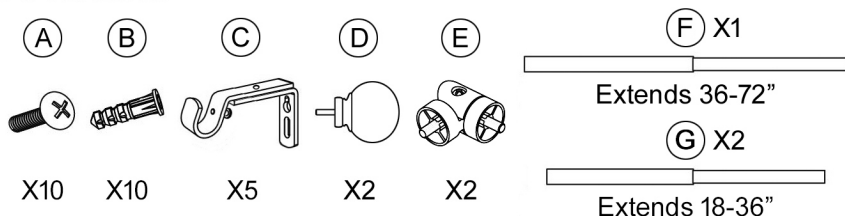


YOU WILL NEED:

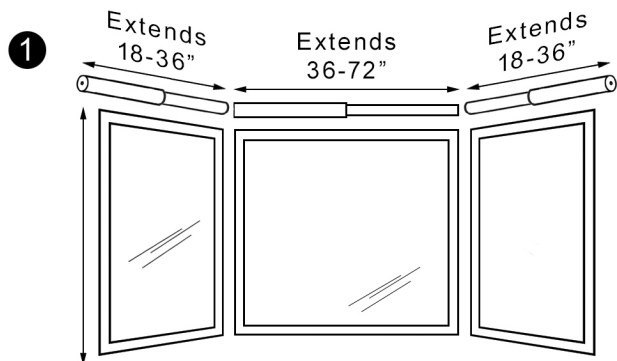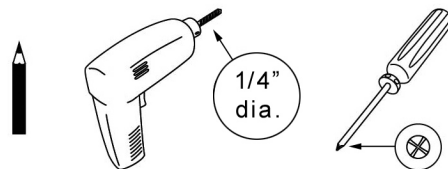


Before installation, measure windows to determine appropriate drapery rod length.

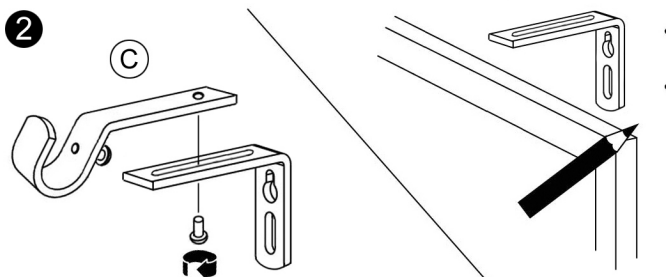


Remove screw to separate the bracket (C). Use L-bracket as a guide to mark location for mounting screws (A). Drill pilot holes into wall with 1/4" drill bit (not included).

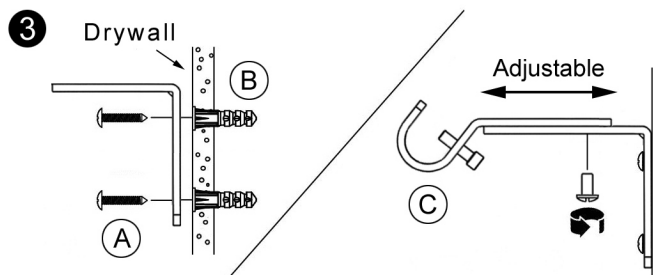


Insert wall anchors (B) and attach bracket (C) using mounting screws (A). Wall anchors may not be necessary if drilling into studs. Reassemble the bracket (C), adjusting to desired depth. Tighten screw to secure.

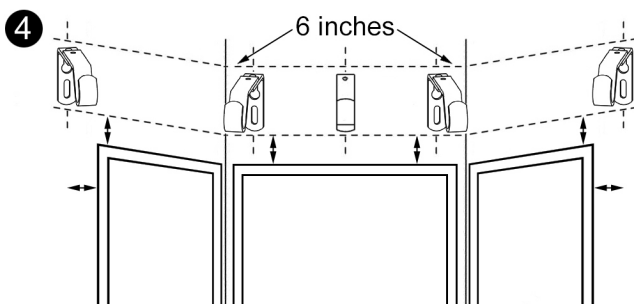

Repeat steps 2-3 for additional brackets. Use level if necessary. Note: Center bracket may not be needed for all applications.

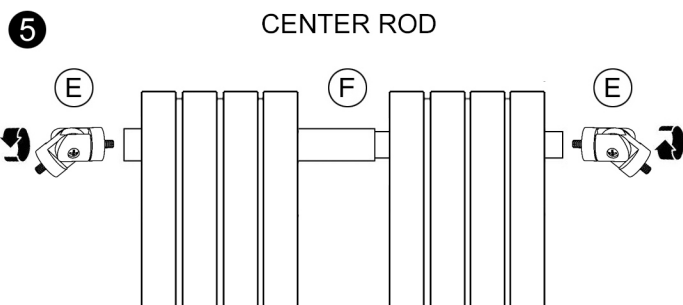

Extend telescoping rod (F) slightly. Place drapery panels (not included) on the rod. Screw corner connectors (E) to each end of the rod.

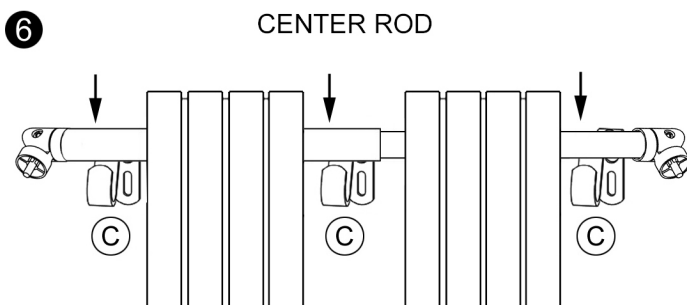

Extend rod to desired length. Hang rod on brackets (C).