


ASSEMBLY INSTRUCTION

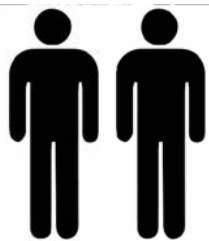


10 min




① x 22

(Bolt M6 x15)

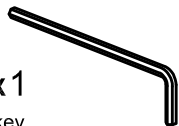

② x 1

Allen key

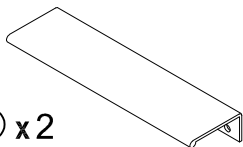

③ x 2

Handle




④ x 22

Washer




⑤ x 4

(Screw M3.5 x12)

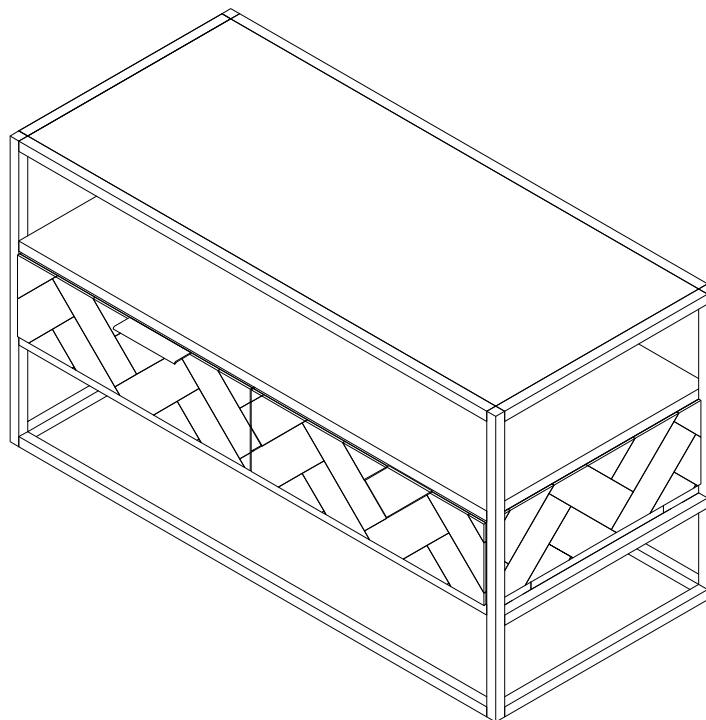


MH


MADE4HOME

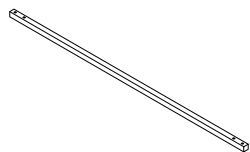


Ⓐ x 2

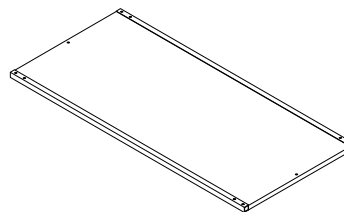

Ⓑ x 1

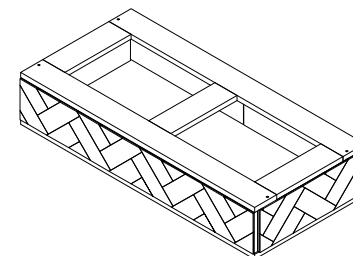


Ⓒ x 1

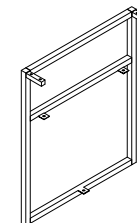

Ⓓ x 2


ASSEMBLY INSTRUCTION

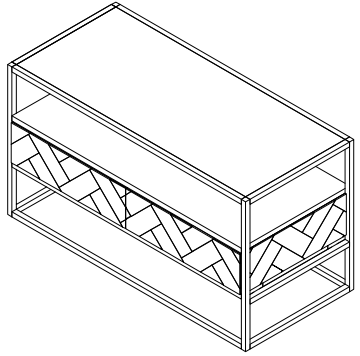

Step 1




50%

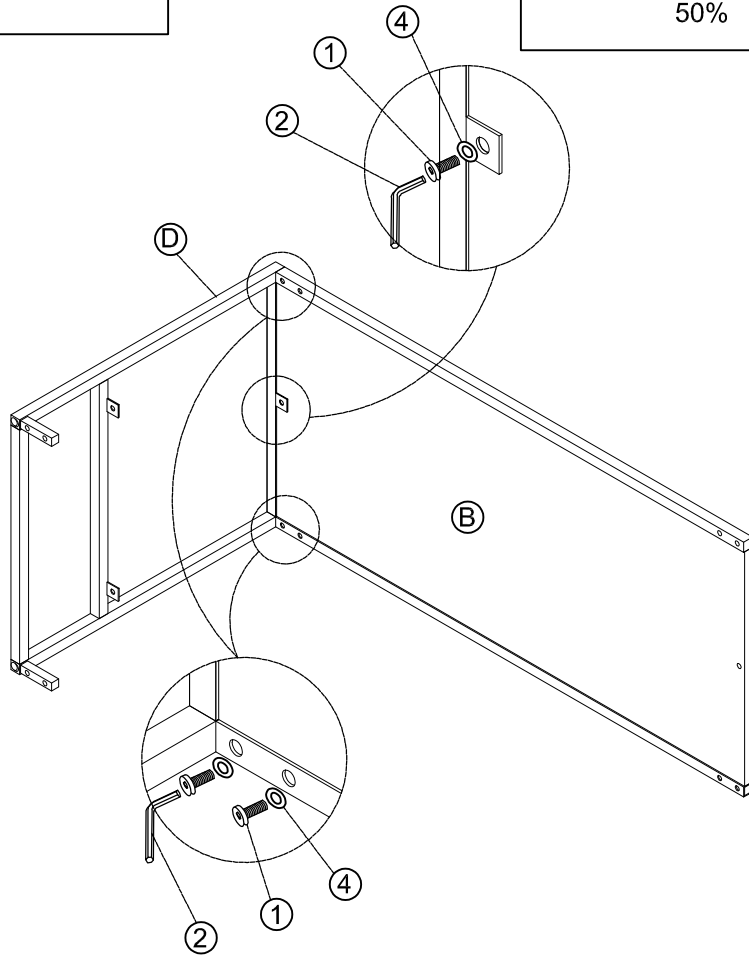


Step 2



50%

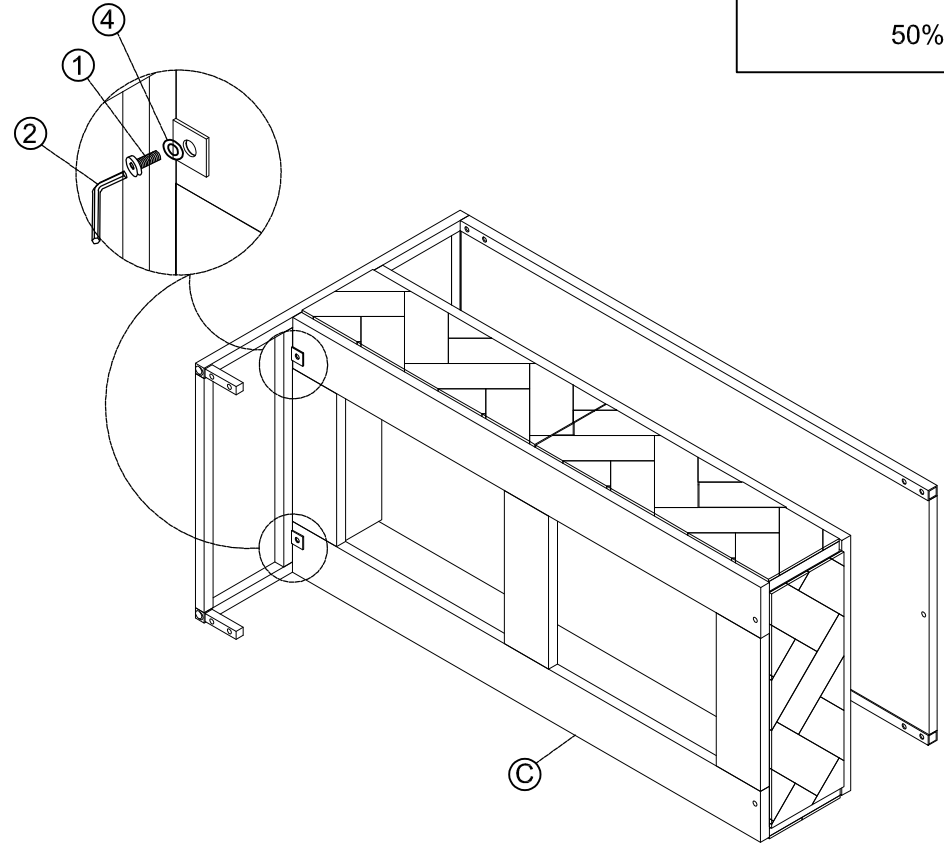

ASSEMBLY INSTRUCTION

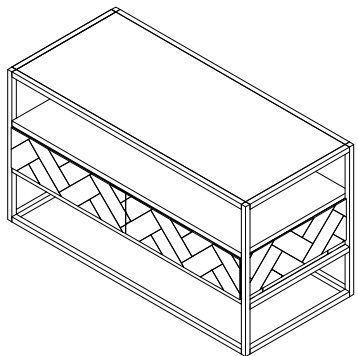

Step 3





50%

Step 4



50%

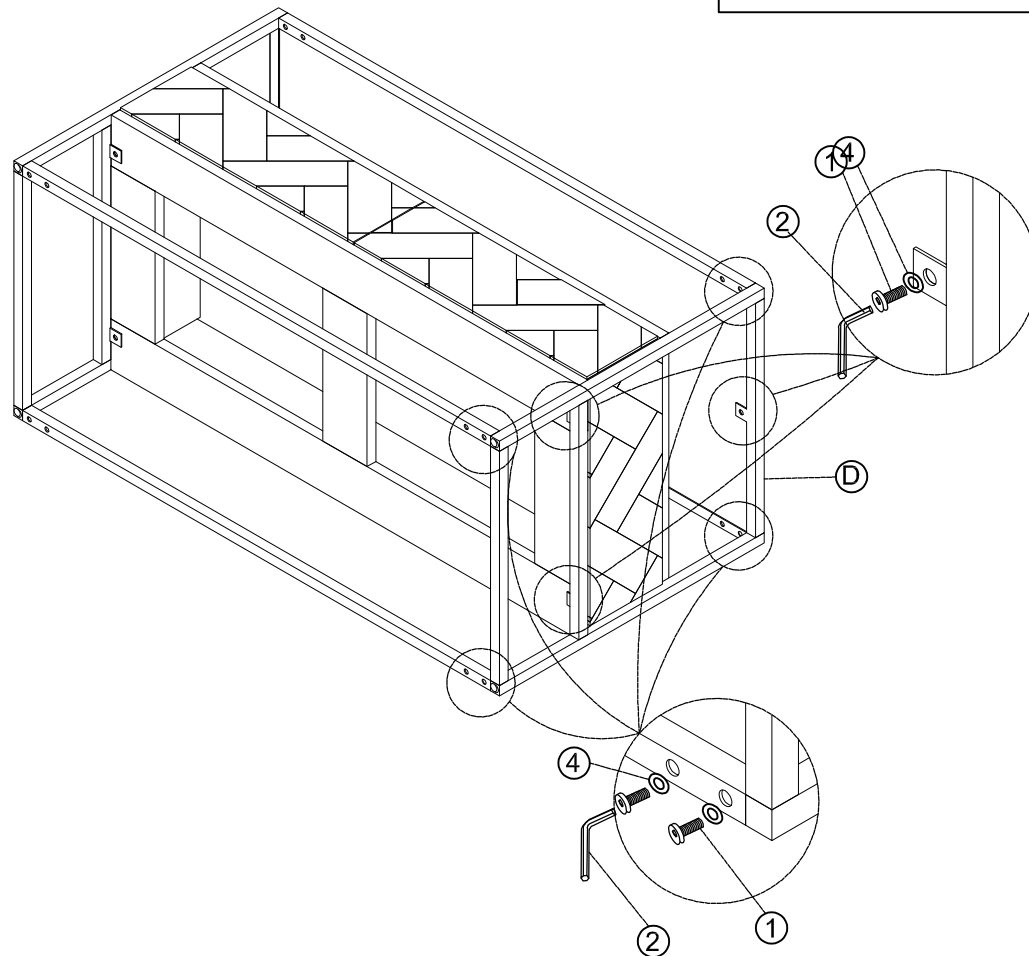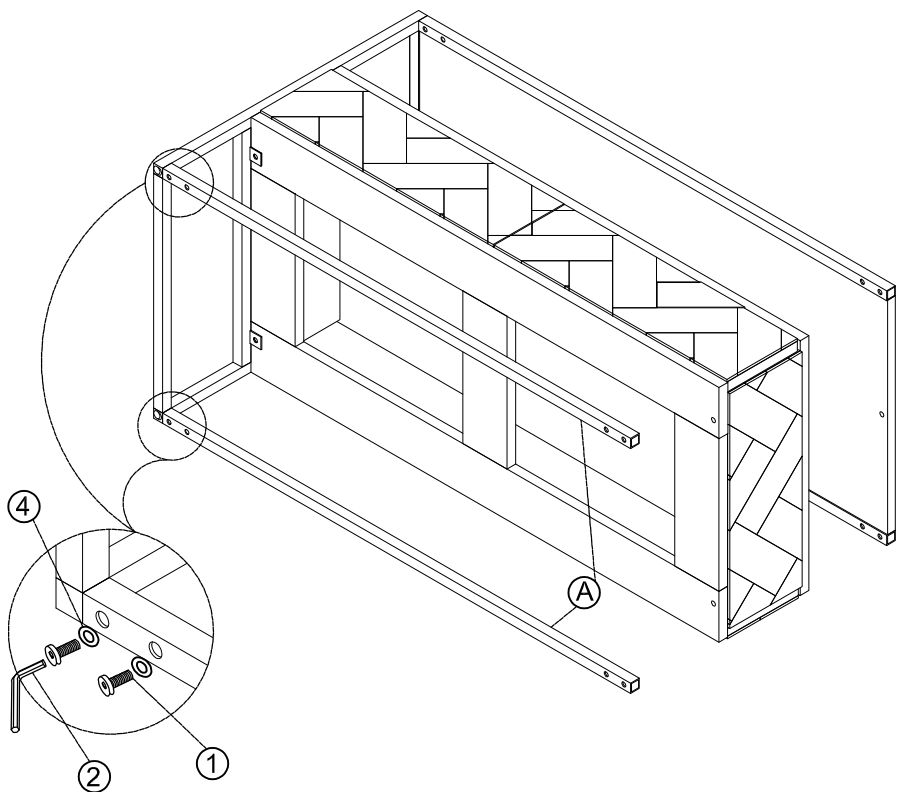

ASSEMBLY INSTRUCTION

Step 5







100%

Step 6



100%

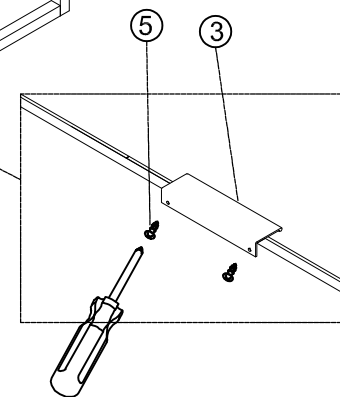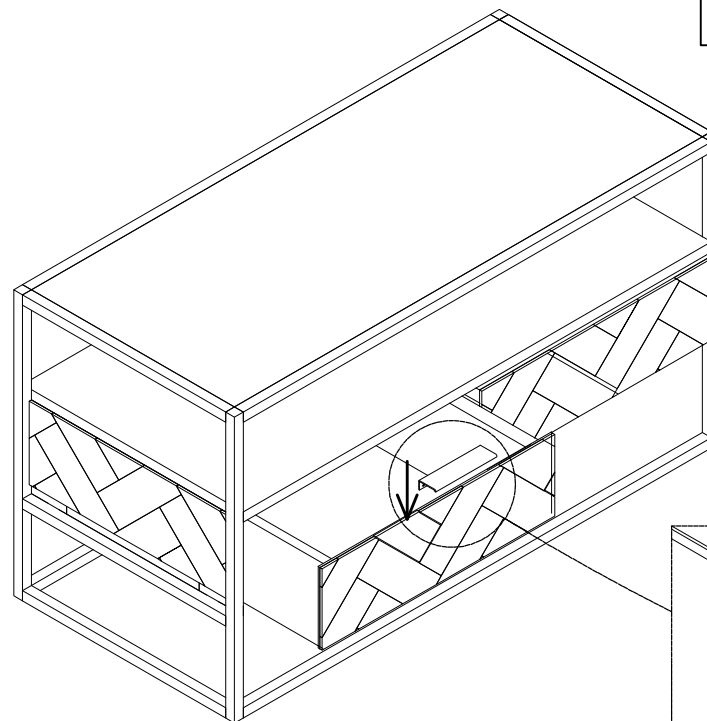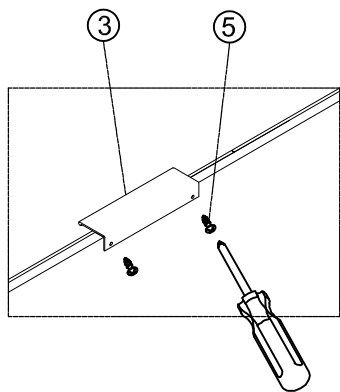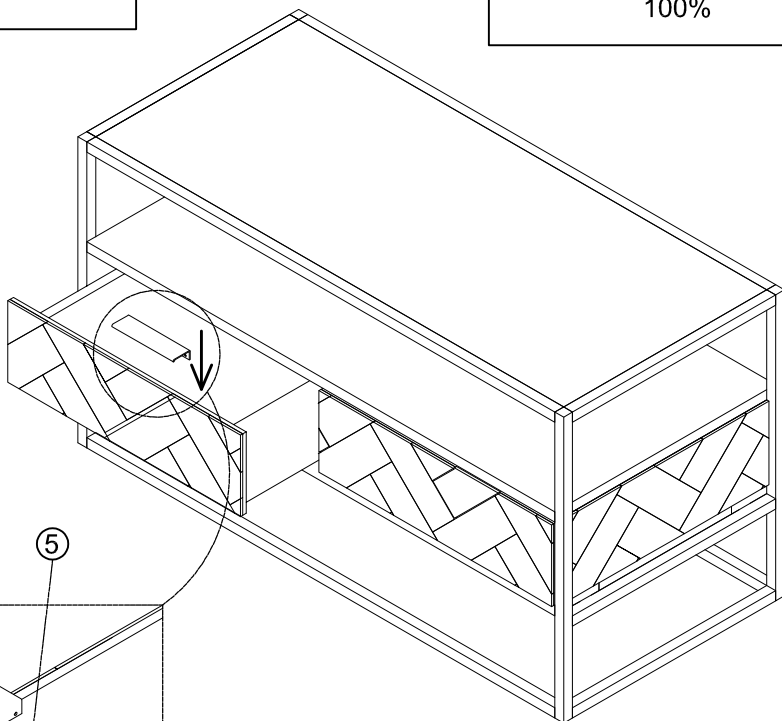

TURN AROUND