


ASSEMBLY INSTRUCTIONS

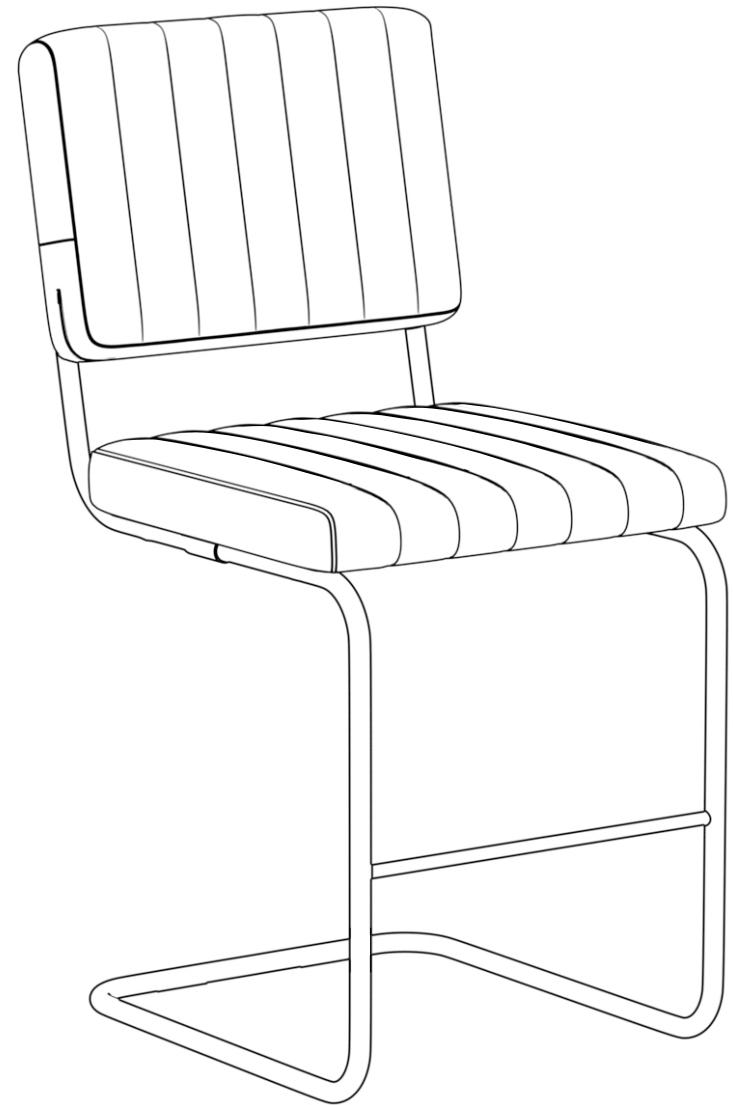

**FAUX LEATHER
COUNTER STOOL**




www.artleon.com

Email: hello@artleon.com

5005 ONTARIO MILLS PARKWAY, ONTARIO CA 91761


1




Ax1




Bx1




Ex4

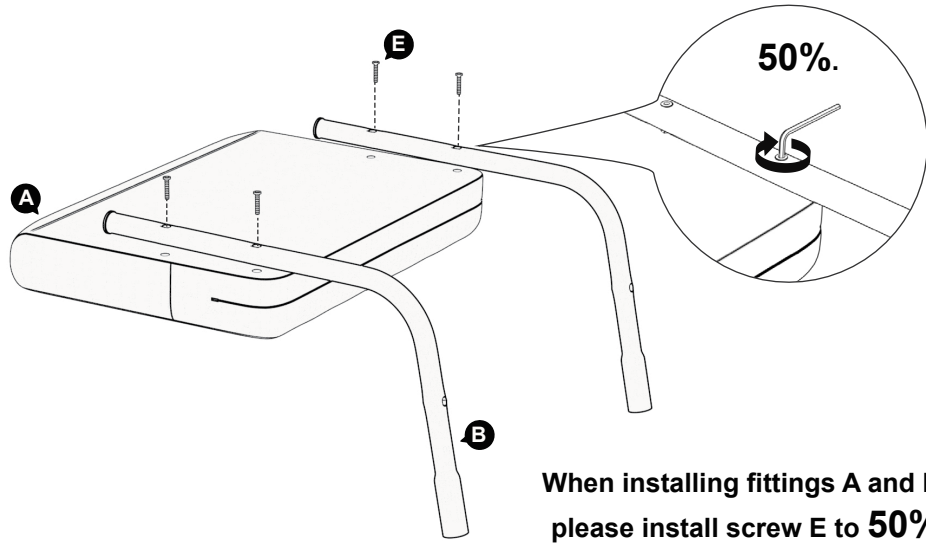


3

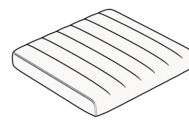

Dx1




Ex4

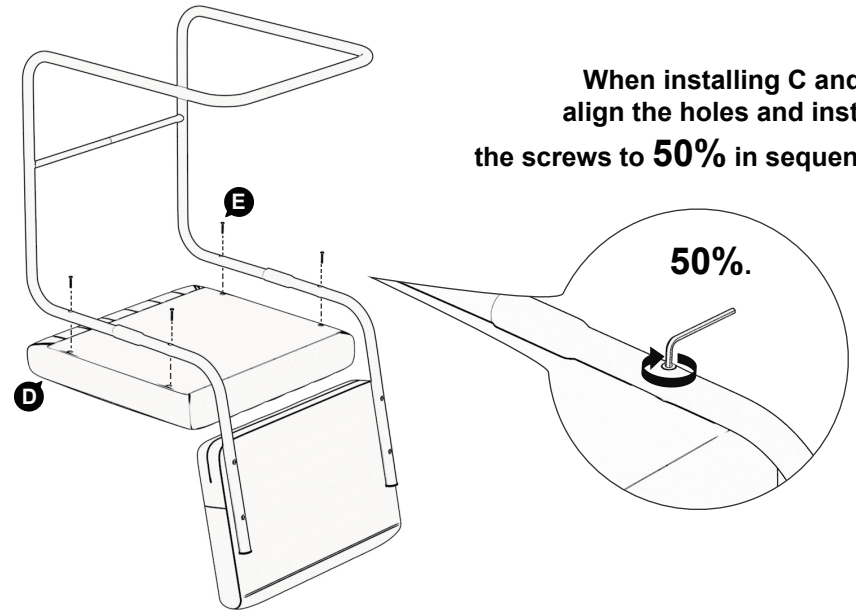


2




Cx1

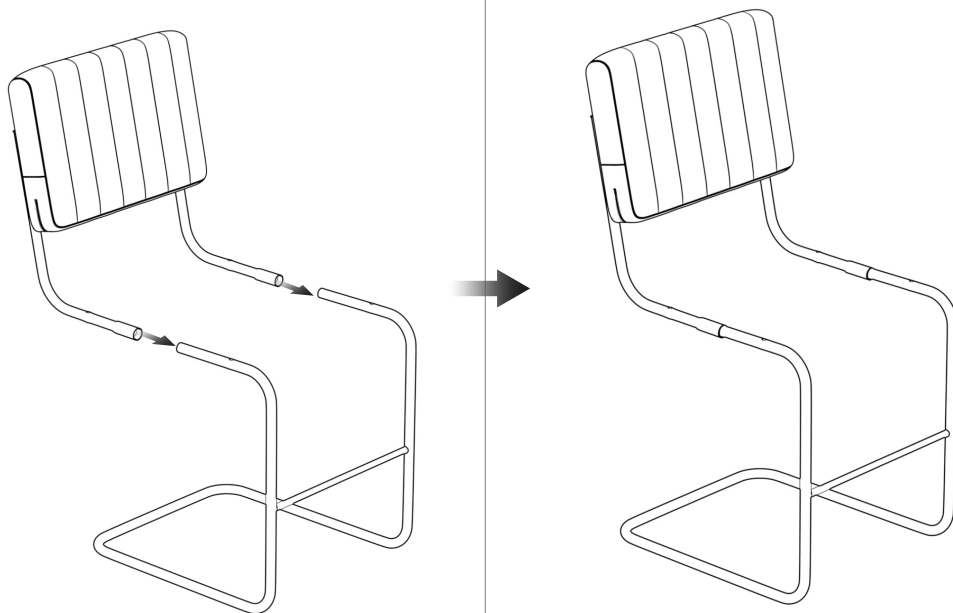


When all screws are installed, tighten all screws to **100%** in turn.

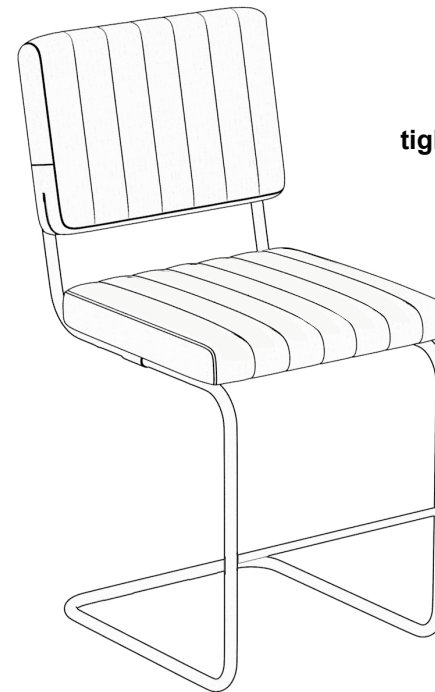


SPARE PARTS

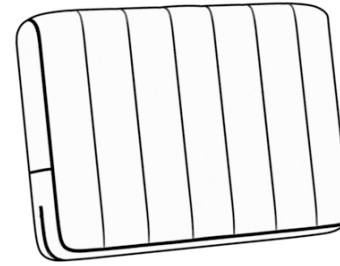


Ax1

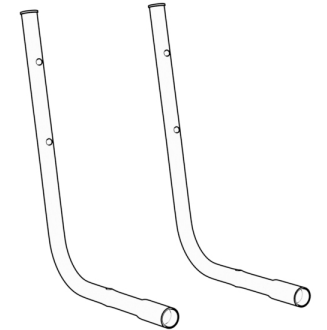


Bx1

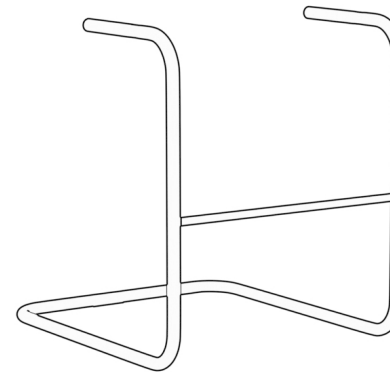

Cx1

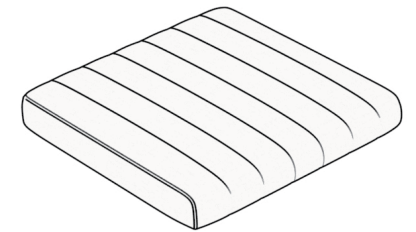

Dx1



**Ex8+1extra
M6*30mm**



Fx1
