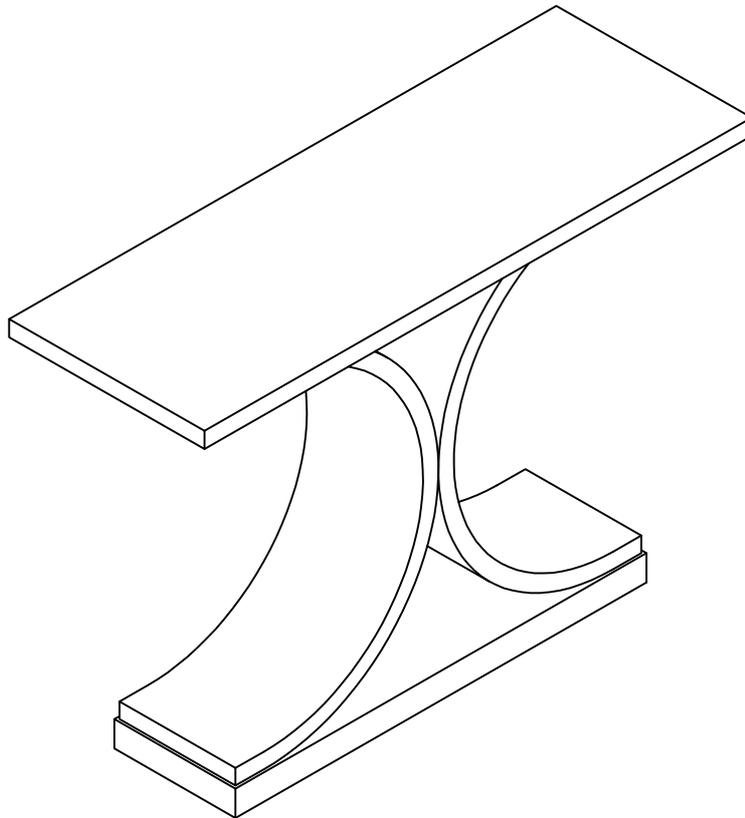


# console table



## Assembly instructions

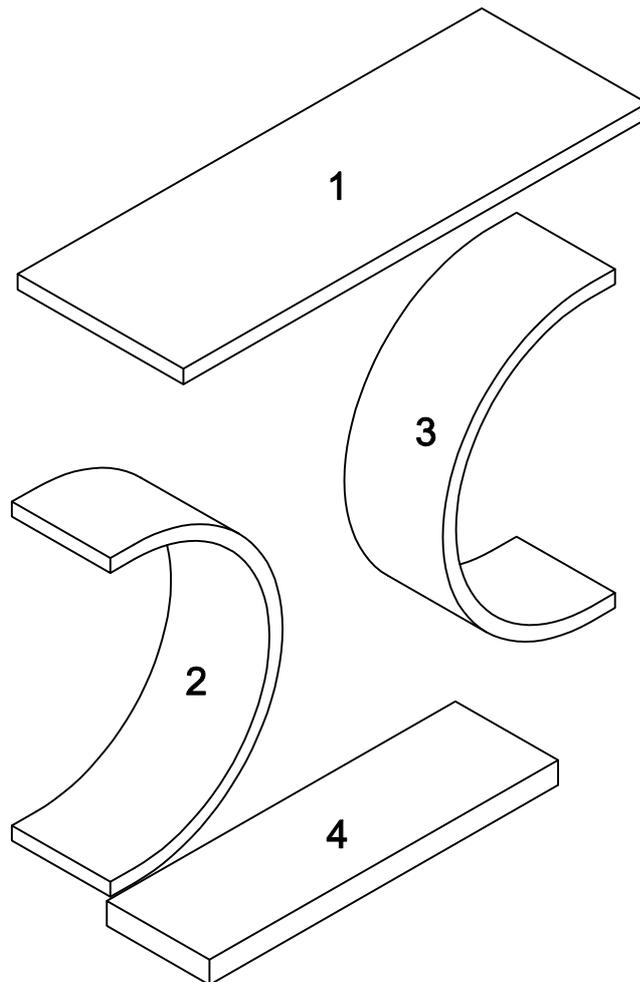
We have designed our furniture with you, the customer in mind. Our clear, easy to follow, step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.



Please do not return to the store

# PARTS IDENTIFICATION



---








**Please count and verify all parts before assembly**

1. Top panel	(1pc)
2. Left support	(1pc)
3. Right support	(1pc)
4. Bottom panel	(1pc)

# HARDWARE IDENTIFICATION


<b>A</b>		Large Bolt	M6×45	6pcs
<b>B</b>		Small Bolt	M6×30	6pcs
<b>C</b>		Dowel (BK)	∅8×25	2pcs
<b>D</b>		Anti-tip bracket	40x20x15	1pc
<b>E</b>		Self tapping Screw	∅4×25	1pc
<b>F</b>		Wall Screw	∅5×40	1pc
<b>G</b>		Plastic Anchor	∅8×40	1pc
<b>H</b>		Foot Pin	∅16	4pcs
<b>I</b>		Glue	Glue: For securing please apply to wood dowel first before inserting into panel.	1pc

## Assembling the unit with camlocks and wood dowels.

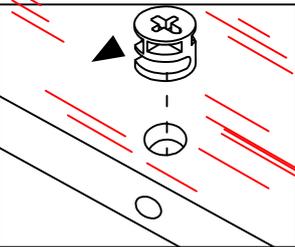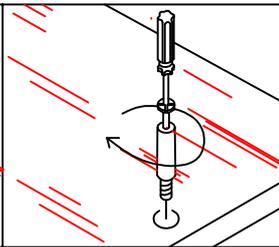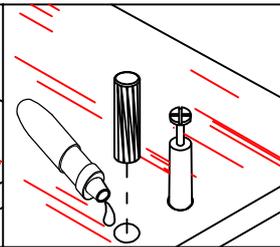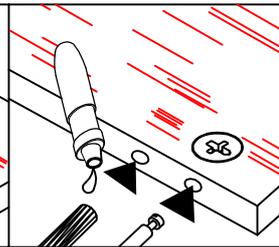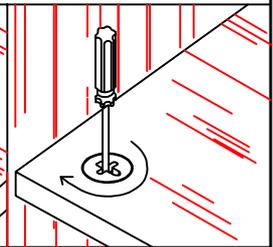				
Insert camlock, camlock must face bolt hole	Gently screw cam <b>bolt</b> into the threaded anchor	lightly glue one end of wood dowel and tap into hole.	lightly glue dowel and connect to second panel by inserting dowels into holes	Gently turn the cam clockwise into locked position. Do not overtighten.


# Step1

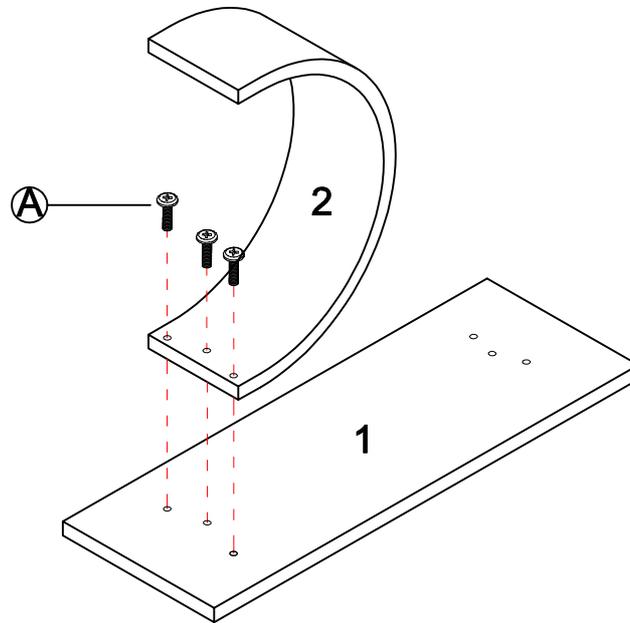1. Place Top panel (1) Upside down on a soft surface.
2. Connect Left support(2) fo Top Panel (1) with Large Bolts(A).  
Do not fully tighten Bolts.




# Step2

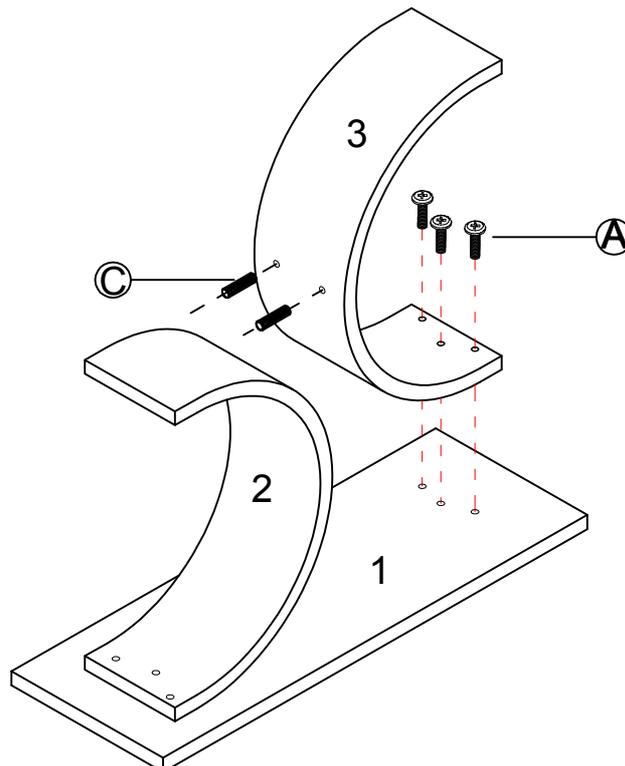1. Insert dowels(C) into right support(3). Connect left and right support(2.3).
2. Connect Right support(3) to top panel(1) with Large Bolts(A).
3. Fully tighten all Large Bolts(A).



# Step3

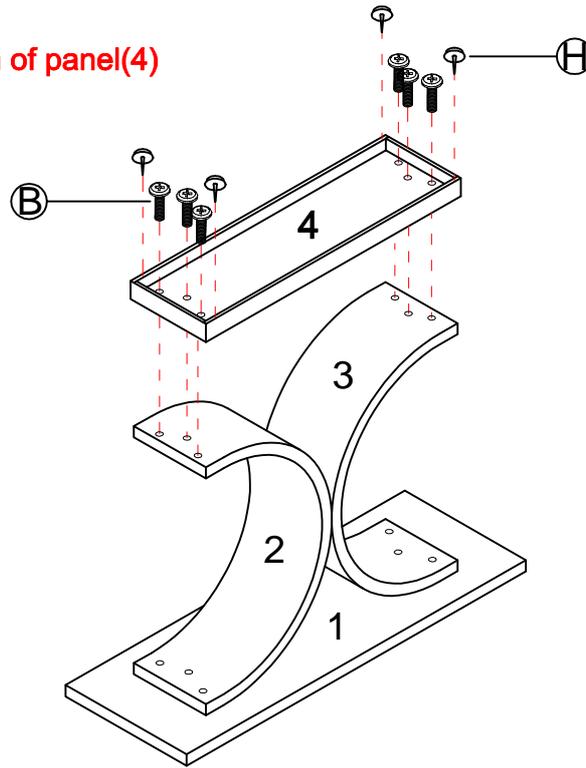1. Connect Bottom panel(4) to assembly using small Bolts (B). Hand tighten all bolts before fully tightening.
2. Gently Tap foot pins (H) into bottom of panel(4) as shown.



# Step4

Optional but recommended!

1. Place table against wall and temporarily hold anti-tip bracket(D) under table top and against wall.
2. Mark bracket holes with pencil.
3. Drill hole into wall and tap in plastic anchor(G).
4. Attach bracket to table with self tapping screw(E) and fasten table to wall with wall screw(F).

