



HALLWAY BENCH CABINET IN WALNUT VENEER



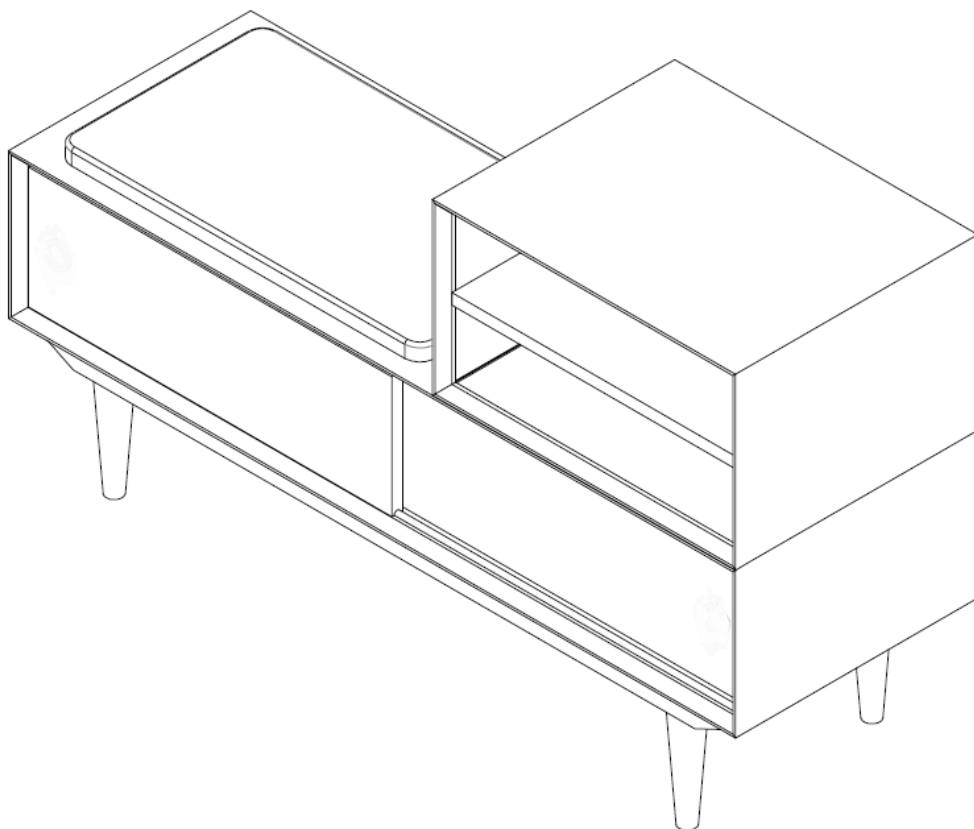




FACILE - EASY
LEICHT - FÁCIL






2

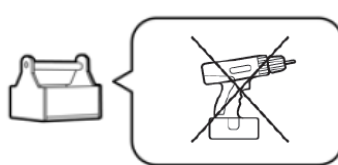

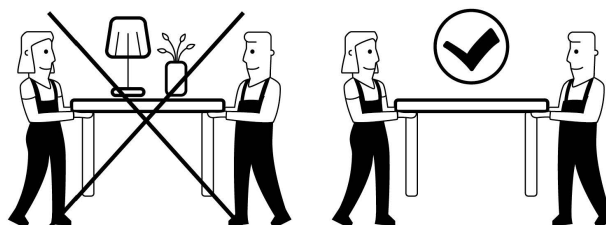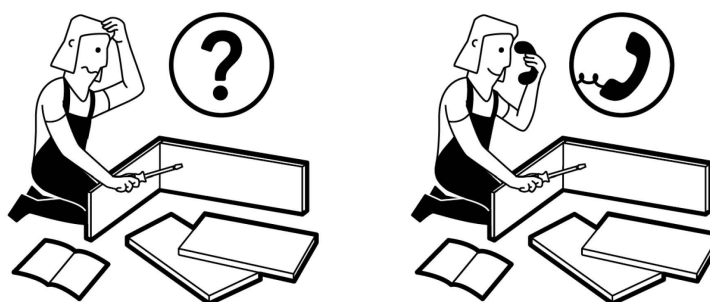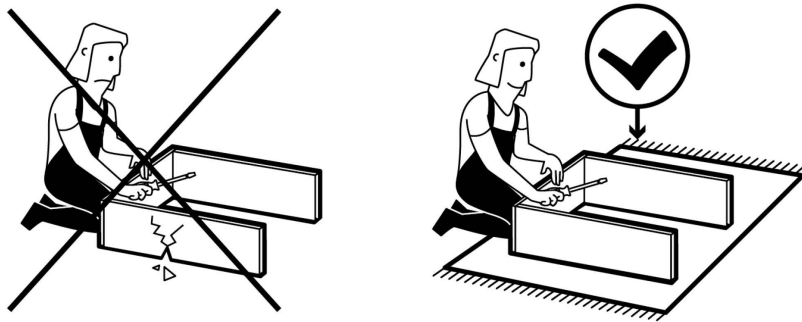


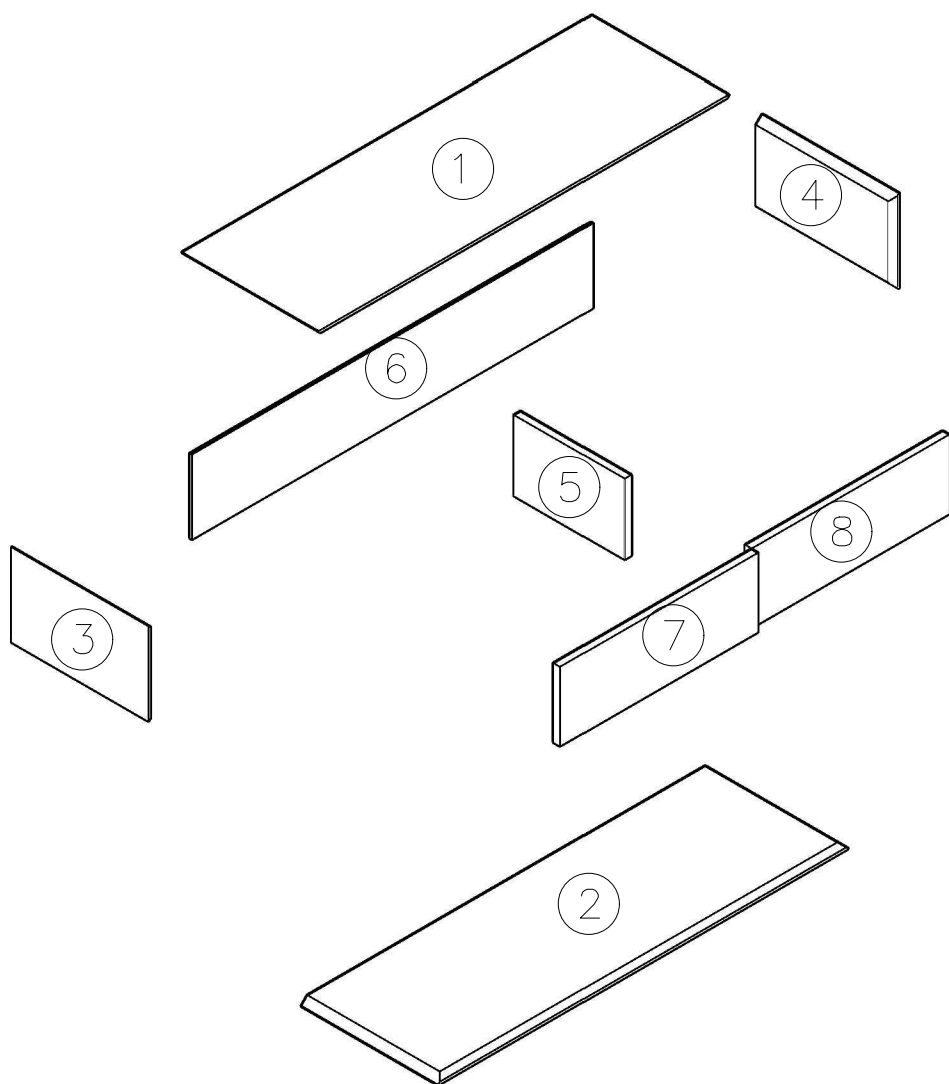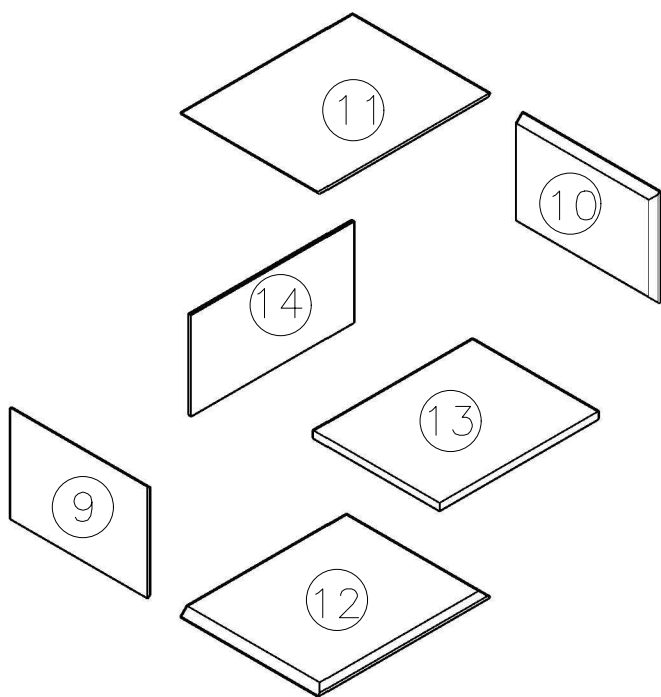


Hardware List


A.		Φ6X32mm	Cam bolt	10	PCS
B.		Φ15X11mm	Cam lock	10	PCS
C.		Φ8X30mm	Wooden dowel	8	PCS
D.		Φ3X15mm	Screw	64	PCS
E				16	PCS
F.				16	PCS
K.		140mm	Legs	4	PCS
G.		Φ6X20mm	Wooden dowel	16	PCS
L.		36mm		2	PCS
H.		Φ4X22mm		16	PCS

1

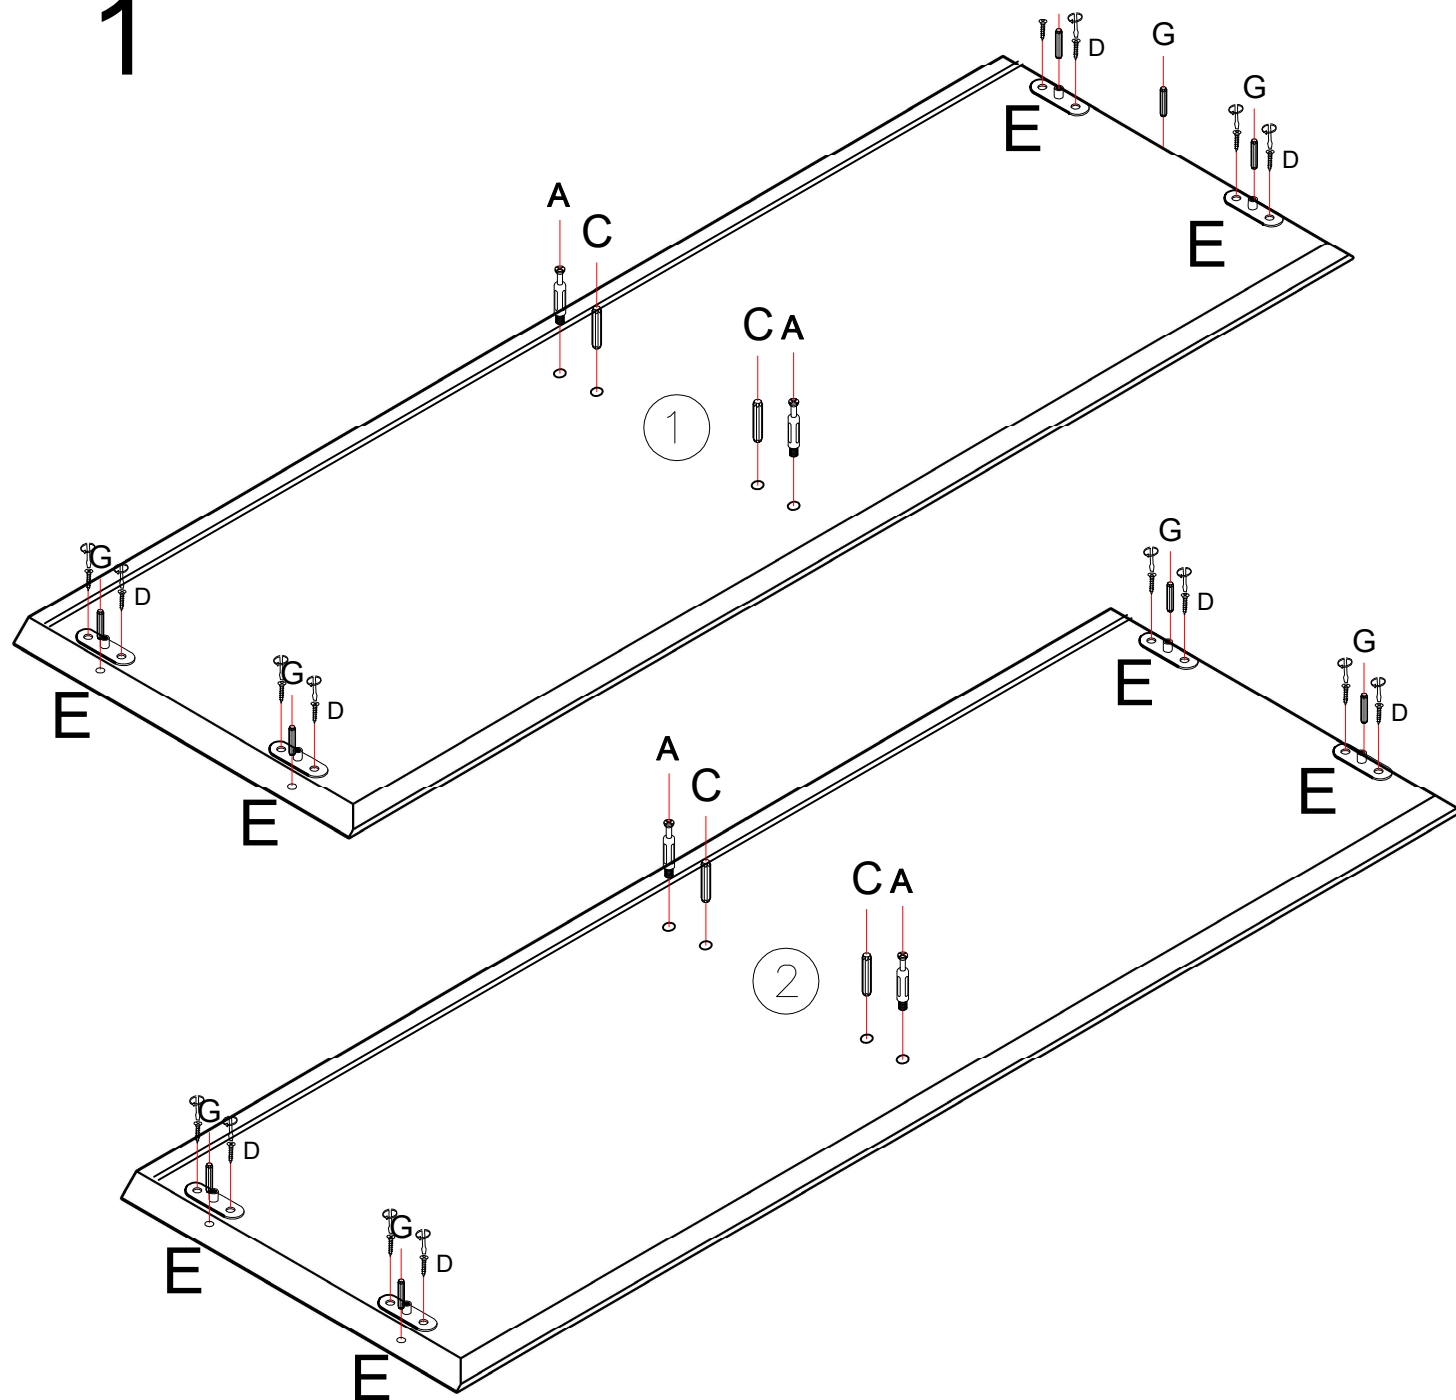


A.  X 4


C.  X 4


D.  X 16


G.  X 8

E.  X 8


2

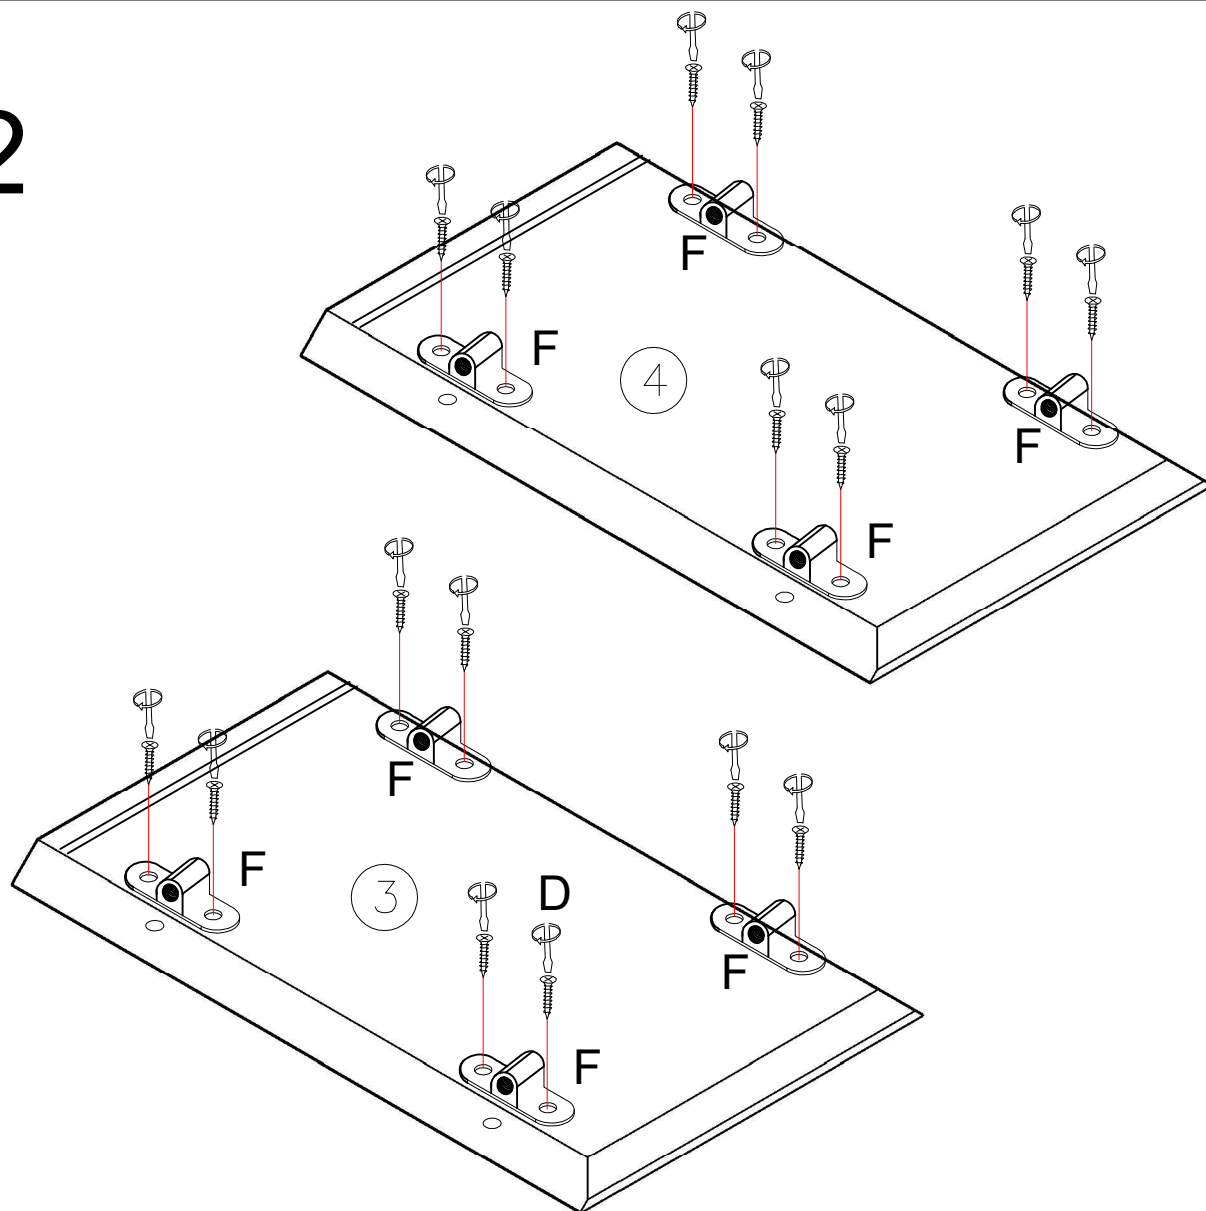


D.  X 16

F.  X 8


3

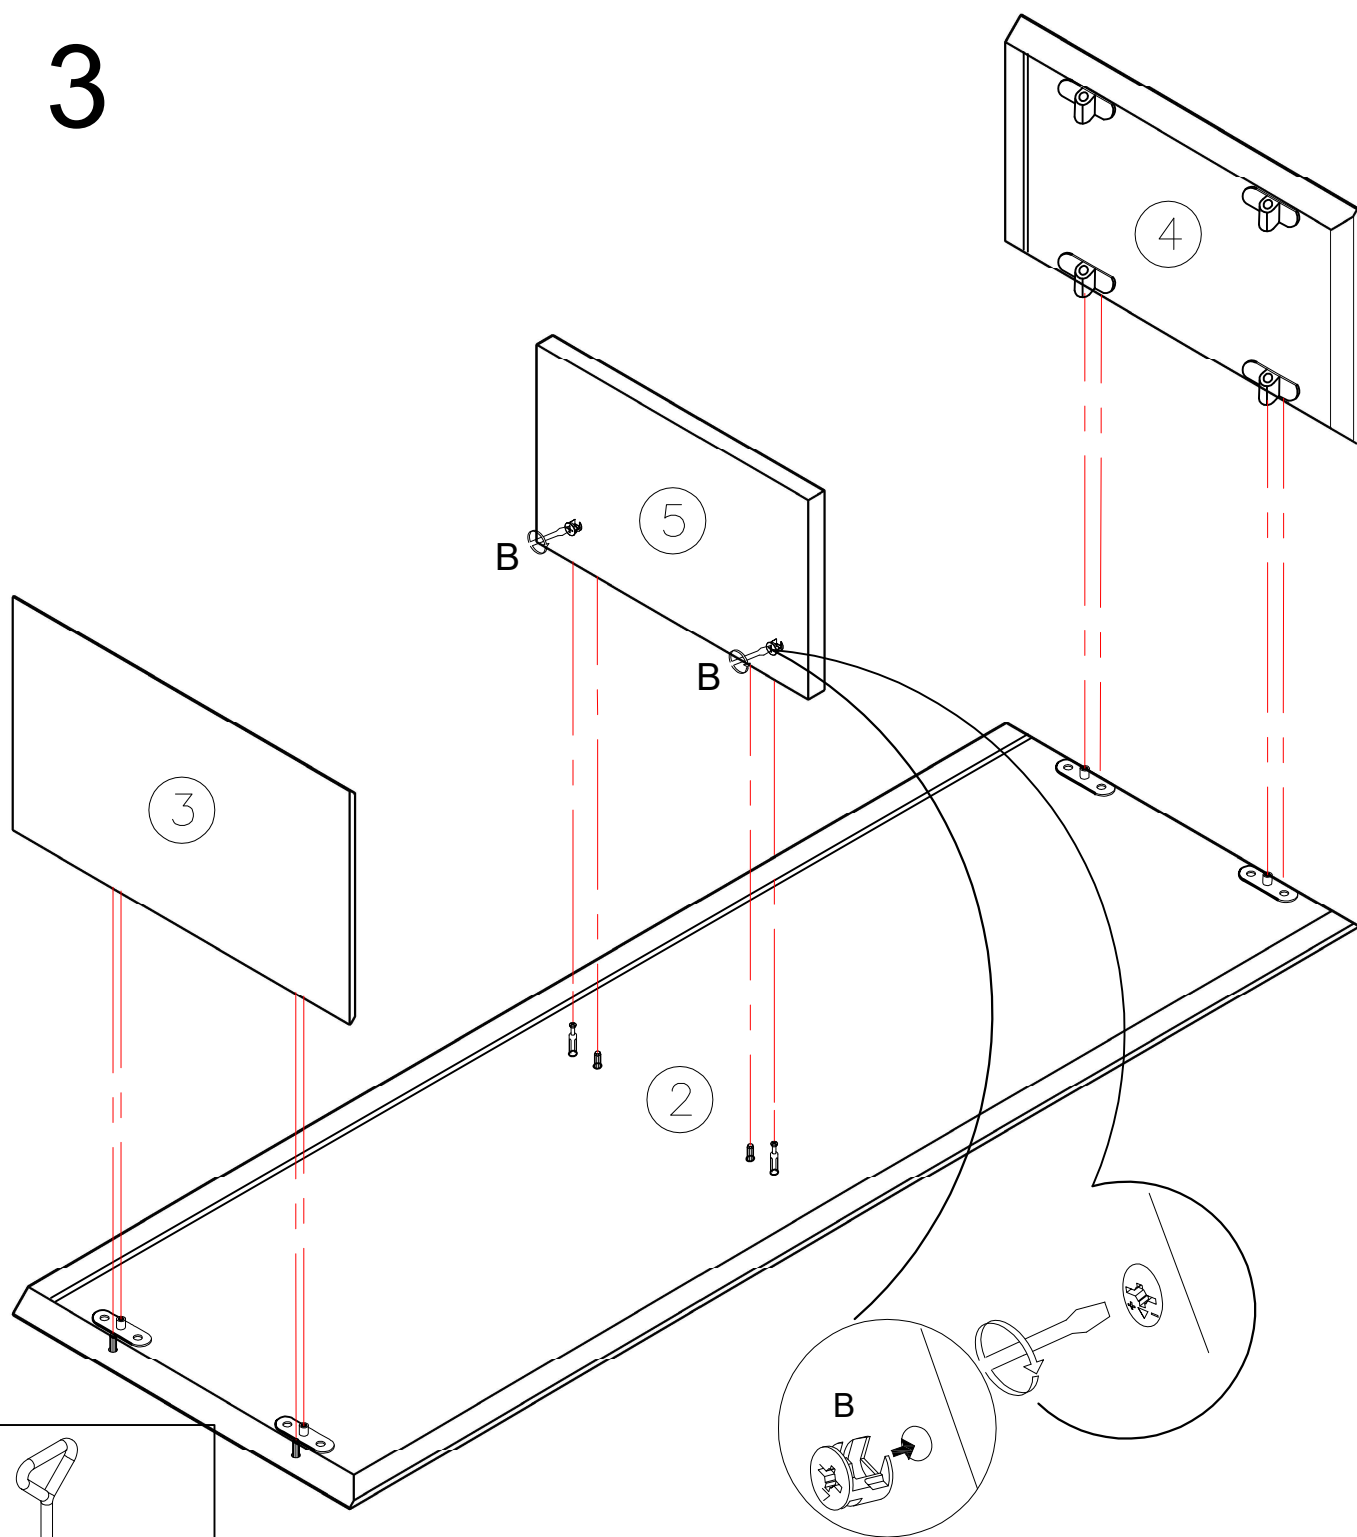


B.  X 2

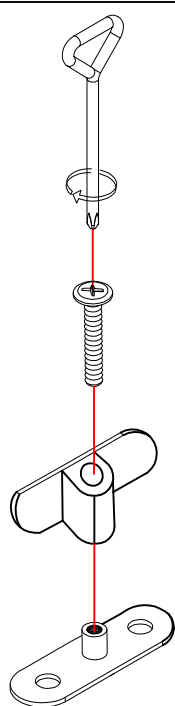


4


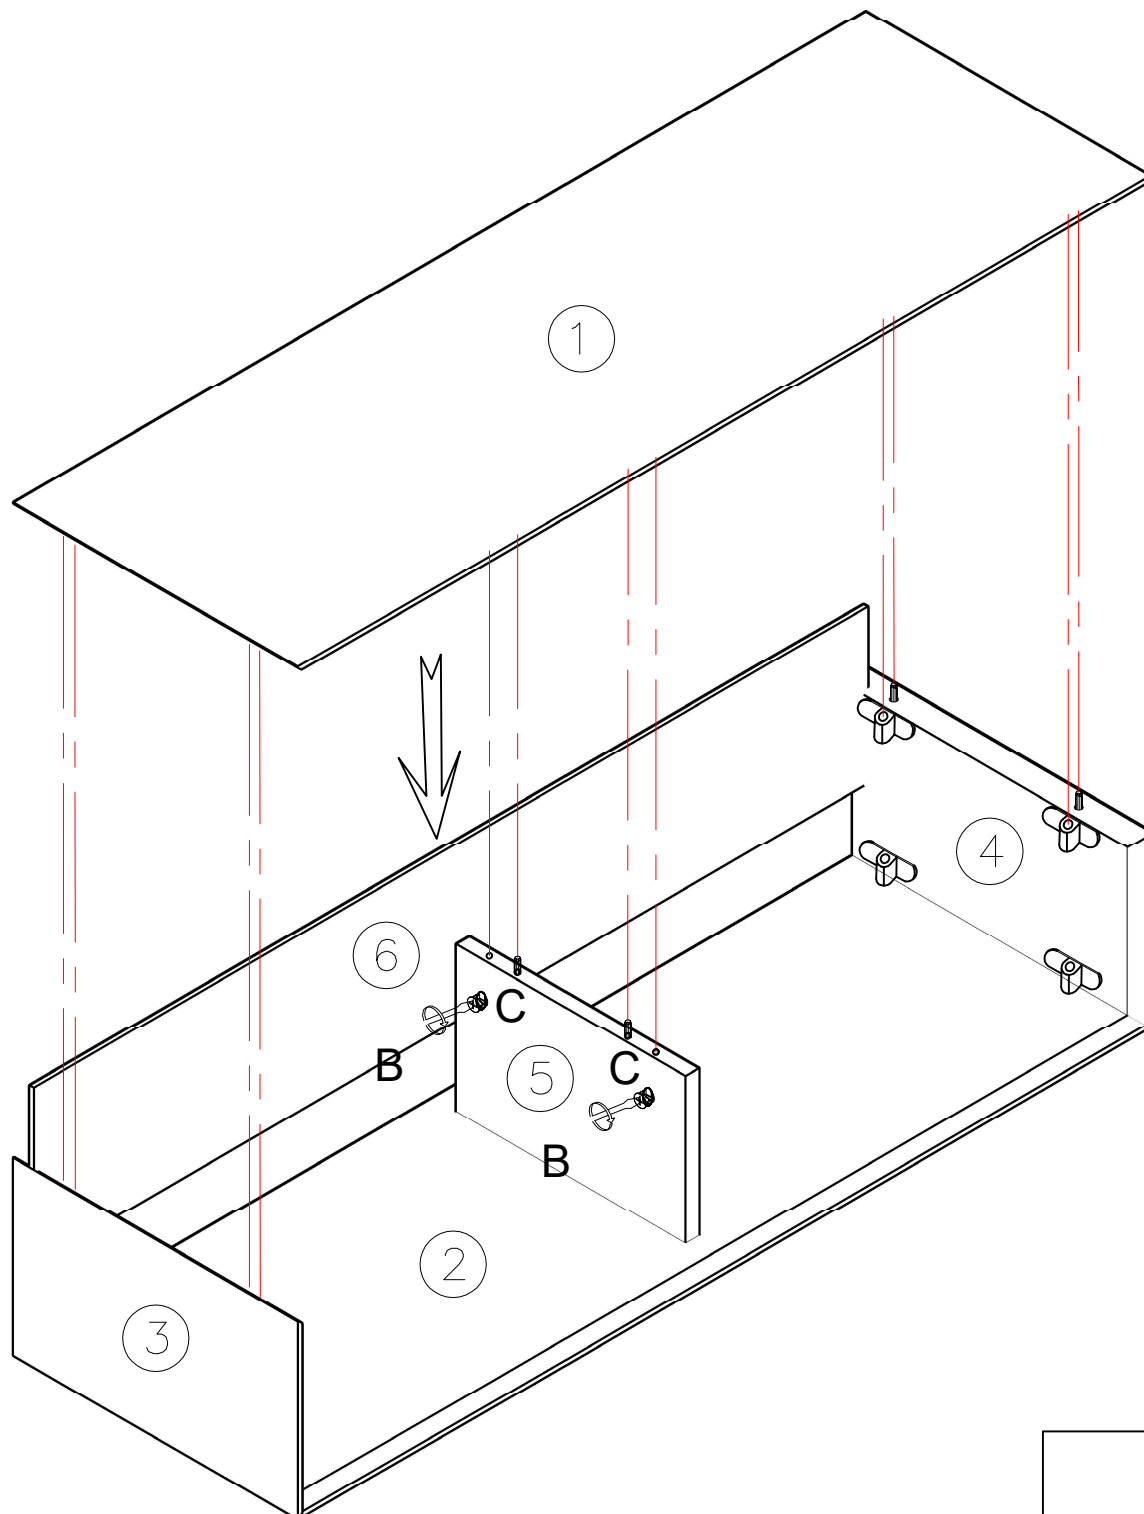



B.  X 2

H.  X 8

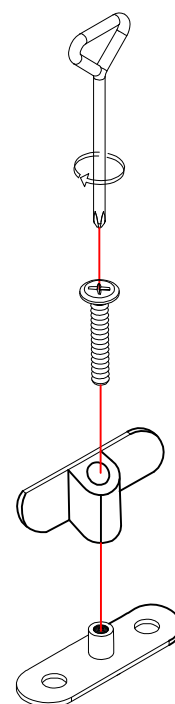


5

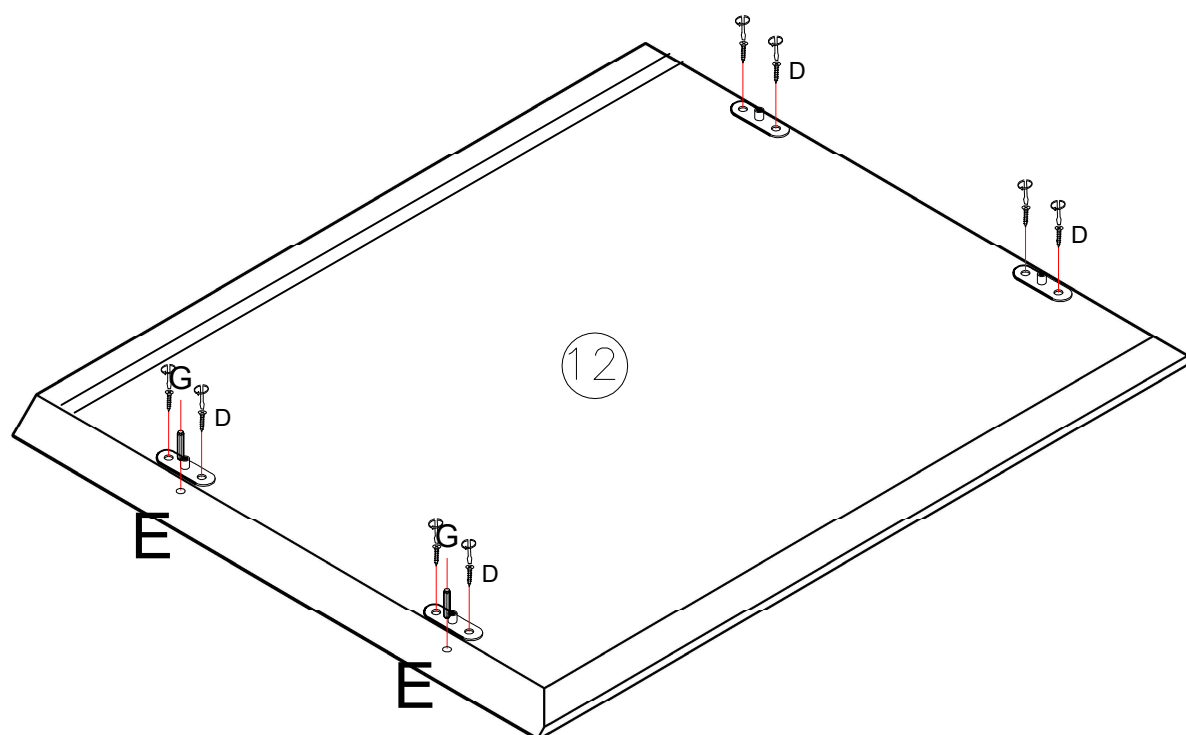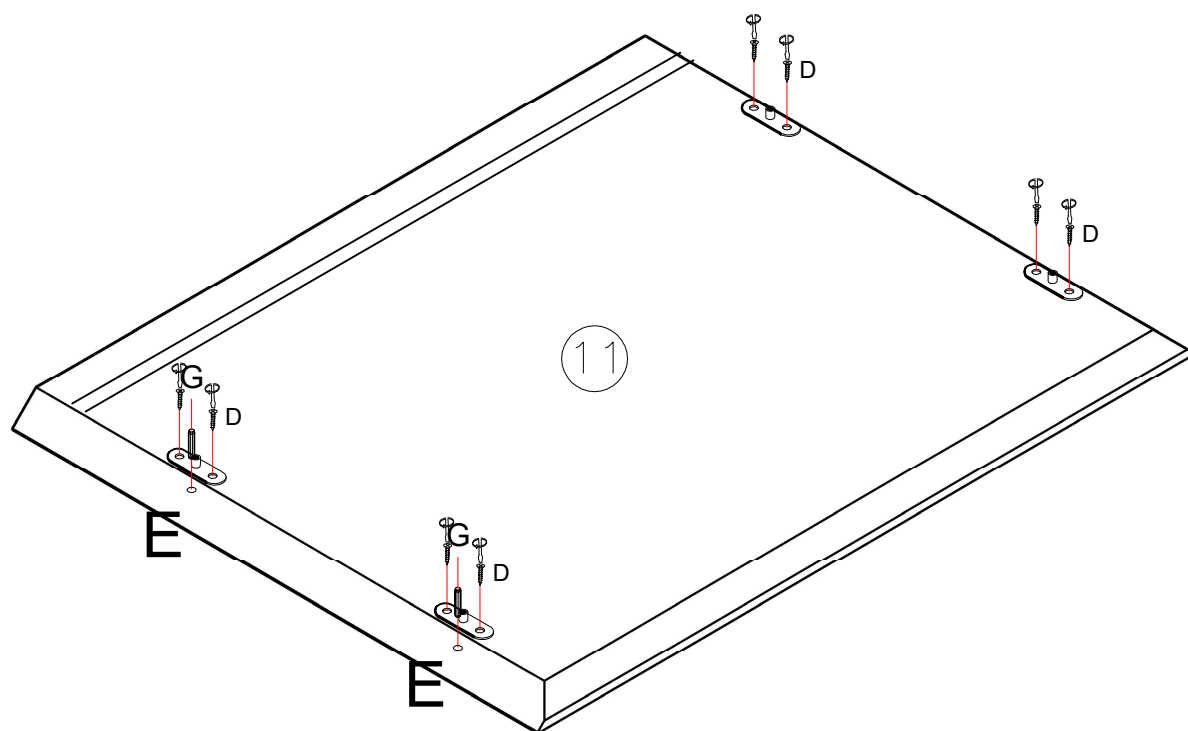



D.  X 16


G.  X 8

E.  X 8


6

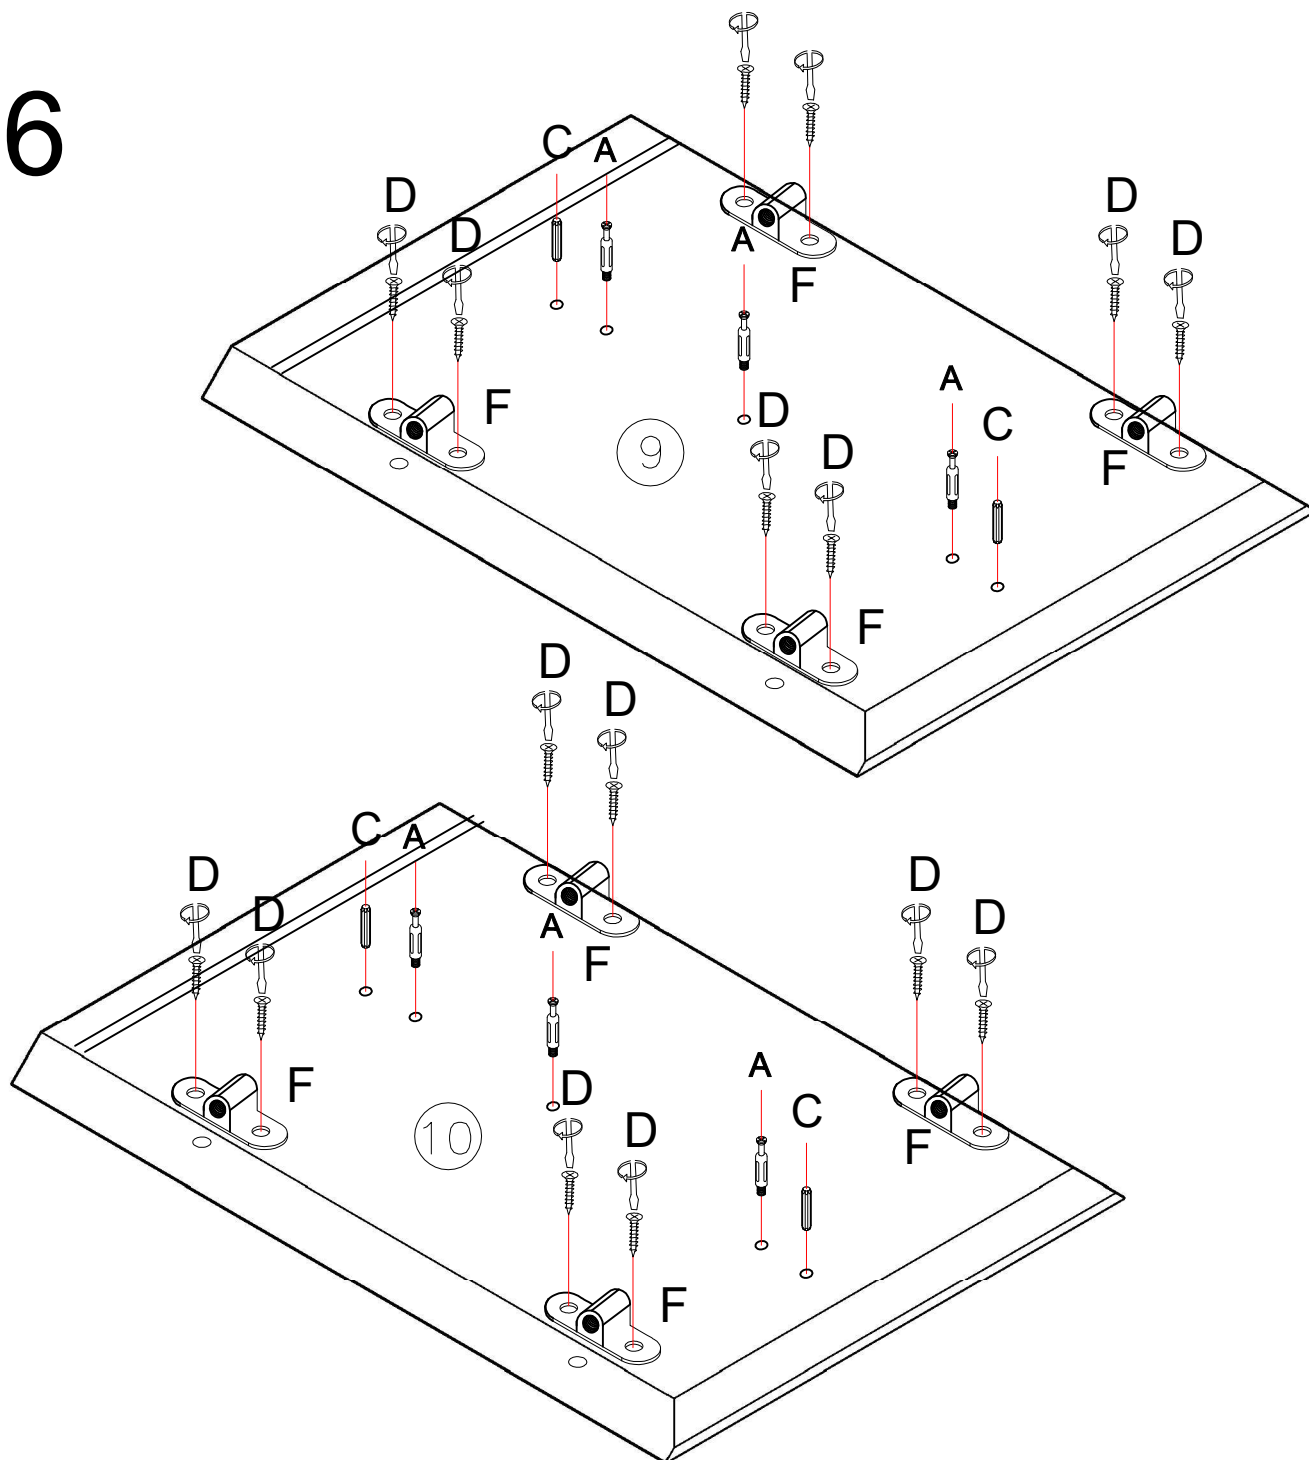


A.  X 6

D.  X 16

C.  X 4



F.  X 8


7


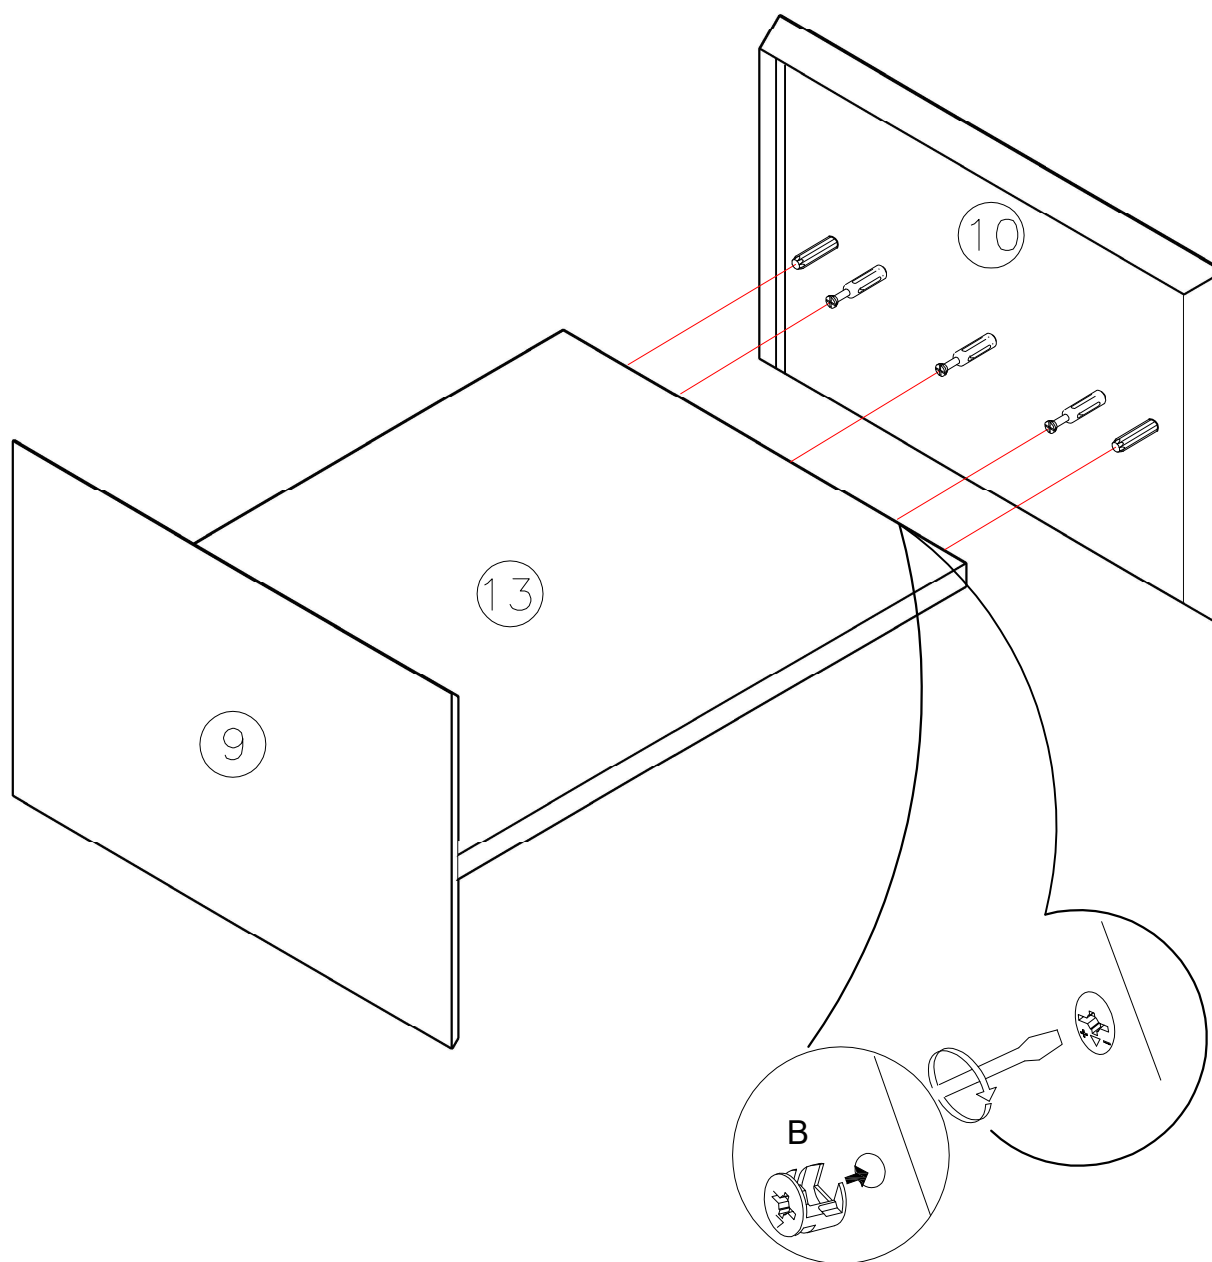


B.  X 6

8

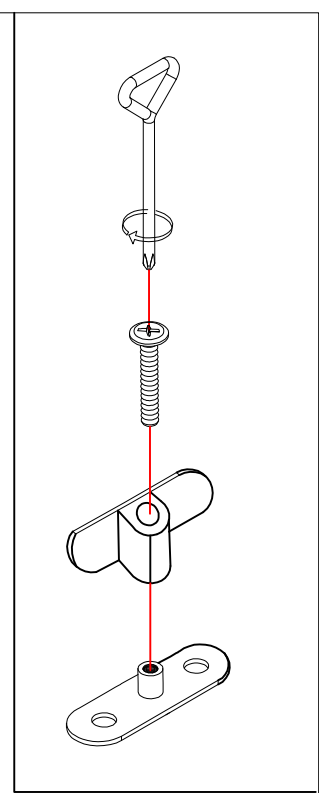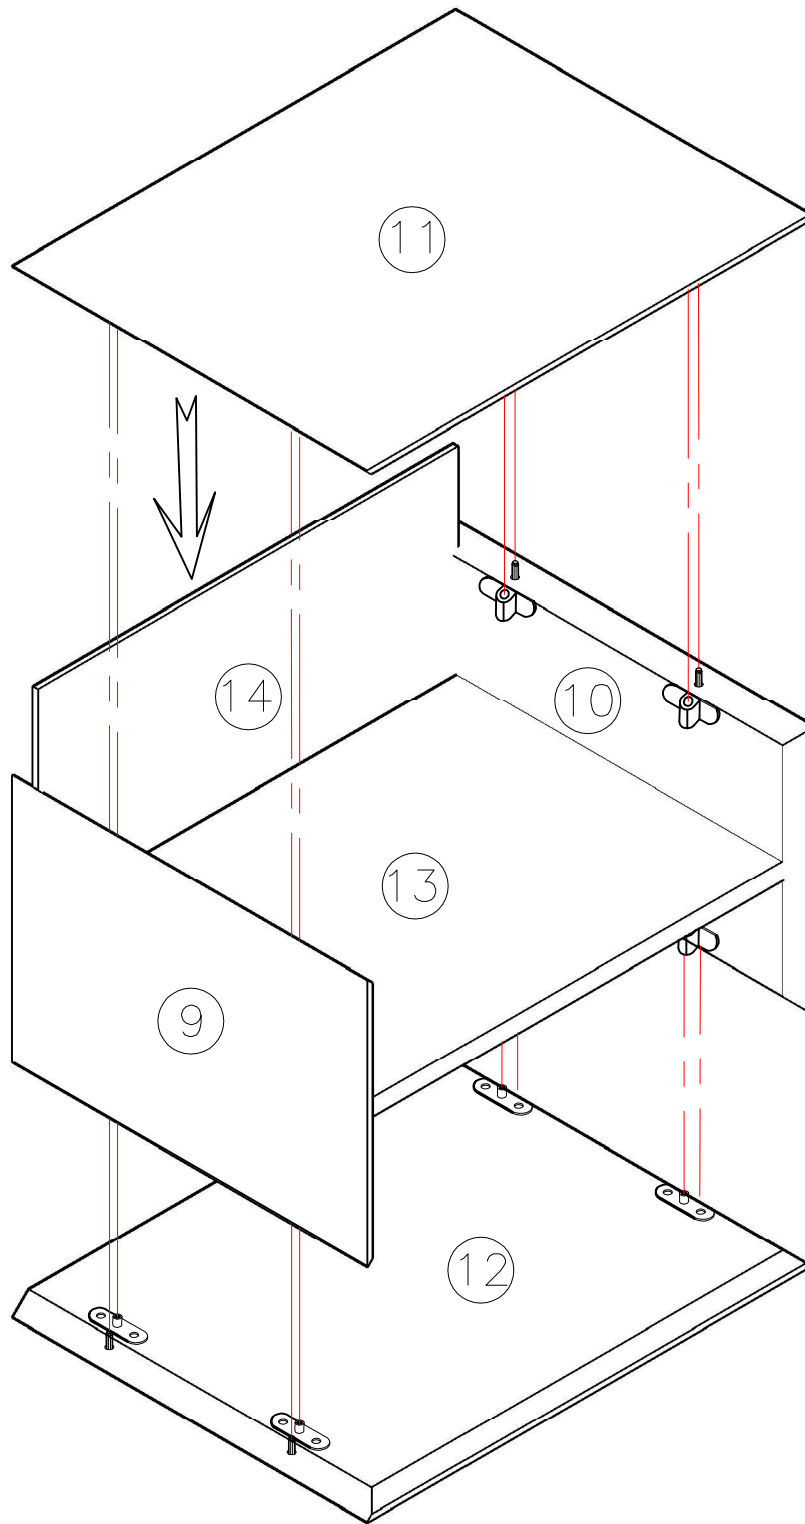


H.  X 8

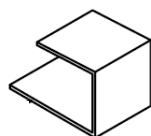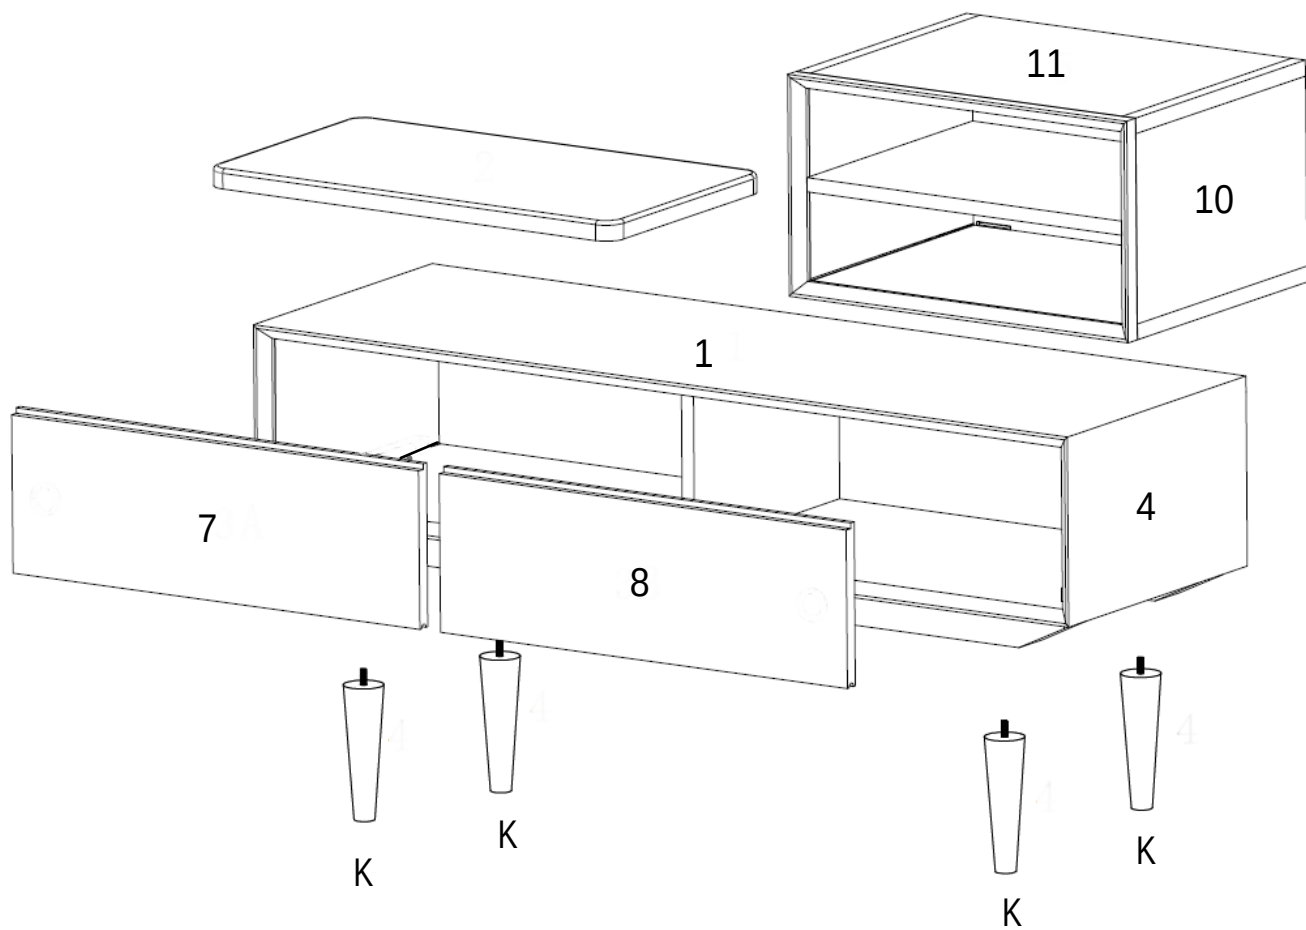

×2




10

①



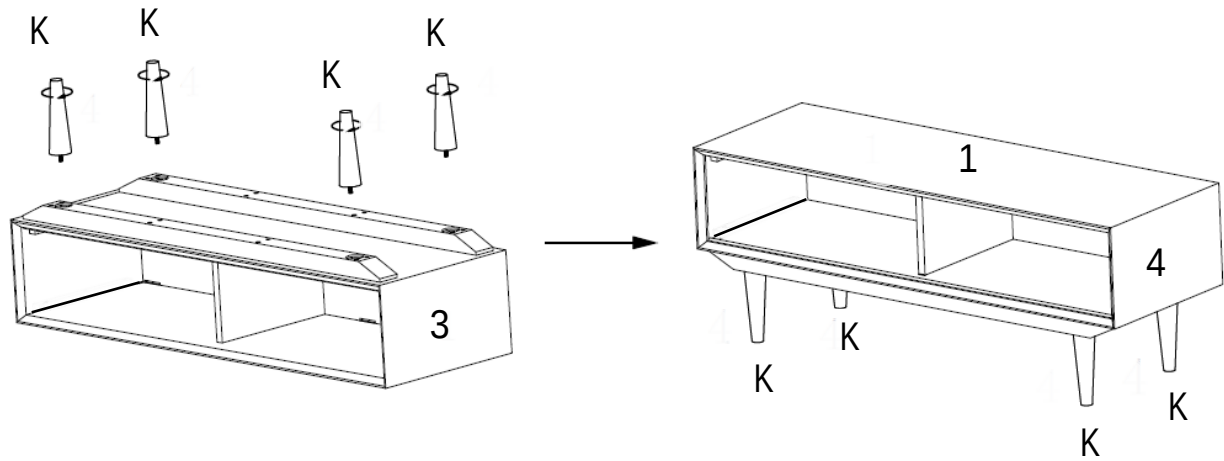


11

②

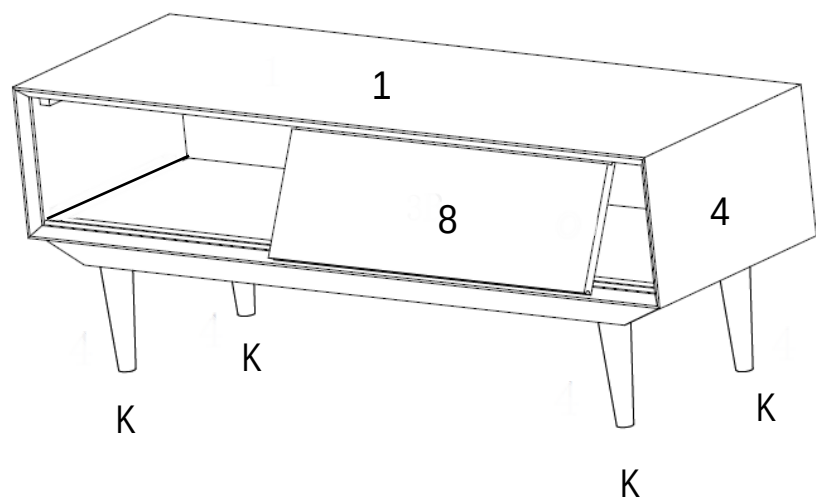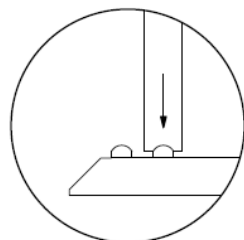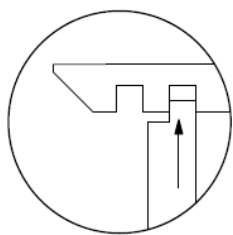


③

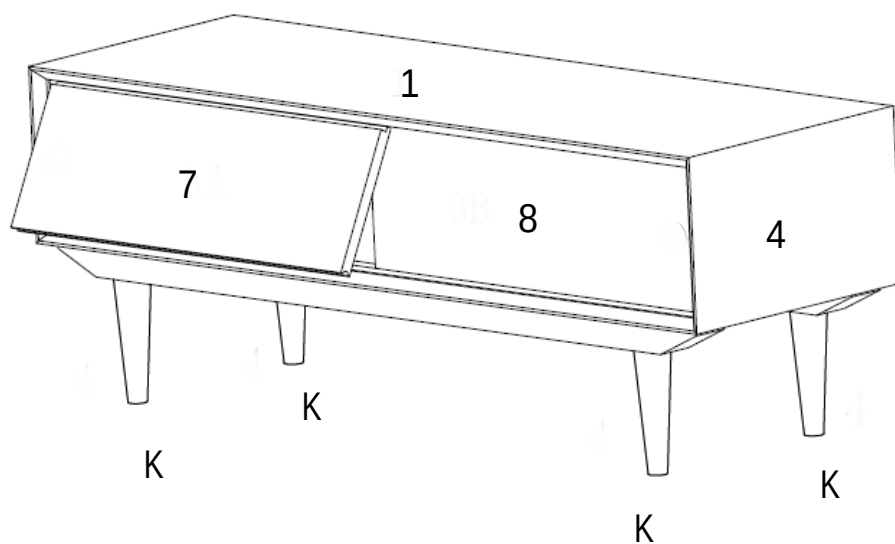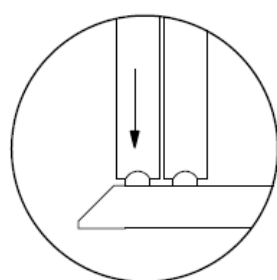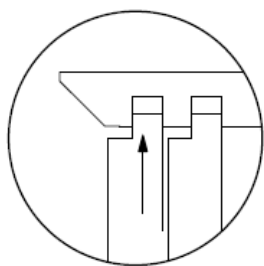


④

13

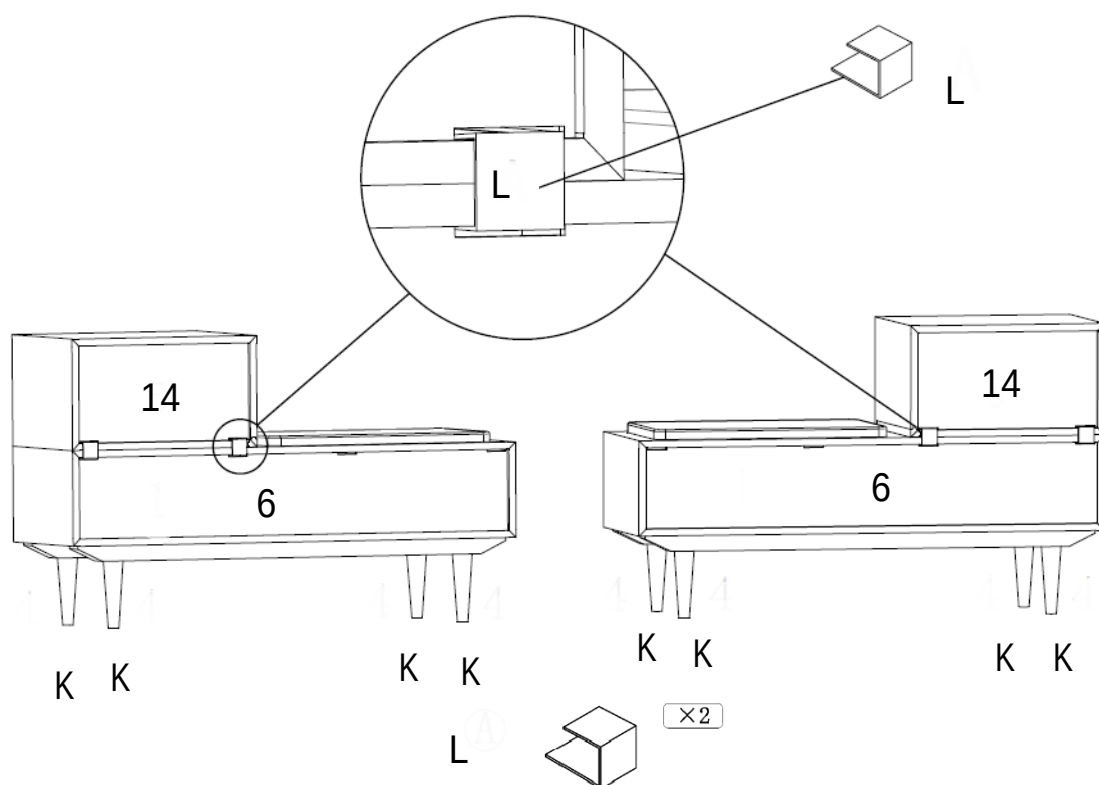

14

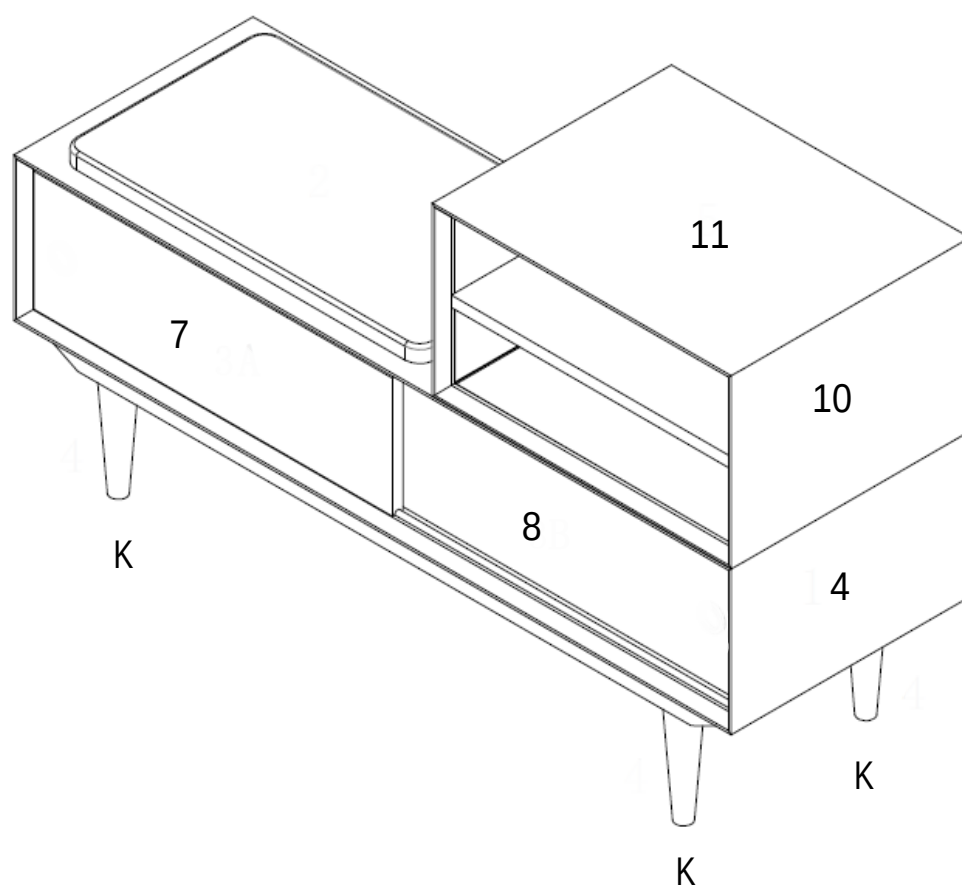

15

