


OCLJ0410


PARTS LIST		QTY
A1		1
A2		1
B1		1
B2		1
C1		1
C2		1
D		2
E1		1
E2		1
PART NO	A	QTY
1		4
2		5
3	 M6*15MM	12
4	 M6*35MM	12
6	 M6*50MM	5
7		1
8		1
9	 M6	3

STEP 1: With help of adult partner, place the armrest A1/backrest B1 upright on clean padded surface, use bolt #3, flat washer #2, mending plate #1, allen key #7 to connect upper part of armrest A1/backrest B1 from back side, Then use bolt #6, open wrench #8, nut #9, flat washer #2, allen key #7 to connect lower part of armrest A1 and backrest B1. But please don't fasten any bolt until end of step 8.

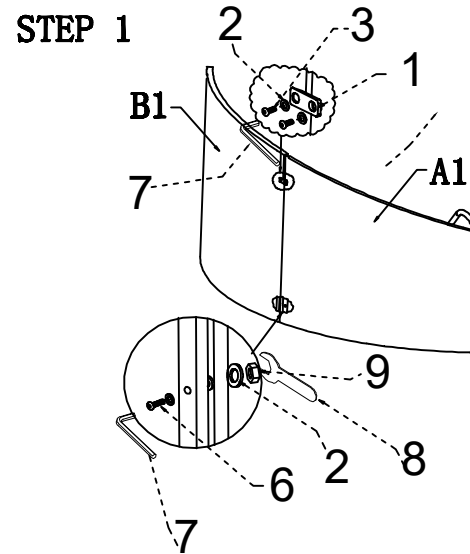


STEP 3: Repeat step 1 to connect backrest B2 with armrest A2. But please don't fasten any bolt until end of step 8.

STEP 3

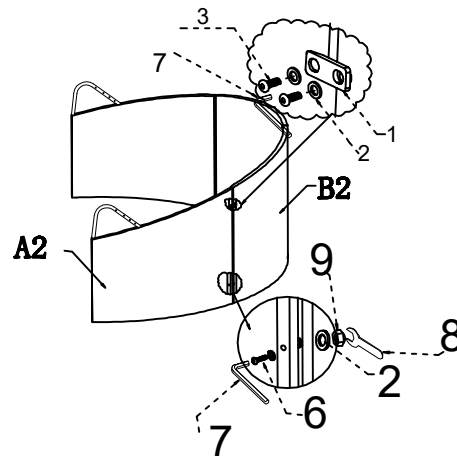


STEP 2: Repeat step 1 to connect backrest B1 with back B2. But please don't fasten any bolt until end of step 8.

STEP 2

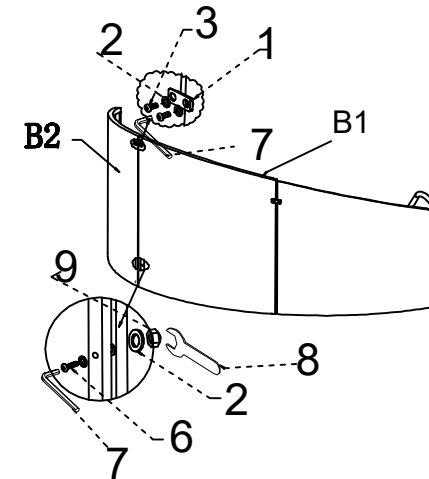


STEP 4: Use bolt #4, flat washer #2, allen key #7 to connect armrest A1 with side plate C2. But don't fasten any bolt until end of step 8 please.

STEP 4

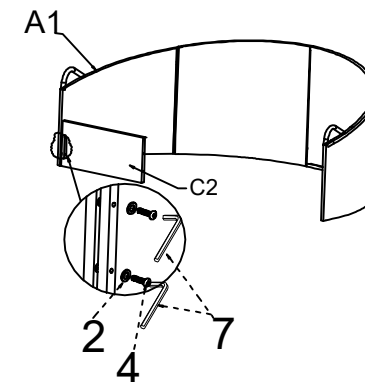


STEP 5: Use bolt #6, flat washer #2, nut #9, open wrench #8, allen key #7 to connect curved side plate E1 & E2, then use bolt #4, flat washer #2, allen key #7 to connect E1 with side plate C2. But please don't fasten any bolt until end of step 8.

STEP 5

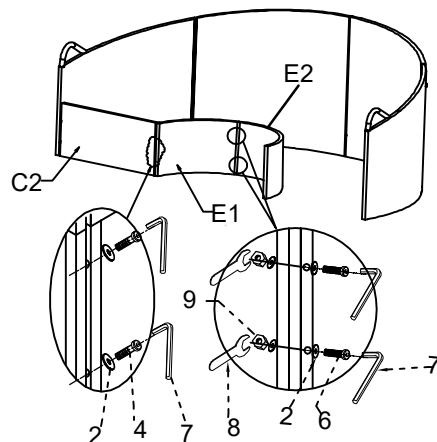


STEP 6: Use bolt #4, flat washer #2, allen key #7 to connect curved side plate E2 with side plate C1 and armrest A2. But please don't fasten any bolt until end of step 8.

STEP 6

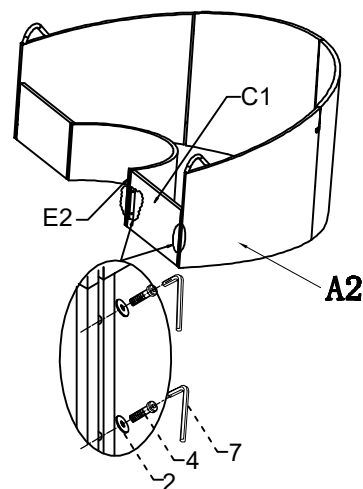


STEP 7: Place the seat frame D upside down on clean padded surface, turn over the assembled unit and place on top of back side of the seat frame D. Use bolt #3 and #4, flat washer #2, allen key #7 to connect seat frame D with assembled unit. But please don't fasten any bolt until end of step 8.

STEP 7

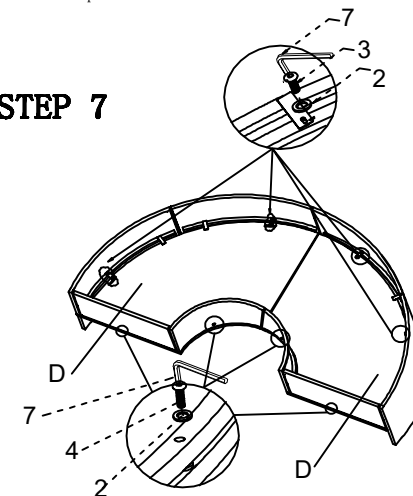


STEP 8: Use mending plate #1, bolt #3, flat washer #2, allen key #7 to connect both seat frame D. Make sure each part been properly connected then fasten all bolts to secure.

STEP 8

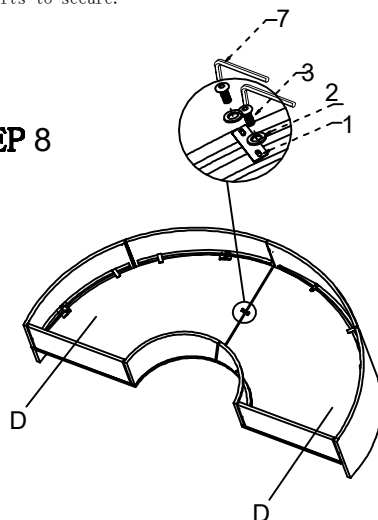

STEP 9: Turn over the whole unit then assembly completed.

STEP 9

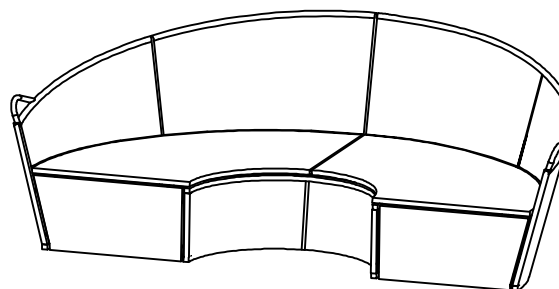


MAXIMUM WEIGHT CAPACITY: 200KG



Assembly Instructions Rattan Daybed Bed Canopy
OCLJ0410

STEP 3: Use bolt #4, flat washer #2, nut #9, open wrench #8, allen key #7 to connect the sun shade with the whole base assembly. Please don't fasten any bolt until last step.

STEP 4: Use bolt #3, flat washer #2, Plastic washer U, allen key #7 to connect the gas spring S with sun shade frame F/J/F and I/J/I . Please don't fasten any bolt until last step.



Part Number	B	Quantity
F		2
G		2
H		2
I		2
J		4
S		2
T		1

Part Number	B	Quantity
3	 M6*20MM	4
4	 M6*35MM	8
U		4
W		8
2		20
9	 M6	8

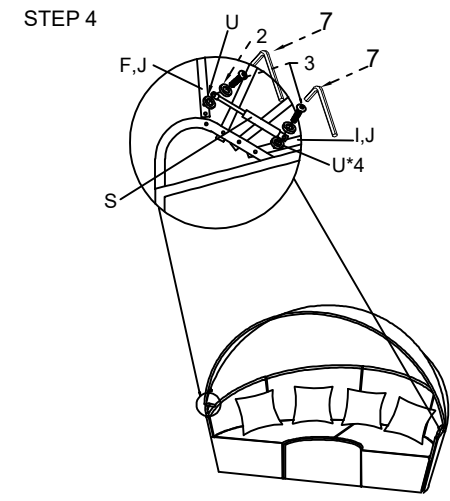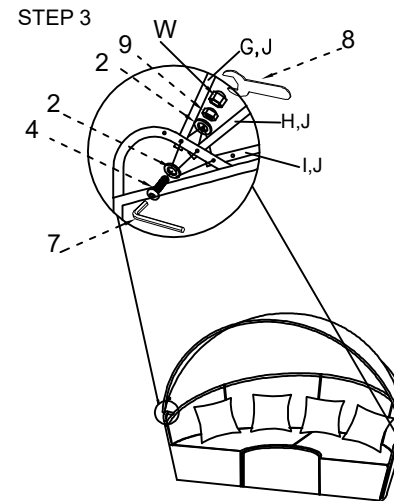


STEP 1: Connect the shade frame F/J/F,G/J/G, H/J/H,I/J/I, Make sure the ball on tapered end lock into hole on end of the tube.

STEP 2: With help of adult partner. Insert the metal frames into hollows on sun shade cover T, make sure tube I on shorter side of the cover.

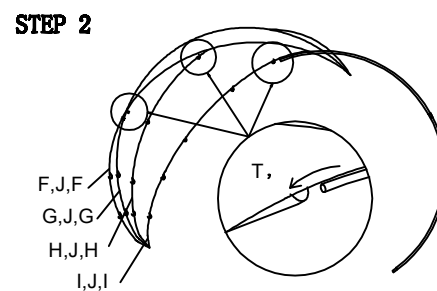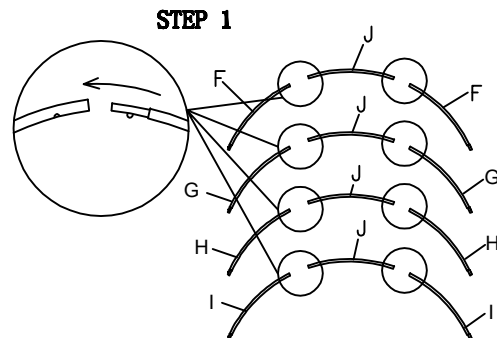

NOTE:DON'T TIGHTEN BOLTS UNTIL ALL PARTS ARE CONNECTED. 2 PEOPLE ARE REQUIRED WHEN ASSEMBLING

STEP 5

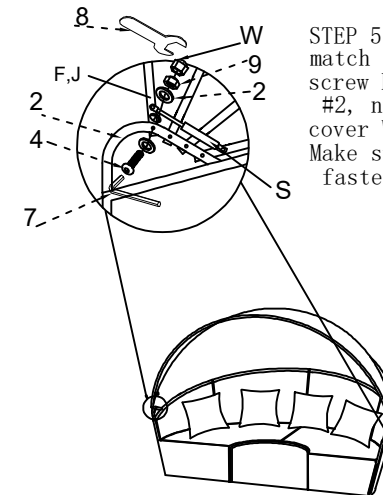

STEP 5: Press the sun shade frame F/J/F to match the hole position of gas spring with screw hole on arm, Use bolt #4, flat washer #2, nut #9, open wrench #8 allen key #7, cover W to connect gas spring S with arm. Make sure all parts properly connected then fasten all bolts to secure.

MAXIMUM WEIGHT CAPACITY:200KG

NOTE:DON'T TIGHTEN BOLTS UNTIL ALL PARTS ARE CONNECTED. 2 PEOPLE ARE REQUIRED WHEN ASSEMBLING


Assembly Instructions Rattan Daybed Seats OCLJ0410

PART NO	C	QTY
M		4
N		2
O		2
P		2
D		2

PART NO	C	QTY
4	 M6*35MM	26
6	 M6*50MM	4
2		34
9	 M6	4


STEP 1: With help of adult partner
Place seat frame D upside down on clean padded surface, use bolt #6, flat washer #2, nut #9, allen key #7, open wrench #8 to connect two side plate M together, then turn over the assembled side plate M and place it on top of back side of seat frame D. Use bolt #4, flat washer #2, allen key #7 to connect seat frame D with side plate M. But please don't fasten any bolt until last step.

STEP 1

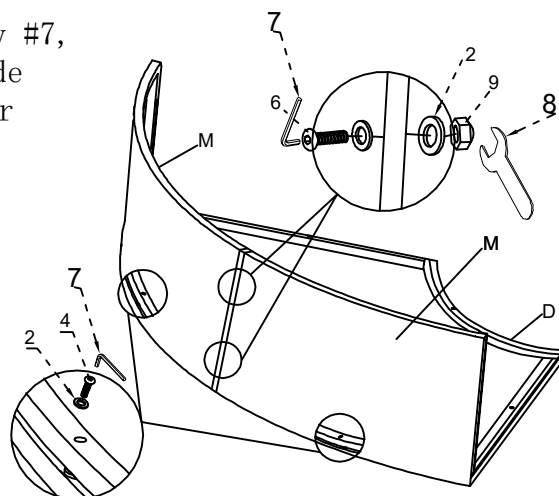


NOTE: DON'T TIGHTEN BOLTS UNTIL ALL PARTS ARE CONNECTED. 2 PEOPLE ARE REQUIRED WHEN ASSEMBLING

STEP 2: Use bolt #4, flat washer #2, allen key #7 to connect side plate O/P with side plate M and seat frame D. But please don't fasten any bolt until last step.

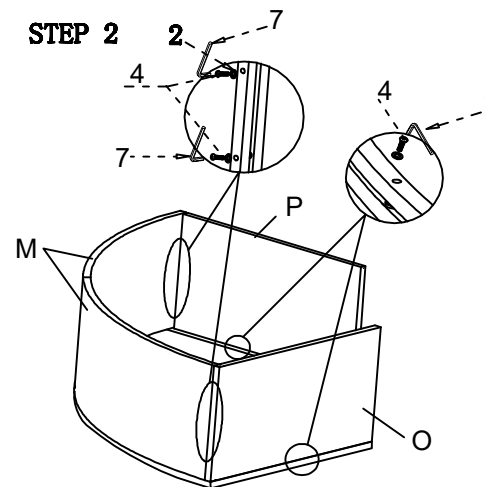

STEP 3: Use bolt #4, flat washer #2, allen key #7 to connect side plate N with side plate O/P and seat frame D. Make sure all parts properly connected then fasten all bolts to secure. Turn over the whole unit, assembly completed.

STEP 3

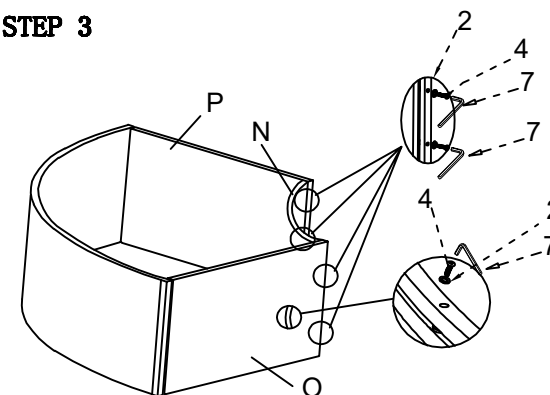


MAXIMUM WEIGHT CAPACITY: 100KG

NOTE: DON'T TIGHTEN BOLTS UNTIL ALL PARTS ARE CONNECTED. 2 PEOPLE ARE REQUIRED WHEN ASSEMBLING


Assembly InstructionsRattan Daybed

OCLJ0410

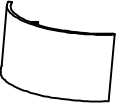PART NO	D	QTY
K		3
L		1
4	 M6*35MM	3
6	 M6*50MM	6
2		15
9	 M6	6

STEP 1: With help of adult partner, Place the seat frame L on clean padded surface, use bolt #4, flat washer #2, allen key #7 to connect all side plate K with seat frame L. But please don' t fasten any bolt until end of step 2.

STEP1

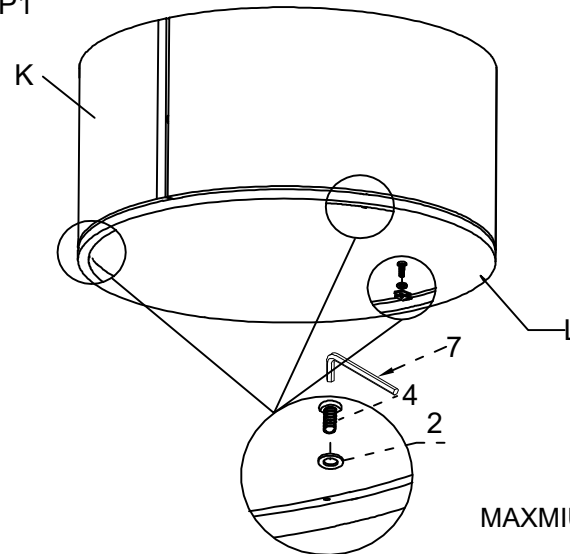

MAXMIUM WEIGHT CAPACITY:50KG

NOTE:DON'T TIGHTEN BOLTS UNTIL ALL PARTS ARE CONNECTED. 2 PEOPLE ARE REQUIRED WHEN

ASSEMBLING

STEP 2: Use bolt #6, flat washer #2, nut #9, open wrench #8 allen key #7 to connect all three side plate K together. Make sure all parts properly connected then fasten all bolts to secure. Turn over the whole unit, assembly completed.

STEP2

