


ASSEMBLY INSTRUCTIONS
Item No : WF299168AAK + WF299169AAK
Description : FULL BED


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

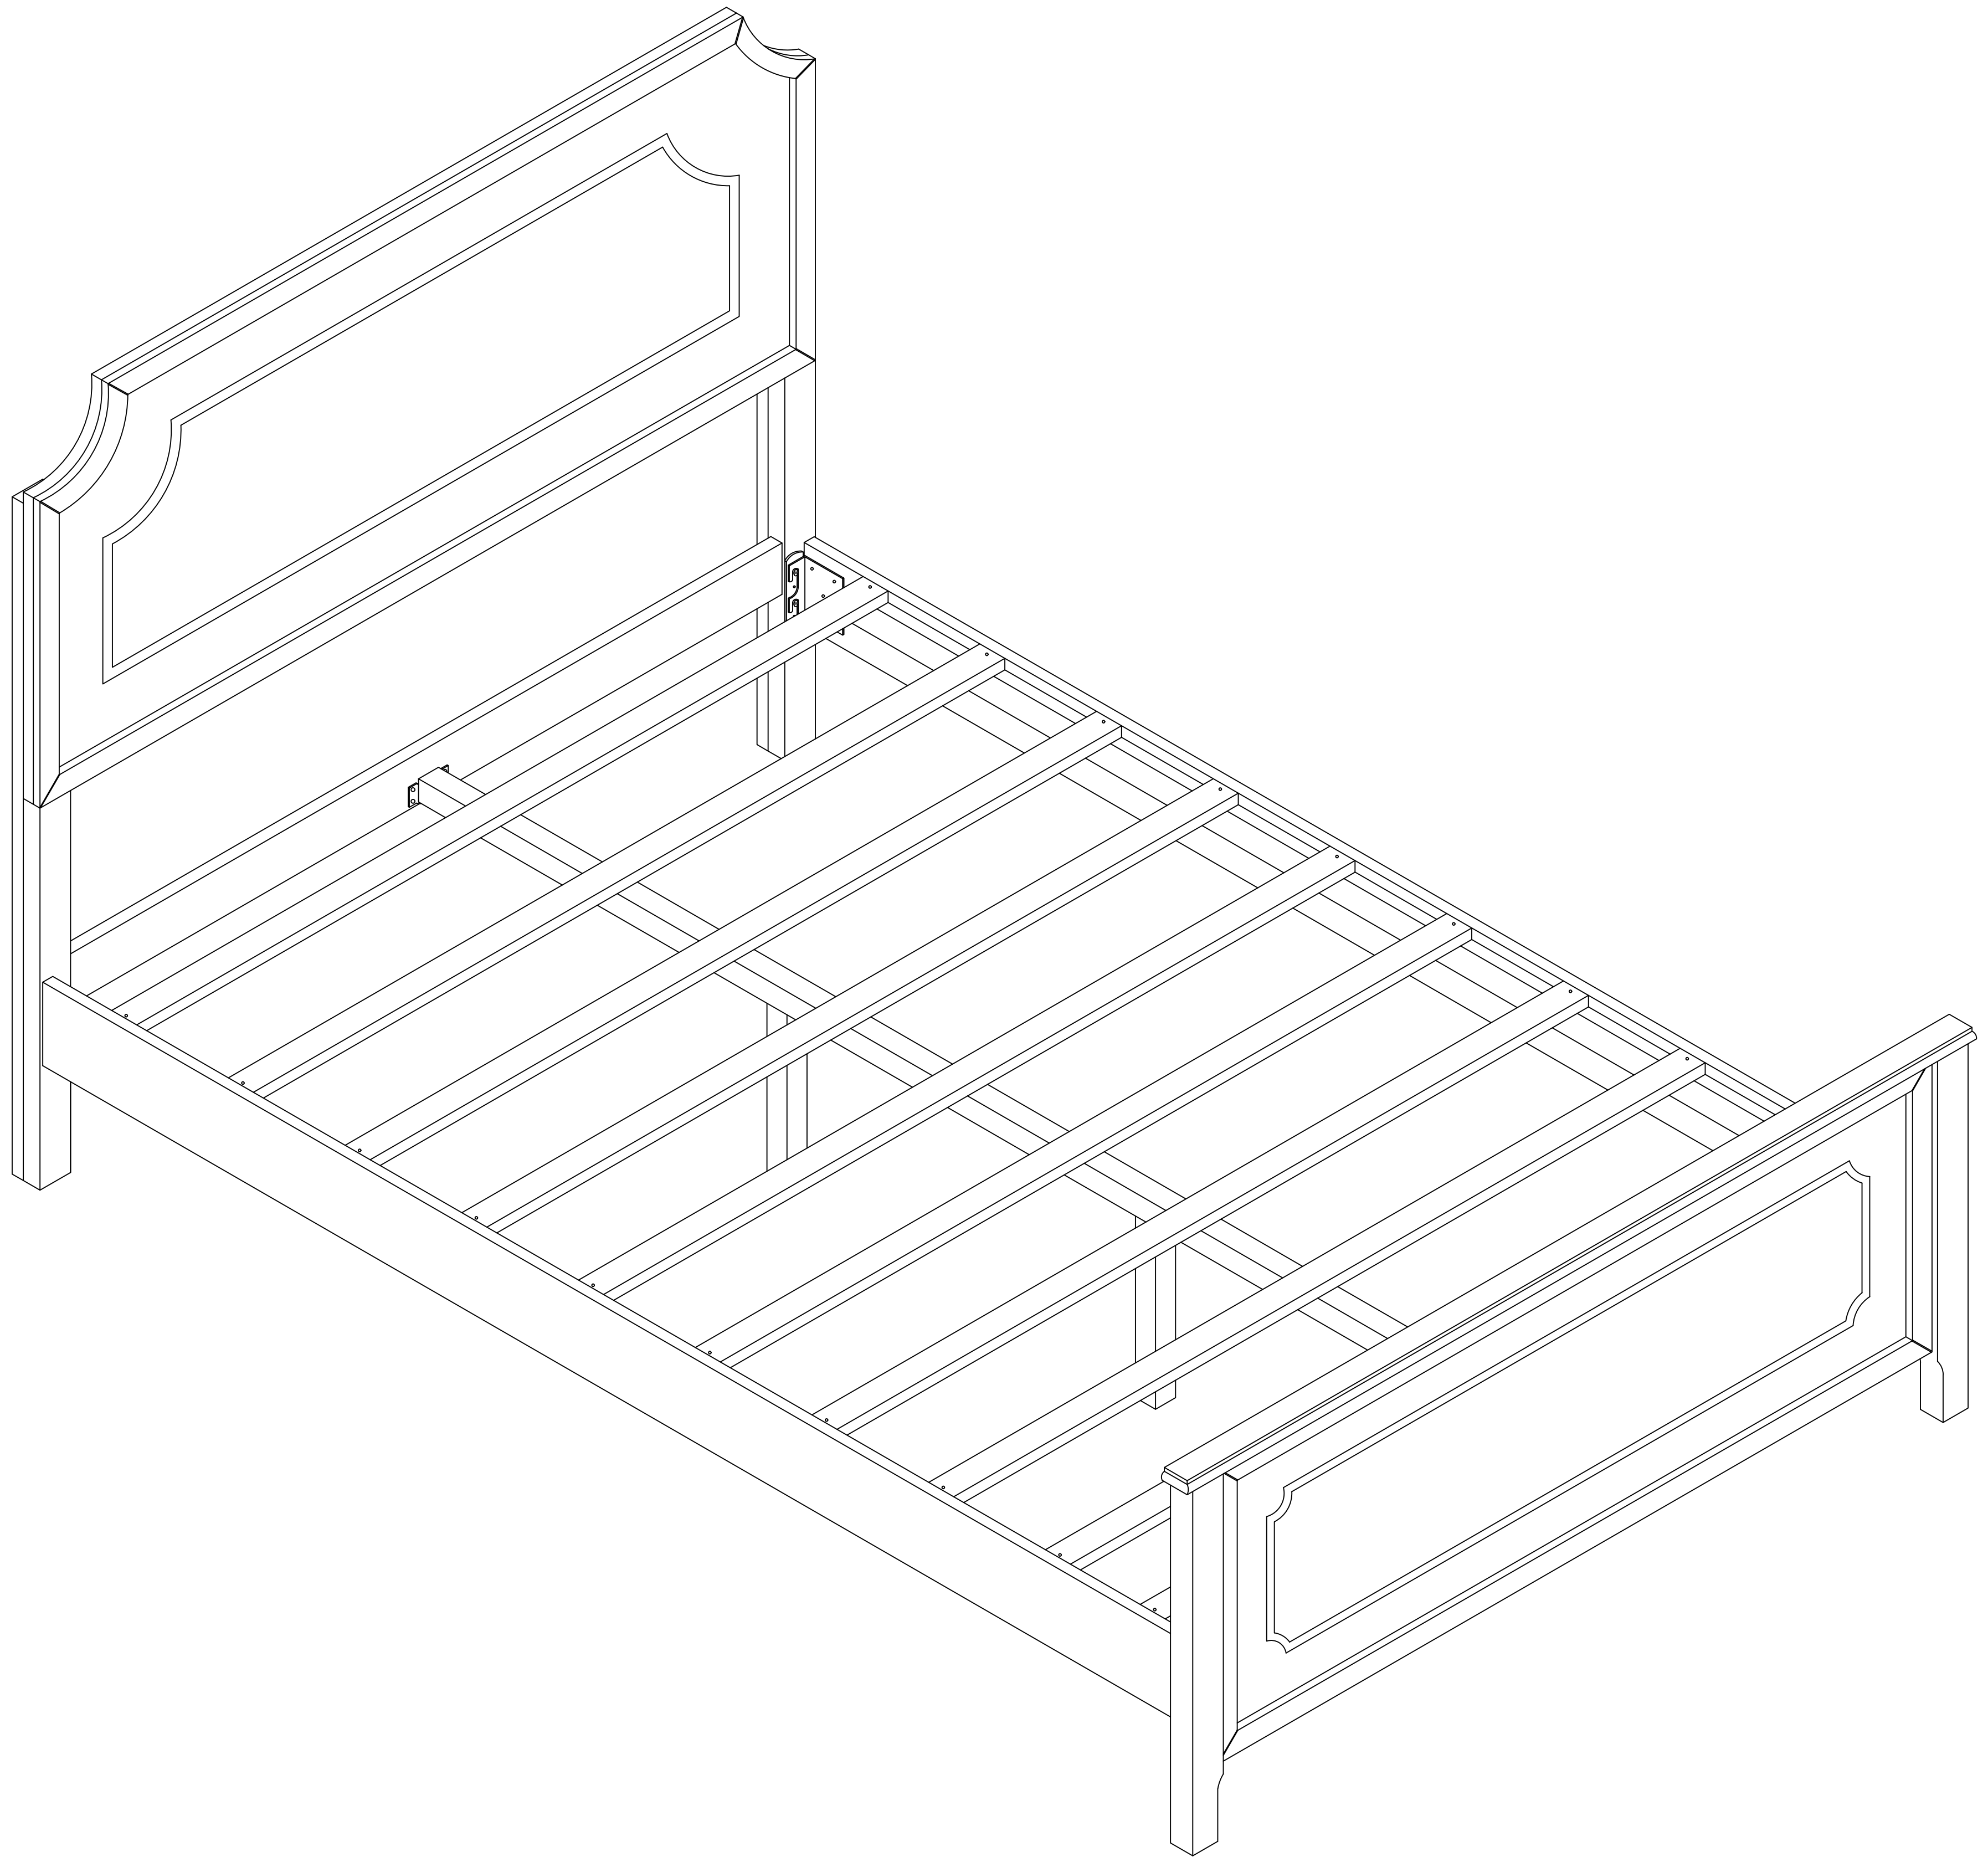


WF299168AAK + WF299169AAK

ASSEMBLY INSTRUCTIONS
Item No : WF299168AAK + WF299169AAK
Description : FULL BED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

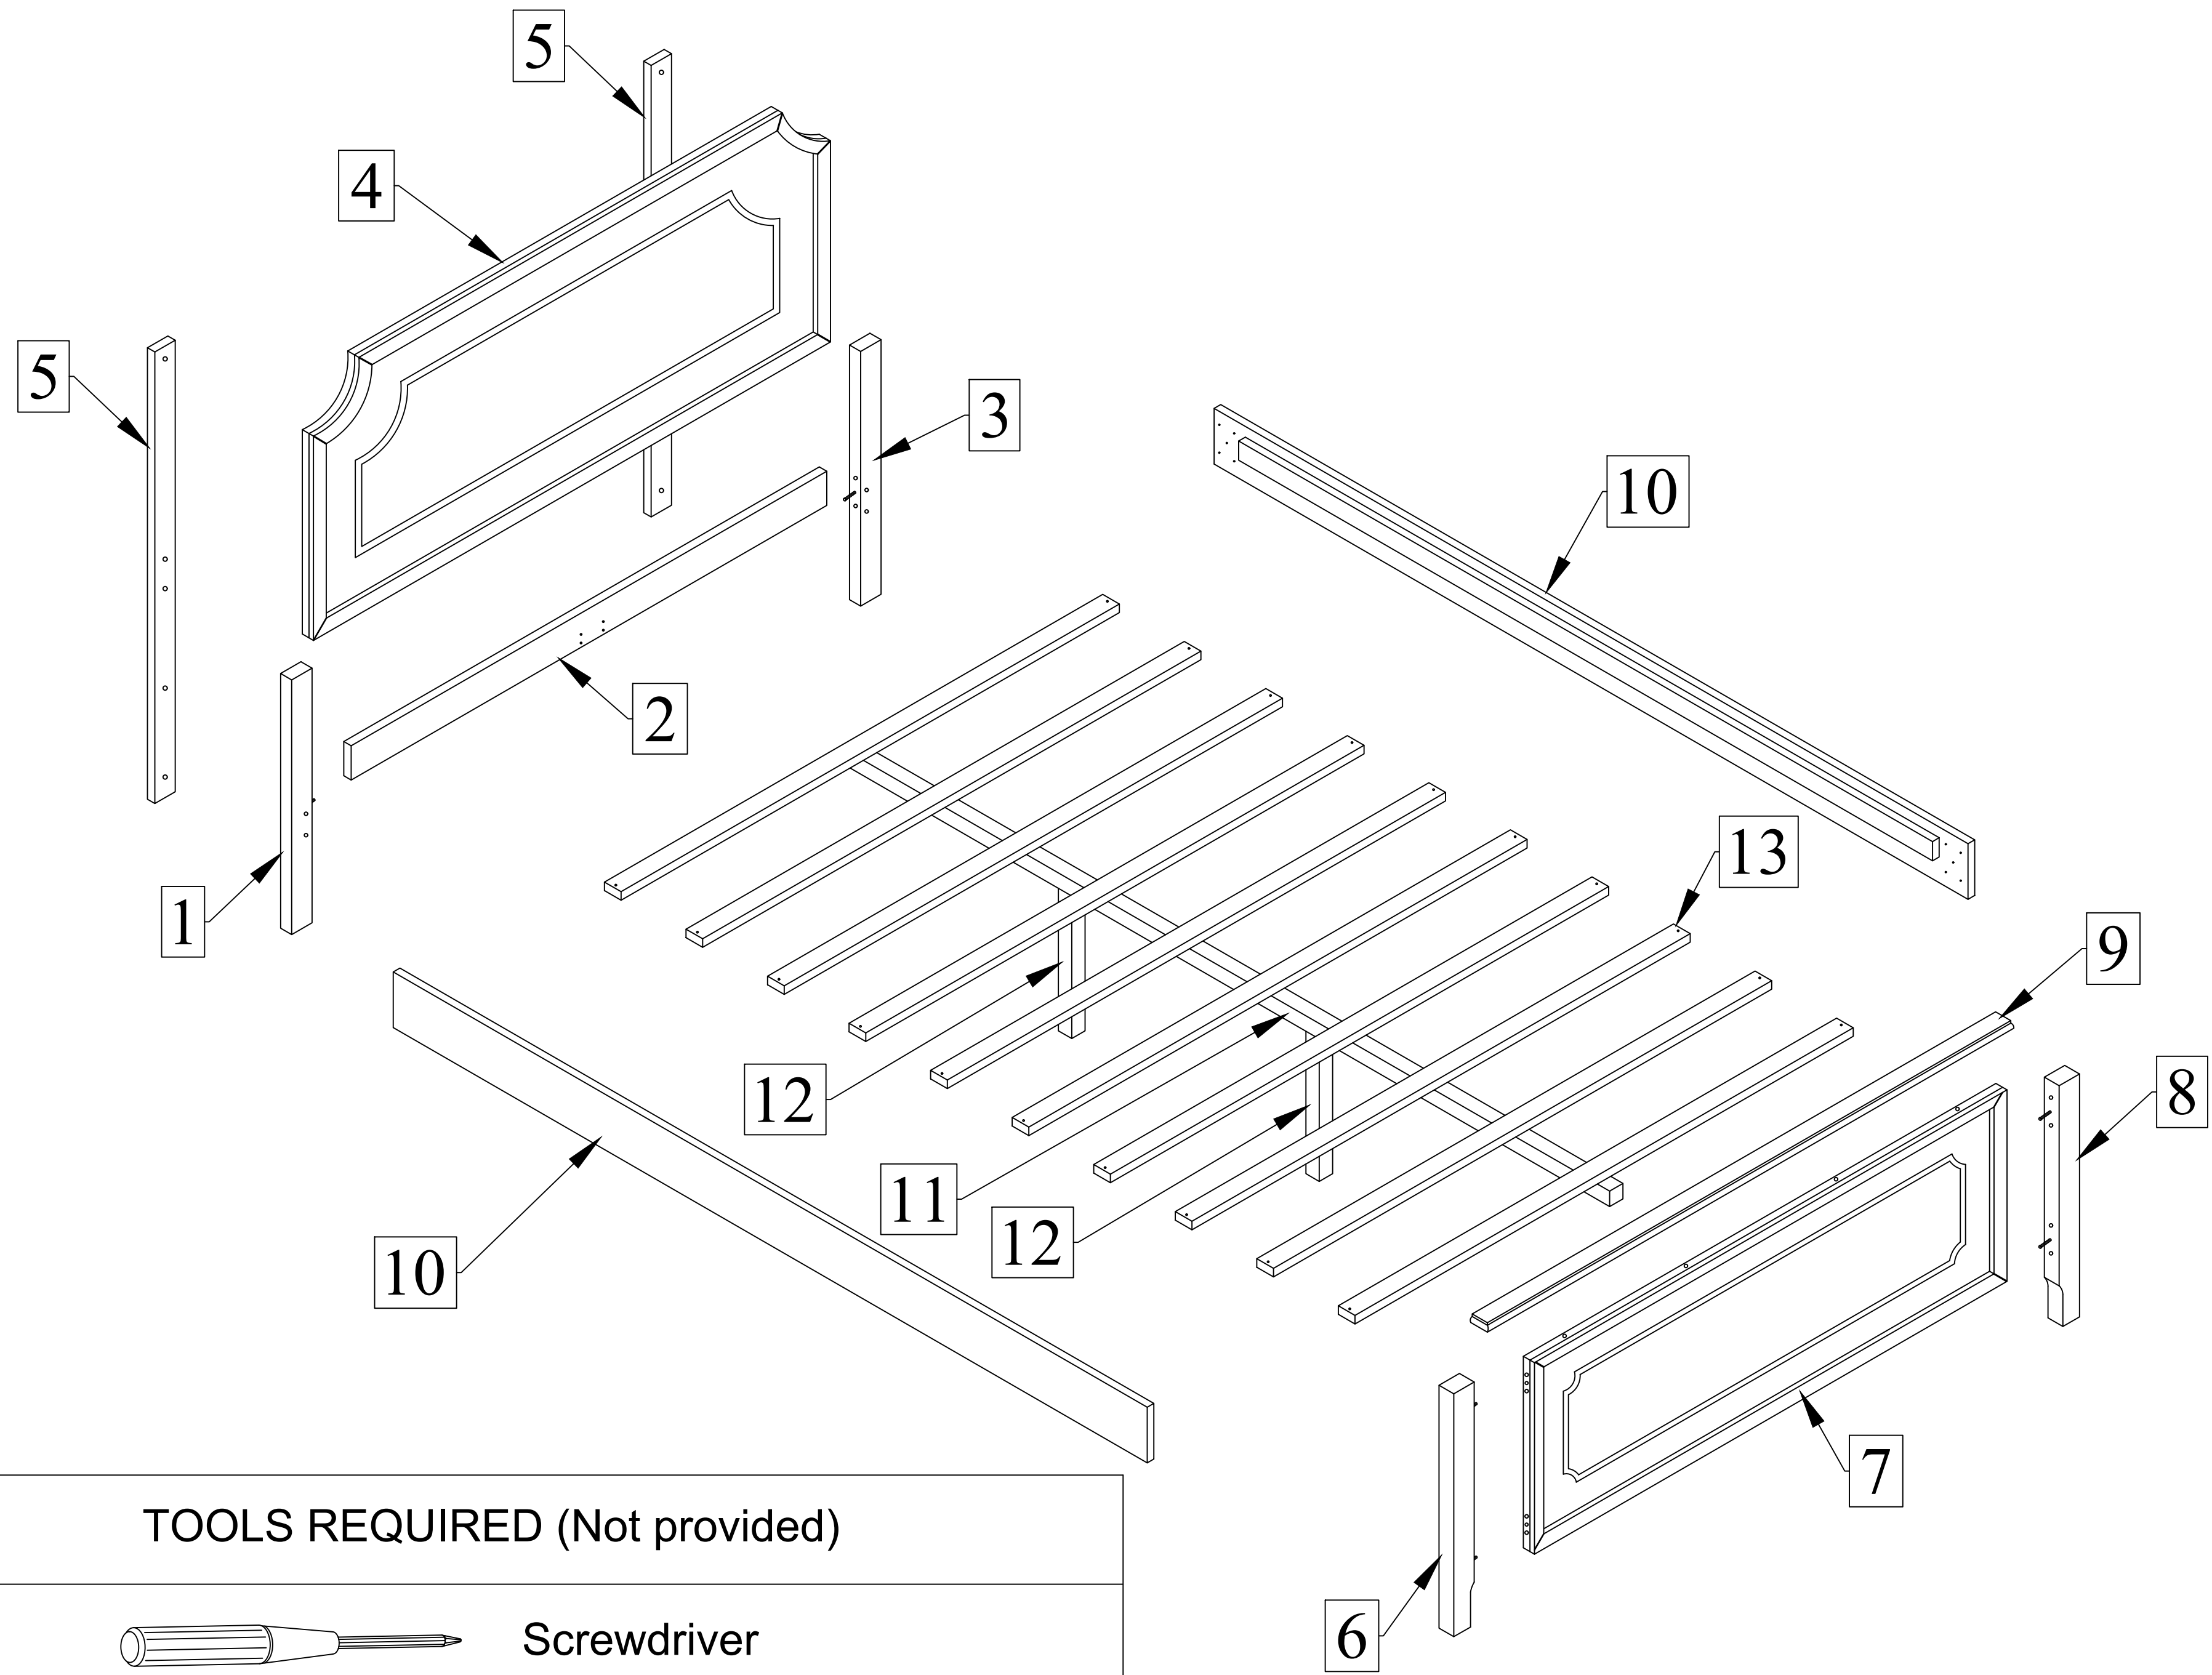

TOOLS REQUIRED (Not provided)



Screwdriver

Hardware List

No.	Description	Sketch	Quantity
A	Wood Dowel M8x30MM		8PCS
B	U Bracket		2PCS
C	Screw M3.5 x 16MM		44PCS
D	Minifix + Cap	D1 D2	4SETS
E	Iron Plate		4PCS
F	Bed Bracket - 2L2R	FL FR	4PCS
G	Hex Nut		6PCS
H	Spring Washer		16PCS
I	Spanner		1PC
J	JCBC M6 x 35mm		10PCS
K	Flat Washer		10PCS
L	Allen Key M4		1PC
M	Bolt		8PCS
N	Allen Key M5		1PC
O	Screw M4 x 32MM		20PCS


Part List

No.	Description	Sketch	Quantity
1	HB Lower Support - L		1PC
2	HB Support Rail		1PC
3	HB Lower Support - R		1PC
4	HB (Headboard)		1PC
5	HB Back Support		2PCS
6	FB Pillar - L		1PC
7	FB (Footboard)		1PC
8	FB Pillar - R		1PC
9	FB Crown		1PC
10	Bed Side Rail		2PCS
11	Center Support Rail		1PC
12	Center Support Leg		2PCS
13	Bed Slats		10PCS

ASSEMBLY INSTRUCTIONS
Item No : WF299168AAK + WF299169AAK
Description : FULL BED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

Step 1 : Attach Wood Dowel (A) to HB Support Rail (2) and Footboard (7). Attach U Bracket (B), Iron Plate (E), and Bed Bracket (F) to parts (1,2,3,6,7,8,10) accordingly using Screw (C). Attach Minifix (D) to FB Crown (9).


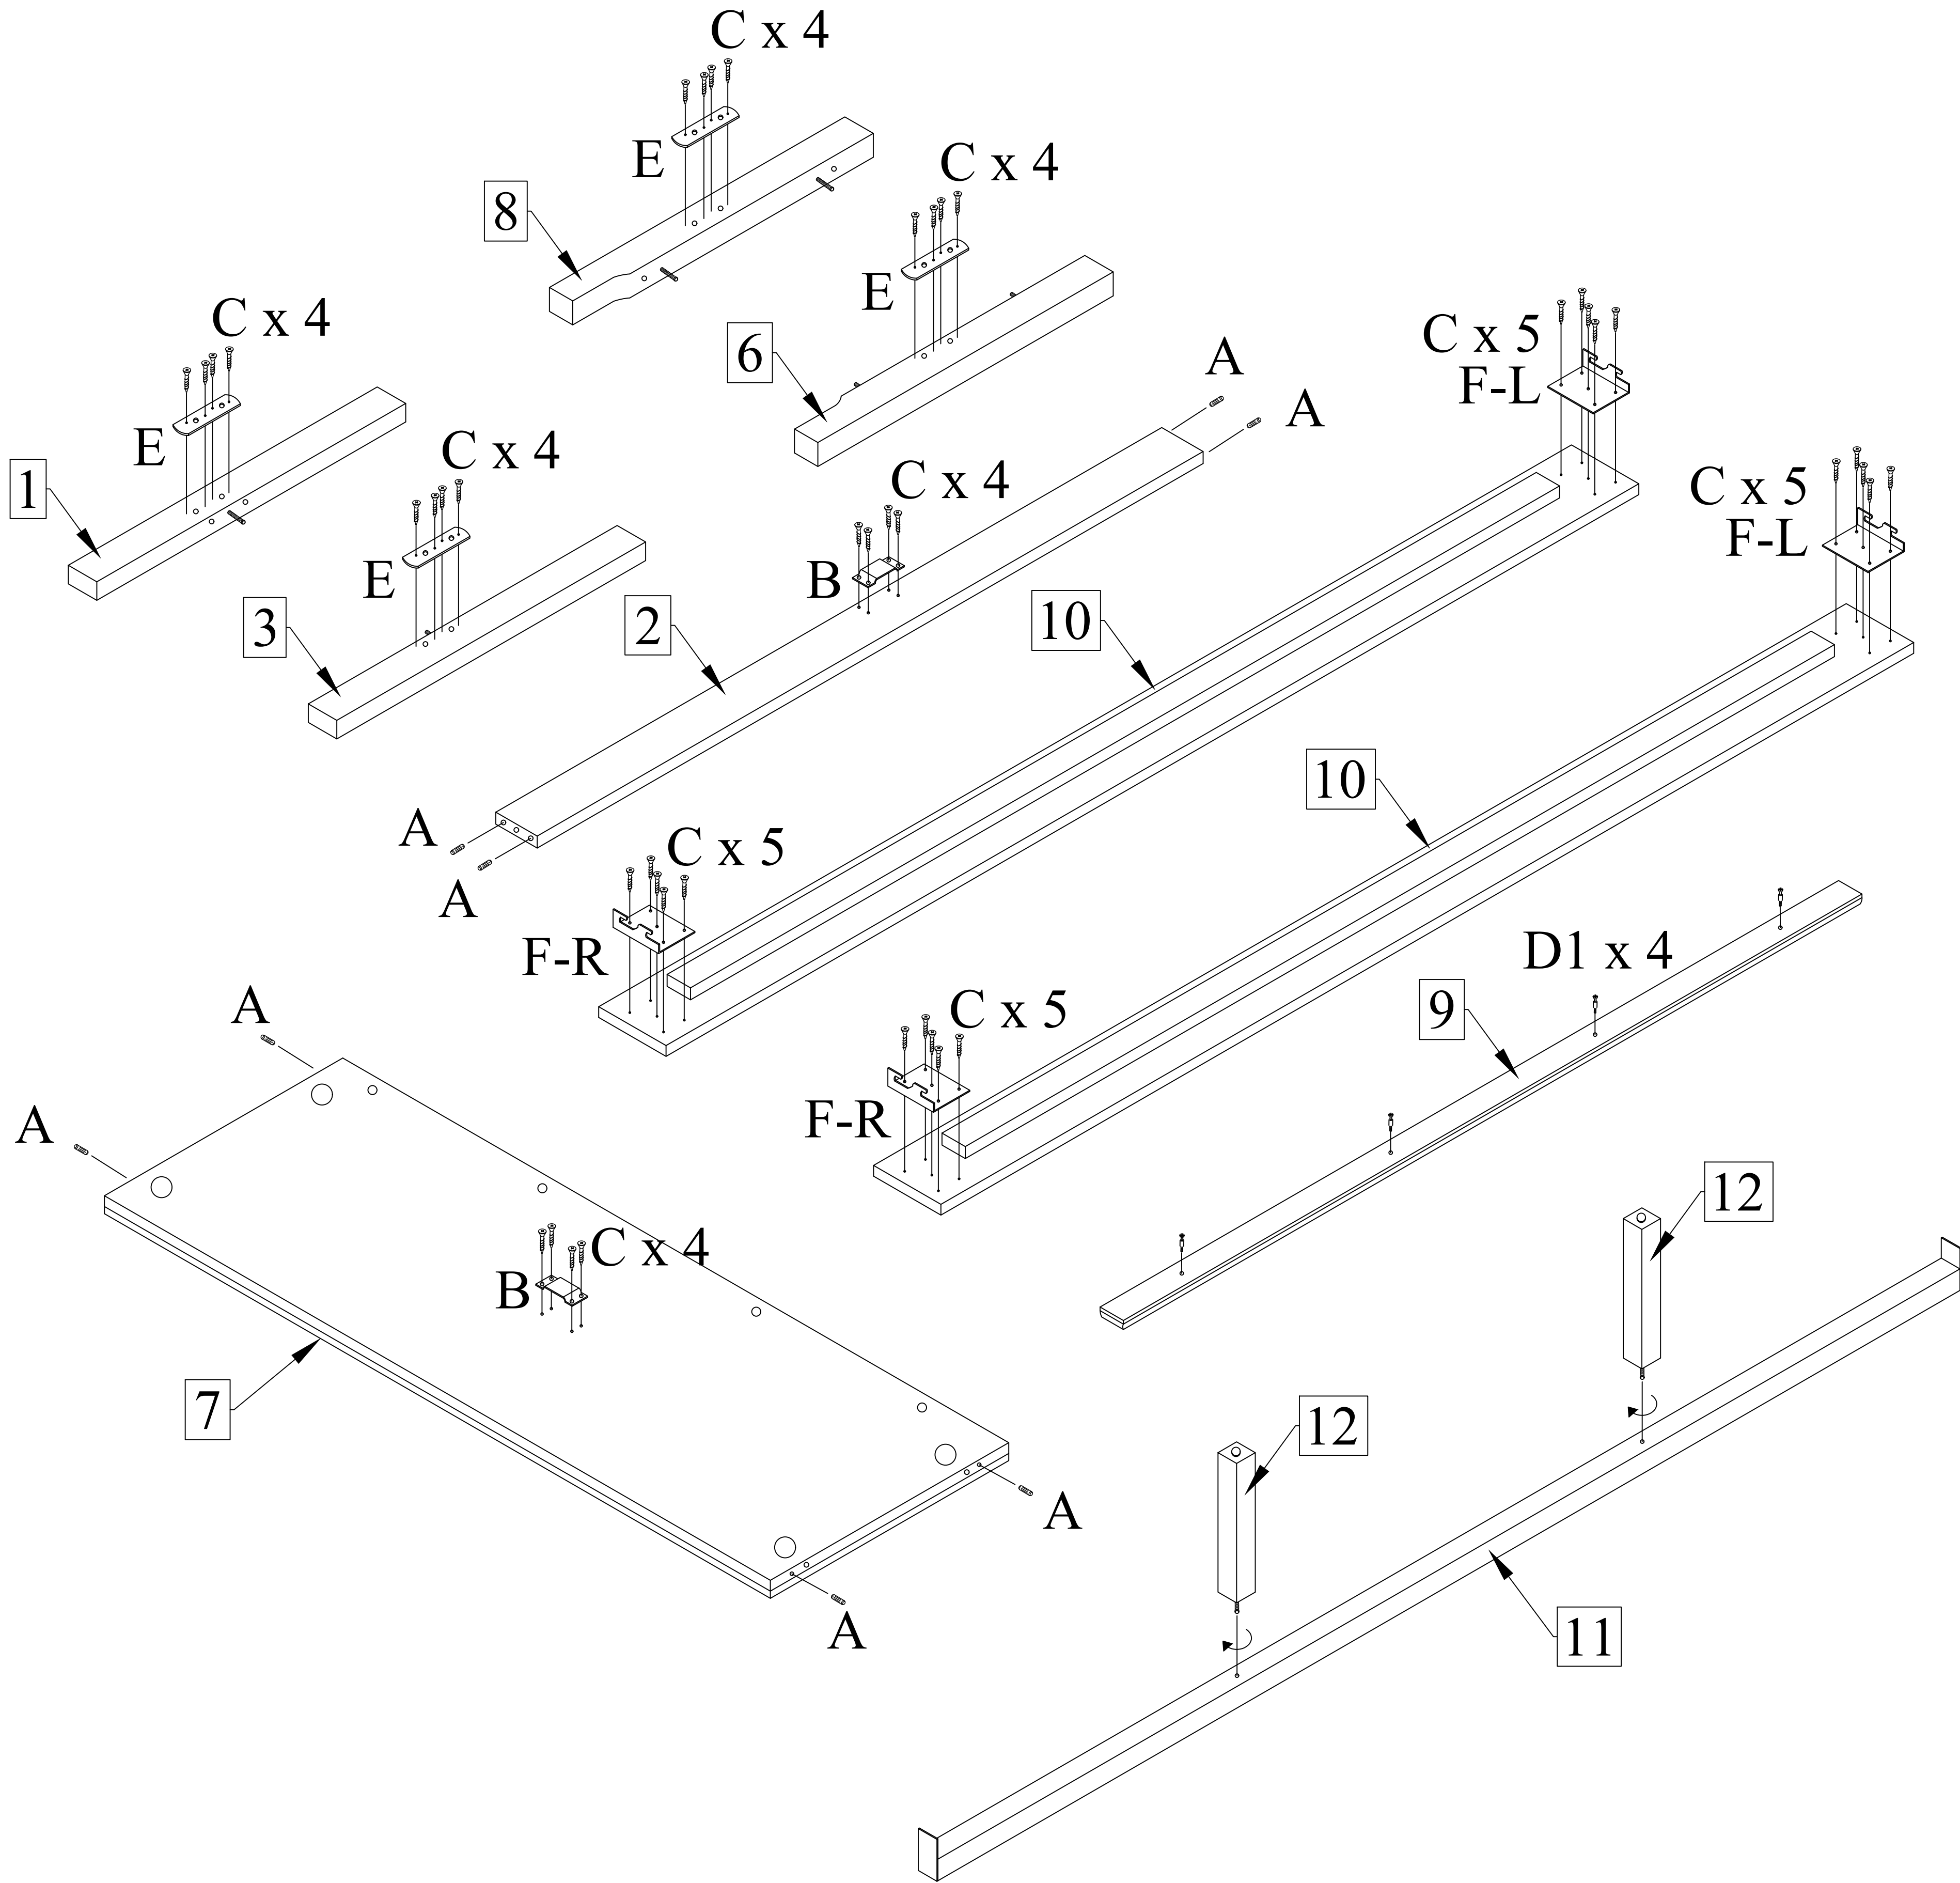


	A	Wood Dowel M8x30MM		8PCS
	B	U Bracket		2PCS
	C	Screw M3.5x16MM		44PCS
	D	Minifix	D1	4PCS
	E	Iron Plate		4PCS
	F	Bed Bracket - 2L2R	FL FR	4PCS




ASSEMBLY INSTRUCTIONS
Item No : WF299168AAK + WF299169AAK
Description : FULL BED



Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

Step 2 :Headboard (HB) assembly.
Connect HB Support Rail (2) to HB Lower Support L & R (1,3) and lock with Hex Nut (G) and Spring Washer (H) using Spannaer (I) provided.
Attached the connected part and Headboard (4) to HB Back Support (5), using Allen Key (L), JCBC (J), Spring Washer (H) and Flat Washer (K).

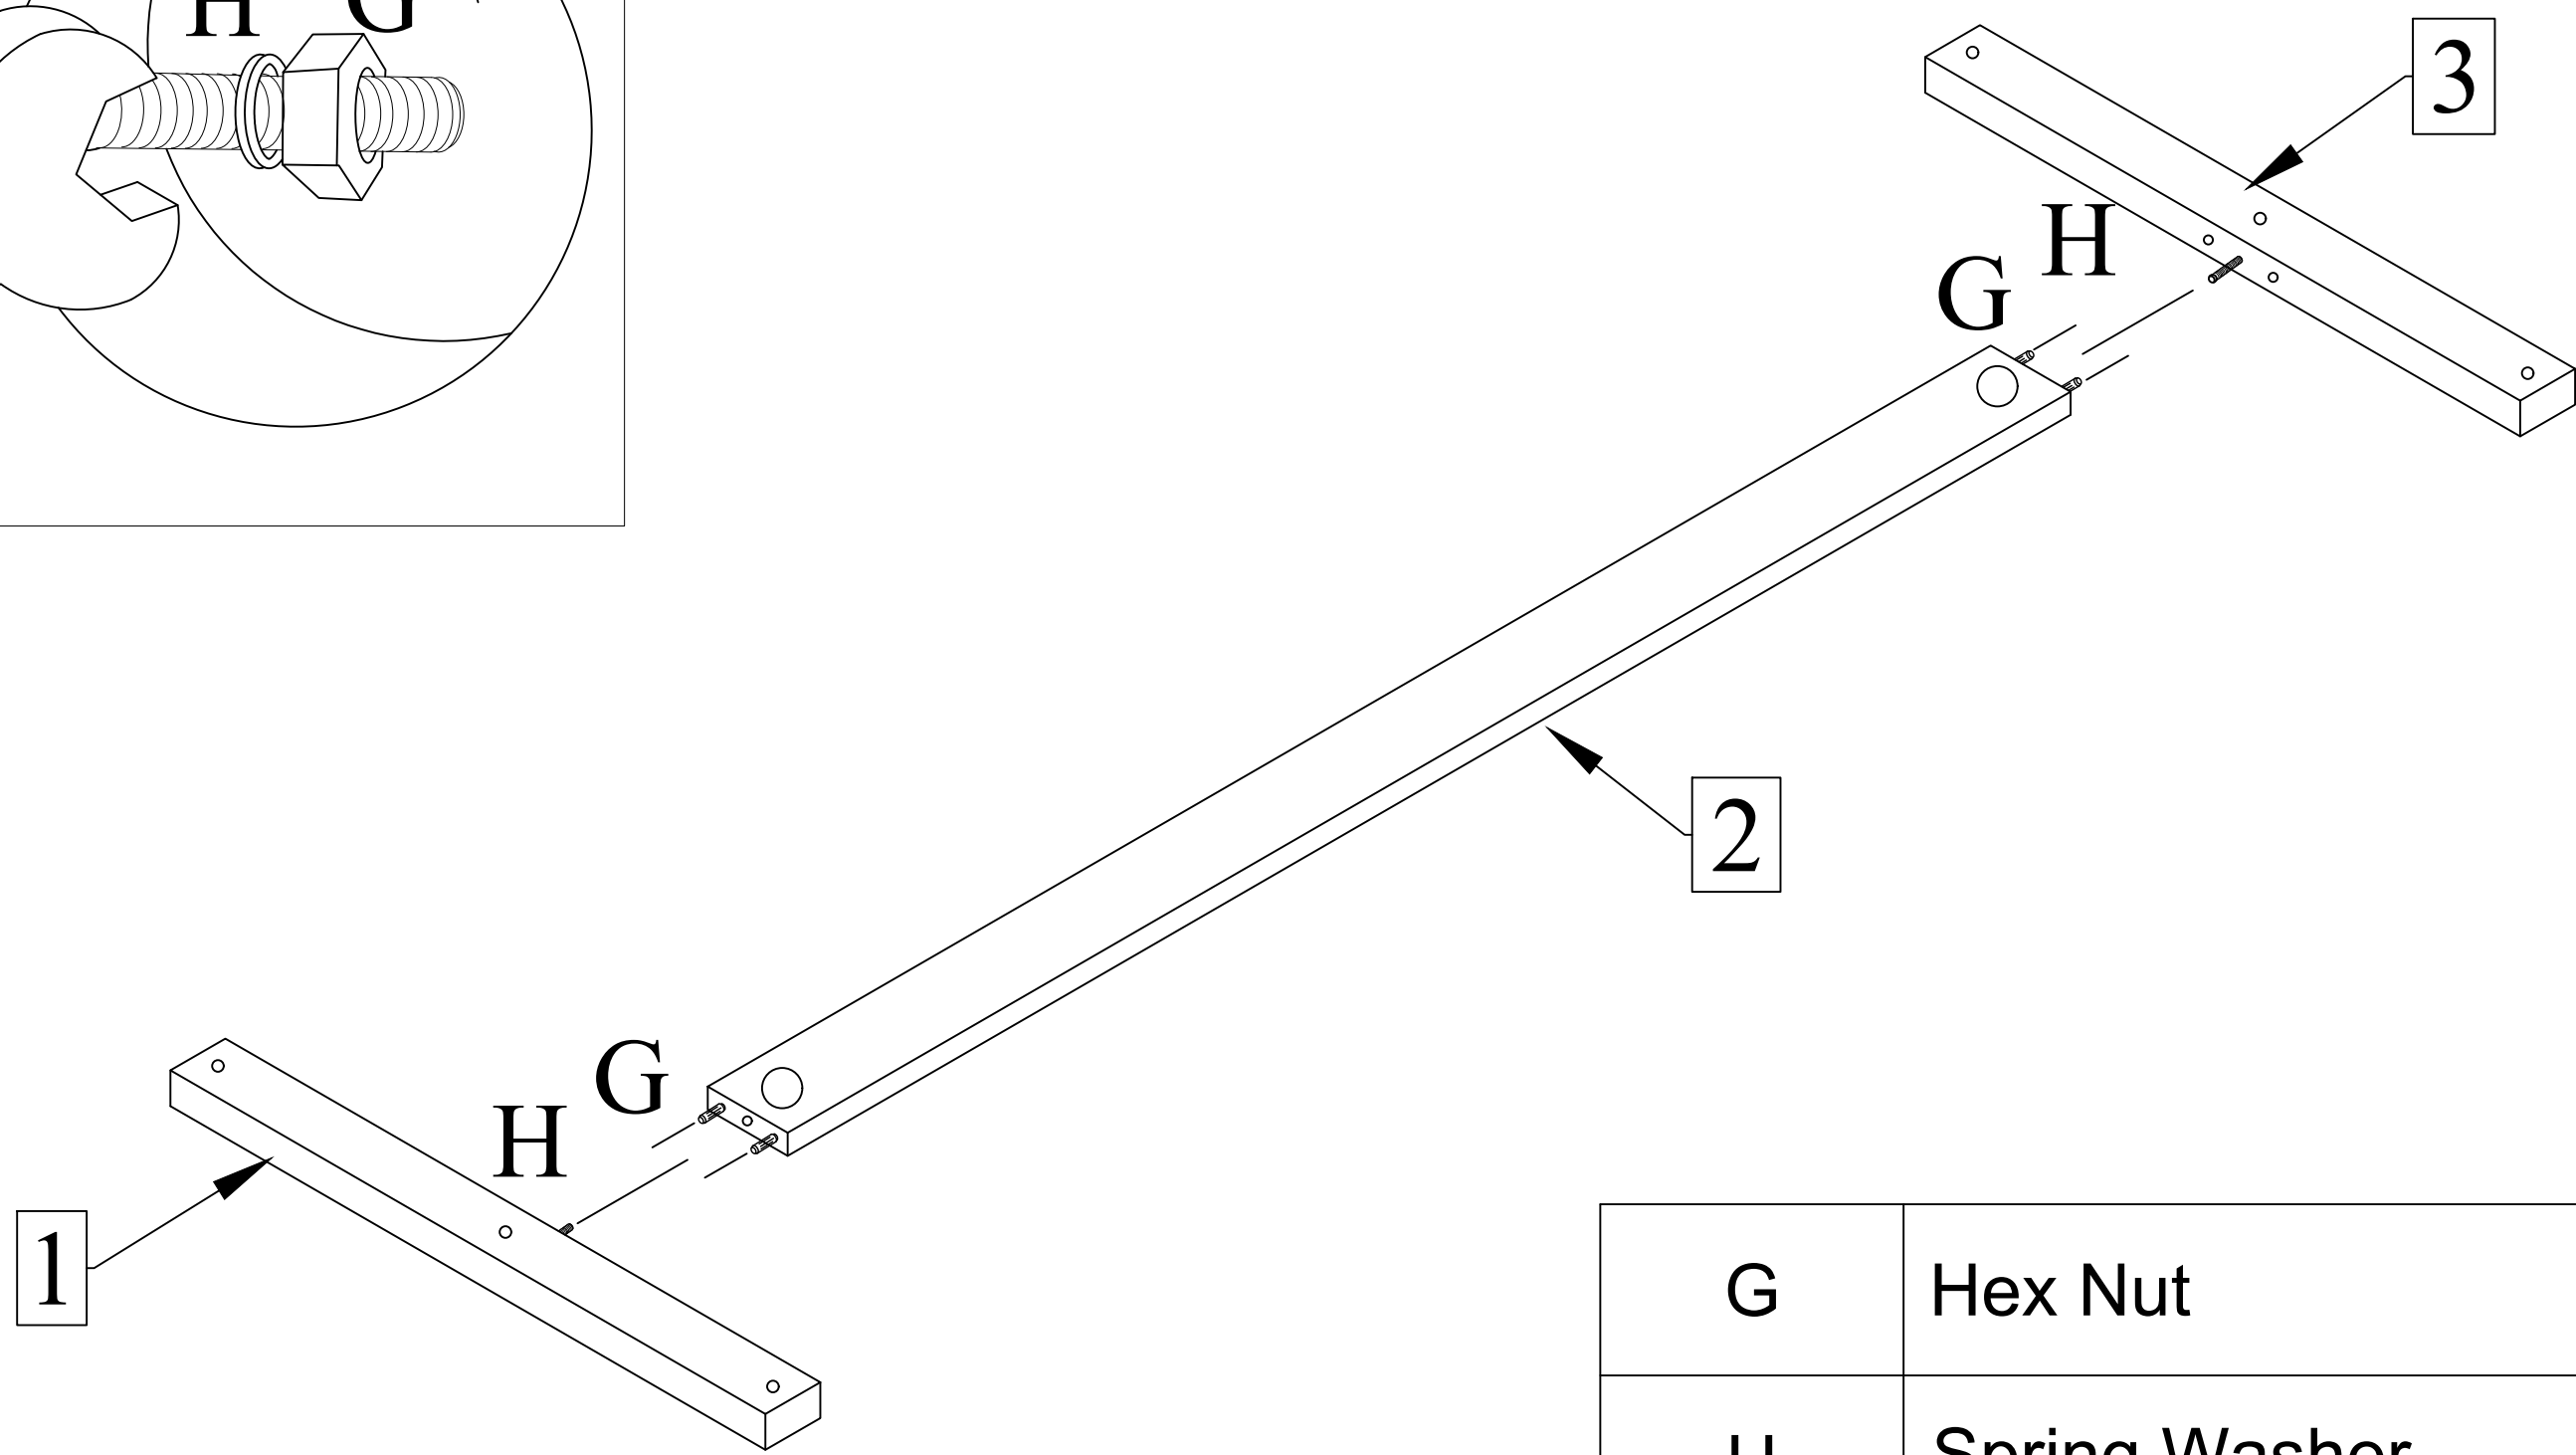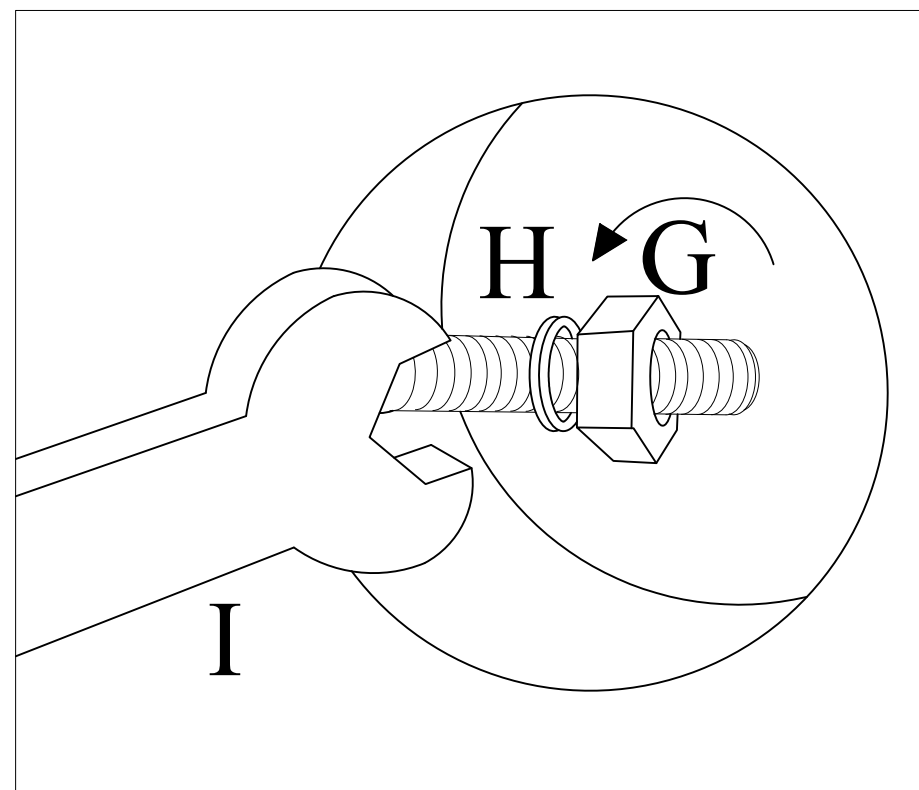

G	Hex Nut		2PCS
H	Spring Washer		2PCS
I	Spanner		1PC

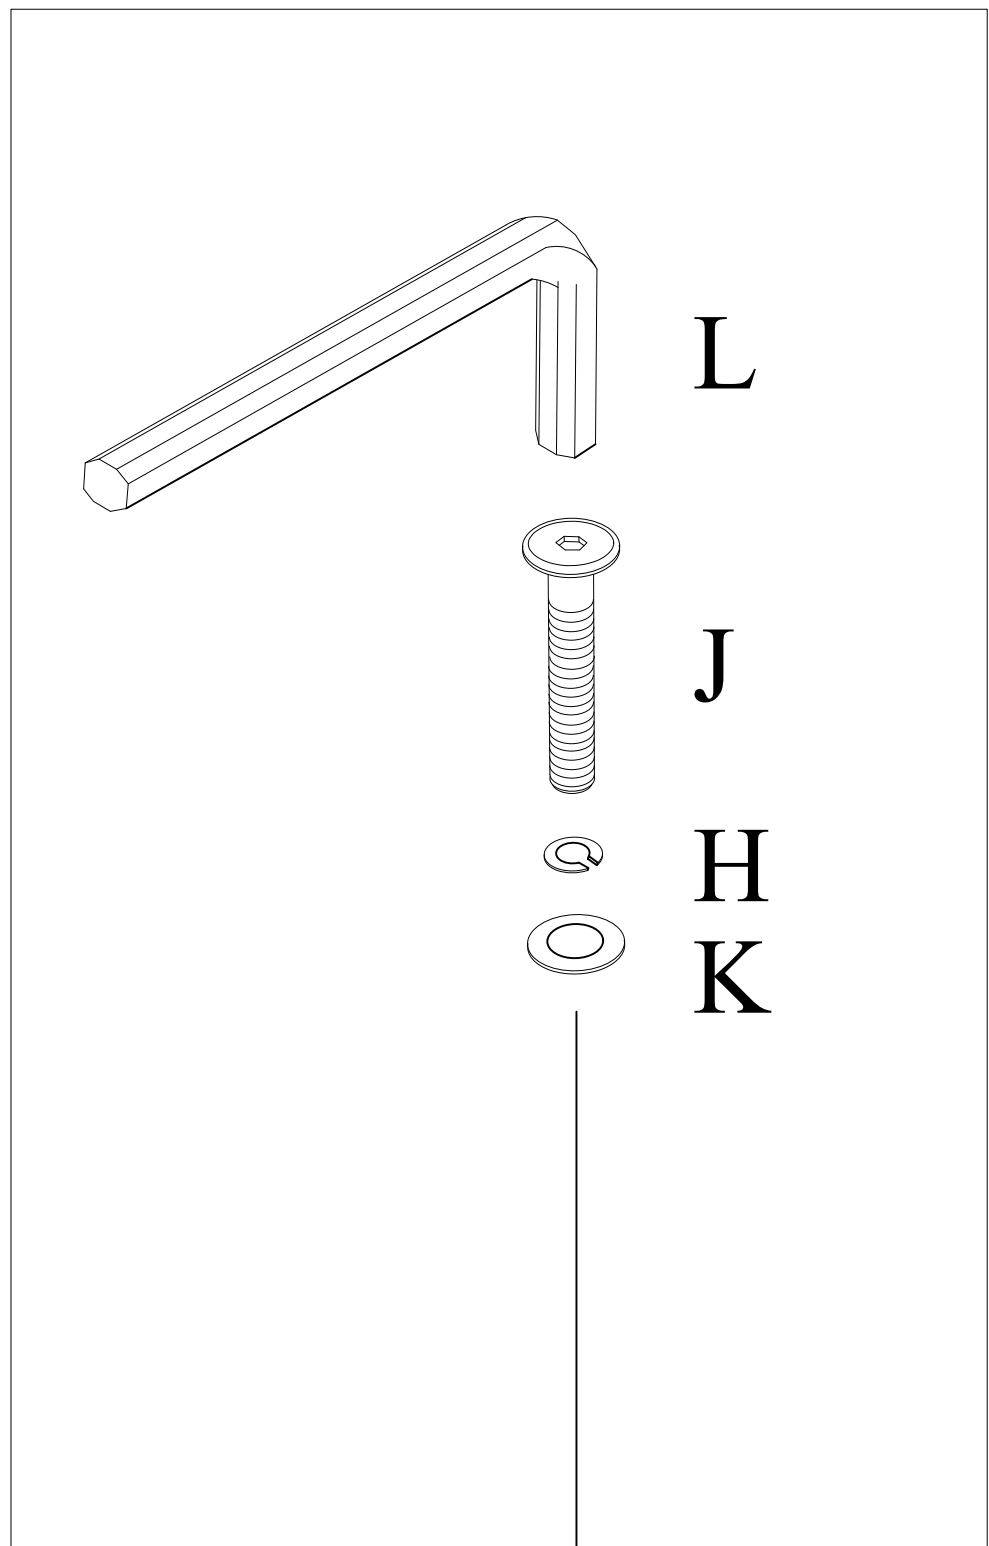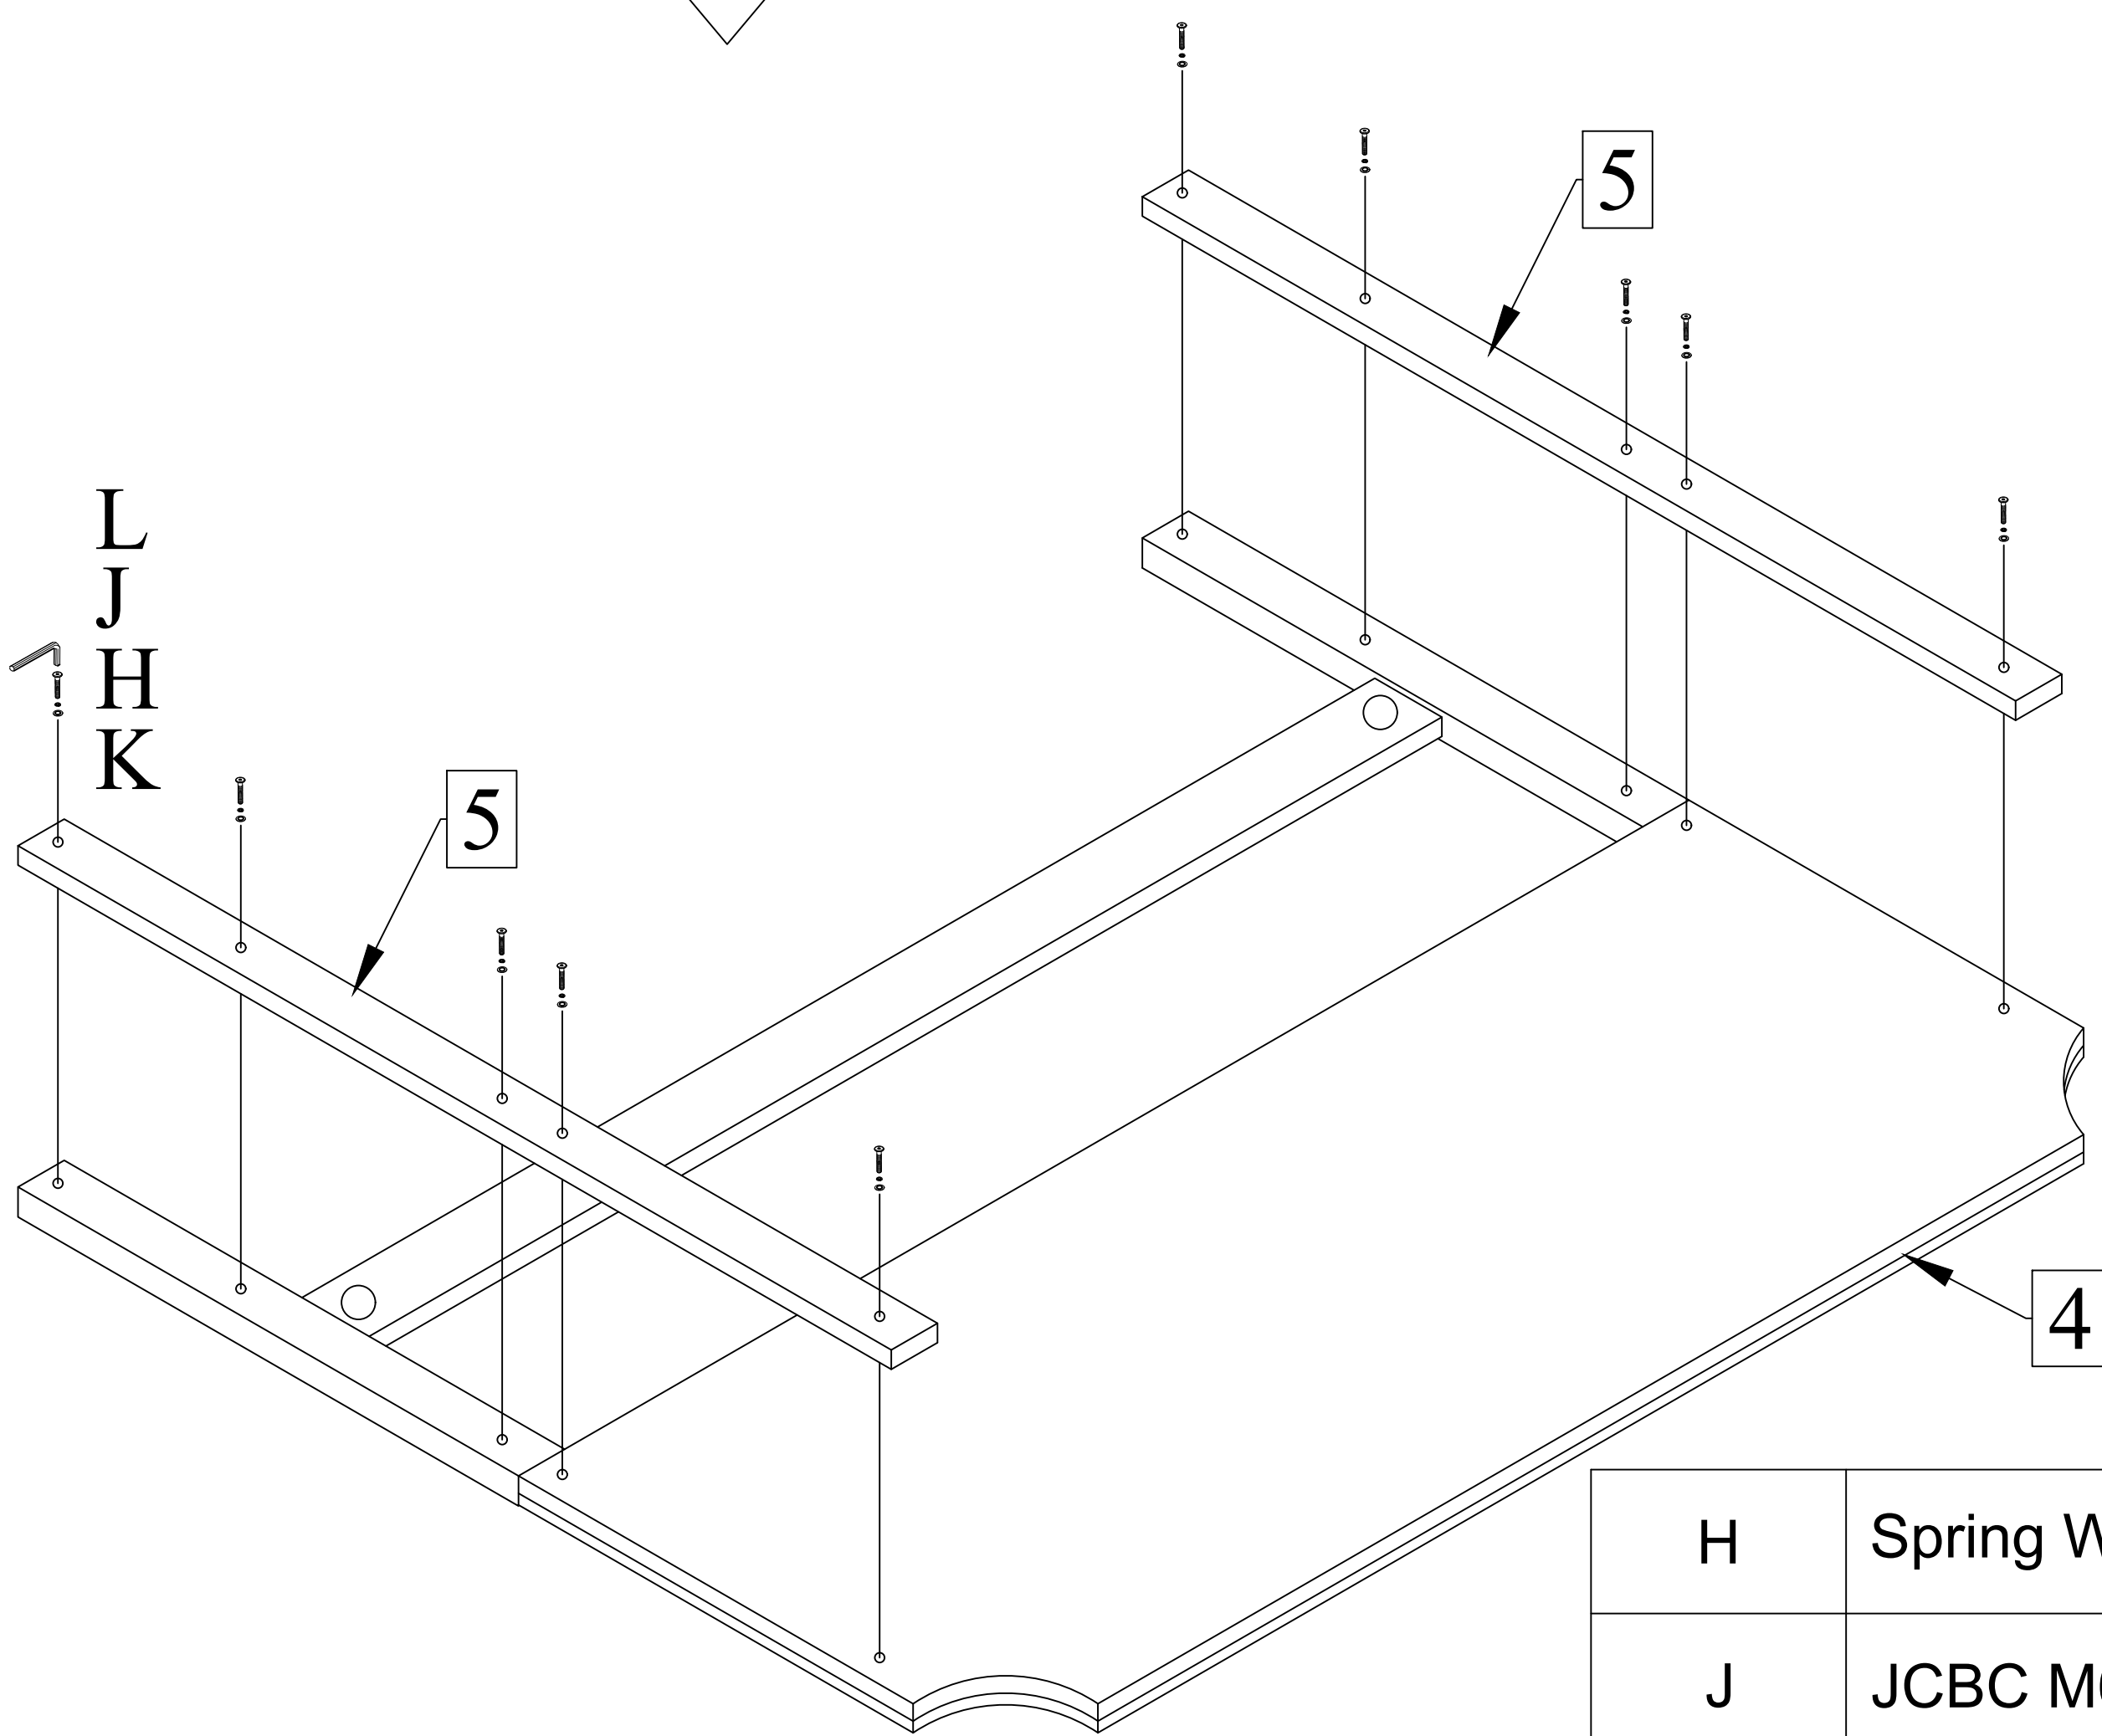
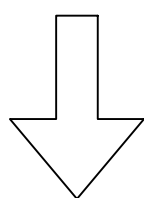


H	Spring Washer		10PCS
J	JCBC M6 x 35mm		10PCS
K	Flat Washer		10PCS
L	Allen Key m4		1PC




ASSEMBLY INSTRUCTIONS
Item No : WF299168AAK + WF299169AAK
Description : FULL BED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

Step 3 :Footboard (FB) assembly.
Connect Footboard (7) to FB Pillar L & R (6,8) and lock with Hex Nut (G) and Spring Washer (H) using Spanner (I) provided.
Connect FB Crown (9) to the Footboard and lock with Minifix Cap (D2)

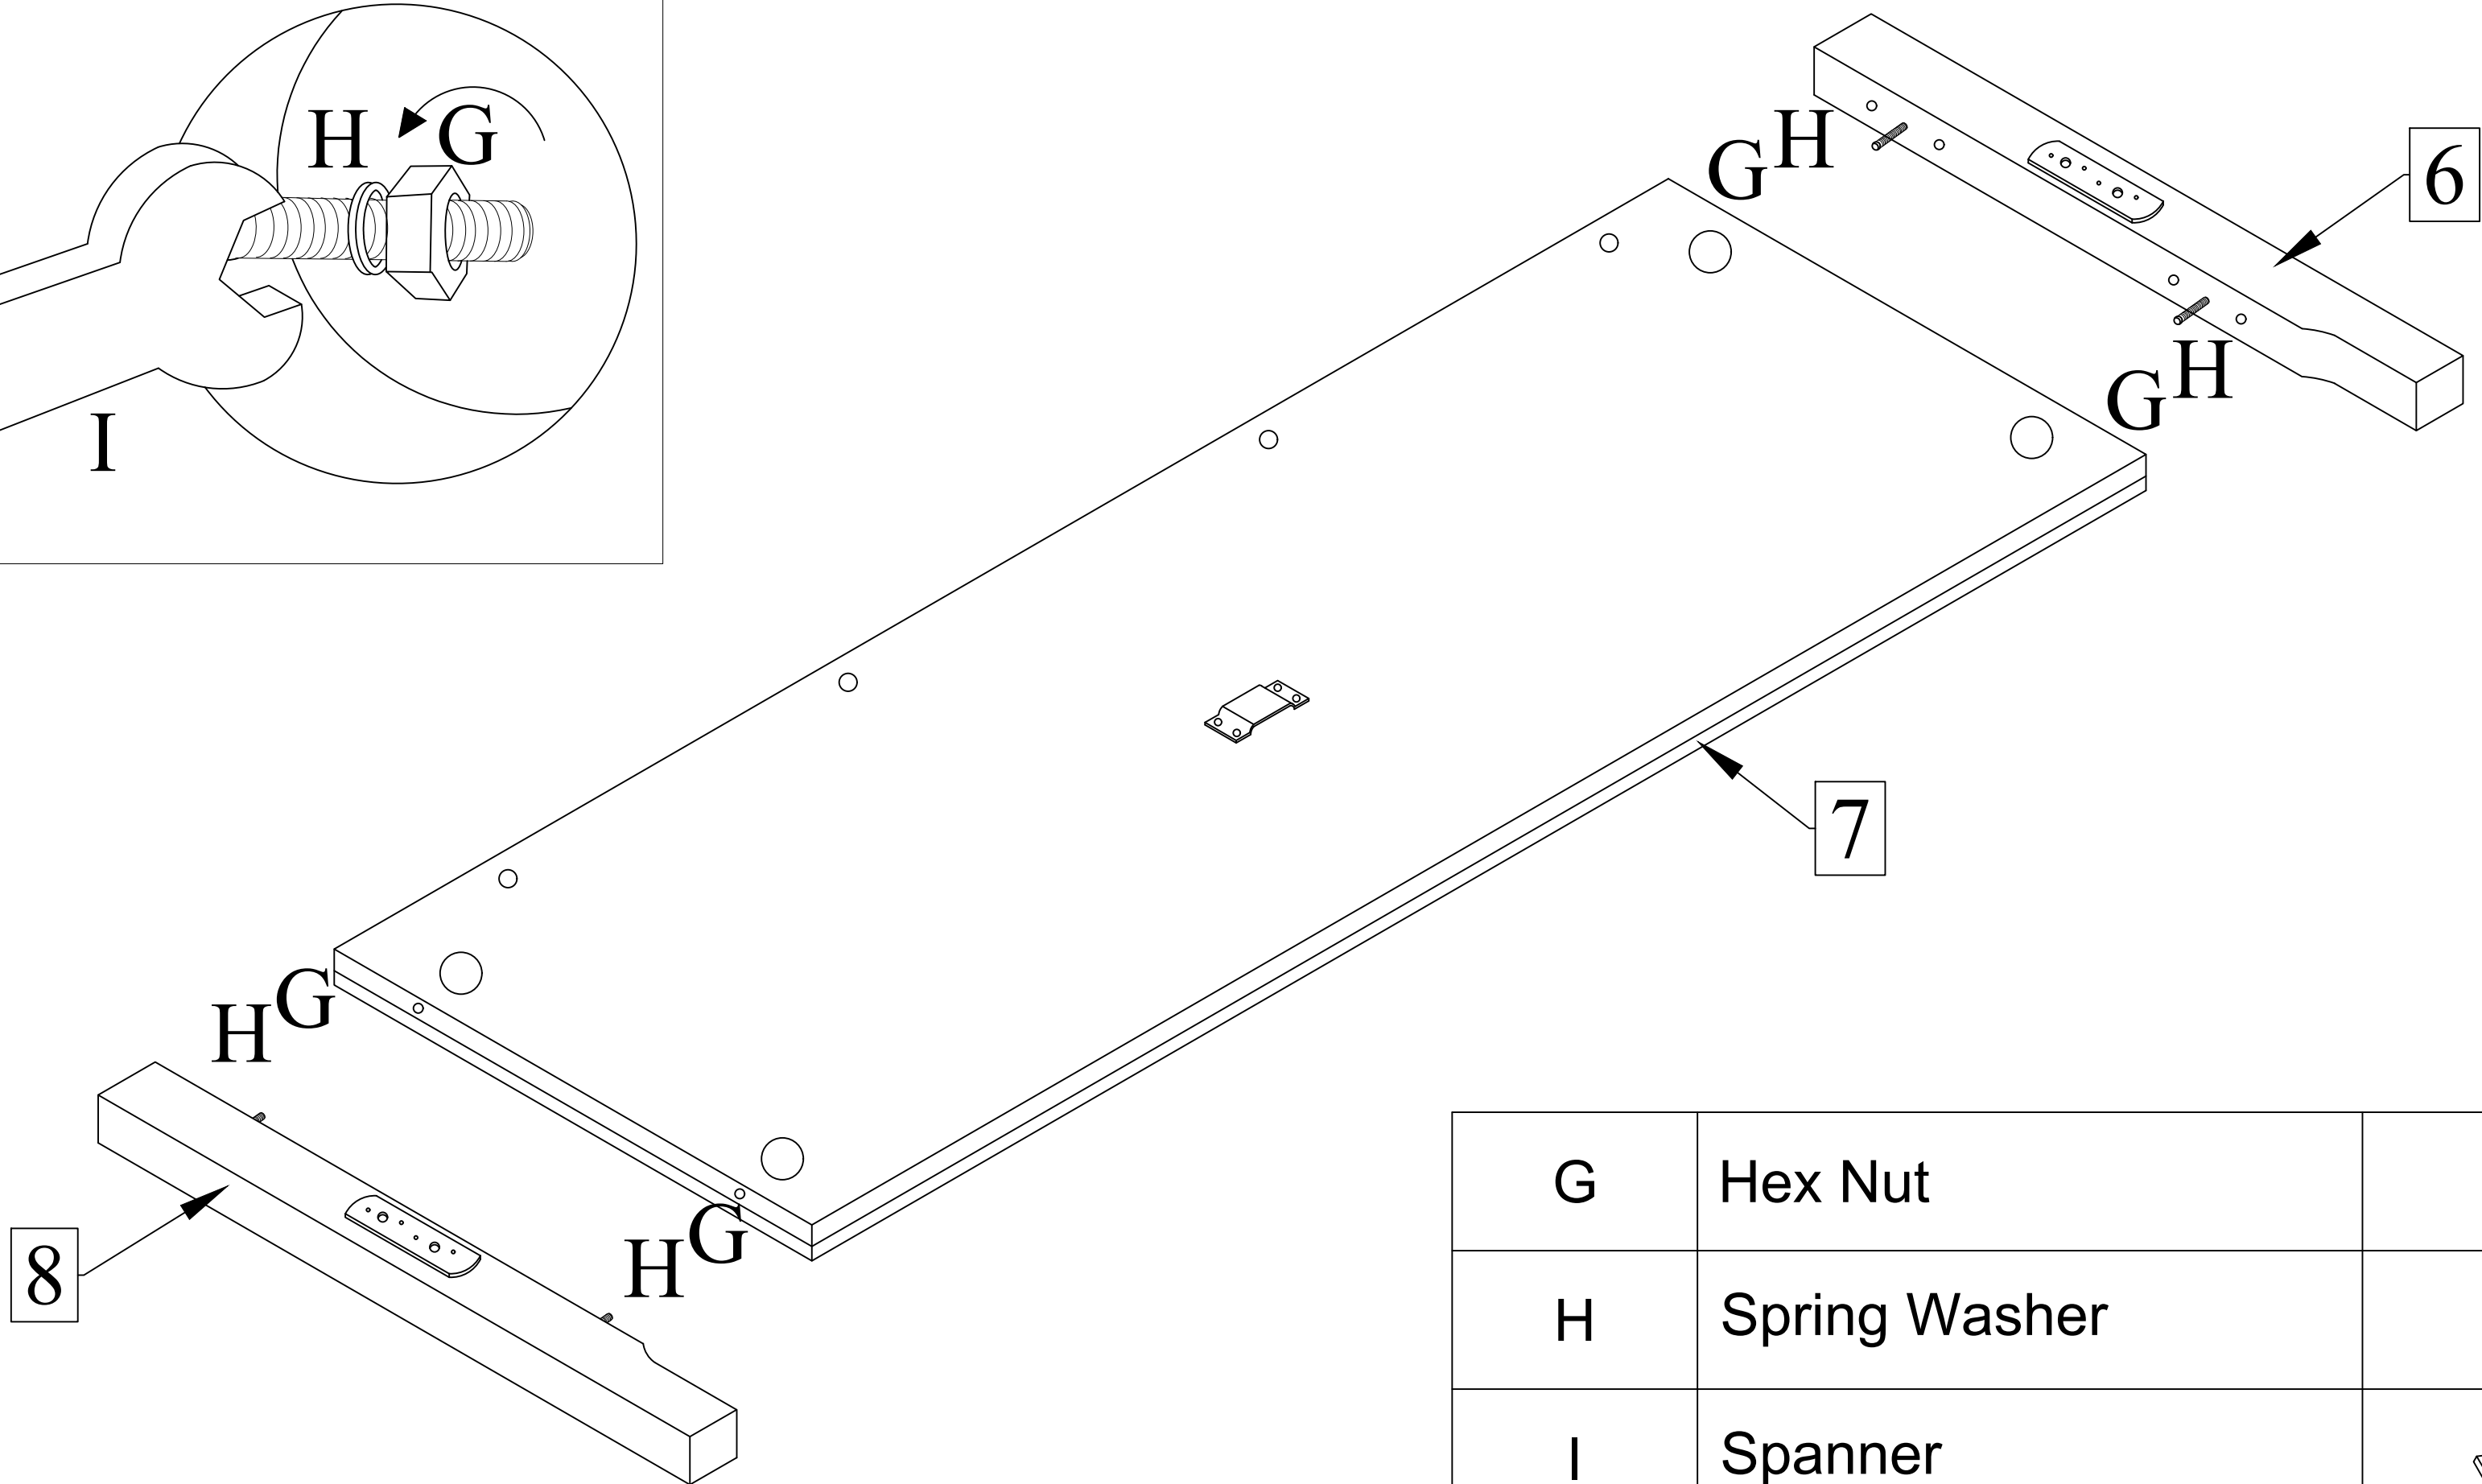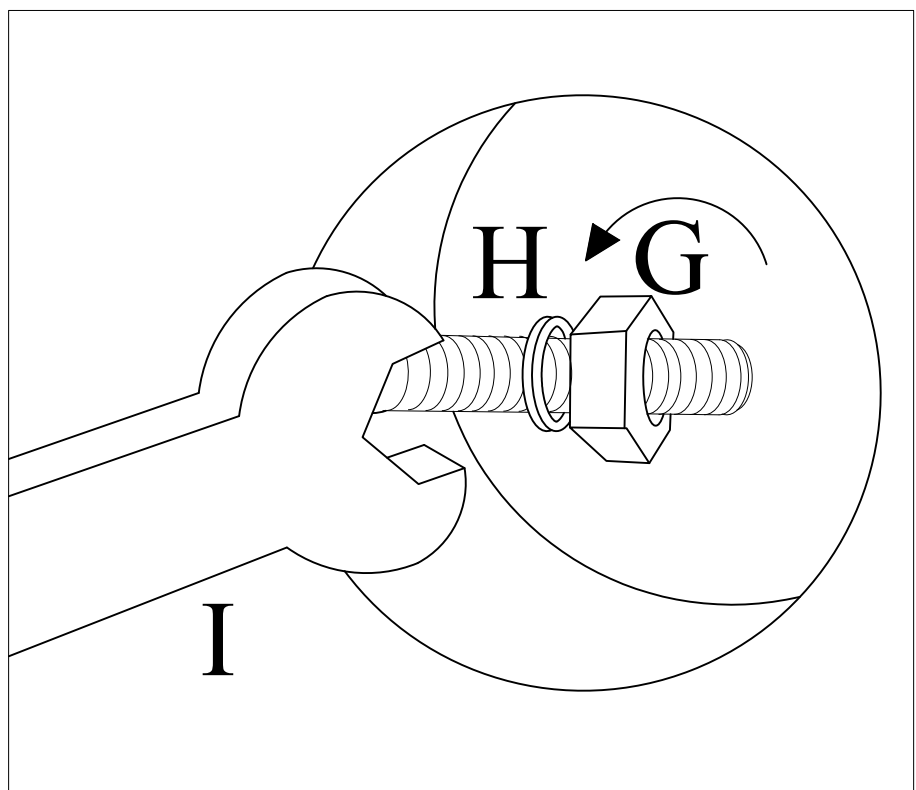

G	Hex Nut		4PCS
H	Spring Washer		4PCS
I	Spanner		1PC

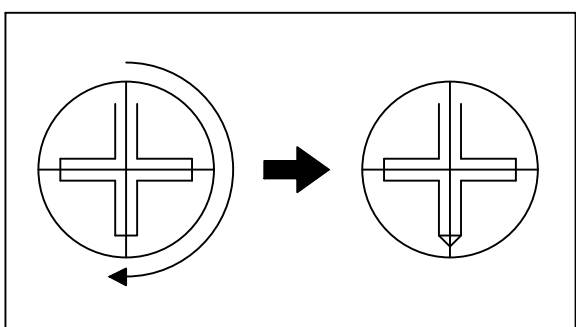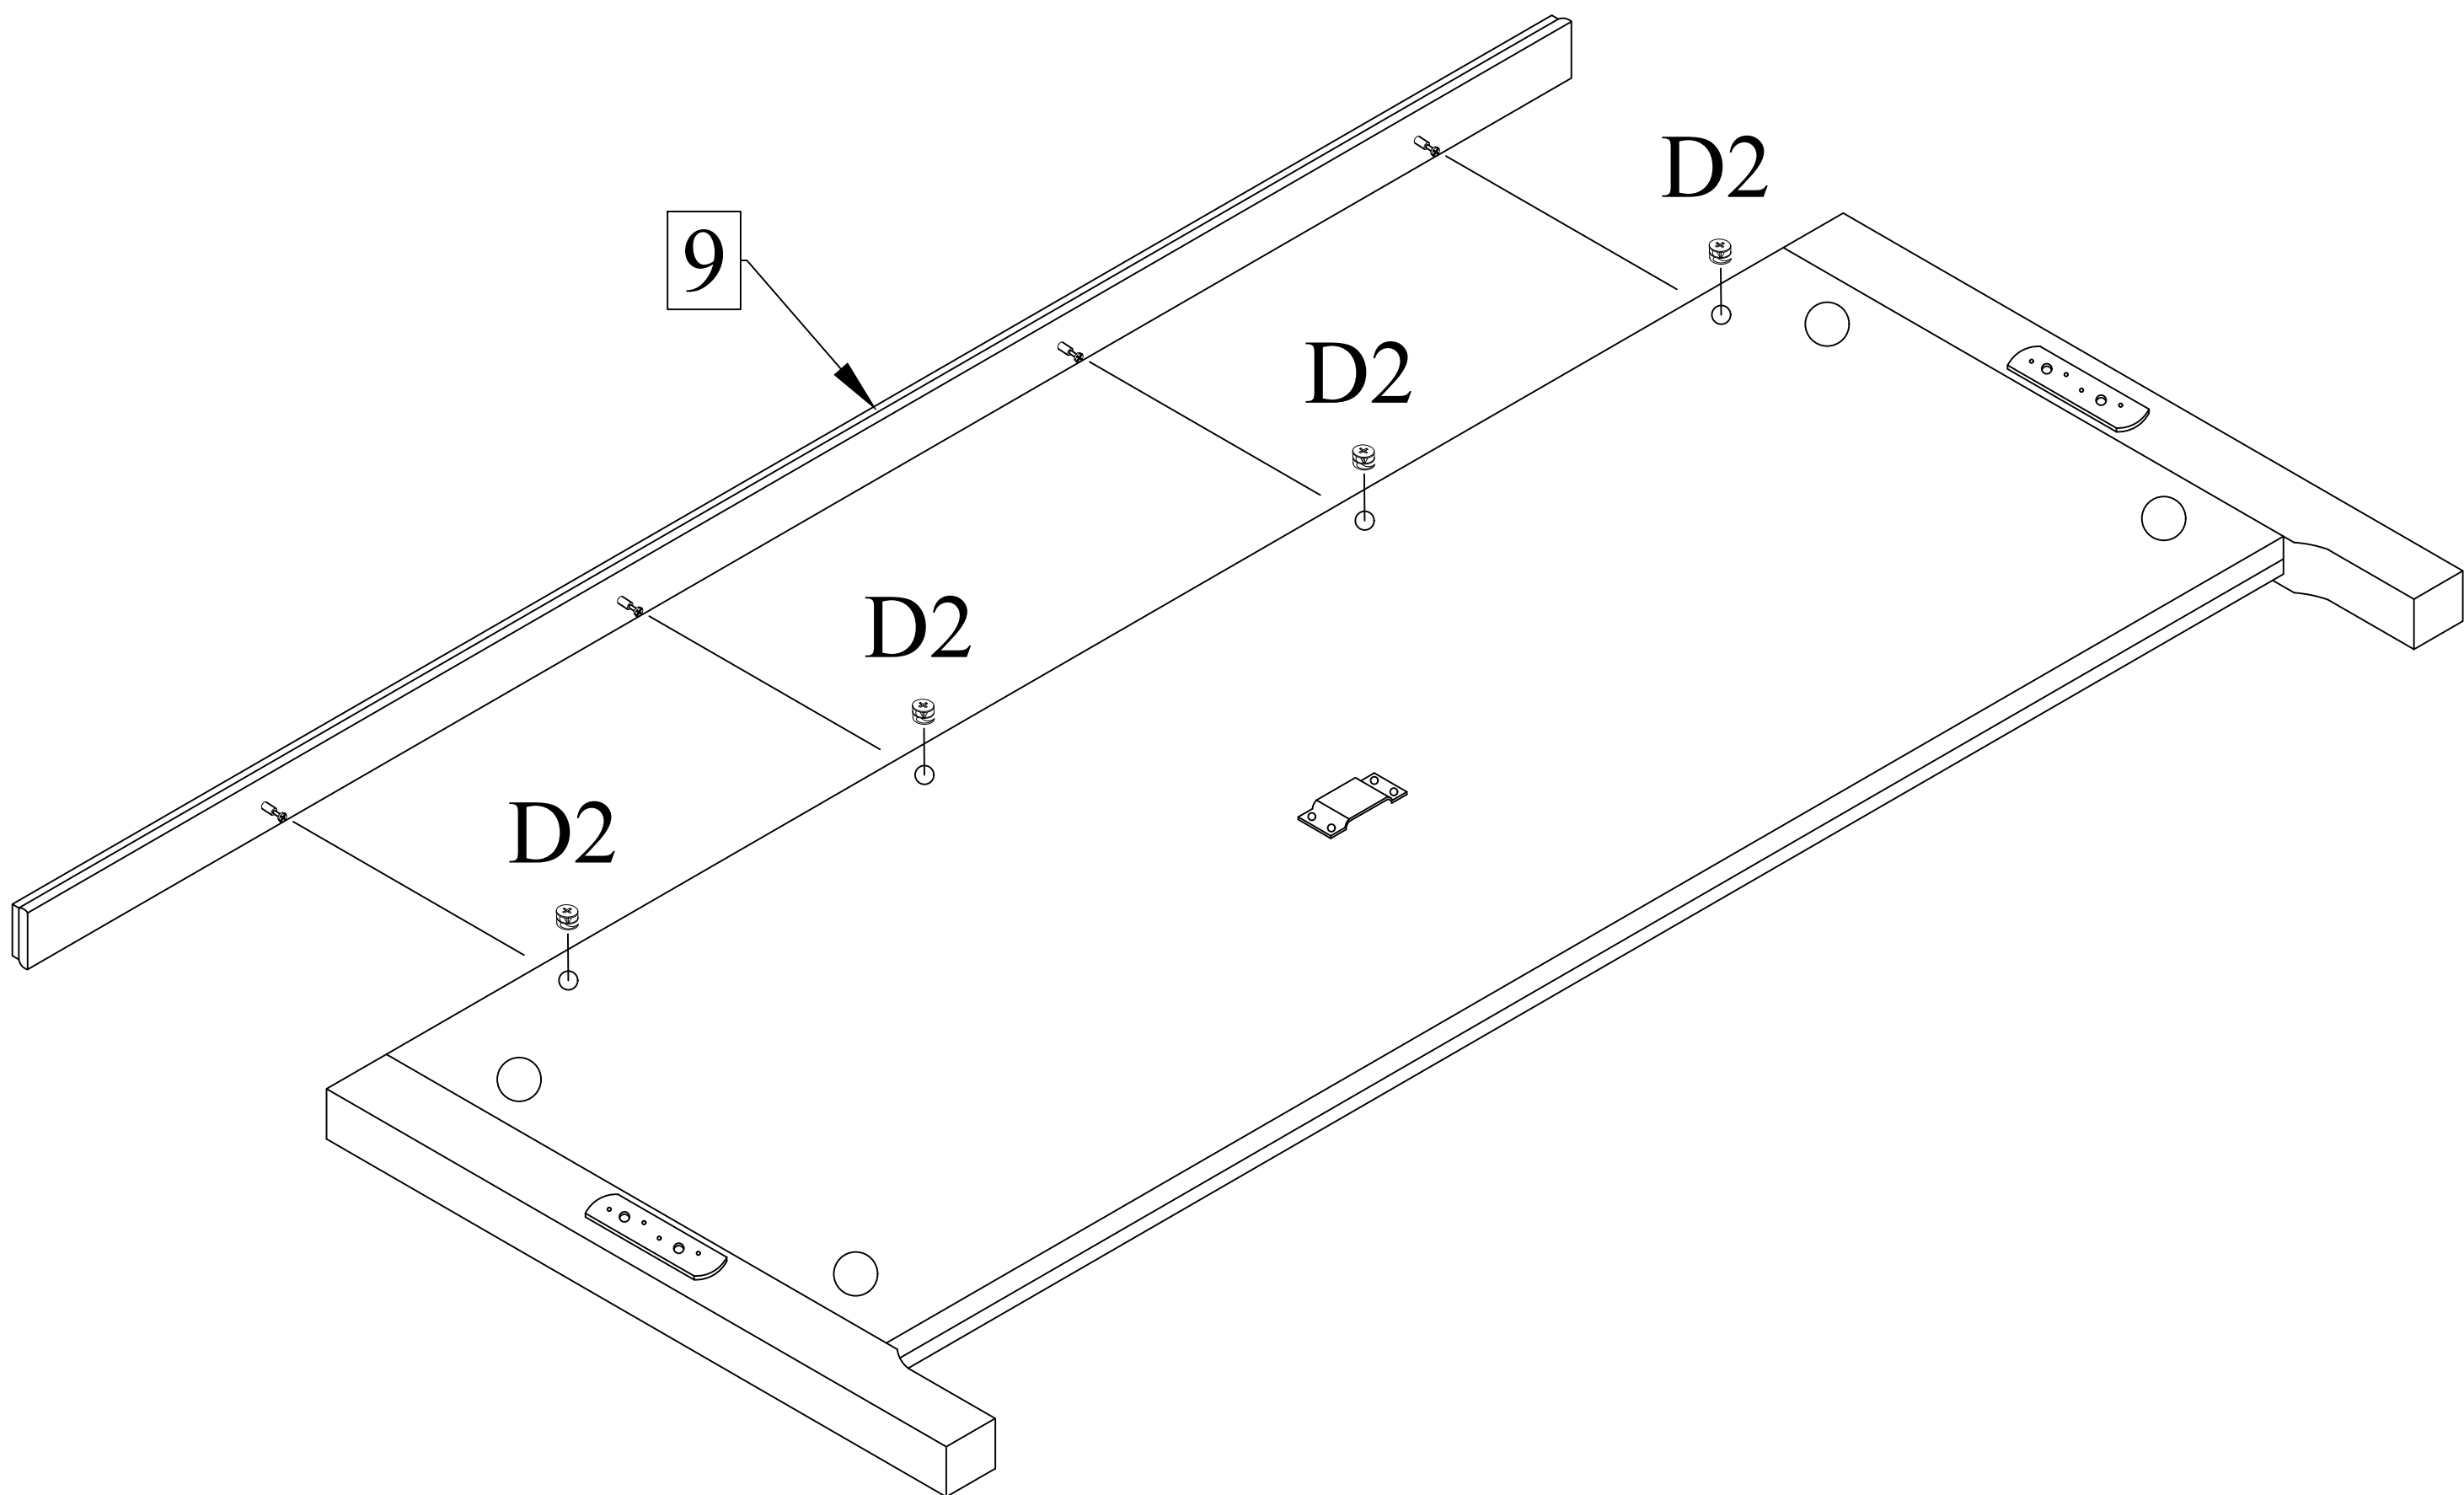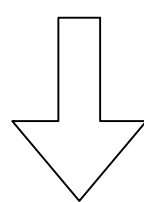





Lock Minifix cap clockwise


D	Minifix Cap	D2 	4PCS
---	-------------	--	------

ASSEMBLY INSTRUCTIONS
Item No : WF299168AAK + WF299169AAK
Description : FULL BED



Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

Step 4 : Connect Bed Side Rails (10) to Headboard and Footboard with Bolt (M) using Allen Key M5 (N)

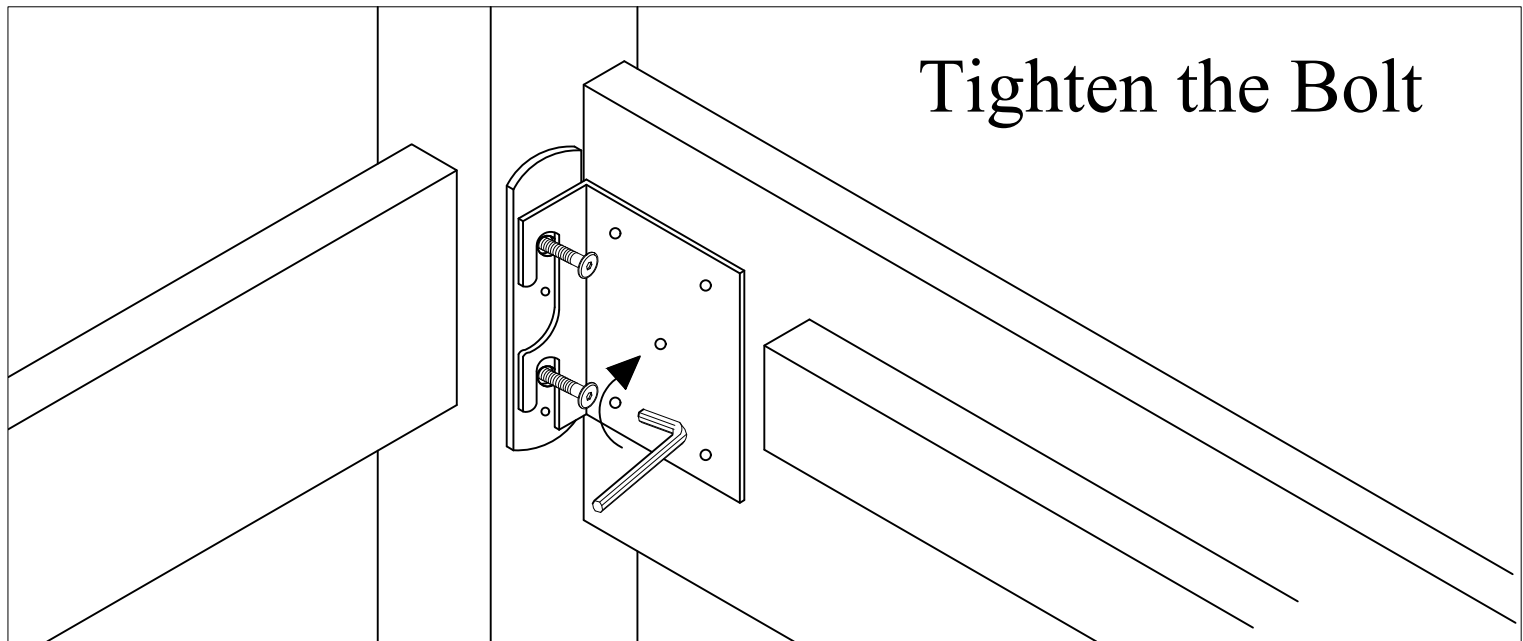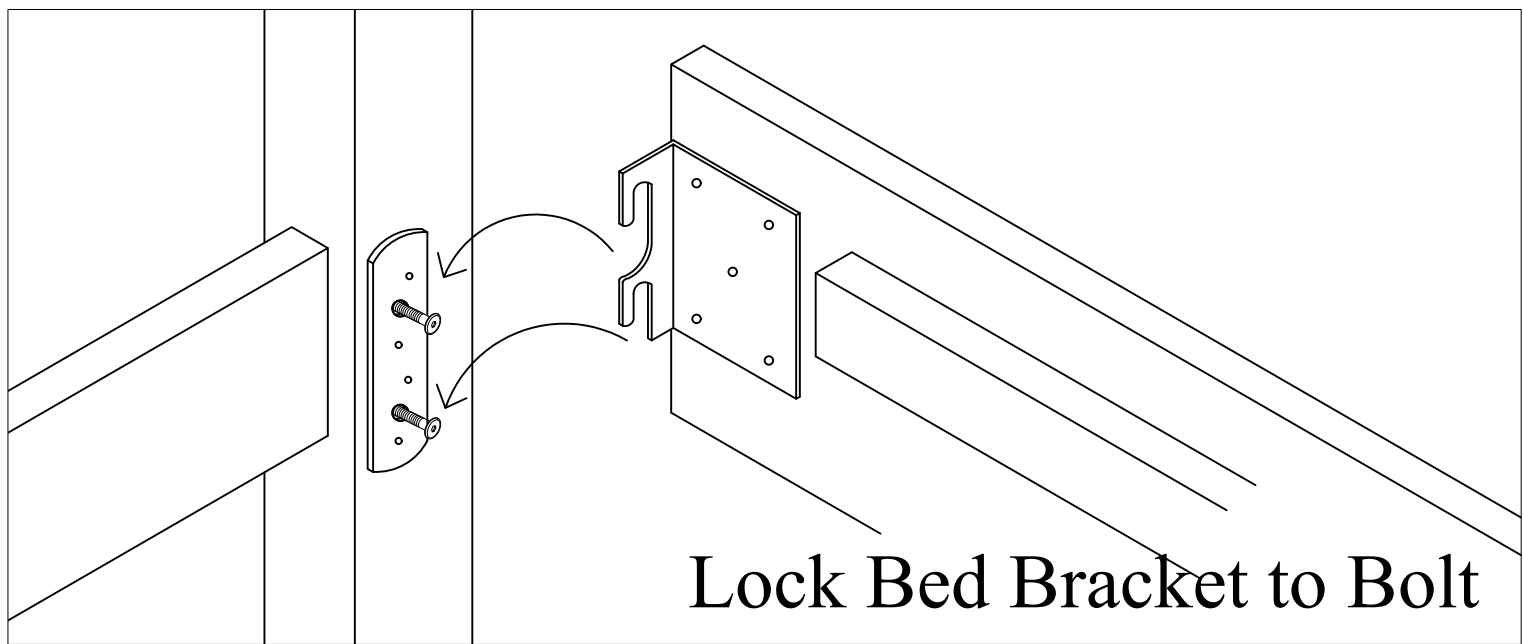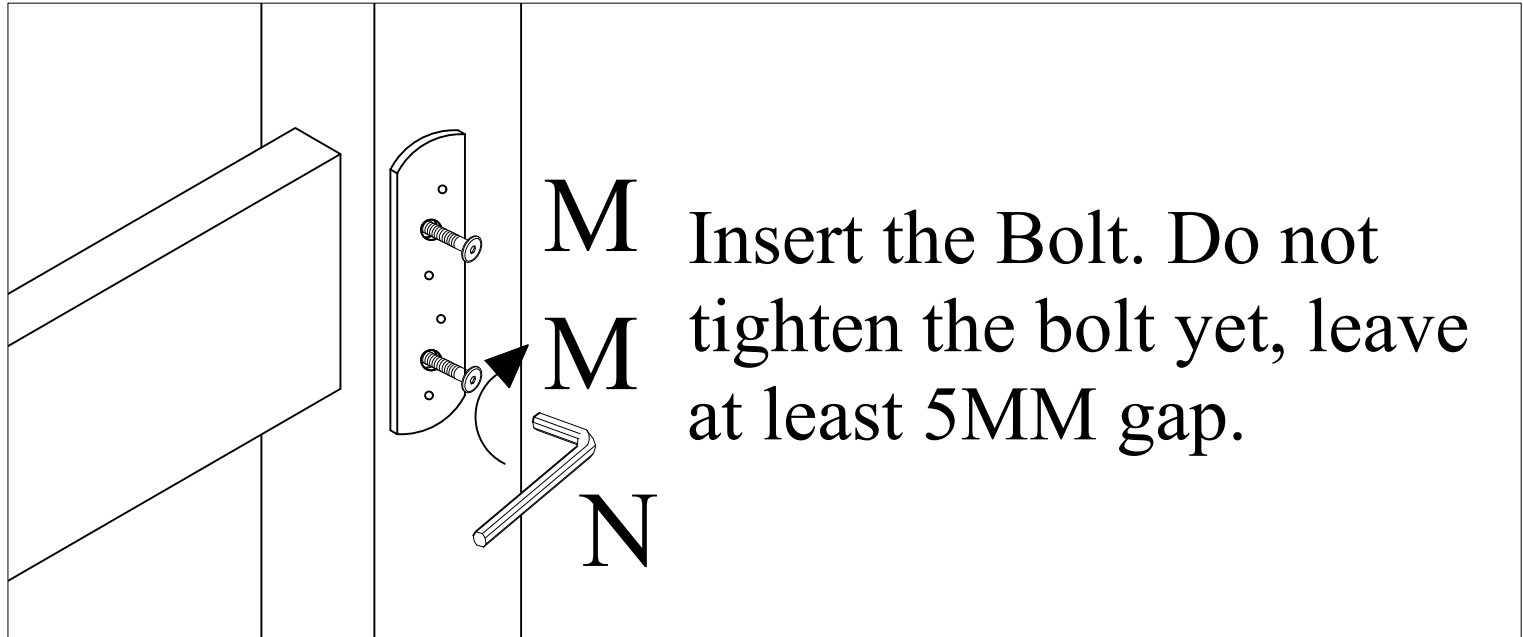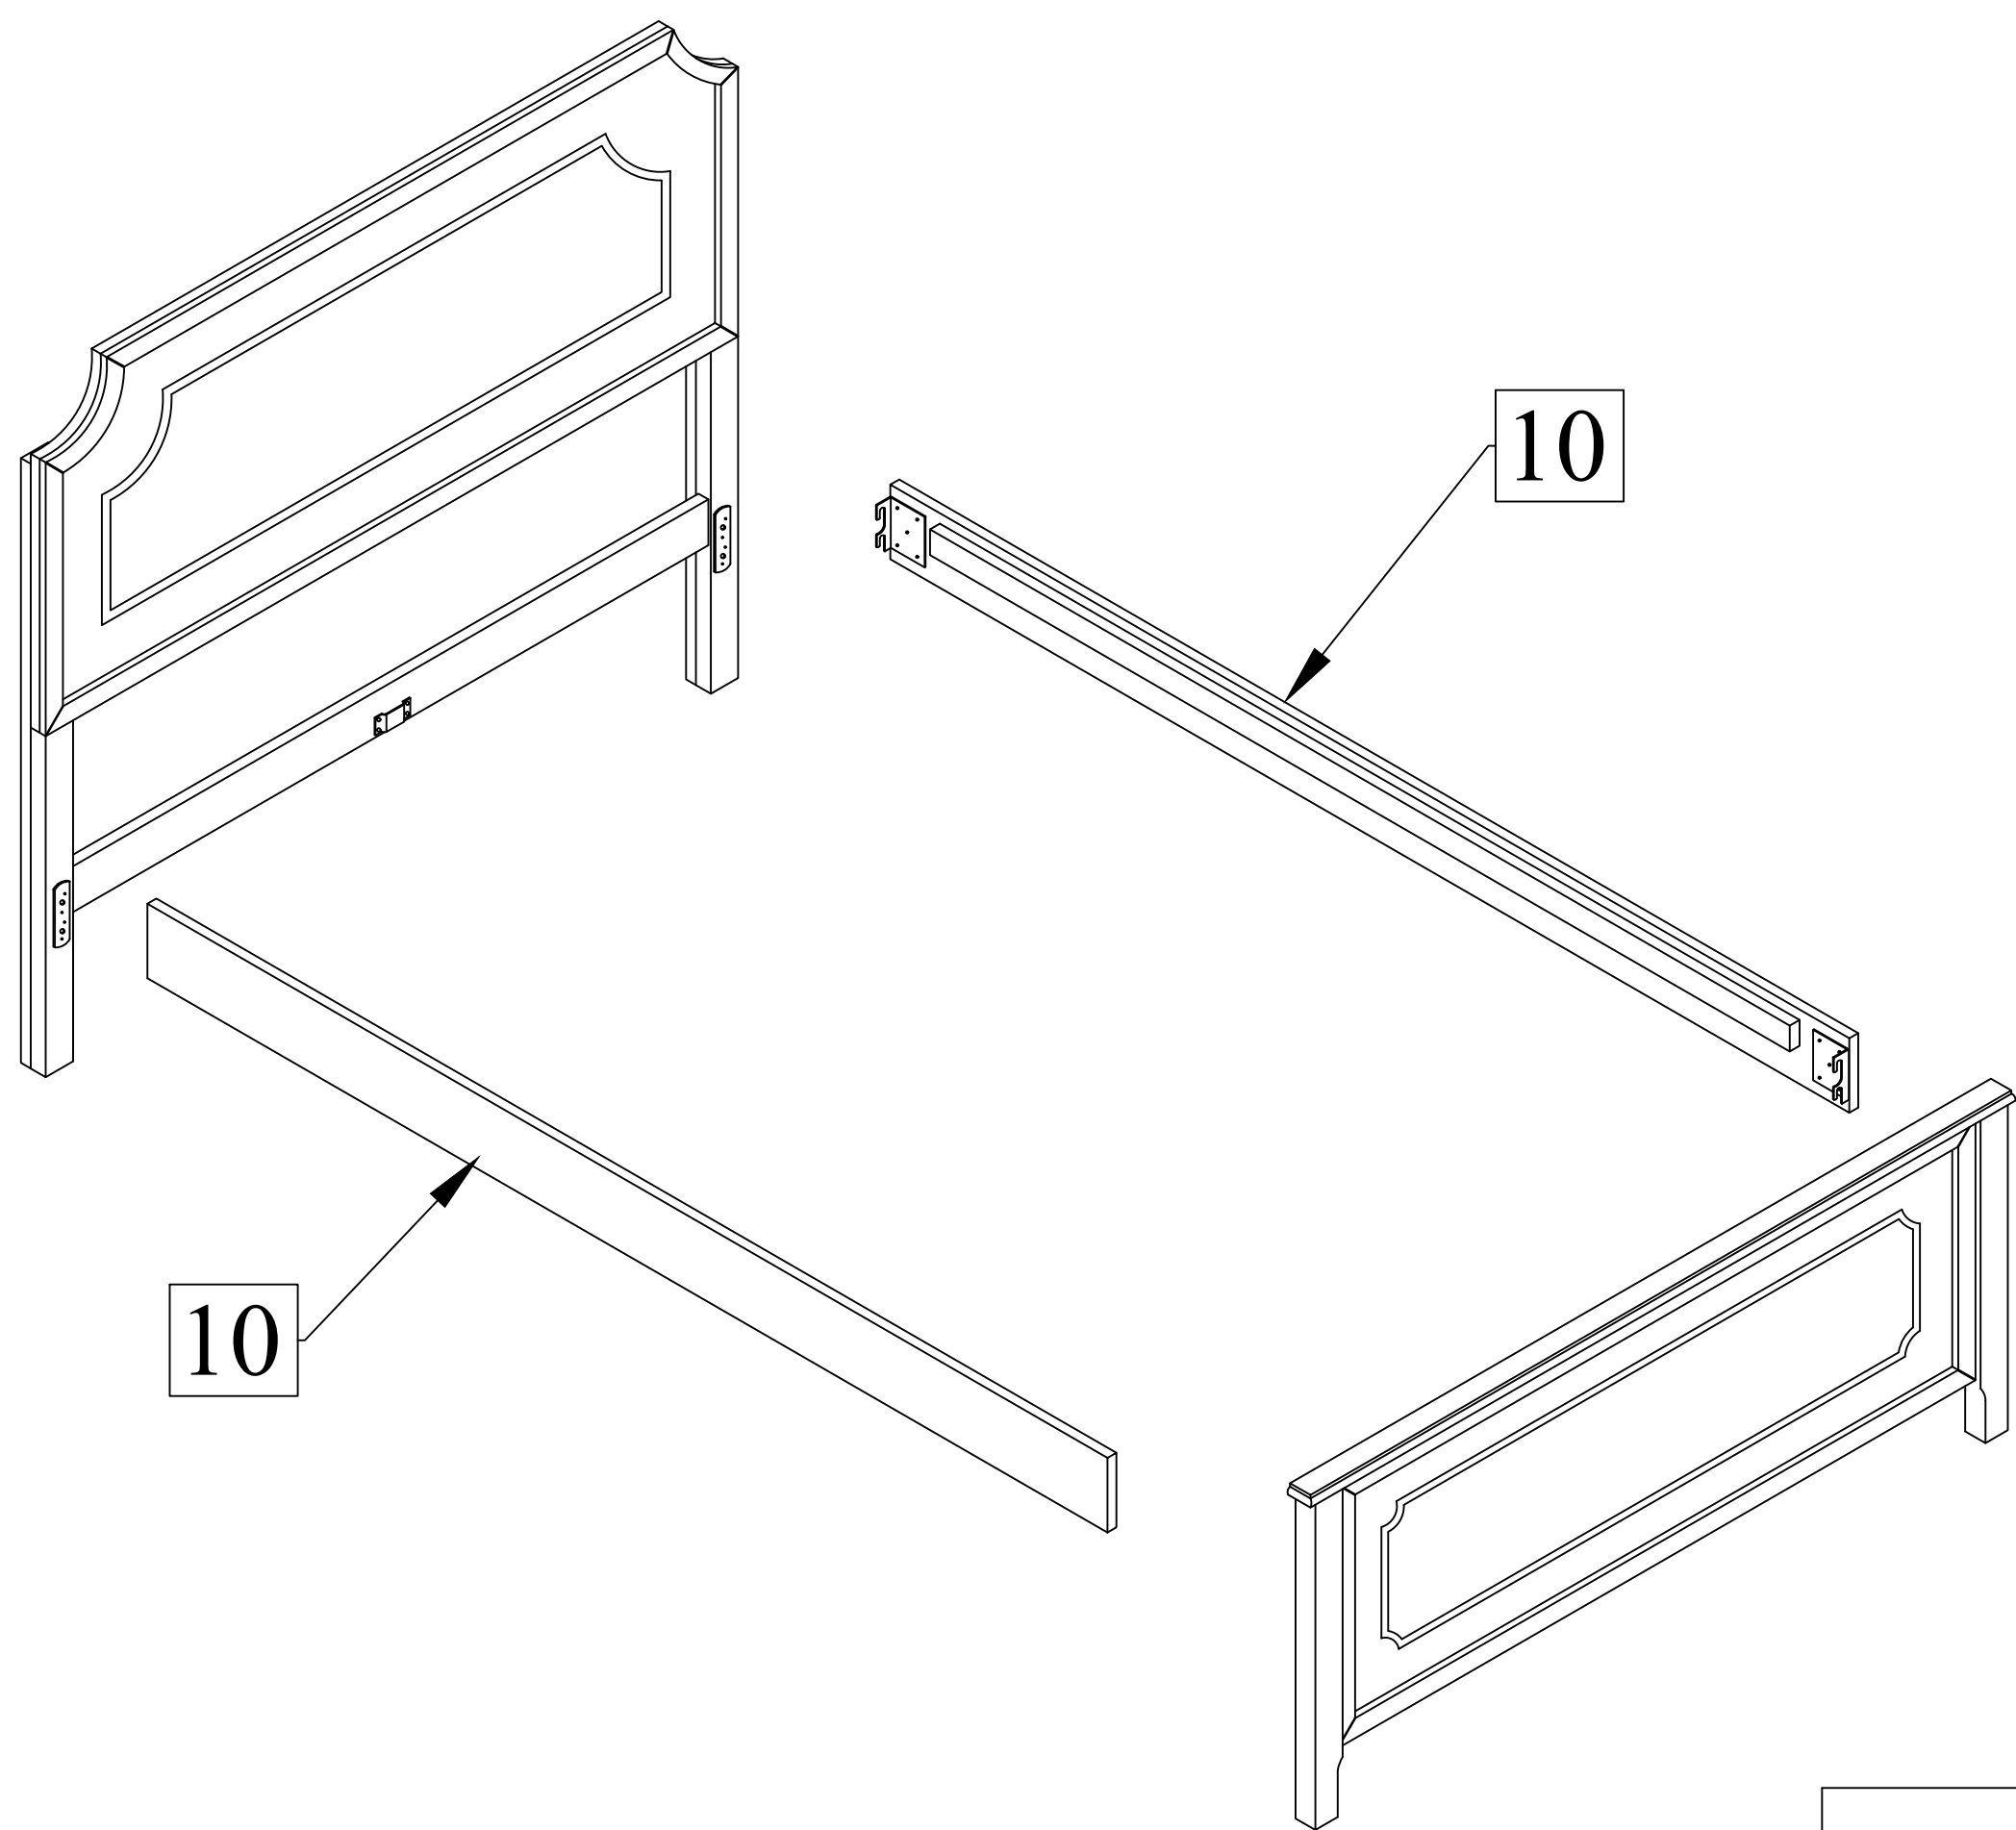

M	Bolt		8PCS
N	Allen Key M5		1PC


Step 5 : Attach the Center Support Rail (11)(12) to the bed.

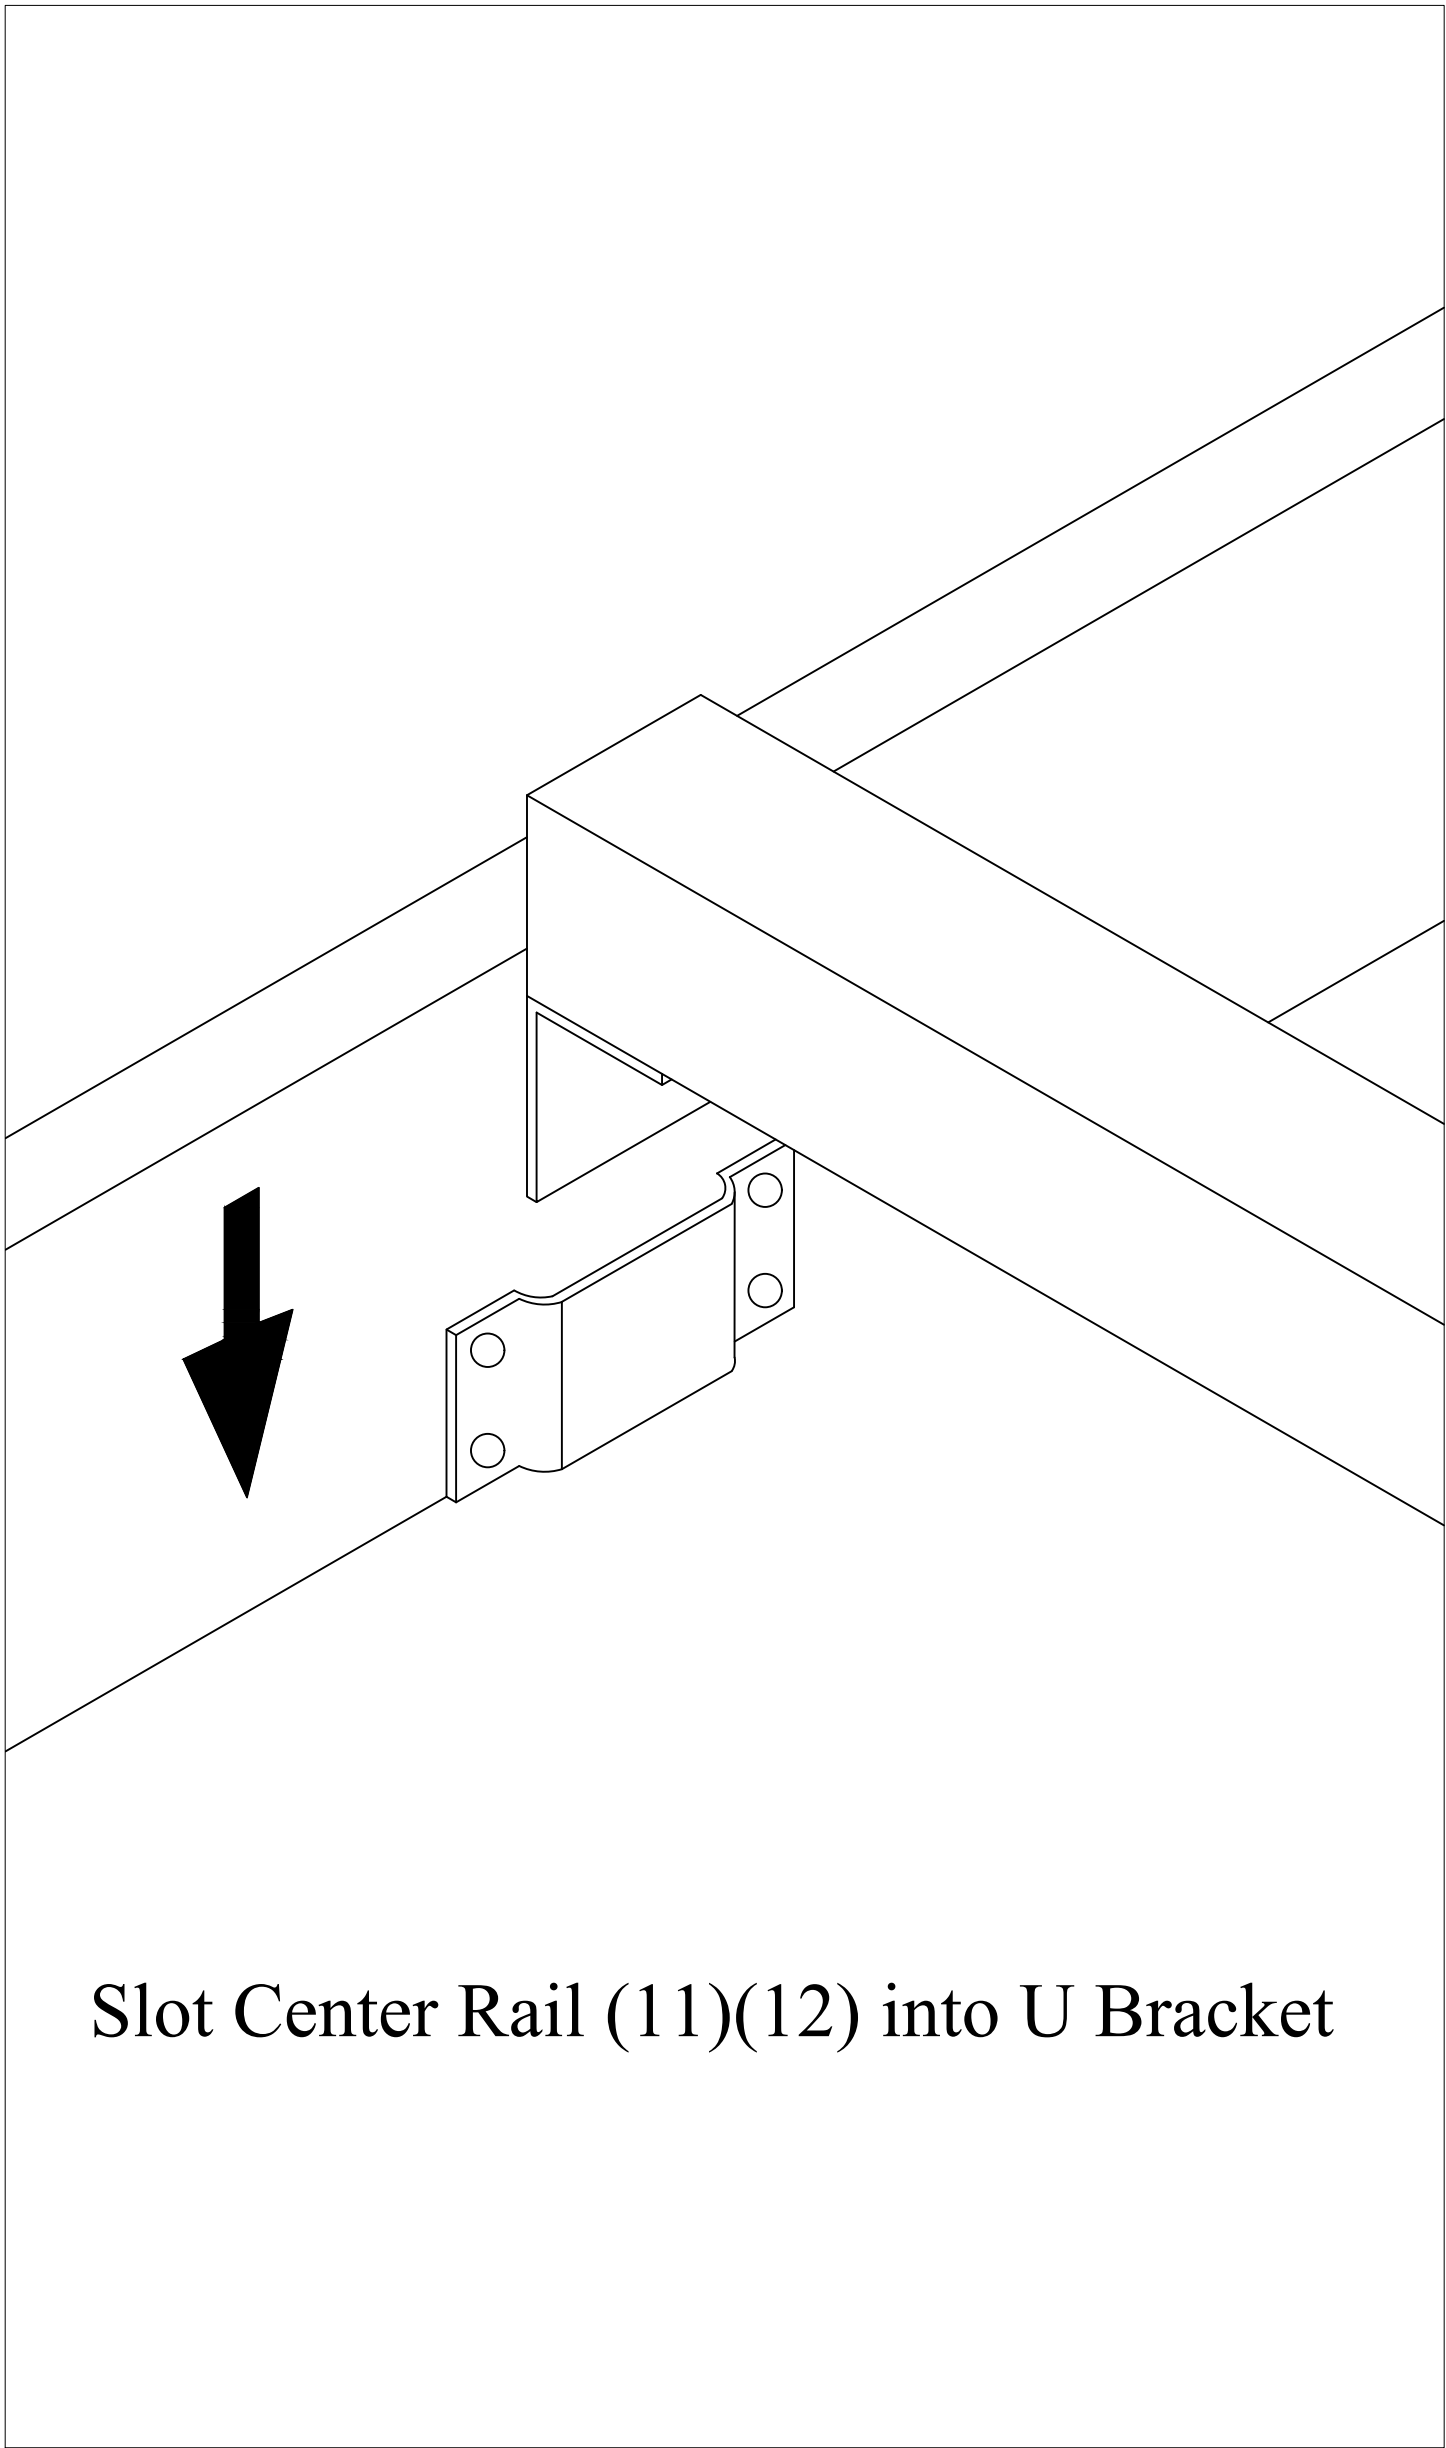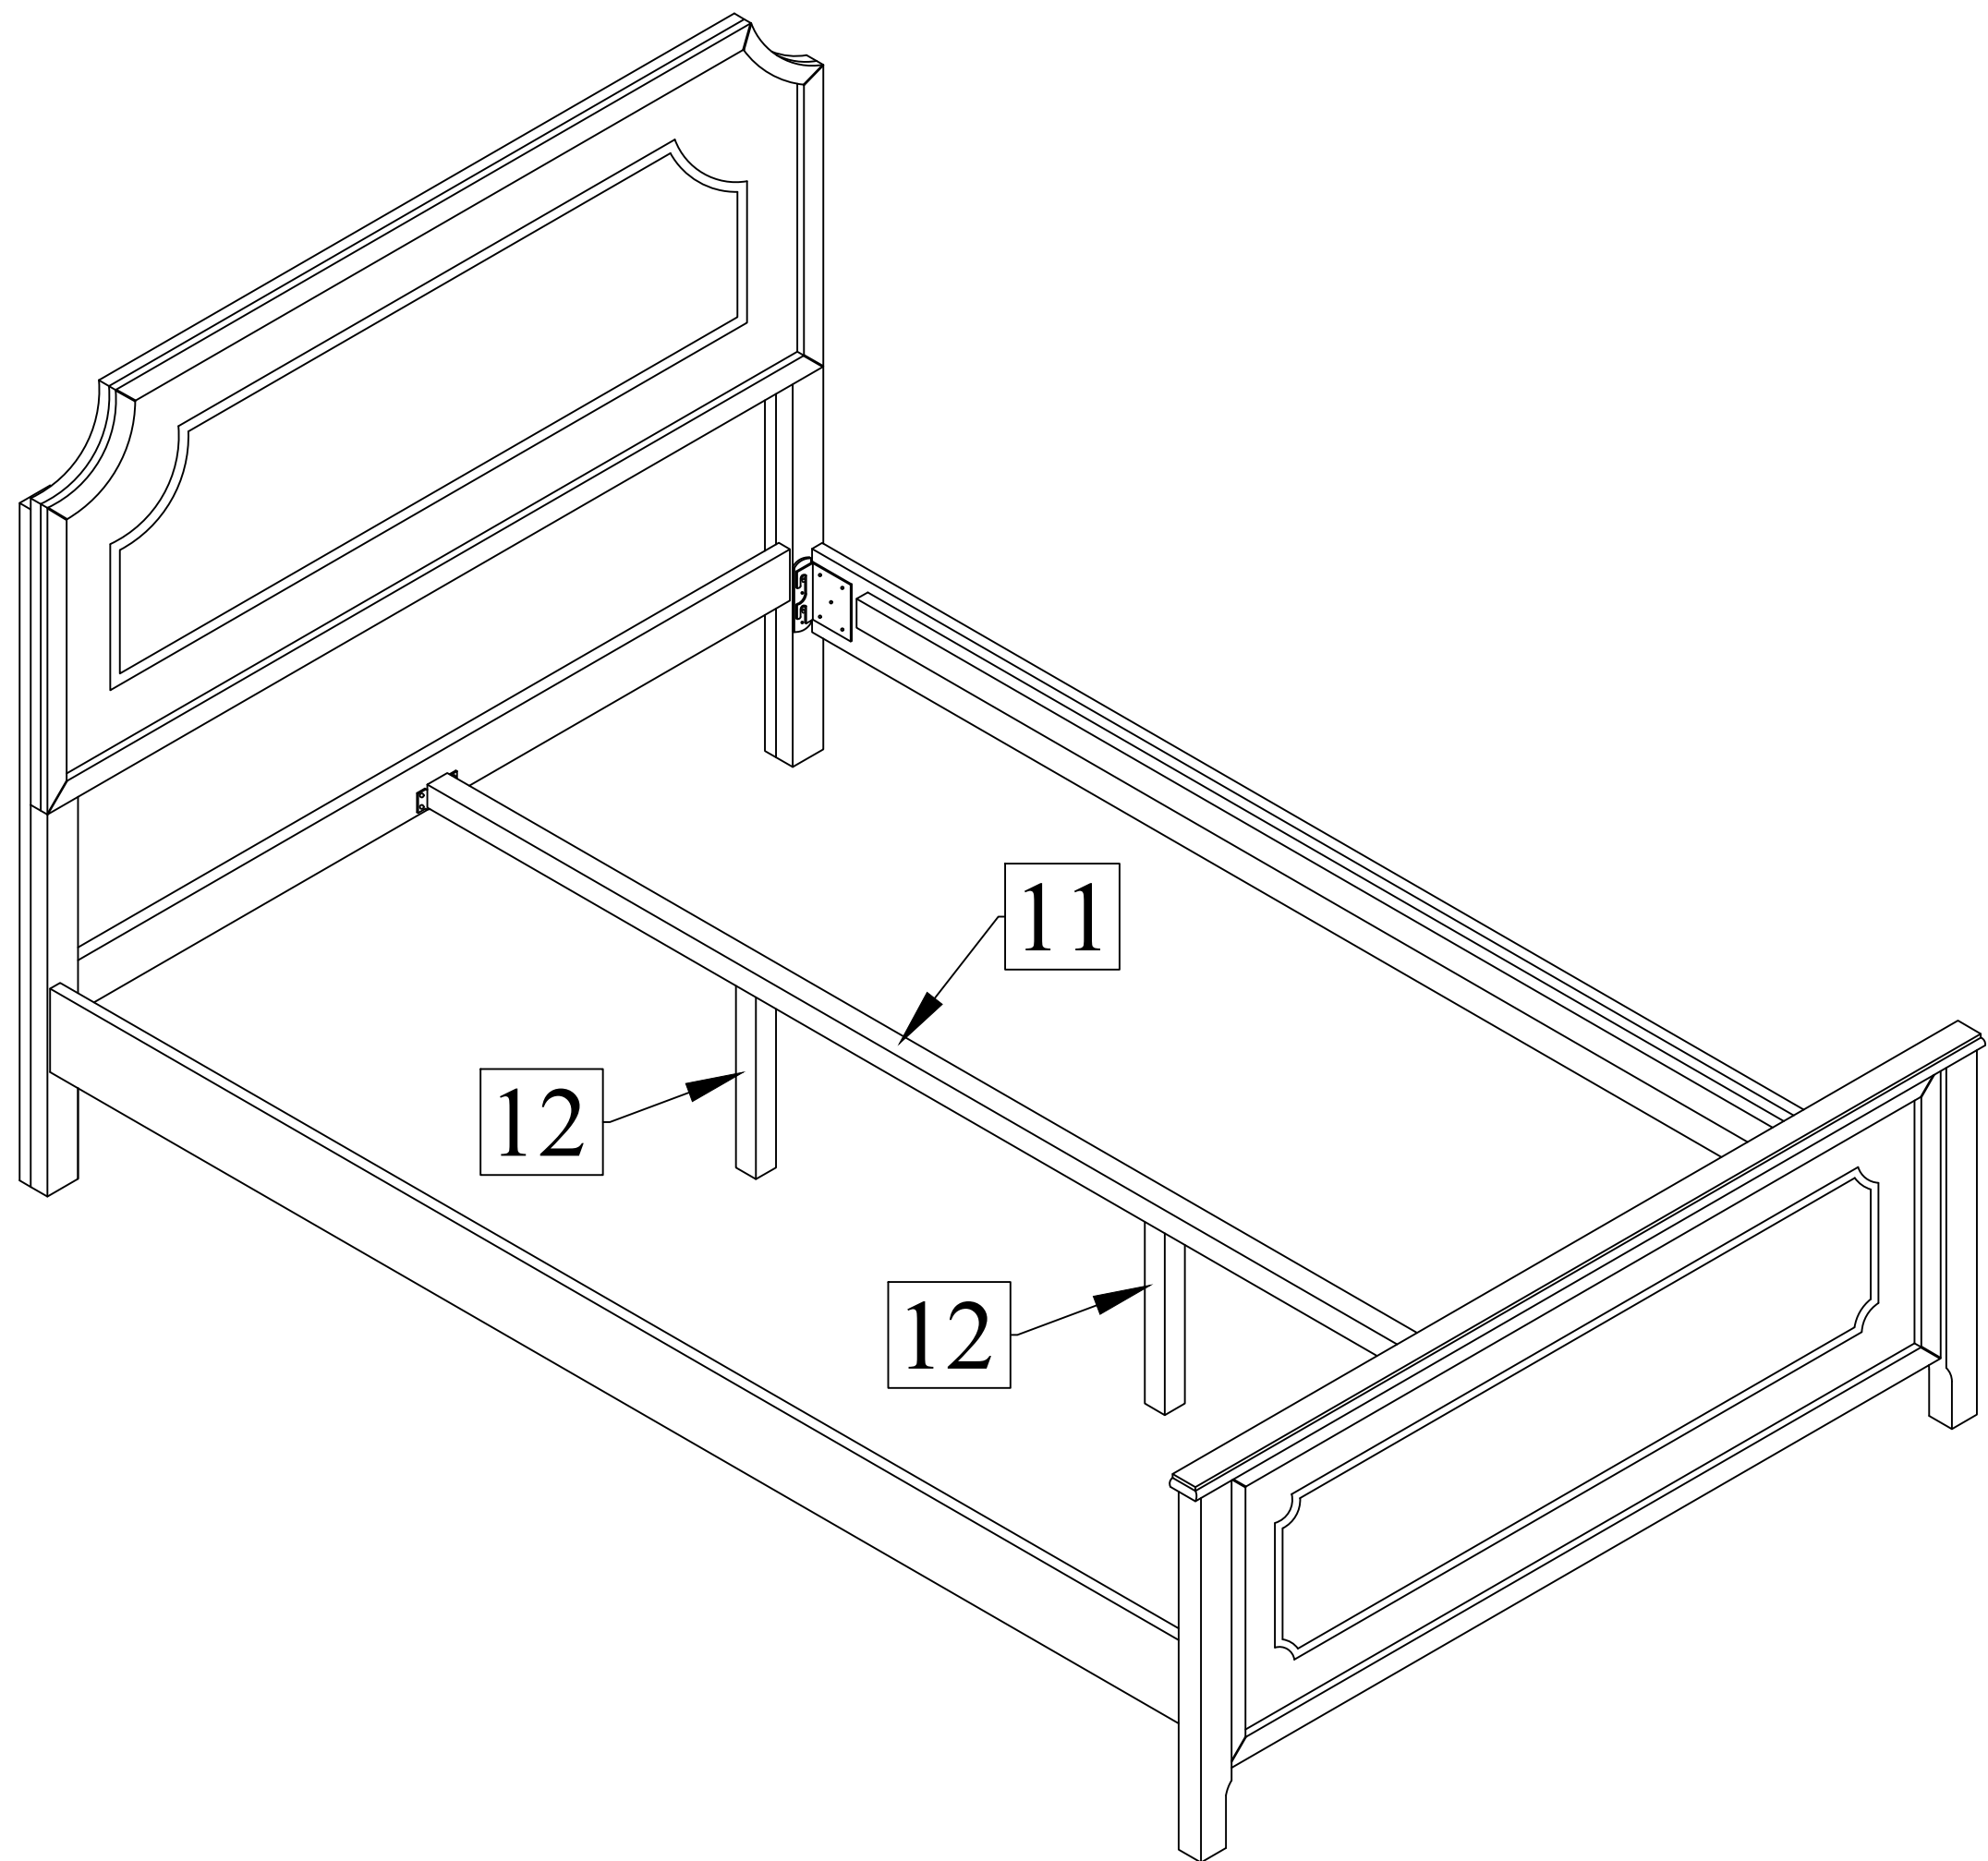

ASSEMBLY INSTRUCTIONS
Item No : WF299168AAK + WF299169AAK
Description : FULL BED


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

Step 6 : Attach Bed Slats (13) to the bed using Screw (O).

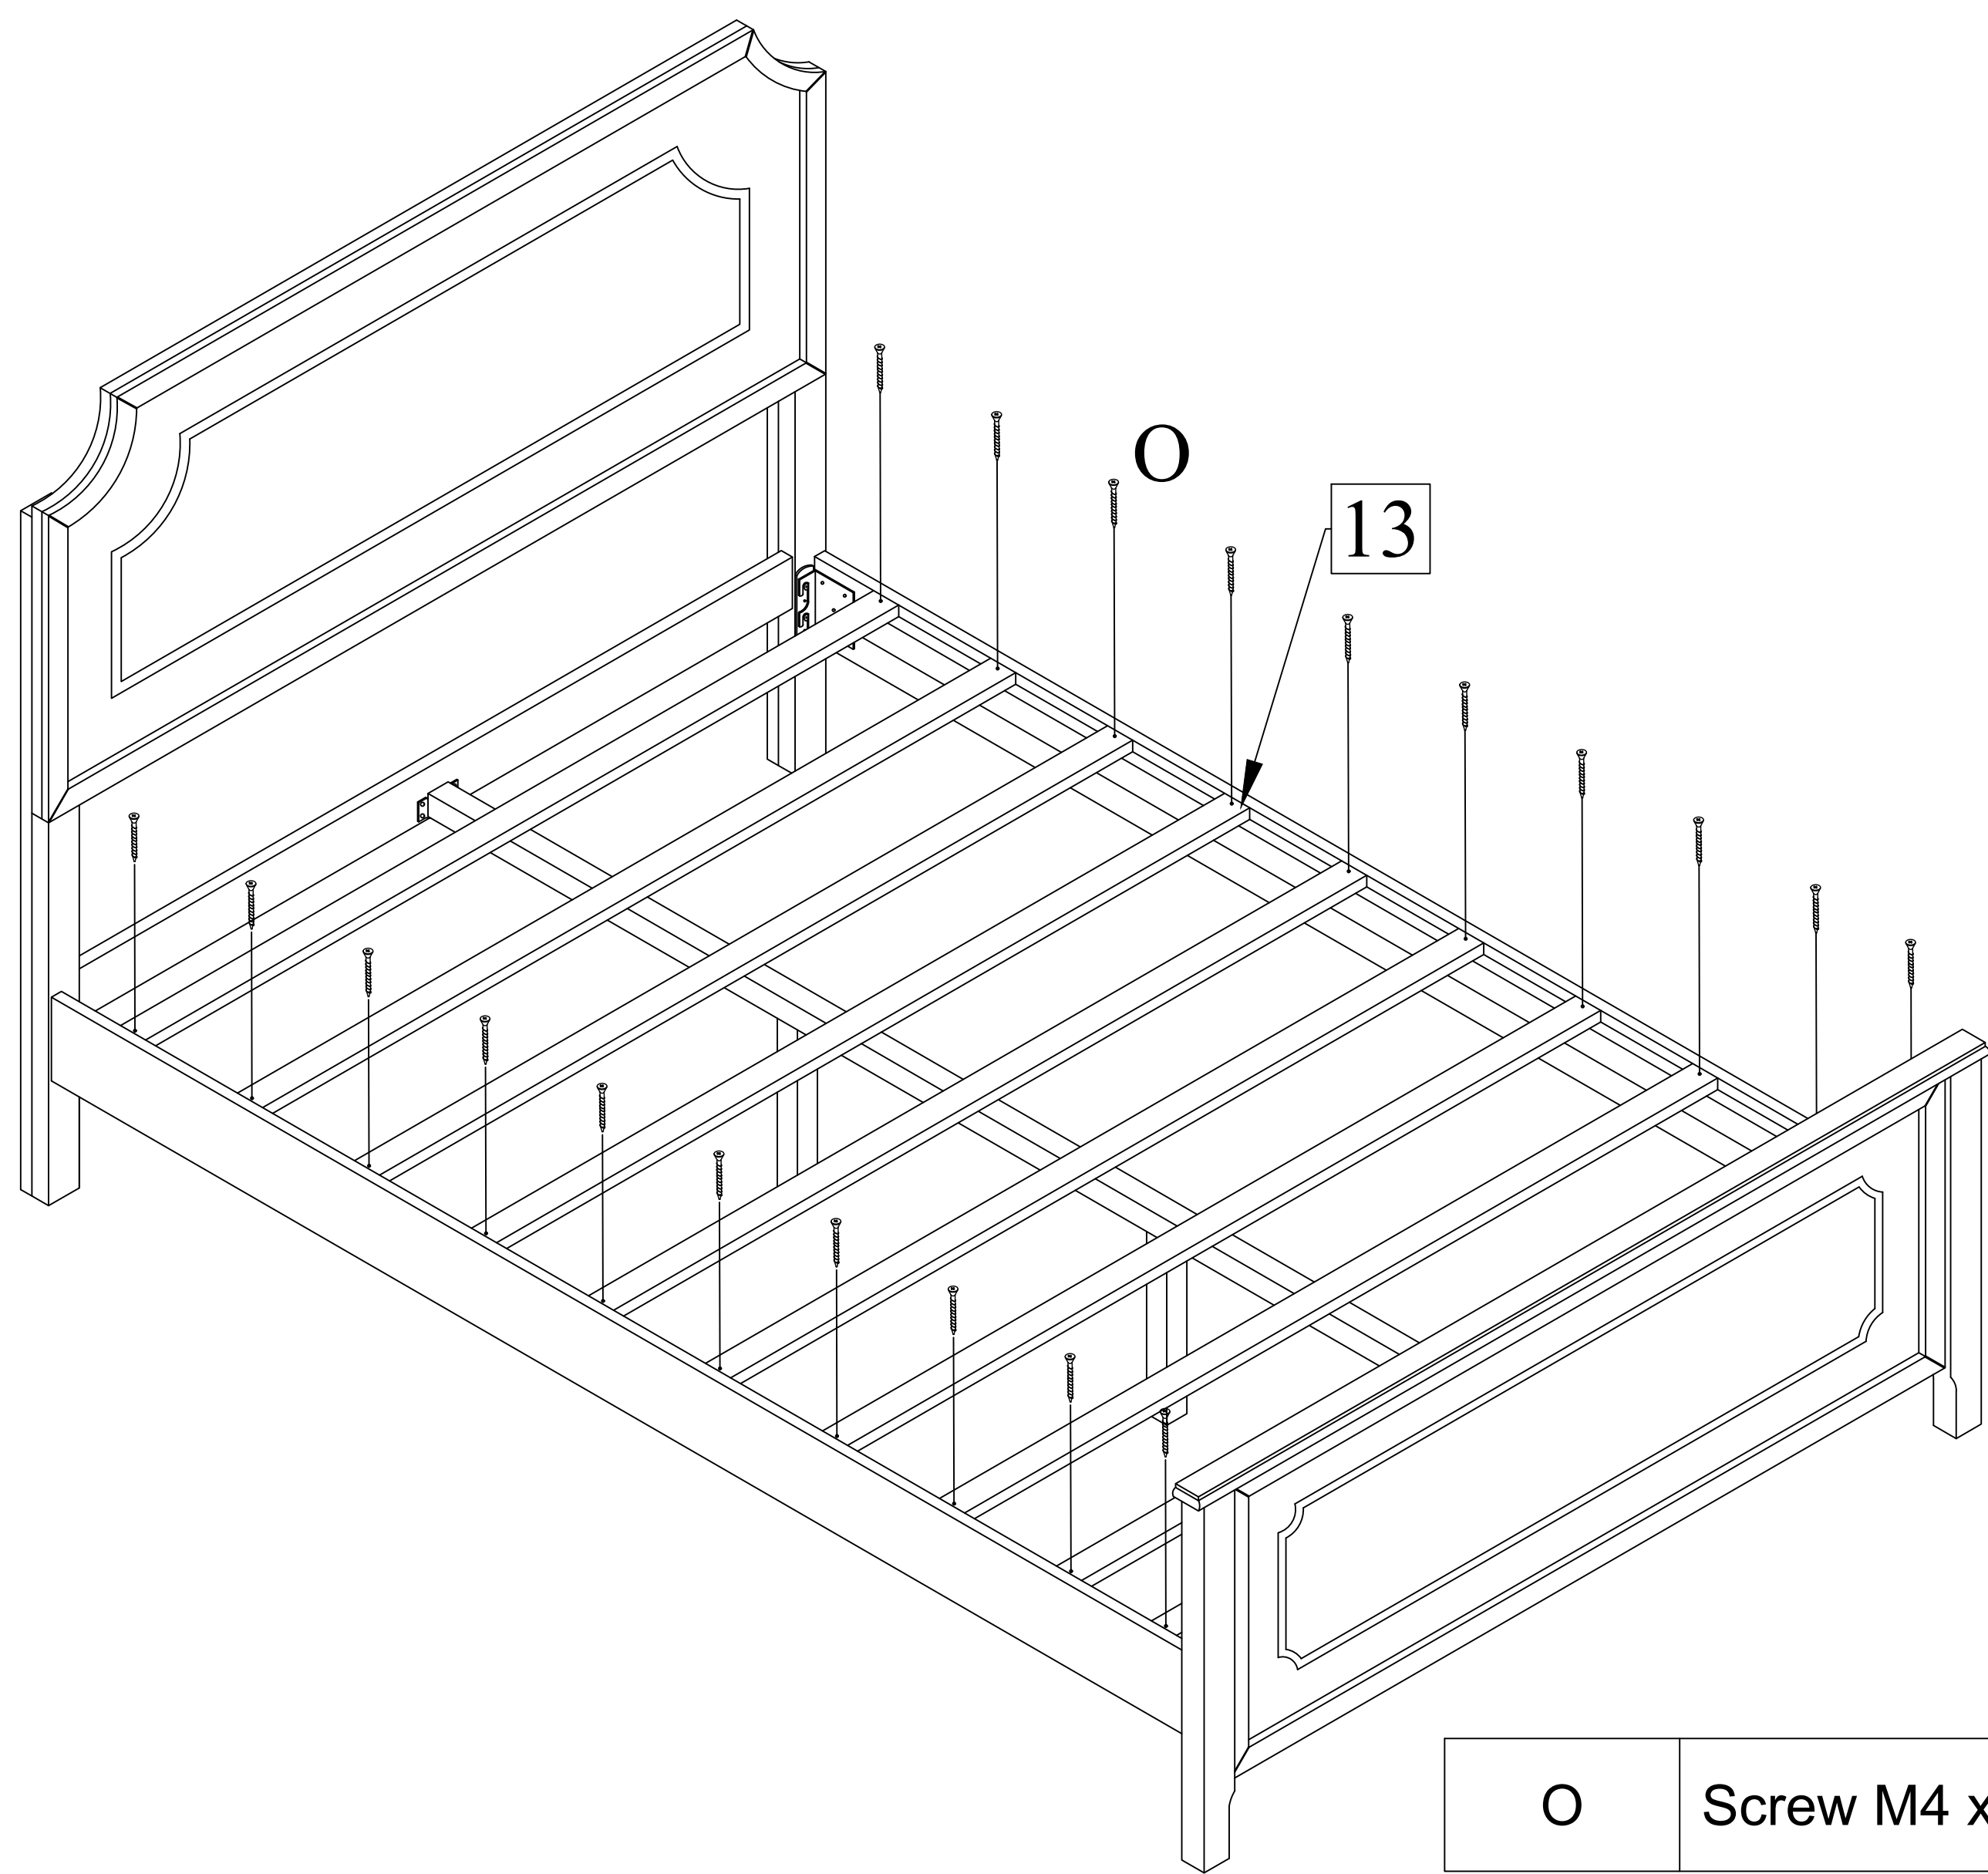


O	Screw M4 x 32MM		20PCS
---	-----------------	---	-------

Completed assembly.

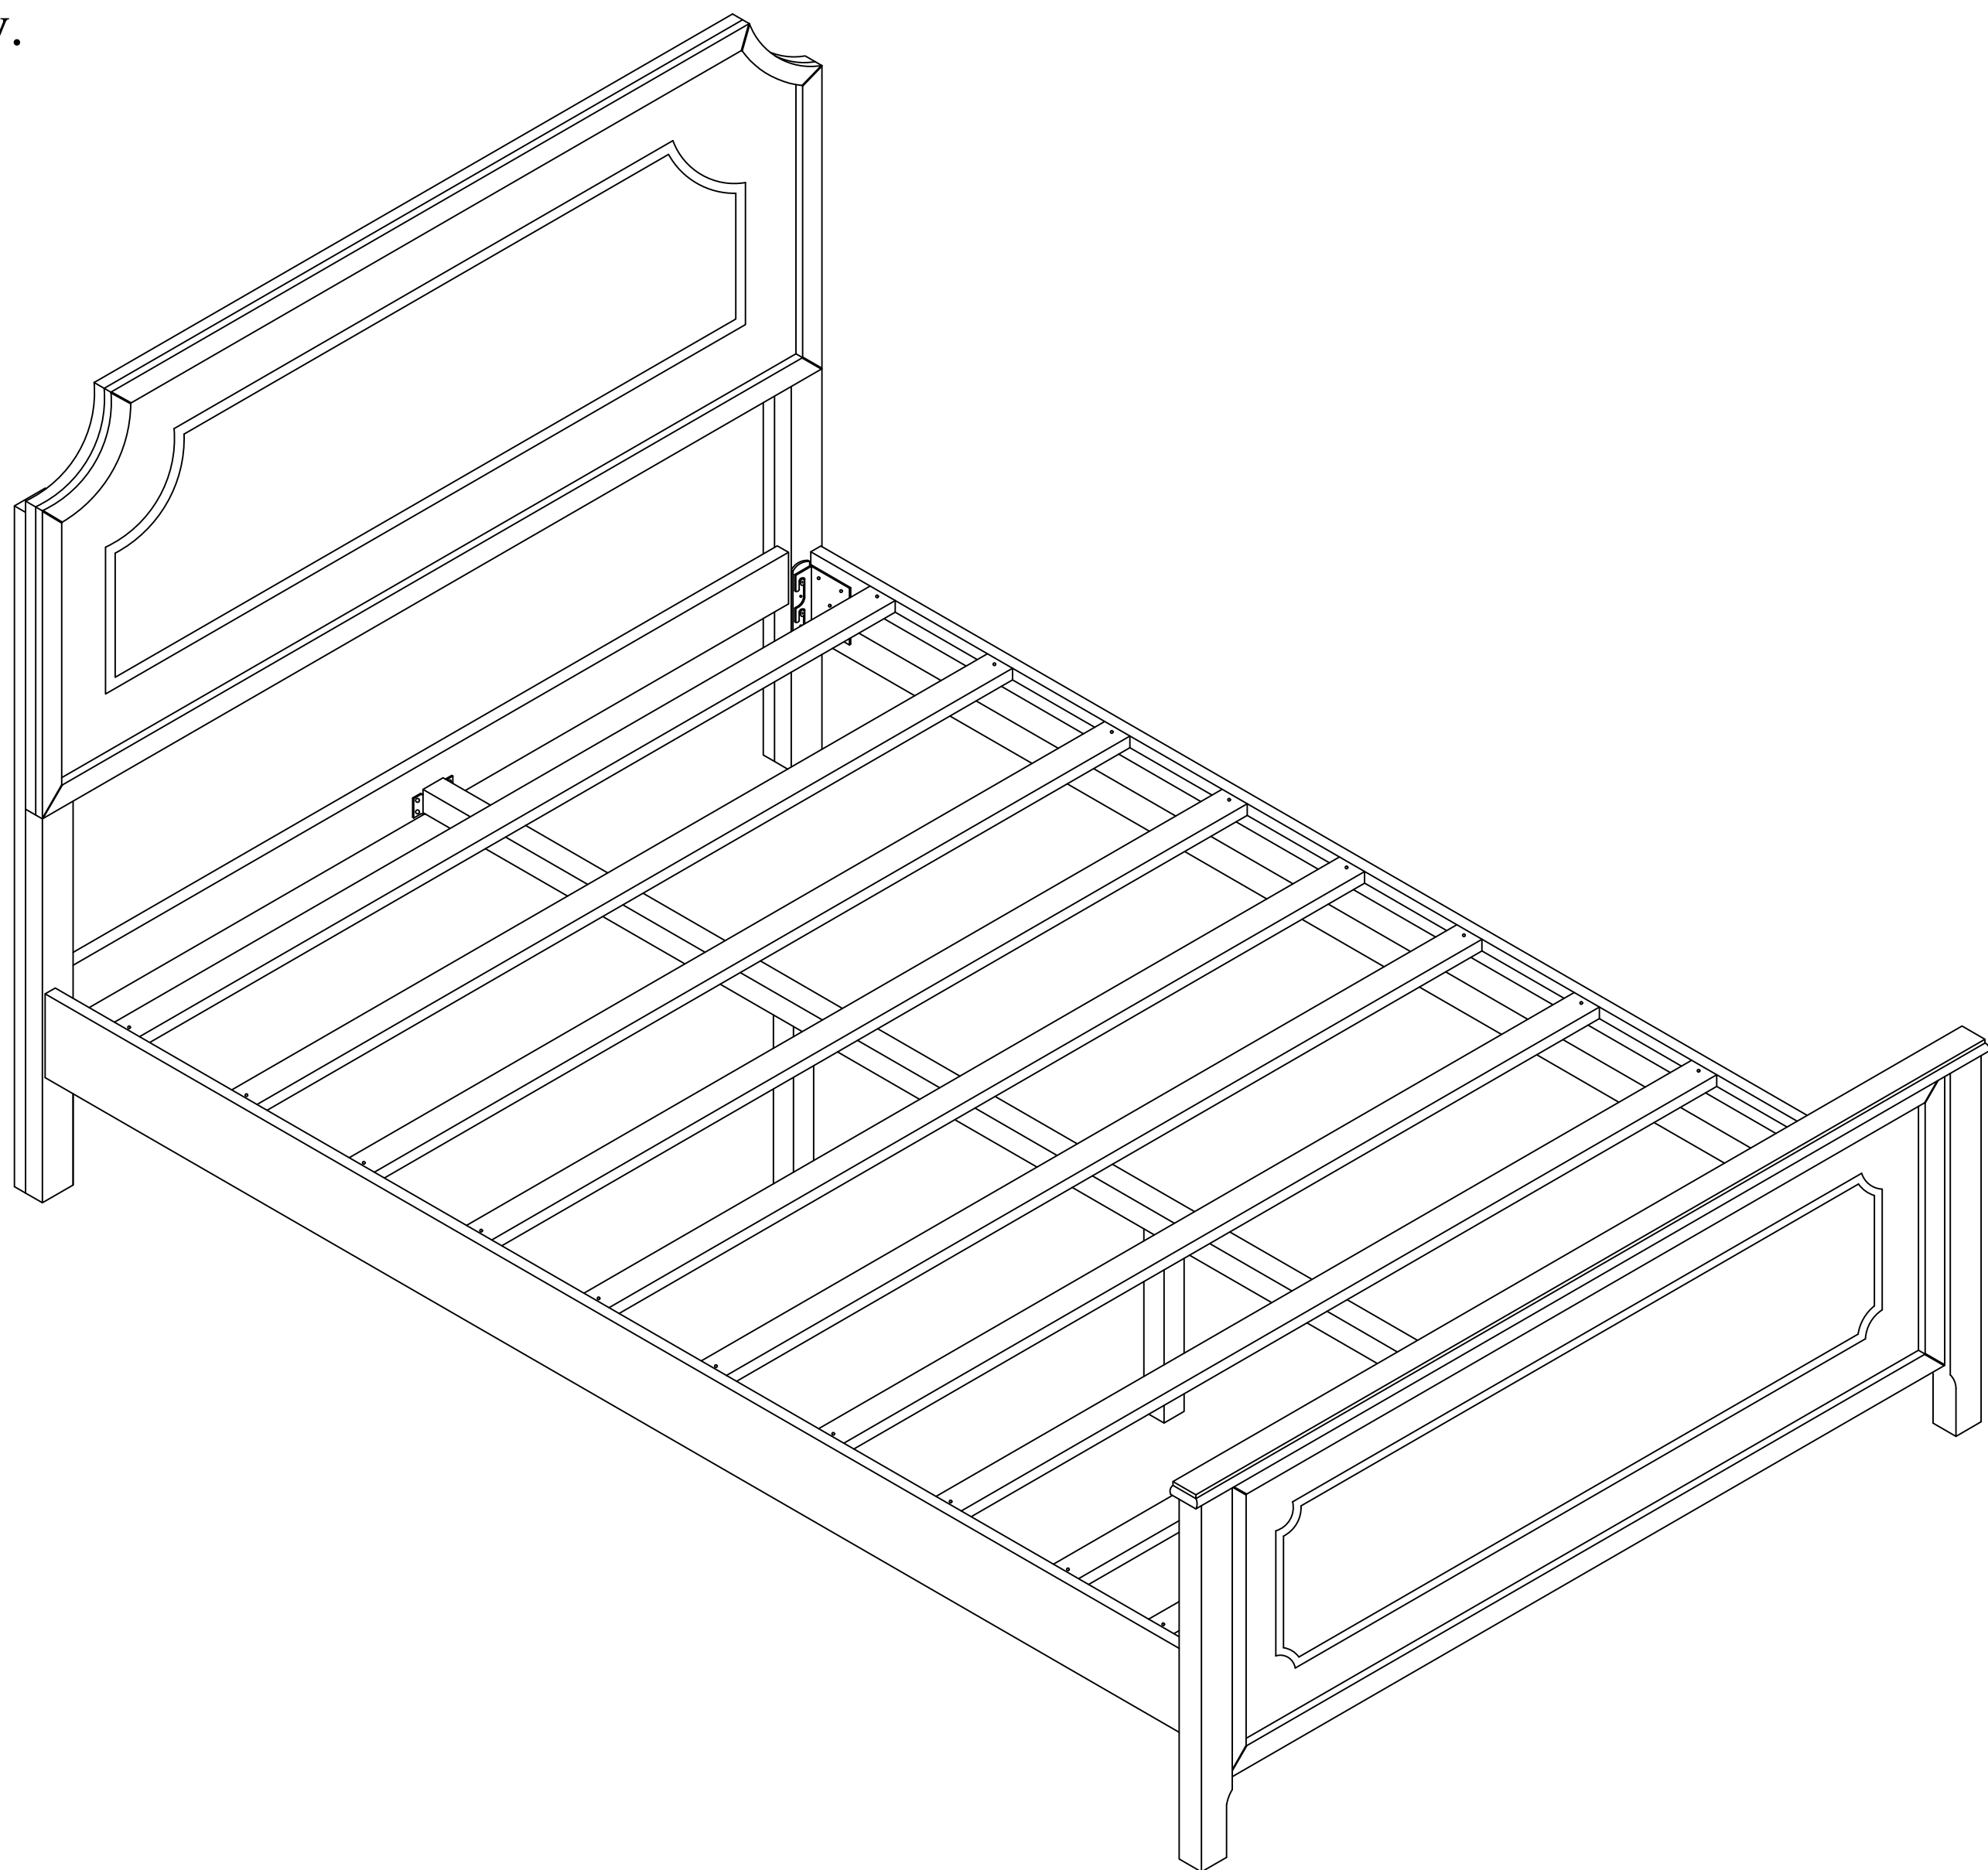

ASSEMBLY INSTRUCTIONS
Item No : WF299160AAK
Description : NIGHT STAND

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

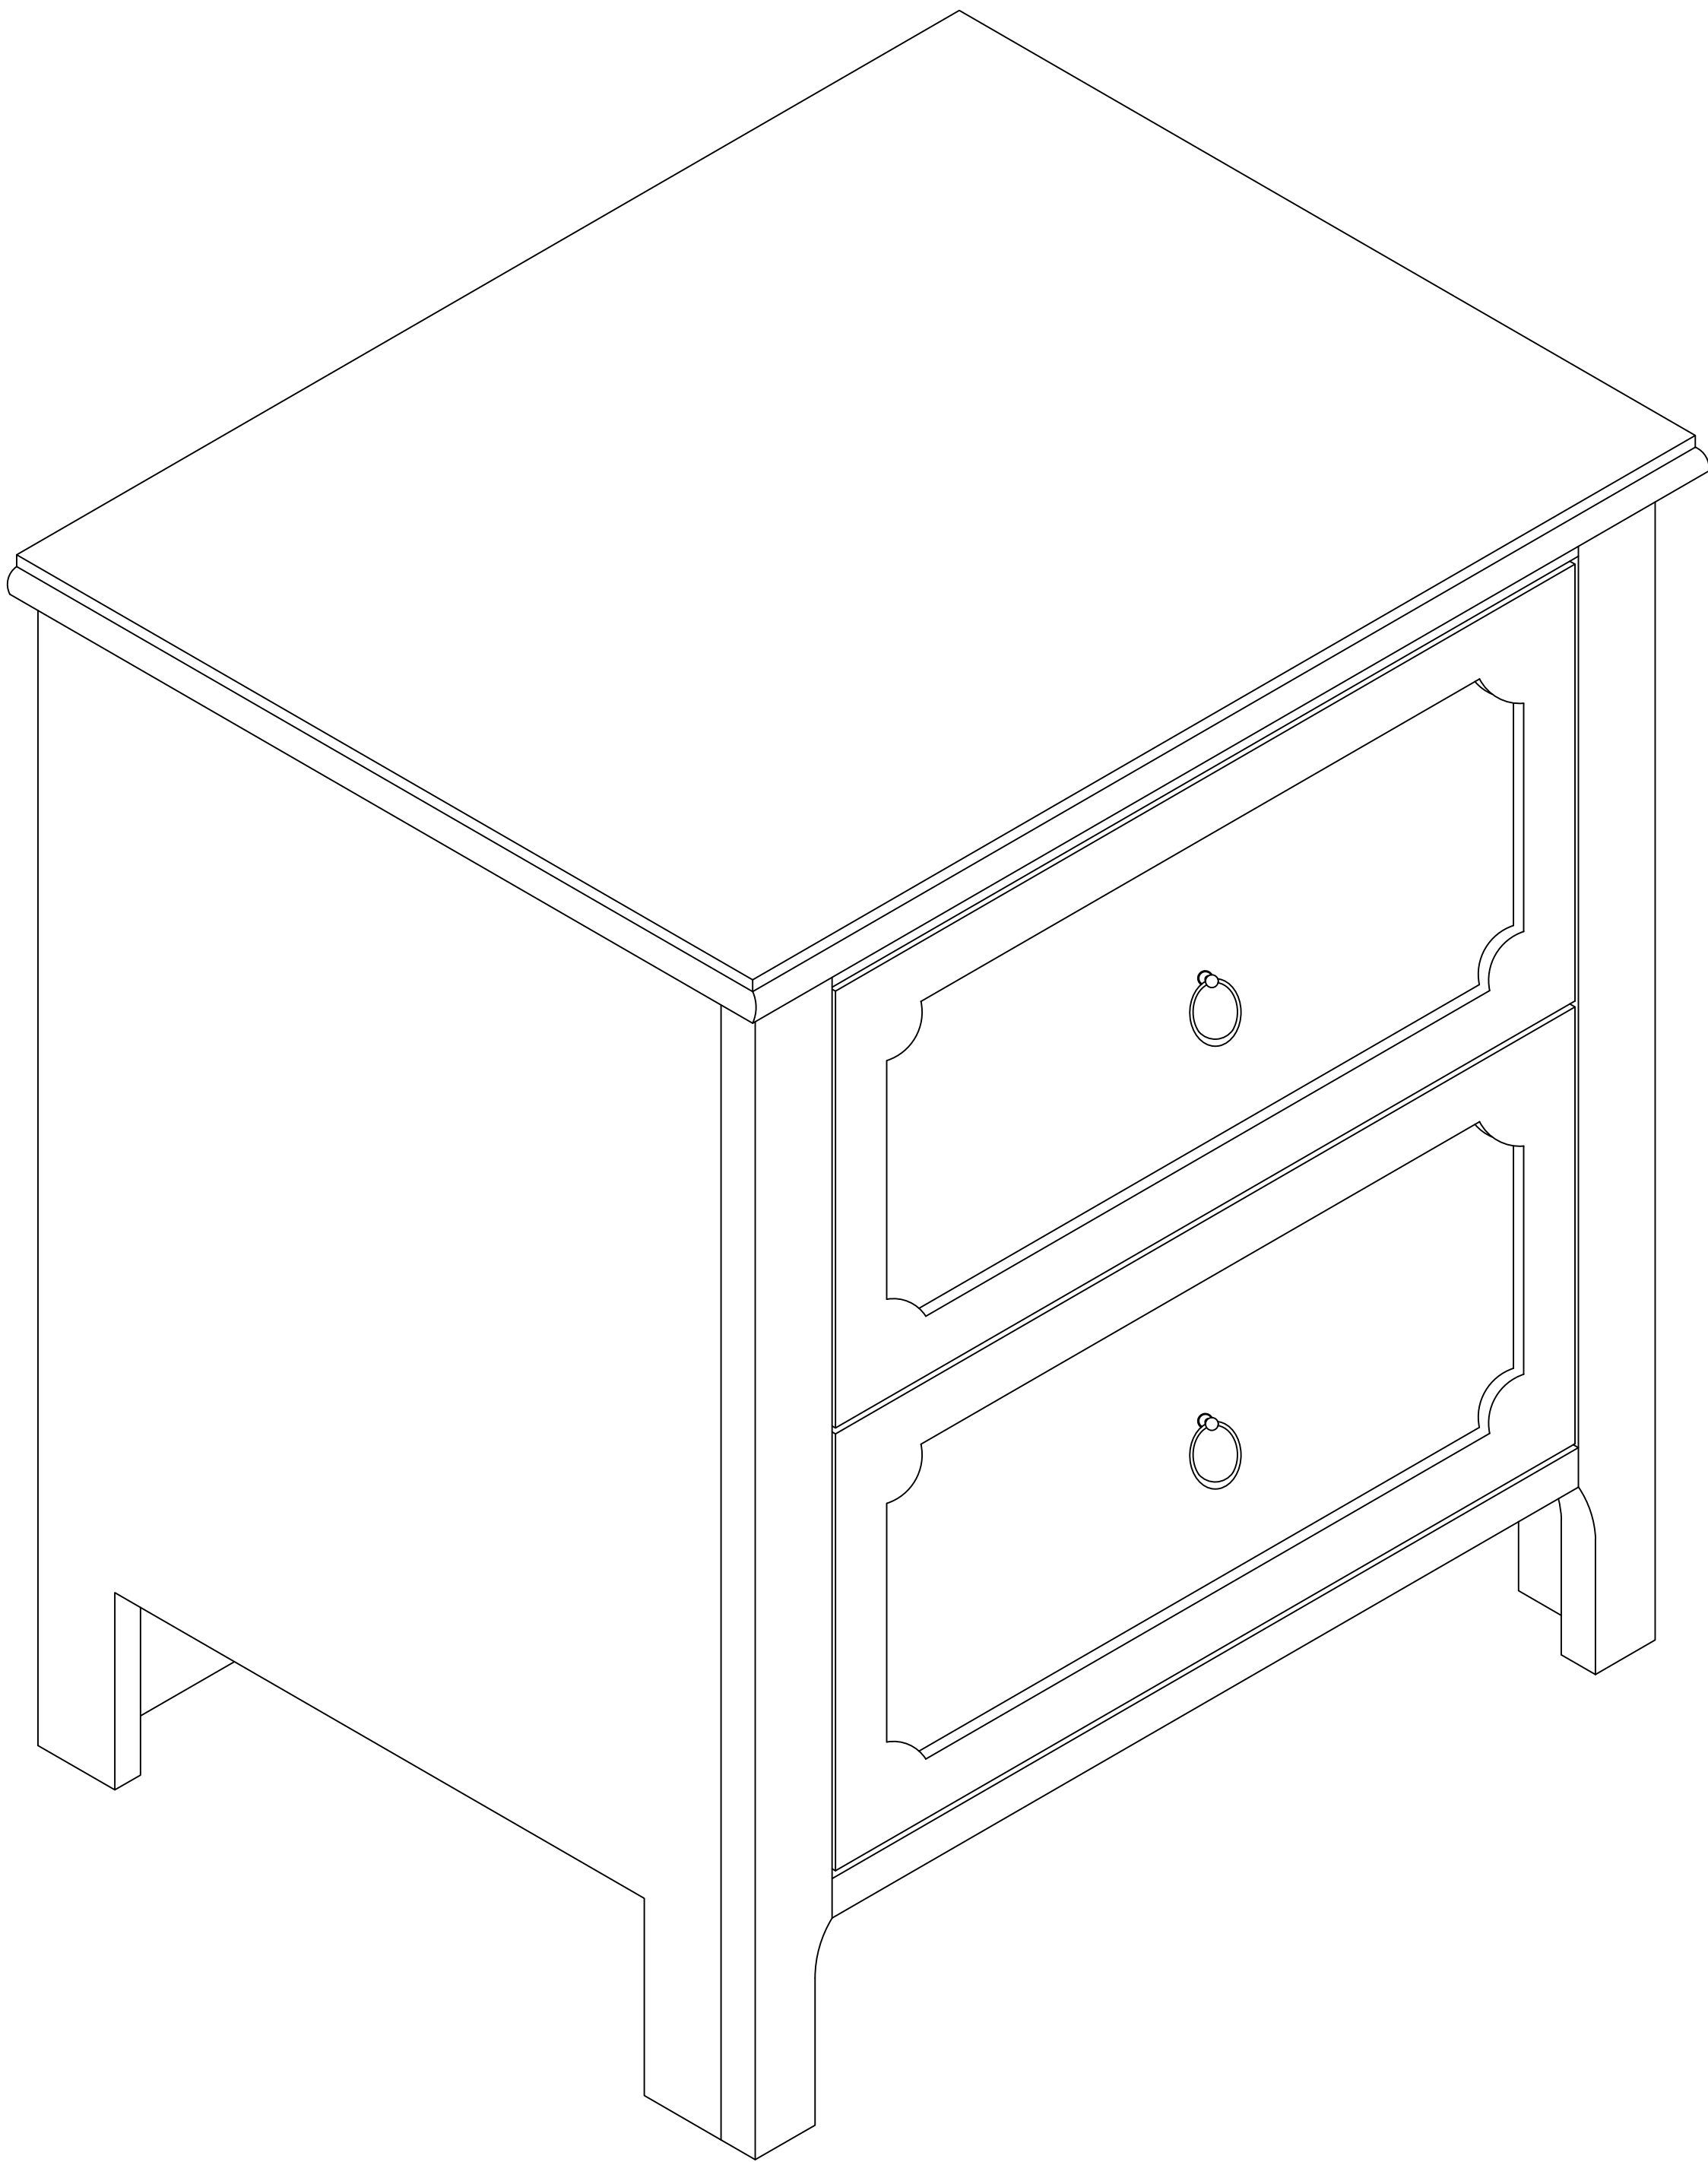


WF299160AAK

ASSEMBLY INSTRUCTIONS

Item No : WF299160AAK

Description : NIGHT STAND


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

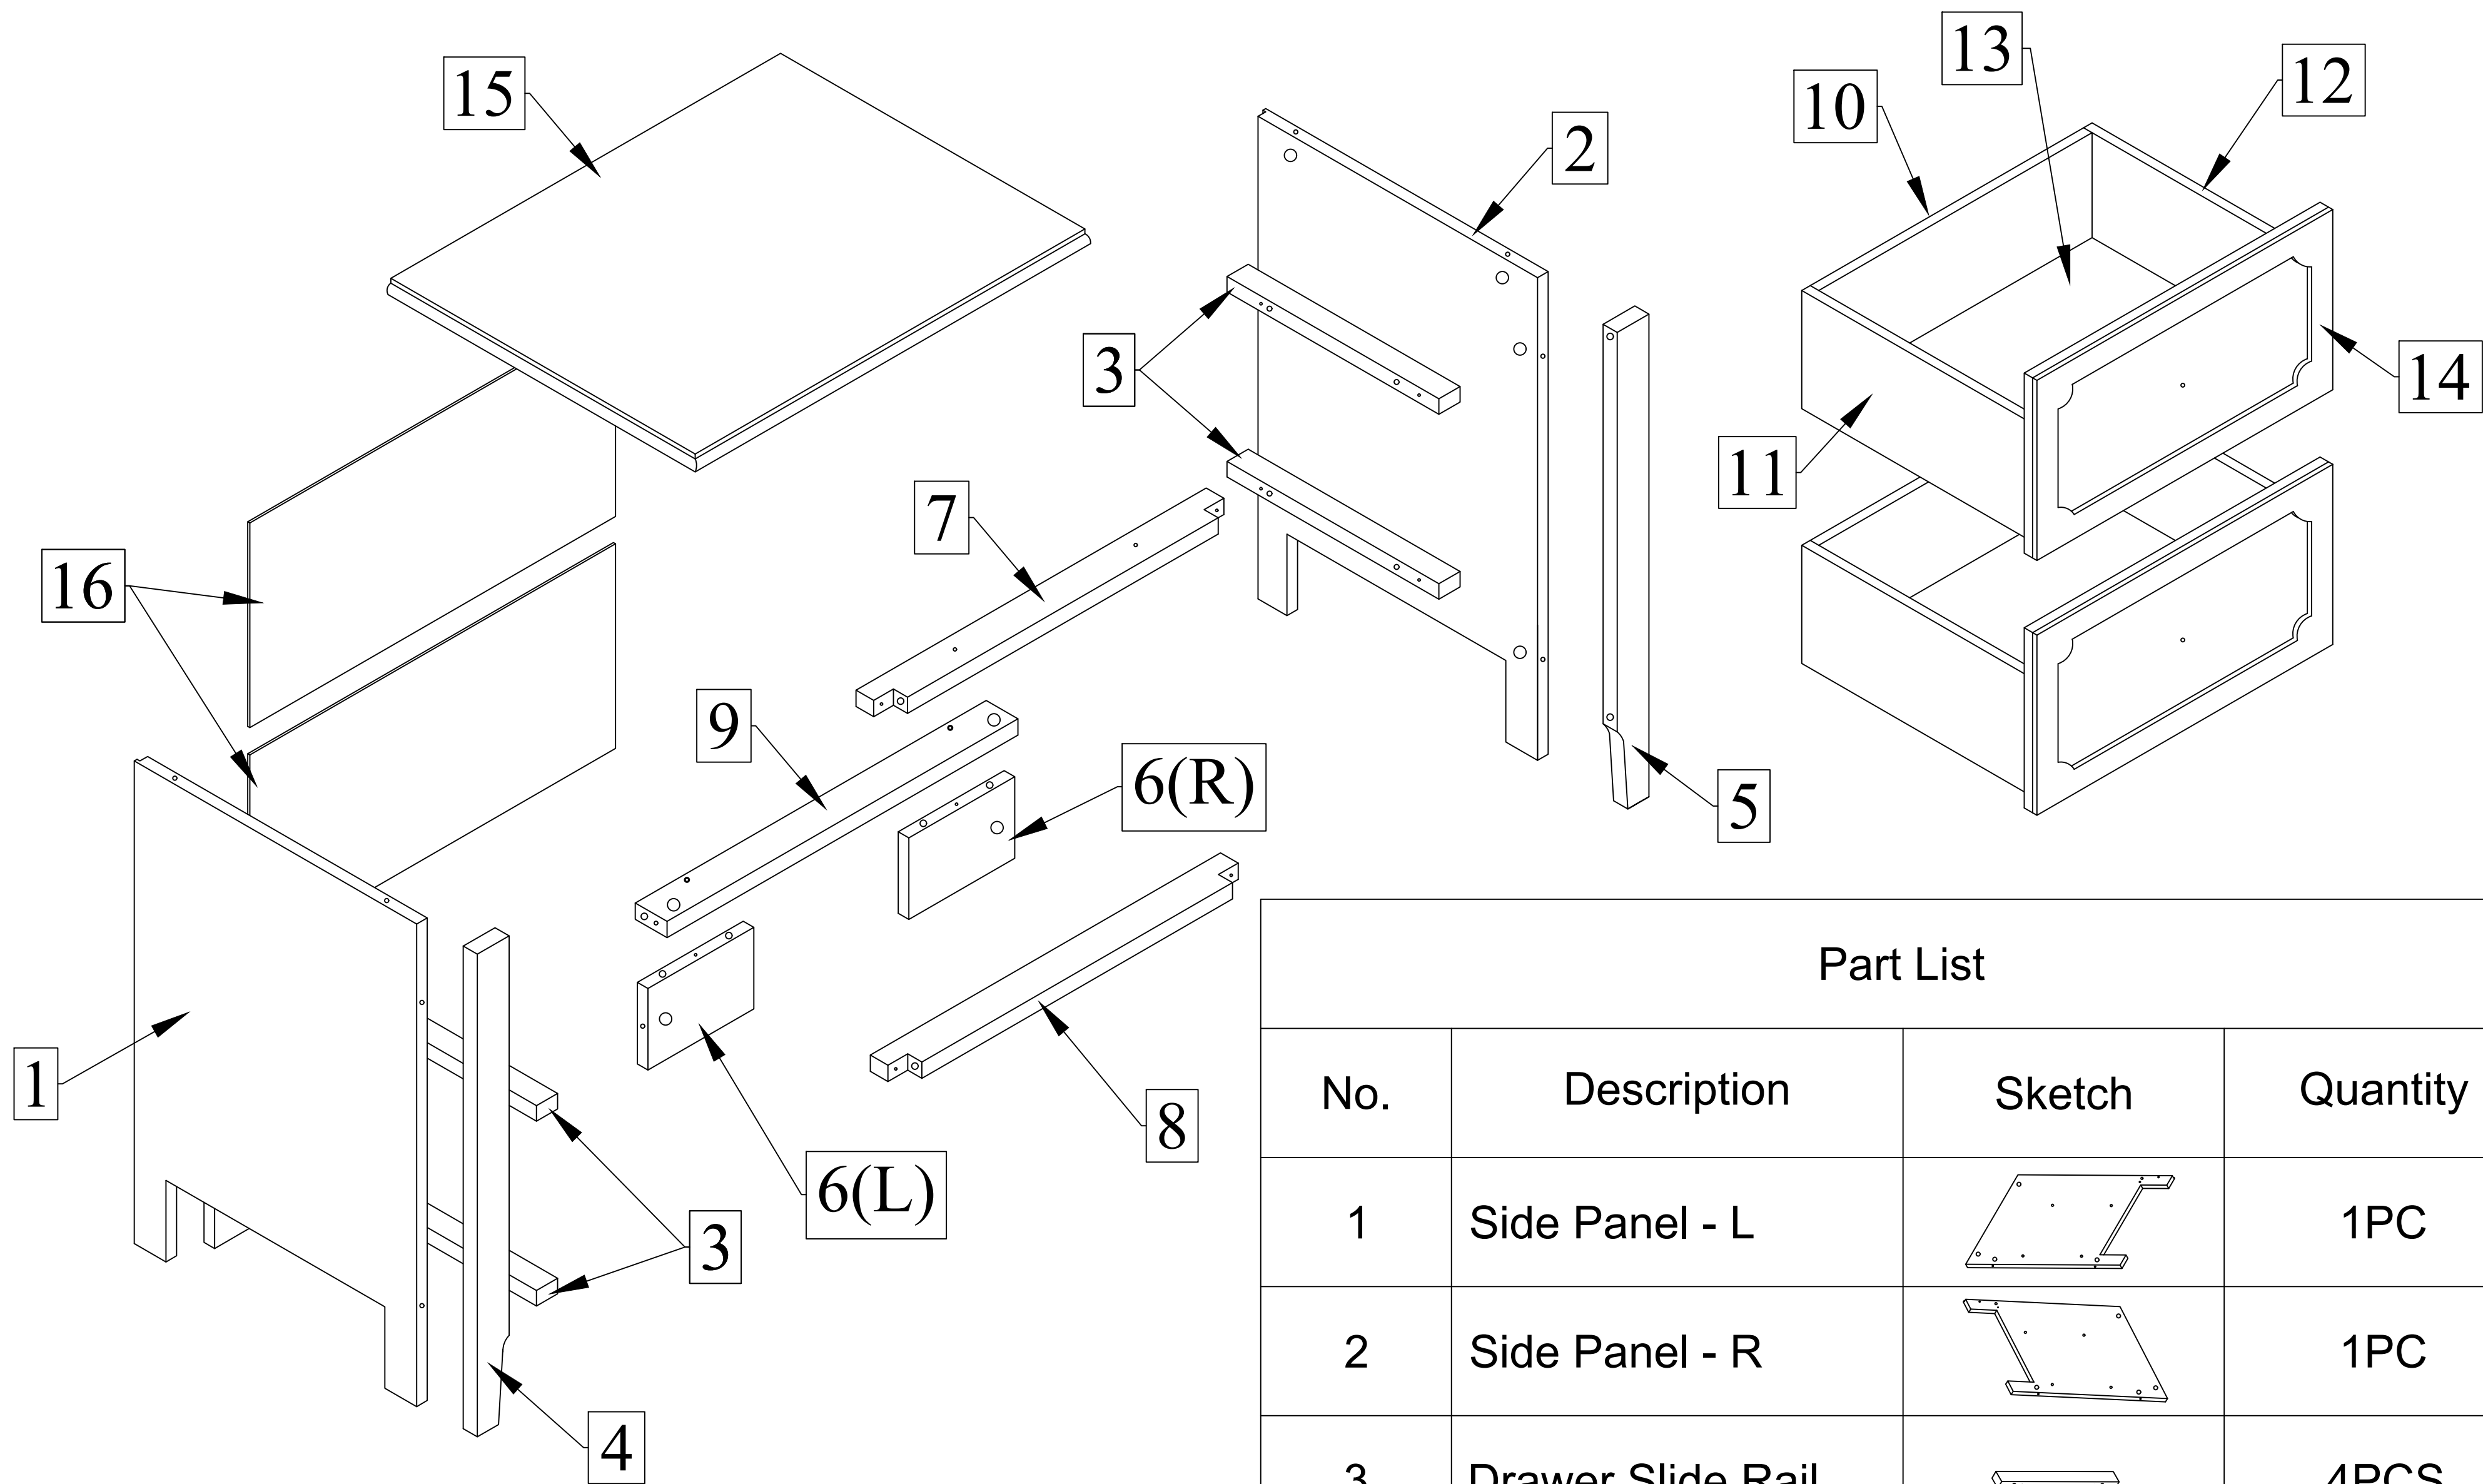

Part List

No.	Description	Sketch	Quantity
1	Side Panel - L		1PC
2	Side Panel - R		1PC
3	Drawer Slide Rail		4PCS
4	Pillar - L		1PC
5	Pillar - R		1PC
6	Leg (L & R)	L R	2PCS
7	Top Rail		1PC
8	Bottom Rail		1PC
9	Back Rail		1PC
10	Drawer Back		2PCS
11	Drawer Side - L		2PCS
12	Drawer Side - R		2PCS
13	Drawer Base		2PCS
14	Drawer Front		2PCS
15	Top Panel		1PC
16	Back Panel		2PCS

TOOLS REQUIRED (Not provided)



Screwdriver

Hardware List

No.	Description	Sketch	Quantity
A	Wood Dowel M8x30MM		18PCS
B	Minifix + Cap	B1 B2	12SETS
C	Wood Dowel M6x30MM		16PCS
D	Minifix + Cap [Drawer]	D1 D2	8SETS
E	H Connector		1PC
F	Screw M4 x 32MM		24PCS
G	Drawer Slide	G1 G2	2SETS
H	Screw M3 x 12MM		40PCS
I	Handle with screw	I1 I2	2SETS


ASSEMBLY INSTRUCTIONS

Item No : WF299160AAK


Description : NIGHT STAND

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

Step 1 : Attach Wood Dowel (A) and Minifix (B1) to parts (1,2,3,4,5,6,7,8,9,15) accordingly. Attached Wood Dowel (C) and Minifix [Drawer] (D1) to drawer box parts (10,11,12,14) accordingly. Slot Back Panel (16) into H Connector (E).

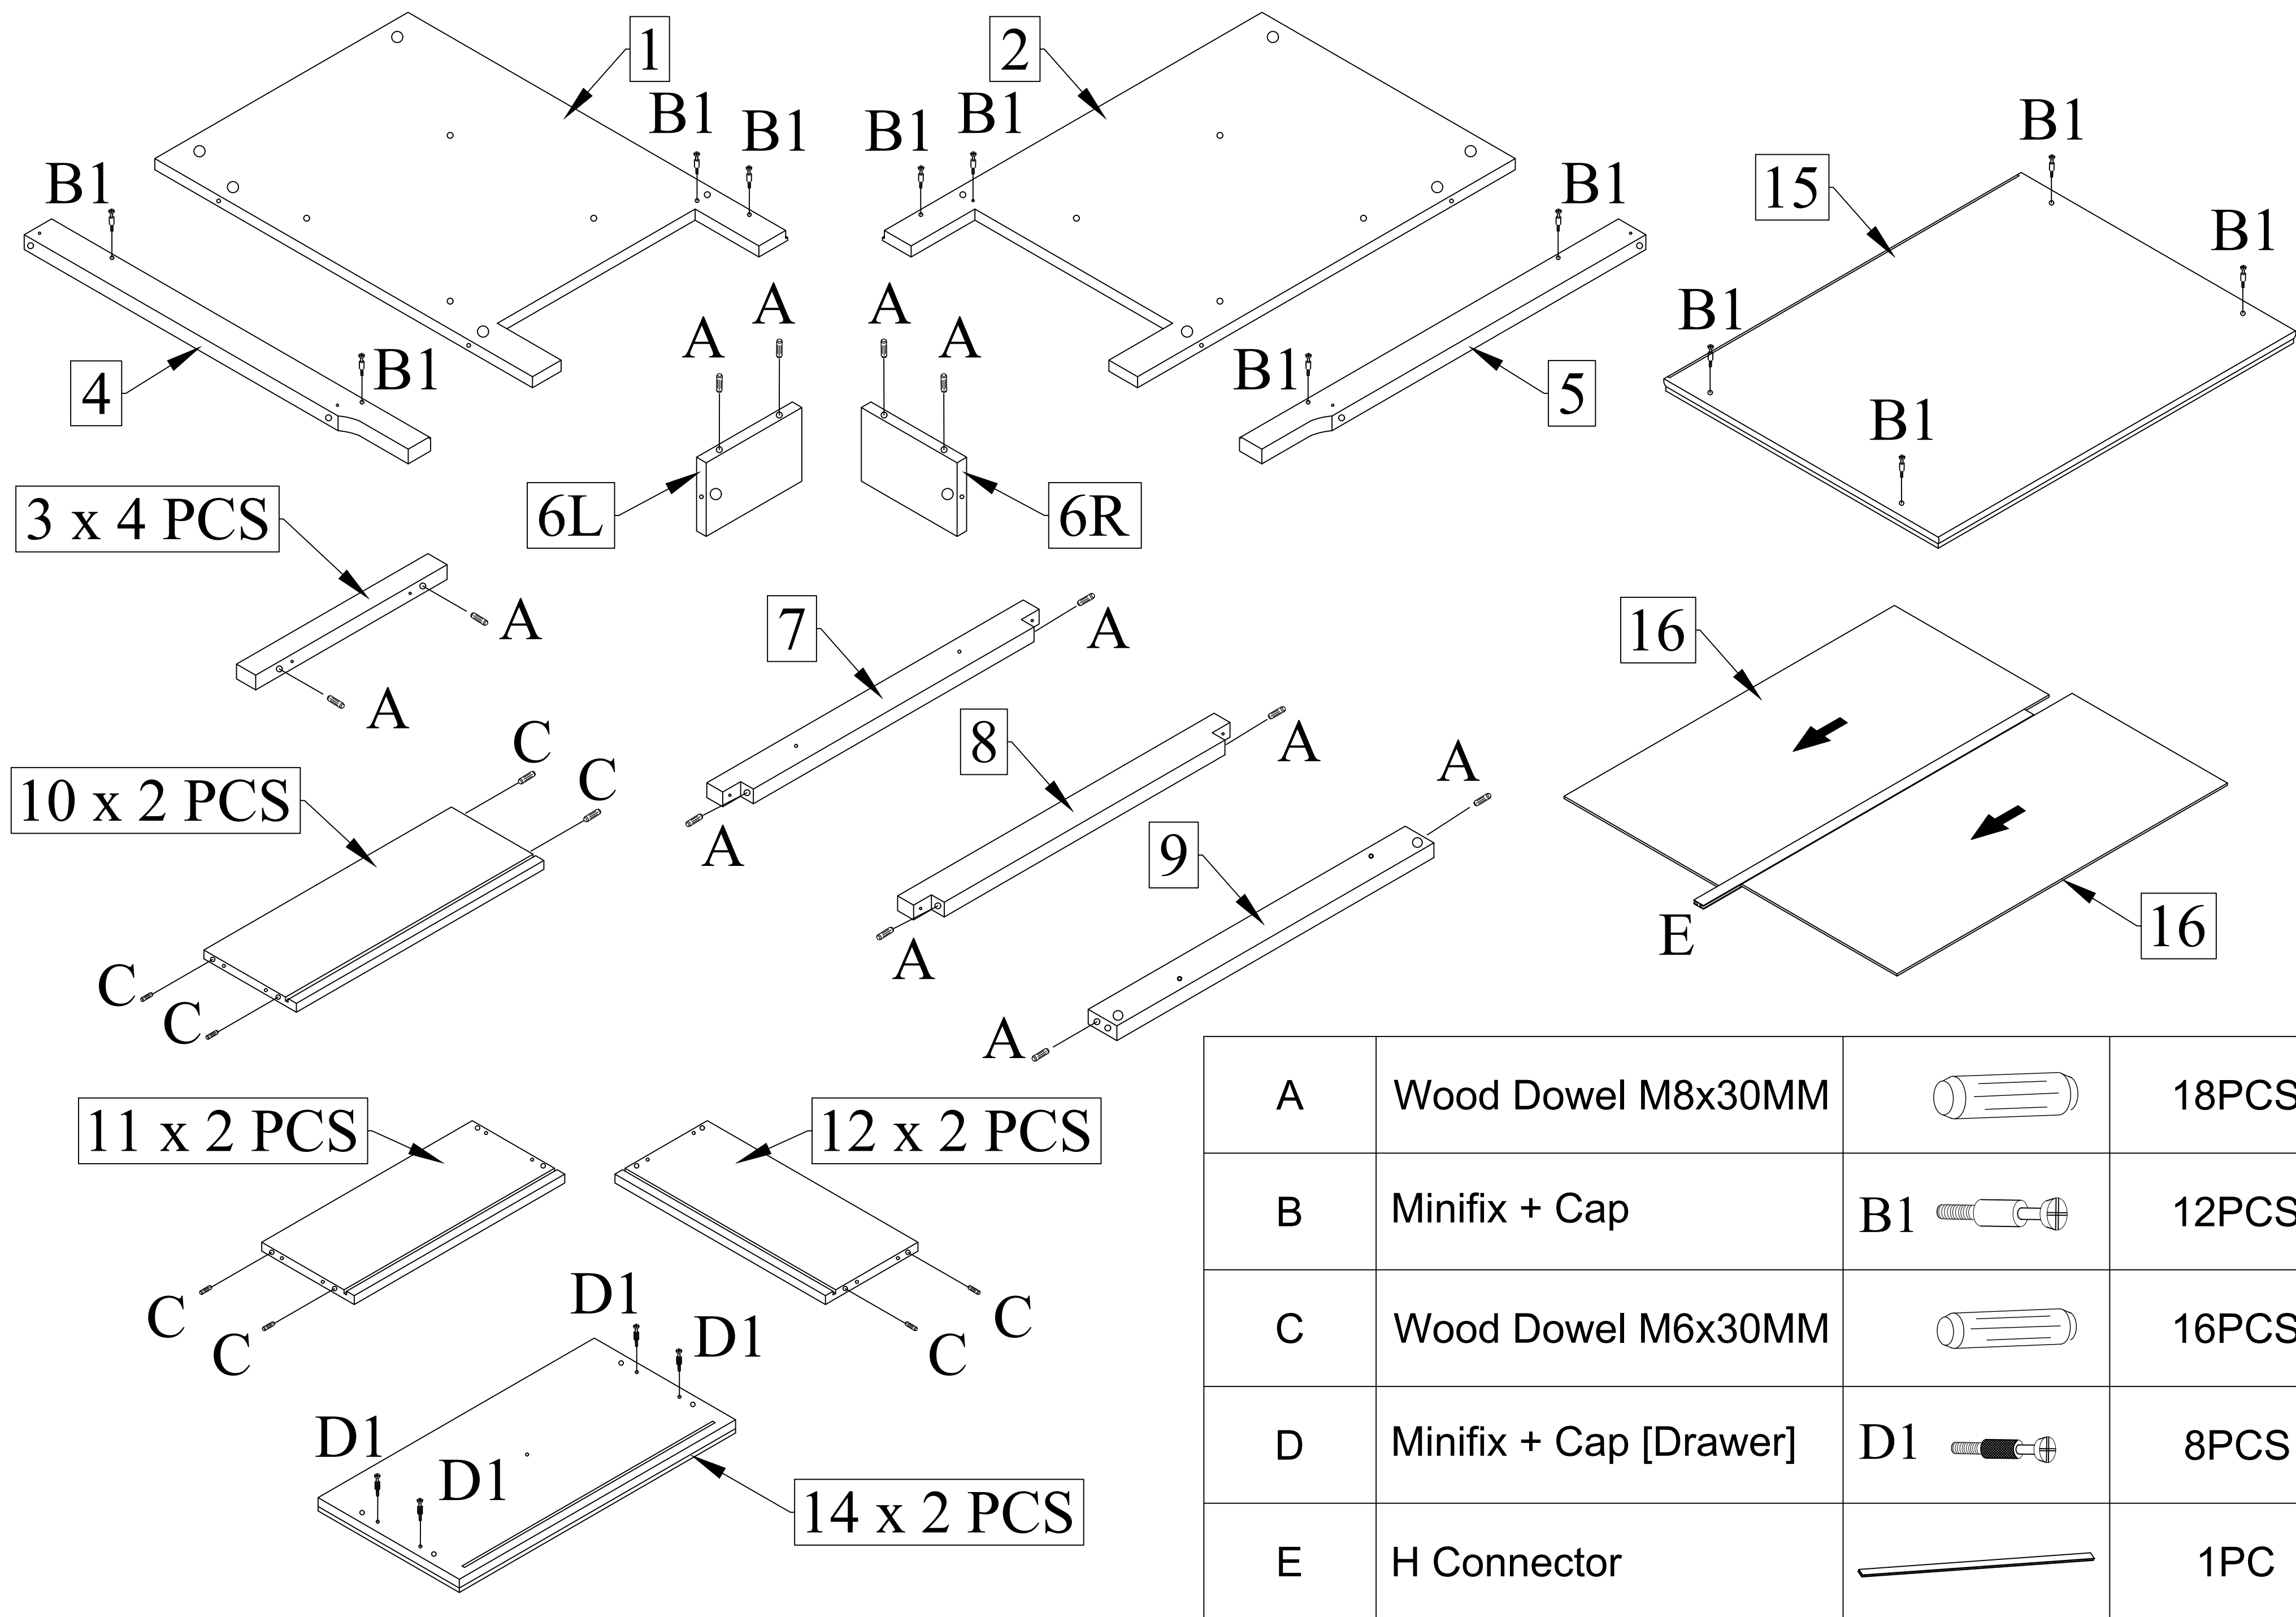

Step 2 : Connect Drawer Slide Rail (3) to Side Panel (1,2) with Screw (F).

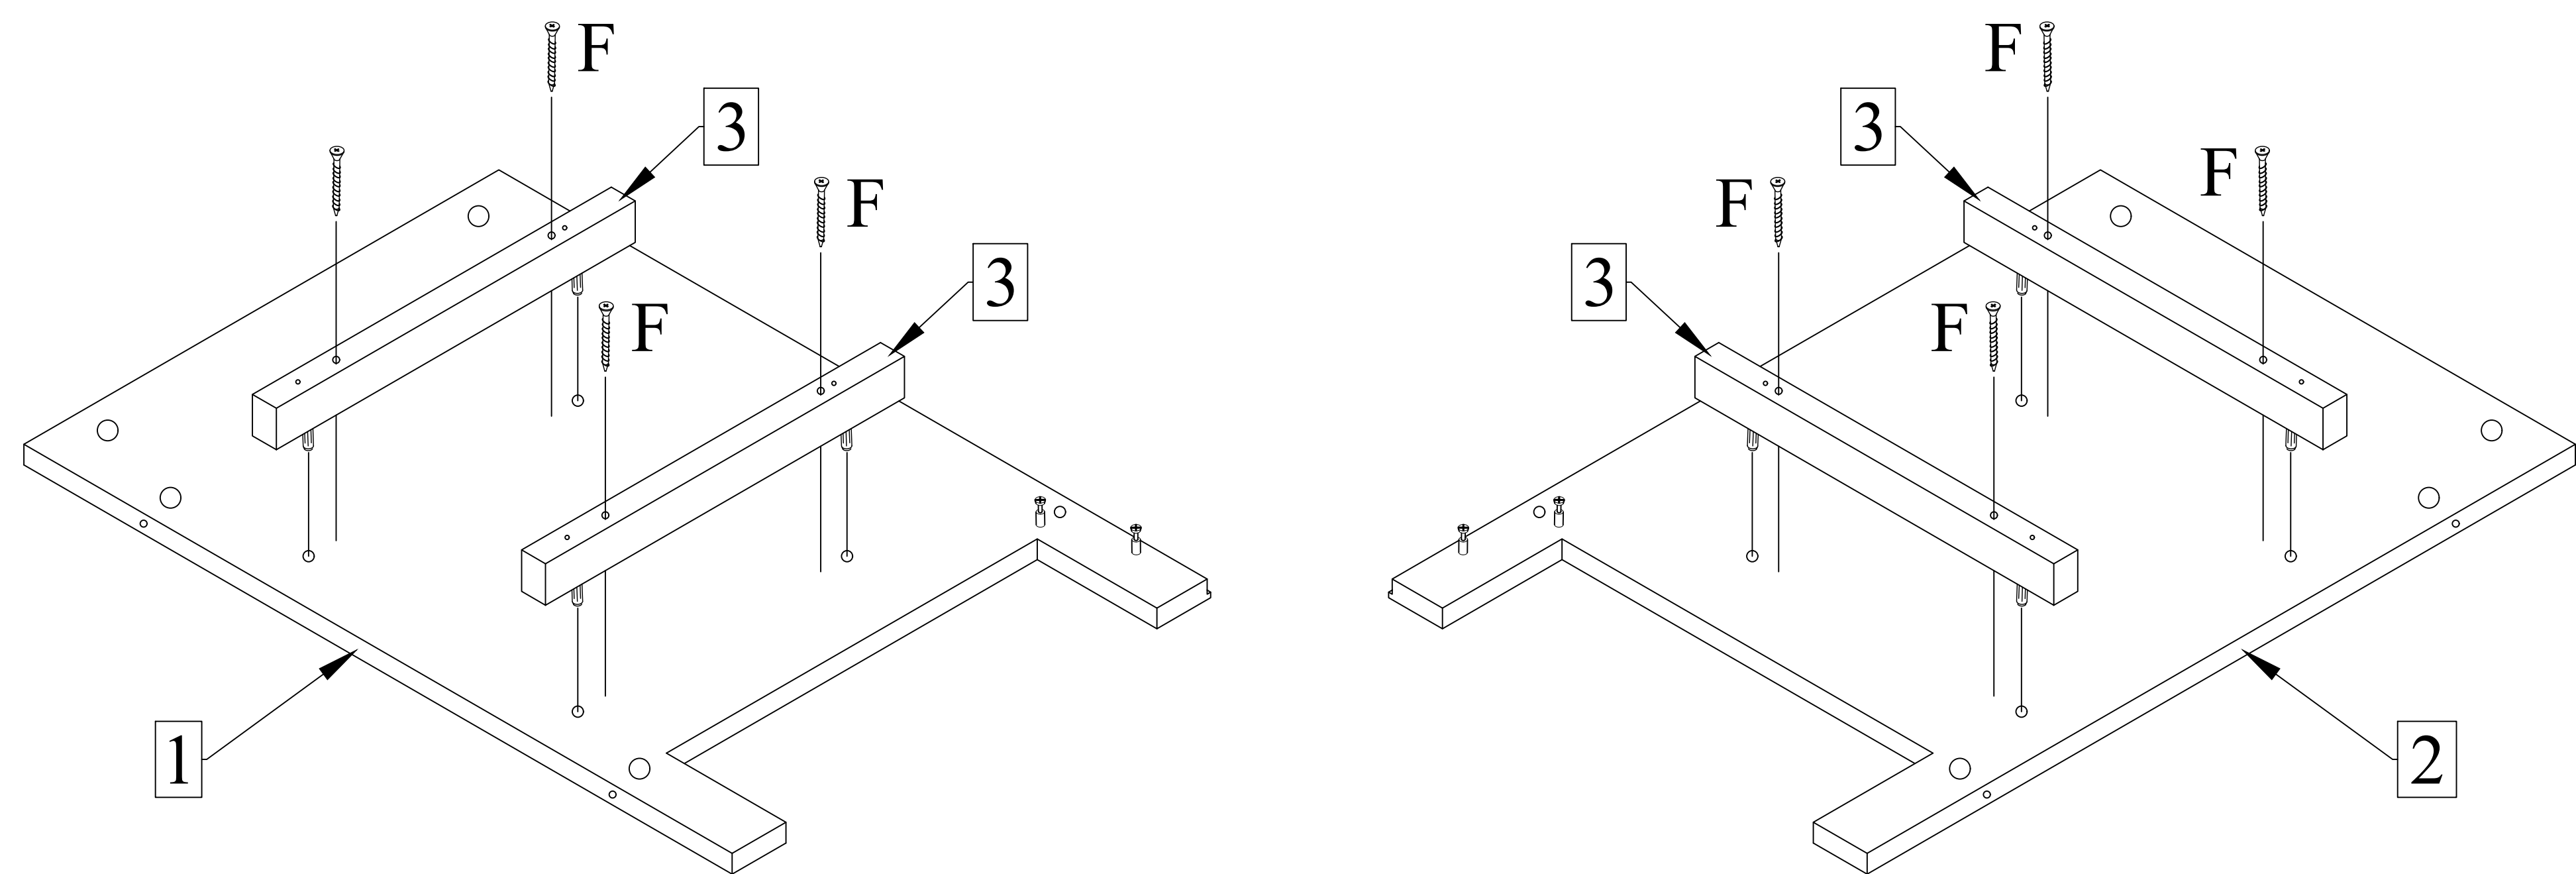

F	Screw M4 x 32MM		8PCS
---	-----------------	--	------


ASSEMBLY INSTRUCTIONS



Item No : WF299160AAK

Description : NIGHT STAND



Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

Step 3 : Attach Drawer Slide (G1) onto the Rail on Side Panel using Screw (H).

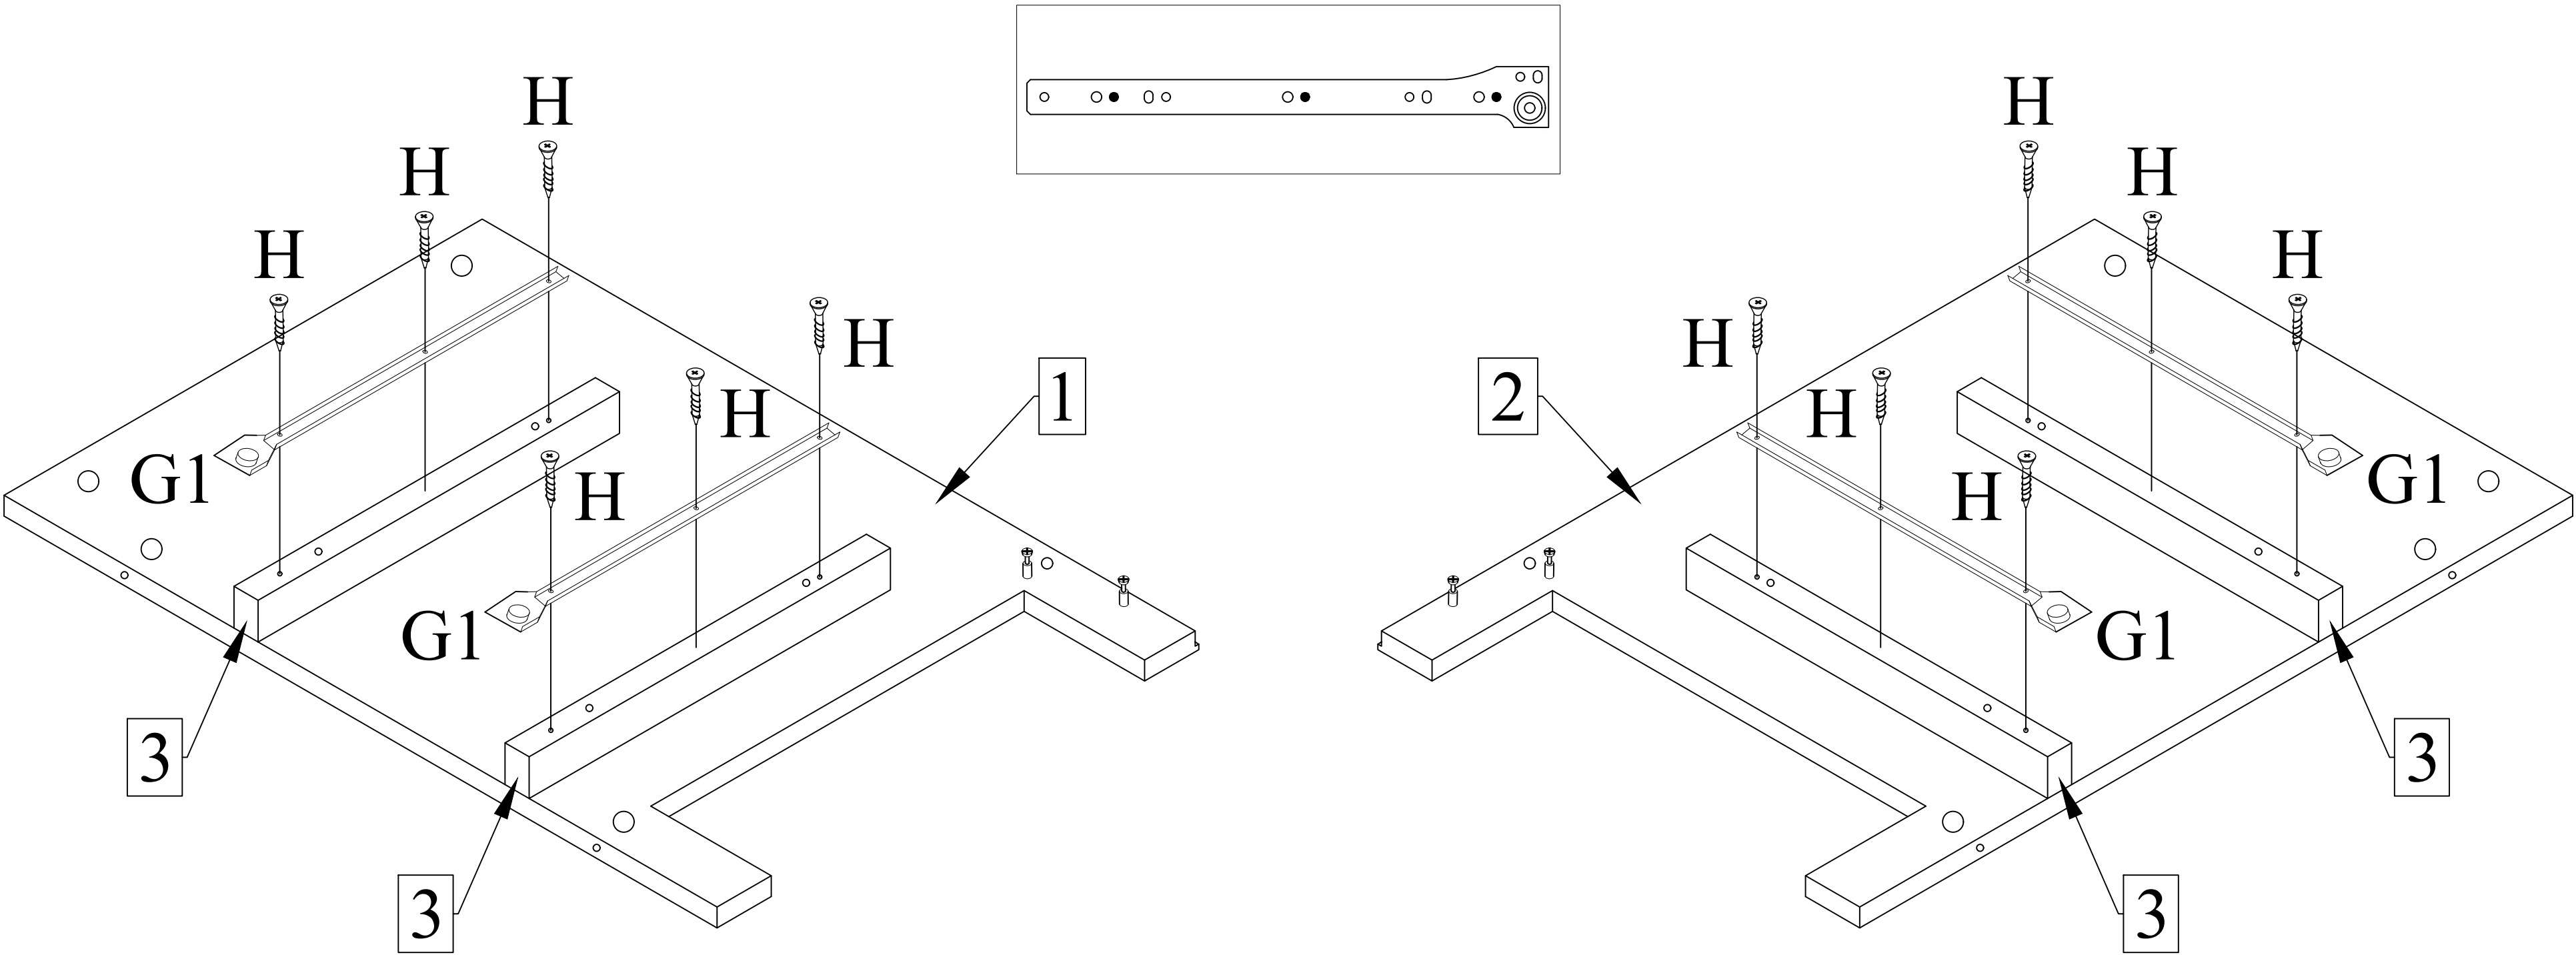


G	Drawer Slide	G1 	2SETS
H	Screw M3 x 12MM		12PCS

Step 4 : Connect Pillar (4,5) to Side Panel and lock Minifix Cap (B2).

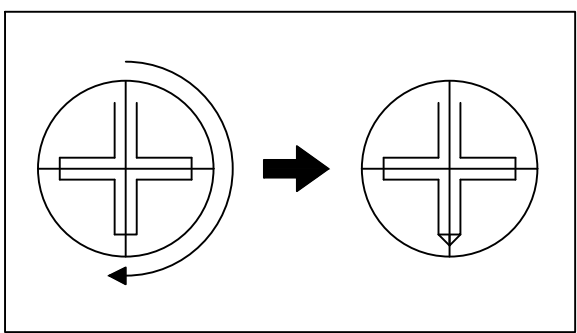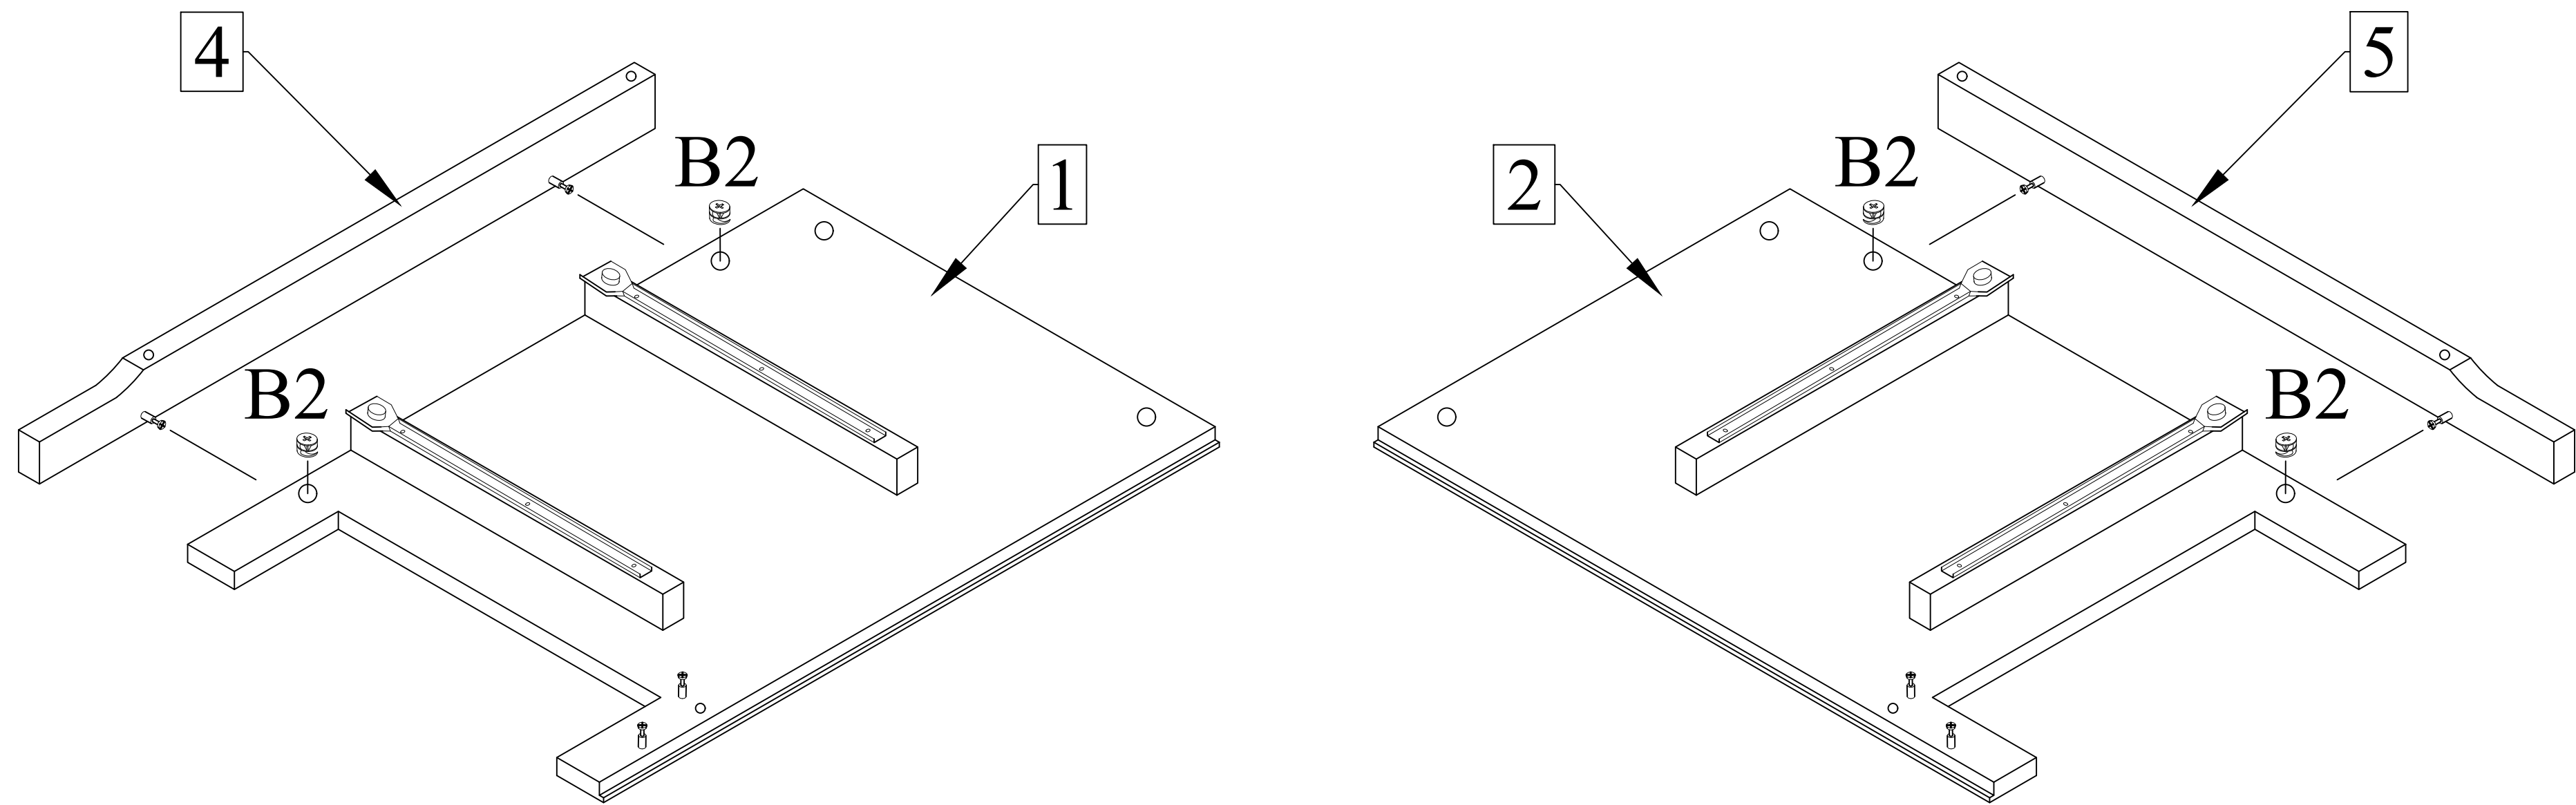

Lock Minifix cap clockwise

B	Minifix Cap	B2 	4PCS
---	-------------	--	------


ASSEMBLY INSTRUCTIONS

Item No : WF299160AAK



Description : NIGHT STAND

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.


Step 5 : Attach Leg (6) onto Back Rail (9) using Screw (F).
Connect Side Panels with Top Rail (7), Bottom Rail (8) and Back Rail (9,6).
Lock Back Rail (9) with Minifix Cap (B2).
Lock Top & Bottom Rails (7,8) with Screw (F).

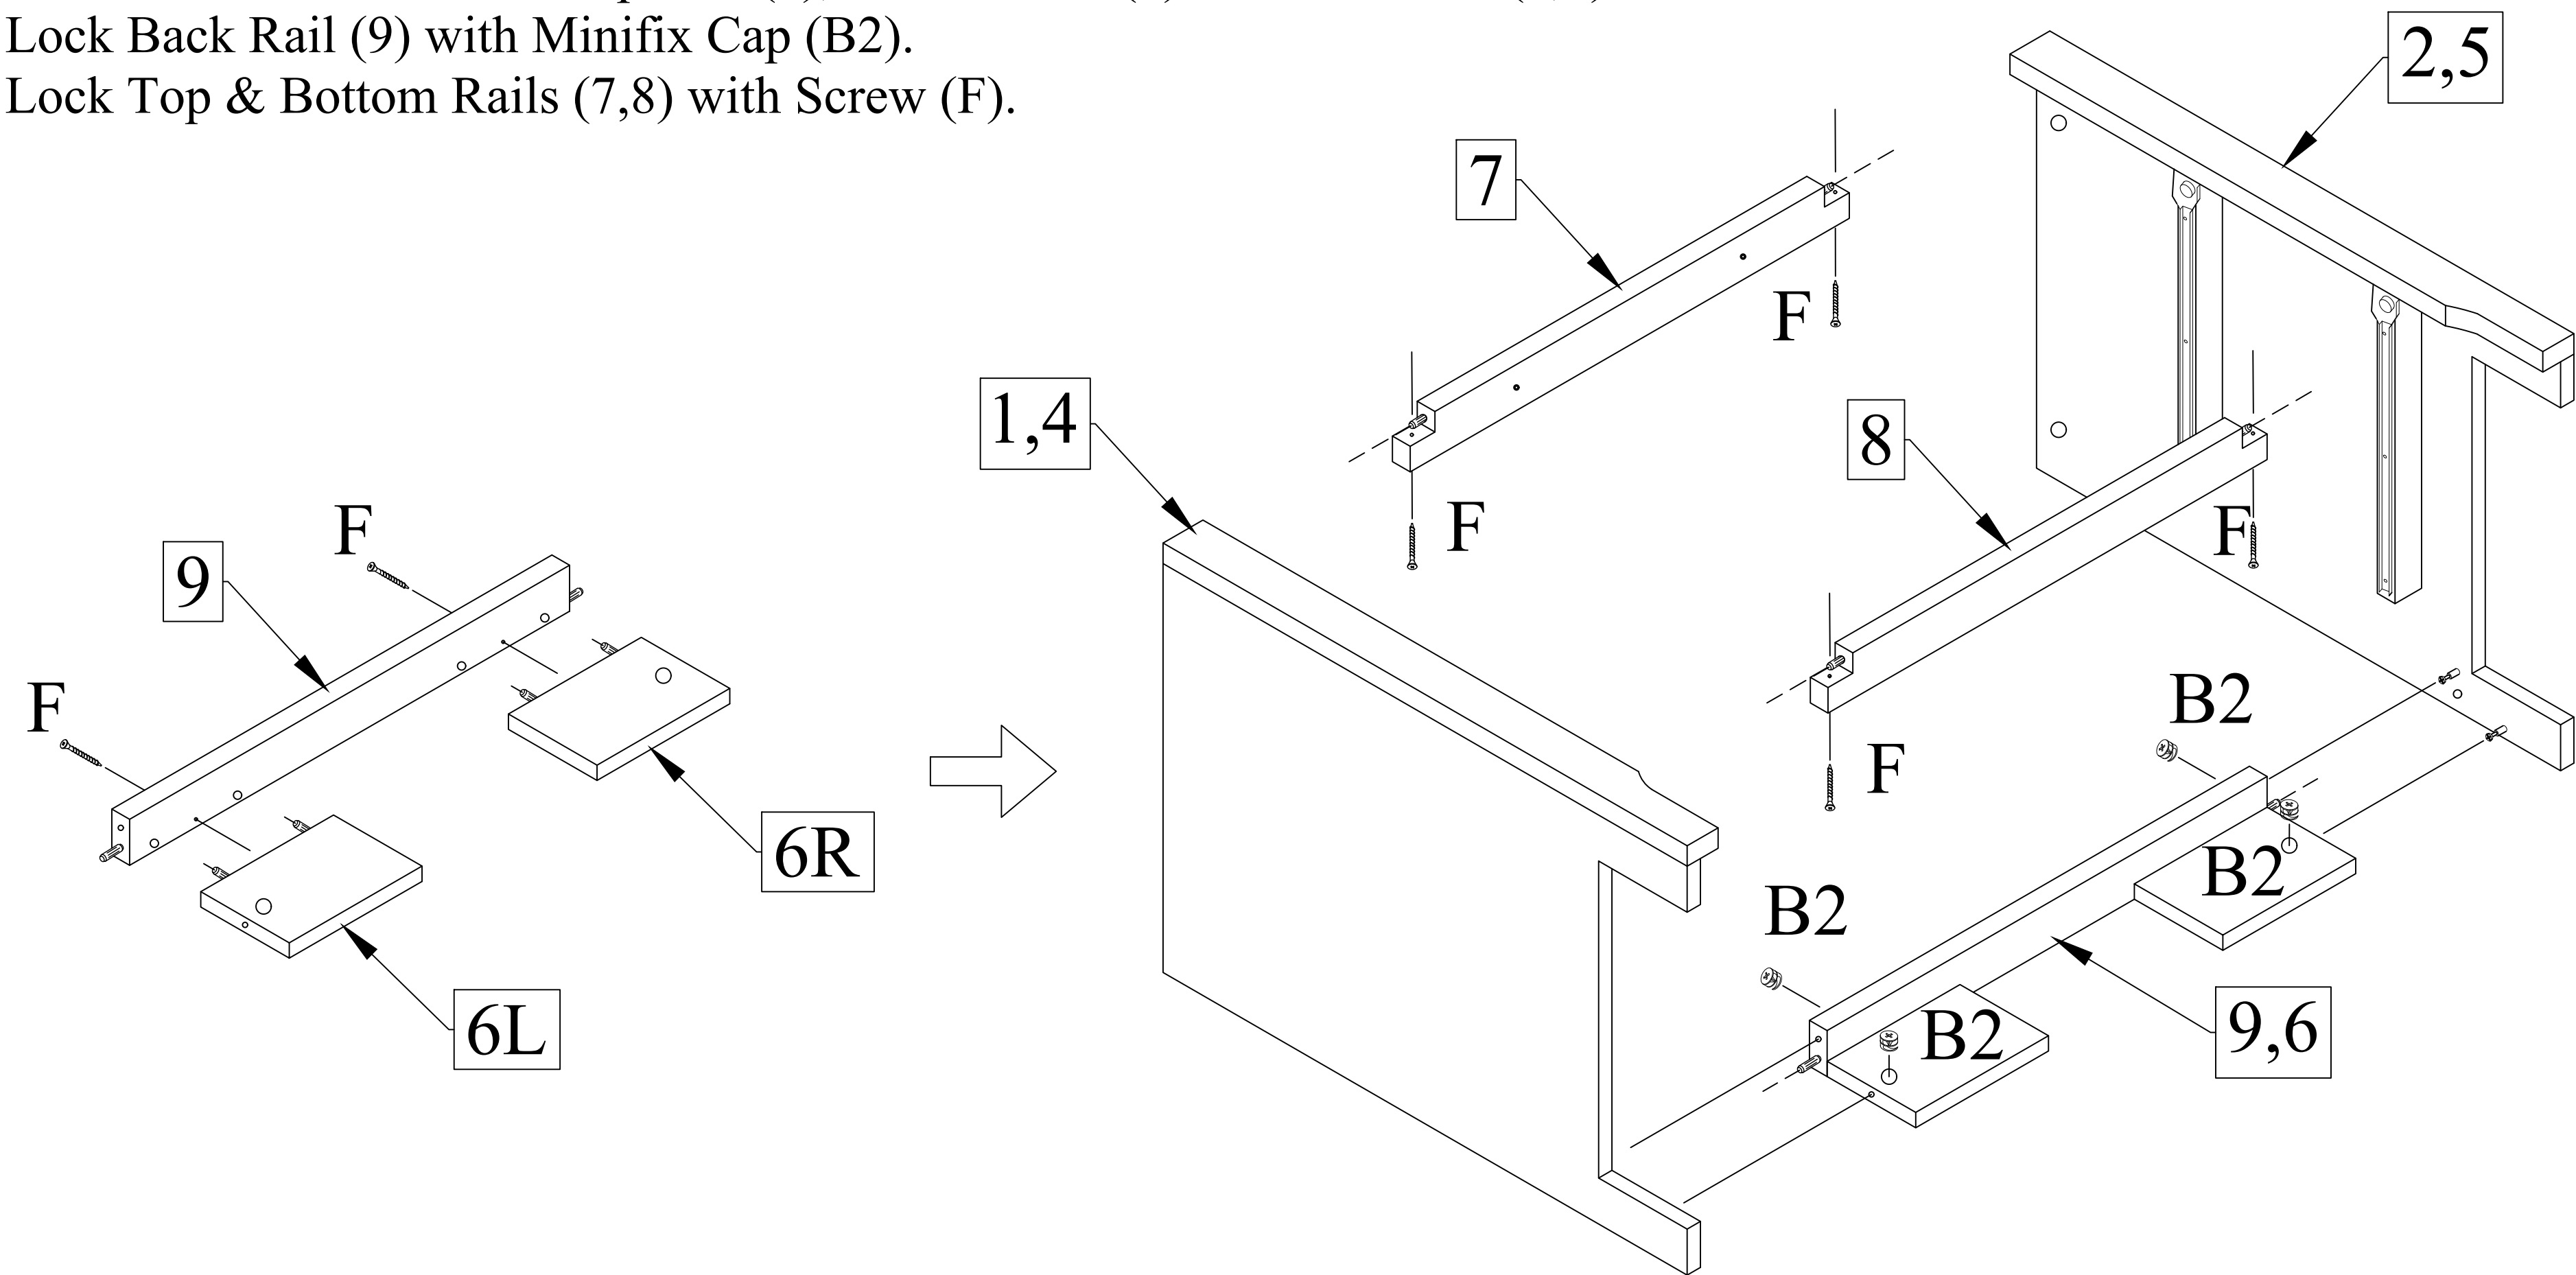

Lock Minifix cap clockwise



B	Minifix Cap	B2 	4PCS
F	Screw M4 x 32MM		6PCS

Step 6 : Attach Top Panel (15) and lock with Minifix Cap (B2) and Screw (F). Attach Back Panel (16) with Screw (H).

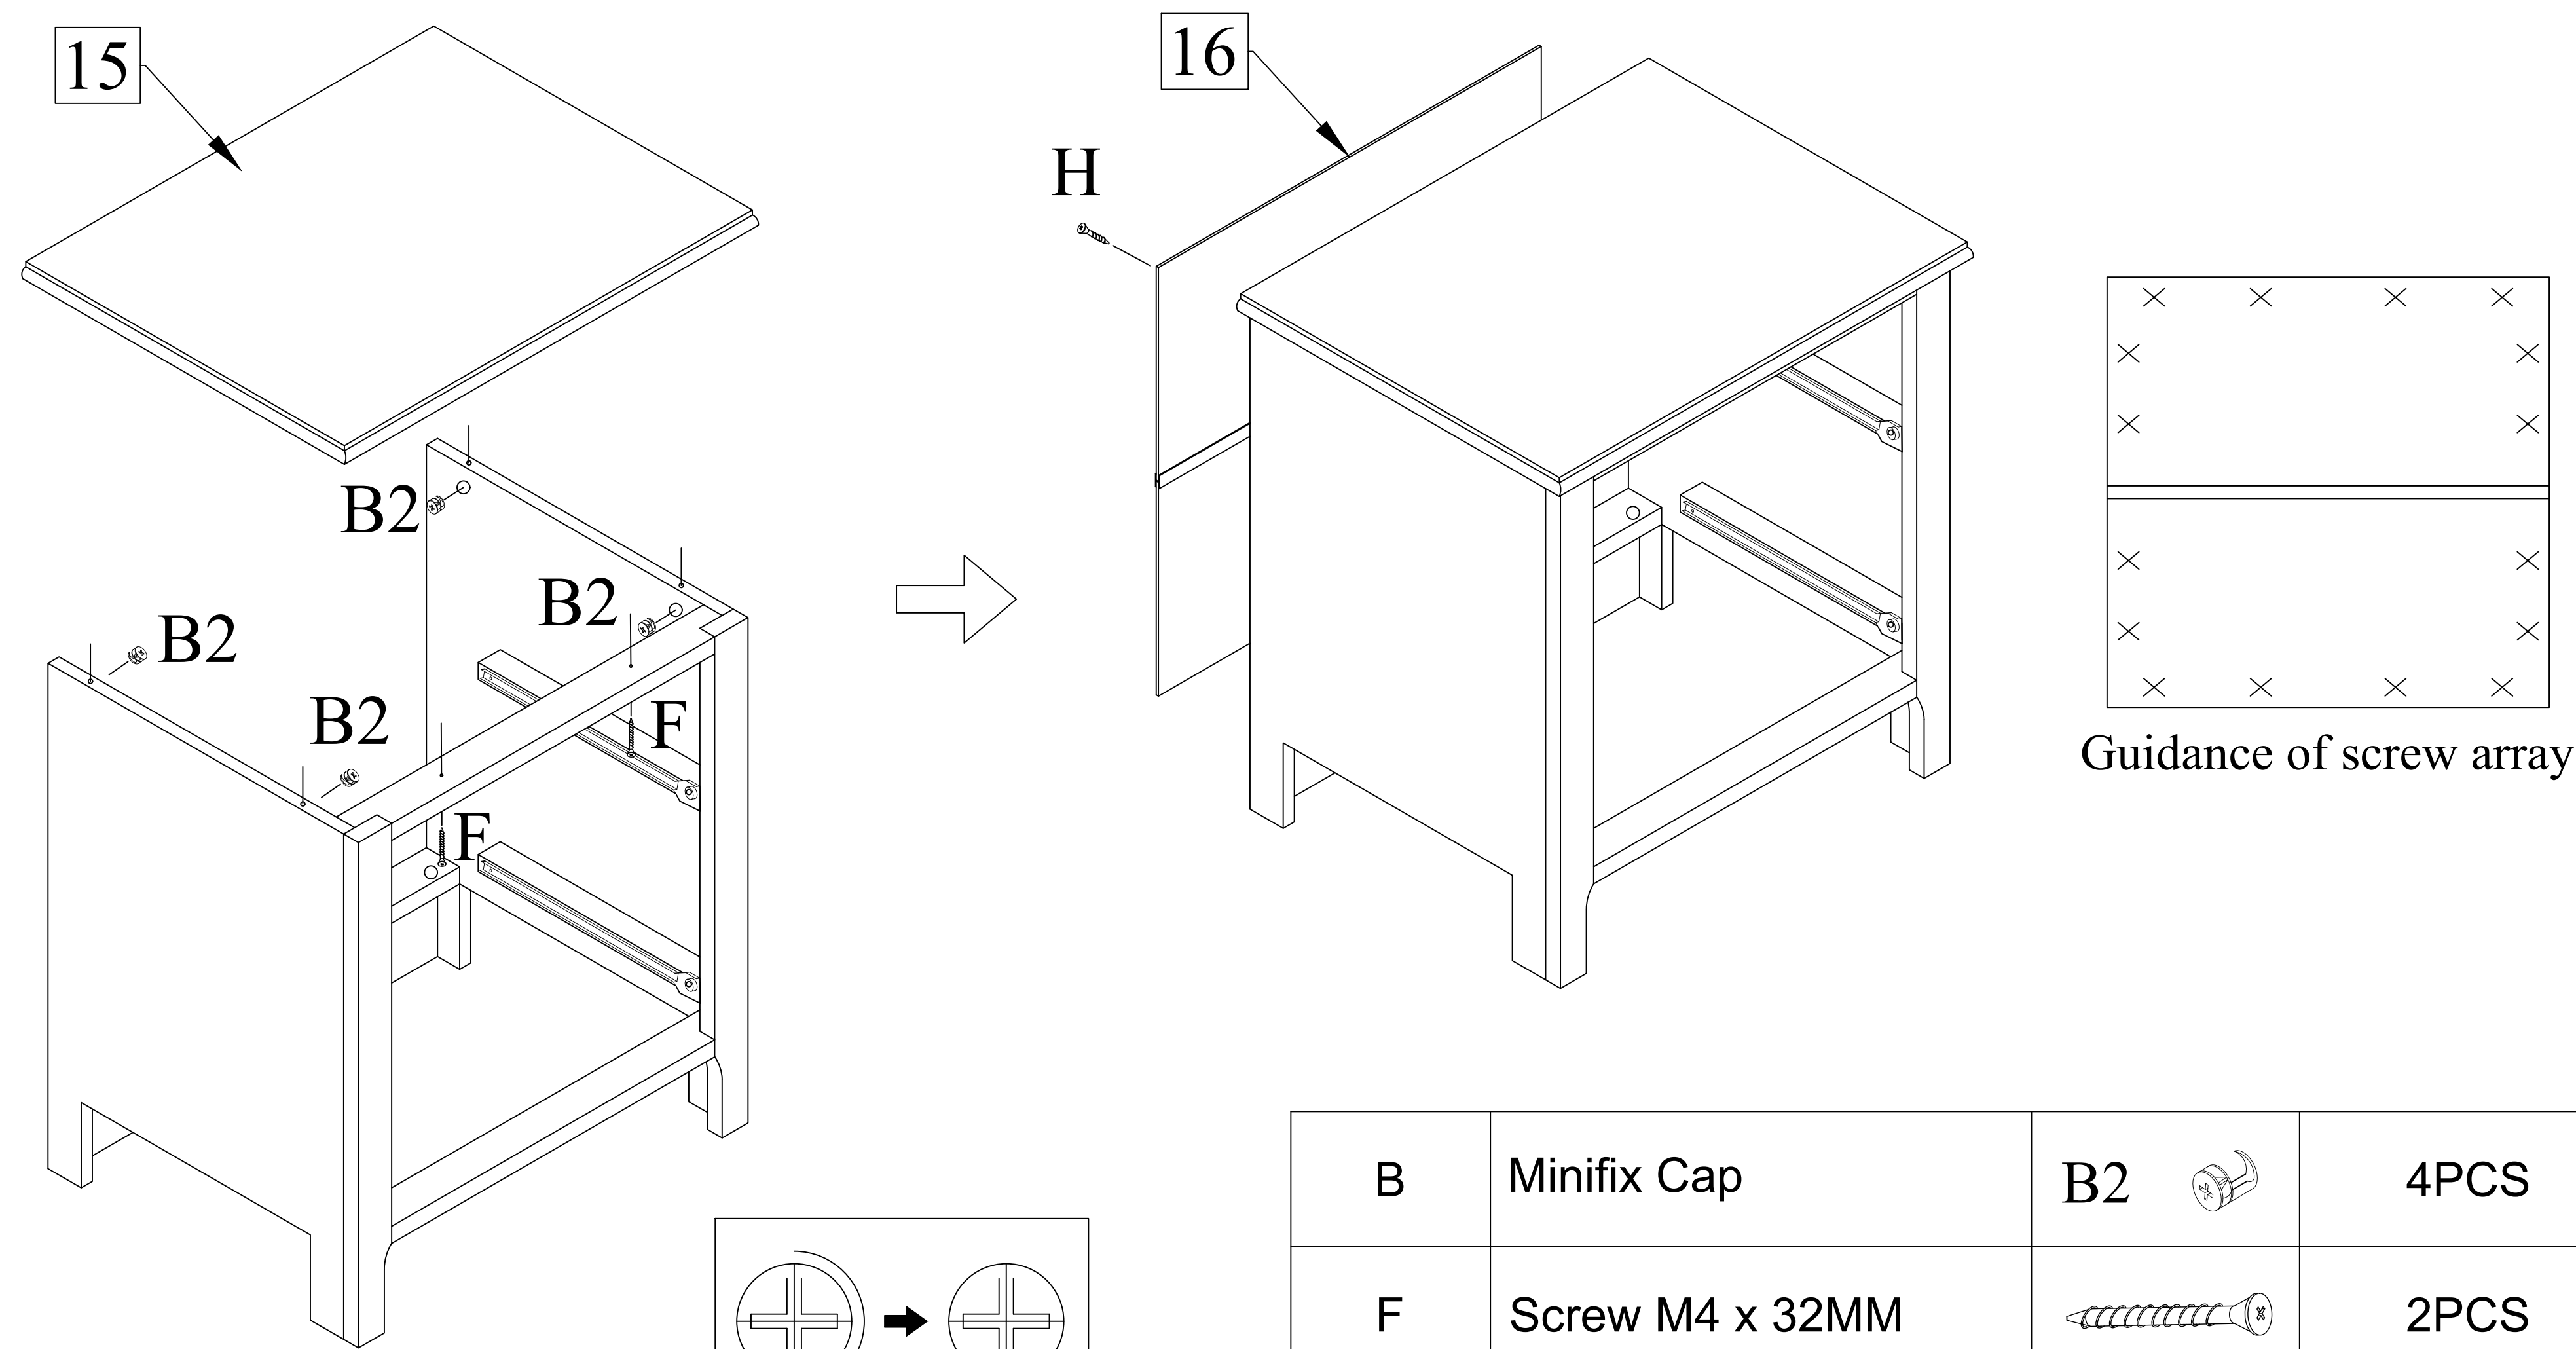

Guidance of screw array

Lock Minifix cap clockwise

B	Minifix Cap	B2 	4PCS
F	Screw M4 x 32MM		2PCS
H	Screw M3 x 12MM		16PCS

ASSEMBLY INSTRUCTIONS

Item No : WF299160AAK

Description : NIGHT STAND

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

Step 7: Drawer assembly.


First connect Drawer Back (10) to Drawer Side - L (11) and Drawer Side - R (12) with Screw (F).

Next, slot in the the Drawer Base (13).


Then, install Handle with Screw (I1&I2) onto Drawer Front (14). Attach Drawer Front (14) to the drawer box and lock Minifix Cap [Drawer] (D2).

Finally, install Drawer Slide (G2) onto the drawer box using Screw (H).

Drawer assembly x 2

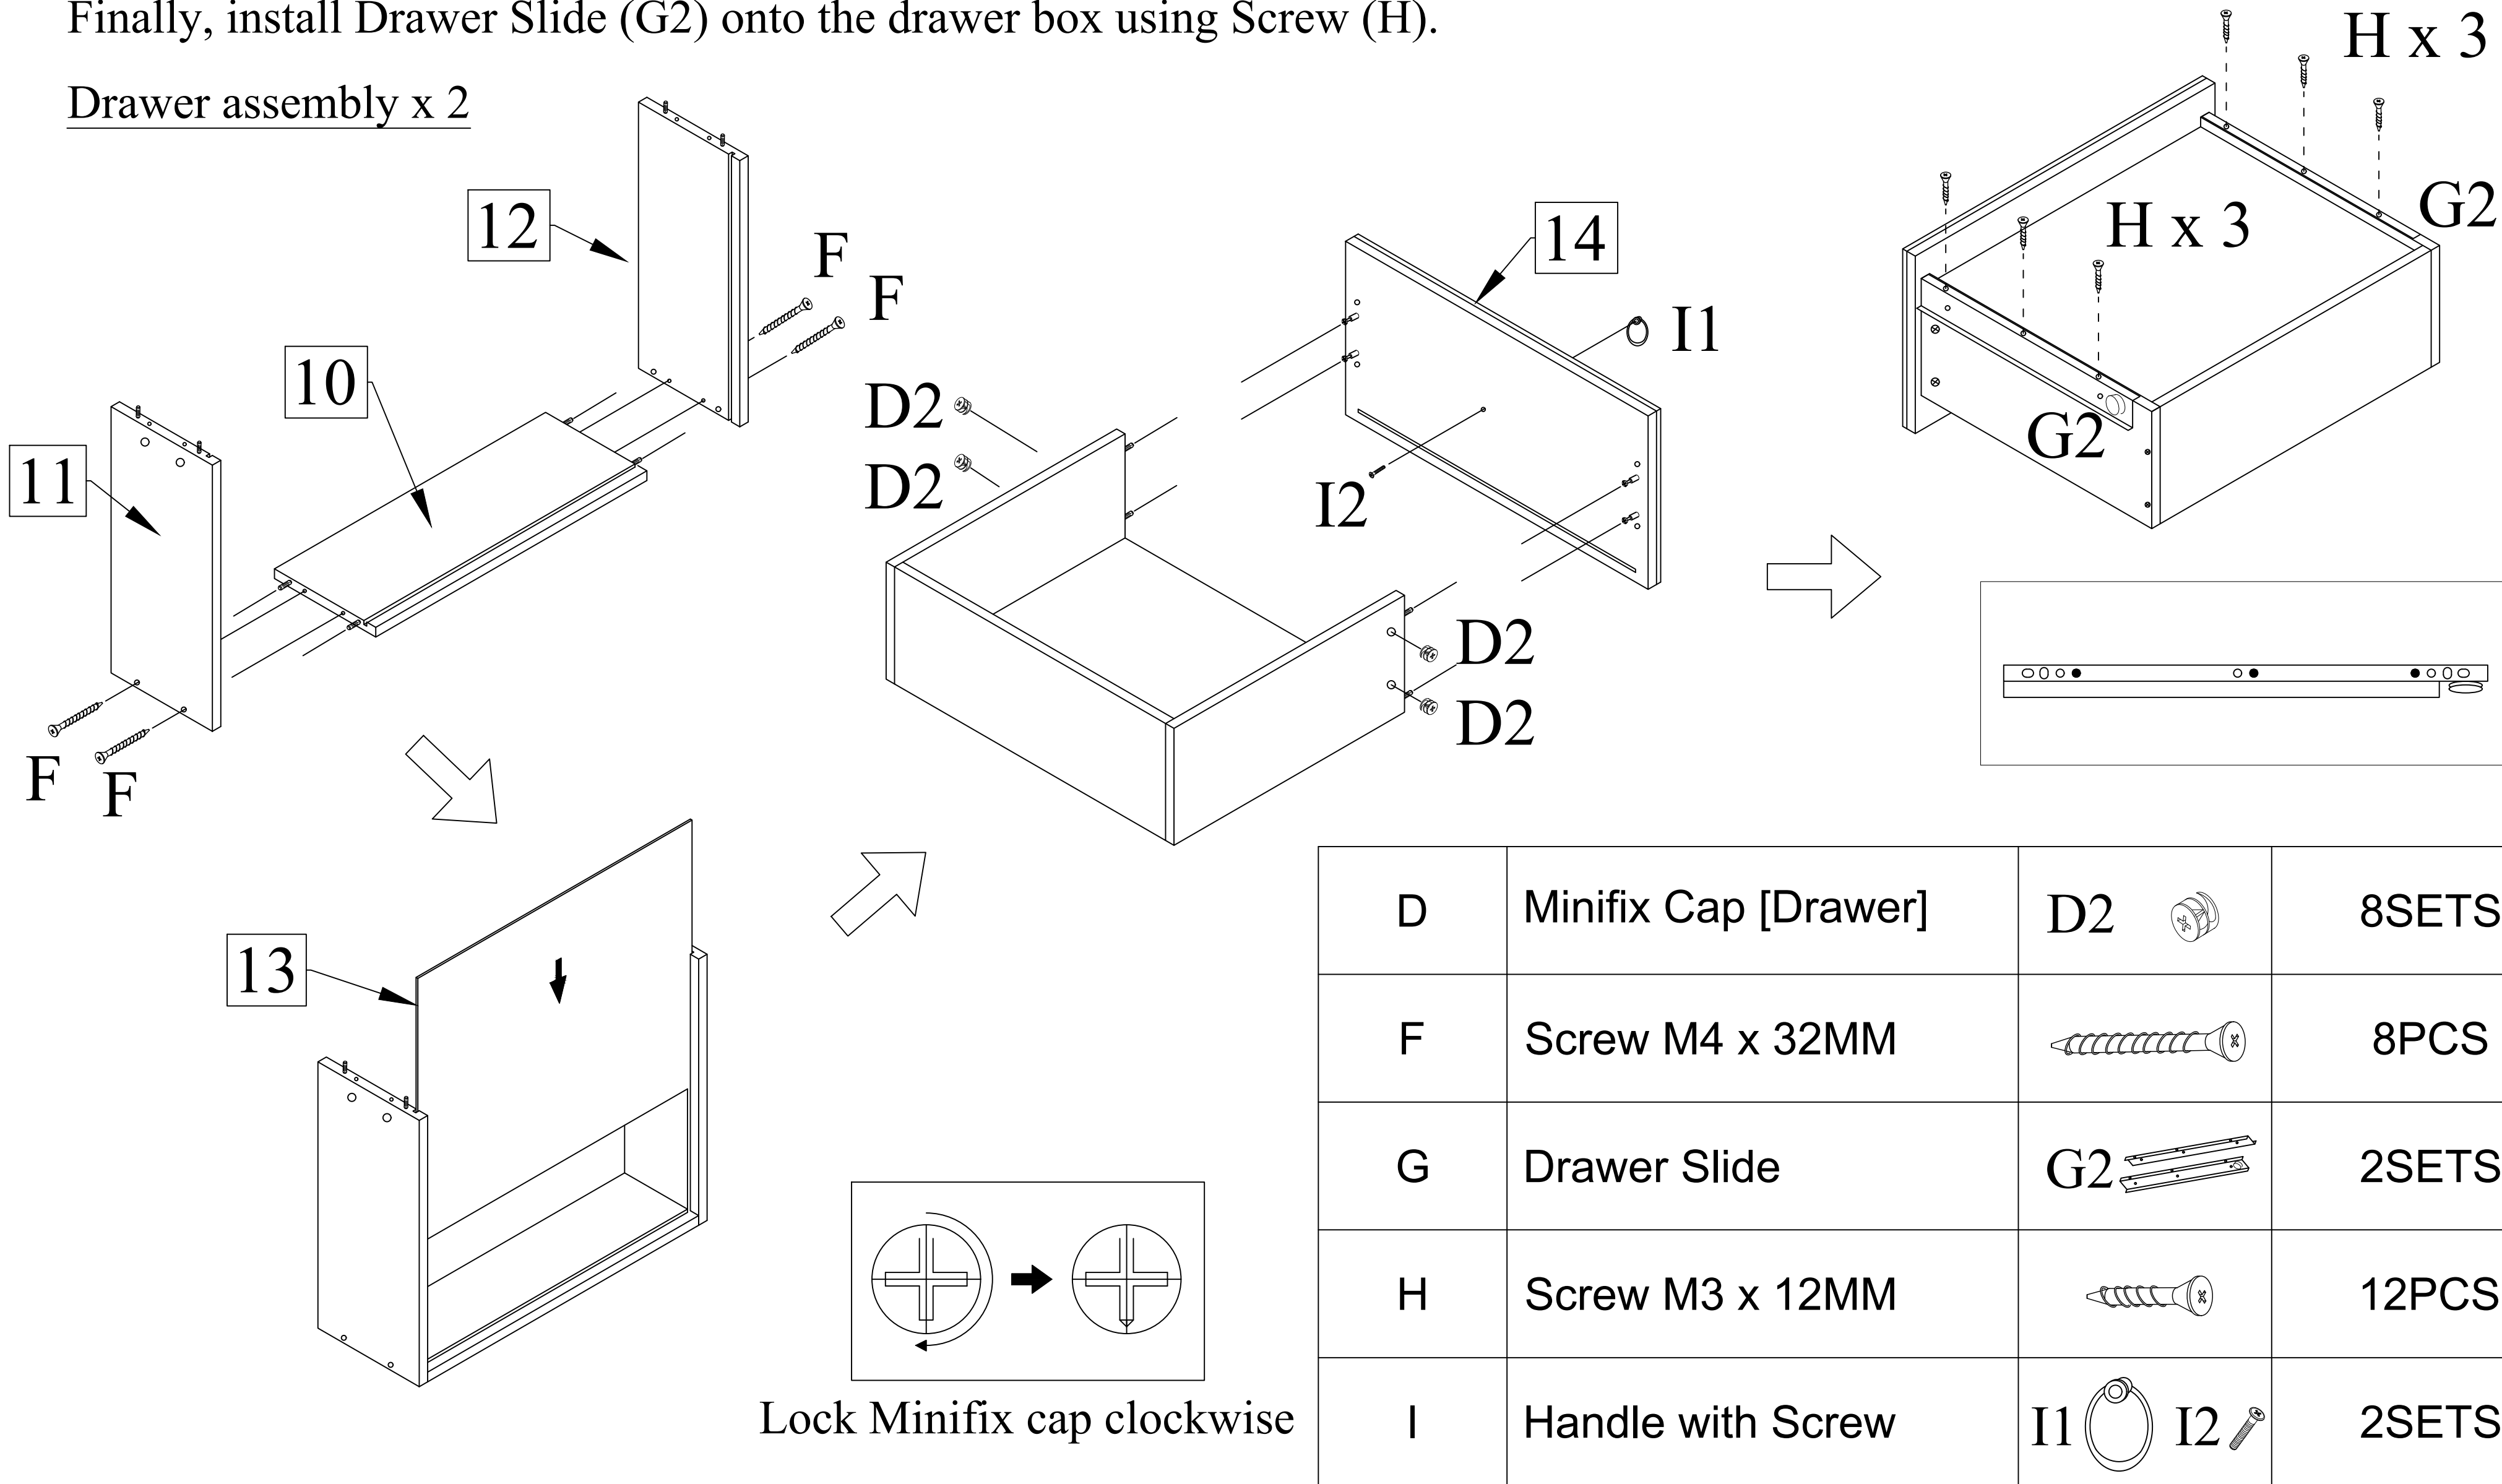

Step 8 : Insert the drawer box, complete assembly.

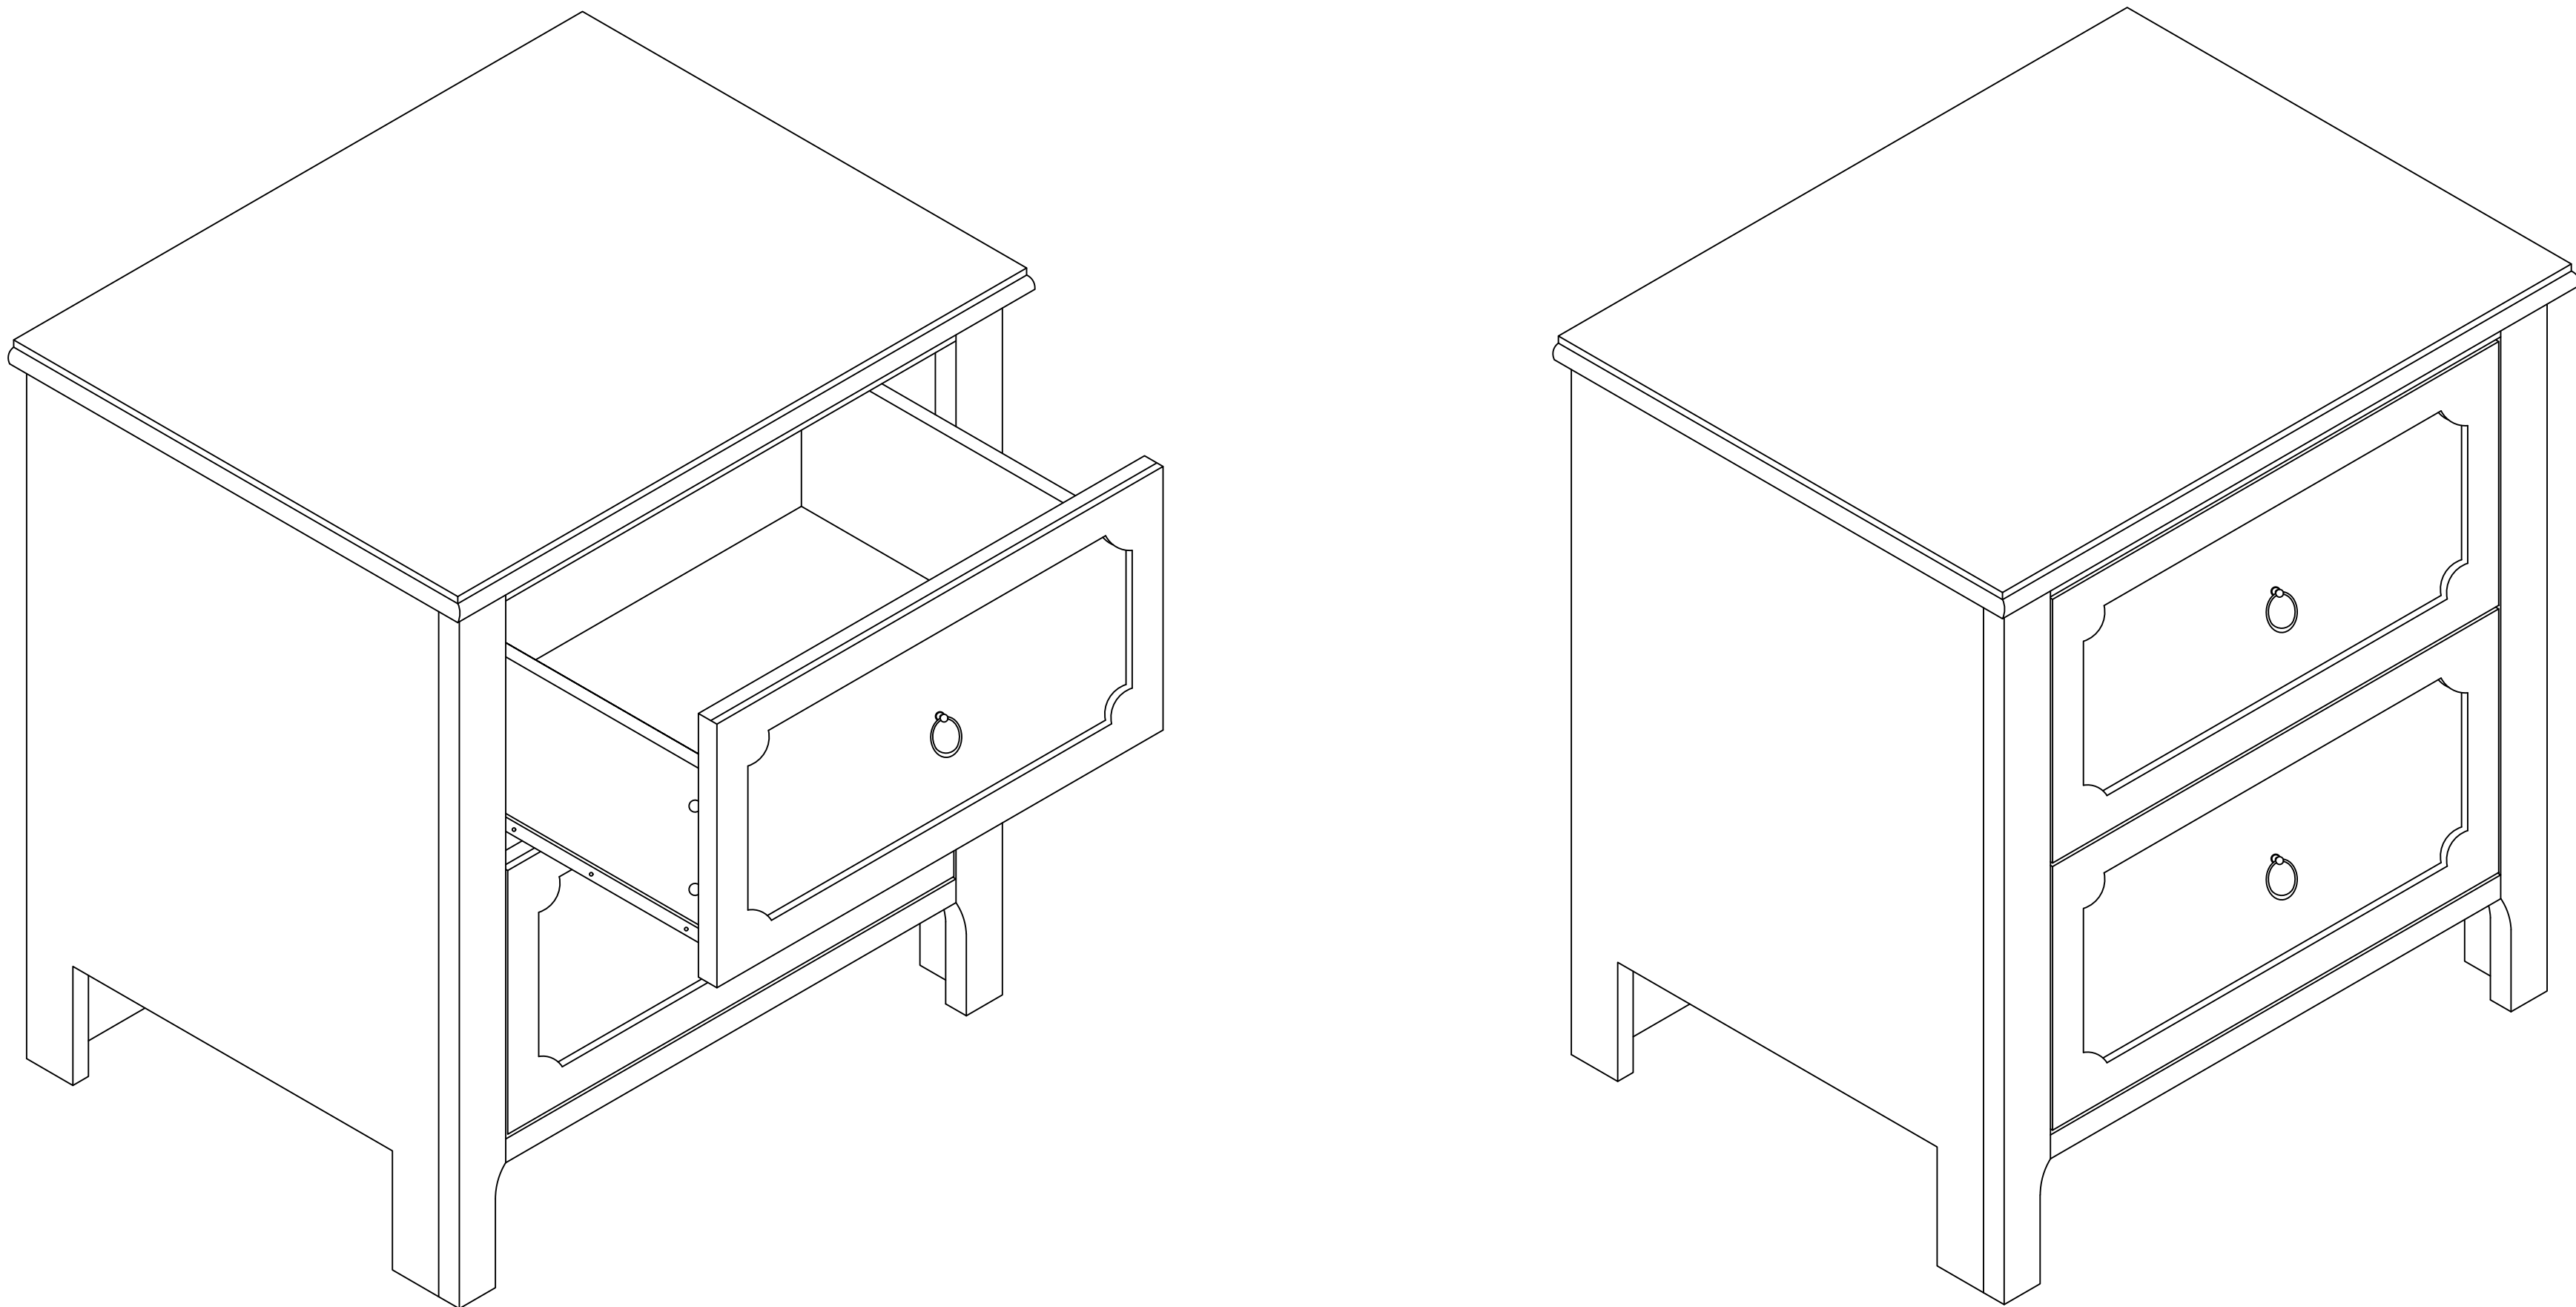

ASSEMBLY INSTRUCTIONS

Item No : WF299164AAK

Description : DRESSER

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.




WF299164AAK

ASSEMBLY INSTRUCTIONS

Item No : WF299164AAK

Description : DRESSER


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

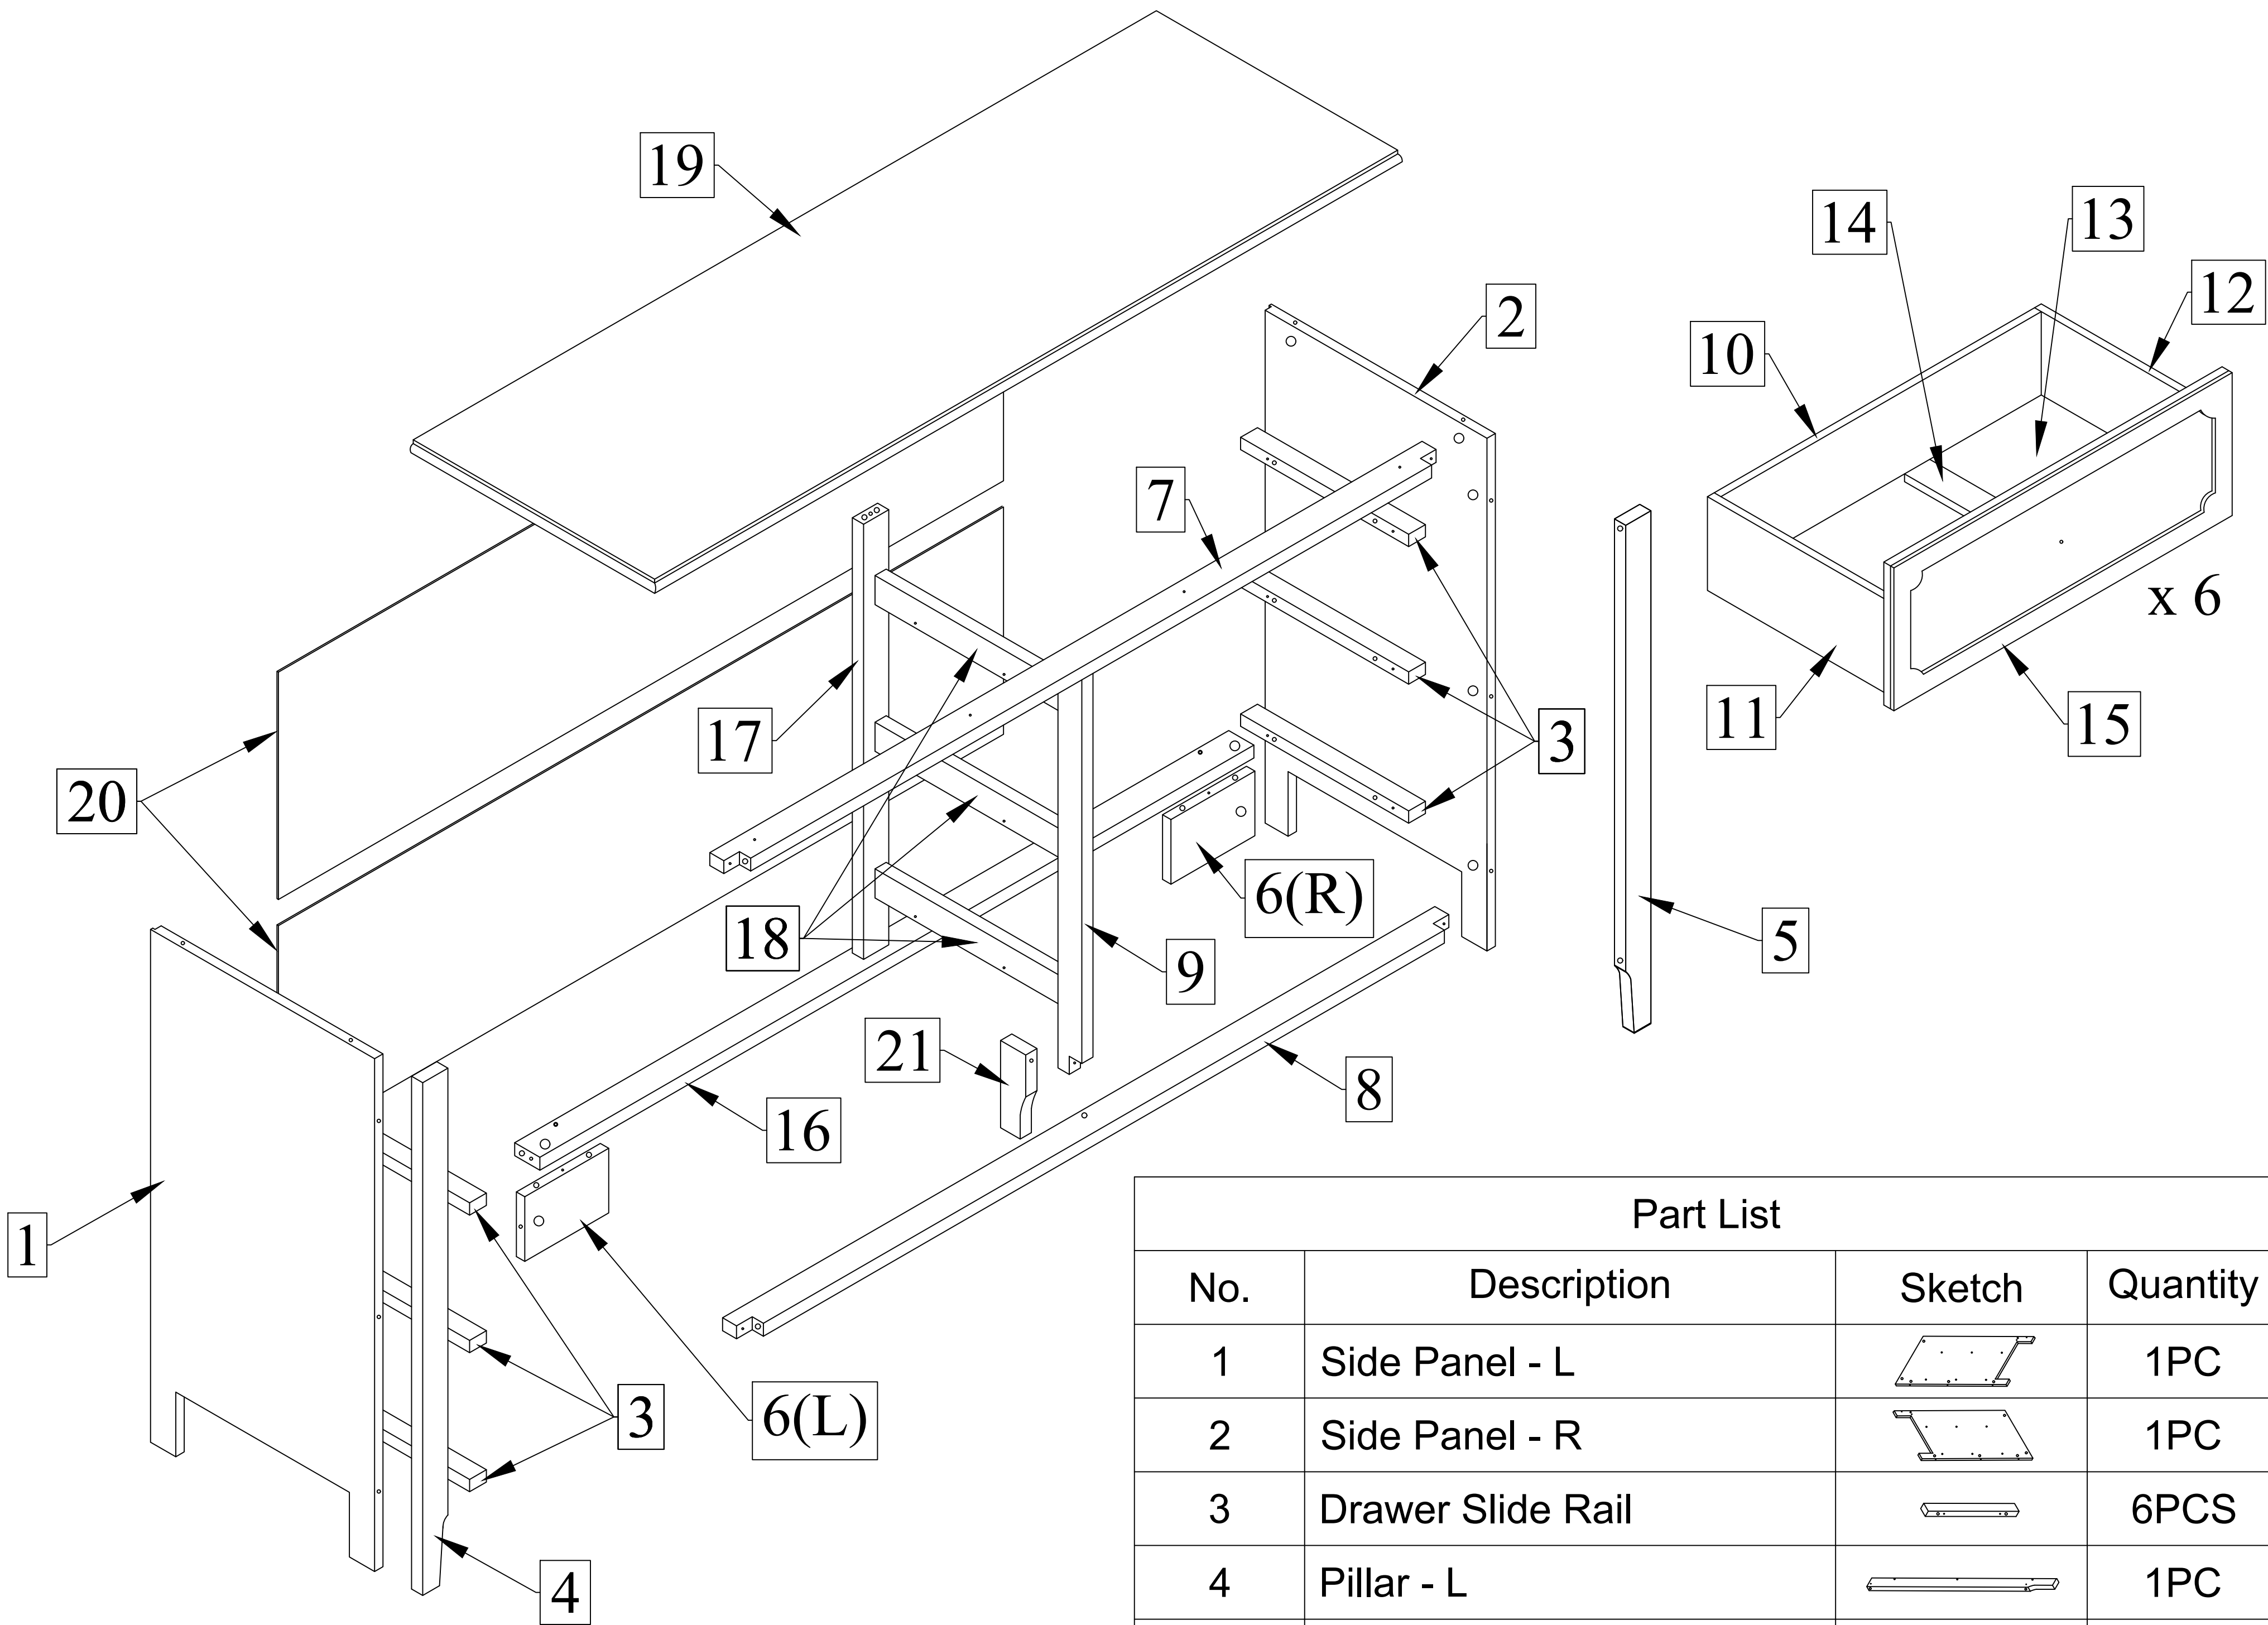

Part List

No.	Description	Sketch	Quantity
1	Side Panel - L		1PC
2	Side Panel - R		1PC
3	Drawer Slide Rail		6PCS
4	Pillar - L		1PC
5	Pillar - R		1PC
6	Leg (L & R)	L R	2PCS
7	Top Rail		1PC
8	Bottom Rail		1PC
9	Middle Rail (Front)		1PC
10	Drawer Back		6PCS
11	Drawer Side - L		6PCS
12	Drawer Side - R		6PCS
13	Drawer Base		6PCS
14	Drawer Base Support		6PCS
15	Drawer Front - 3L3R		6PCS
16	Back Rail		1PC
17	Middle Rail (Back)		1PC
18	Center Rail		3PCS
19	Top Panel		1PC
20	Back Panel		2PCS
21	Center Leg		1PC

TOOLS REQUIRED (Not provided)



Screwdriver

Hardware List

No.	Description	Sketch	Quantity
A	Wood Dowel M8x30MM		40PCS
B	Minifix + Cap	B1 B2	14SETS
C	Wood Dowel M6x30MM		48PCS
D	Minifix + Cap [Drawer]	D1 D2	36SETS
E	H Connector		1PC
F	Screw M4 x 32MM		54PCS
G	Drawer Slide	G1 G2	6SETS
H	Screw M3 x 12MM		114PCS
I	Handle with Screw	I1 I2	6SETS


ASSEMBLY INSTRUCTIONS





Item No : WF299164AAK

Description : DRESSER

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

Step 1 : Attach Wood Dowel (A) and Minifix (B1) to parts (1,2,3,4,5,6,7,8,9,16,17,18,19) accordingly. Attached Wood Dowel (C) and Minifix [Drawer] (D1) to drawer box parts (10,11,12,15) accordingly. Slot Back Panel (20) into H Connector (E).

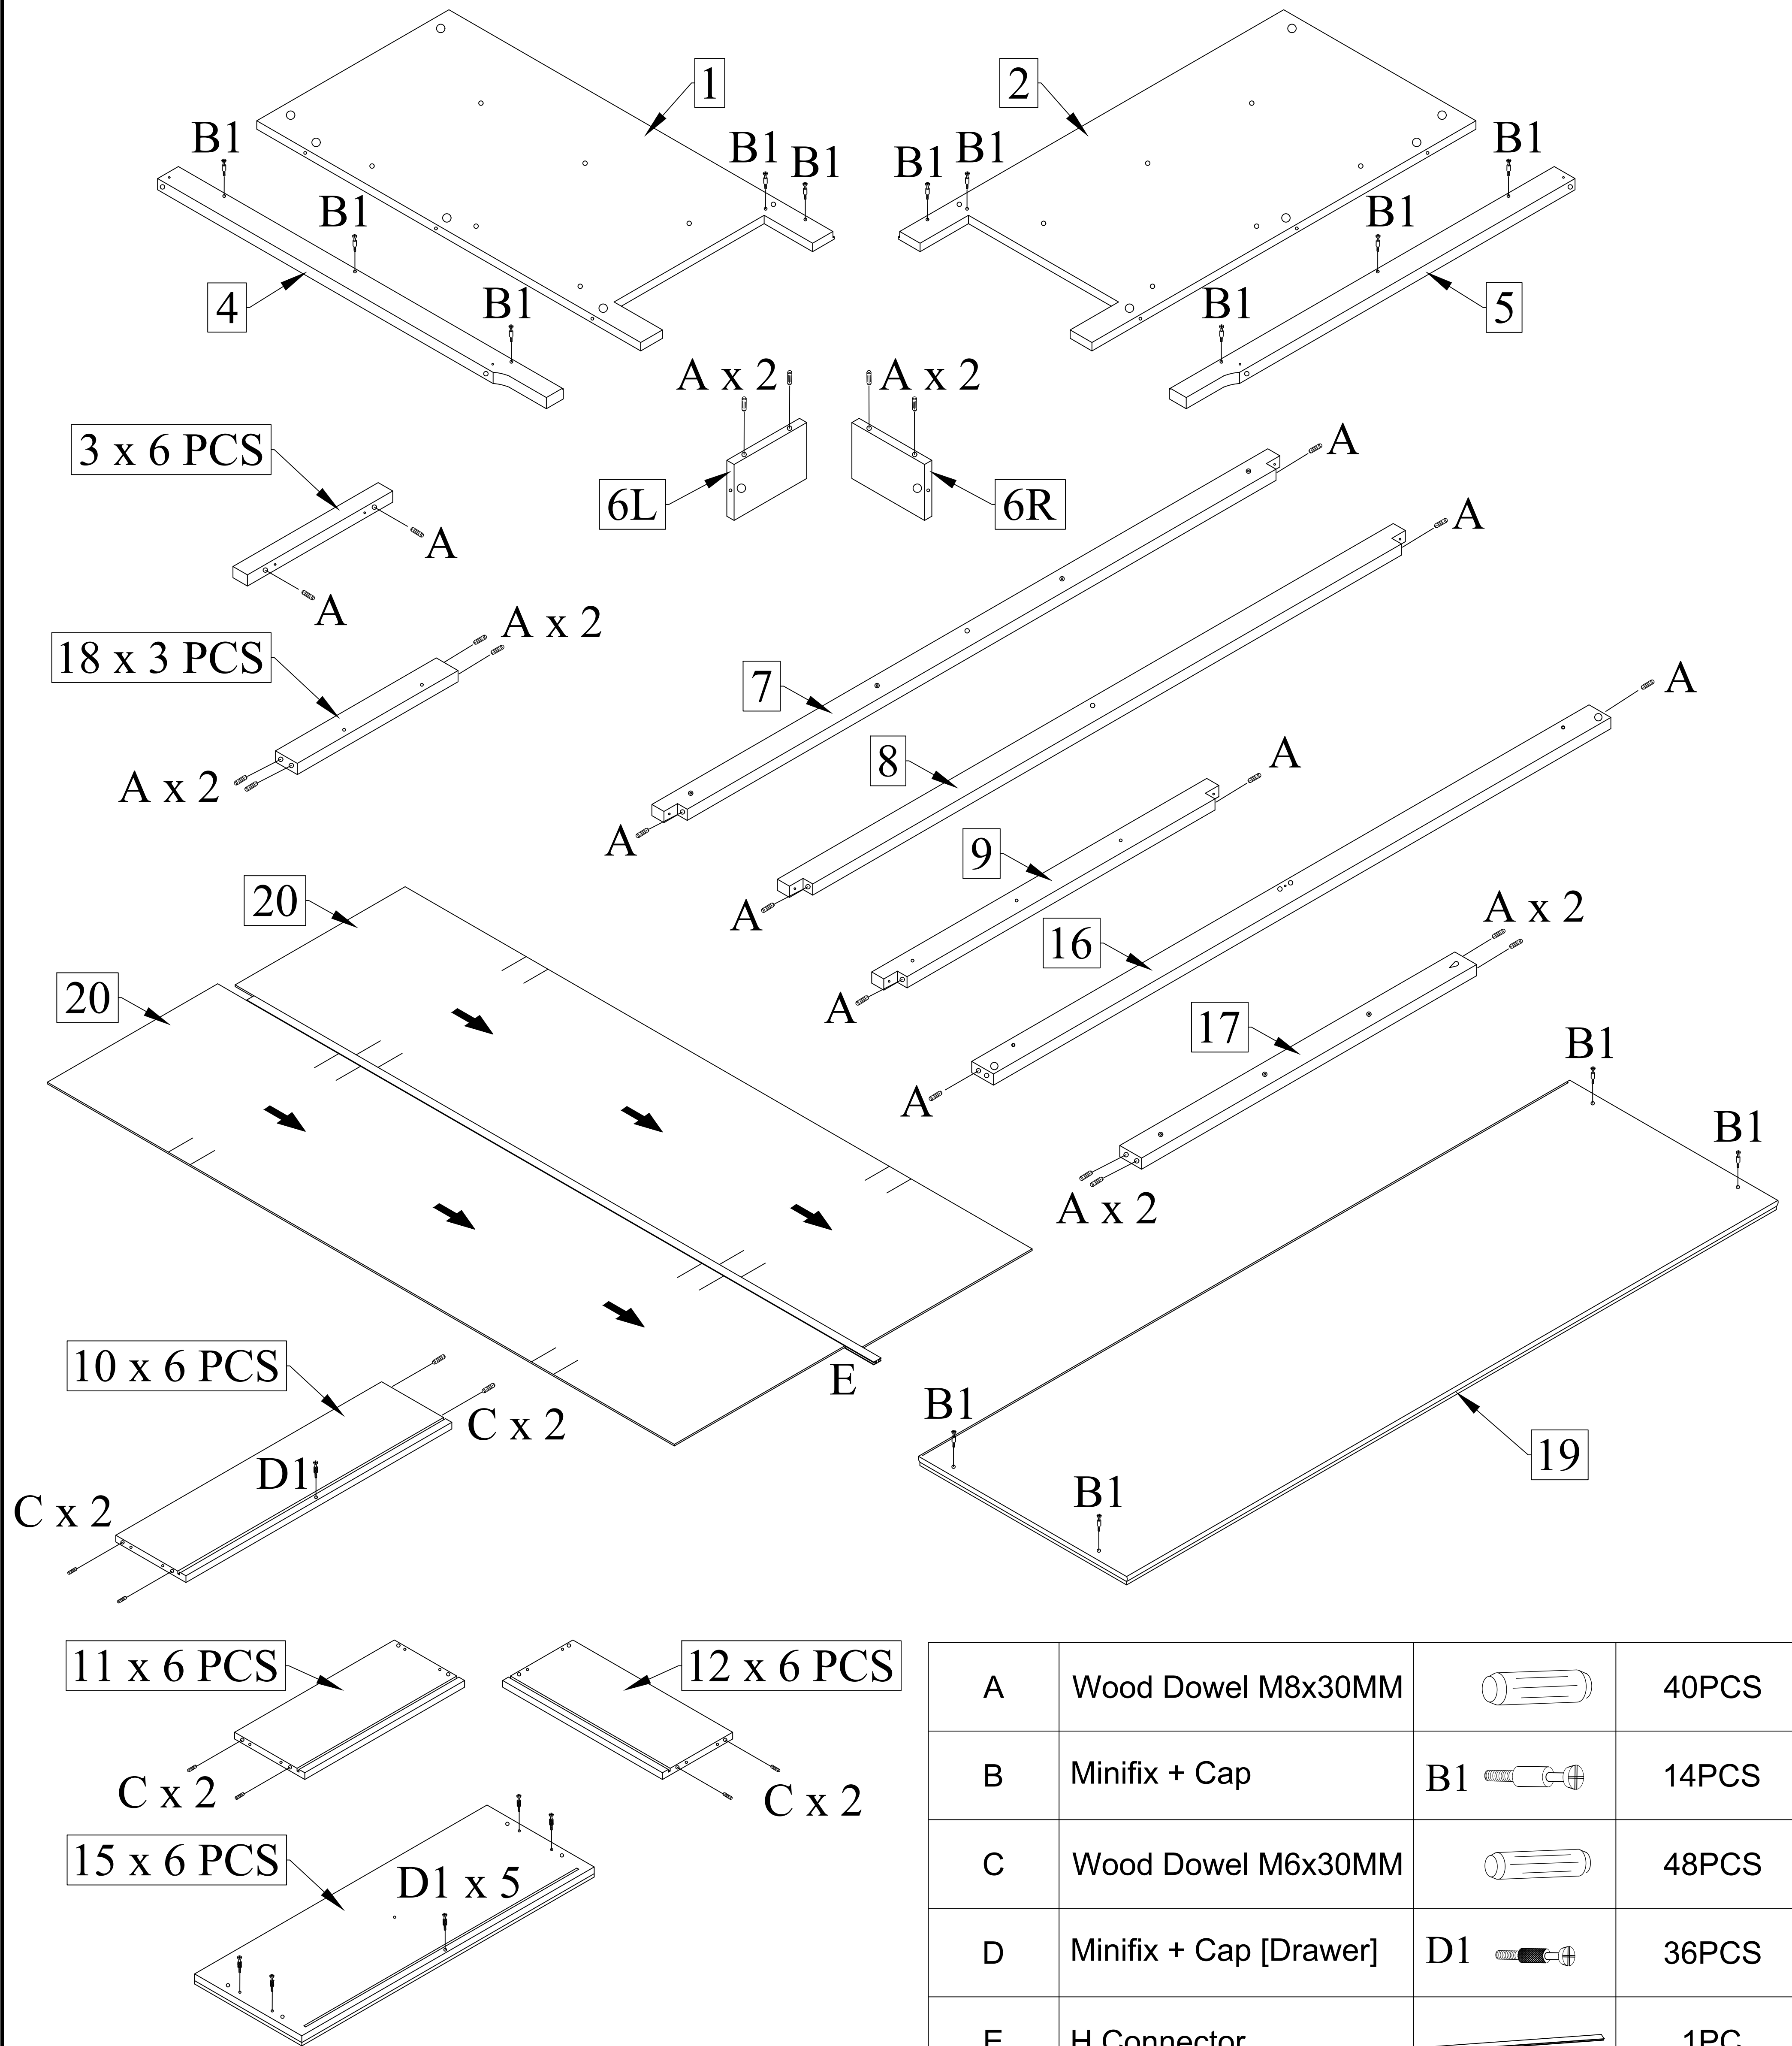


A	Wood Dowel M8x30MM		40PCS
B	Minifix + Cap	B1 	14PCS
C	Wood Dowel M6x30MM		48PCS
D	Minifix + Cap [Drawer]	D1 	36PCS
E	H Connector		1PC

ASSEMBLY INSTRUCTIONS
Item No : WF299164AAK
Description : DRESSER


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.



Step 2 : Connect Drawer Slide Rail (3) to Side Panel (1,2) with Screw (F).

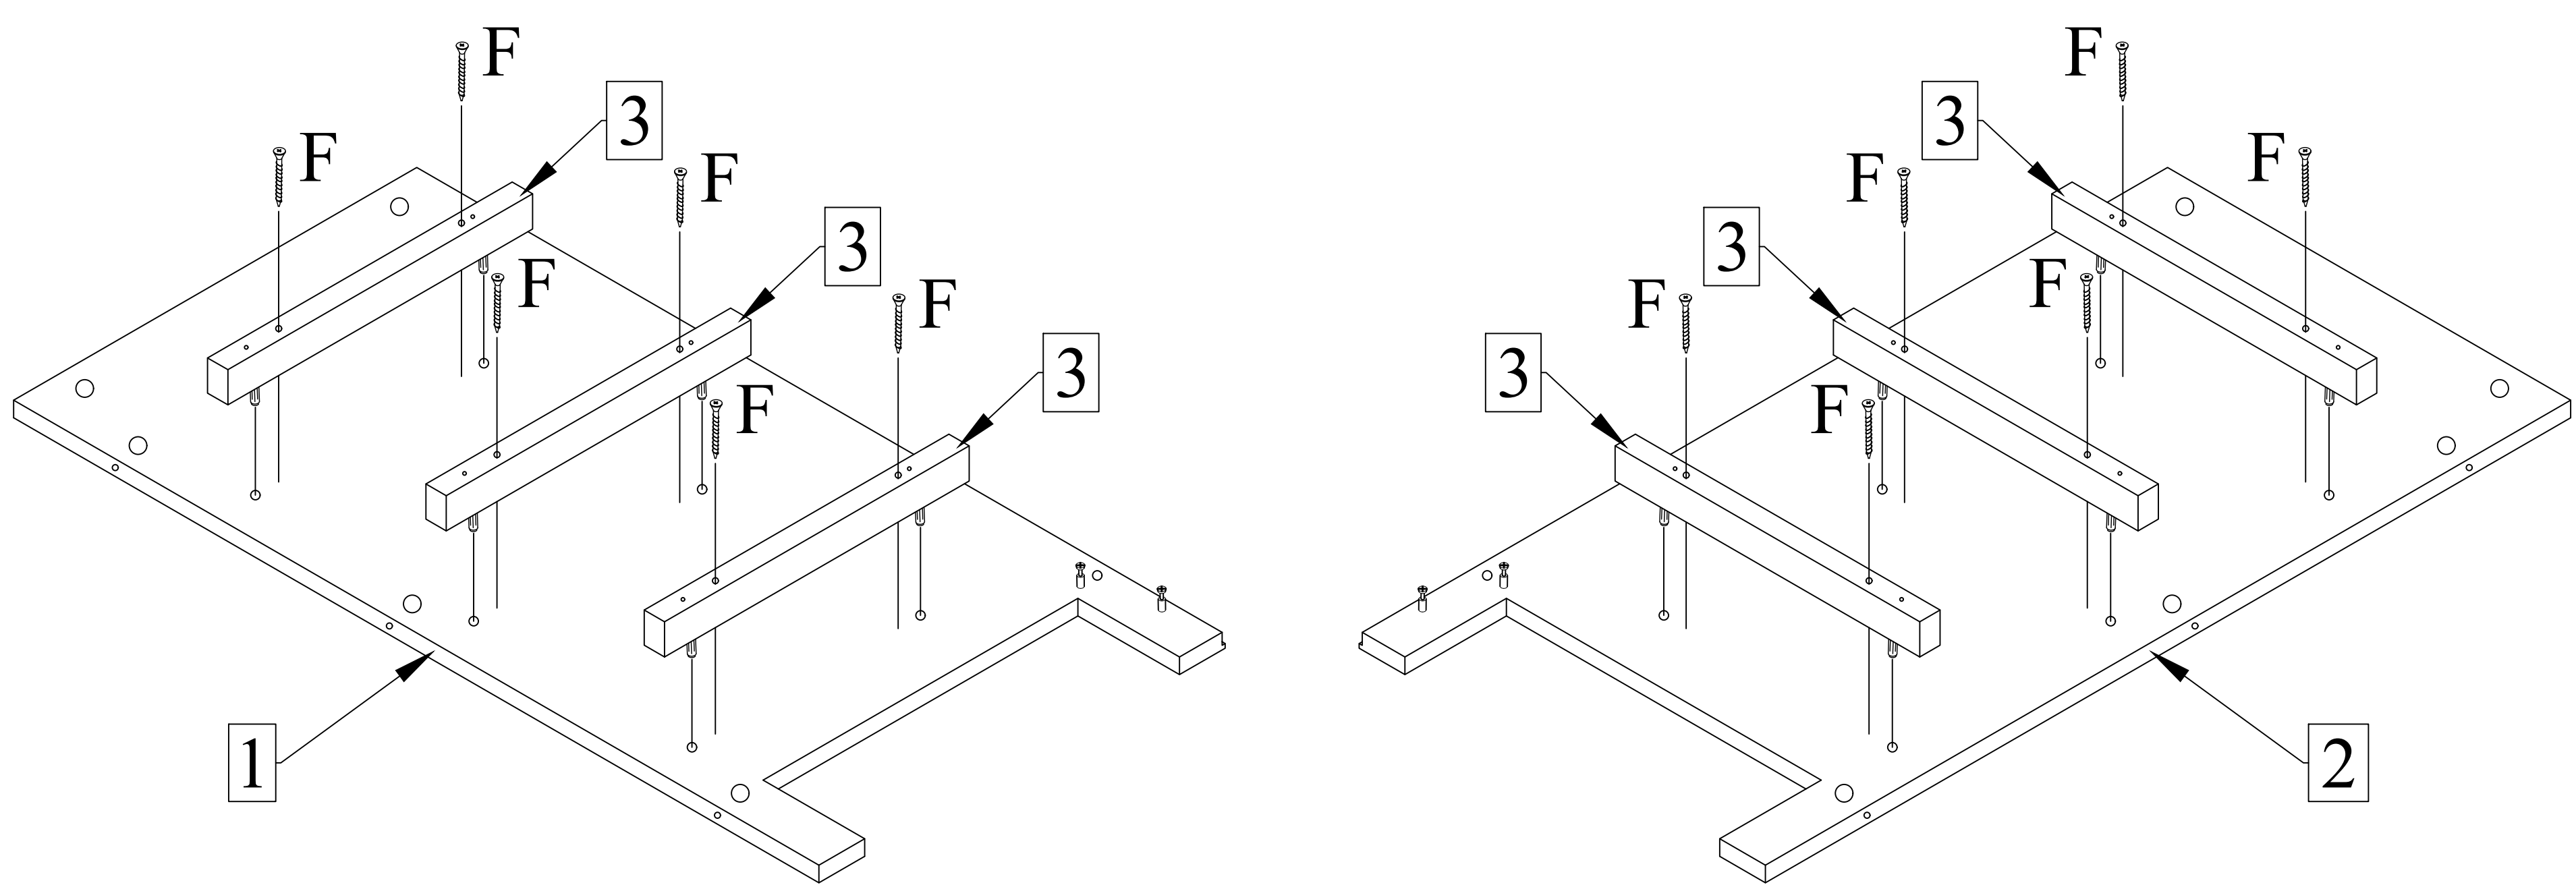

F	Screw M4 x 32MM		12PCS
---	-----------------	---	-------

Step 3 : Attach Drawer Slide (G1) onto the Rail on Side Panel using Screw (H).

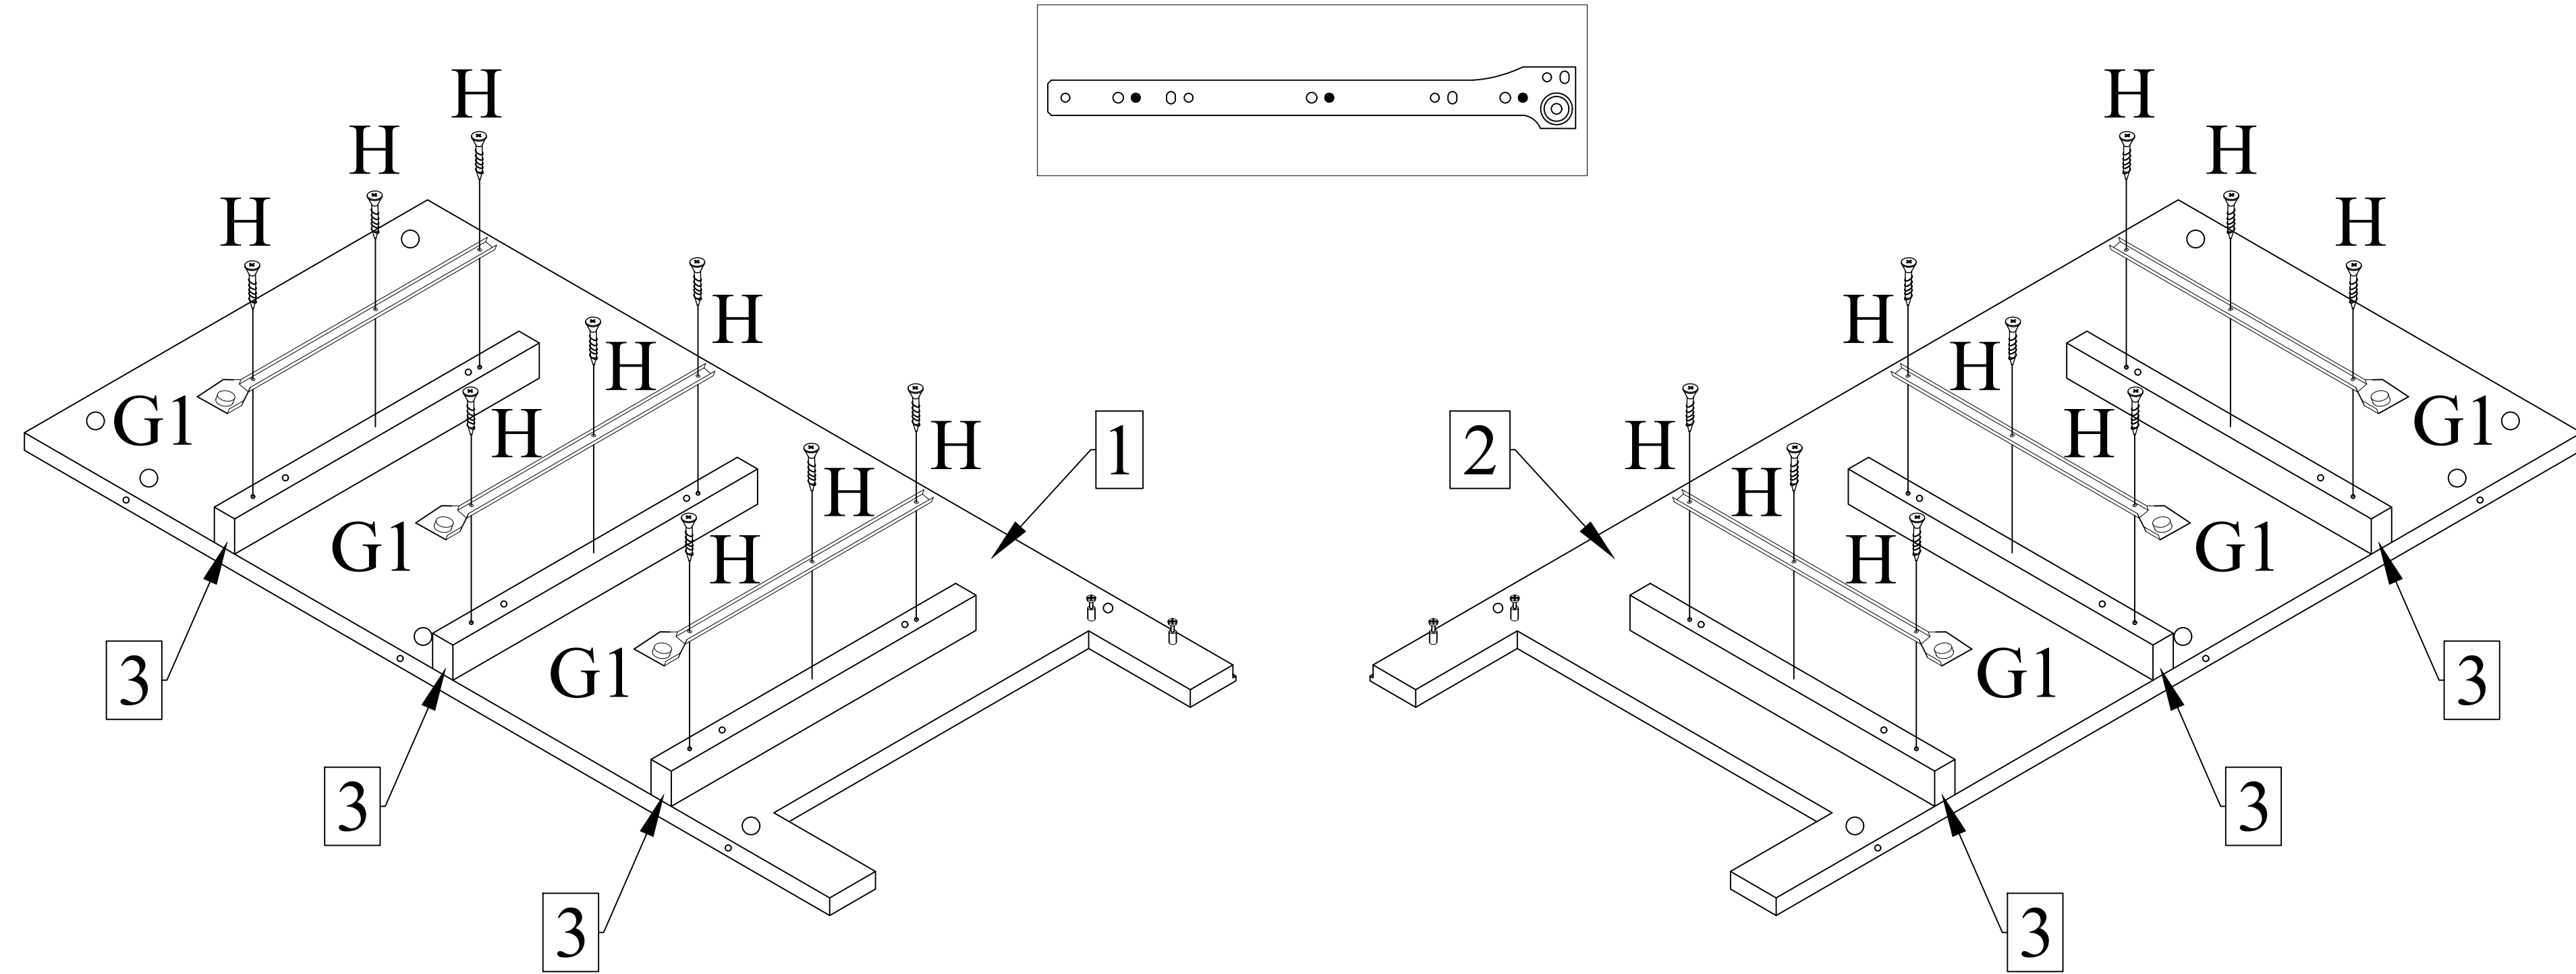

G	Drawer Slide	G1 	3SETS
H	Screw M3 x 12MM		18PCS


ASSEMBLY INSTRUCTIONS

Item No : WF299164AAK


Description : DRESSER

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

Step 4 : Connect Pillar (4,5) to Side Panel and lock Minifix Cap (B2).

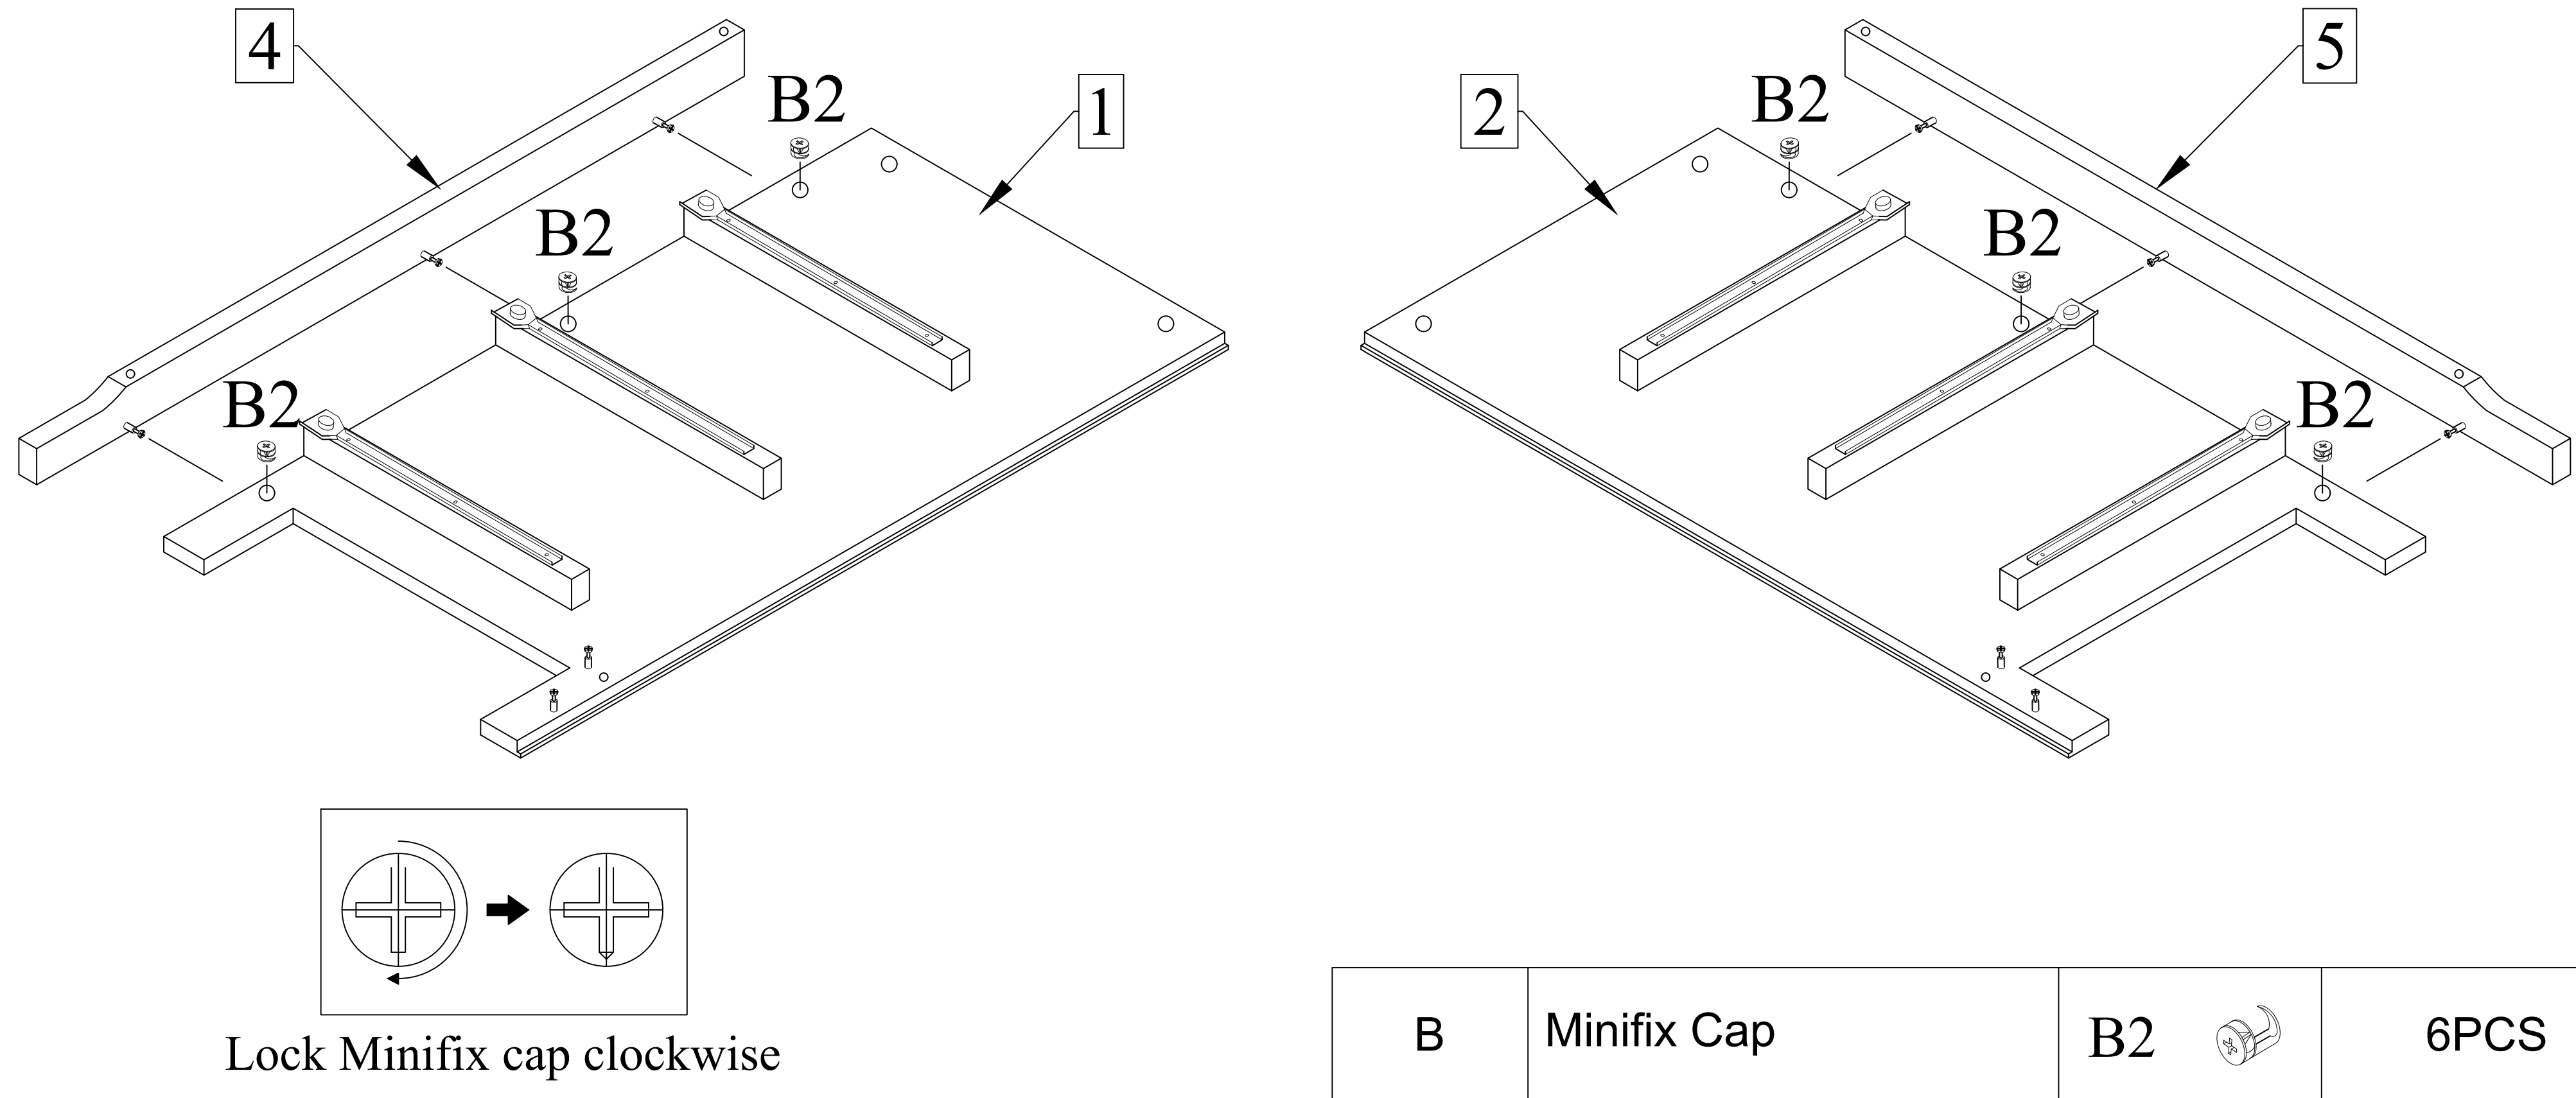

Step 5 : Attach Drawer Slide (G1) to Center Rail (18) with Screw (H). Connect the Center Rail (18) to Middle Rails (9,17) with Screw (F,H). Attach Leg (6) onto Back Rail (16) using Screw (F). Then, connect these connected parts with Top & Bottom Rails (7,8) with Screw (F).

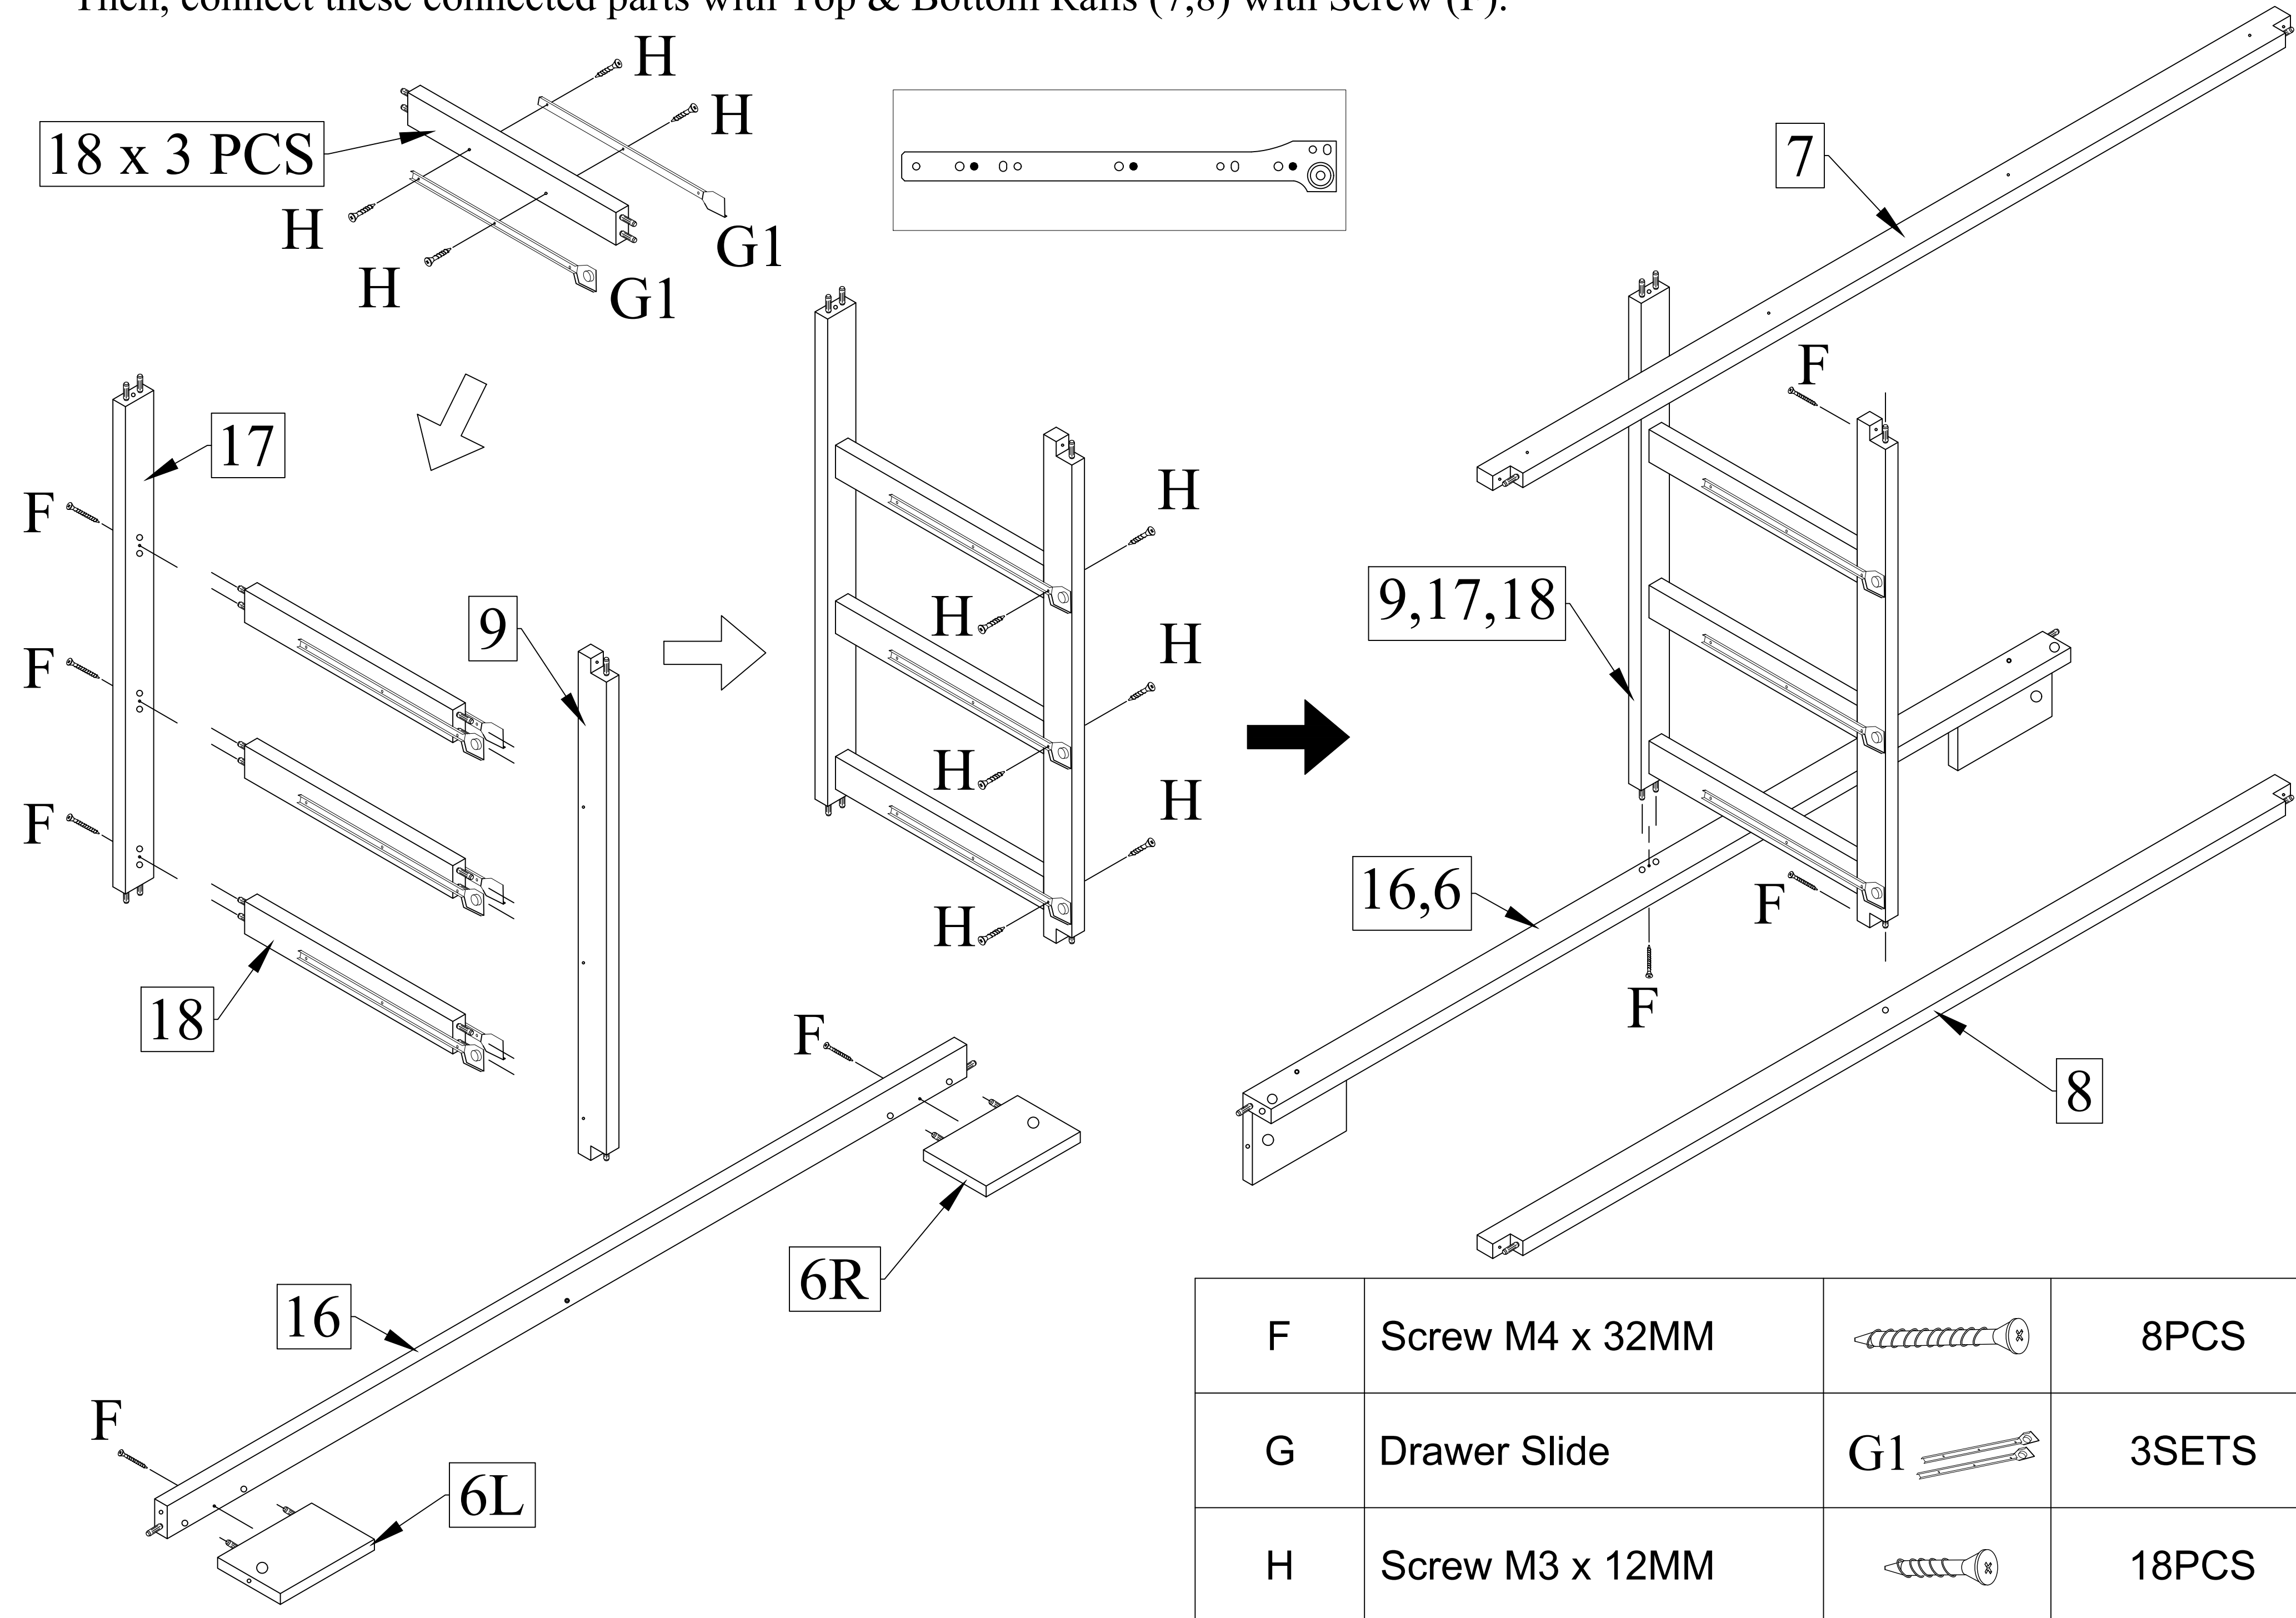



ASSEMBLY INSTRUCTIONS

Item No : WF299164AAK


Description : DRESSER

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.



Step 6 : Attach Center Leg (21) onto the connected parts with Screw (F).
Connect Side Panels (1,2) with Screw (F) and lock Minifix Cap (B2).

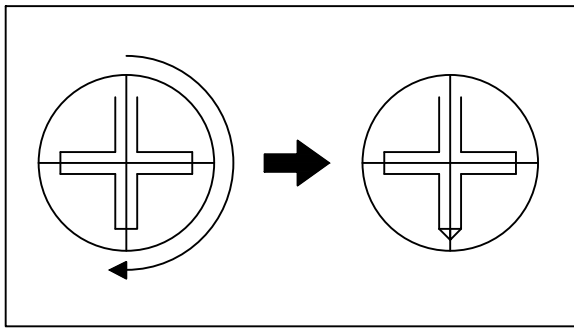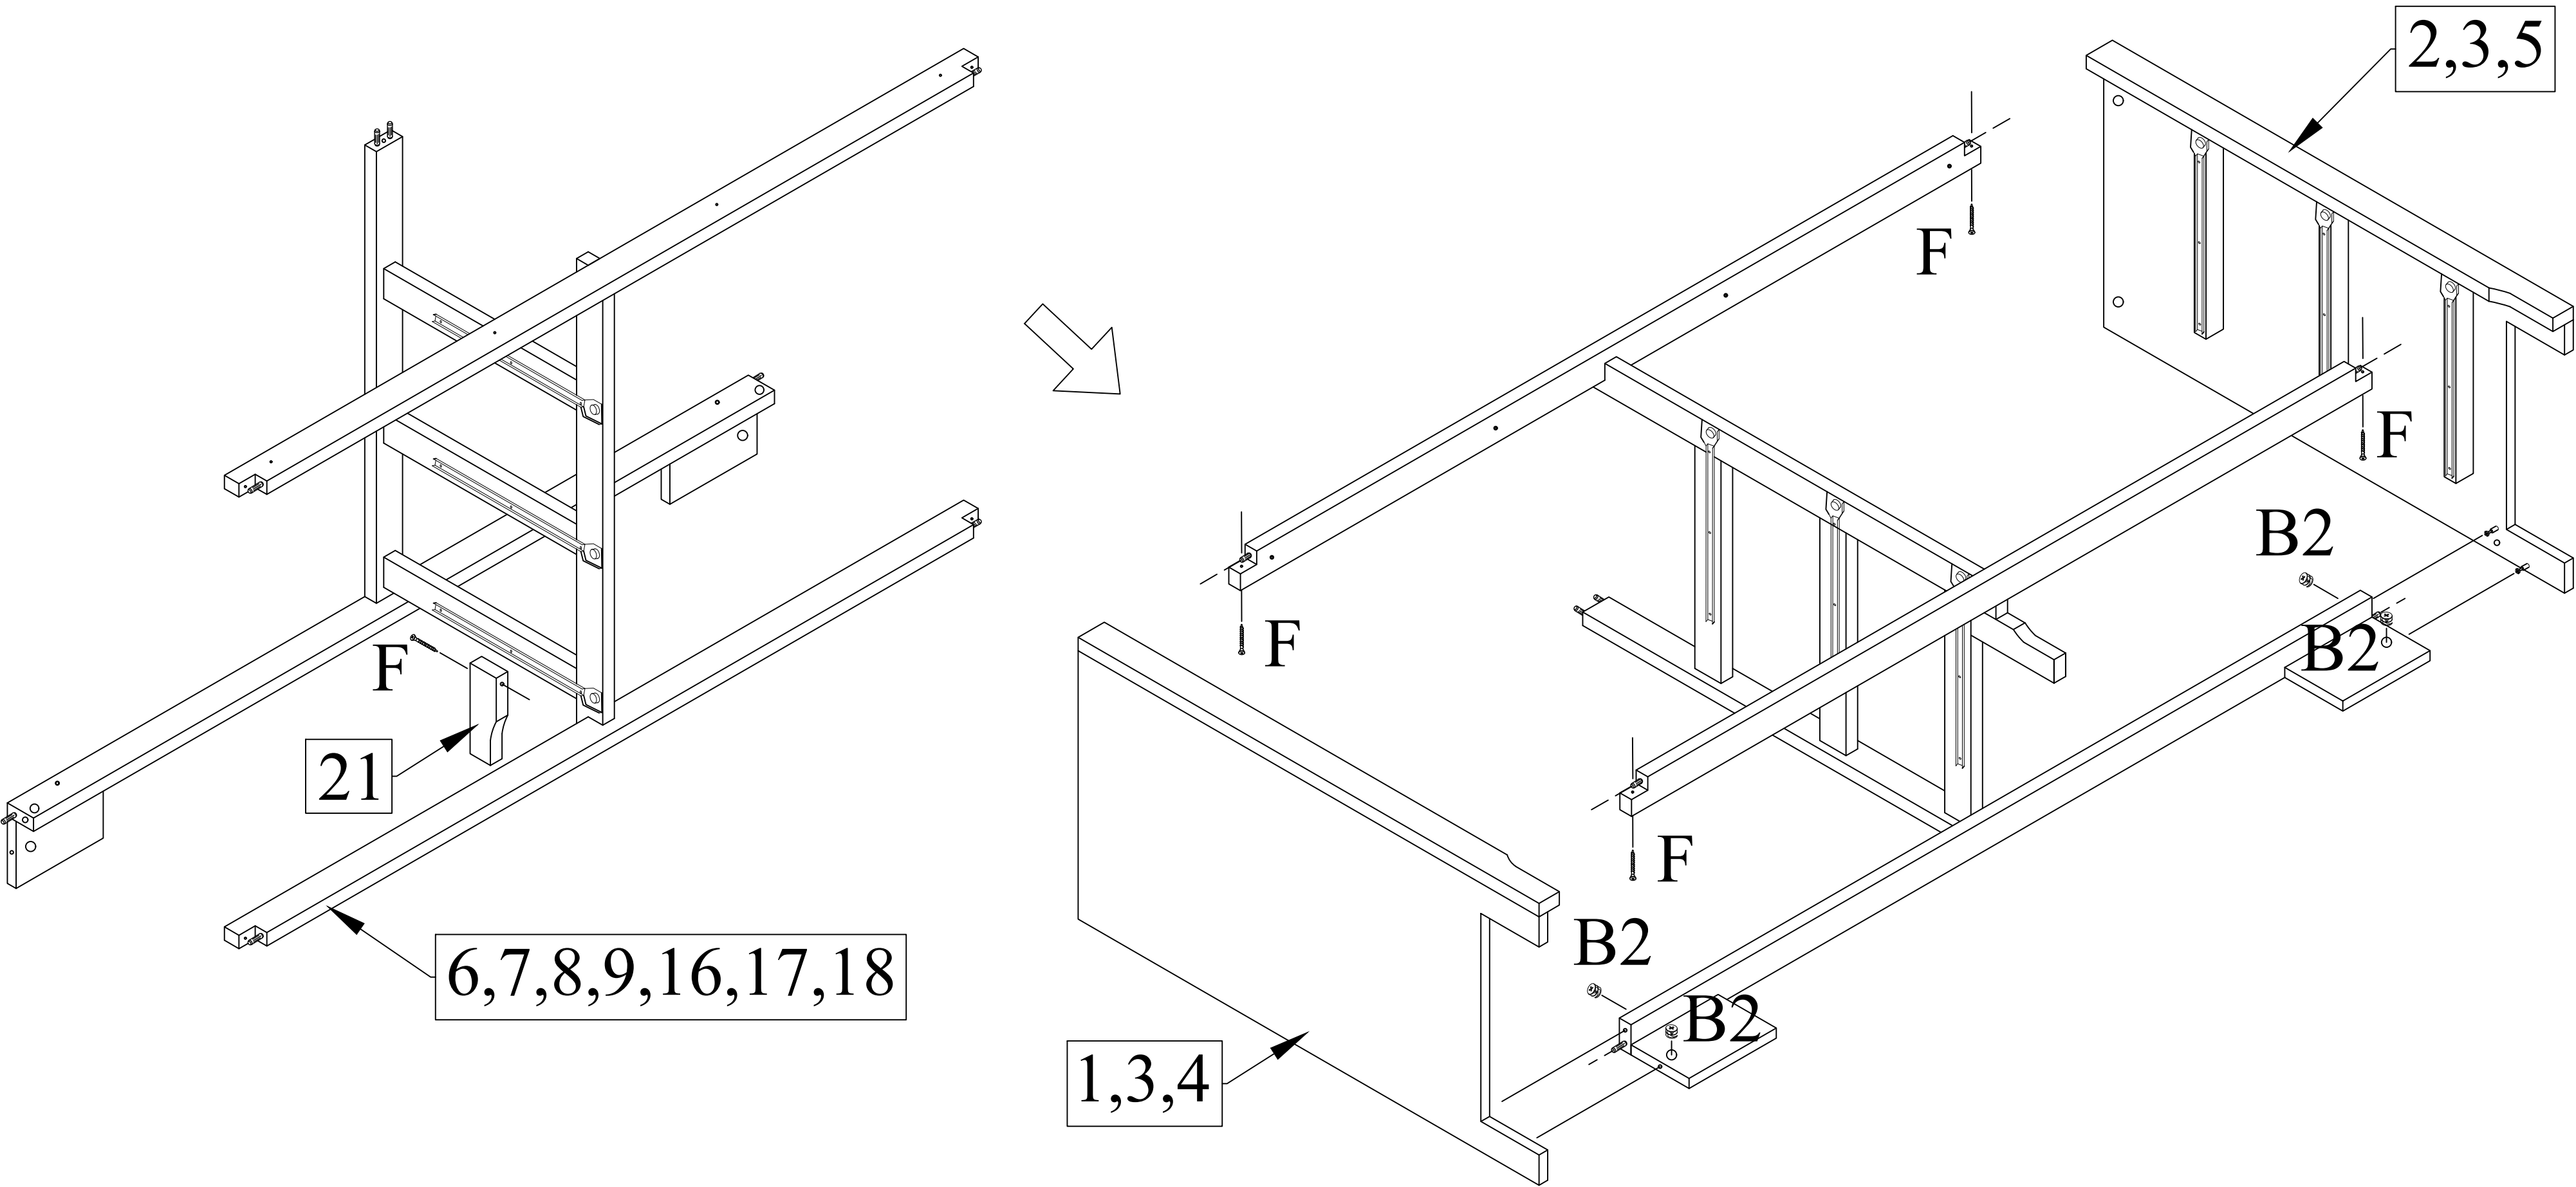


Lock Minifix cap clockwise

B	Minifix Cap	B2 	4PCS
F	Screw M4 x 32MM		5PCS

Step 7 : Attach Top Panel (19) and lock with Minifix Cap (B2) and Screw (F).

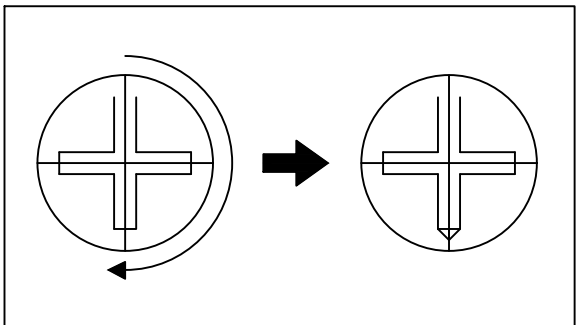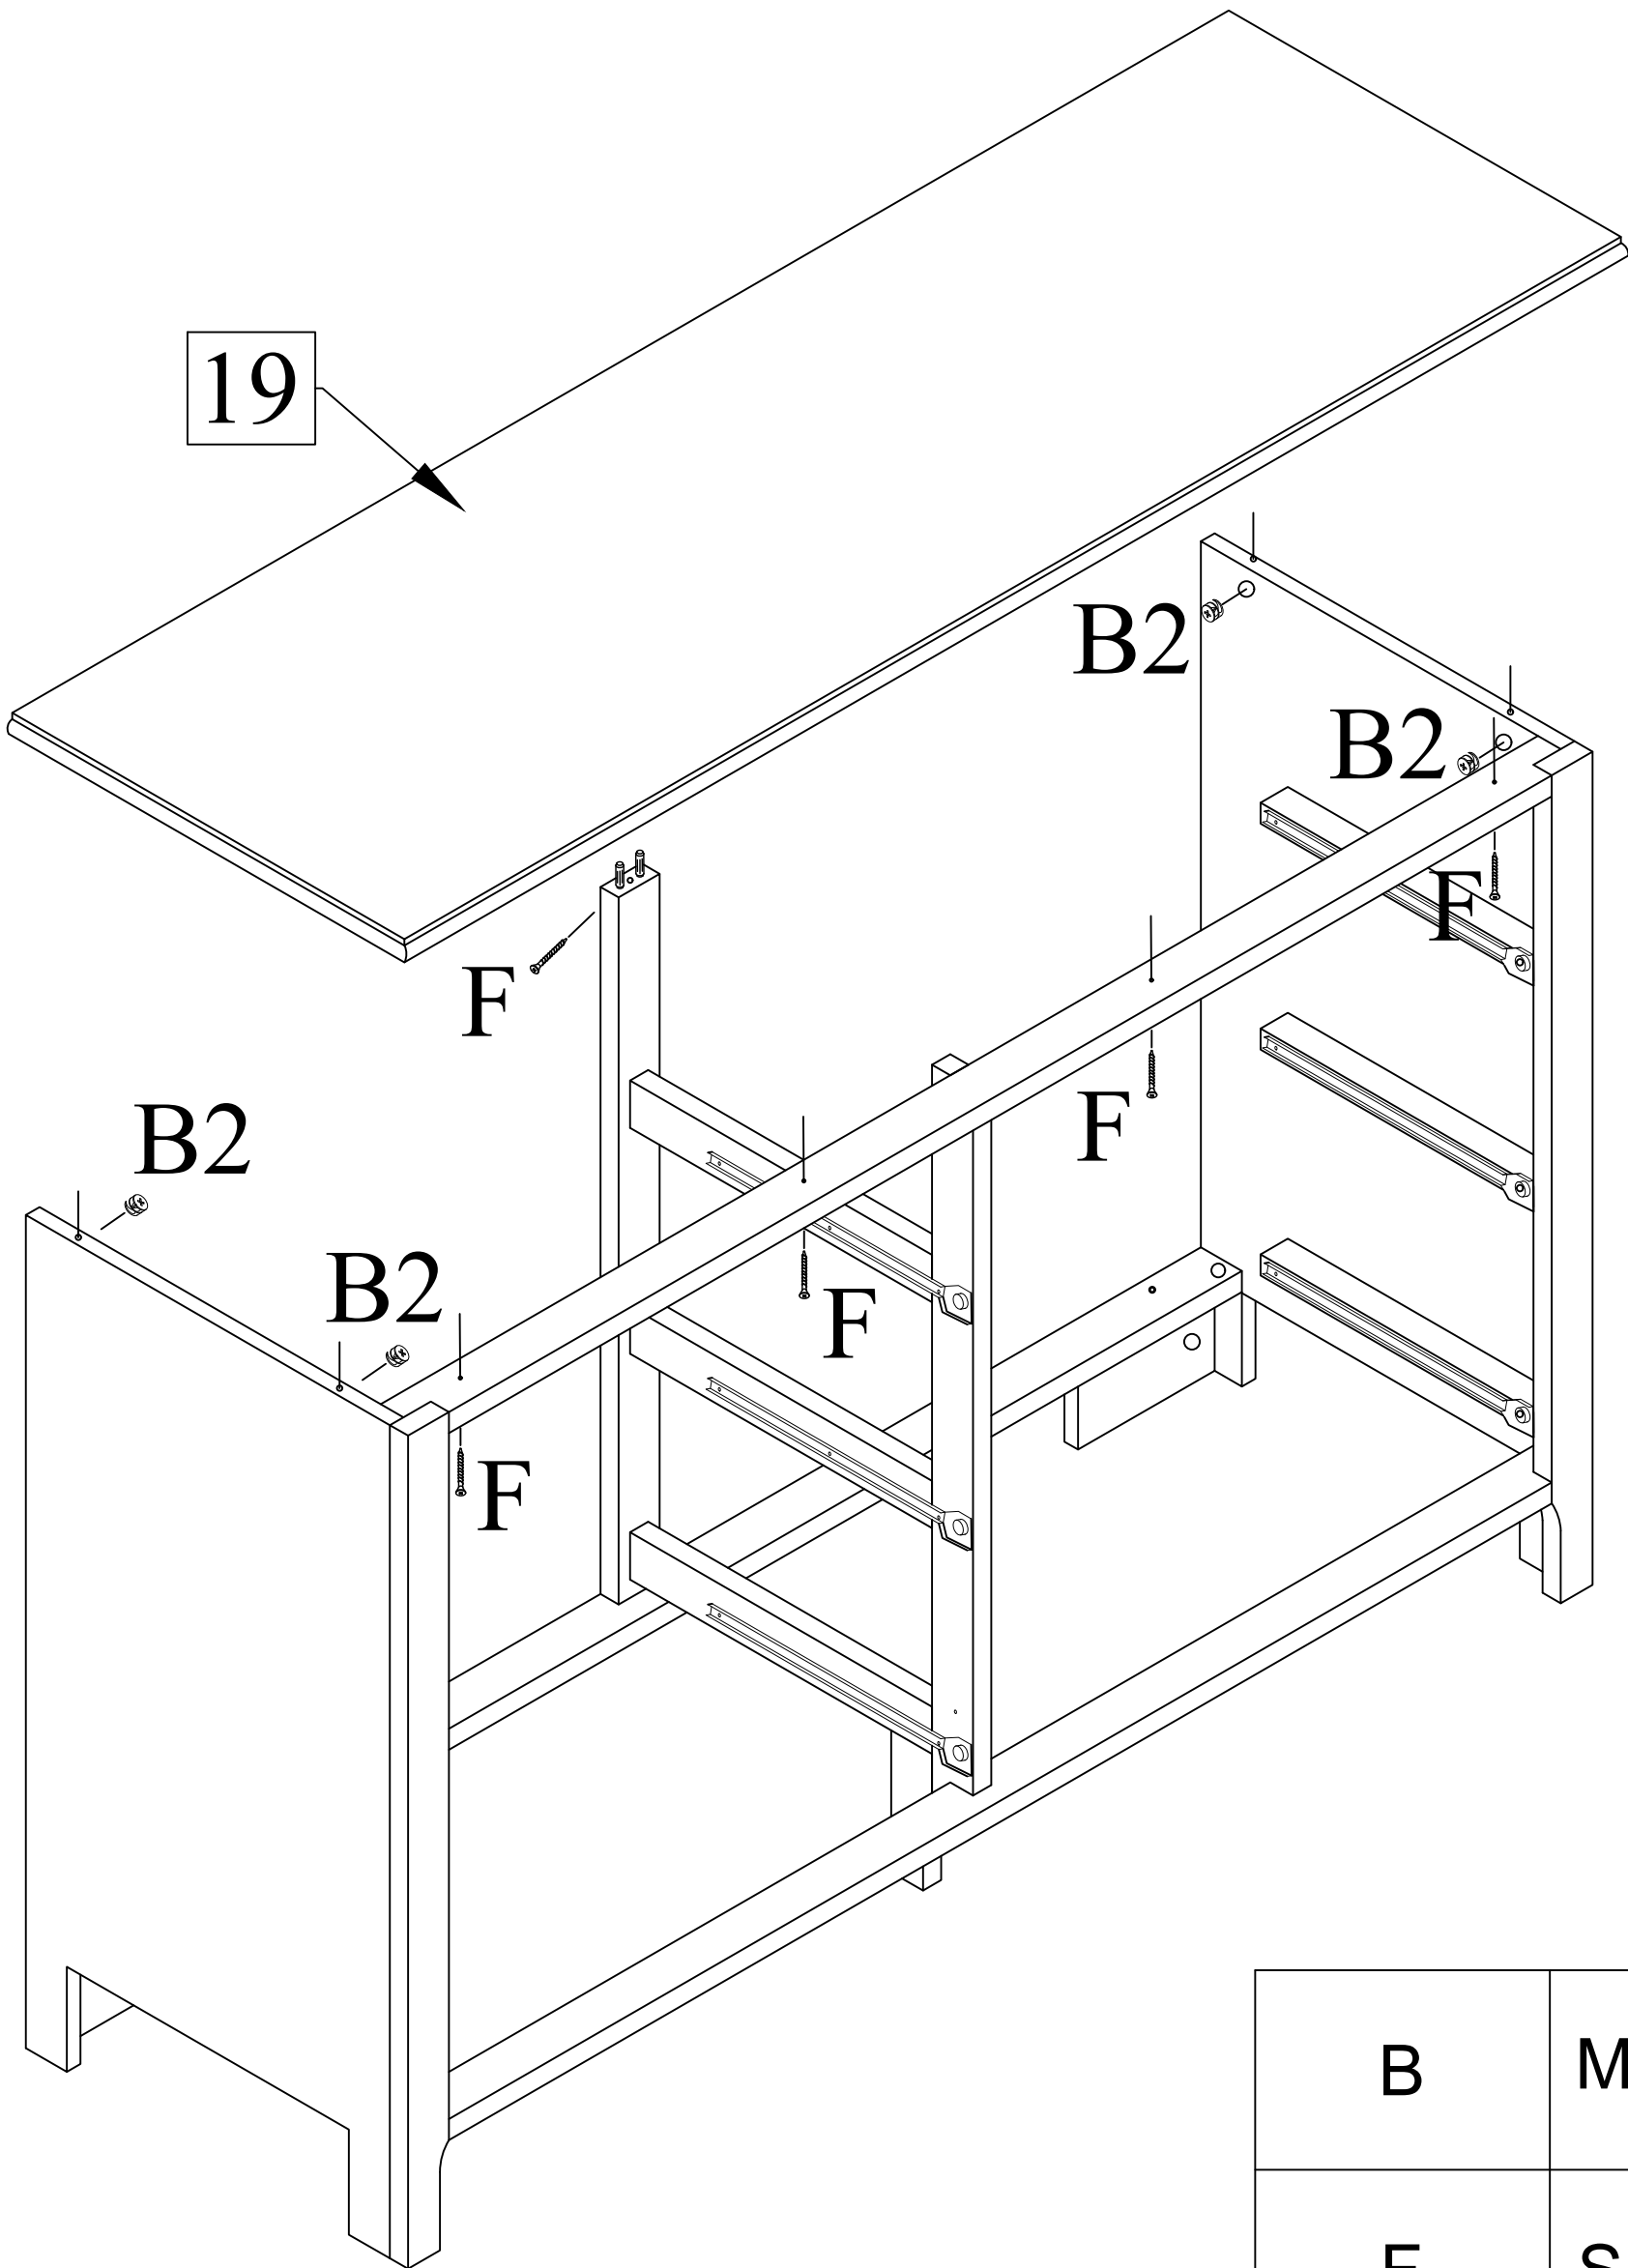

Lock Minifix cap clockwise

B	Minifix Cap	B2 	4PCS
F	Screw M4 x 32MM		5PCS

ASSEMBLY INSTRUCTIONS



Item No : WF299164AAK

Description : DRESSER


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

Step 8 : Insert Back Panel (20) from behind using Screw (H).

Make sure marking line on back panel facing out, it will be a guidance to attach matching mirror WF299174AAK

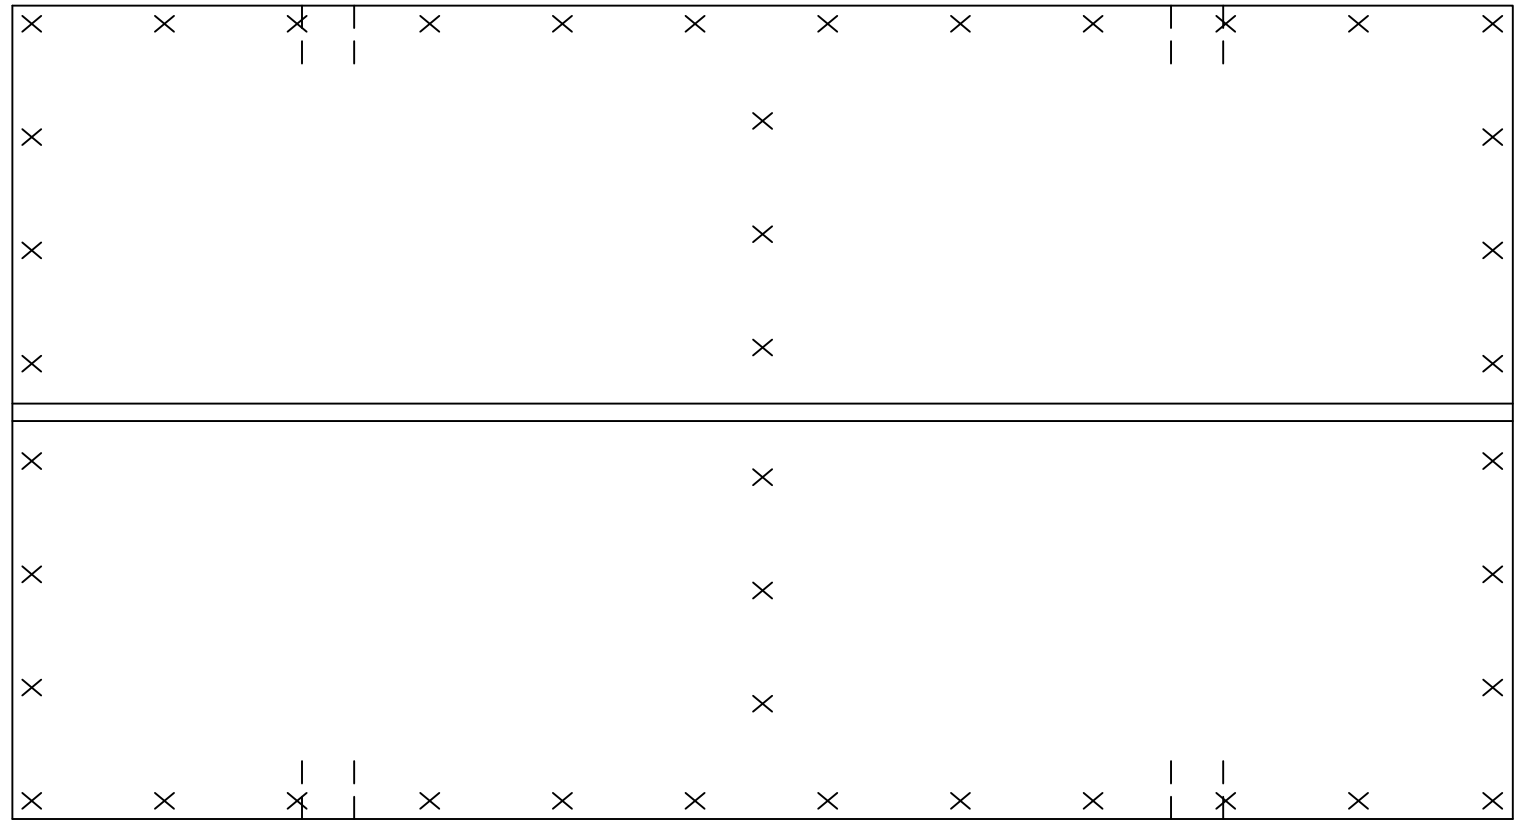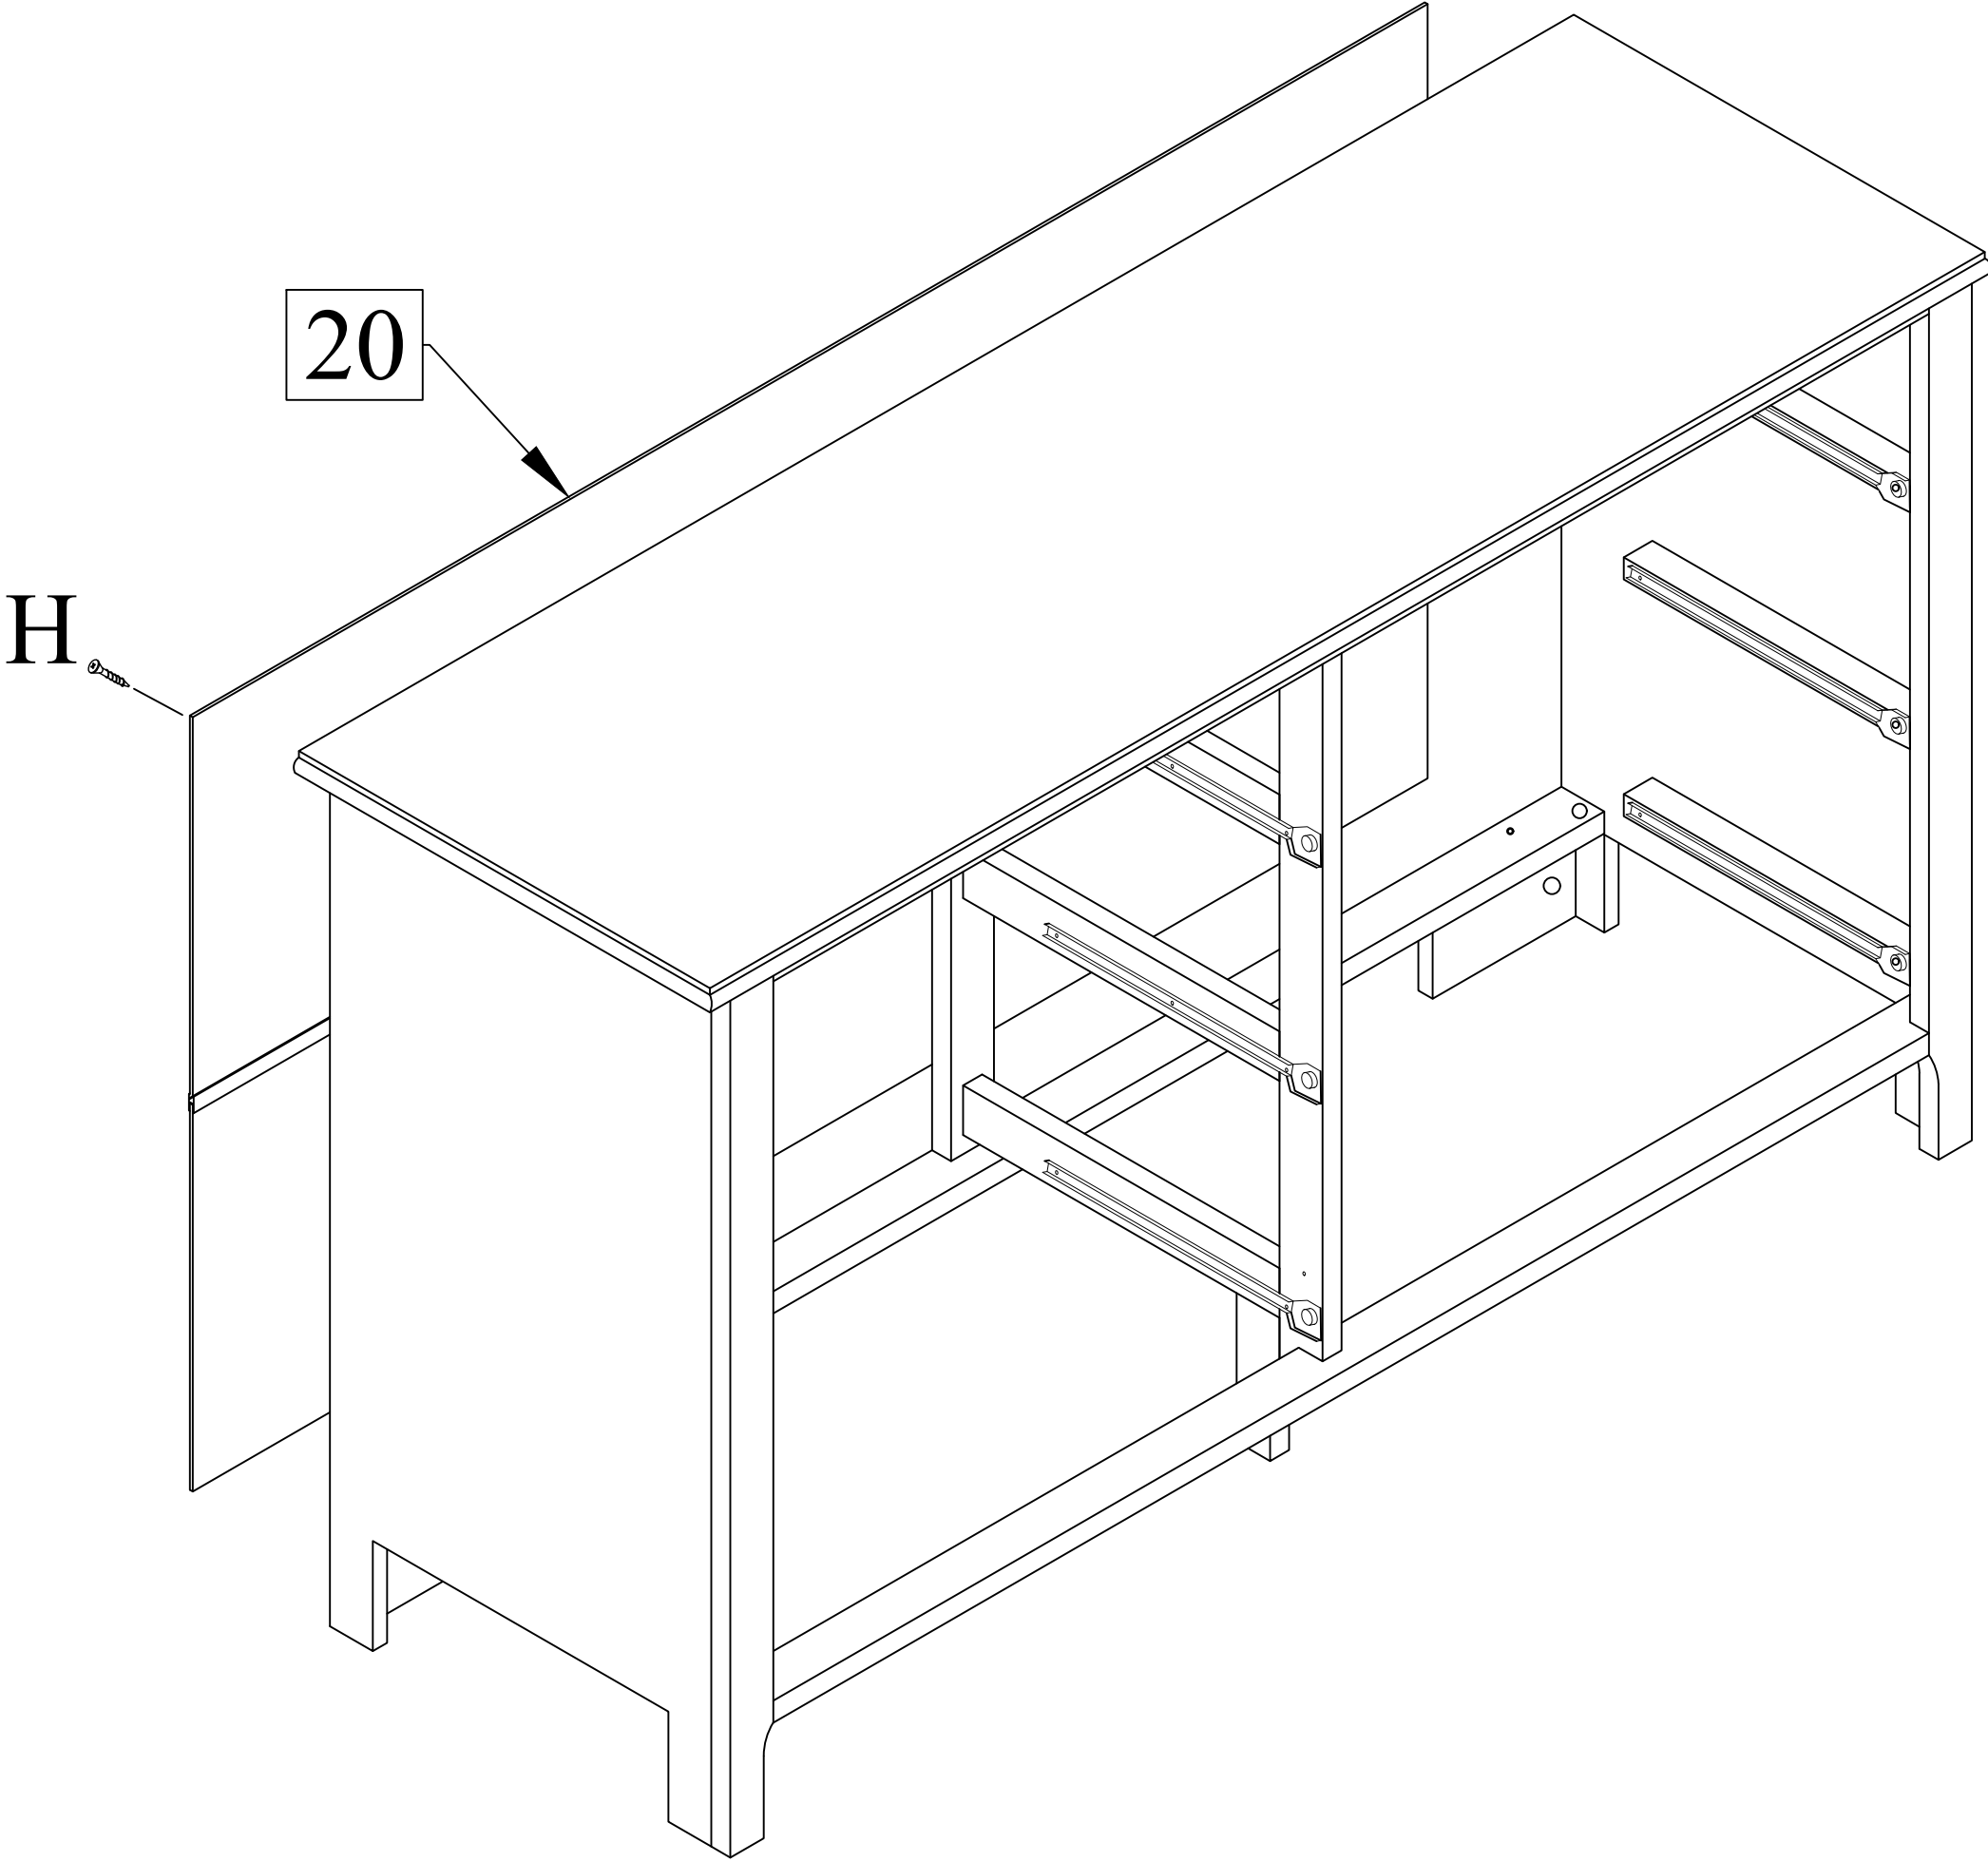

Guidance of screw array

H	Screw M3 x 12MM		42PCS
---	-----------------	---	-------

Step 9 : Drawer assembly.


First connect Drawer Back (10) to Drawer Side - L (11) and Drawer Side - R (12) with Screw (F).





Slot the Drawer Base Support (14) into Drawer Back (10). Next, slot in the Drawer Base (13).

Then, install the Handle with Screw (I1&I2) onto Drawer Front (15). Attach the Drawer Front (15) to the drawer box and lock Minifix Cap [Drawer] (D2).

Finally, install Drawer Slide (G2) onto the drawer box using Screw (H).

Drawer assembly x 6 (3L3R)

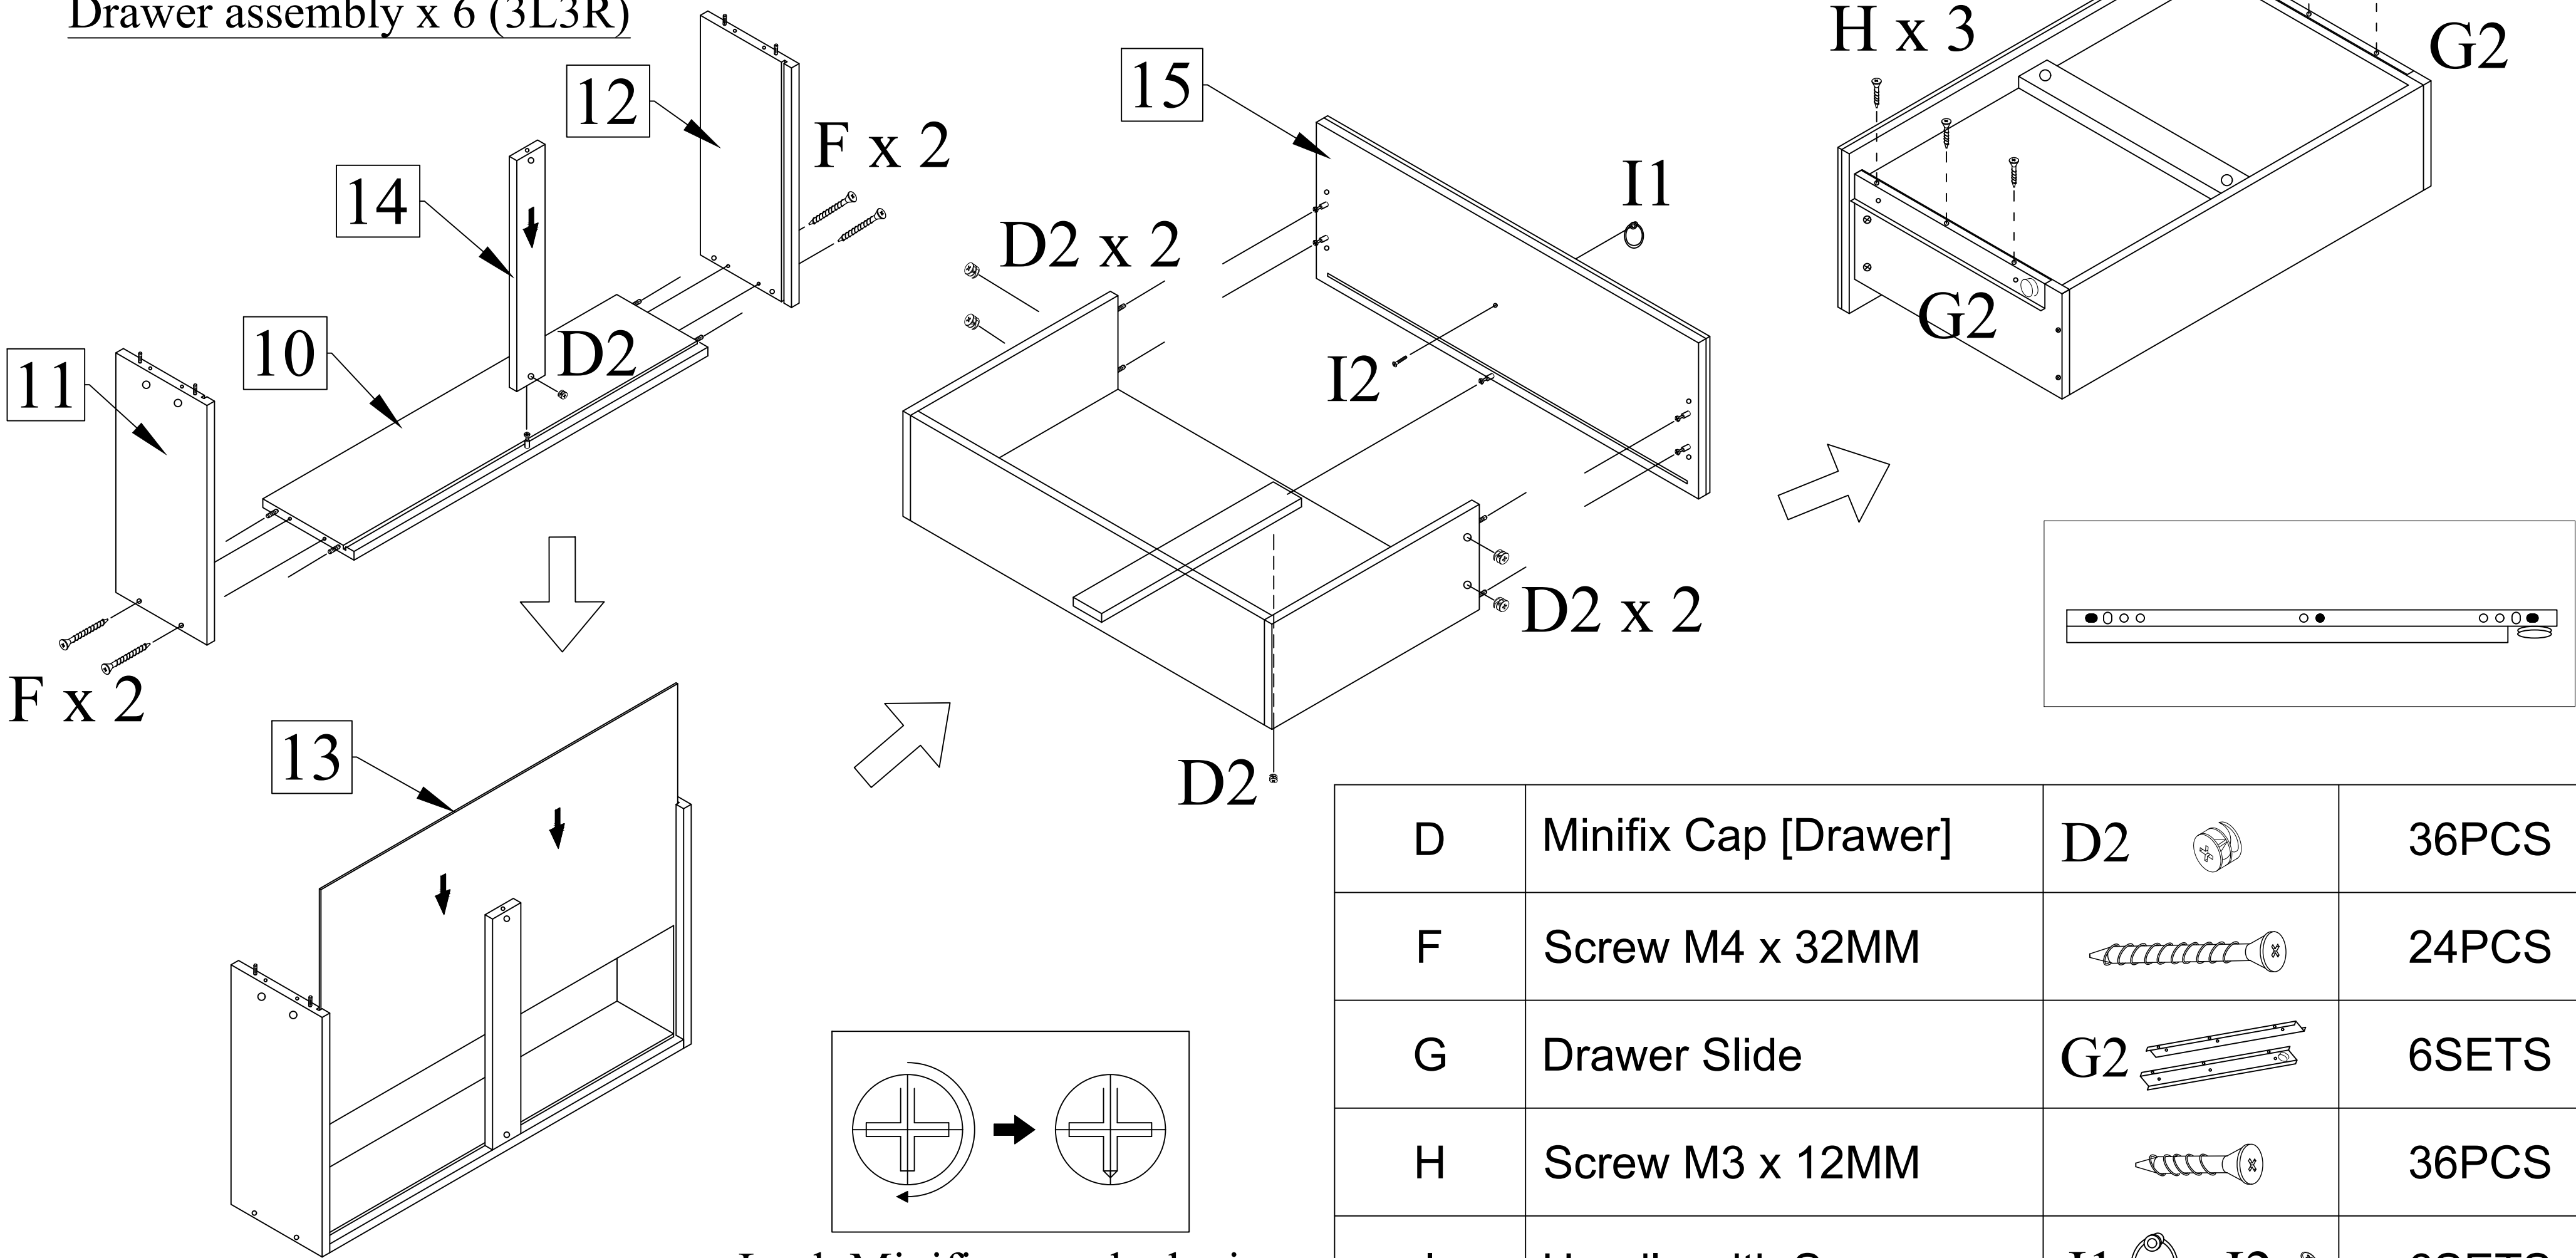


D	Minifix Cap [Drawer]	D2 	36PCS
F	Screw M4 x 32MM		24PCS
G	Drawer Slide	G2 	6SETS
H	Screw M3 x 12MM		36PCS
I	Handle with Screw	I1  I2 	6SETS

ASSEMBLY INSTRUCTIONS
Item No : WF299164AAK
Description : DRESSER


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

Step 10 : Insert the drawer box.

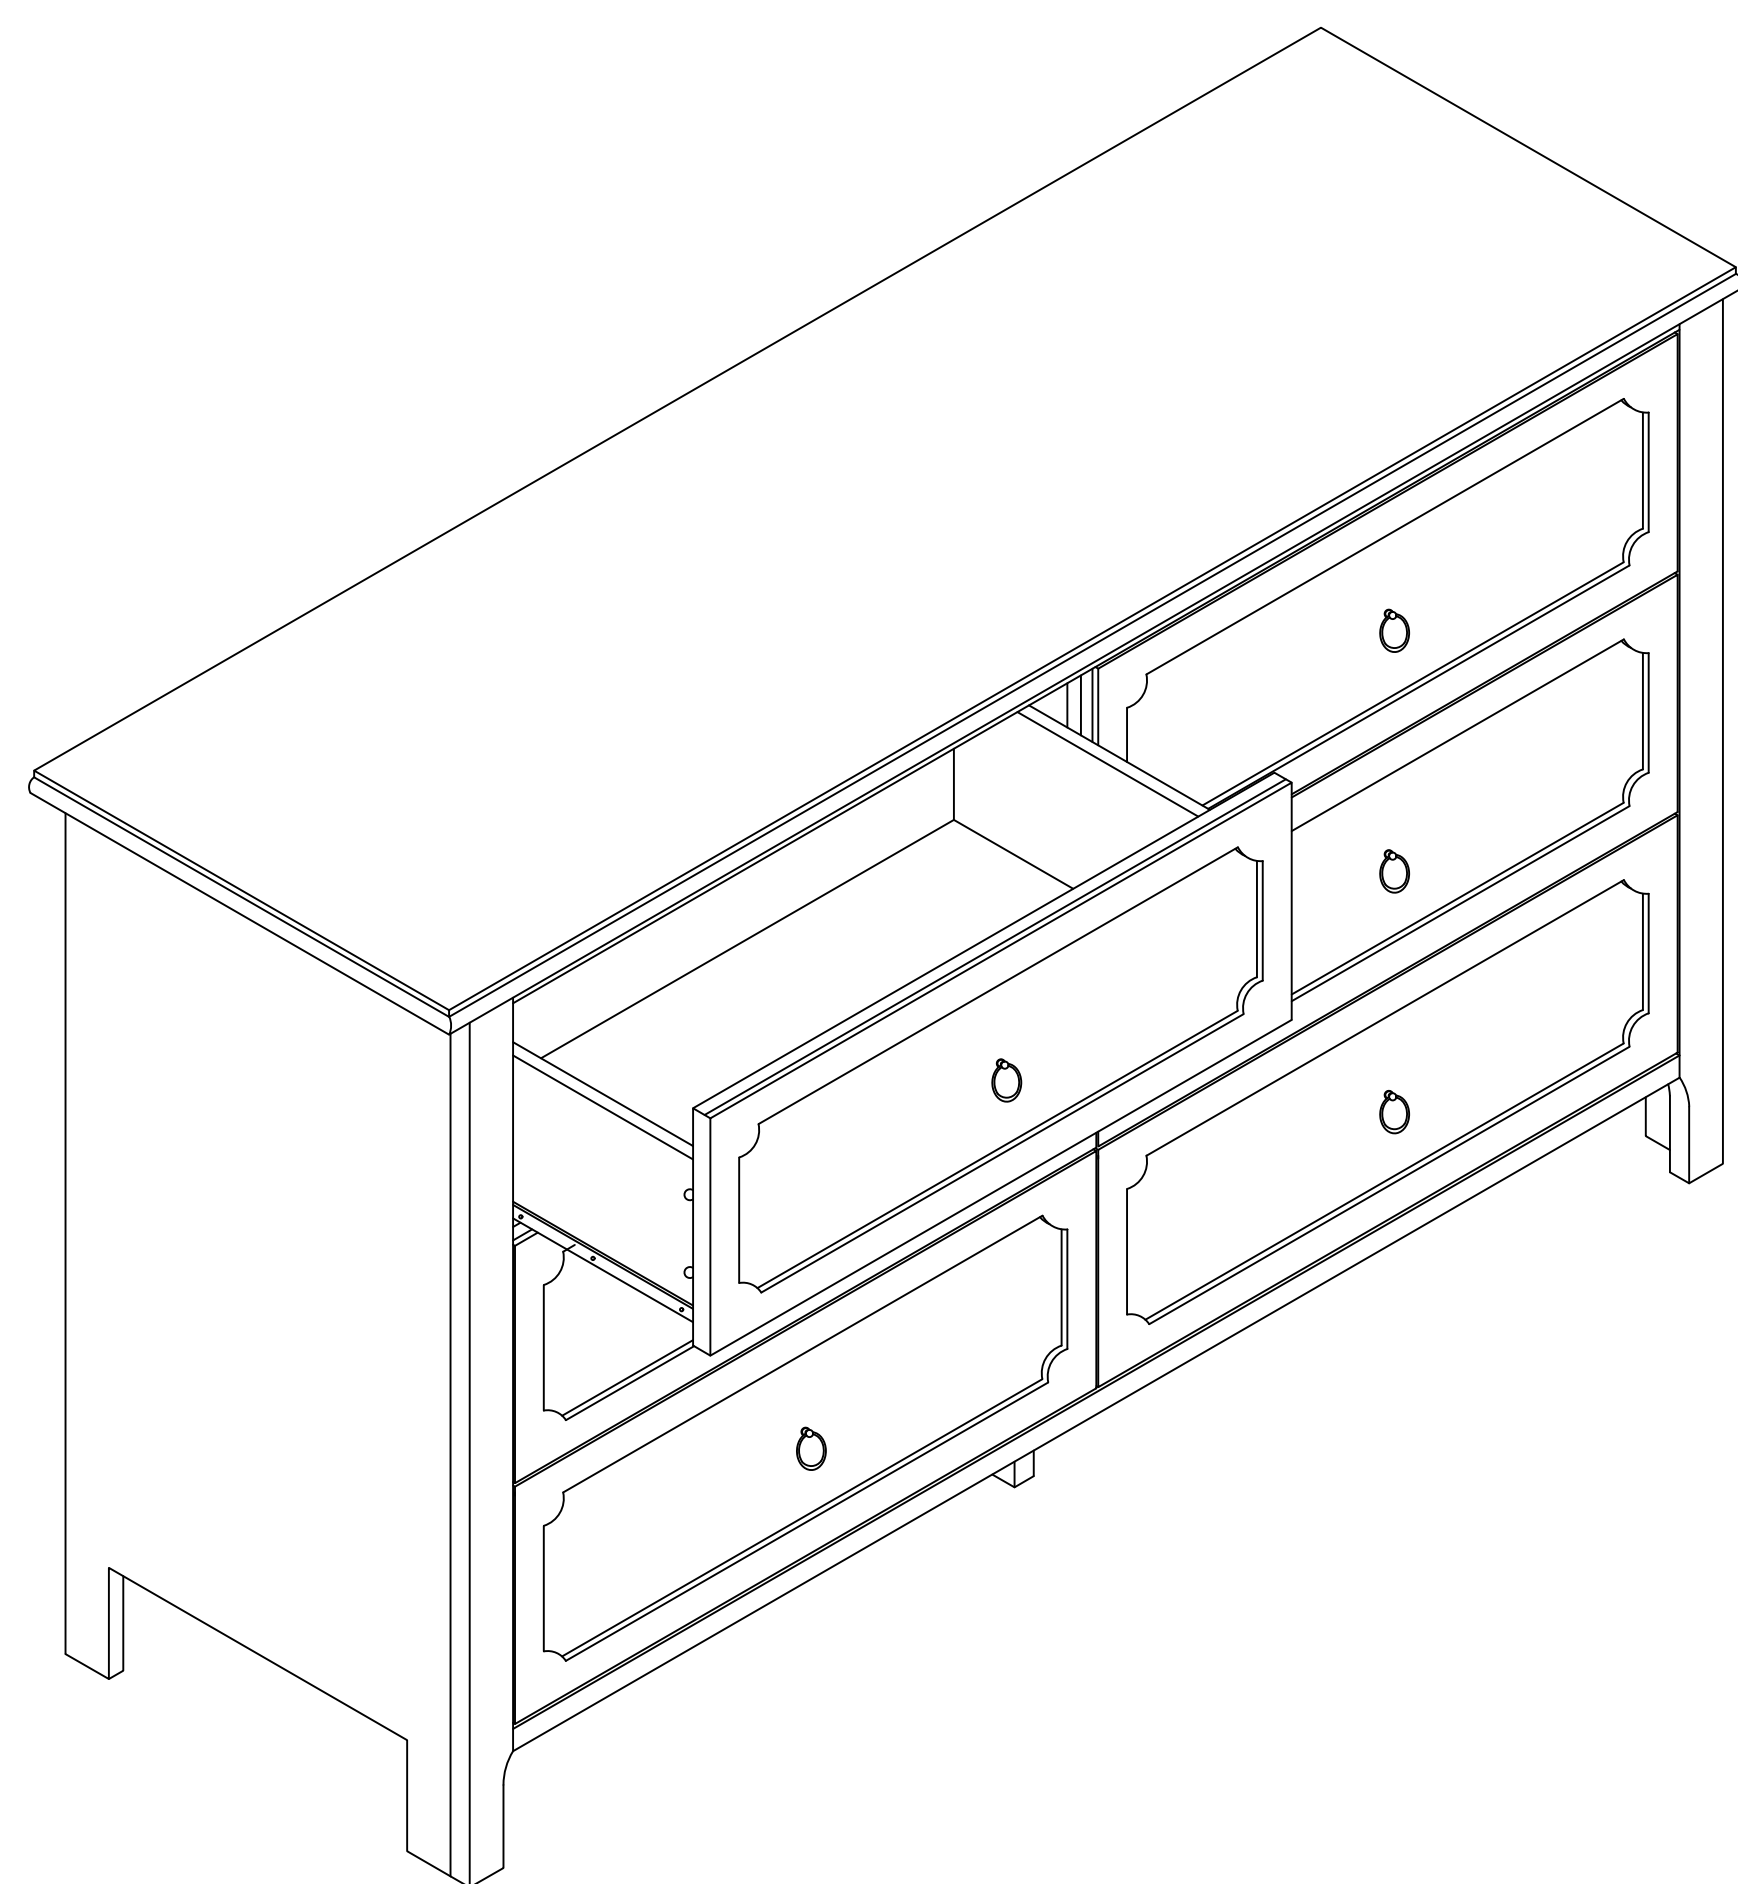

ANCHORING DRESSER

To anchor your dresser, use the anchor kit as seen in the diagram below. Choose a suitable wall fixing that matches your wall style and then fasten the strap to the wall as shown using appropriate fixings.

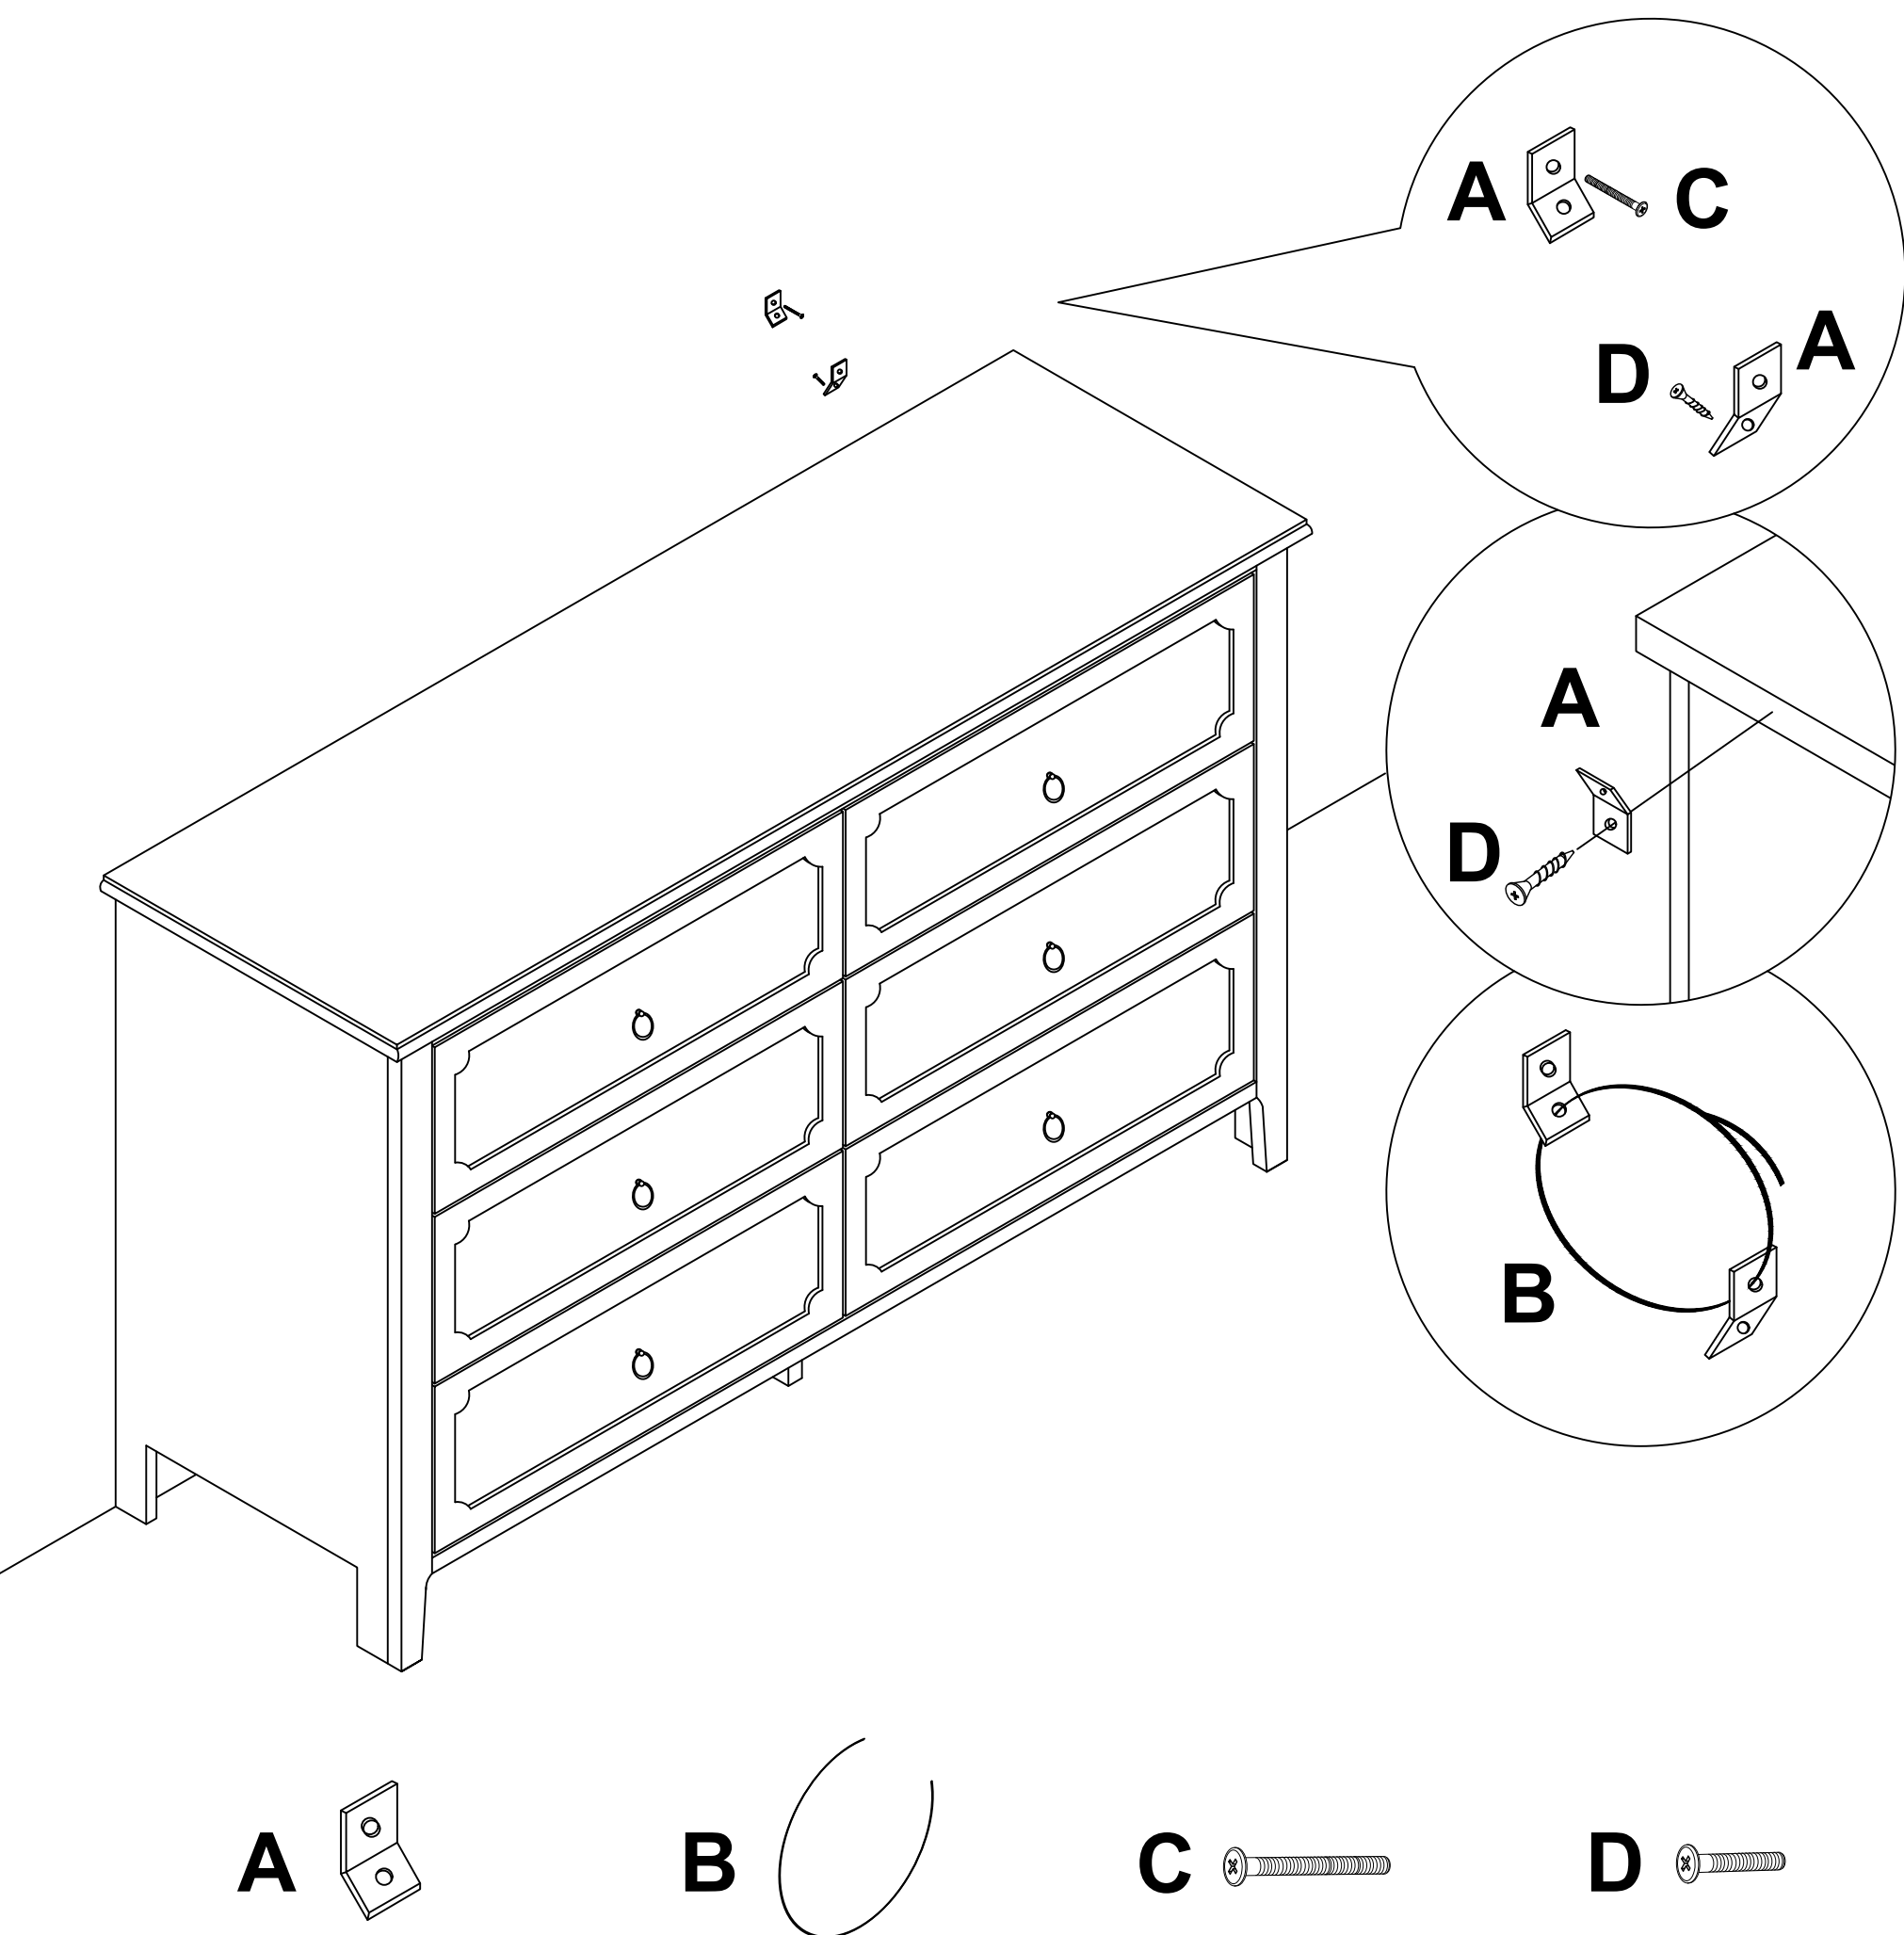

Completed assembly.

