


Installation

3 steps in 10 minutes

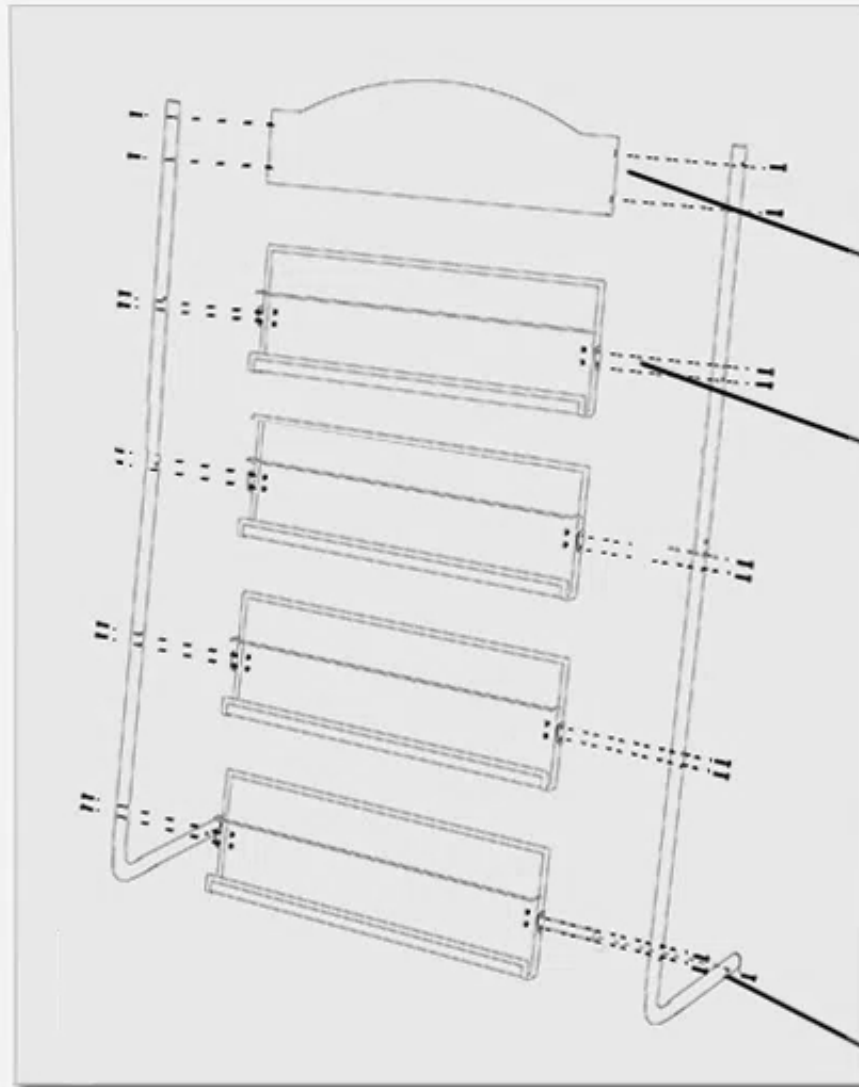

① Fix the advertising board between the left and right brackets in sequence to complete the installation

③ Fix the data network between the left and right brackets in sequence

② Unscrew the screws at both ends of the circular tube and secure it between the left and right brackets