


## Installation

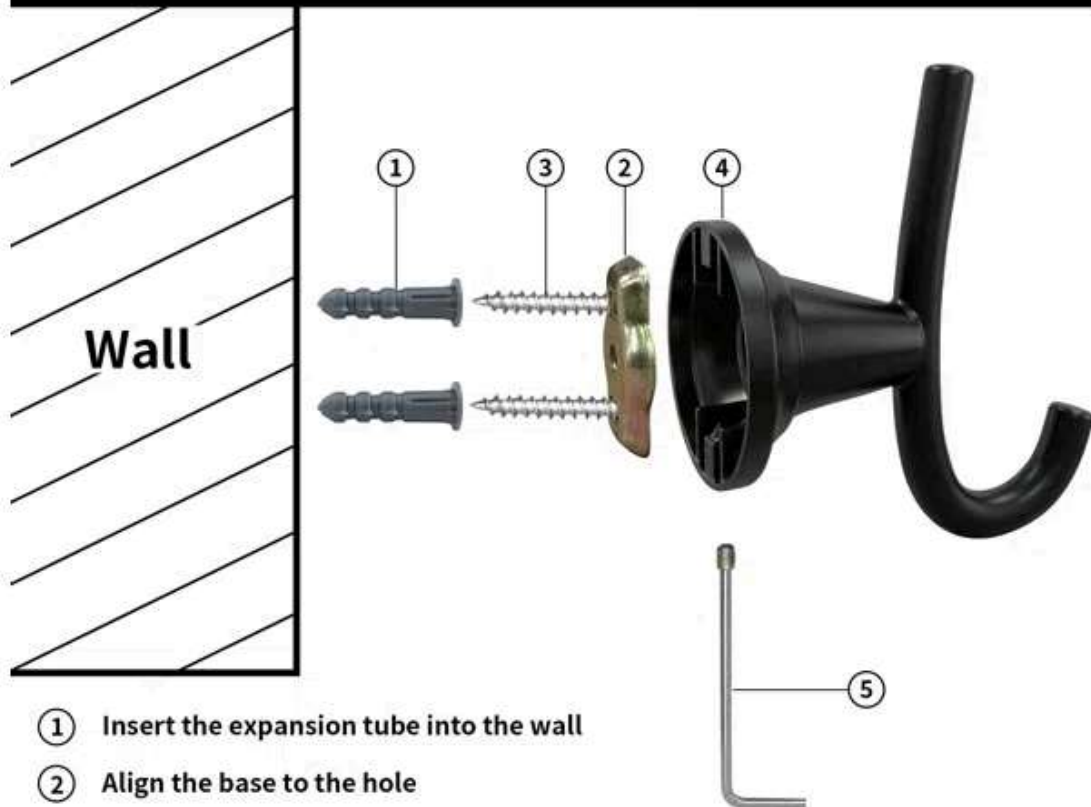

- ① Insert the expansion tube into the wall
- ② Align the base to the hole
- ③ Fasten the longscrew to the base
- ④ Install the coat hook on the base
- ⑤ Tighten the small screw with an "L" hexwrench