


INSTALLATION GUIDE

PLEASE MAKE SURE THE FOLLOWING PARTS ARE AVAILABLE BEFORE INSTALLATION

Warning If you have any advice or questions, please contact us : DOLLFIO-MKT@outlook.com

- A** Shelf Board
- B** L-shaped Iron Pieces
- C** Long Screws
- D** Short Screws

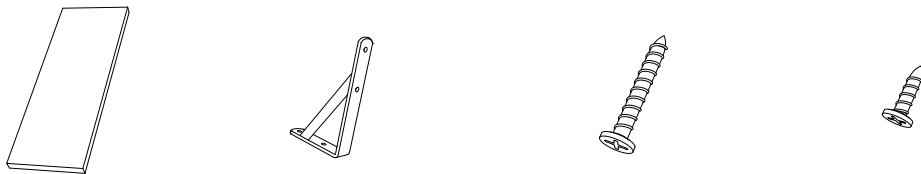

A note about the board without pre-drilling holes: our wood is soft, so you just need to press and rotate a little bit to put the screws in the position you want, which is better than pre-drilling. And it will be more stable than pre-drilling.

E Wall Anchor 1

M13x40mm


CAUTION!
This wall anchor [E] is for drywall ONLY. DO NOT use it in concrete / brick / wood studs wall.

F Wall Anchor 2

ø6mmx4mmx30mm

CAUTION!
This wall anchor [F] is for concrete or brick walls ONLY. DO NOT use it in drywall or wood studs.

PRODUCT SIZE DIAGRAM.

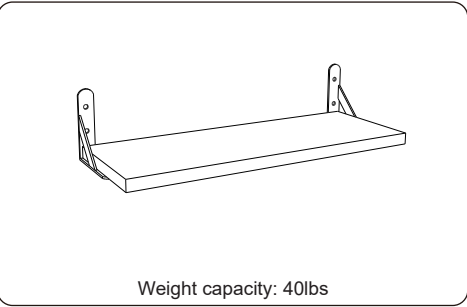

Thank you for purchasing this product.
Please read this instruction manual carefully before use.
Keep these instructions for future reference

Warning Choking hazard-small parts.
Not suitable for children under 3 years old.

Anchor Installation Method

Step 1/A For Solid Concrete and Concrete Block Walls

WARNING:
For Solid Concrete and Concrete Block Walls [E] are not necessary.

For long screw


1) Mark the position of holes and make sure the shelf is level and flush to the wall before installation. Then drill the holes as shown in the figure.

2) Turn the wall anchor F into the wall.

Anchor Installation Method

Step 1/B For Drywall

⚠ WARNING:
For drywall
[F] are not necessary.

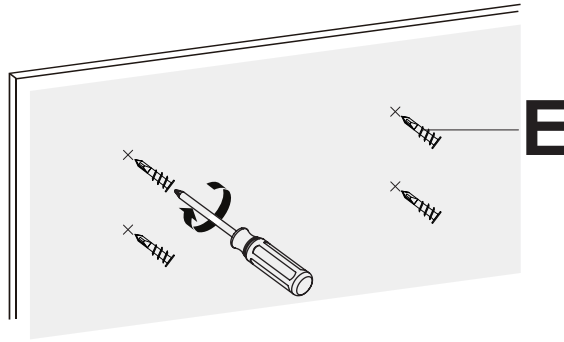


Mark the position of holes and make sure the shelf is level and flush to the wall before installation.
Press and screw the wall anchors E into the drywall using a Phillips screwdriver (not included) and turn clockwise, making sure that wall anchors E are stable and flush with the wall.
Drill wall holes and screw the wall anchors E into the drywall if necessary.


Board Installation Method

Fix the bracket upwards or adown as you wish.


Step 2 Board Installation - Method One

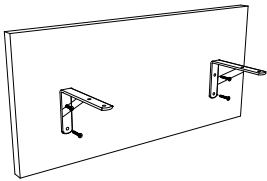

1. Fix the L-shaped iron to the wall with long screws C.

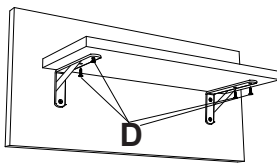


2. Place the board on the L-shaped iron piece, and then fix it with small screws D.

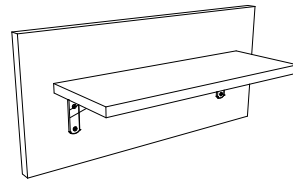


3. After the installation is completed as shown in the figure.


Step 2 Board Installation - Method Two

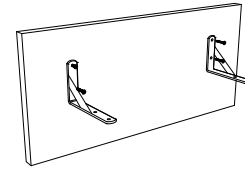

1. Fix the L-shaped iron to the wall with long screws C.

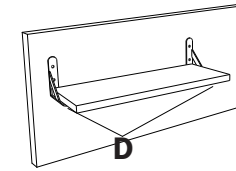

2. Place the board on the L-shaped iron piece, and then fix it with small screws D.

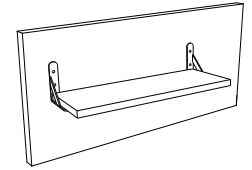

3. After the installation is completed as shown in the figure.

(The above two installation methods are to fix the L-shaped iron pieces on the wall first, and then fix the wooden board on the pieces. You can also fix the L-shaped iron pieces to this plate first, and then fix the fixed board to the wall)