

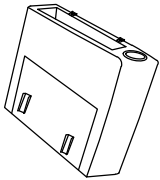






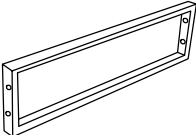


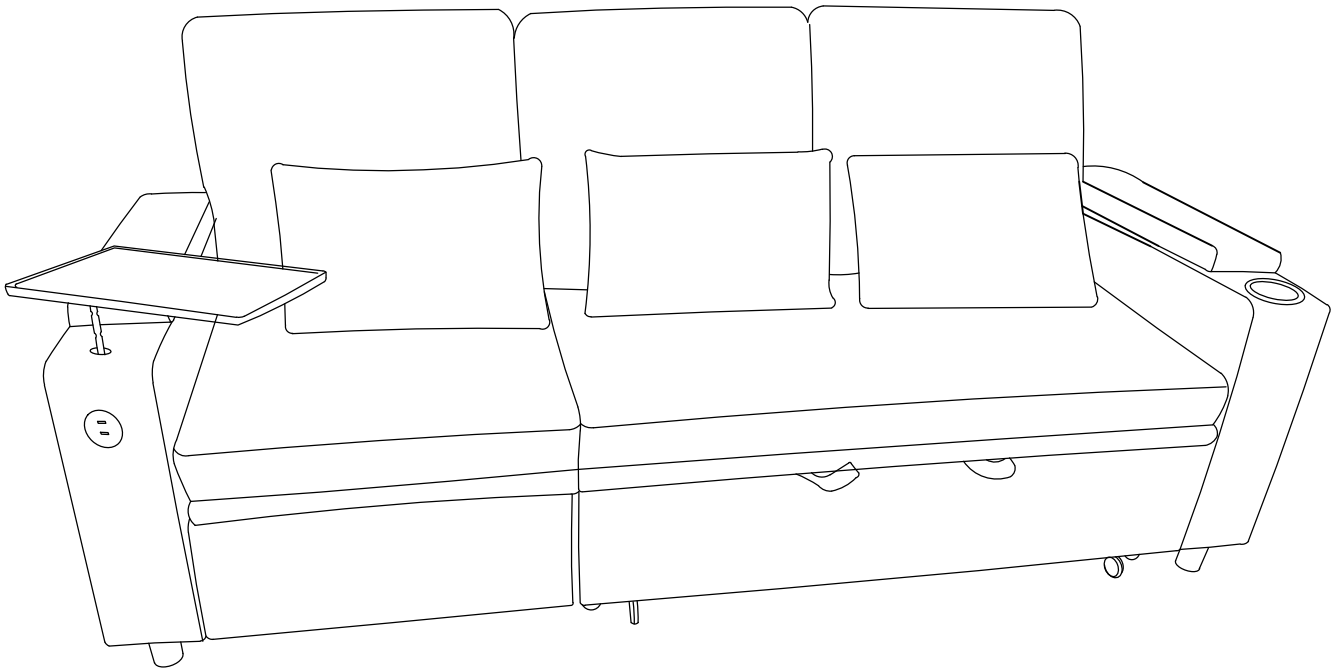




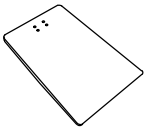

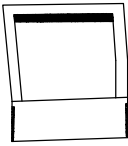
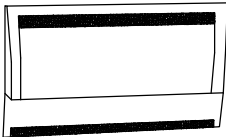









2222A




Scan the QR code to obtain the installation video


ASSEMBLY INSTRUCTION

<p>A</p>  <p>x1</p>	<p>B</p>  <p>x1</p>	<p>C</p>  <p>x1</p>	<p>D</p>  <p>x1</p>	<p>E</p>  <p>x1</p>
<p>F</p>  <p>x1</p>	<p>G</p>  <p>x1</p>	<p>H</p>  <p>x1</p>	<p>I</p>  <p>x1</p>	<p>J</p>  <p>x1</p>
<p>K</p>  <p>x1</p>	<p>L</p>  <p>x8</p>	<p>M</p>  <p>x4</p>	<p>N</p>  <p>M6*35</p> <p>x8</p>	<p>O</p>  <p>M6*16</p> <p>x12</p>
<p>P</p>  <p>M6*12</p> <p>x4</p>	<p>Q</p>  <p>x1</p>	<p>R</p>  <p>x1</p>	<p>S</p>  <p>x1</p>	<p>T</p>  <p>x1</p>
<p>U</p>  <p>x3</p>	<p>V</p>  <p>x3</p>	<p>W</p>  <p>x1</p>	<p>X</p>  <p>x1</p>	<p>Y</p>  <p>x1</p>
<p>Z</p>  <p>x2</p>	<p>AA</p>  <p>x16</p>			


STEP1:

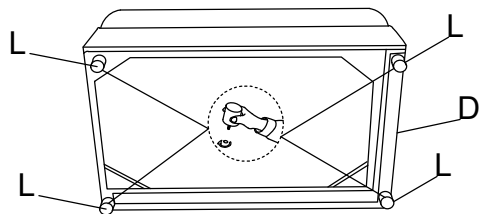


STEP2:

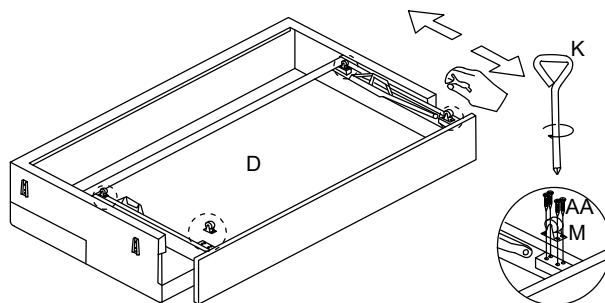


STEP3:

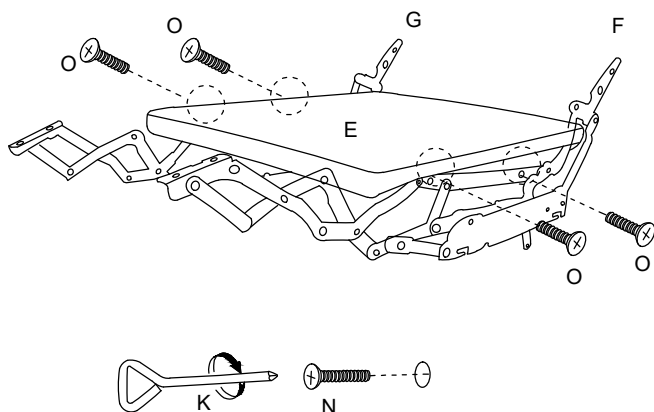


STEP4:

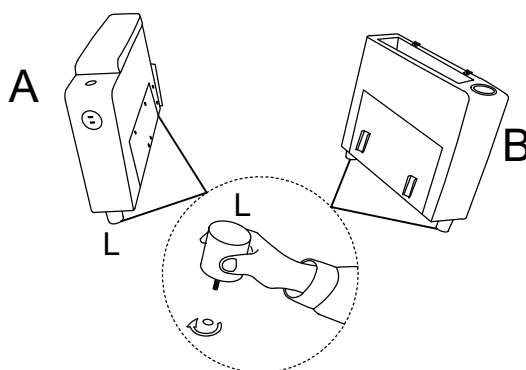


STEP5:

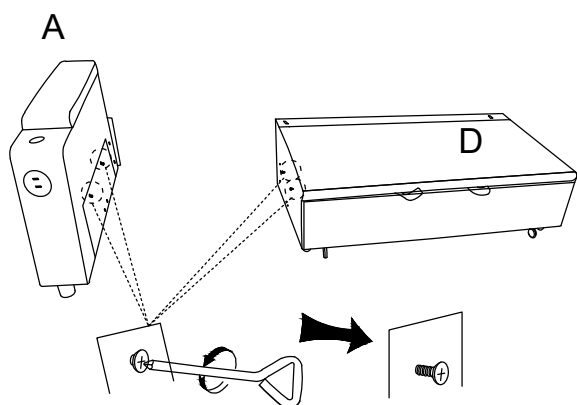


STEP6:

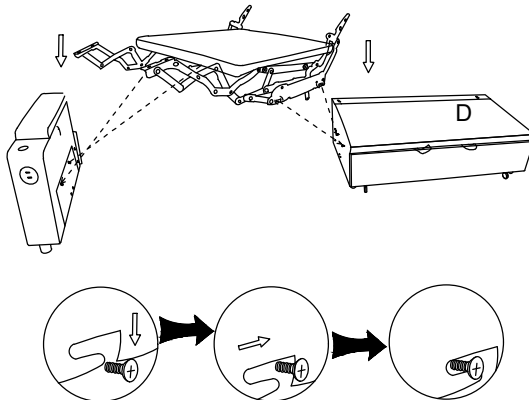


STEP7:

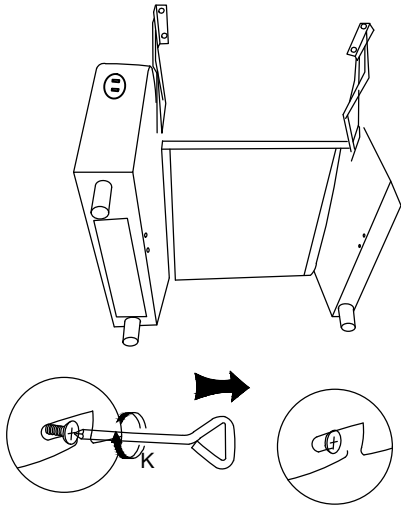


STEP8:

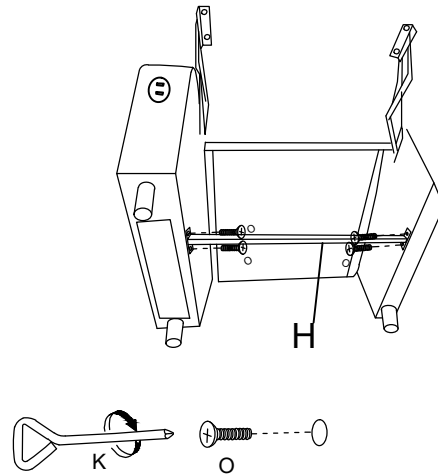


STEP9:

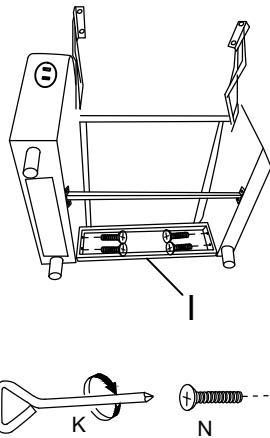


STEP10:

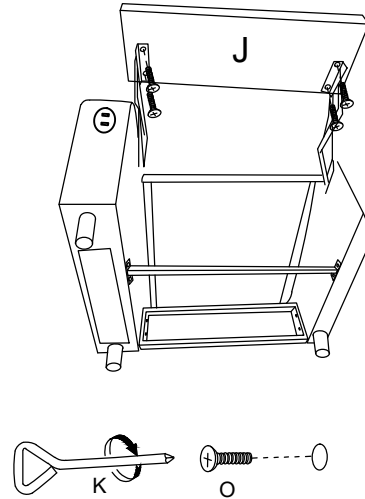


STEP11:

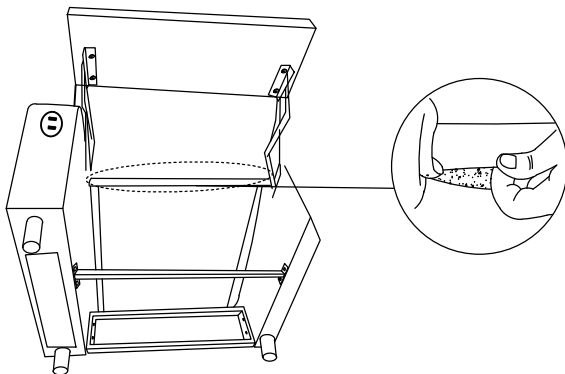


STEP12:

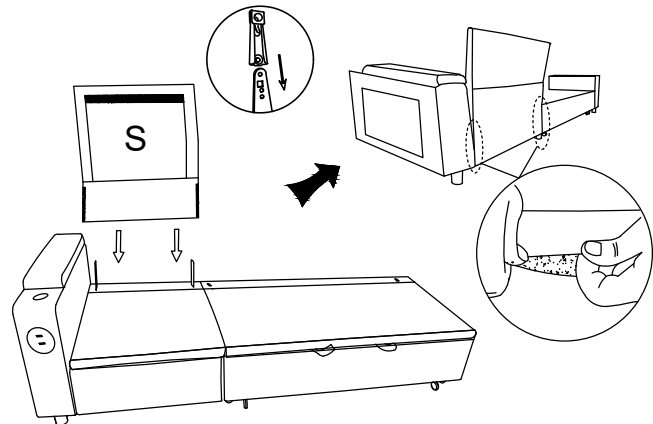


STEP13:

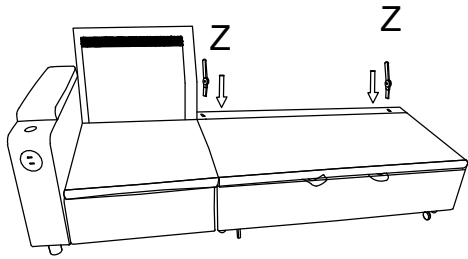


STEP14:

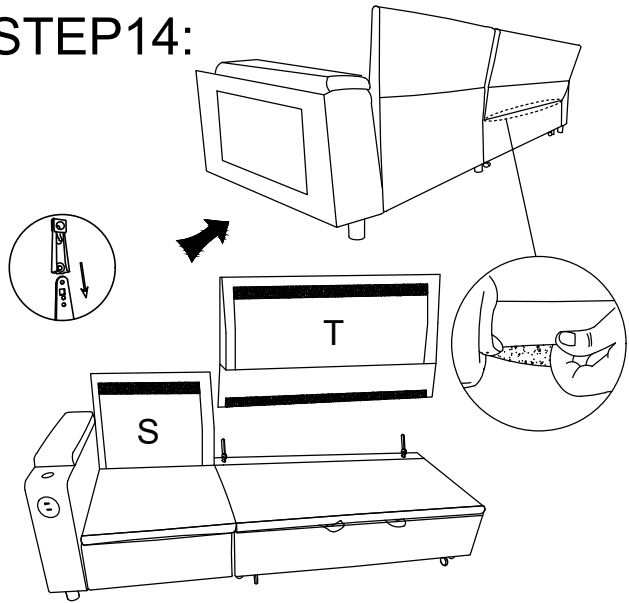


STEP15:

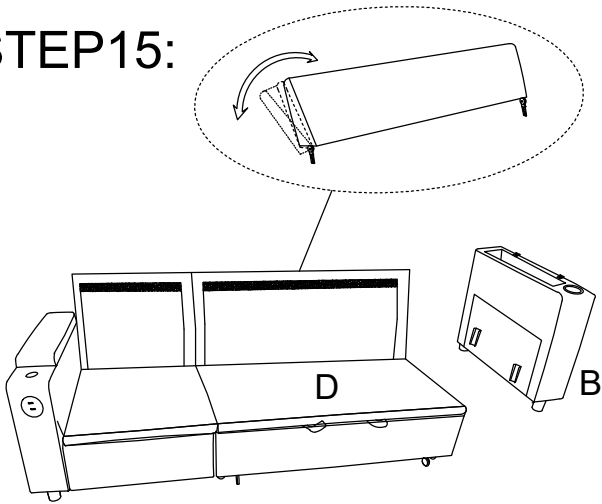


STEP16:

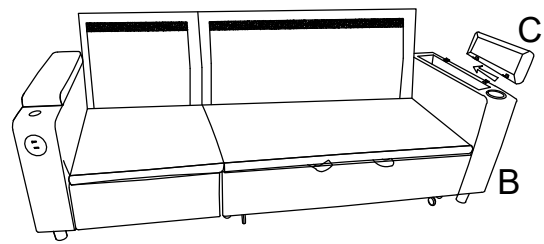


STEP17:

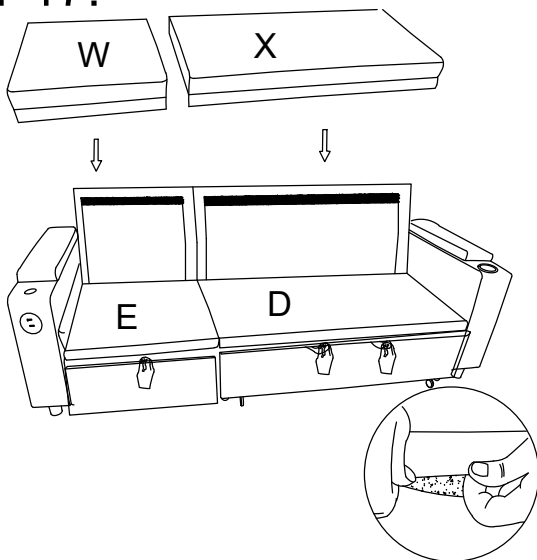


STEP18:

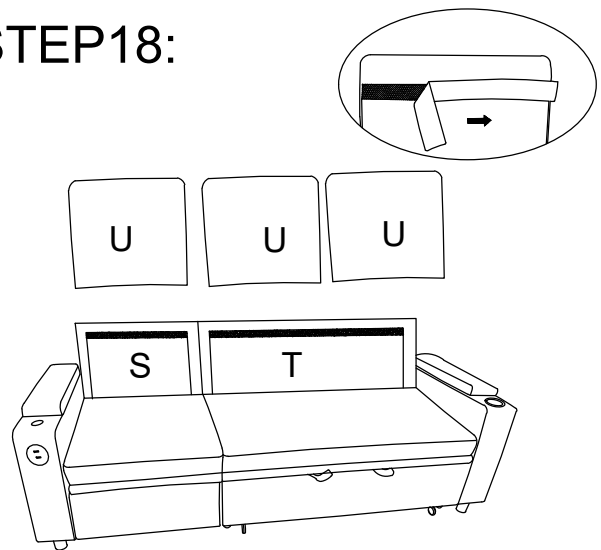


STEP19:

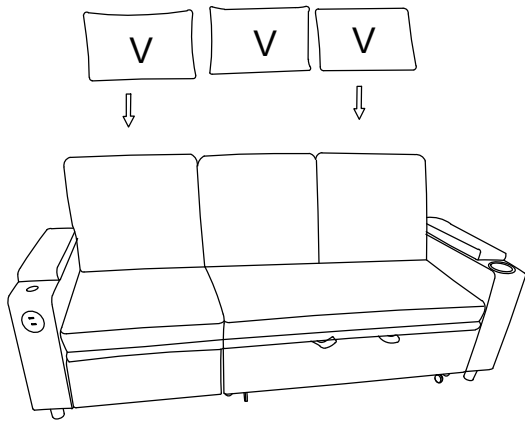


STEP20:

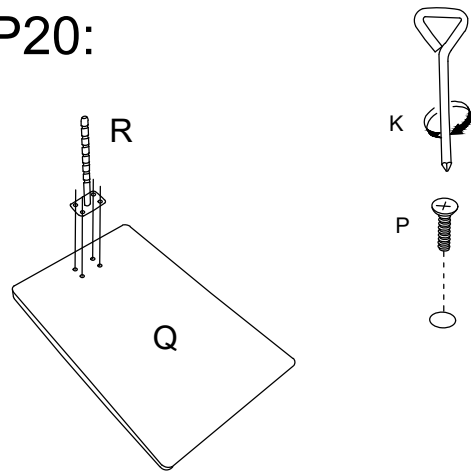


STEP21:

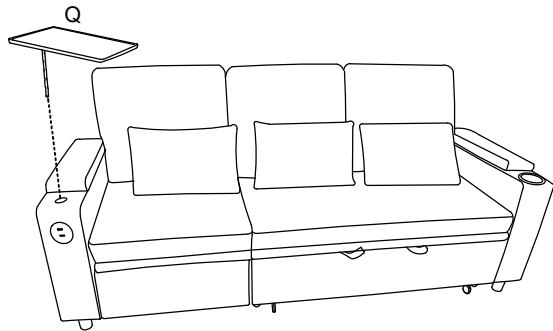

STEP22:

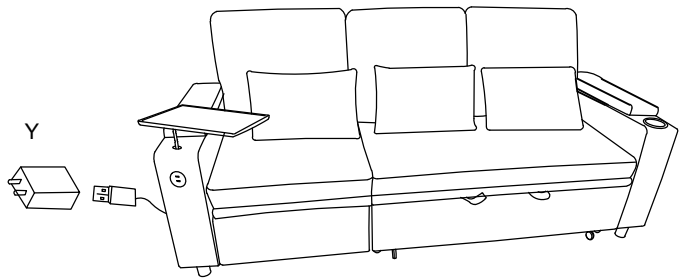

STEP23:

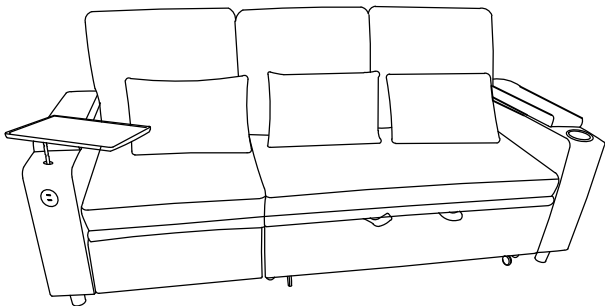

STEP24:

