




INSTRUCTIONS

ANTONY


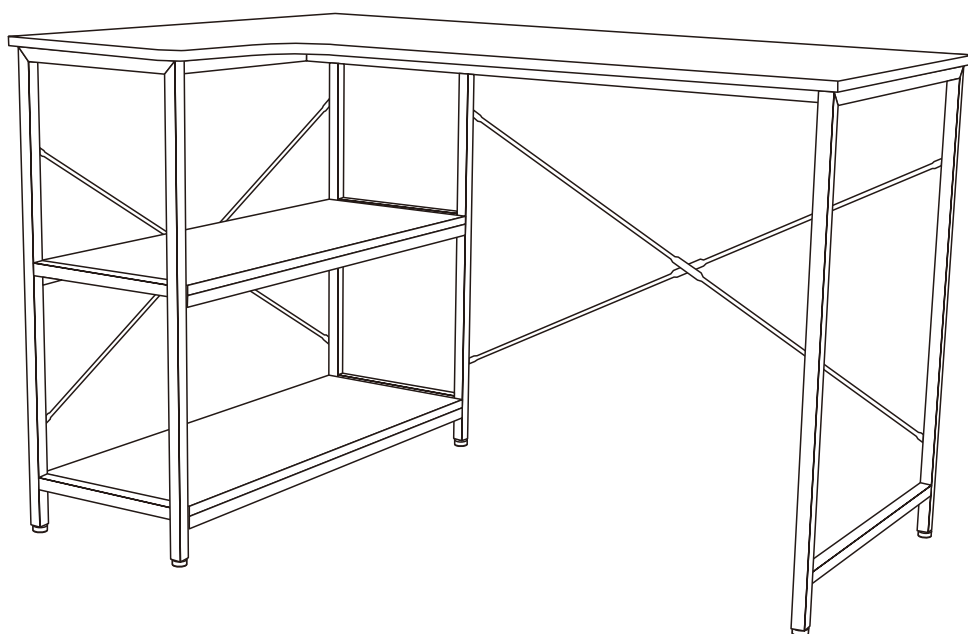


Installation Notes:








- 1. Before starting to assemble, please check the number of parts referring to this instruction.**
- 2. Before starting to assemble, please check the condition of the parts. If any damage is found, please contact us.**
- 3. Be careful of the heavy board.**
- 4. Handle with care to avoid damaging floor and the product.**
- 5. Recommendation of 2-3 people for easier installation.**

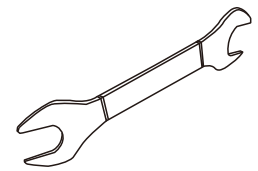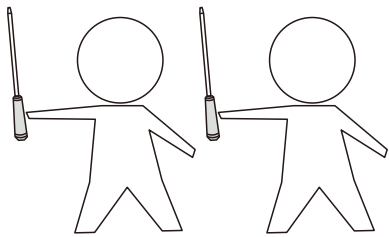

Need to prepare

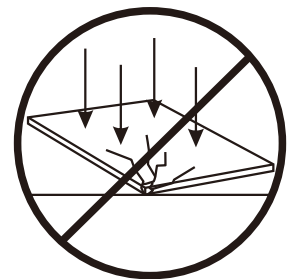
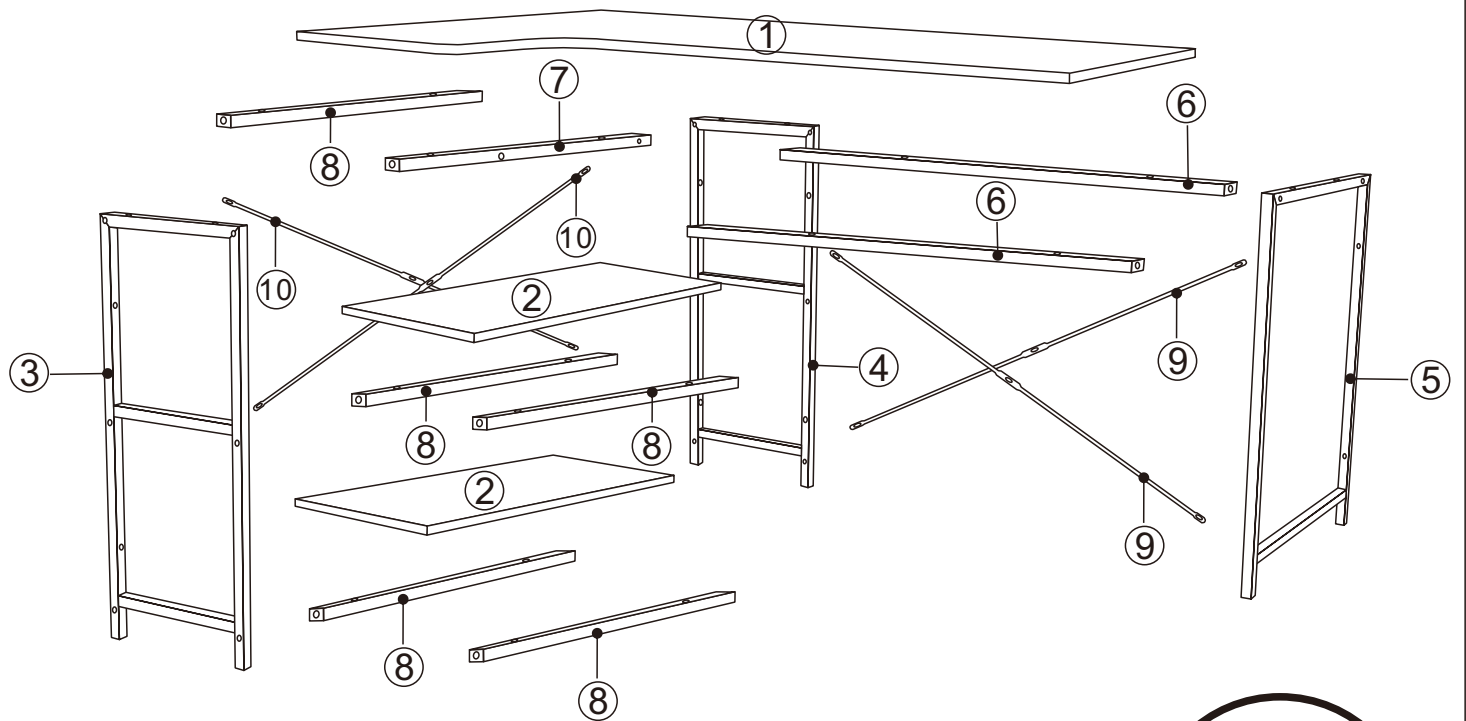


Wood board
is fragile

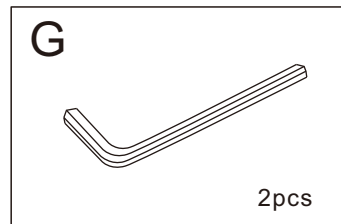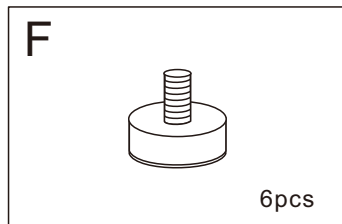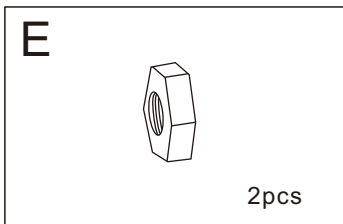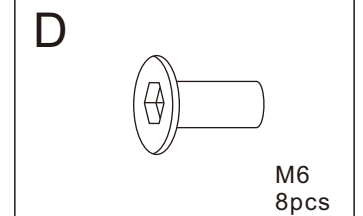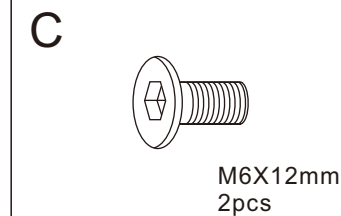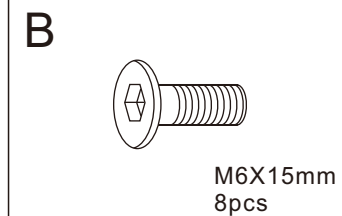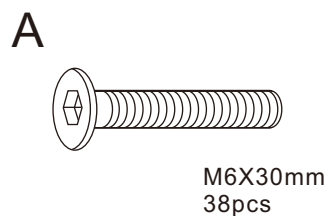


1

F*6

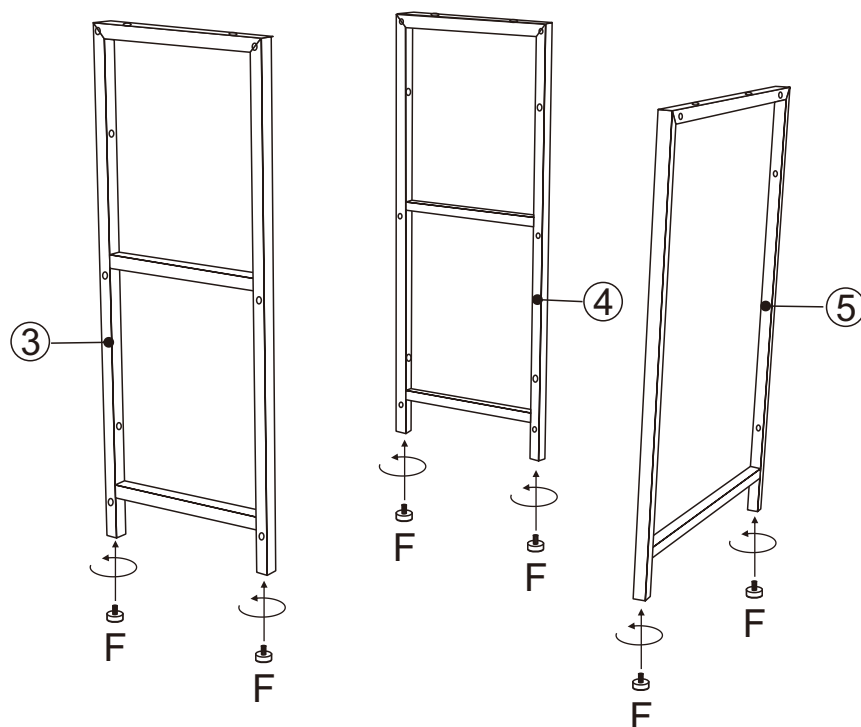


2



A*8






M6X30mm


G

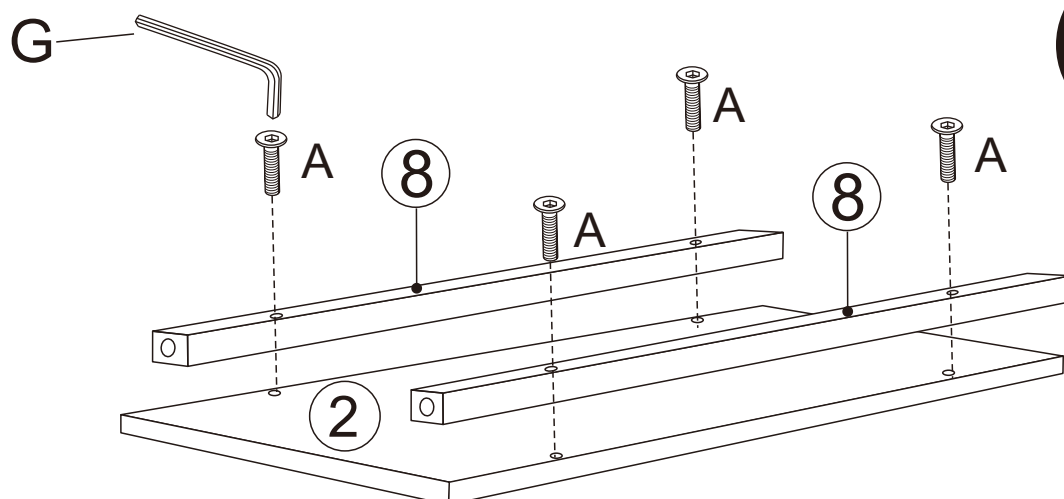



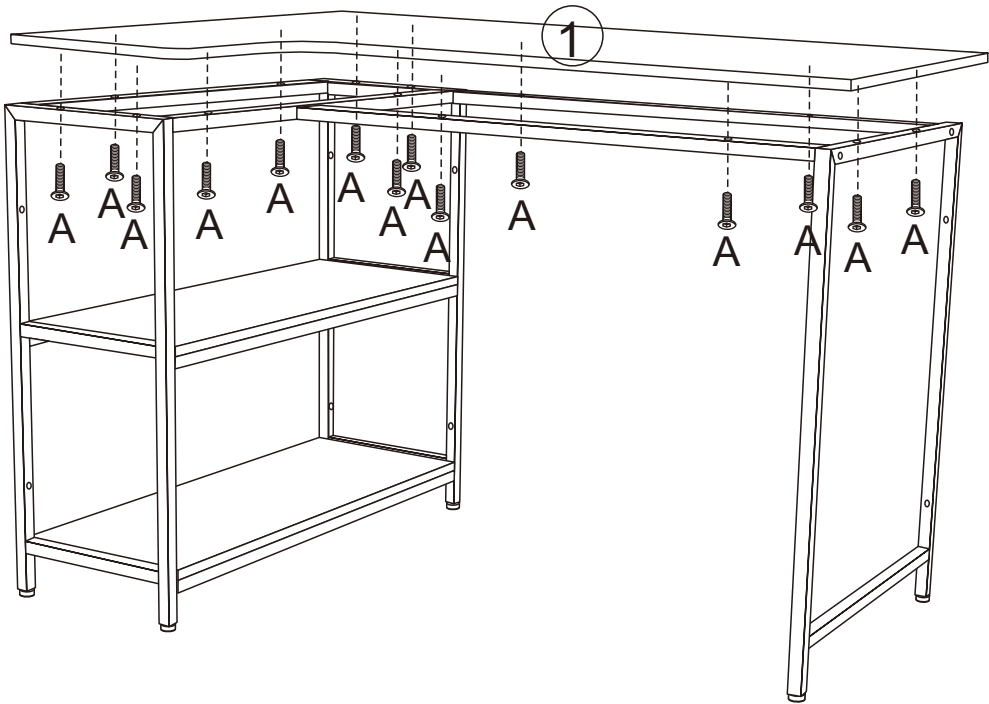
3	<p>A*12</p>  <p>M6X30mm</p>	<p>G</p> 	
---	--	--	--

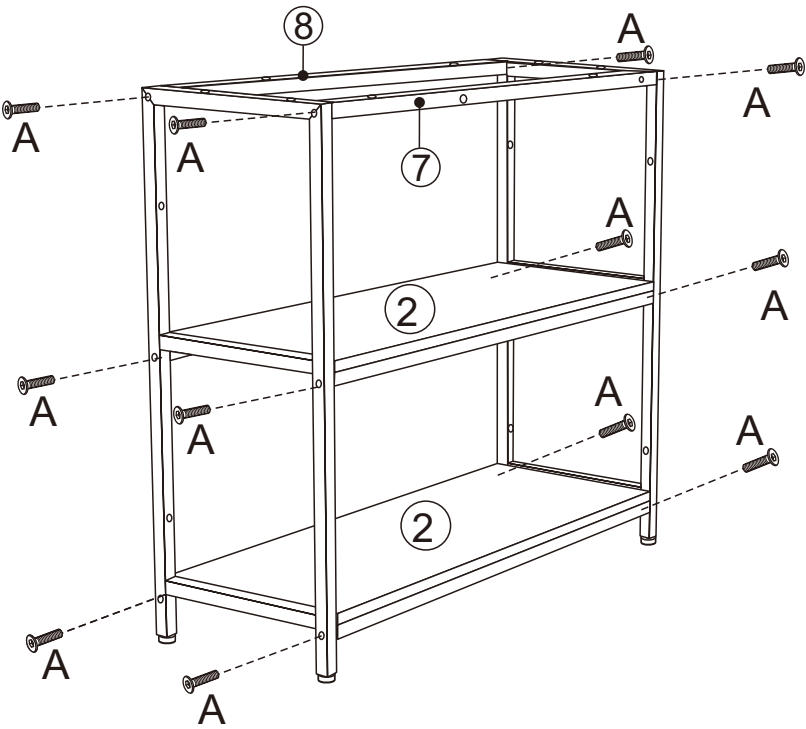





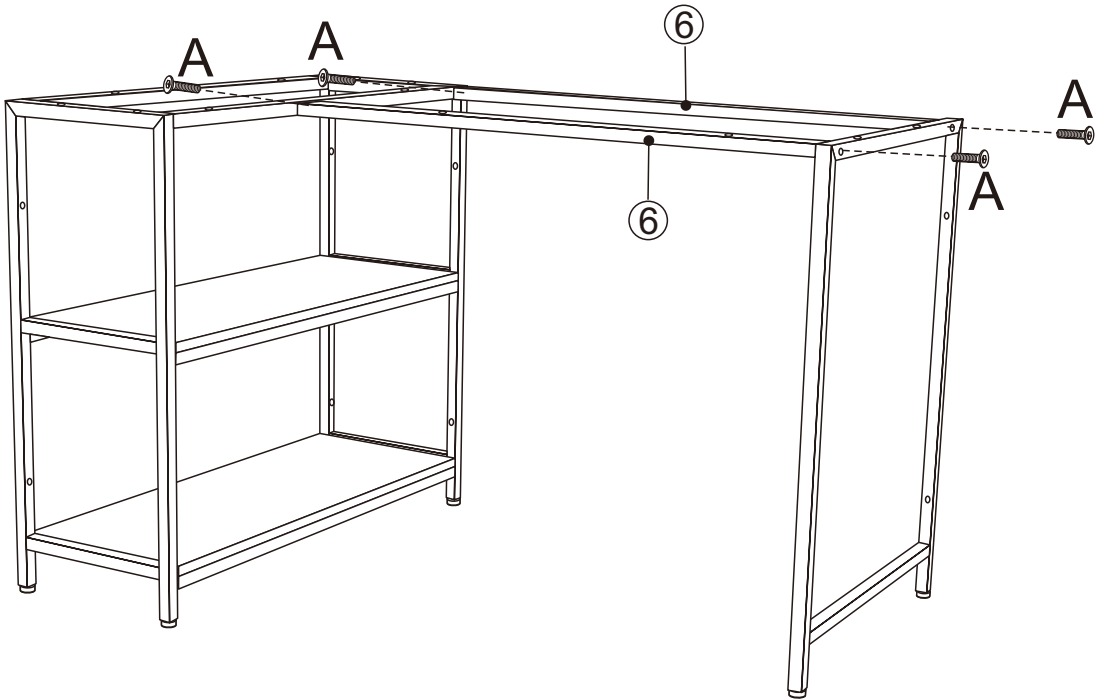
4	<p>A*4</p>  <p>M6X30mm</p>	<p>G</p> 	
---	---	--	--








5	A*14  M6X30mm	G 	
---	--	--	--


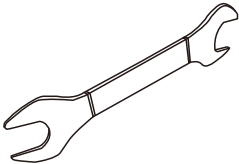


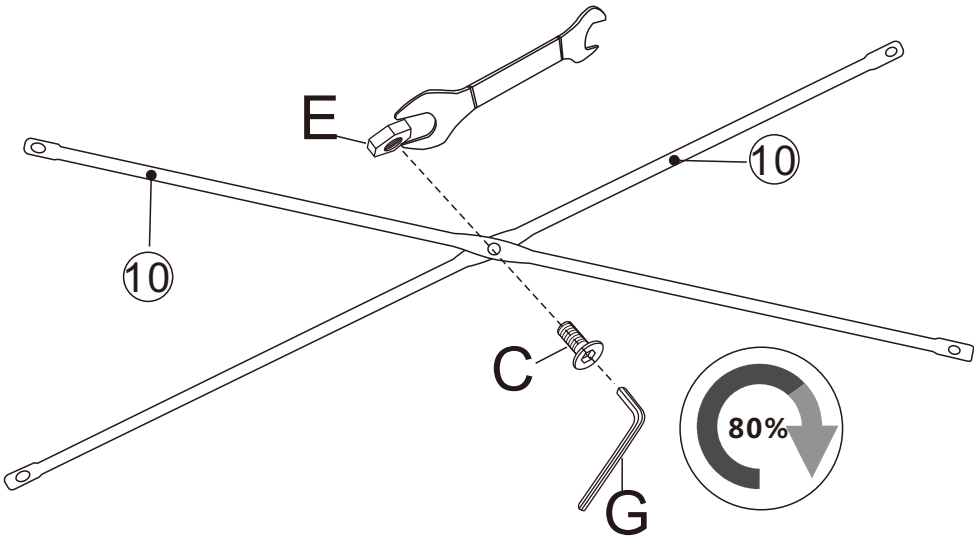
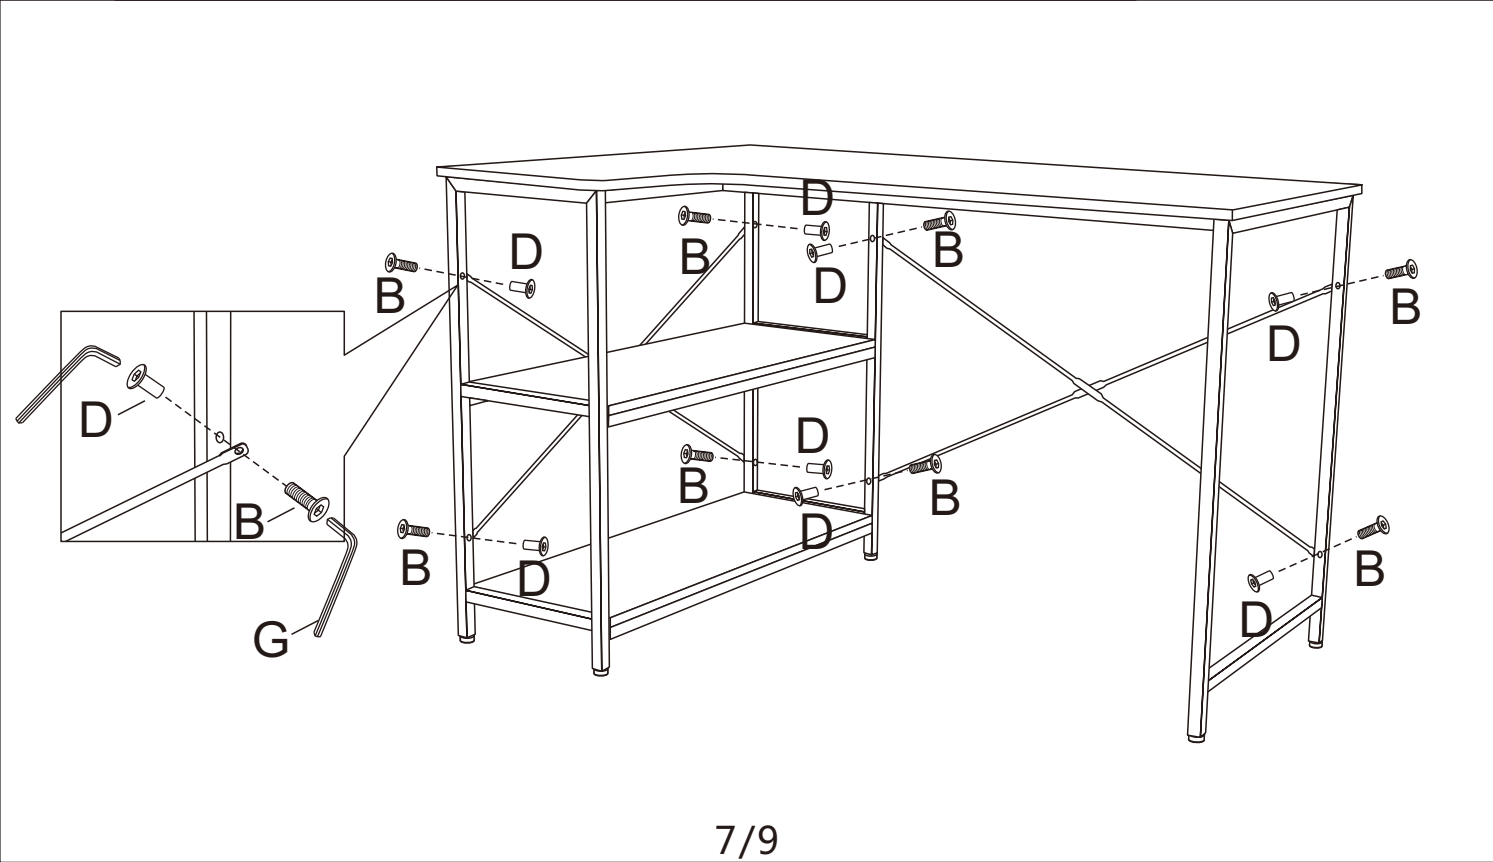
6	C*1  M6X12mm	E*1 	G 	
---	---	--	---	---





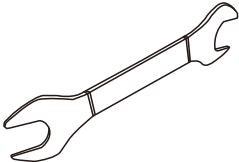7	C*1  M6X12mm	E*1 	G 	
---	--	---	--	--

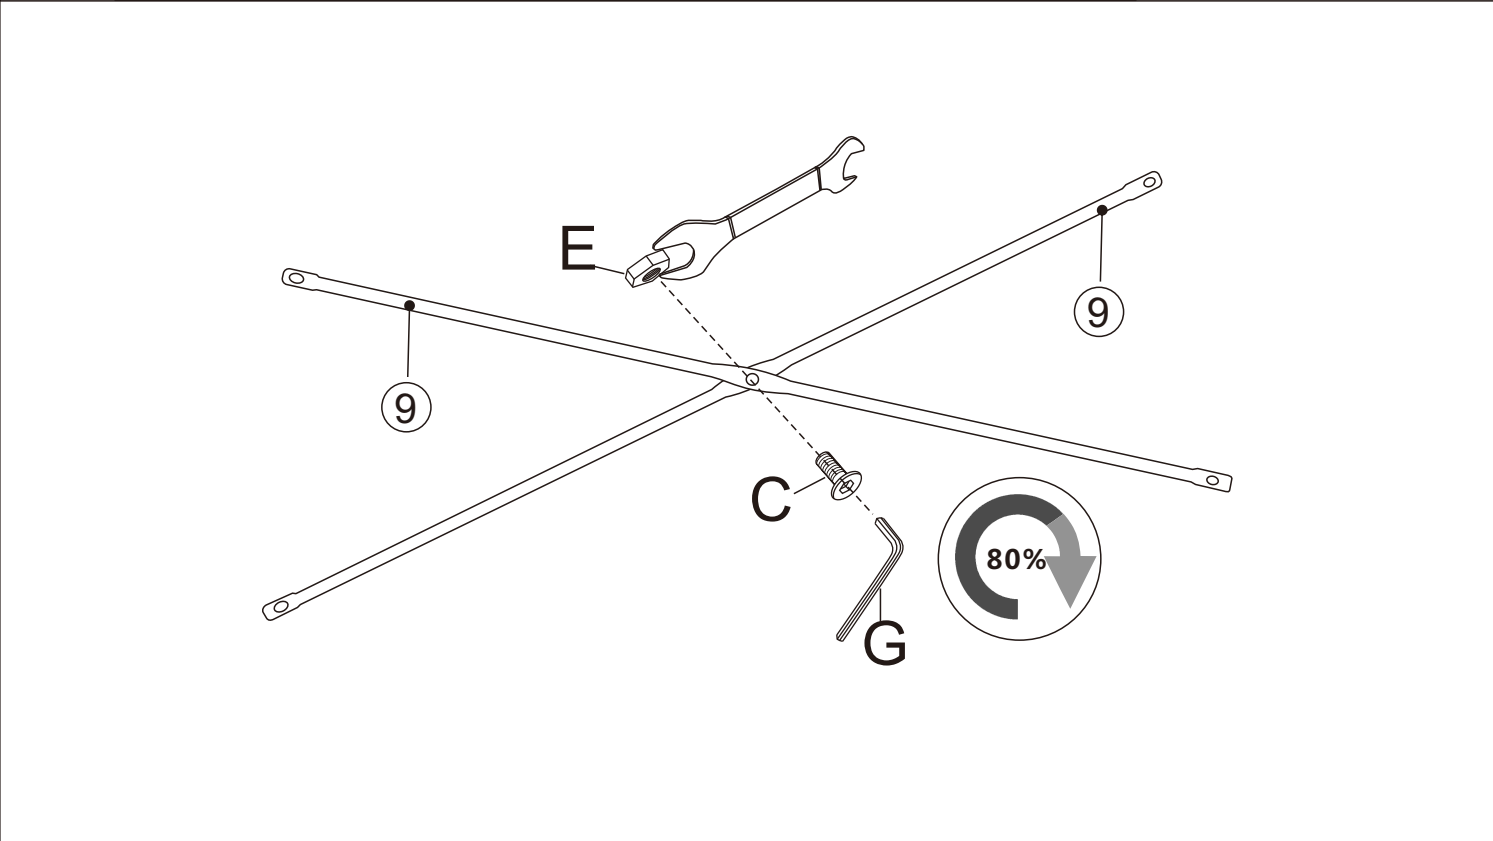

8	B*8  M6X15mm	D*8  M6	G*2 	
---	--	---	--	--



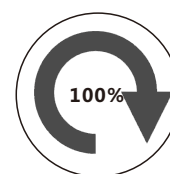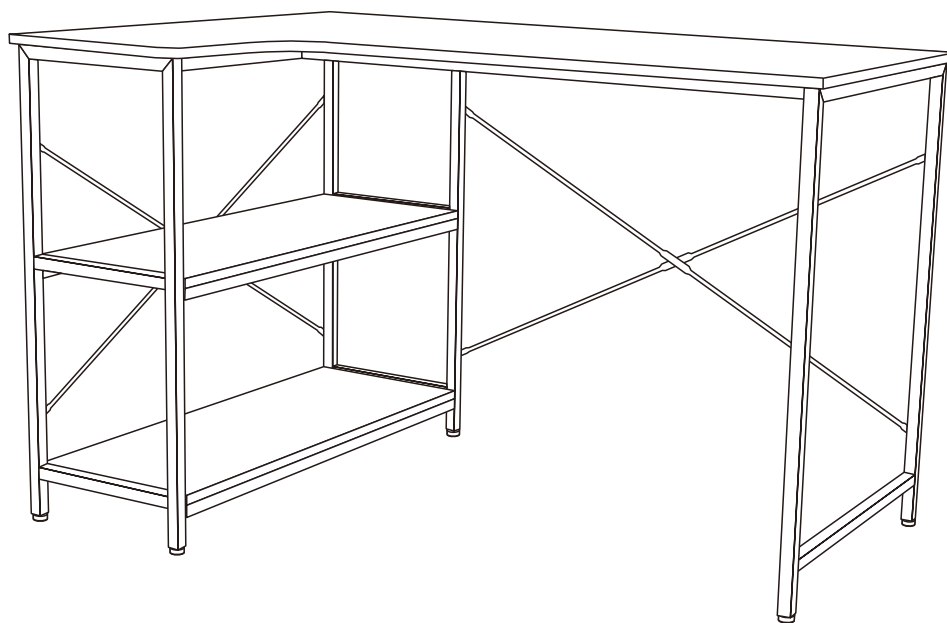

ALL SCREW

Maintenance and Repair

To protect your furniture, we recommend:

- 1. Avoid placing furniture in direct sunlight**
- 2. Keep away the products from children while assembling. Watch out for children climbing on the products.**
- 3. Clean the products with clean rag.**
- 4. If the product is stained with oil, please wipe with general detergent.**
- 5. Clean the product with clean rag that is not easy to depilate, screw dry and wipe with water.**
- 6. Please handle the product with care.**