




ASSEMBLY INSTRUCTIONS

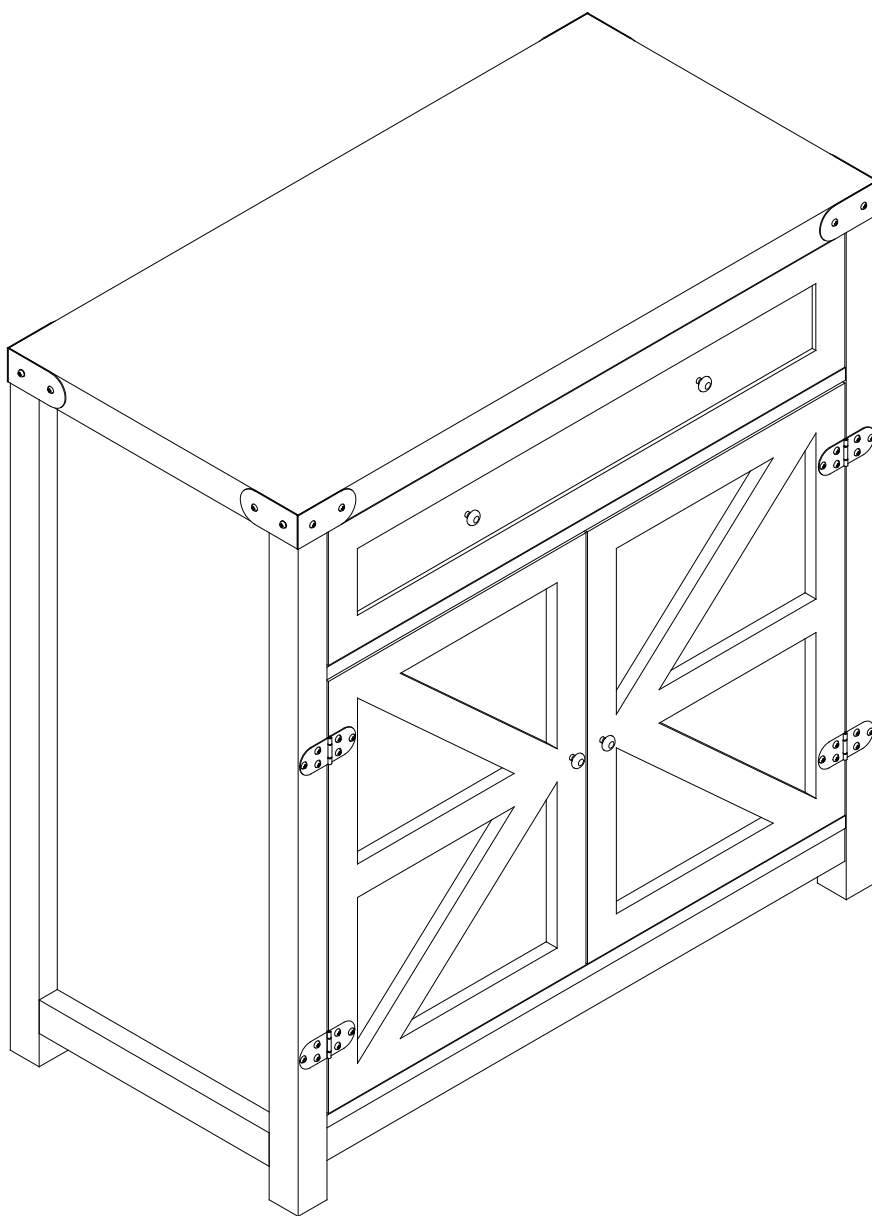

WARNING!



MAXIMUM LOAD
200lb

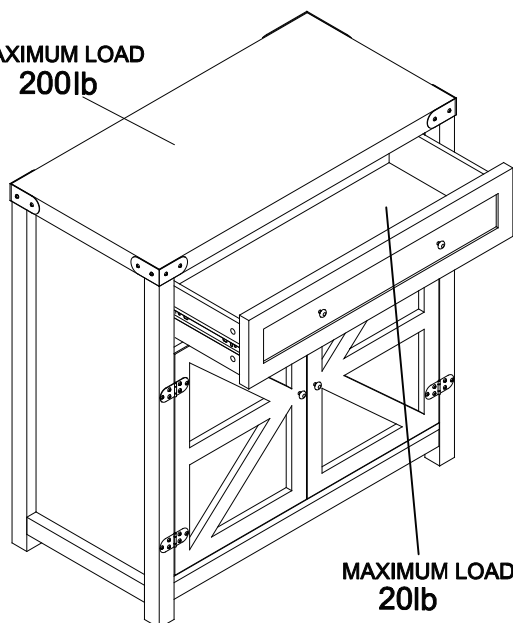


MAXIMUM LOAD
20lb




Estimated Time for Assembly

60 mins

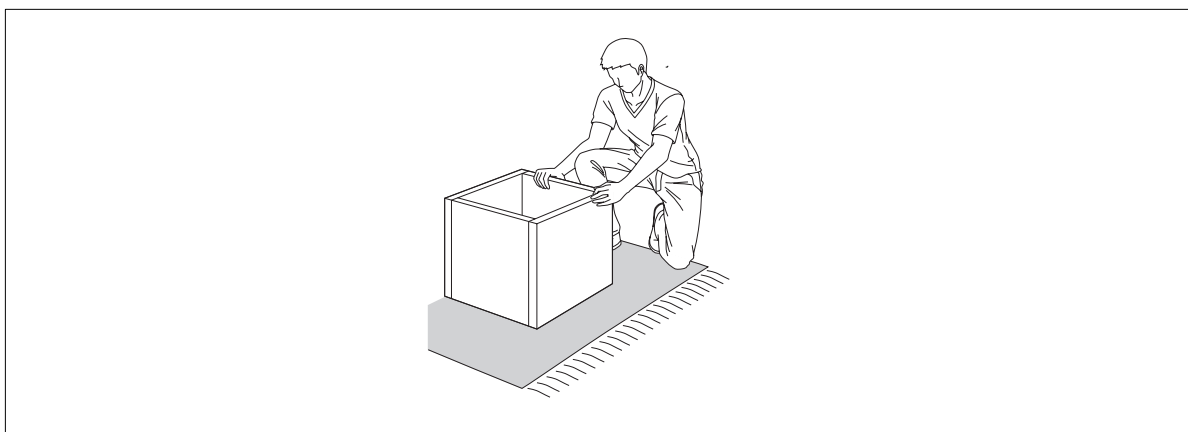

Assemble the furniture on empty carton, carpet, or rug to prevent scratches or damage.

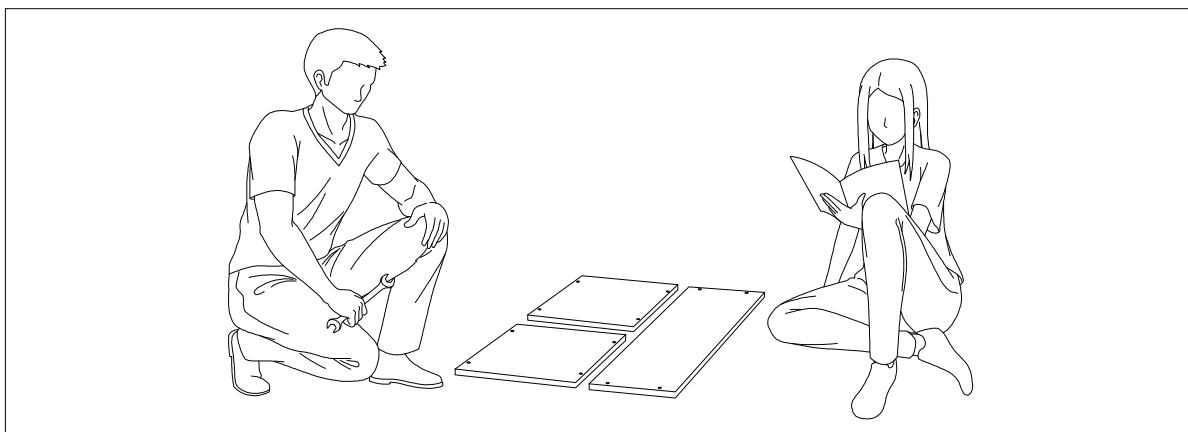


This furniture requires 2 people to assemble.

Make sure no parts are missing or damaged before assemble.


Board Identification

Not actual size

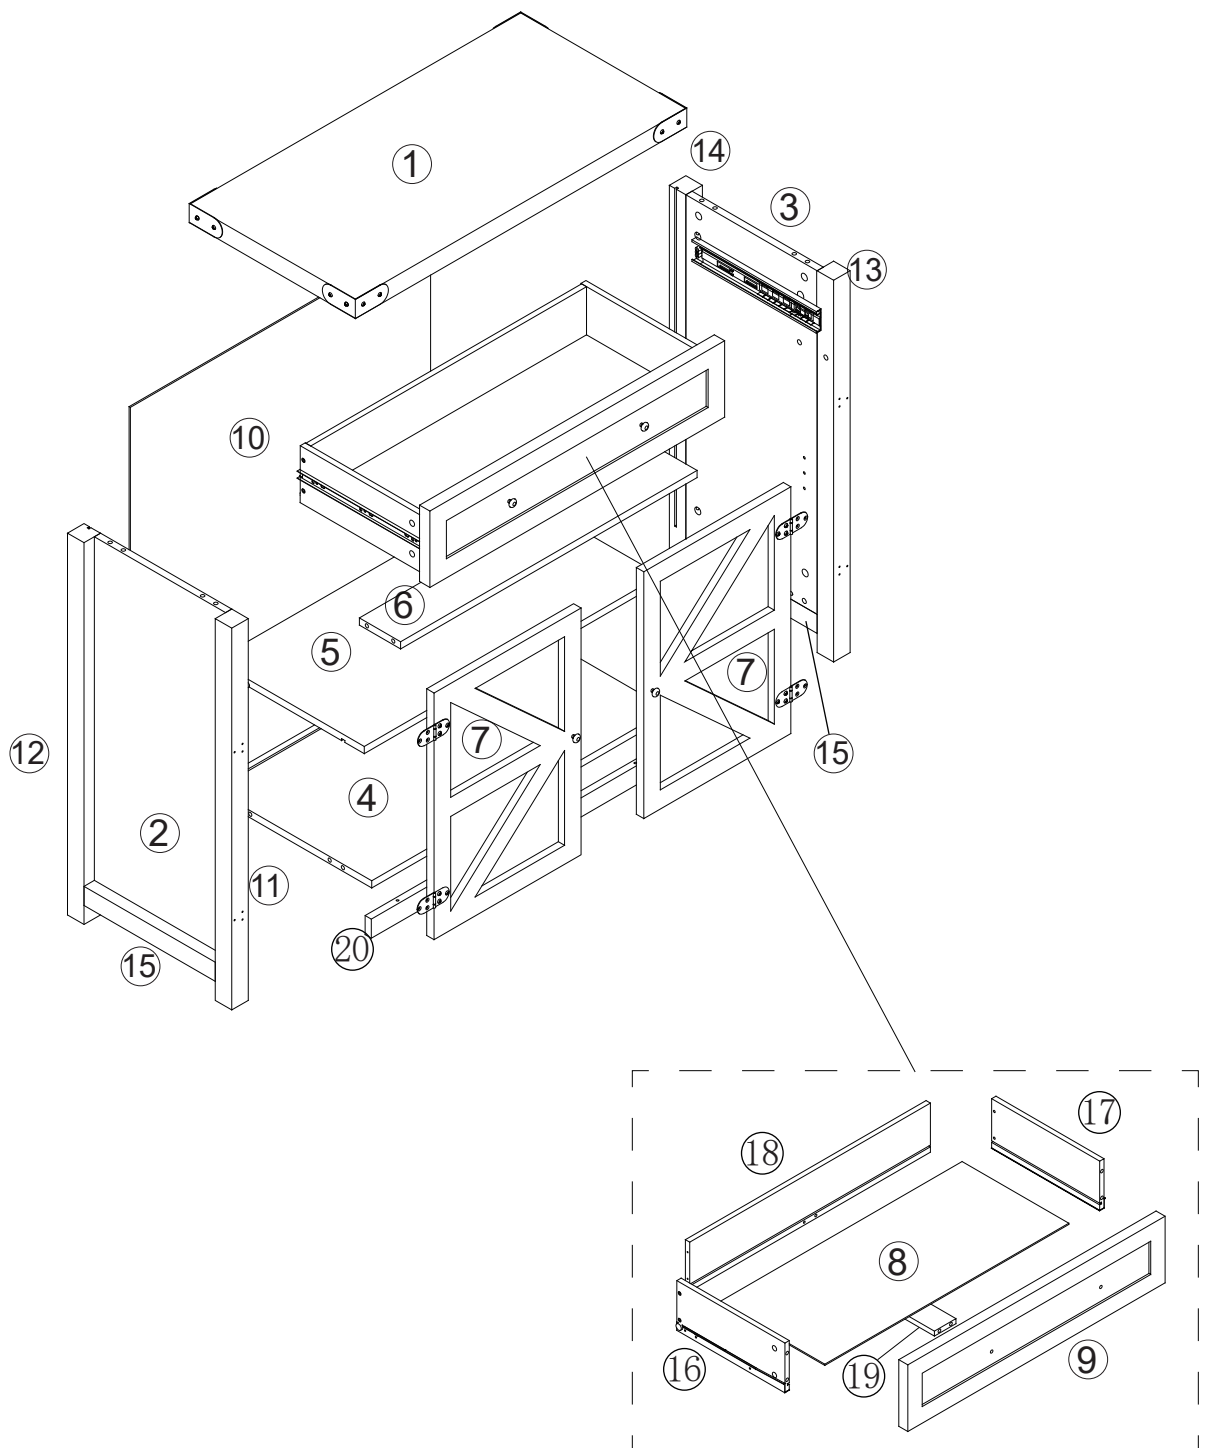


Board Identification


Not actual size

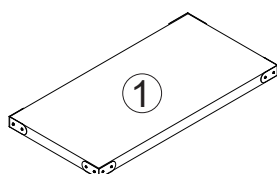


Face board x1

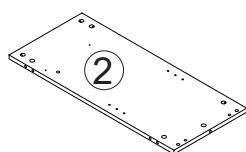


Left side board x1

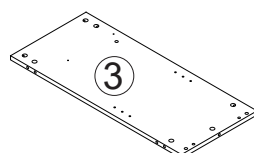


Right side board x1

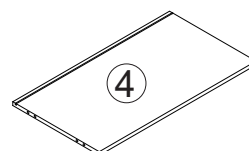


bottom board x1

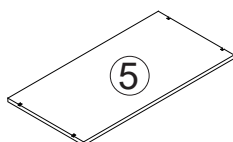


Movable board x1

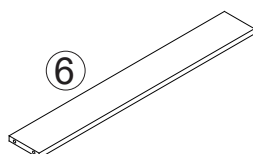


Bottom brace board x1

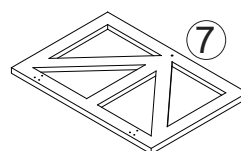


door board x2

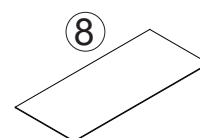


Drawer bottom board x1

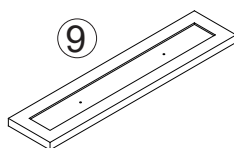


Drawer face board x1

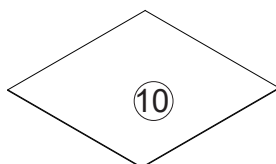


Back board x1

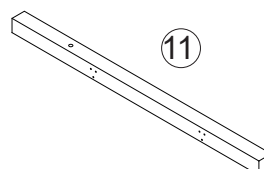


Left foreleg x1

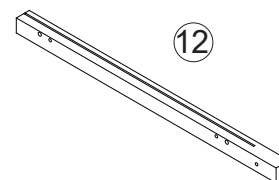


Right foreleg x1

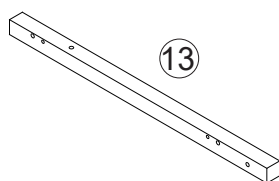


Left hind leg x1

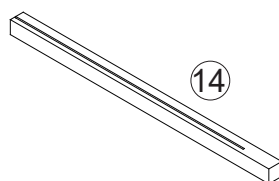


Right hind leg x1

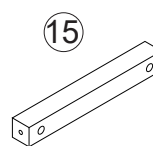


Leg pull board x2

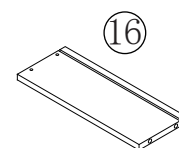


Drawer left board x1

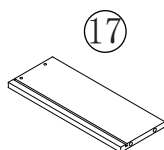


Drawer right board x1

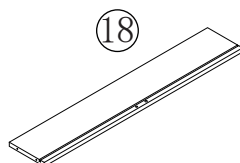

Drawer back board x1

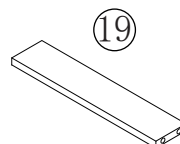





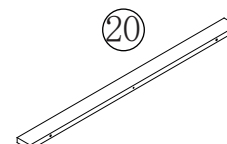










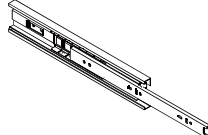


Drawer baffle board x1






Bottom baffle board x1


Hardware List

 .5×15mm A ×32+1	 B ×30+1	 8×30mm C ×16	 D ×2
 3×16mm E ×8	 4×20mm F ×4	 3.5×12mm G ×16+1	 4×35mm H ×4
 I ×4	 6×30mm J ×2	 k ×4	 L ×1
 M ×2	 4×50mm N ×3	 O ×4	 3.5×12 mm P ×24+1
 Q ×4	 S ×2		

STEP 1

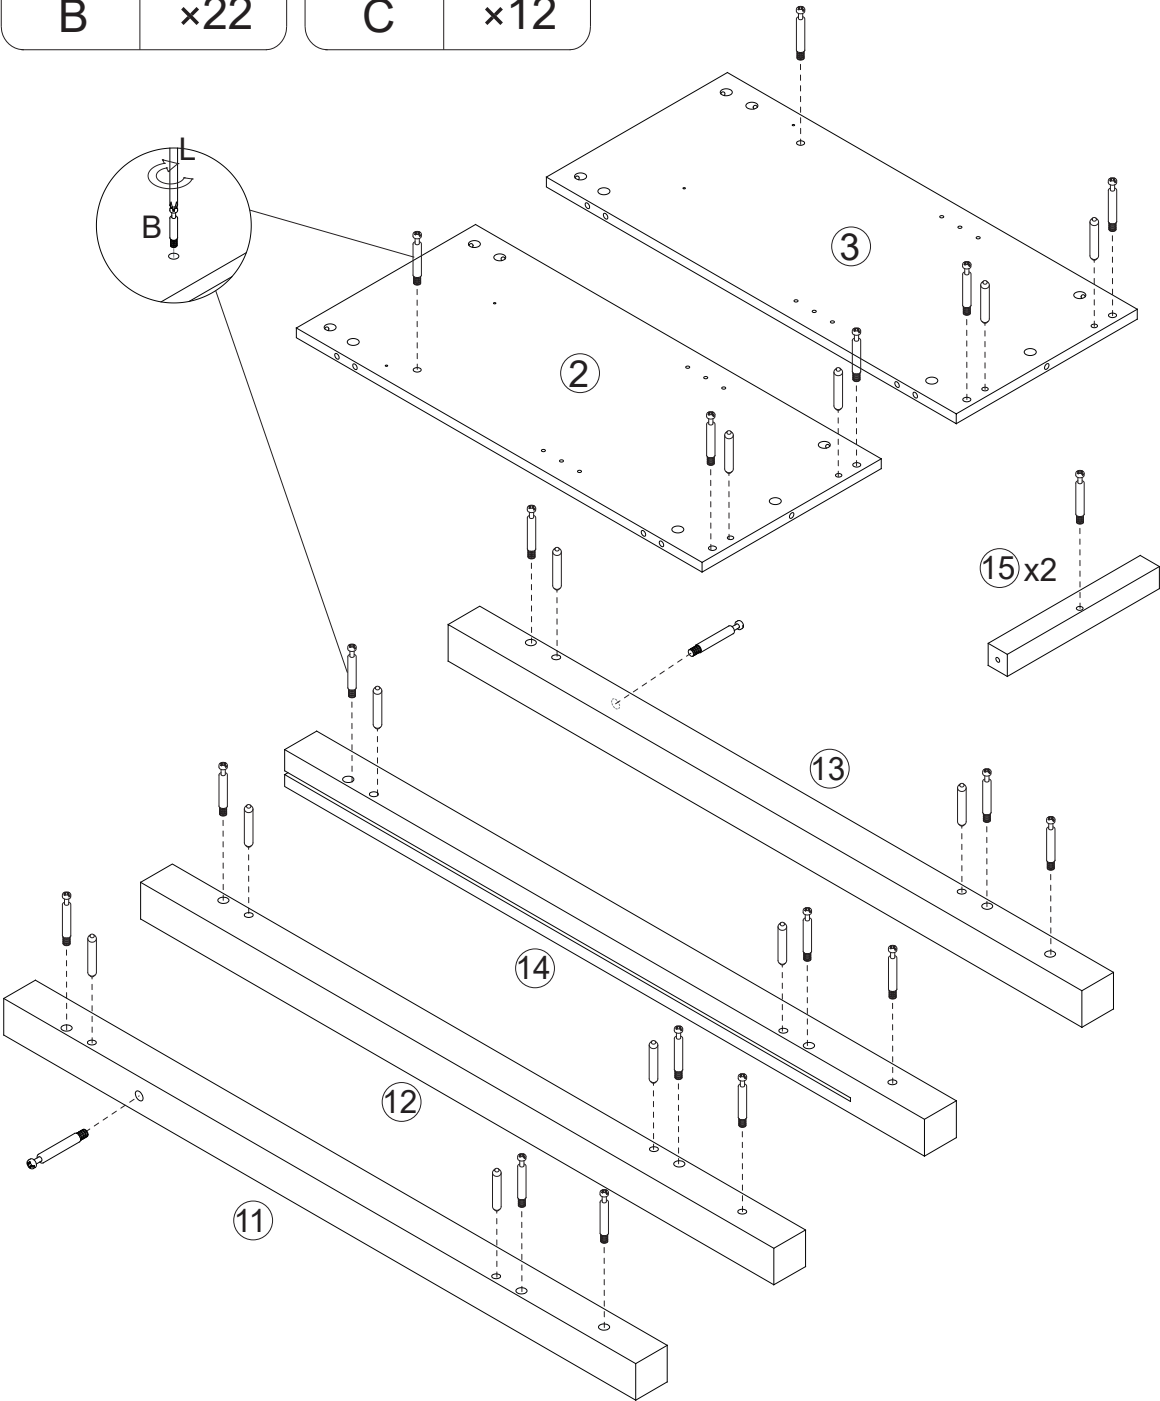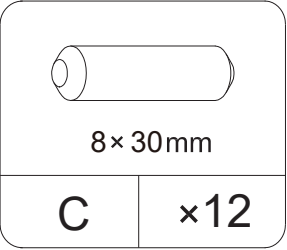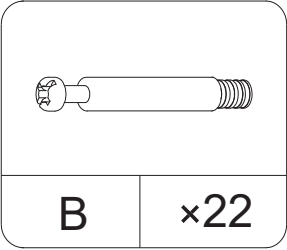

STEP 2



9.5×15 mm


A	×2
---	----

Push a CAM LOCK into the part
The arrow in the CAM LOCK
must point toward the hole on the
edge of the board


ARROW



HOLE

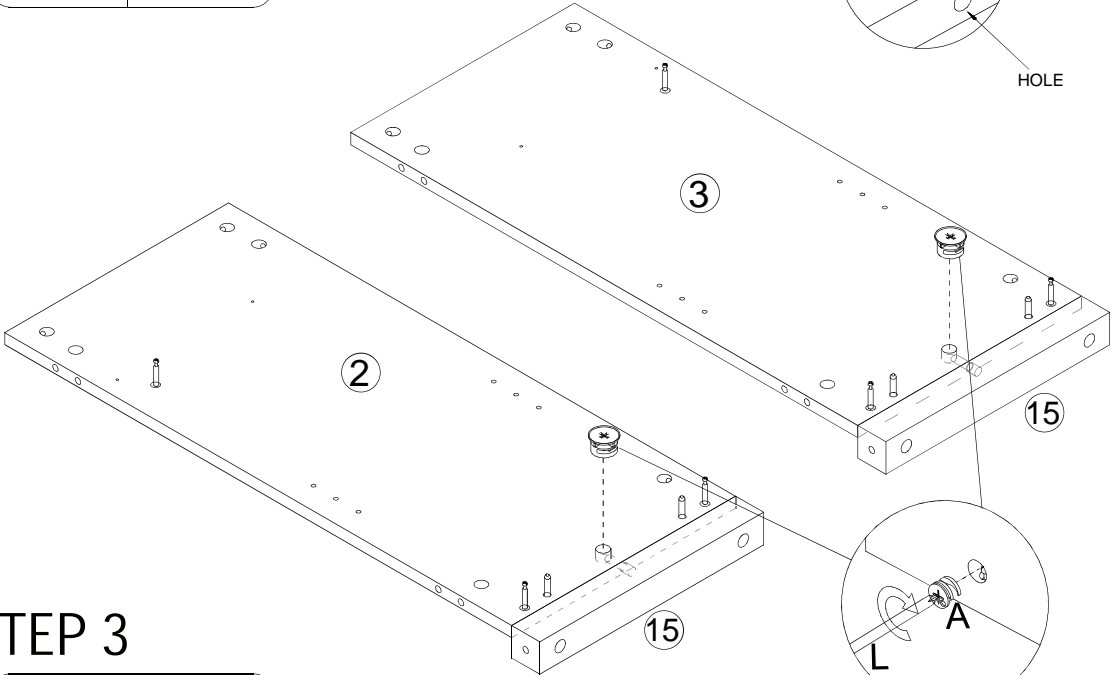

STEP 3



9.5×15 mm


A	×12
---	-----

Push a CAM LOCK into the part
The arrow in the CAM LOCK
must point toward the hole on the
edge of the board





ARROW





HOLE

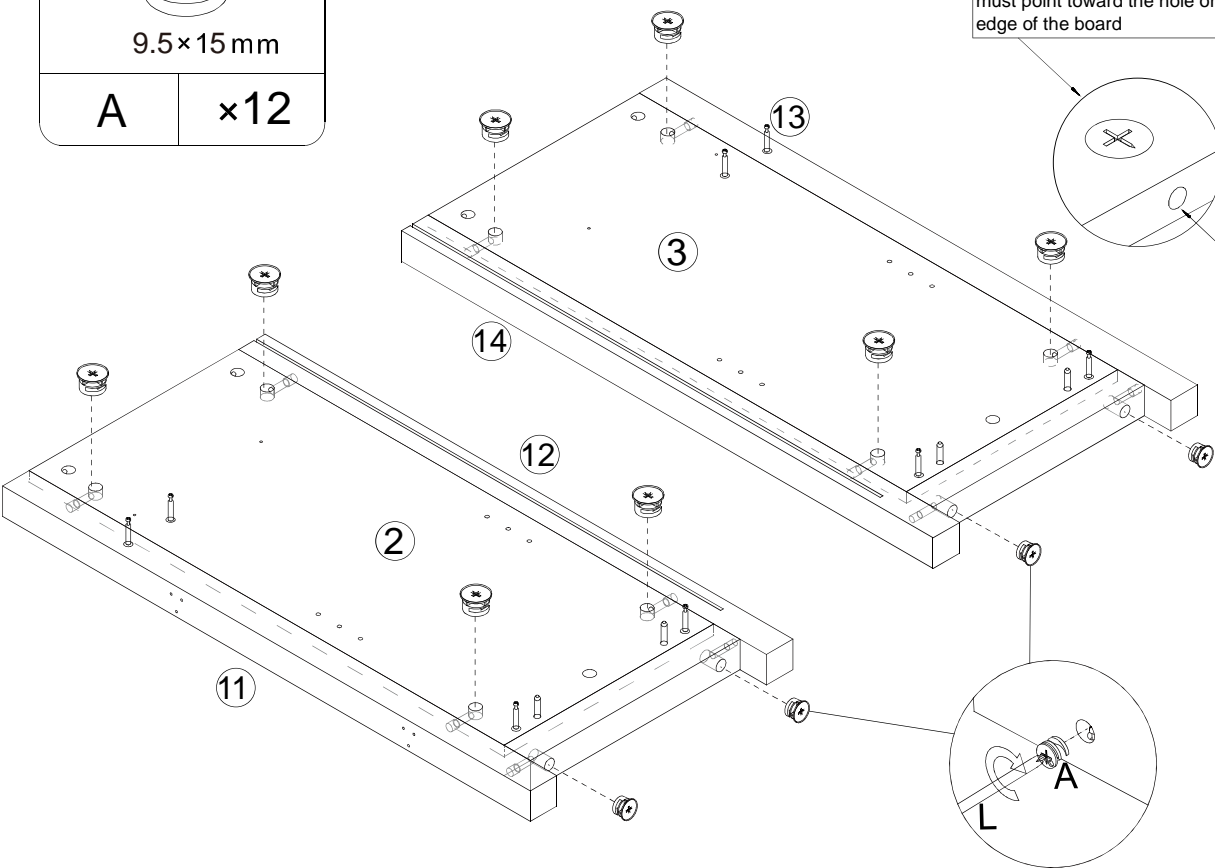


STEP 4

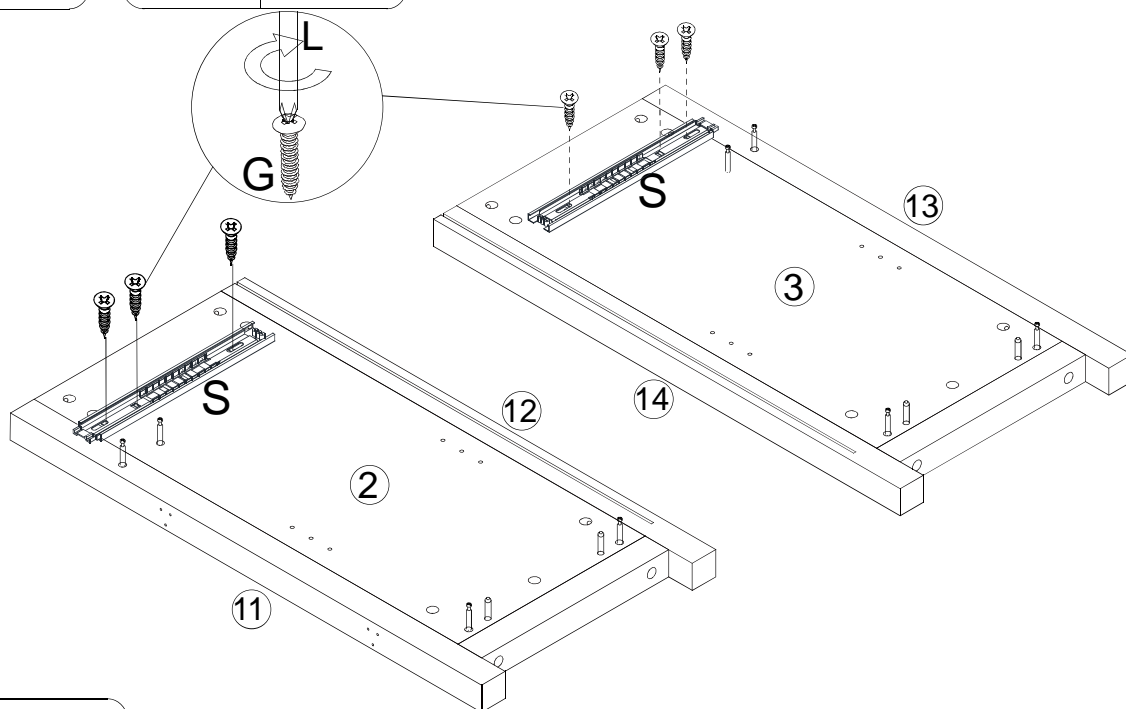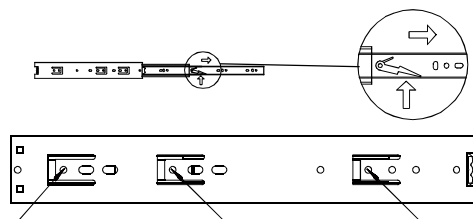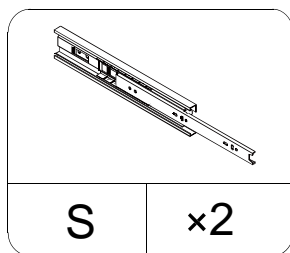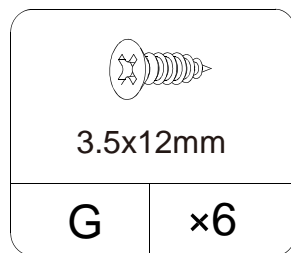


STEP 5

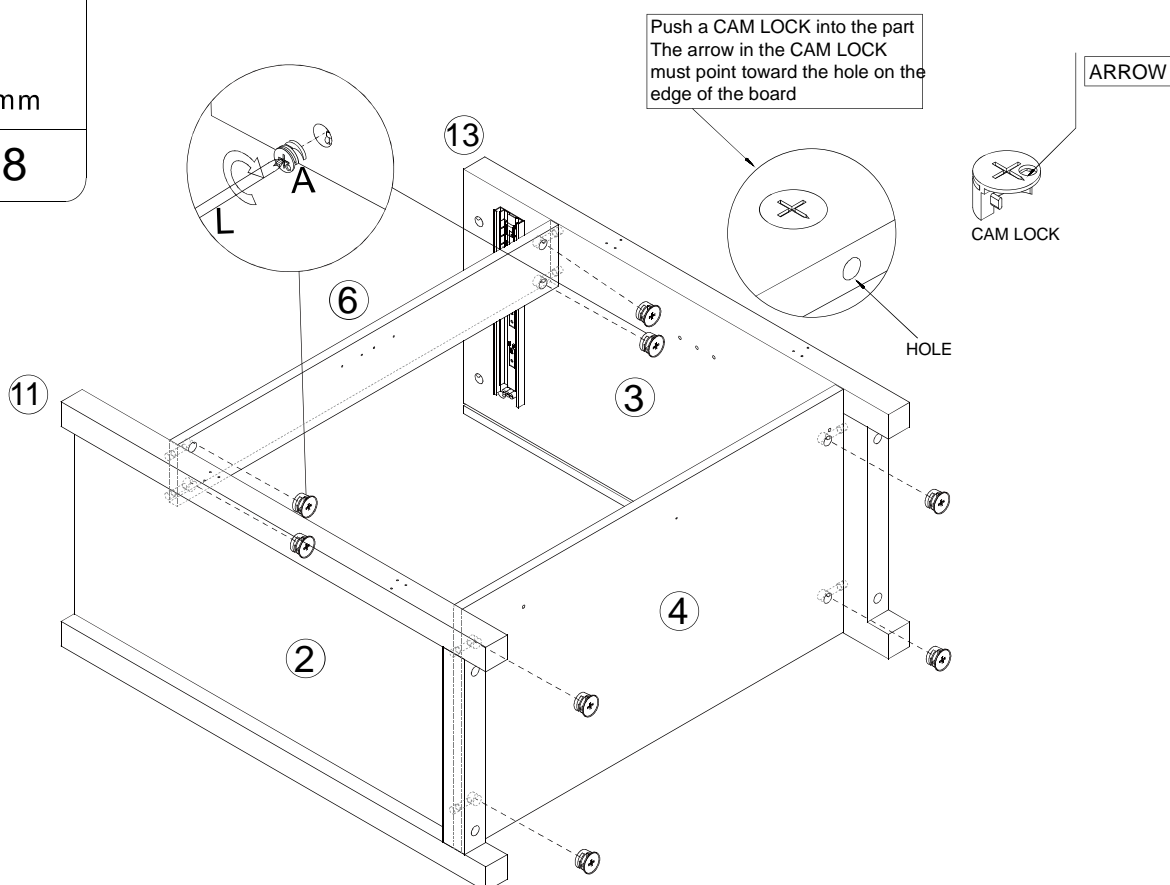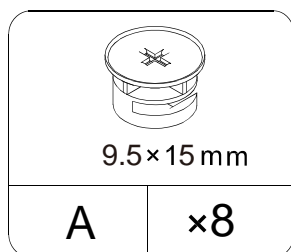


STEP 6

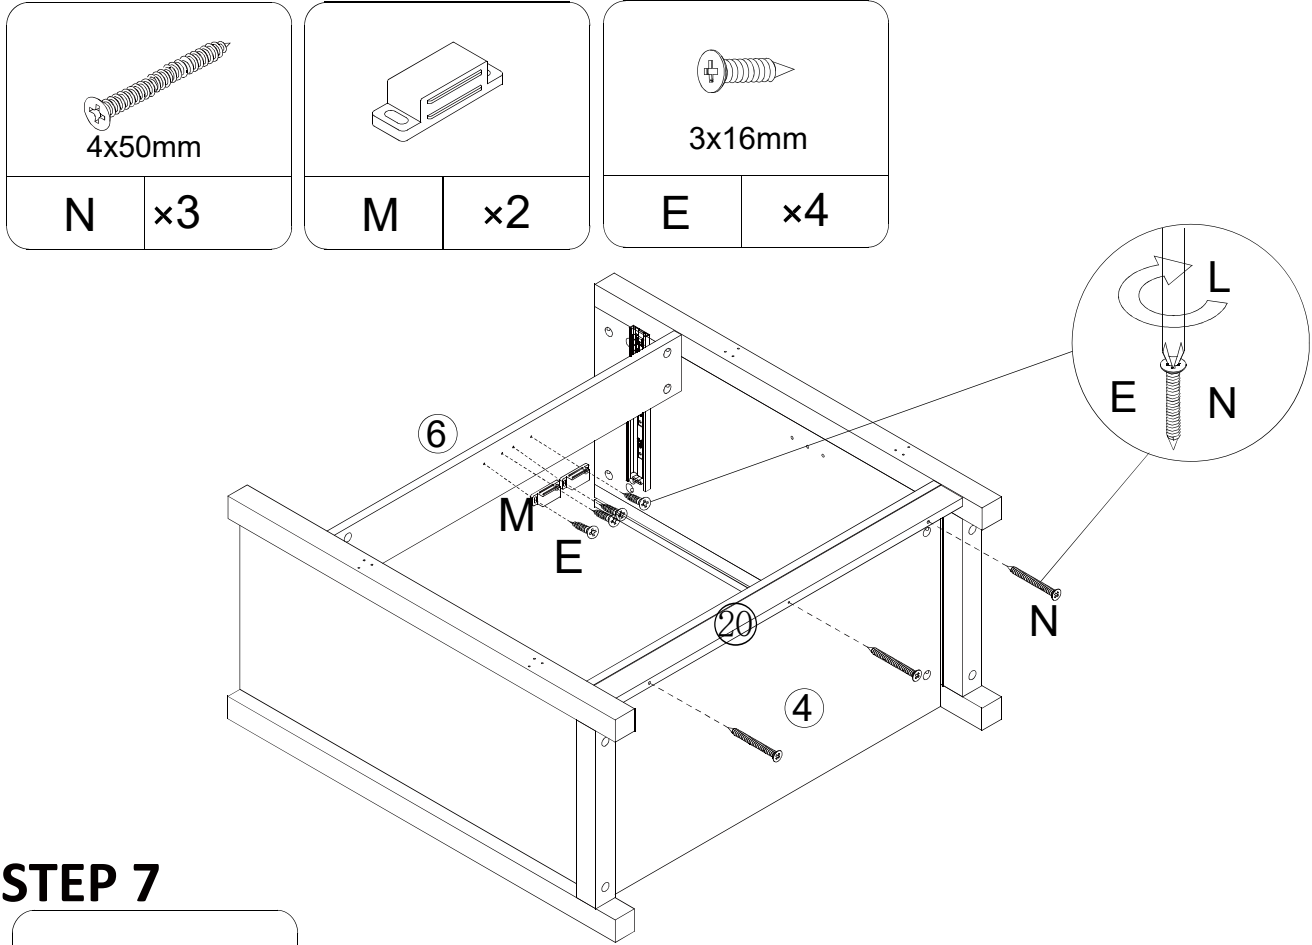


STEP 7

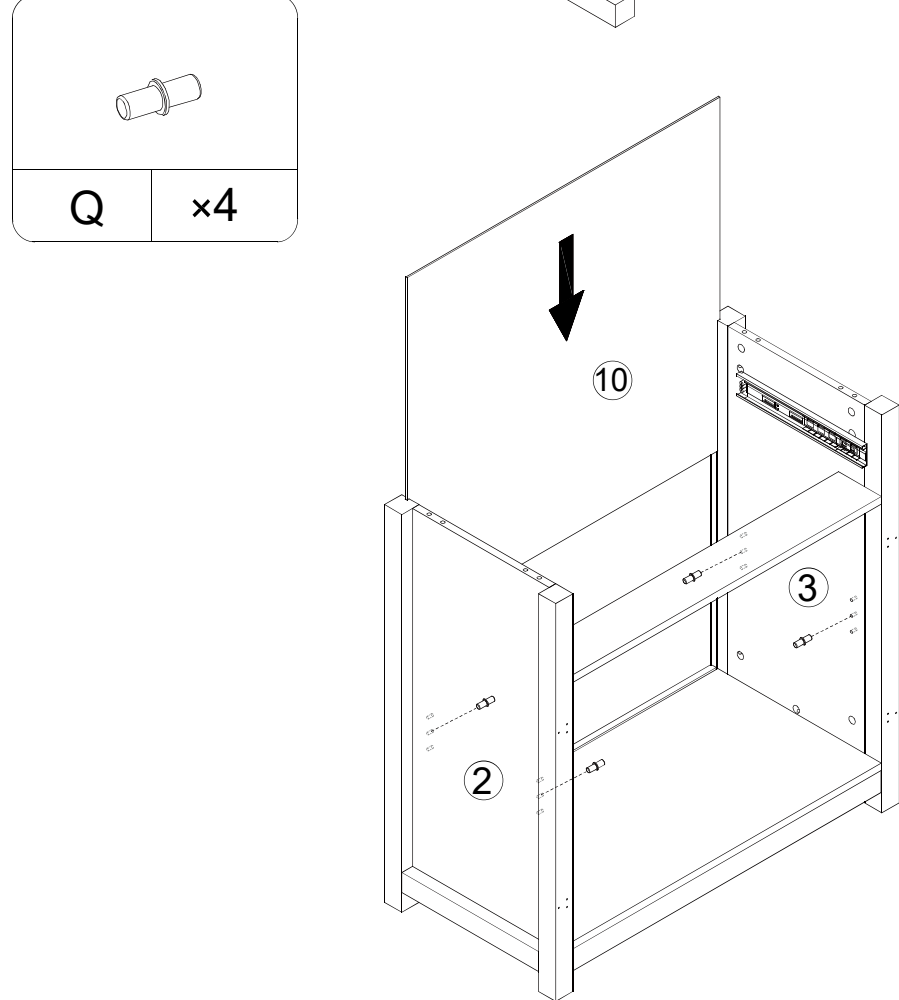


STEP 8

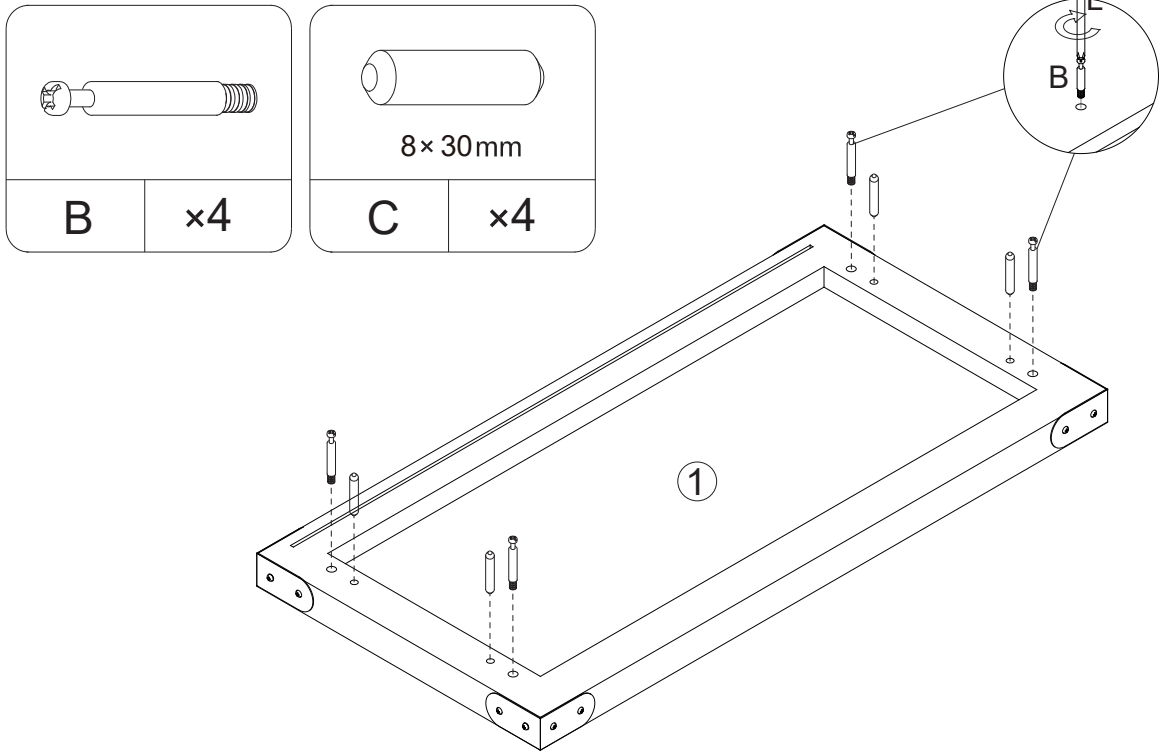


STEP 9

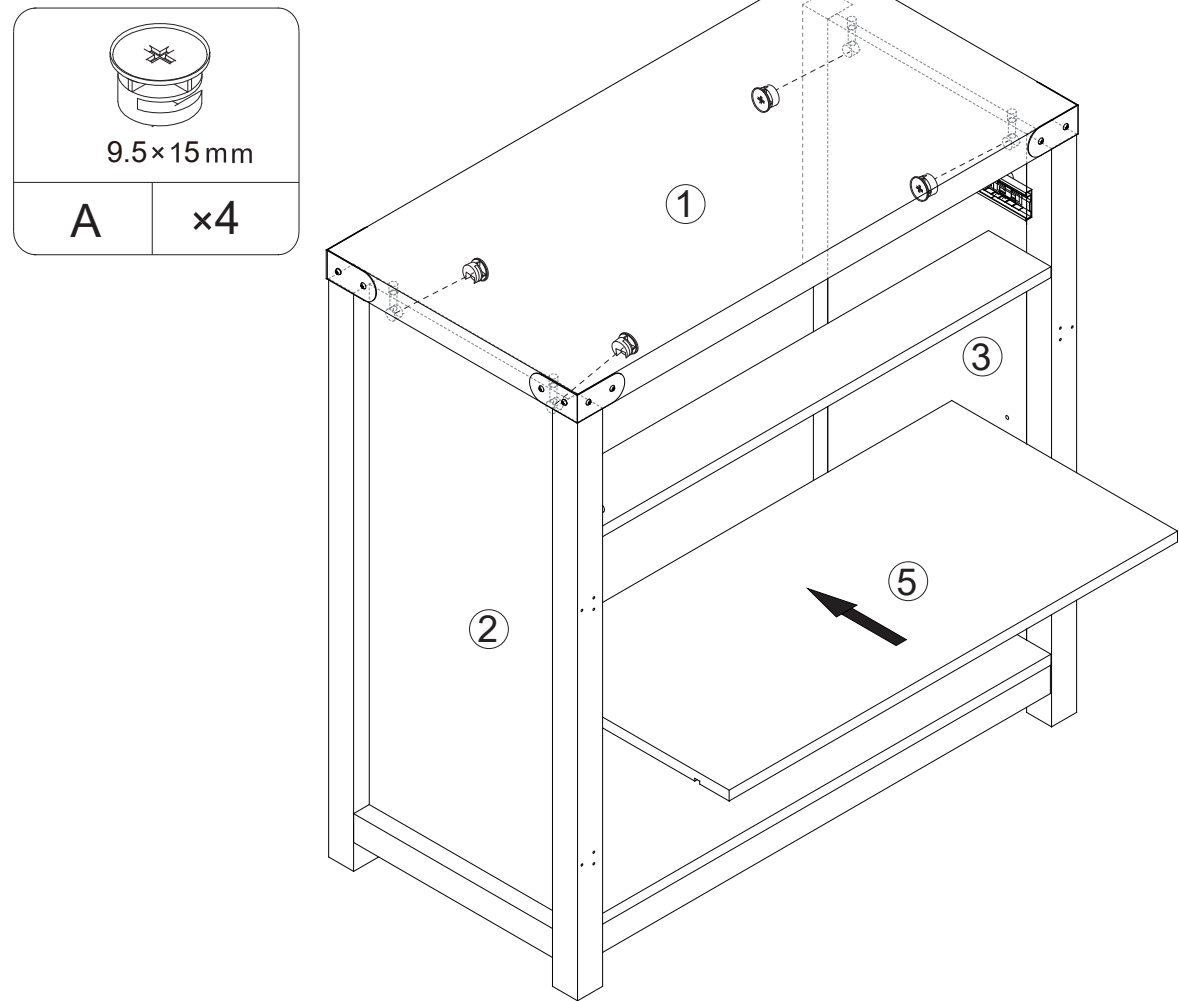


STEP 10

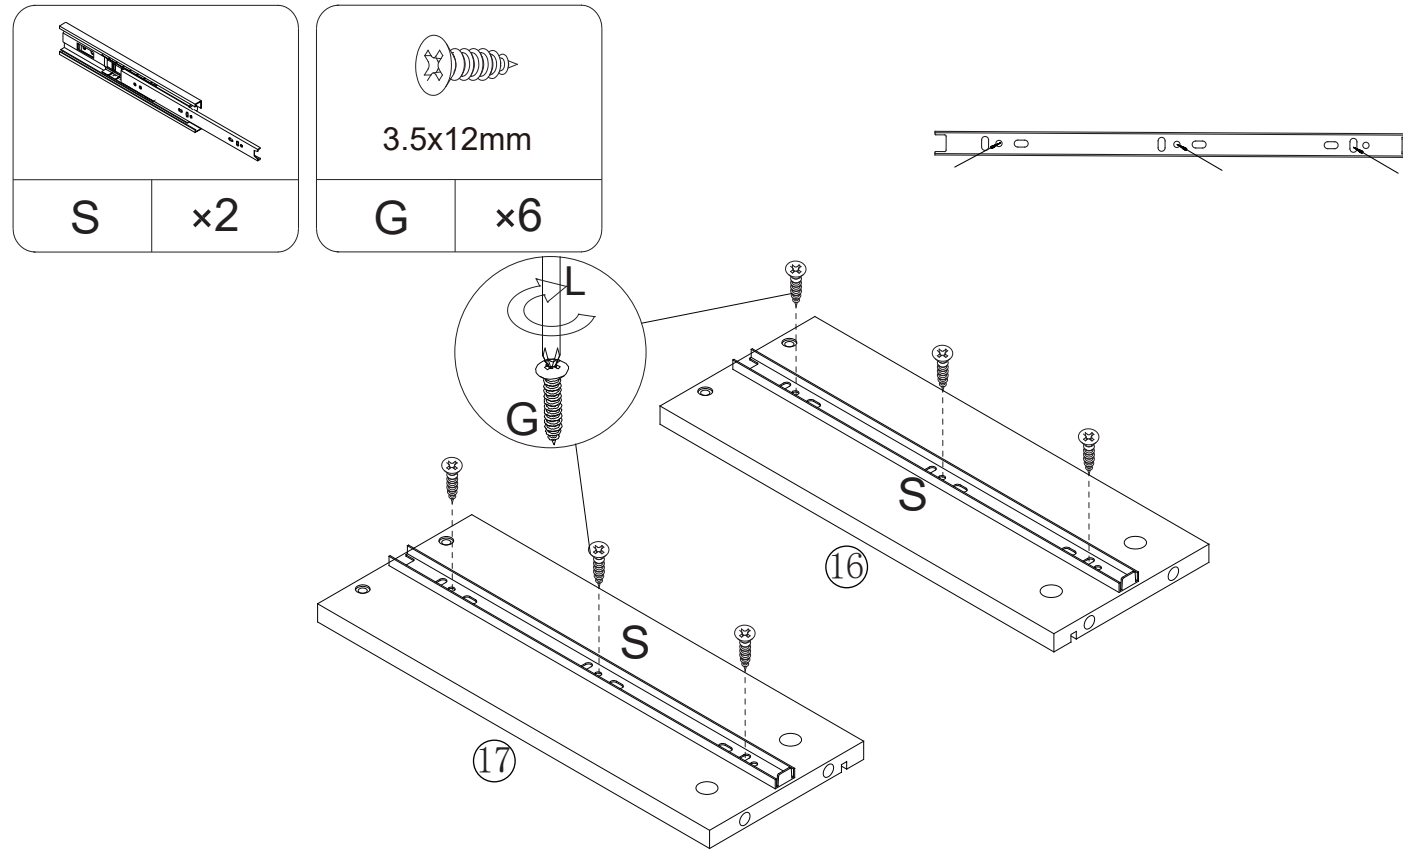


STEP 11

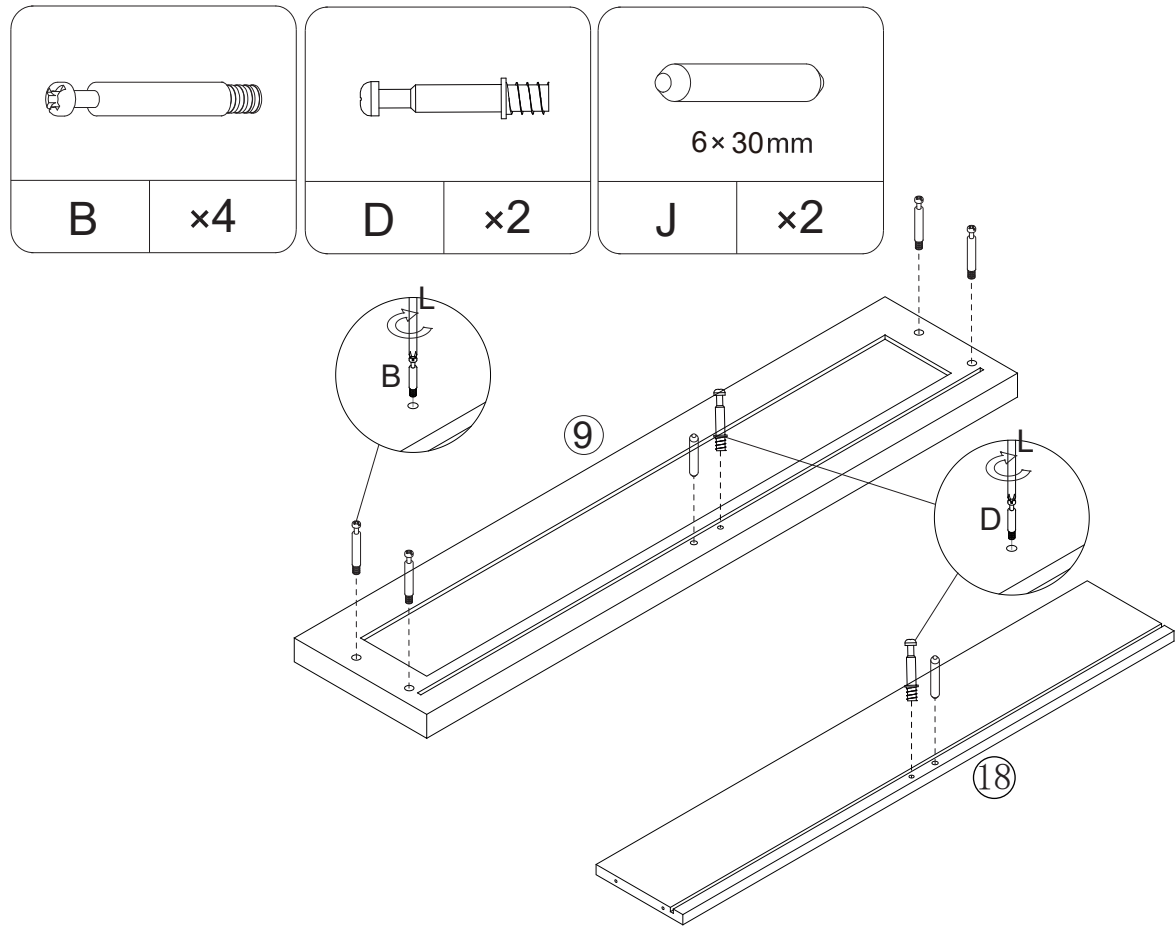




STEP 12

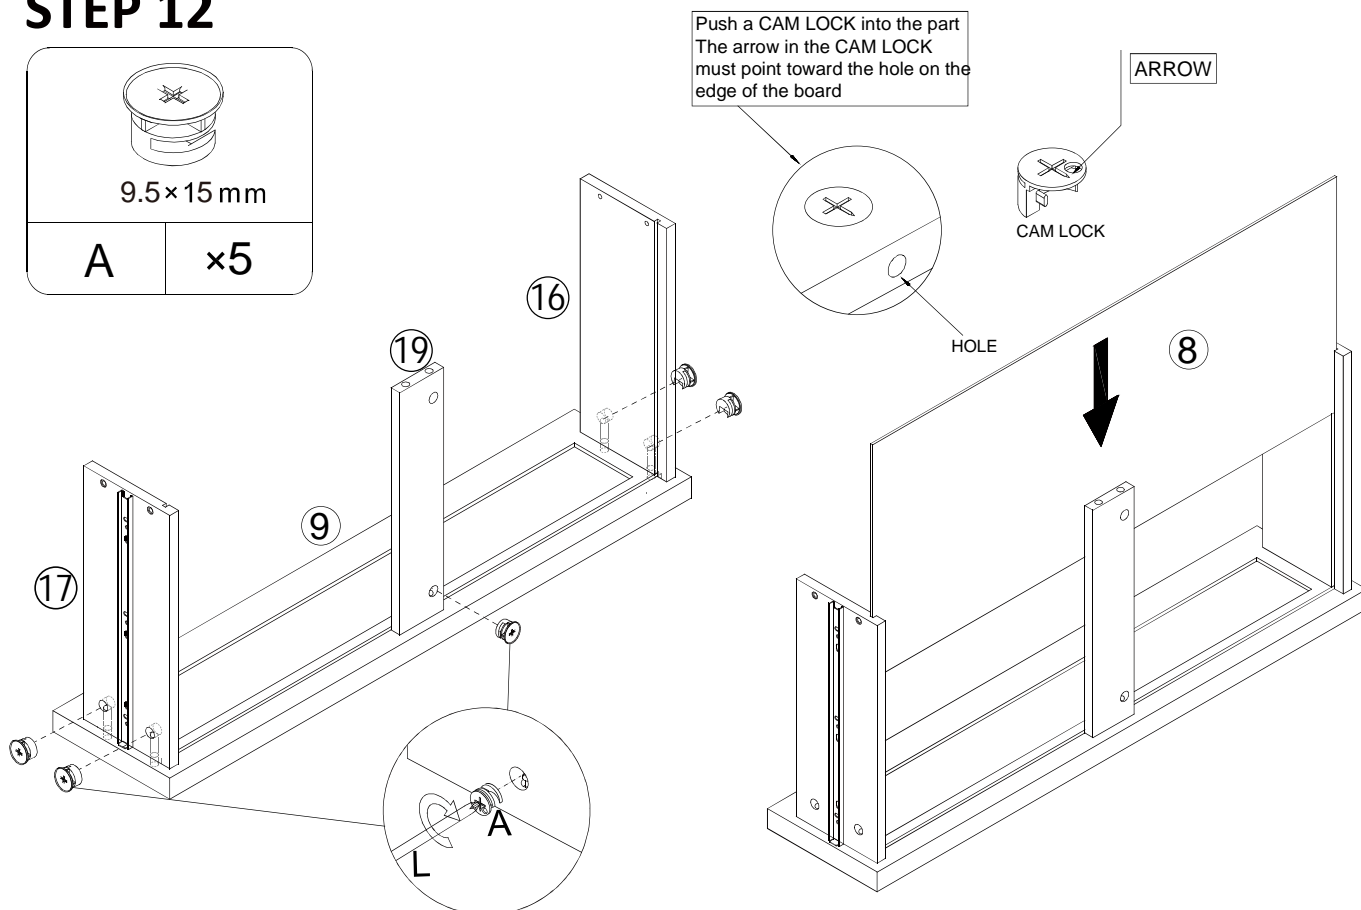


STEP 13

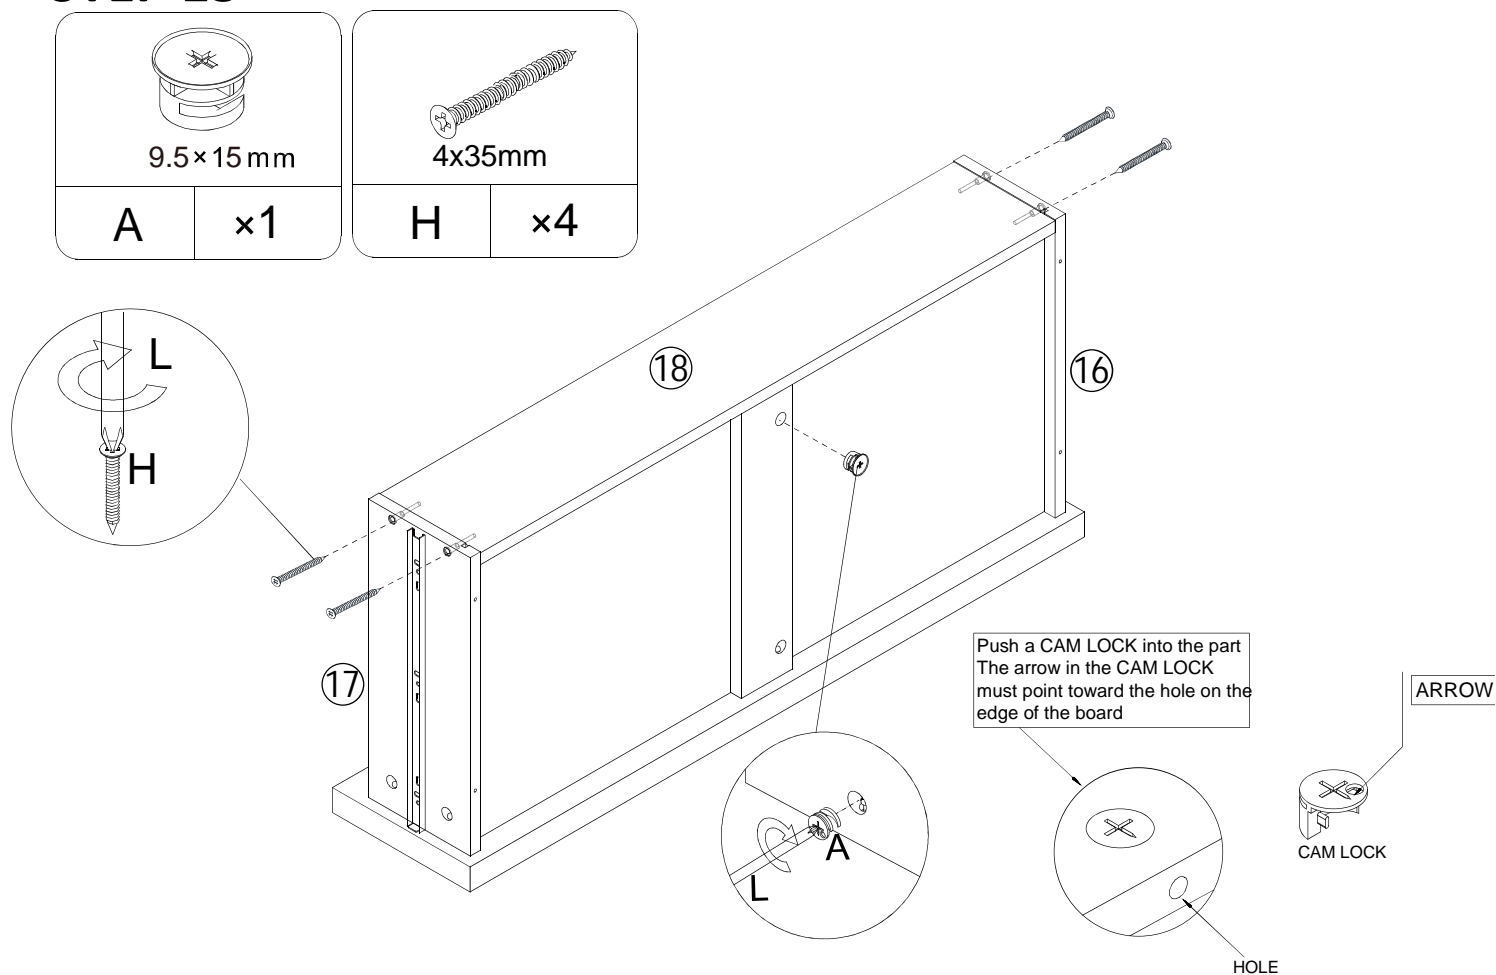







STEP 14

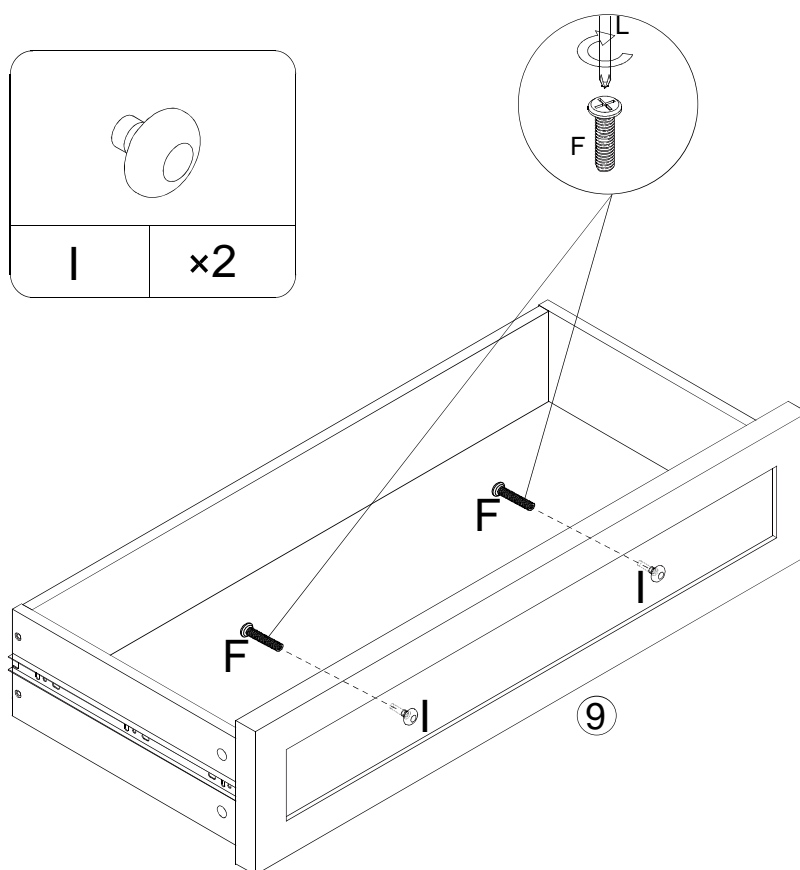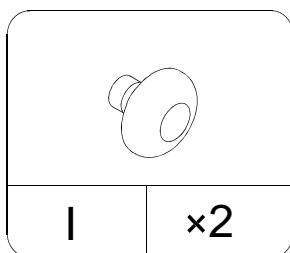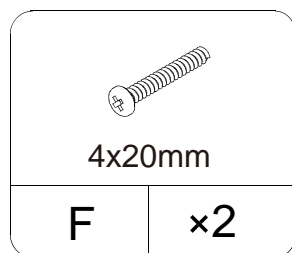


STEP 15

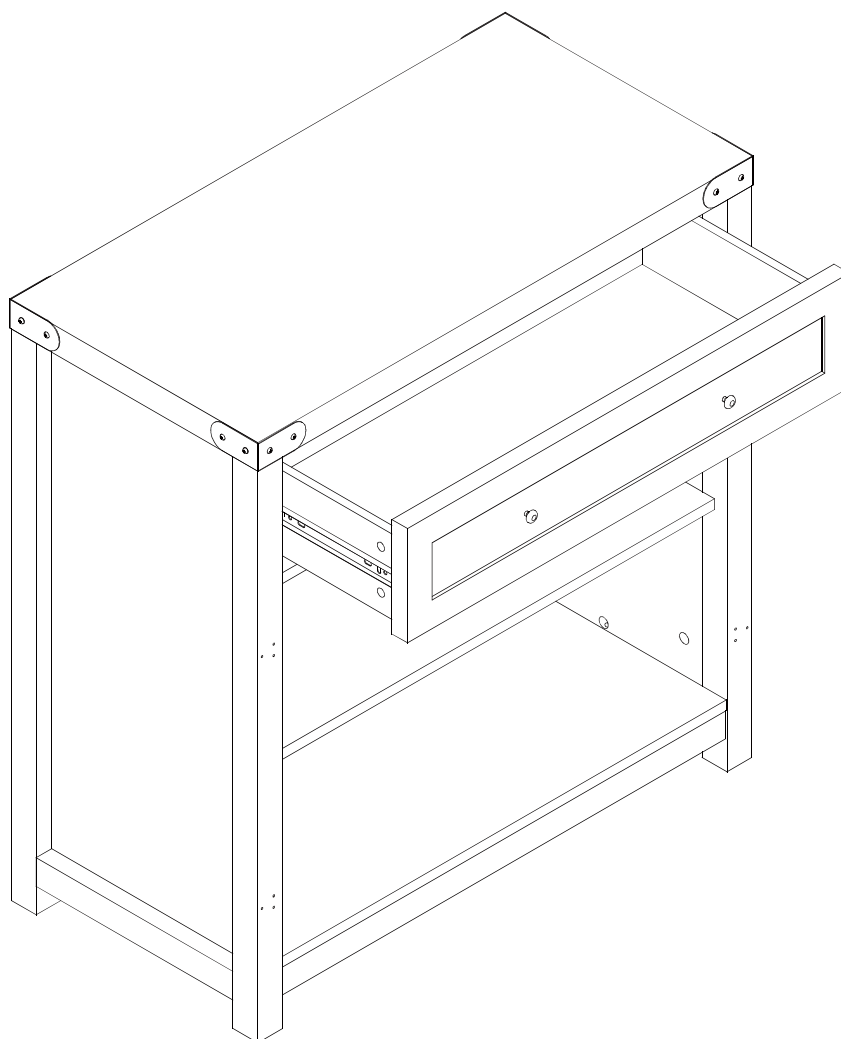


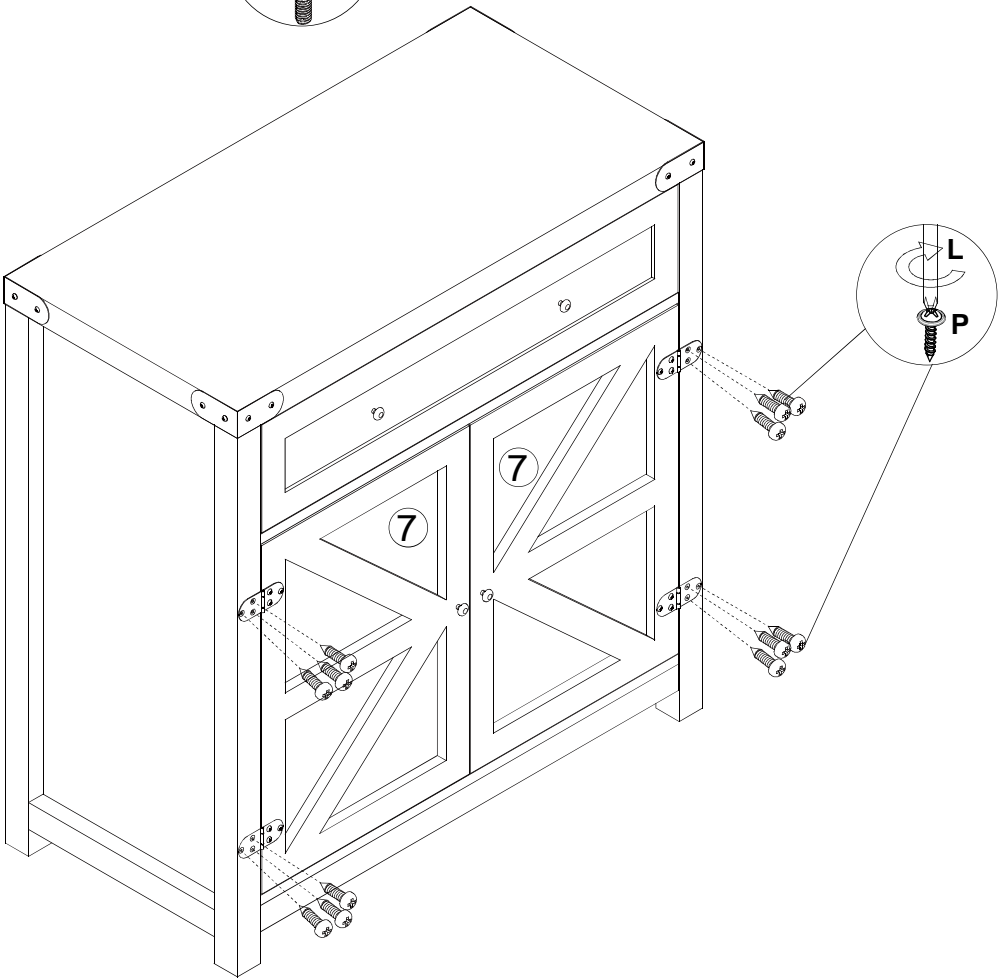
STEP 16

 4x20mm										 3.5x12mm	
F	x2	I	x2	O	x4	P	x12	M	x2	G	x4

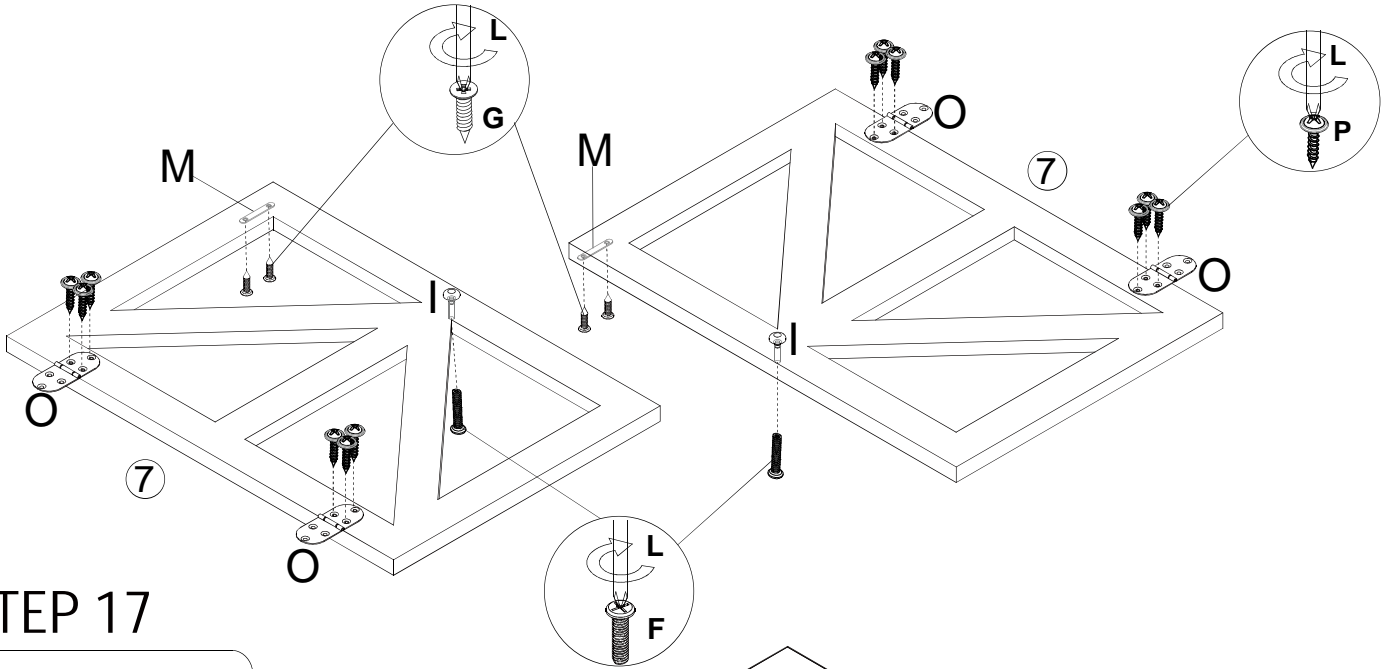


STEP 17

	
P	x12




STEP 18




3x16mm

E	x4
---	----



K	x4
---	----

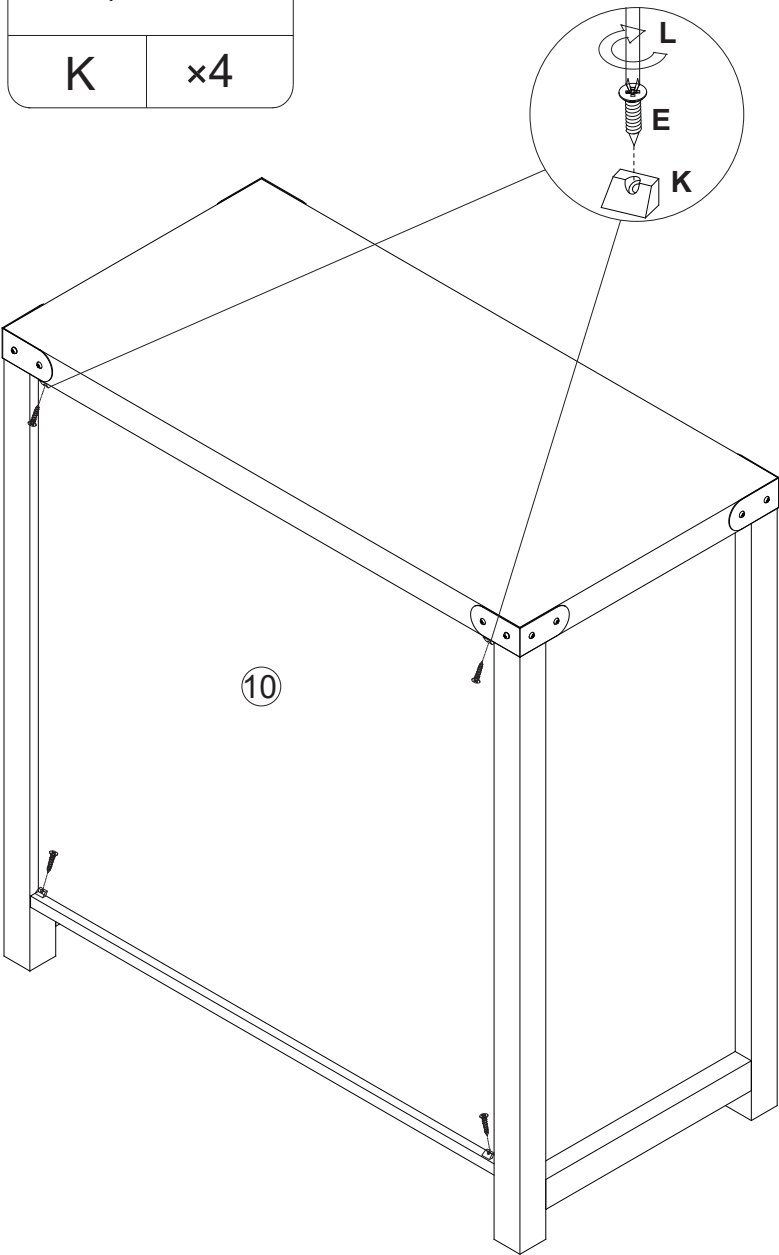

FURNITURE CARE AND MAINTENANCE


Particleboard

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

- Tighten all bolts and screws again within the first 2 weeks of assembly
- Check the tightness of all bolts every 2 months, tighten them if necessary

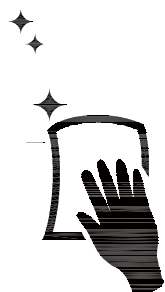

CLEANING

- Clean the surface of the PB(Particleboard) with a lightly dampened cloth.
- Small amount of mild soap can be used if necessary
- Dry the surface immediately after cleaning.

- ⚠ DO NOT use bleach or alcohol detergent to clean the surface.
- ⚠ DO NOT apply wood treatment on parts made with PB.

Particleboard will swell and distort when suffer .
Make sure to dry the furniture immediately after cleaning