
Installation Instructions

4(W)×6(D)FT-UPGRADE

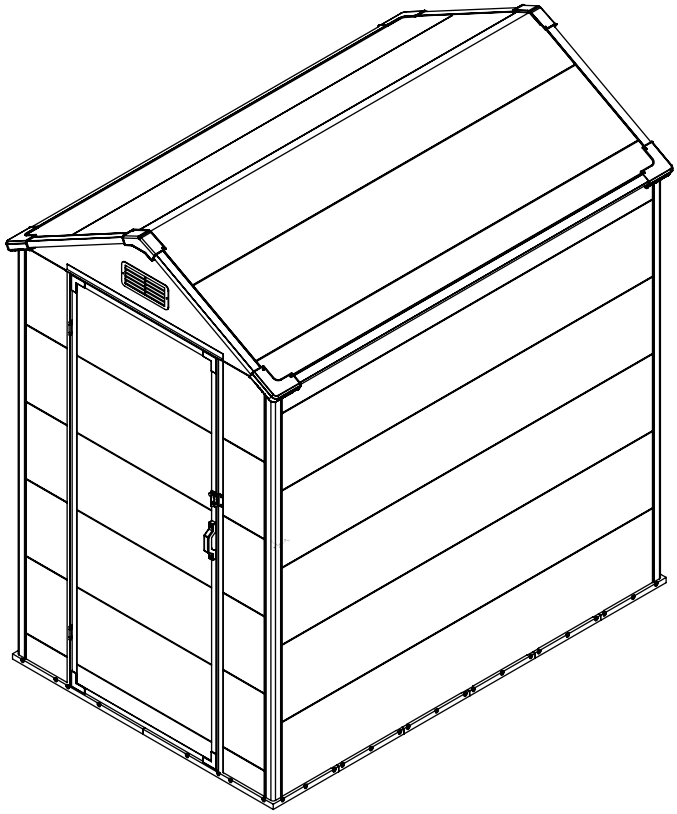

EASYHAWKservice@outlook.com

Our team is available 24/7 to help with any product questions. Contact us anytime!


Recommended to wear gloves to avoid scratches.
Please read the instructions COMPLETELY before assembly.
Our wall panel products come in two assembly options, inside and out (illustrated on the last page). You can choose the option that suits your preference. PS: For roof panels, waterproofing is a priority, so there is no two-sided option.


SITE PREPARATION

Level the ground surface.



Recommendation: Construct a wooden or concrete base as a foundation.

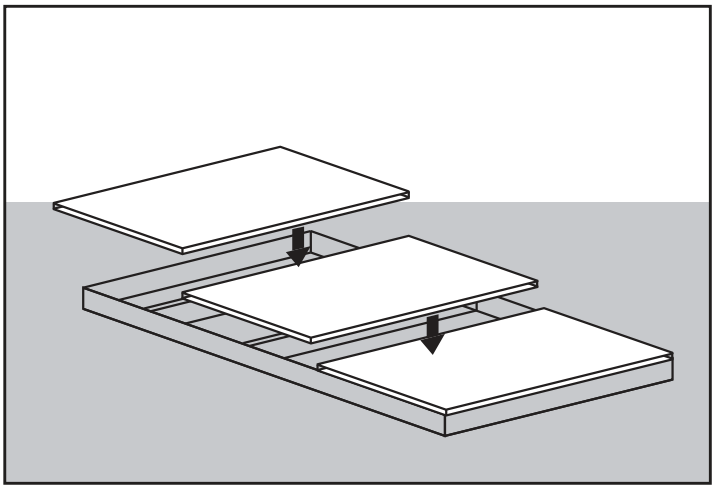


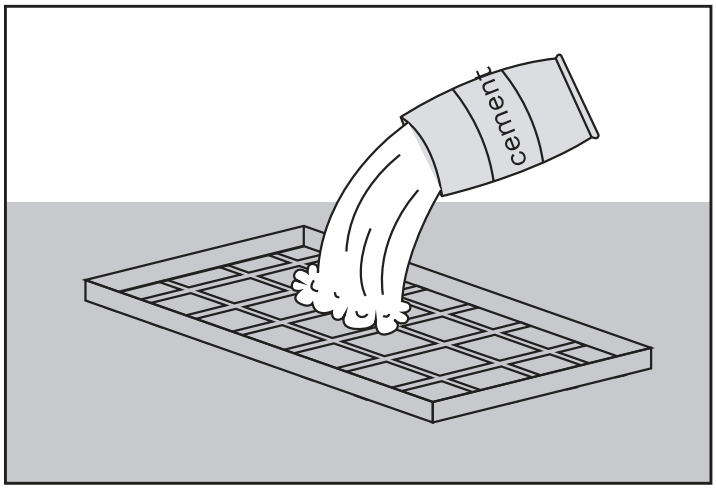

BEFORE STARTING ASSEMBLY

Remove all of the pieces from the package and spread them out on the ground.
Before installation, please check the type and quantity of parts first.
It is recommended to use a clean work surface to spread the parts out and for pre-assembly steps. Review all instructions before you begin, continue to refer to instructions during assembly.
Be sure to follow all steps thoroughly.
Please prepare these components in advance at the beginning of each stage.

REQUIRED TOOLS

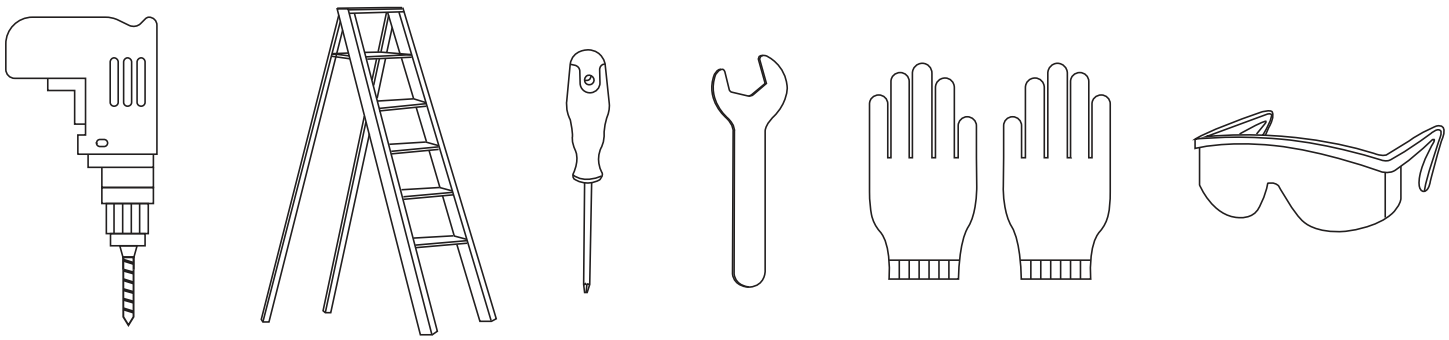

CAUTION


Some parts have steel edges. Please be careful when handling components. Always wear work gloves, eye protection and long sleeves when assembling or performing any maintenance on your shed. Do not attempt assembly on days with strong winds or low temperatures.




Requires two people and takes 2-3 hours for Installation.
Recommended to wear gloves to avoid scratches.
Please read the manual carefully before installation.

Installation Note:
Please ensure the installation platform or foundation is level. If the ground is slightly uneven or sloped, slight misalignment may occur during assembly. However, in most cases, the product can still be successfully assembled and will function normally.
Thank you for your understanding.


FLOOR PARTS

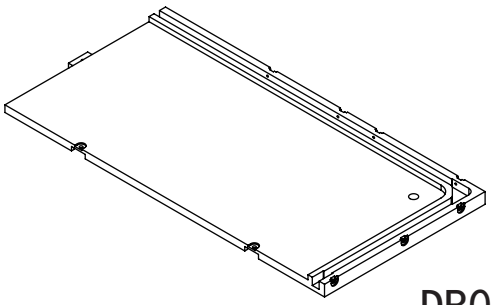


DB01×2

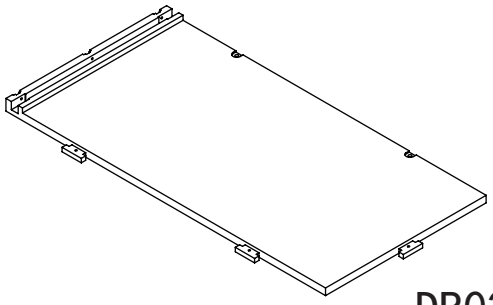

DB02×4

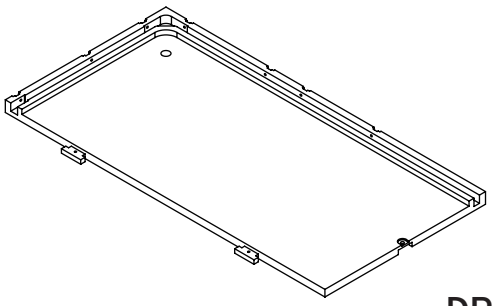


DB03×2

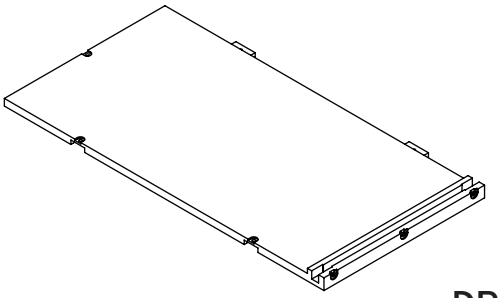


DB04×4


WALL PARTS

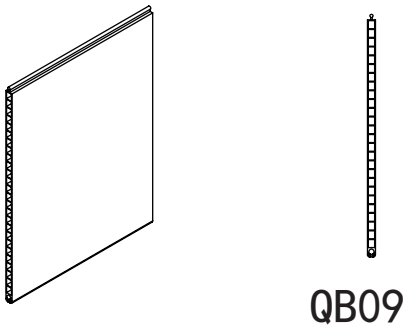


QB09×10

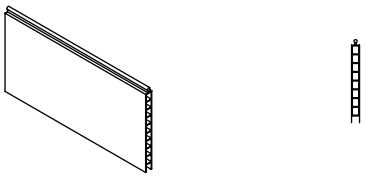


QB47×2

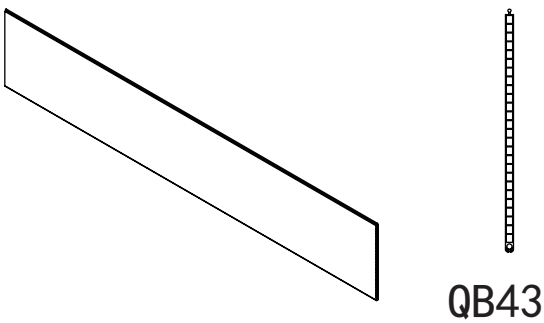


QB43×10

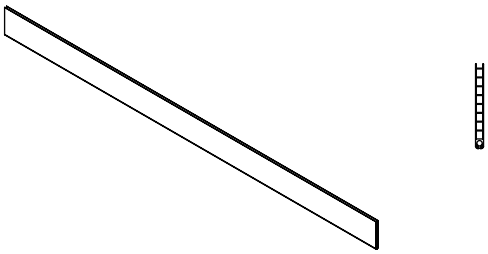

QB44×2

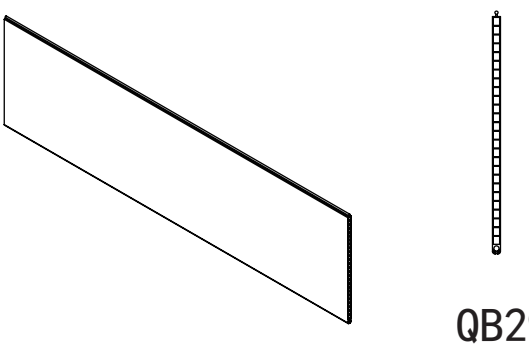


QB29×5

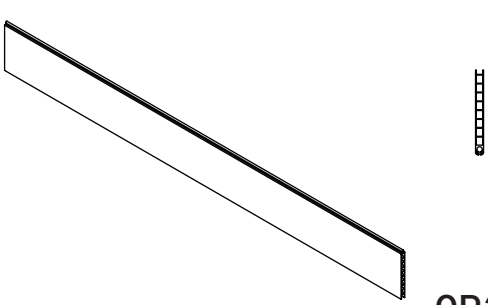


QB36×1


WALL PARTS

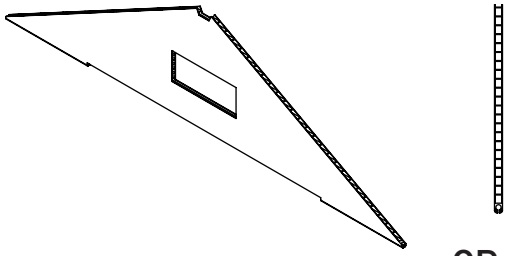


QB45×1

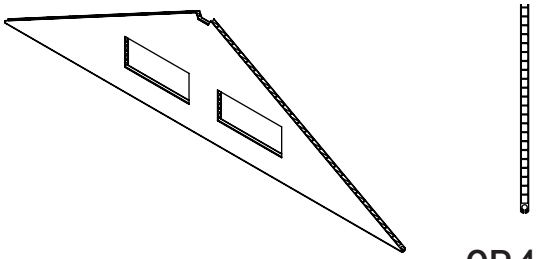


QB46×1

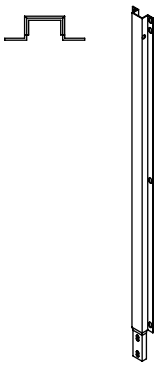


4J2-2×1

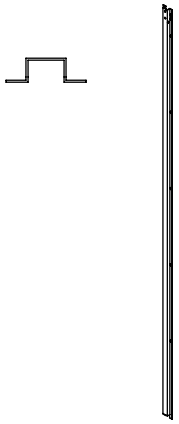


JCD3×2

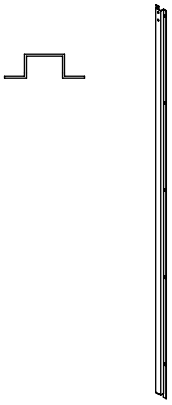


JCD4×1

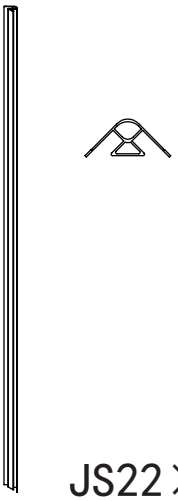


JS22×4

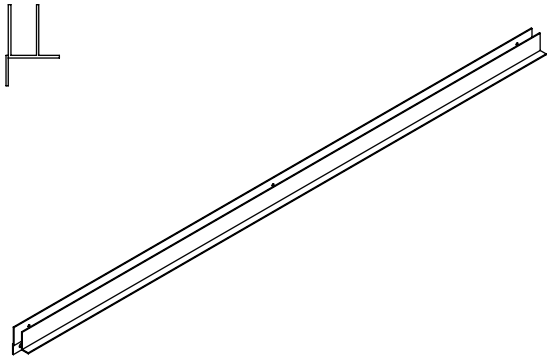

AL21×1

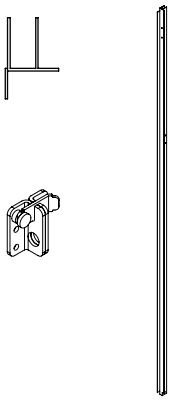


AL22×1

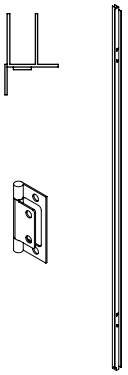


AL23×1


ROOF PARTS

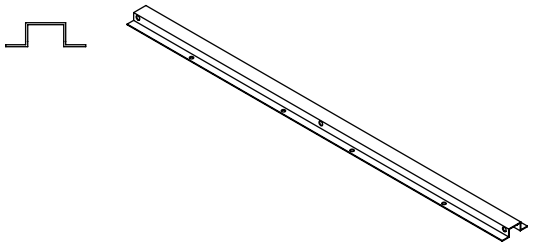


JCA1×2

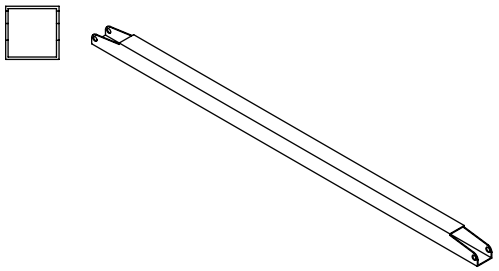


GC588×1

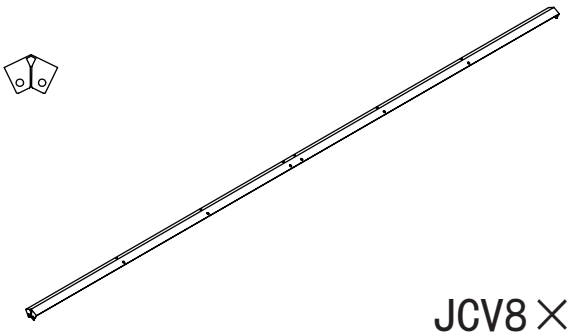


JCV8×1

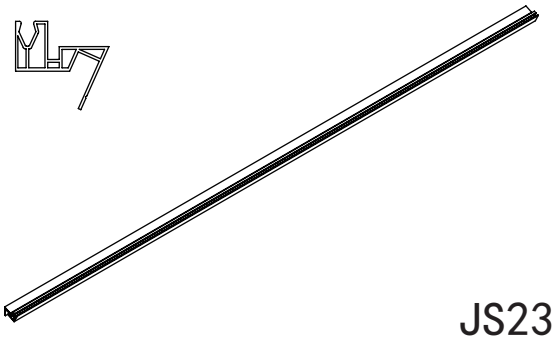


JS23×2

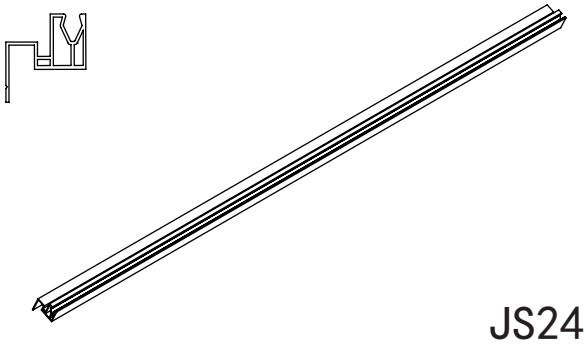


JS24×4

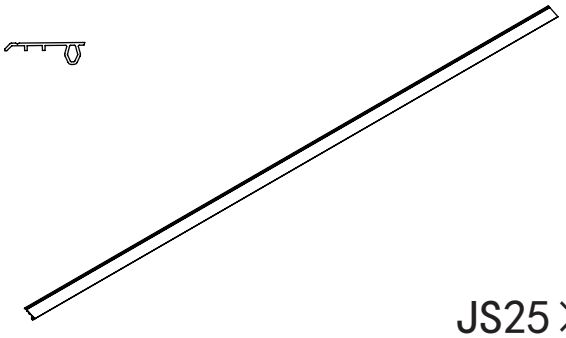


JS25×2

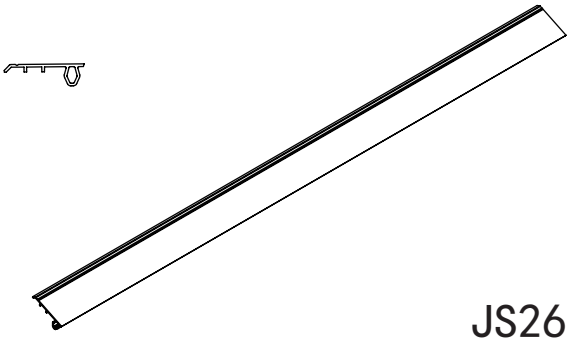


JS26×4

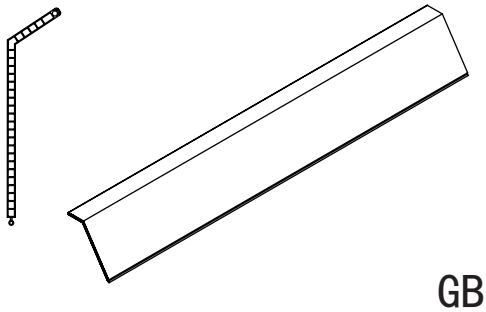

GB17×1

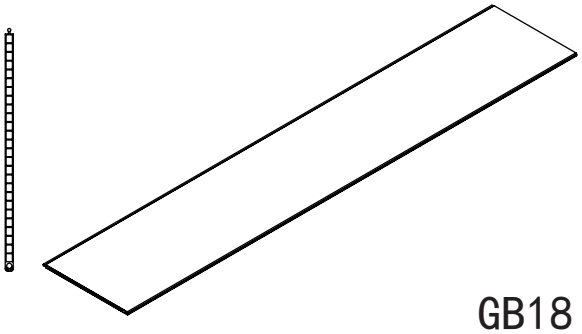


GB18×3

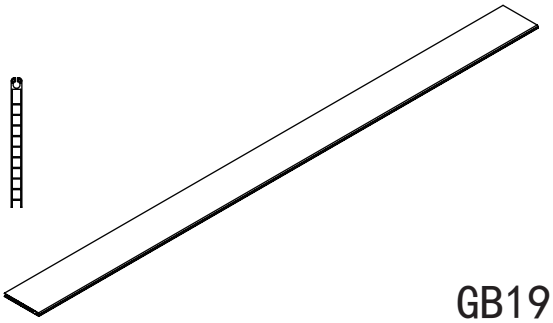


GB19×1


DOOR PARTS

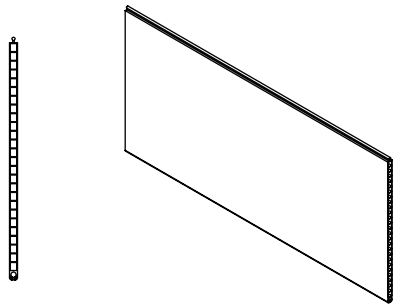


MB07×5

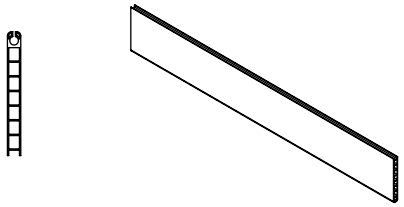


MB08×1

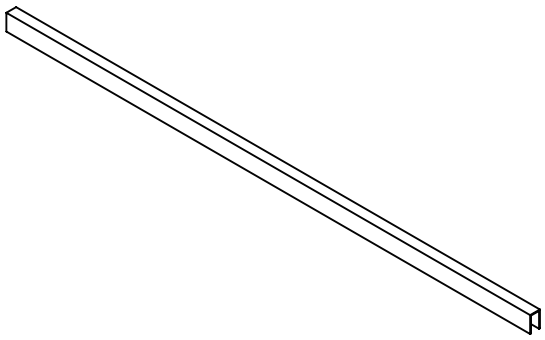

AL18×2
















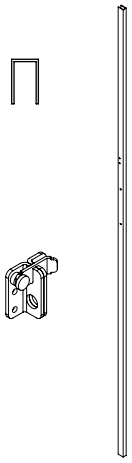


AL19×1




AL20×1

ACCESSORIES

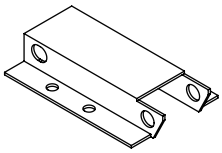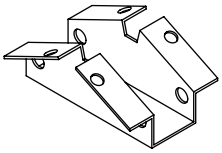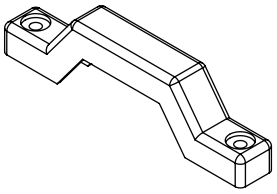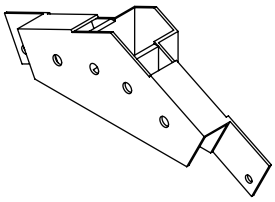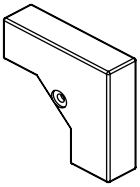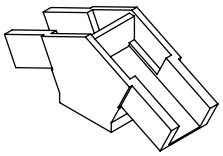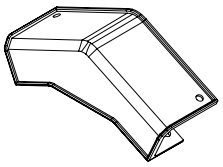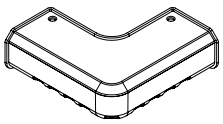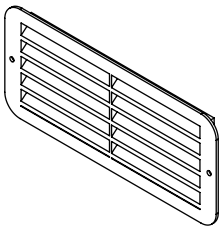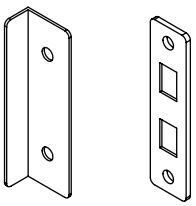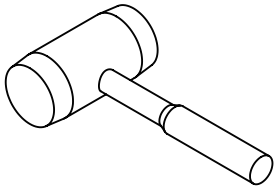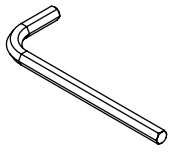
 JCE1×2	 JCF3×1	 WJDH×2	 WJDL×1
 D1-3×1	 SJC5×2	 SJDC×4	 SJF4×1
 SJE8×2	 SJEC×4	 SJGF×3	 WJCT×2
 SJPH×1	 WJ02×1	 M4 WJ07×1	 M5 WJ08×1

SCREW

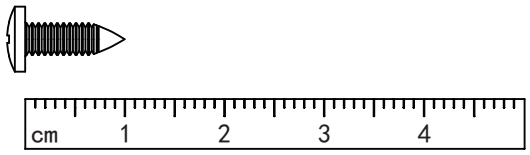

4×10mm


F1×234

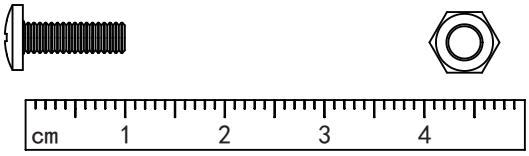

M4×10mm

F2×6


M4×6

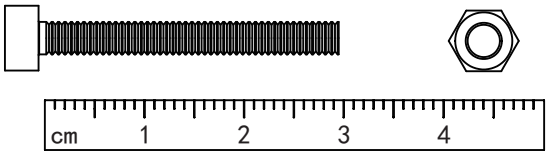

M5×30mm


F8×8

M5×8

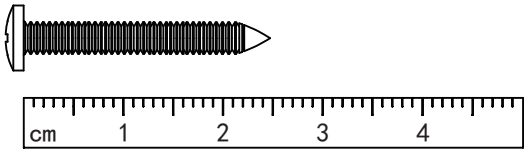


4×25mm

F9×50

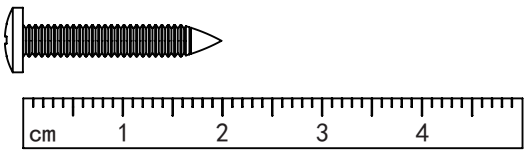


5×20mm


F10×16

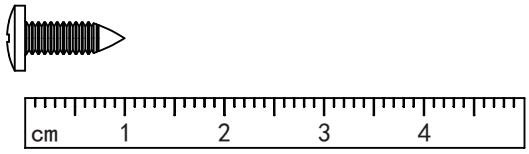



5×10mm


F11×30

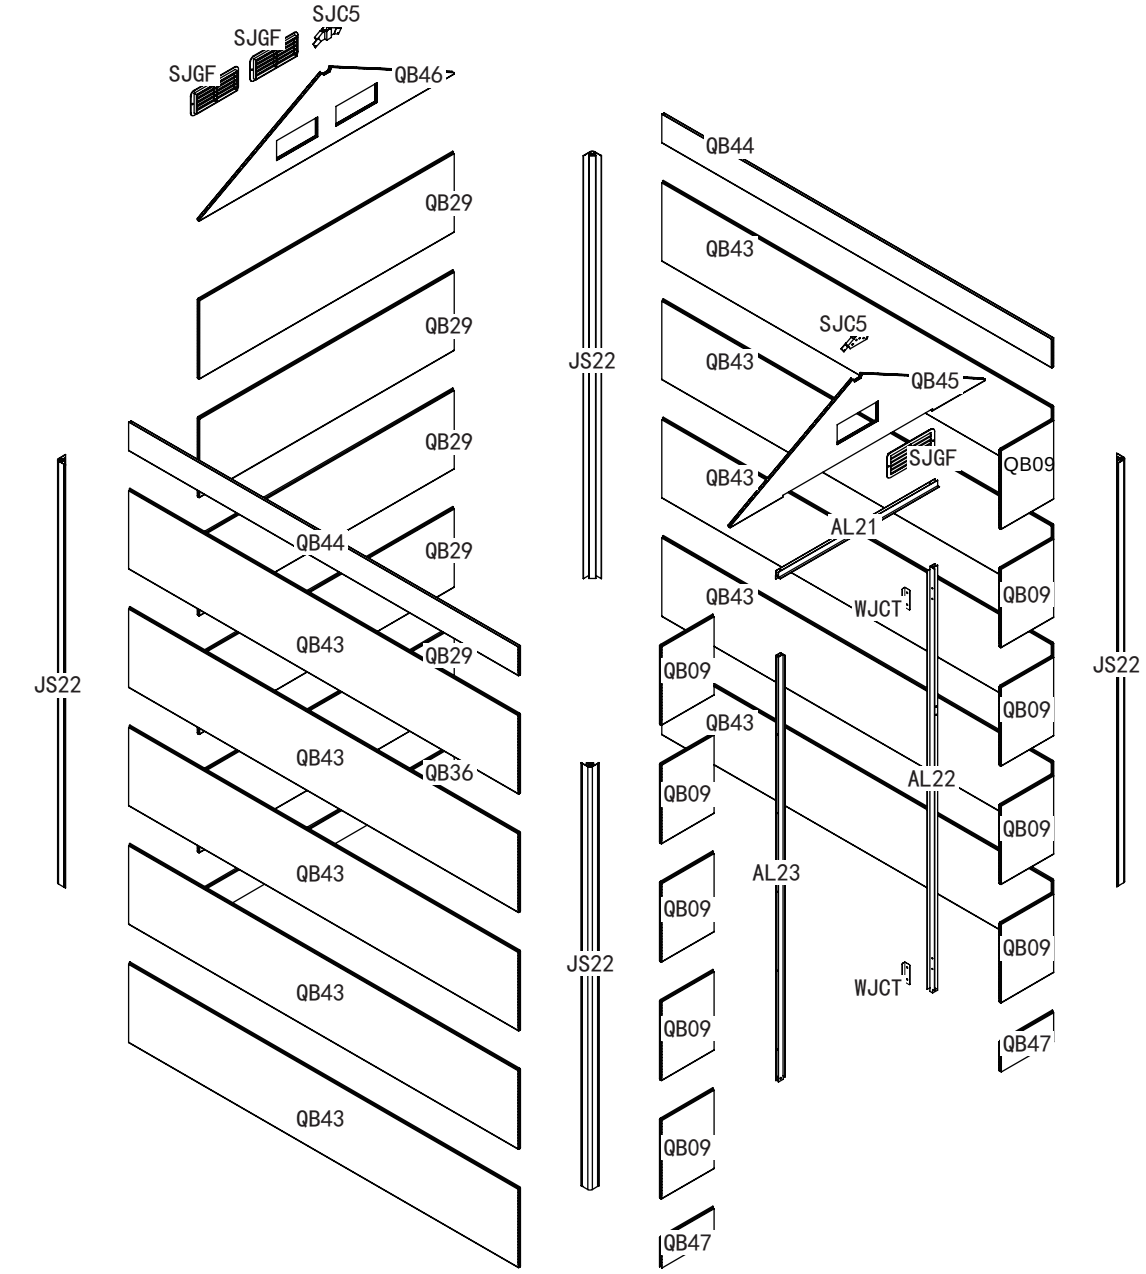
SJC5
SJGF
SJGF
QB46
QB29
QB29
QB29
QB29
QB44
QB43
QB29
QB43
QB36
QB43
QB43
QB43
JS22
JS22
JS22
QB44
QB43
SJC5
QB43
QB45
QB43
SJGF
QB09
AL21
QB43
WJCT
QB09
QB09
QB09
QB43
AL22
QB09
QB09
AL23
QB09
QB09
WJCT
QB09
QB47
QB09
QB47

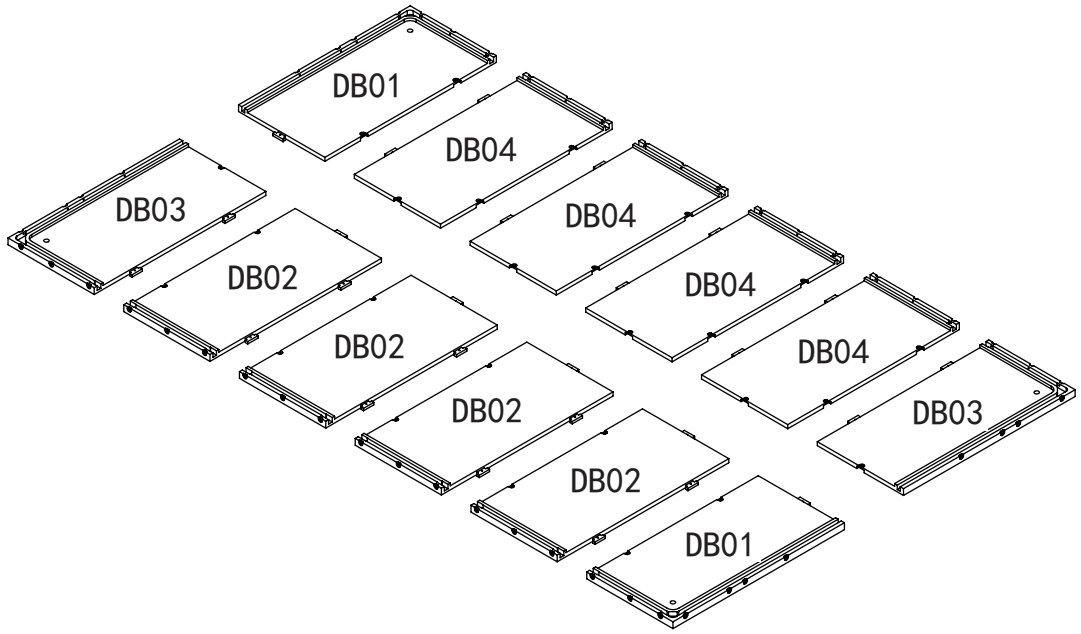

DB01
DB04
DB03
DB04
DB02
DB04
DB02
DB04
DB02
DB03
DB02
DB01

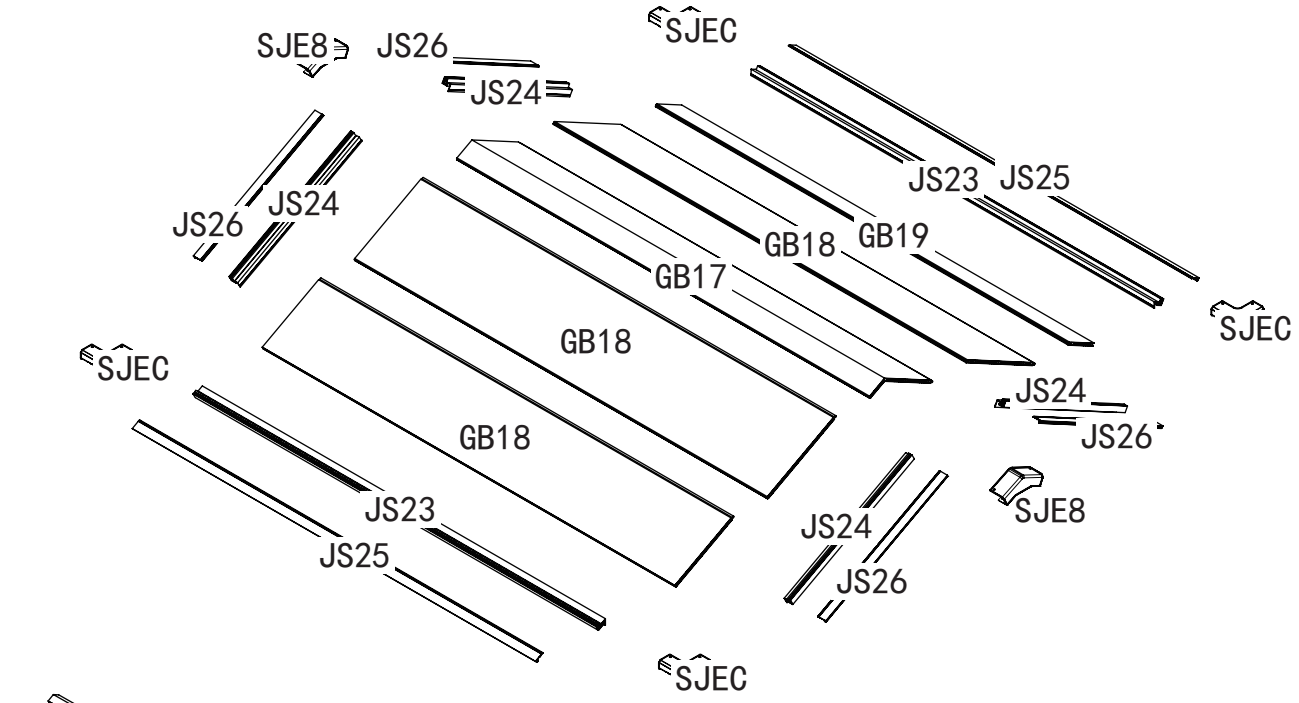
SJE8
JS26
SJEC
JS24
JS23
JS25
JS26
JS24
GB18
GB19
GB17
SJEC
GB18
SJEC
JS24
JS26
GB18
SJE8
JS23
JS24
JS25
JS26
SJEC

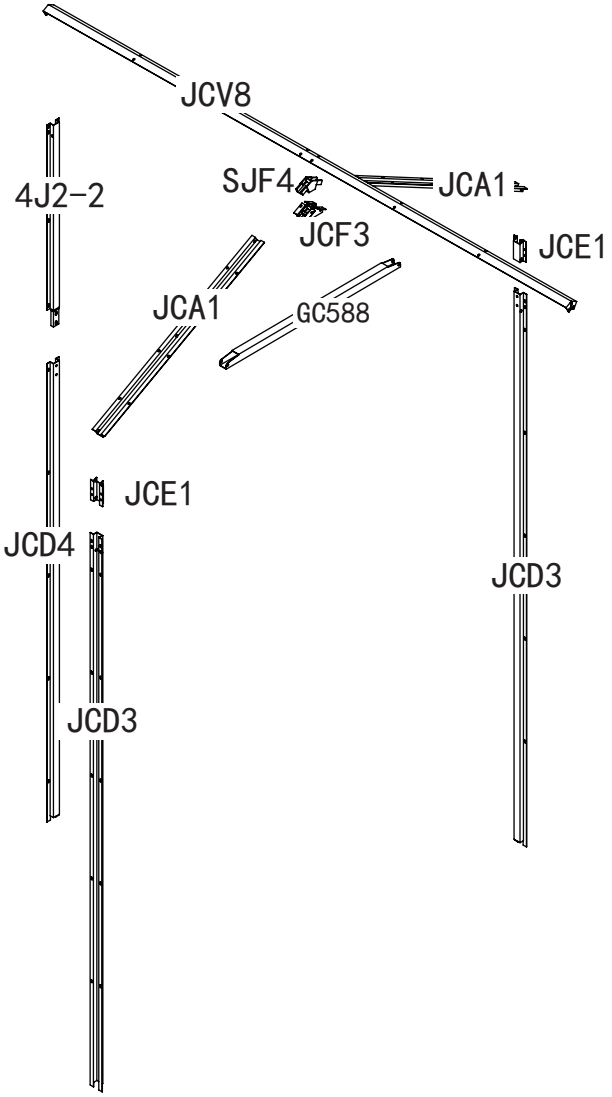

JCV8
4J2-2
SJF4
JCA1
JCF3
JCE1
JCA1
GC588
JCE1
JCD4
JCD3
JCD3

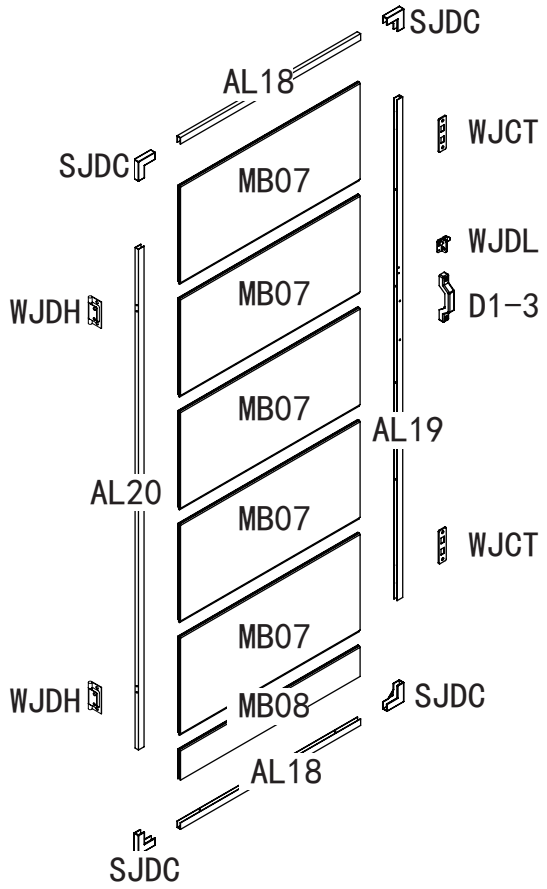
SJDC
AL18
WJCT
SJDC
MB07
WJDL
MB07
WJDH
D1-3
MB07
AL19
MB07
AL20
WJCT
MB07
WJDH
MB08
SJDC
AL18
SJDC


STEP 1

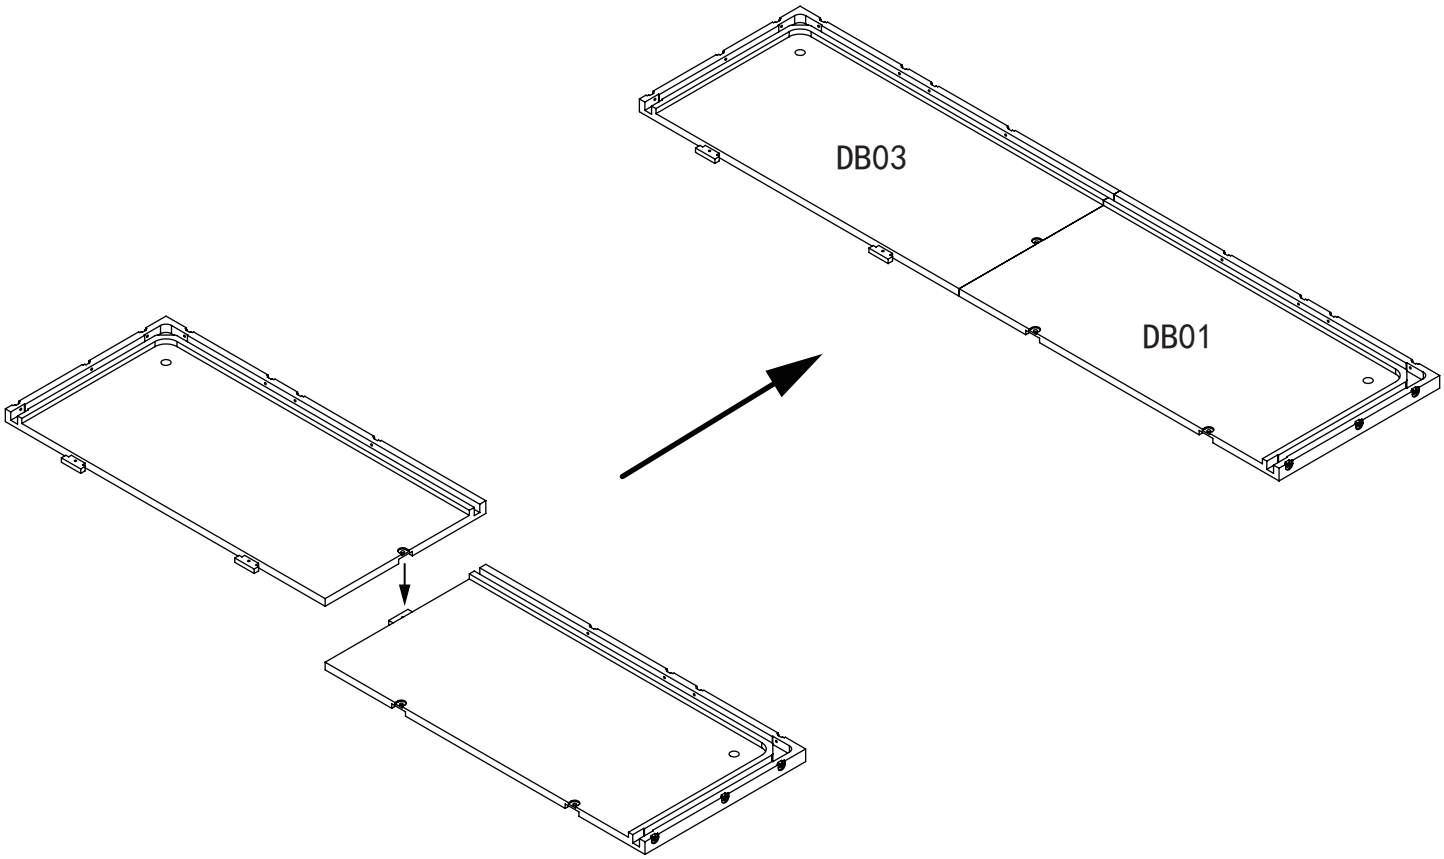


STEP 2

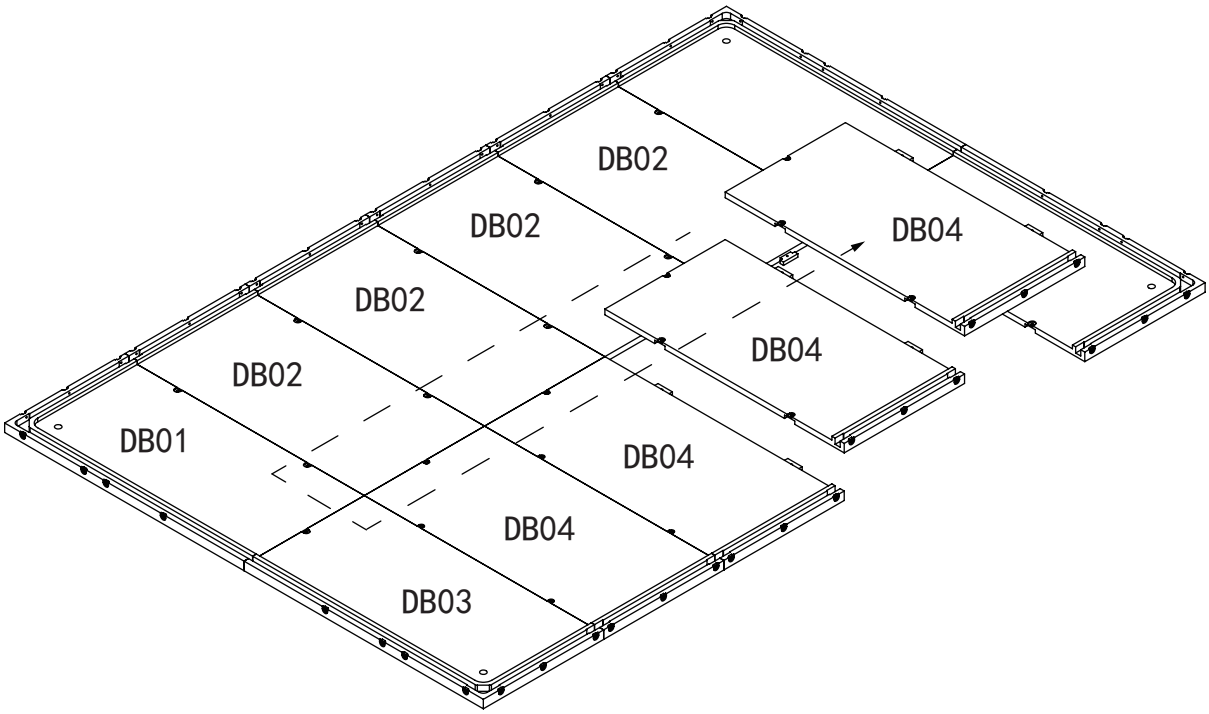


STEP 3

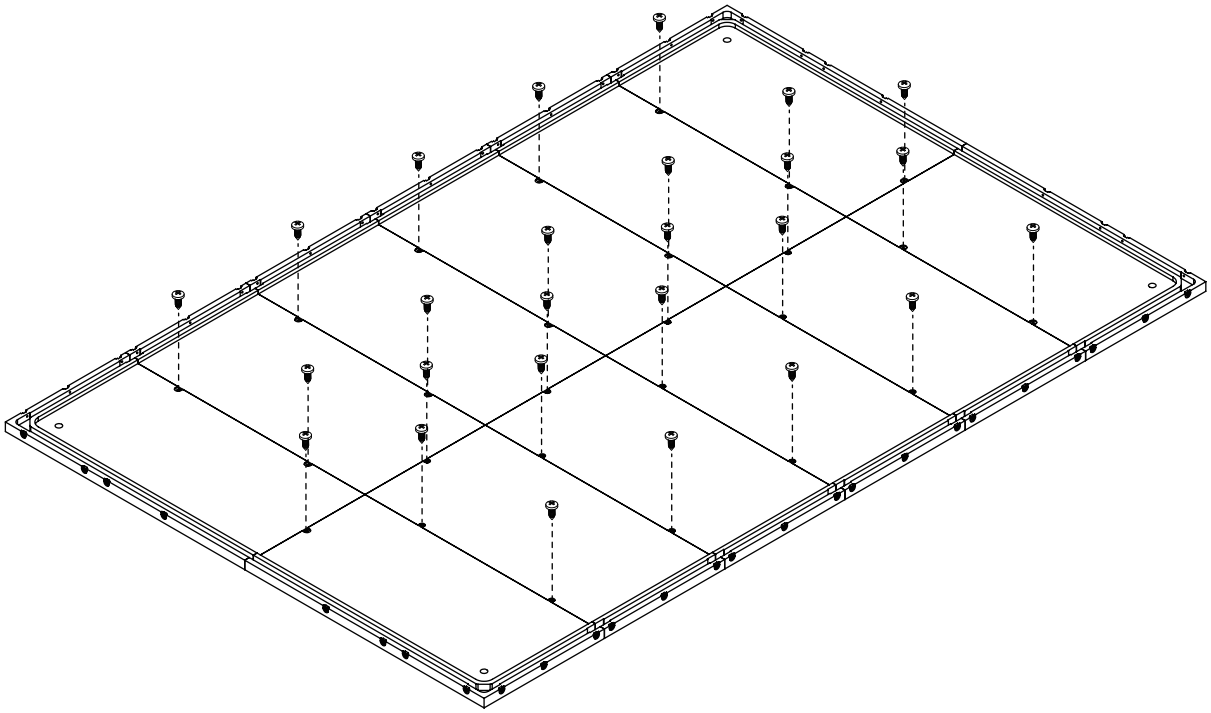

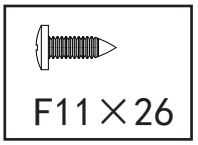


STEP 4

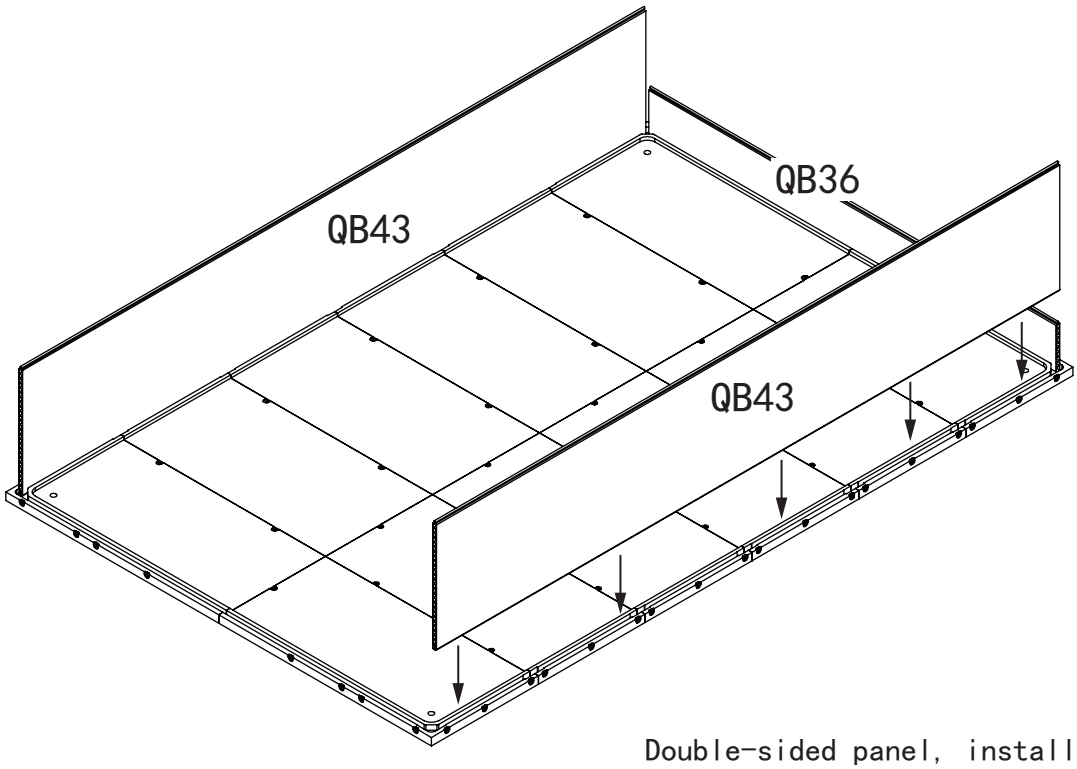



Double-sided panel, install as needed


STEP 5

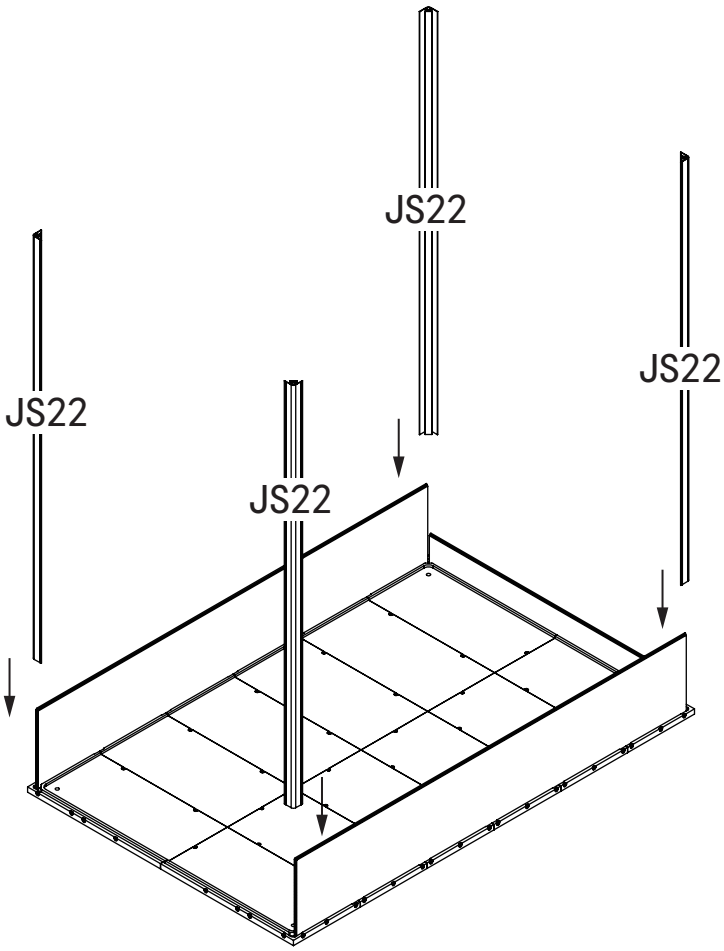


STEP 6

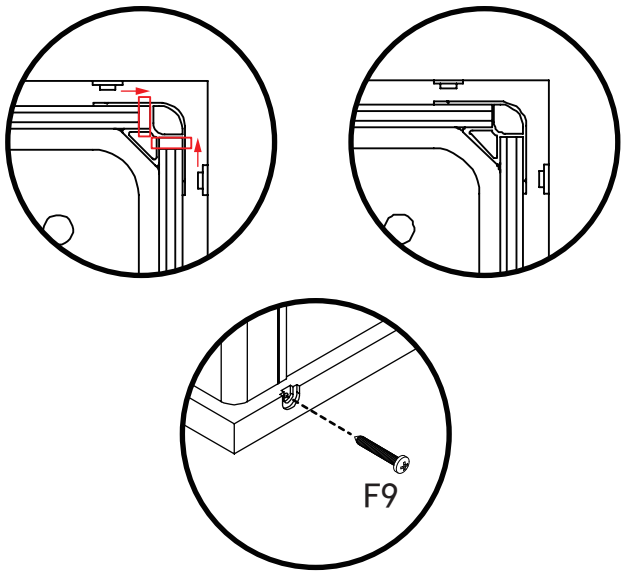


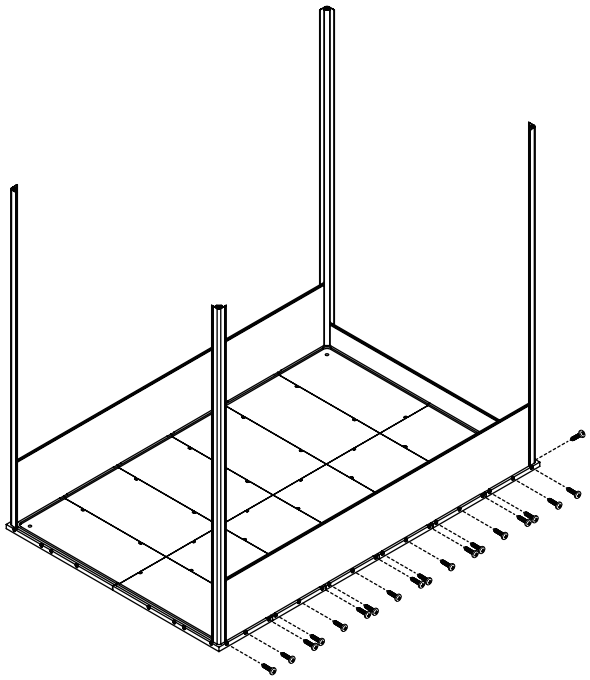


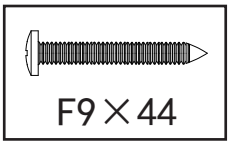


STEP 7

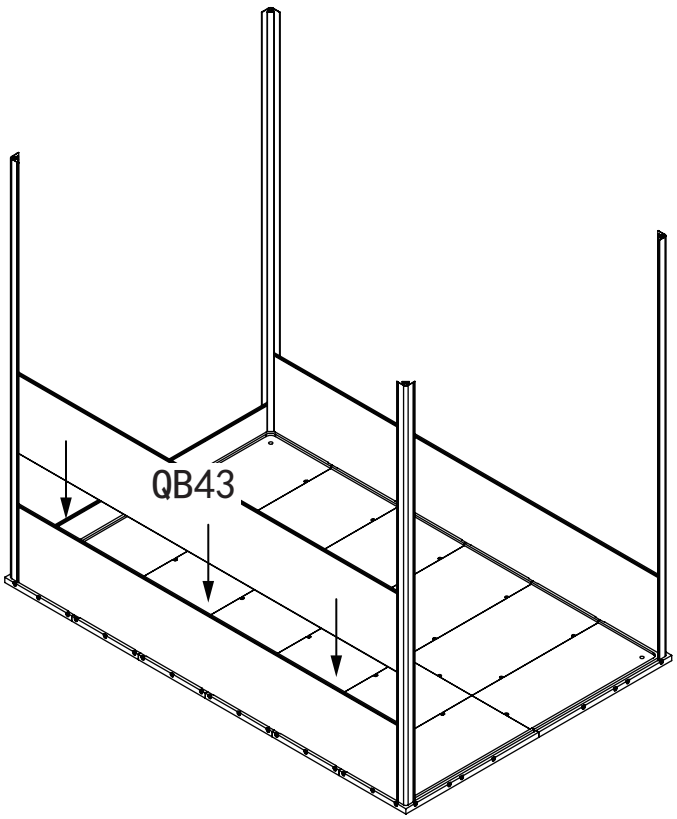


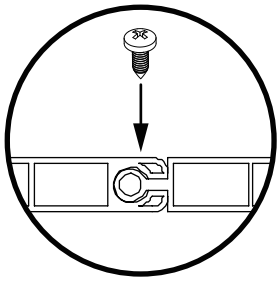

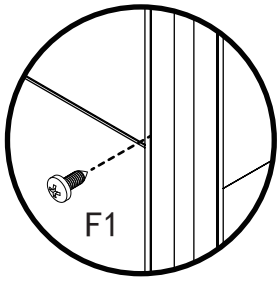


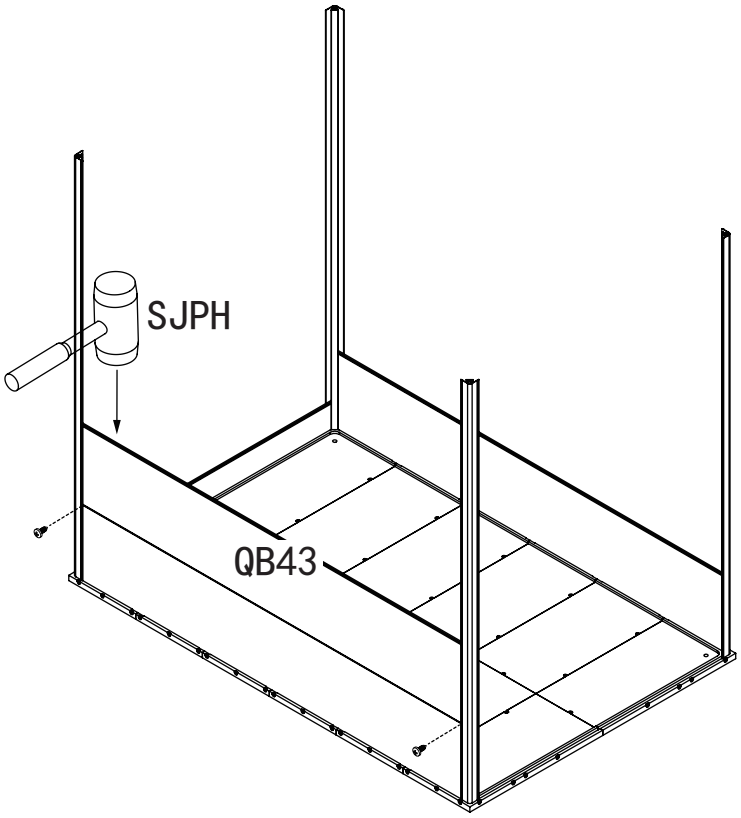



Use SJPH to press the wall panel down firmly.

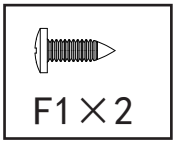


STEP 8

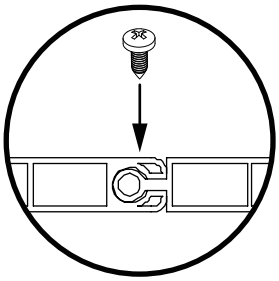


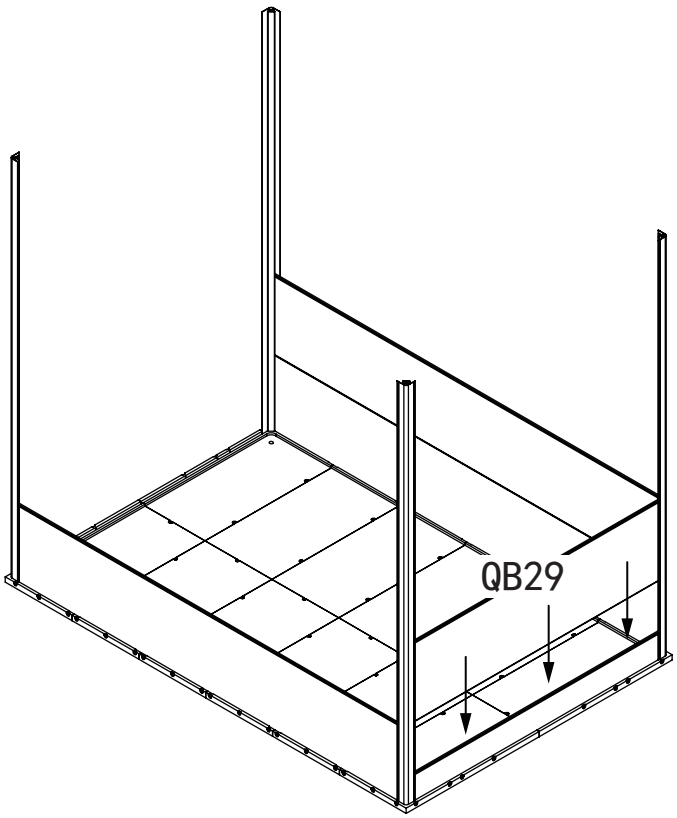

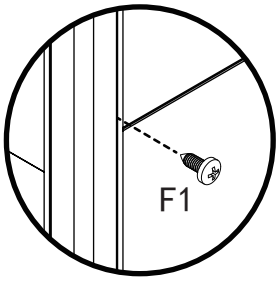


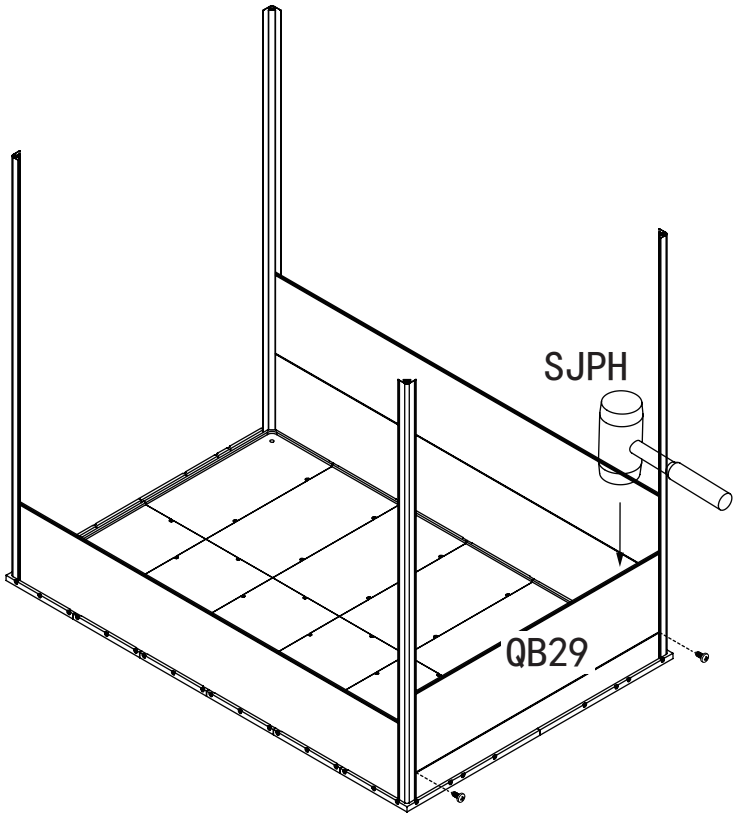



Use SJPH to press the wall panel down firmly.

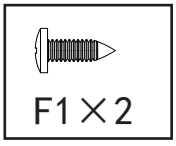



STEP 9

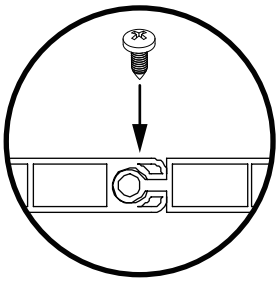

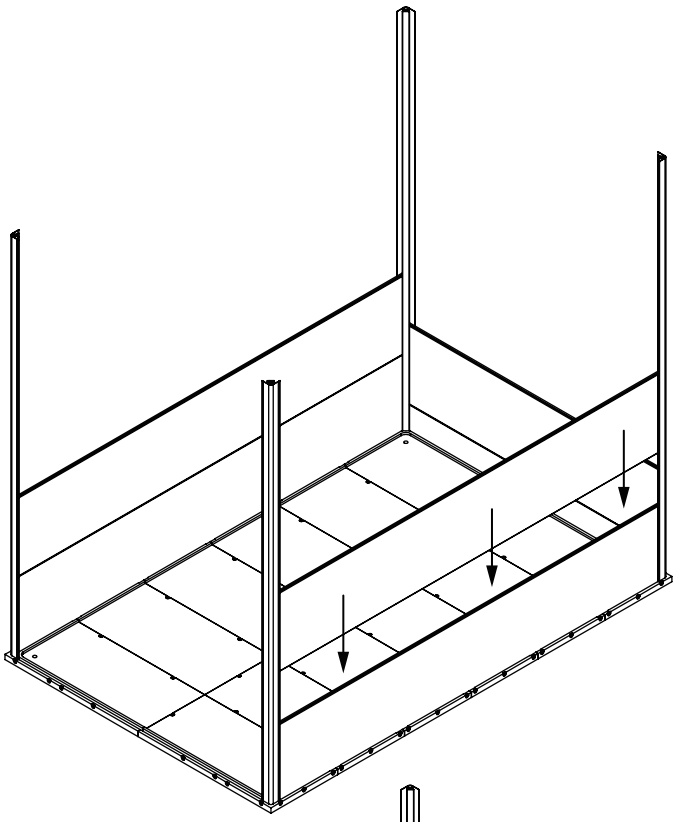

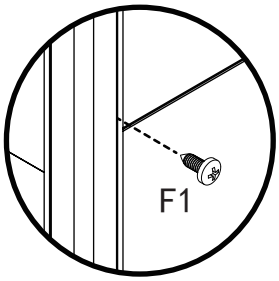

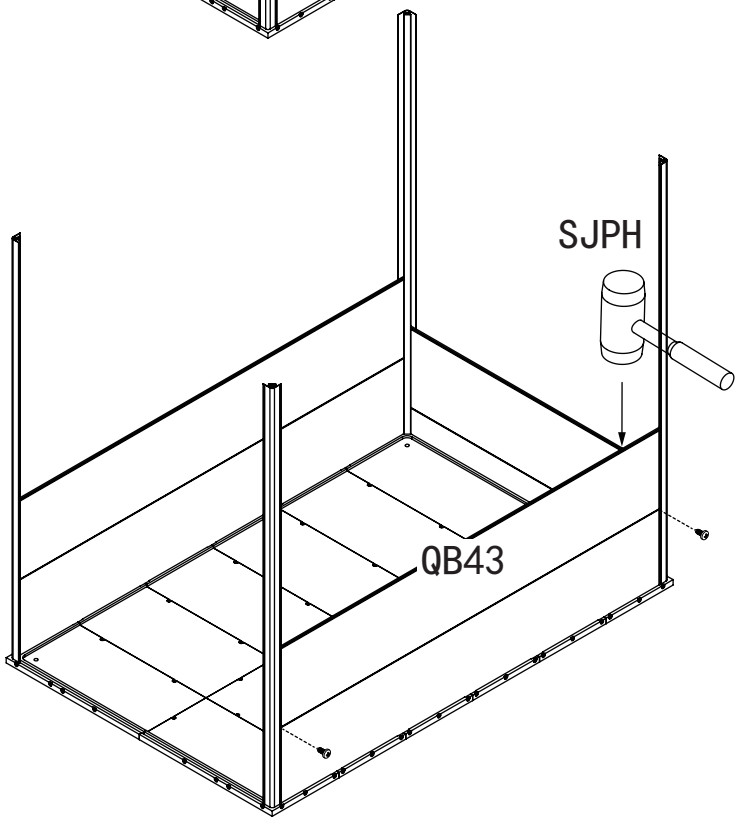


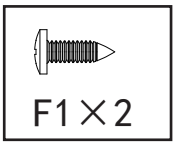


Use SJPH to press the wall panel down firmly.


STEP 10


Repeat STEP 9 to STEP 11 four times

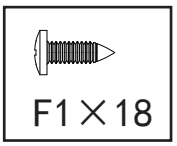


STEP 11

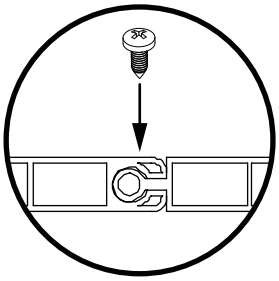


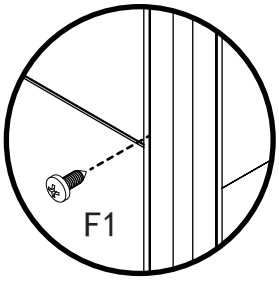


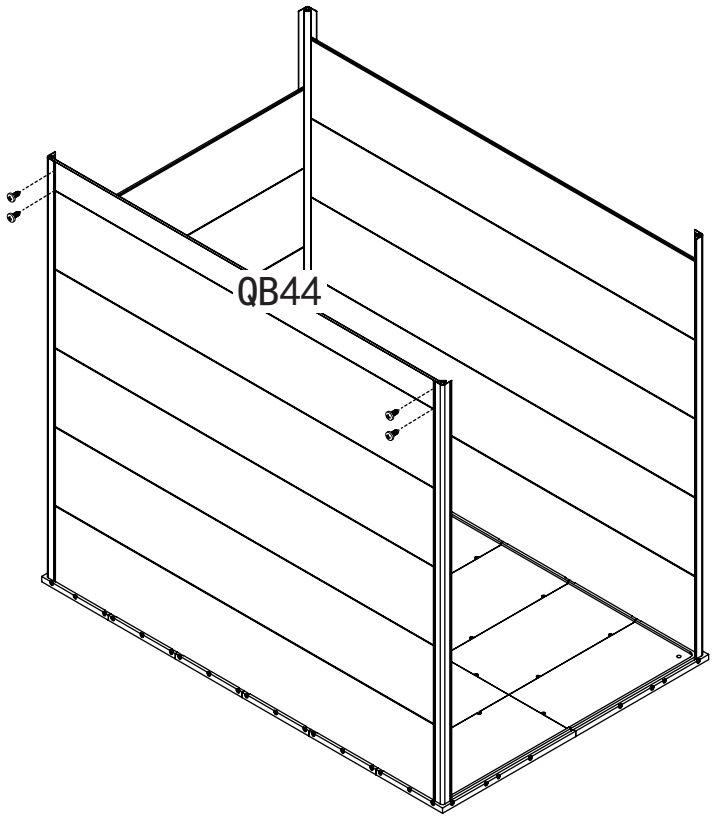


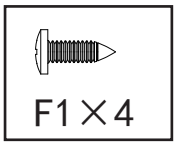


STEP 12

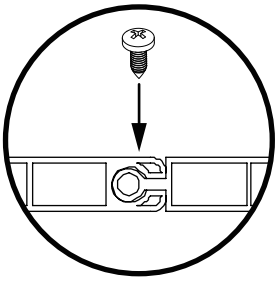


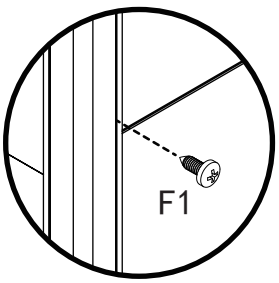


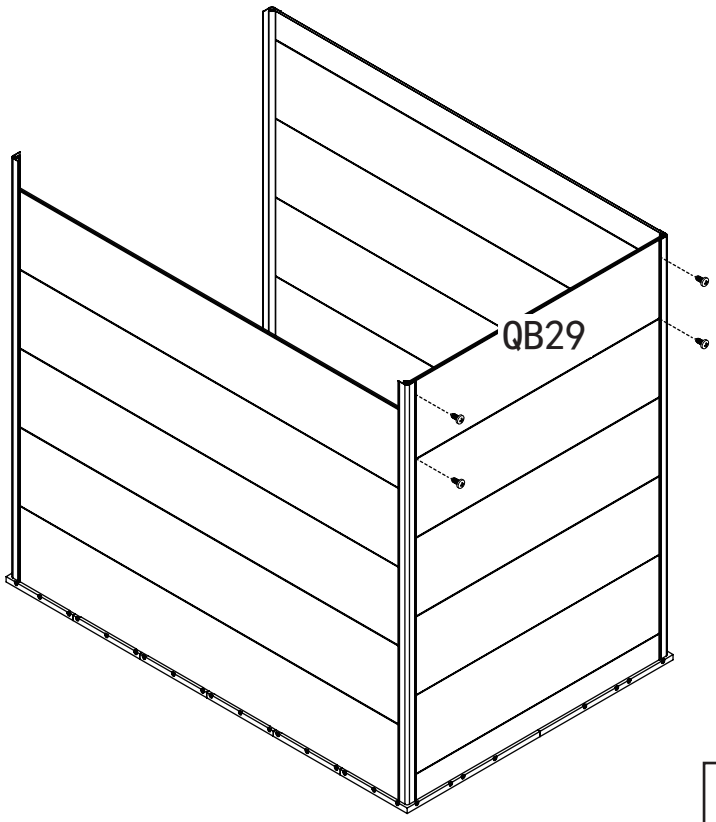


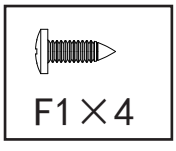


STEP 13

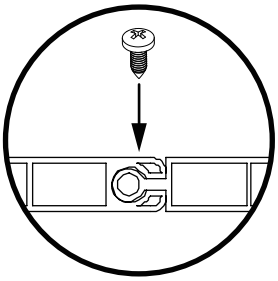


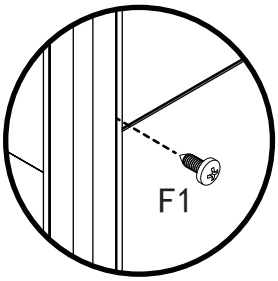


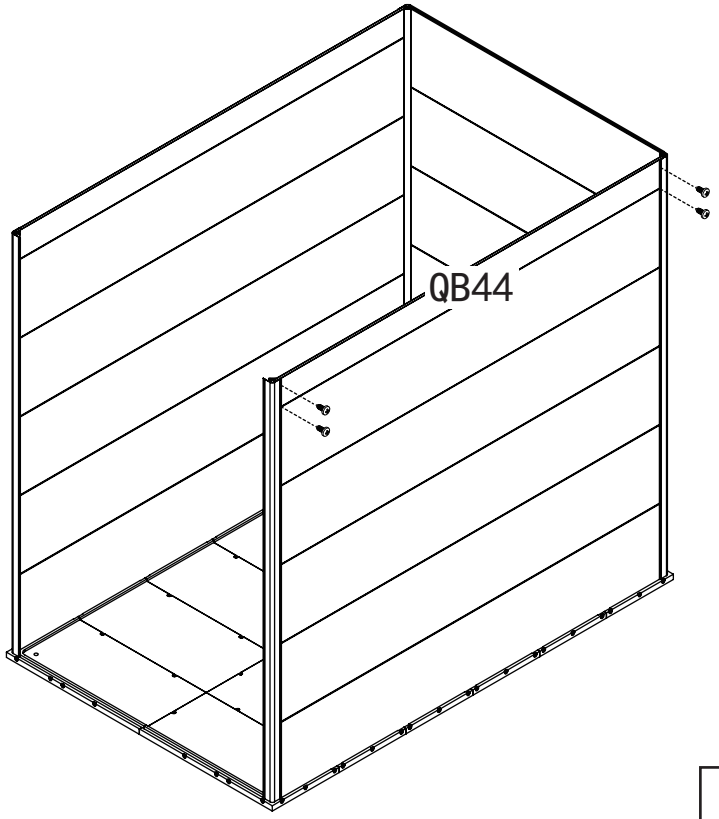


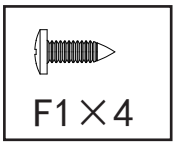



STEP 14

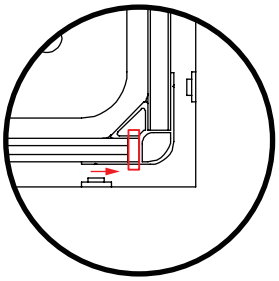


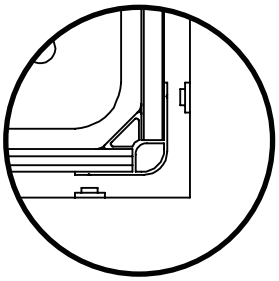


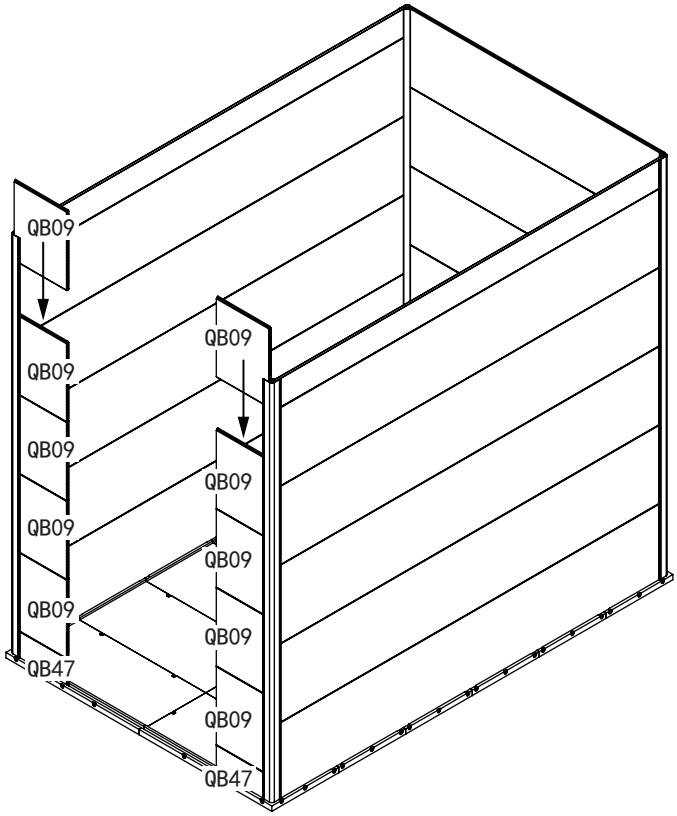

QB09
QB09
QB09
QB09
QB09
QB09
QB09
QB09
QB09
QB47
QB47

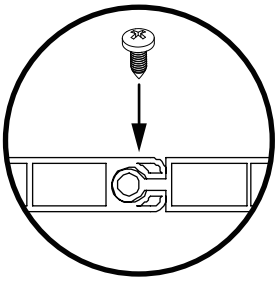


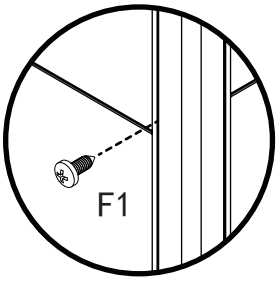
F1

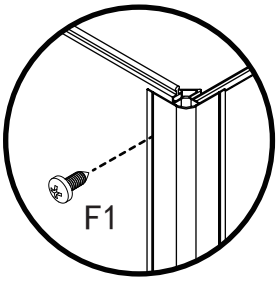

F1

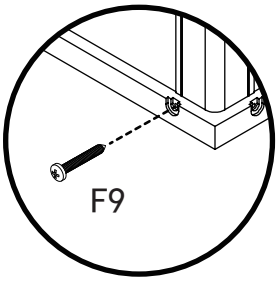

F9

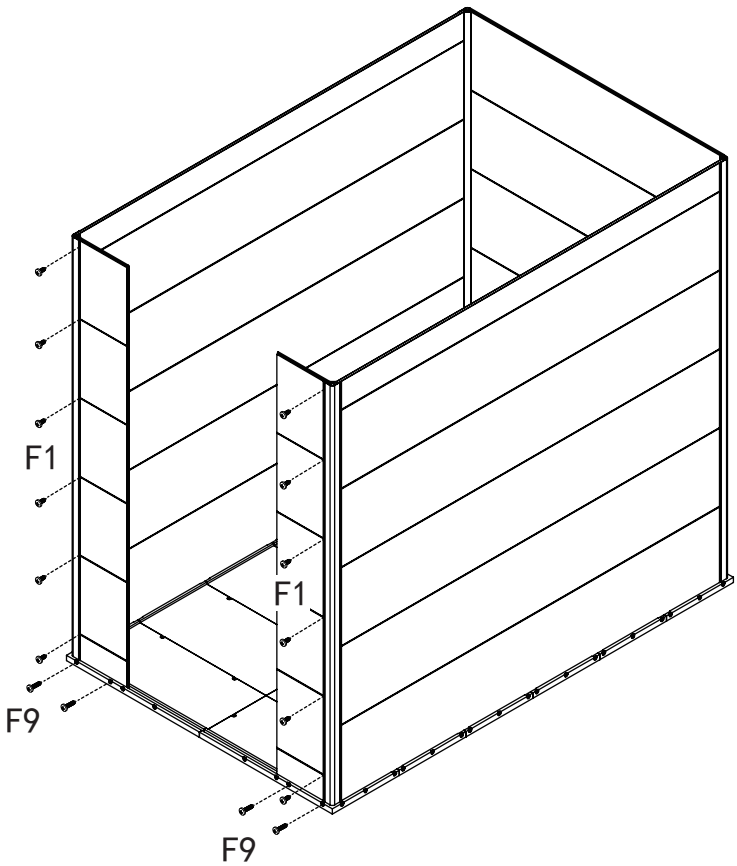

F1
F1
F9
F9

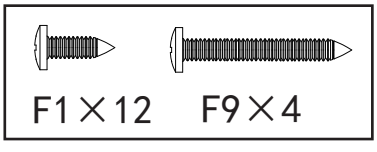

F1×12
F9×4


STEP 15

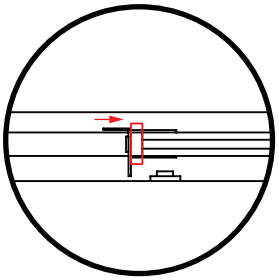


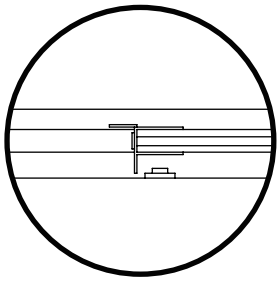


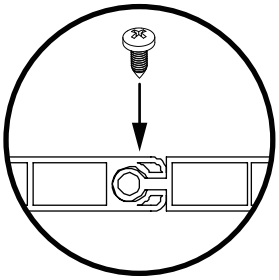


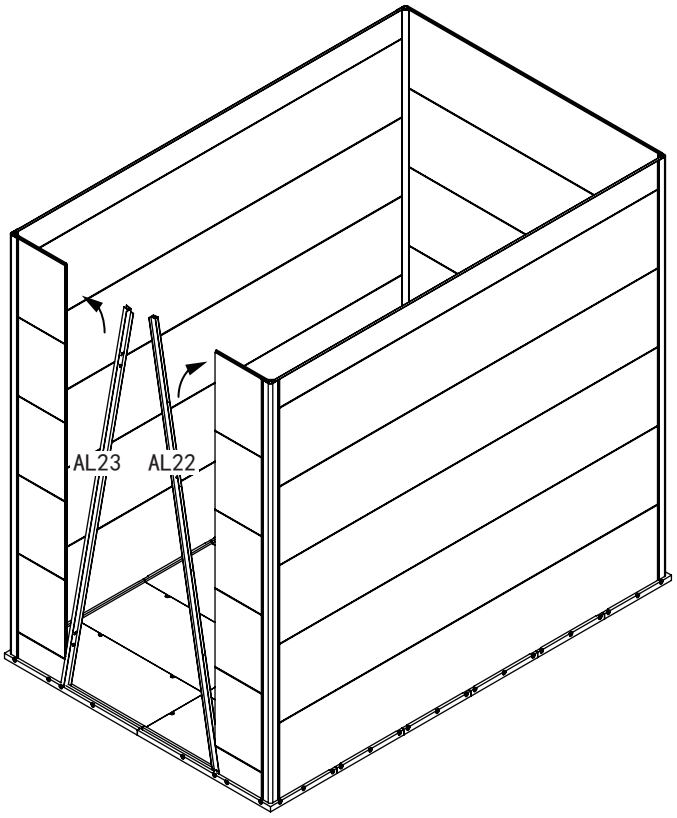

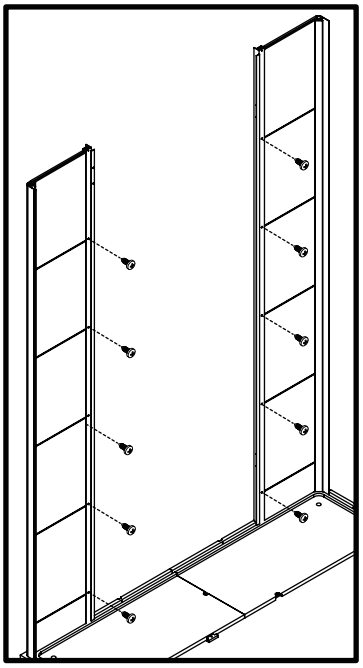


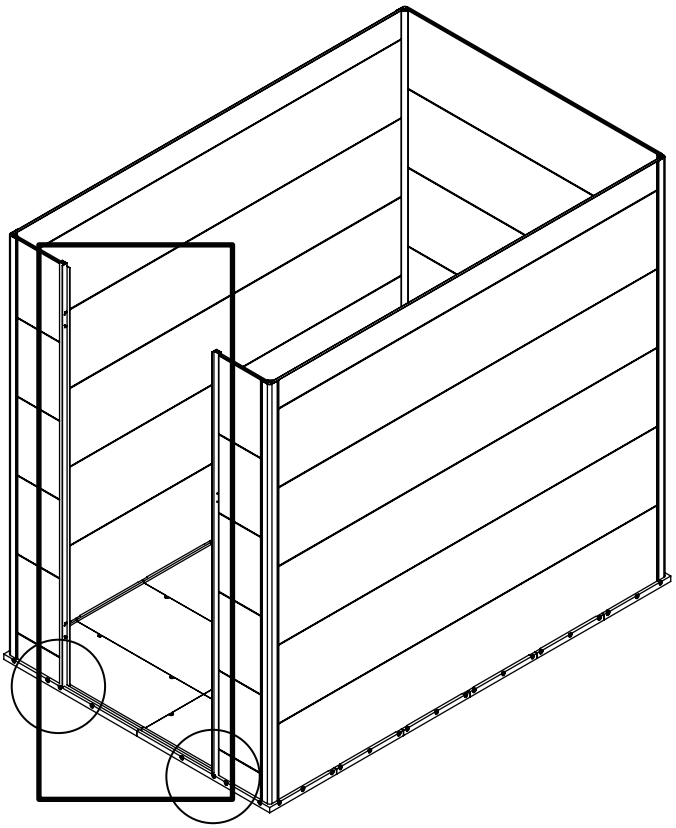

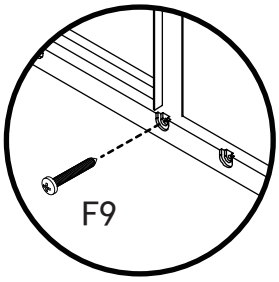


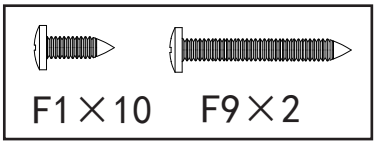

STEP 16

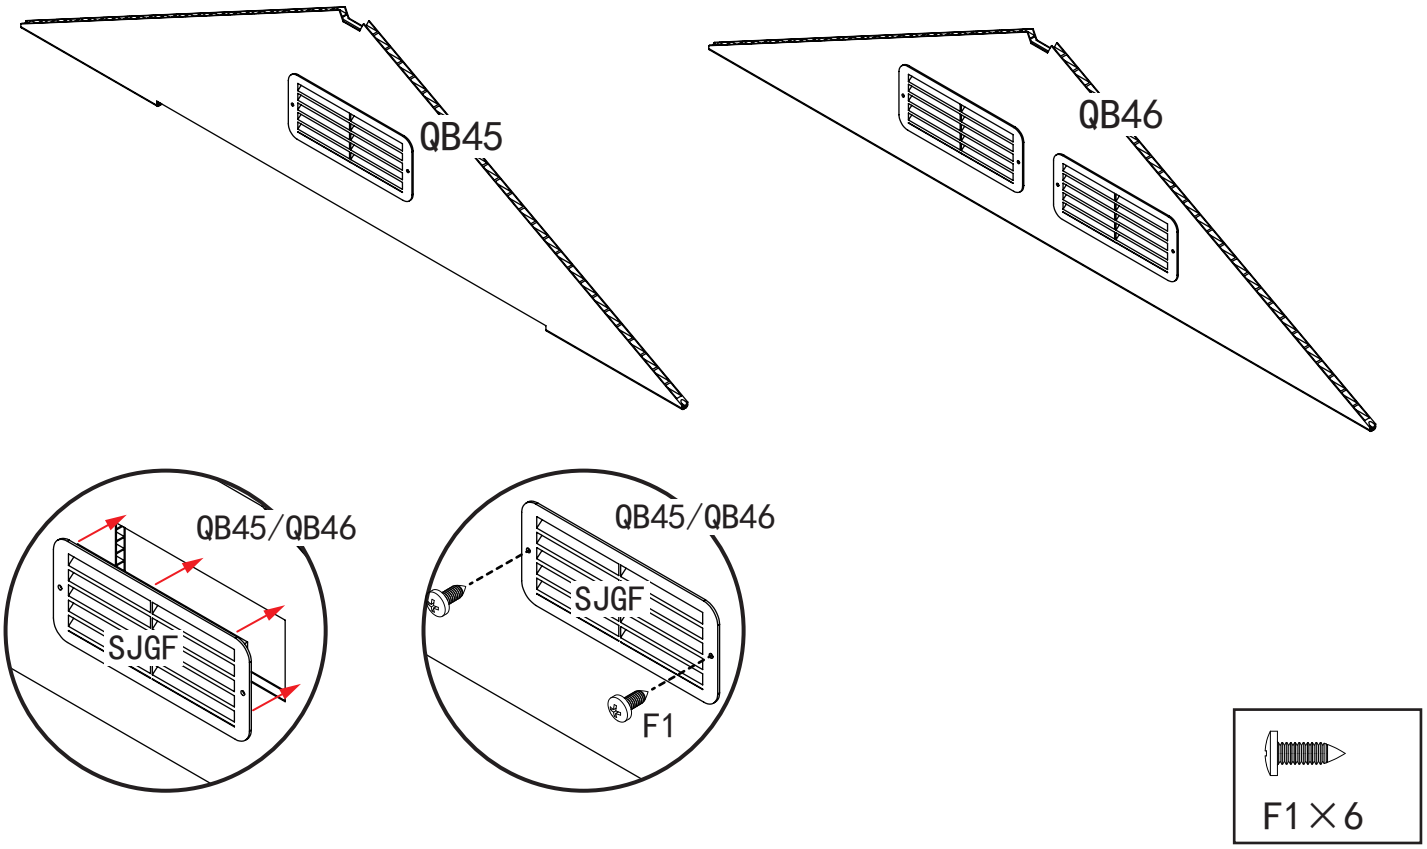



STEP 17

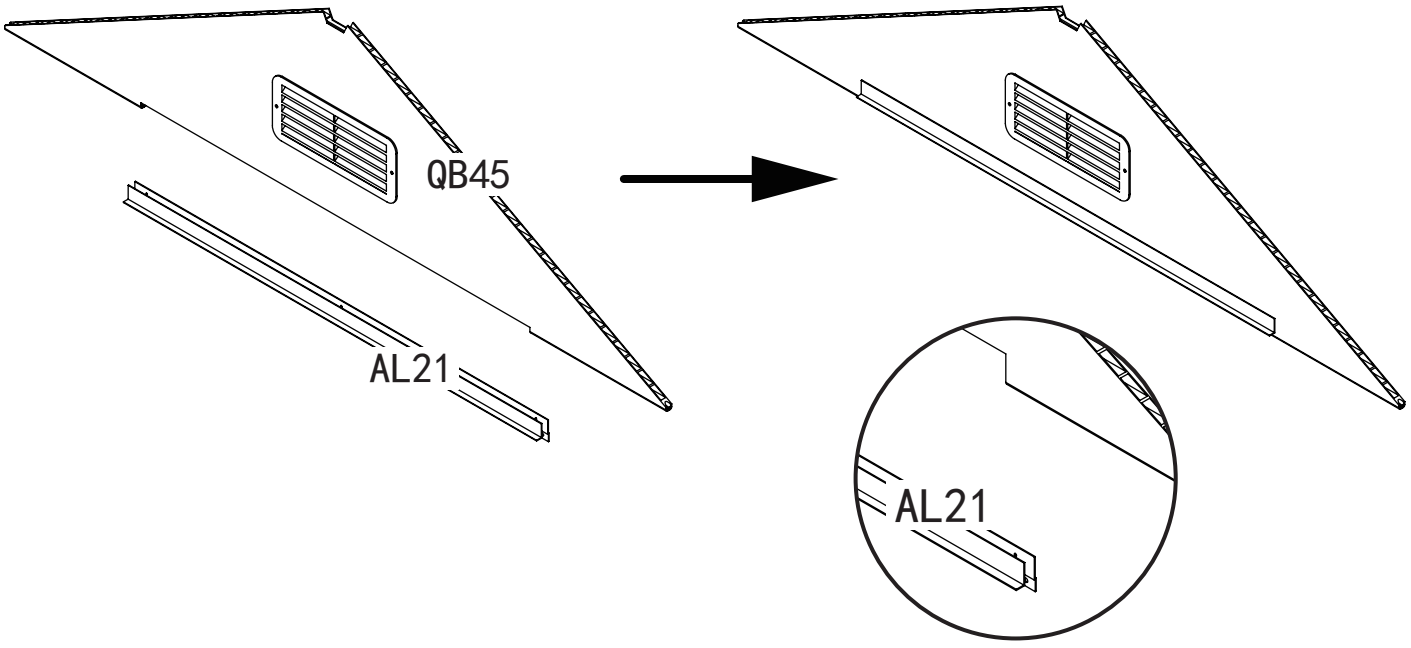


Pay attention to the orientation of AL21.


STEP 18

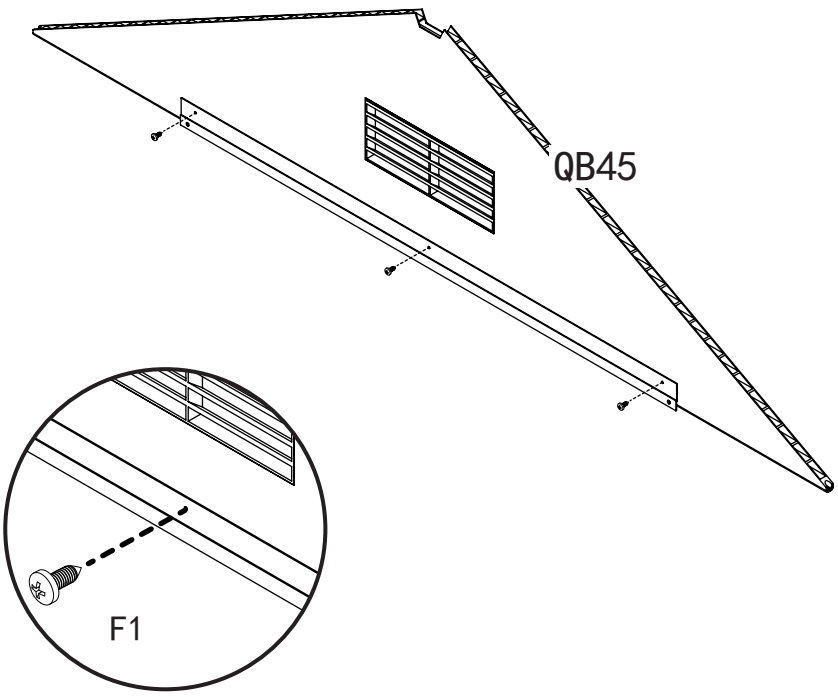


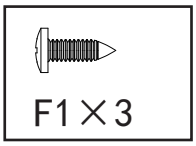


STEP 19

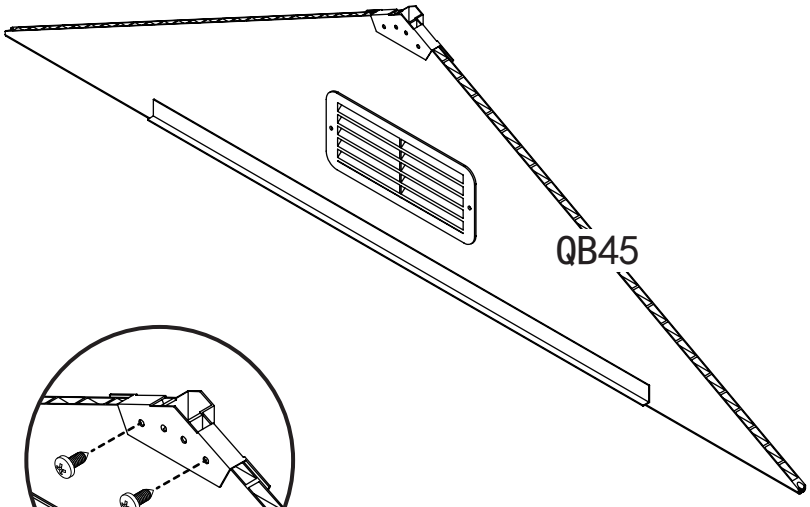


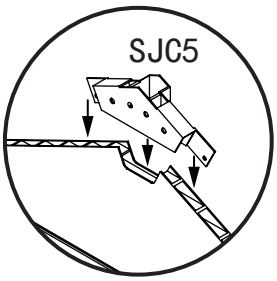


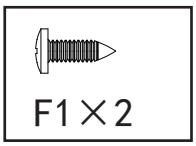


STEP 20

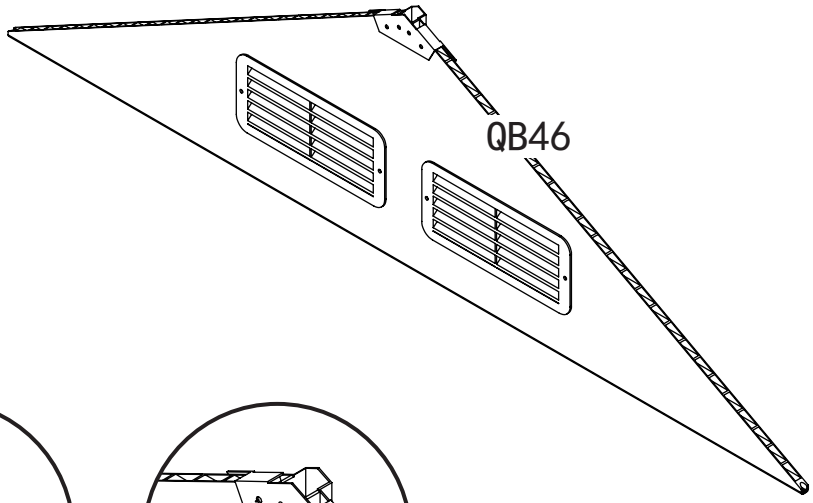


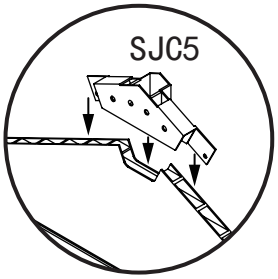


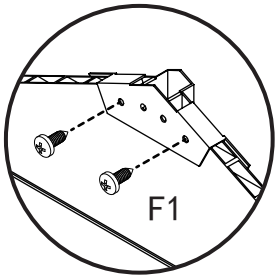


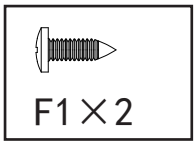


STEP 21

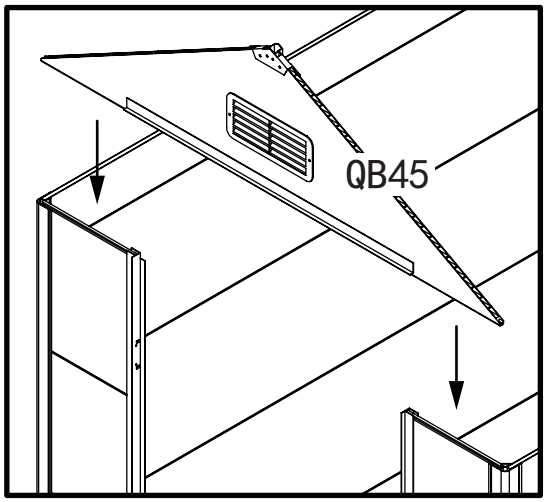


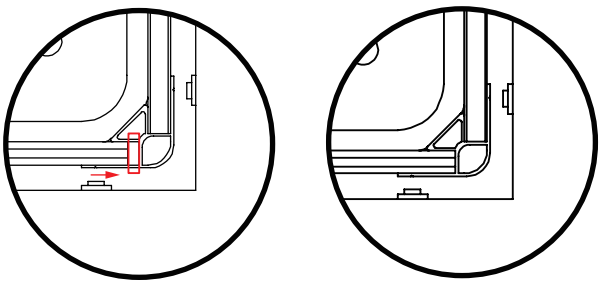


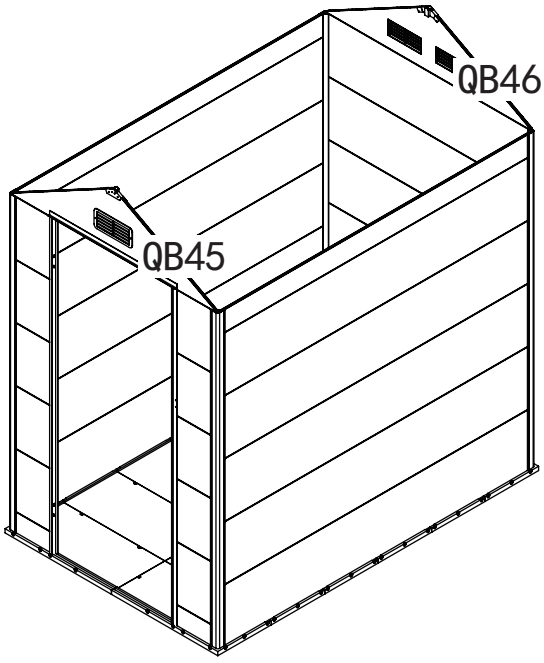


STEP 22

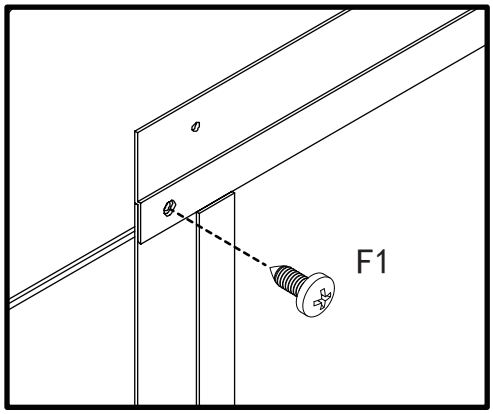


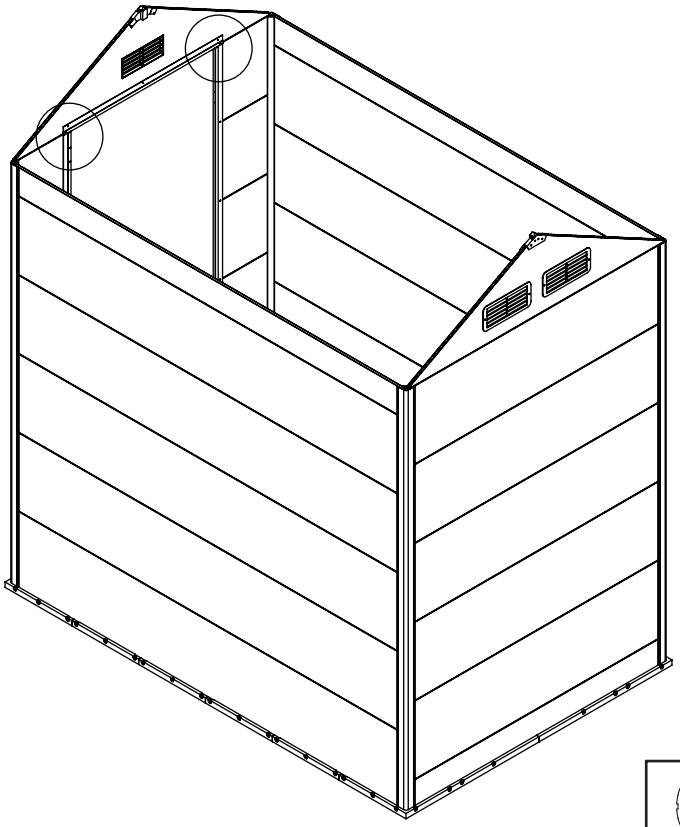


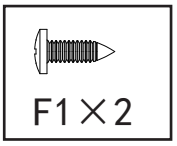


STEP 23

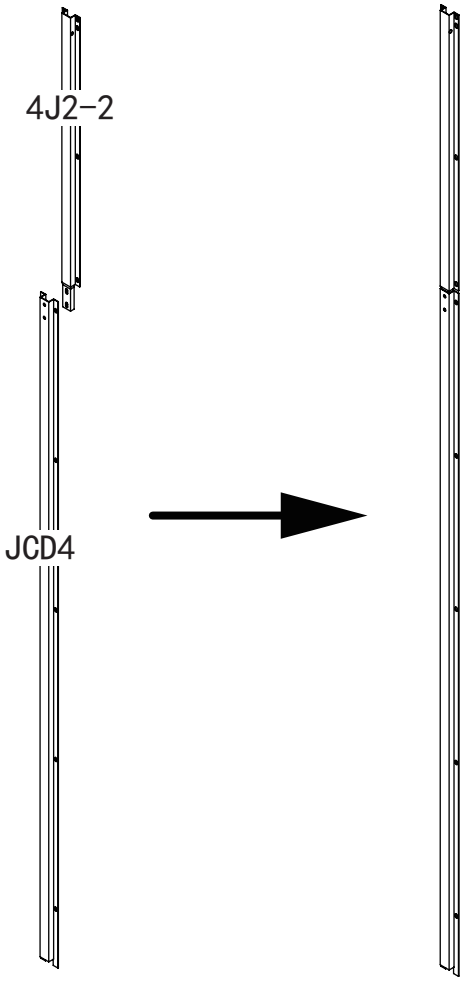


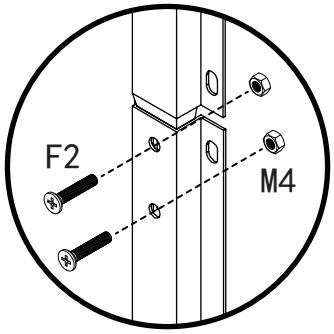


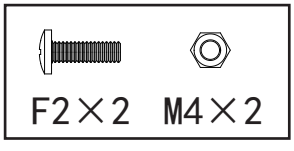



STEP 24

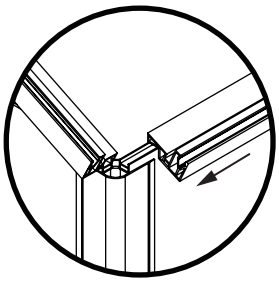


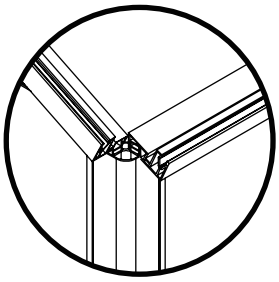

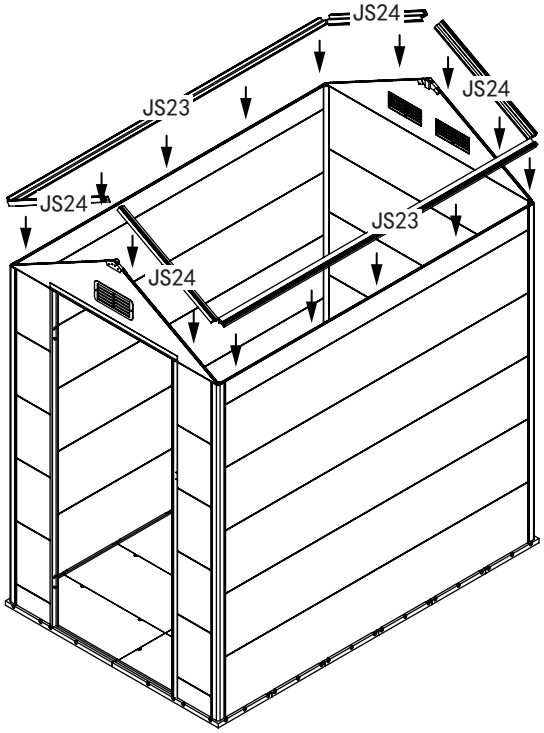

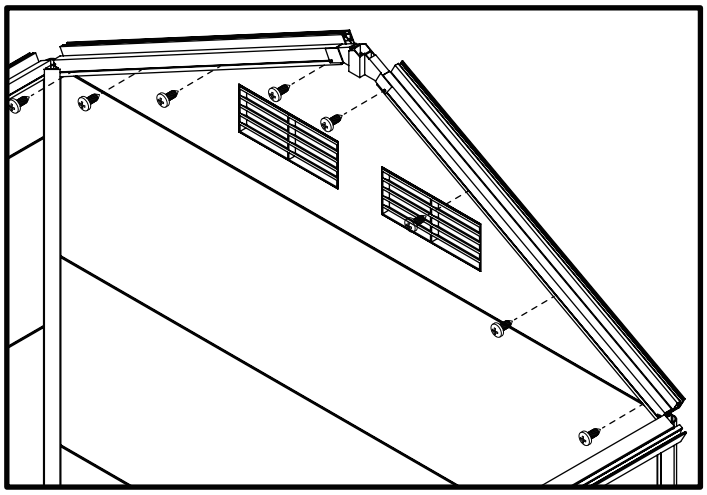


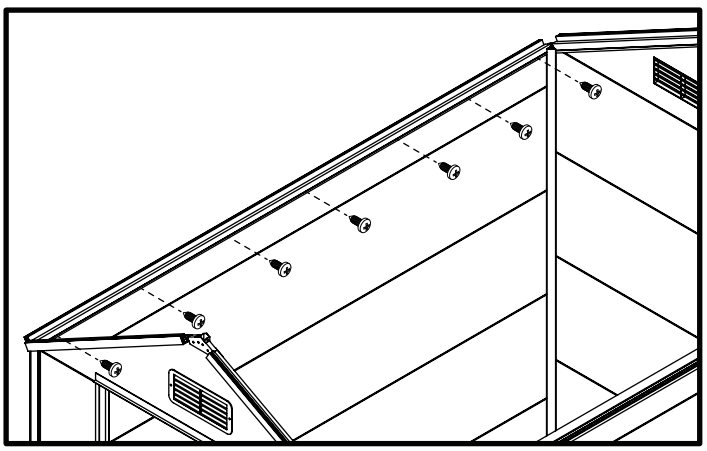


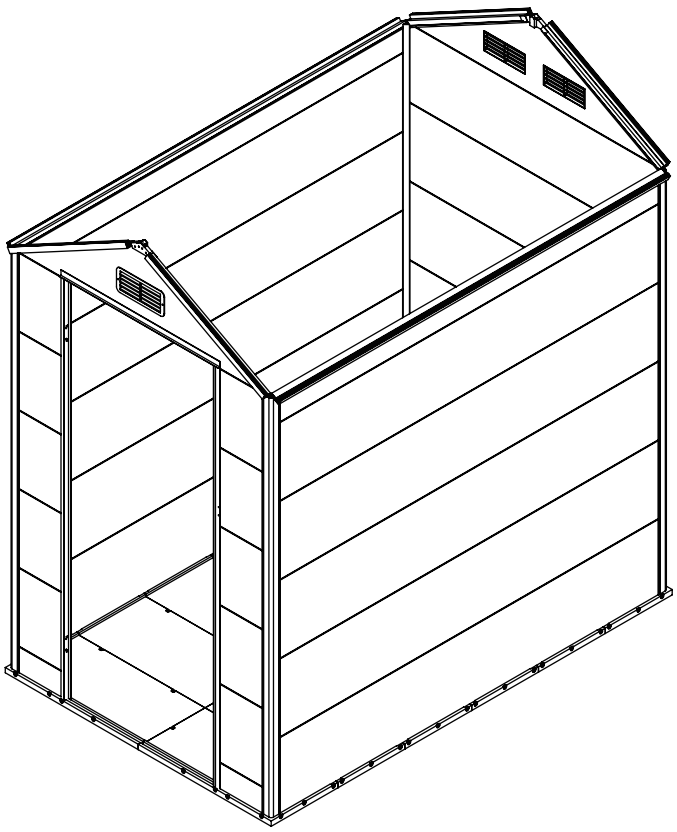



F1×30

STEP 25

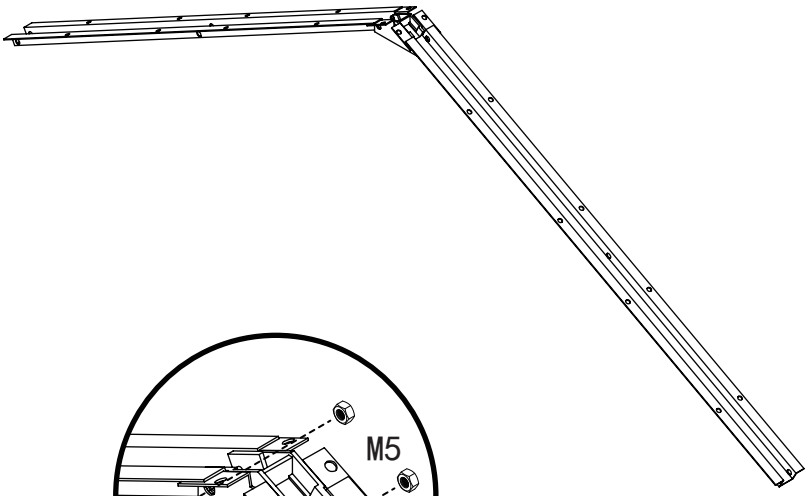


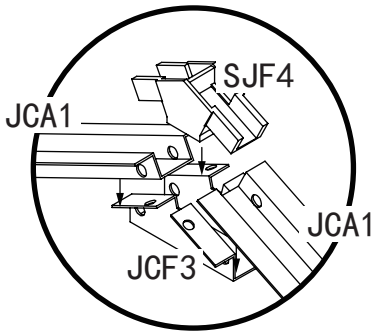


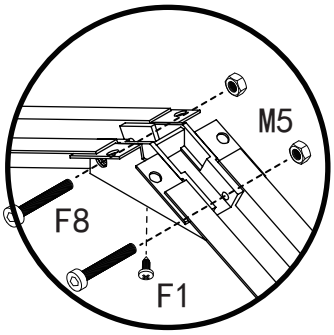

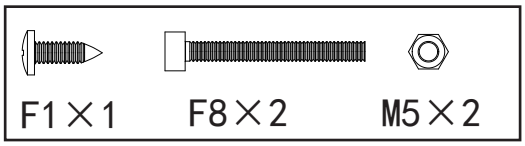



STEP 26

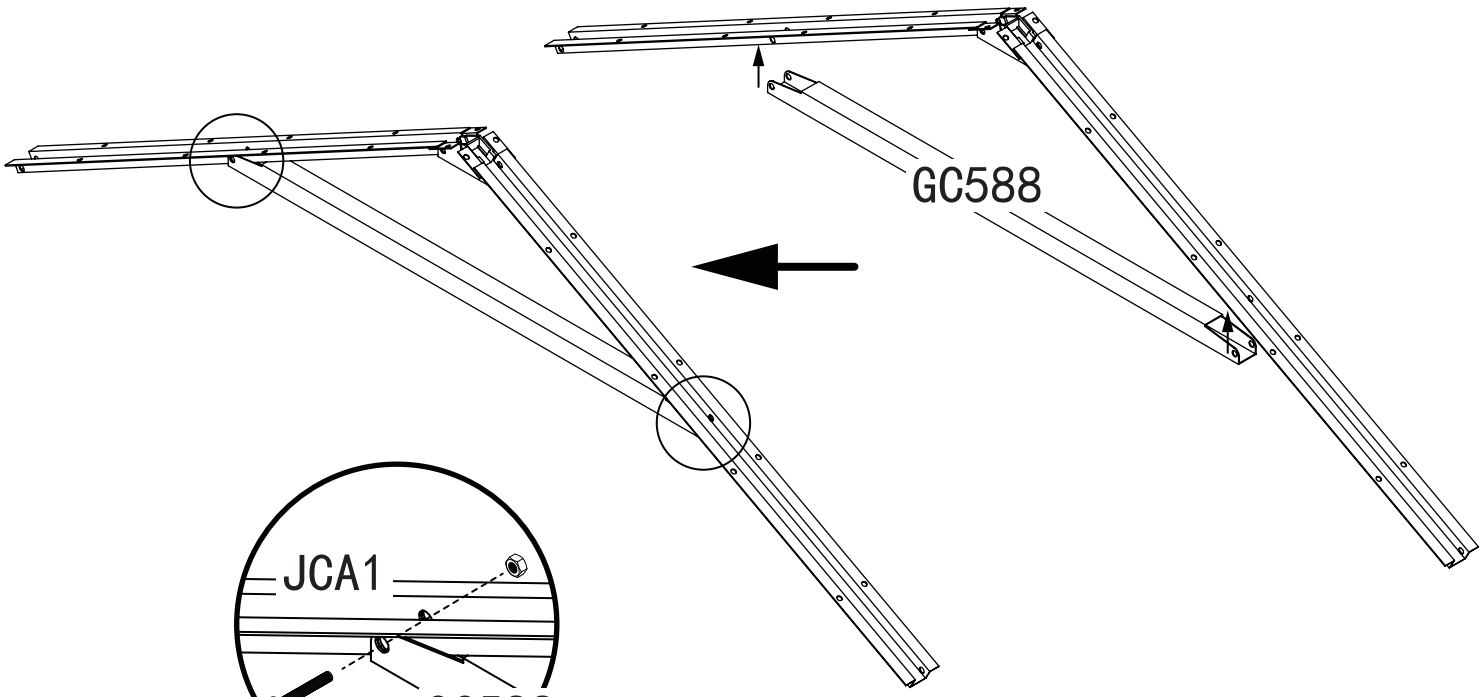

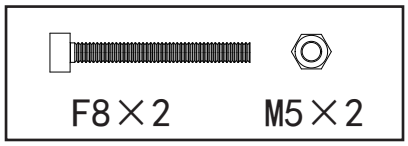



STEP 27

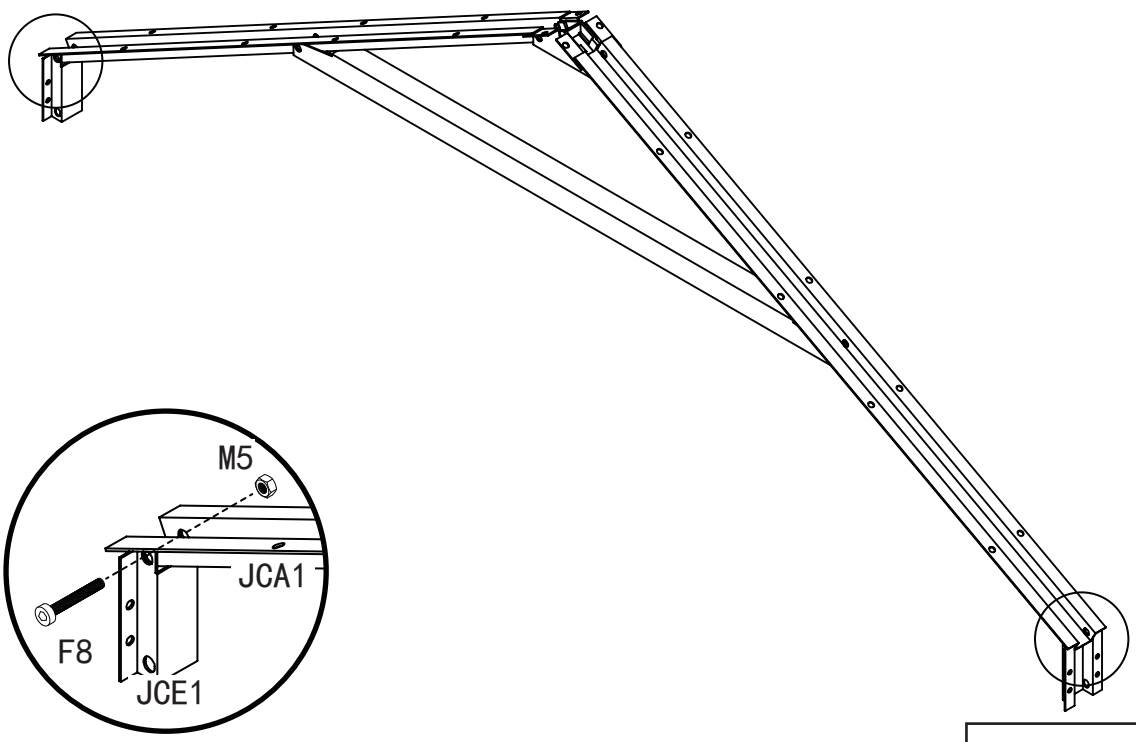

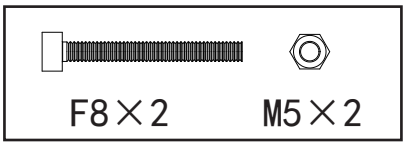



STEP 28

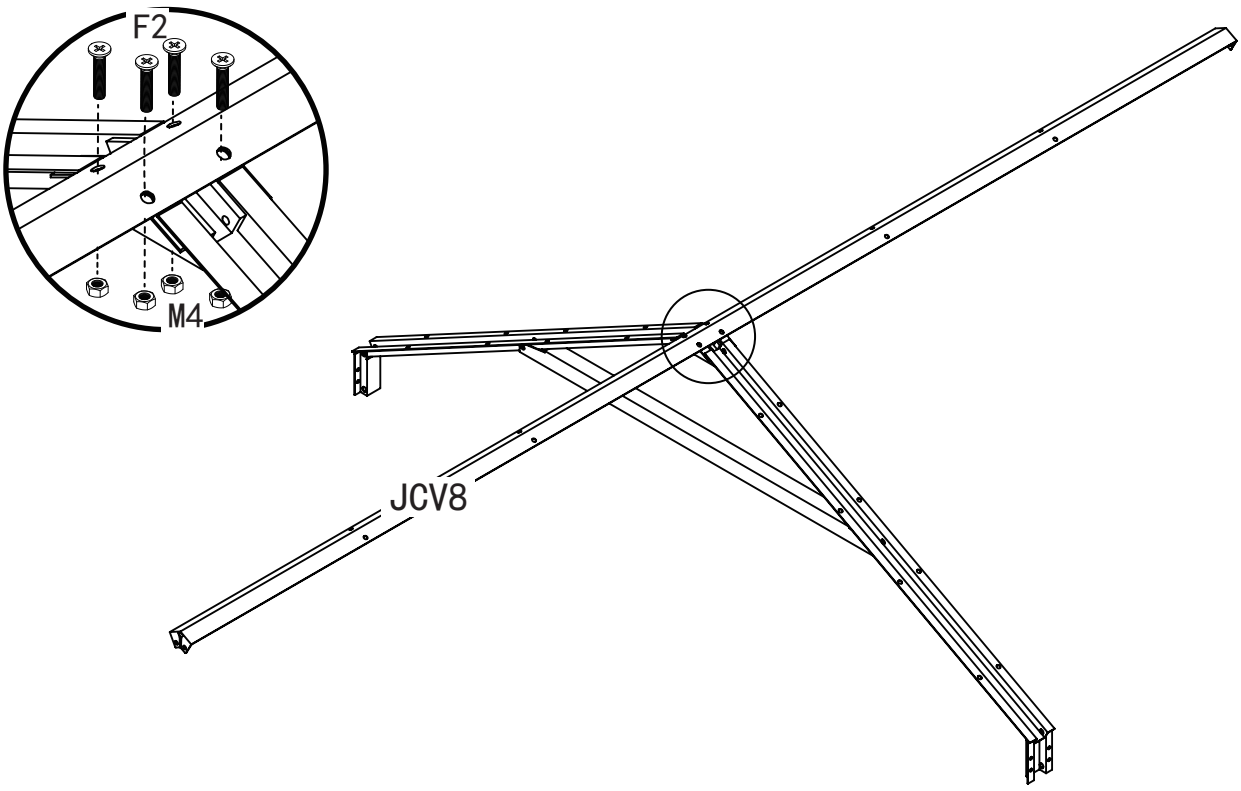


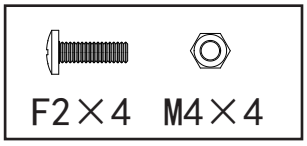


STEP 29

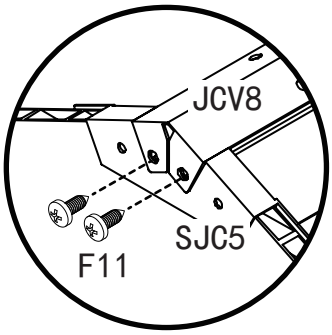


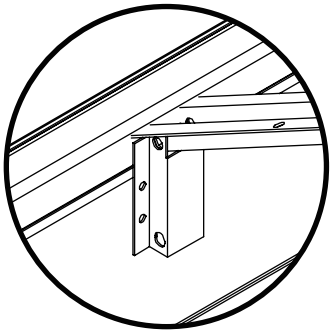


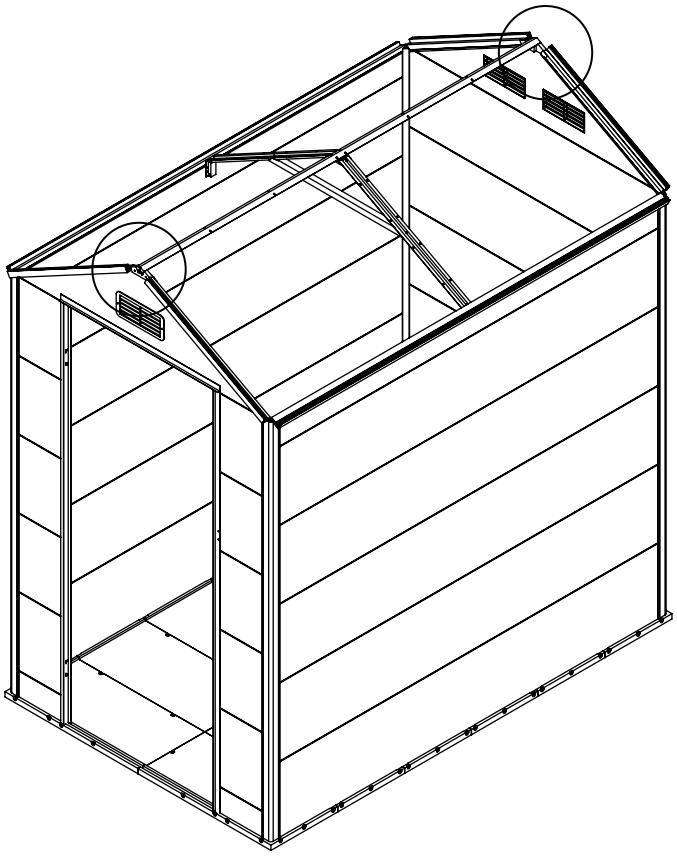


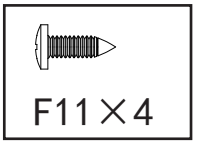


STEP 30

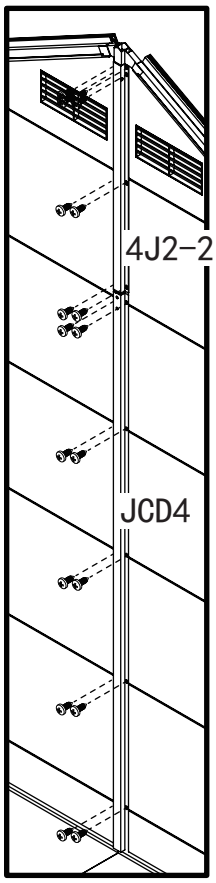


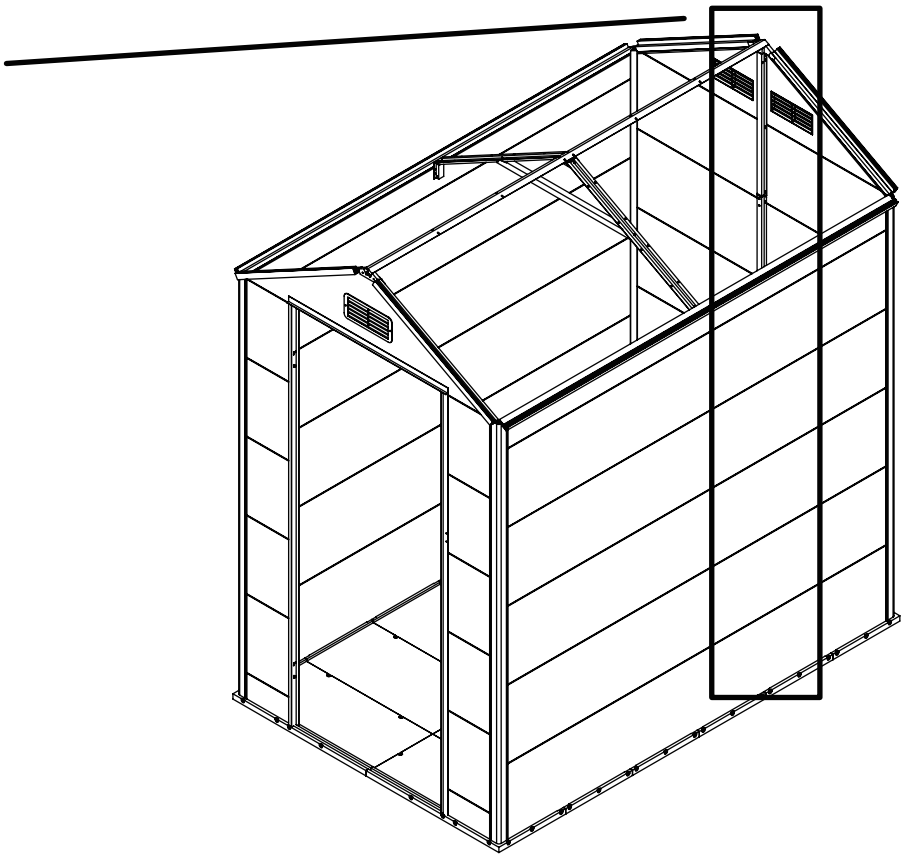

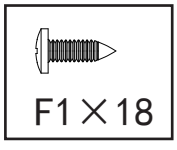



STEP 31

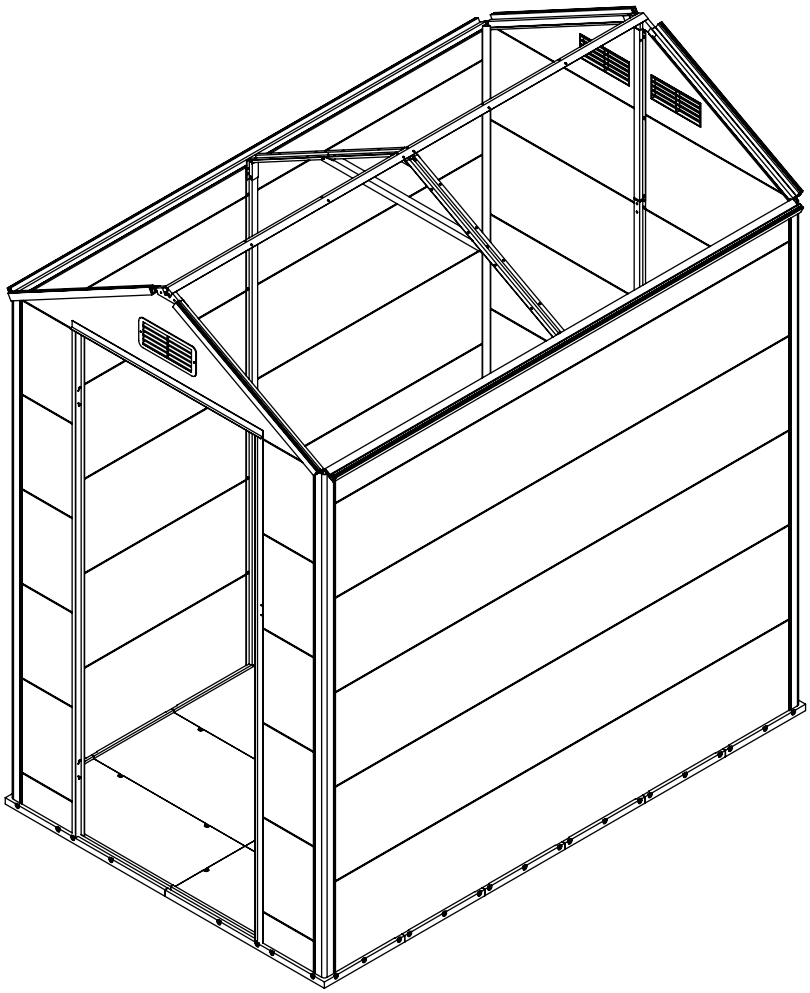

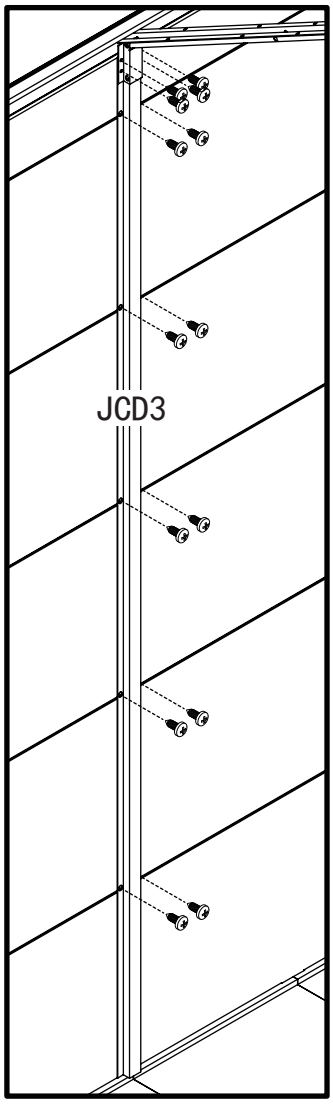


×2

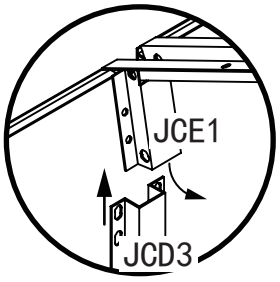


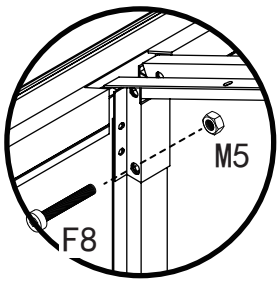



Install vertically and centrally

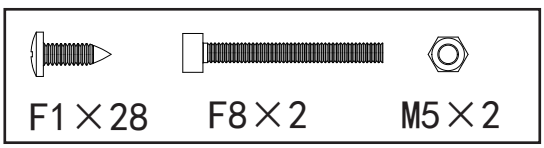


STEP 32

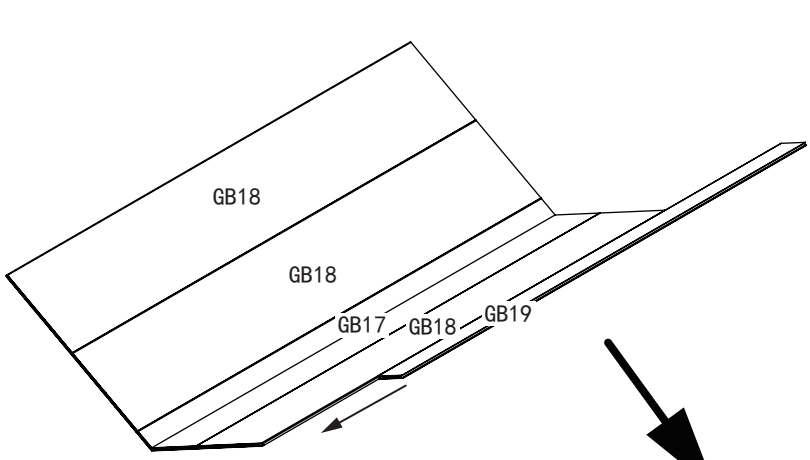


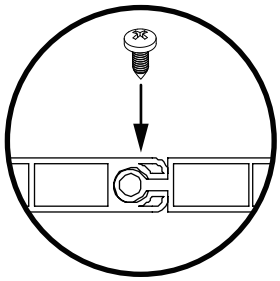

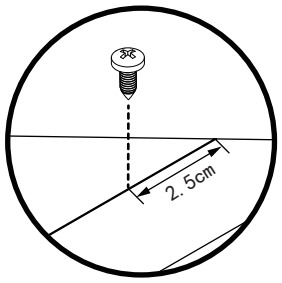


Install the screw
2.5 centimeters
away from the edge

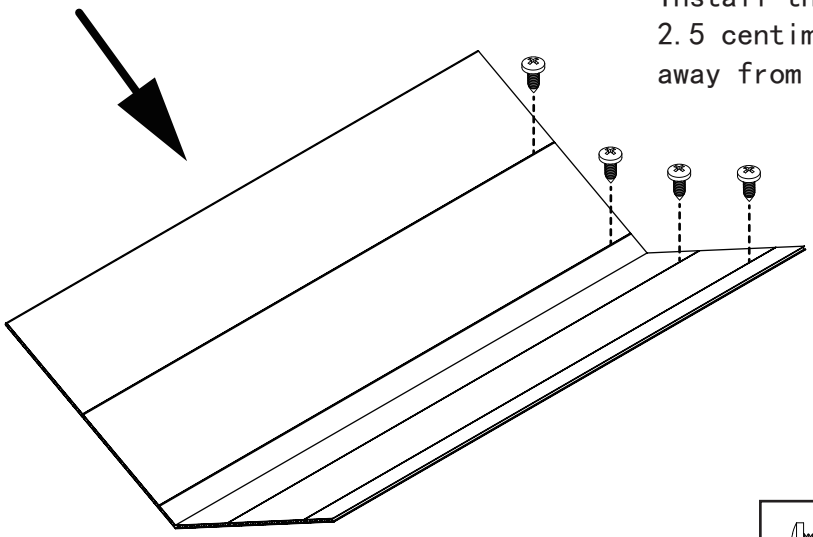





Bending GB17

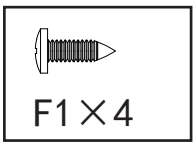

STEP 33

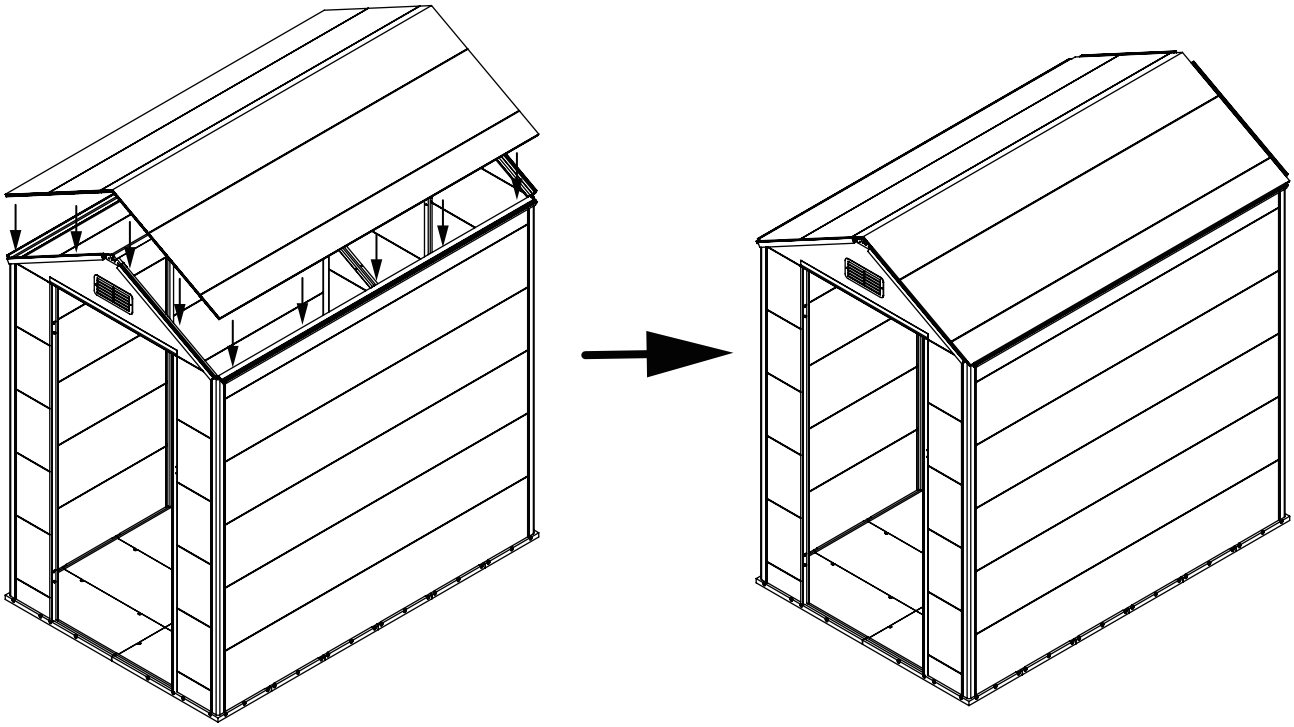



STEP 34

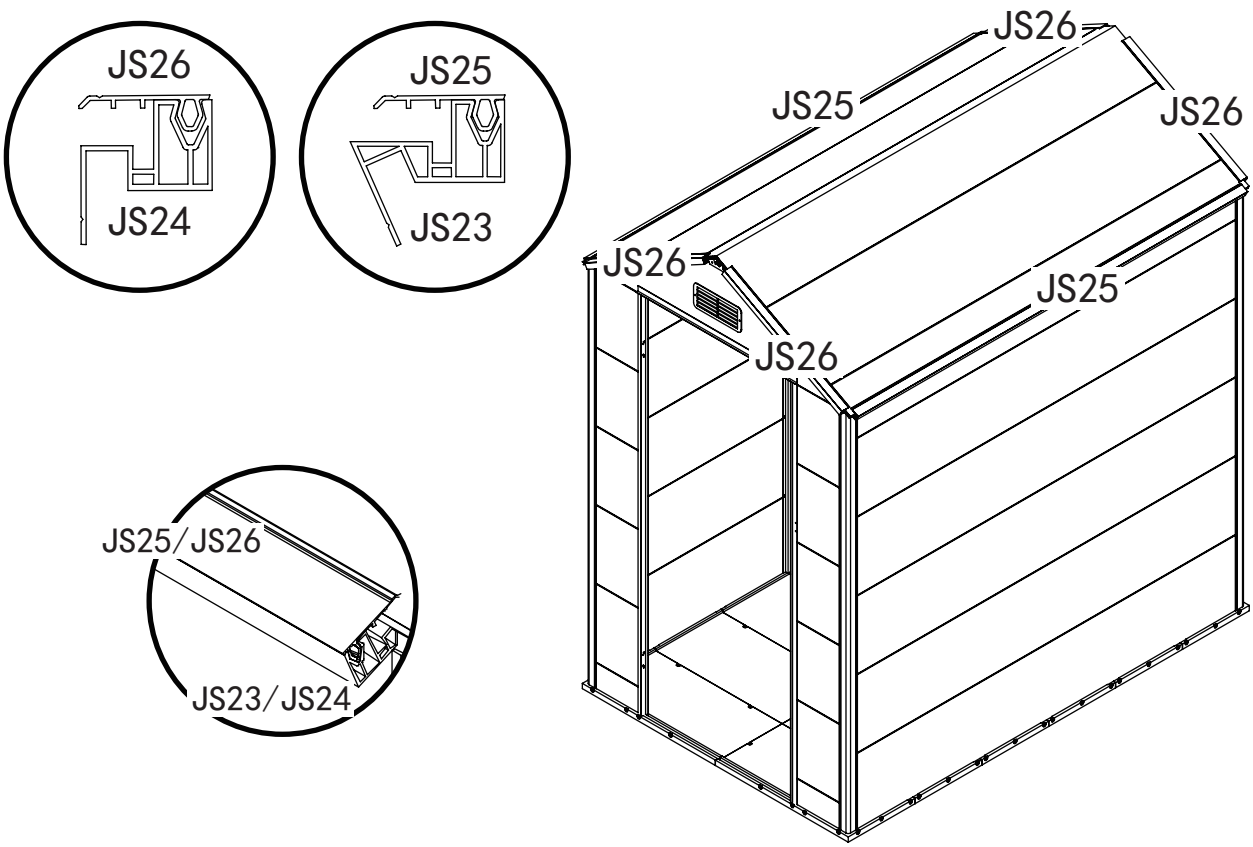


Align JS25/JS26 with JS23/JS24 during installation


STEP 35

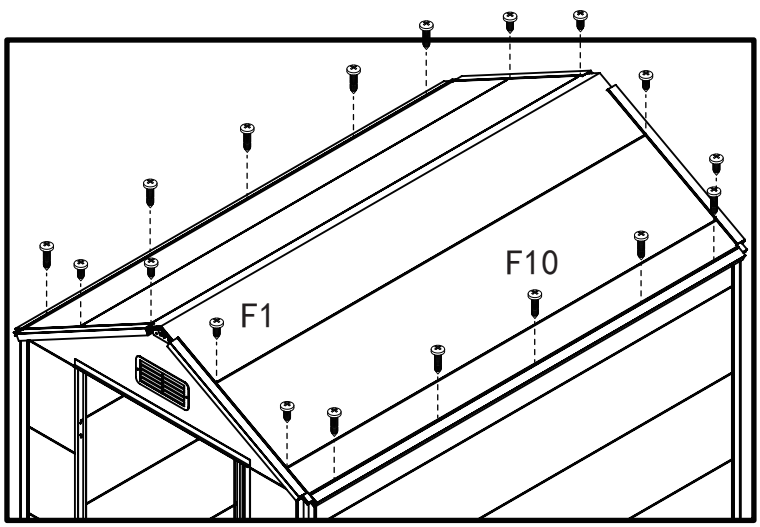


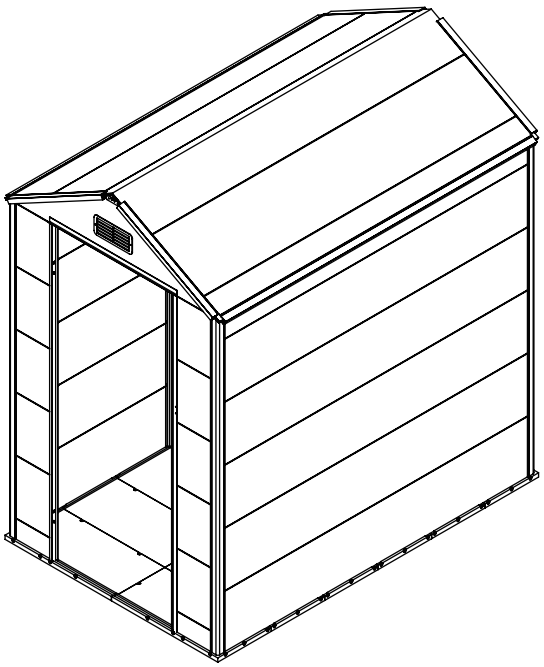


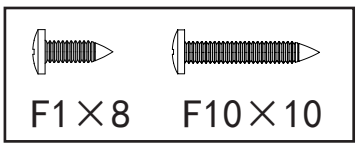


STEP 36

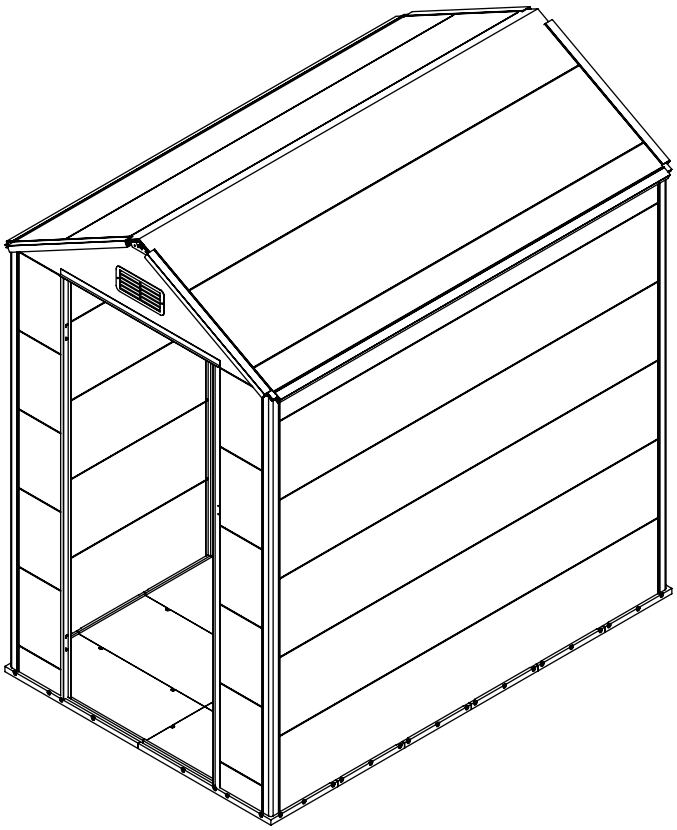


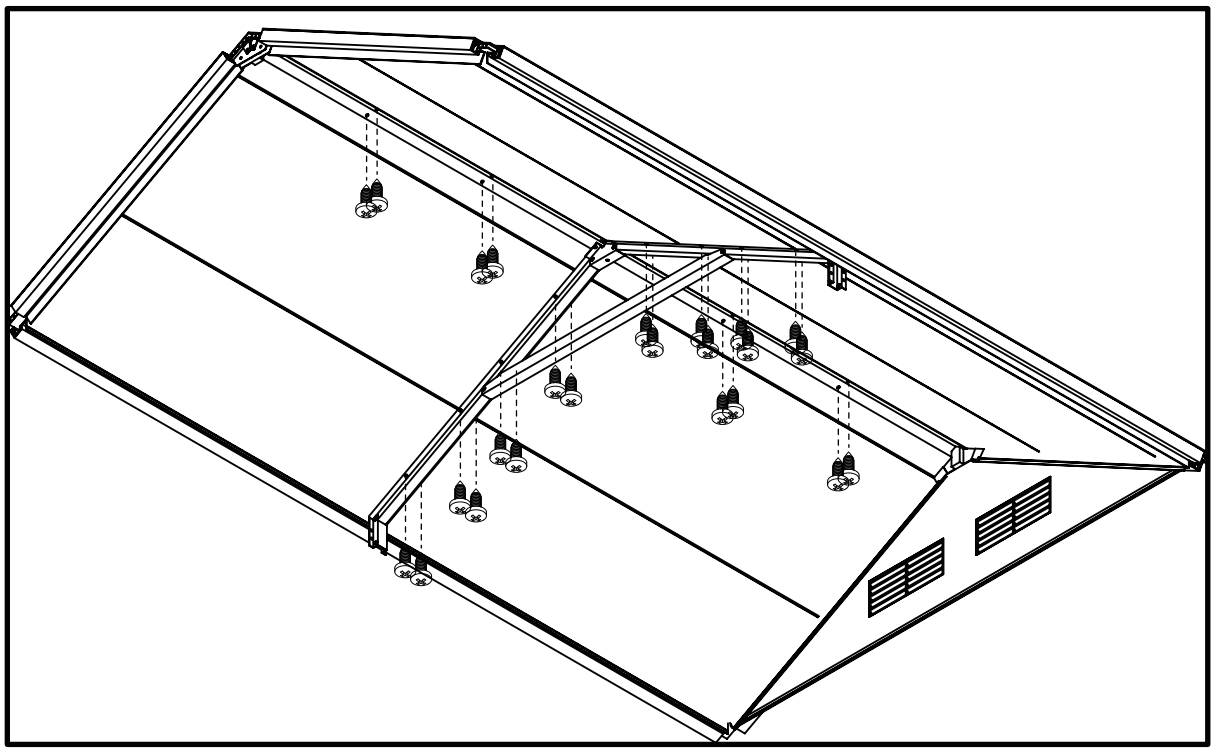


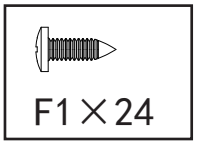


STEP 37

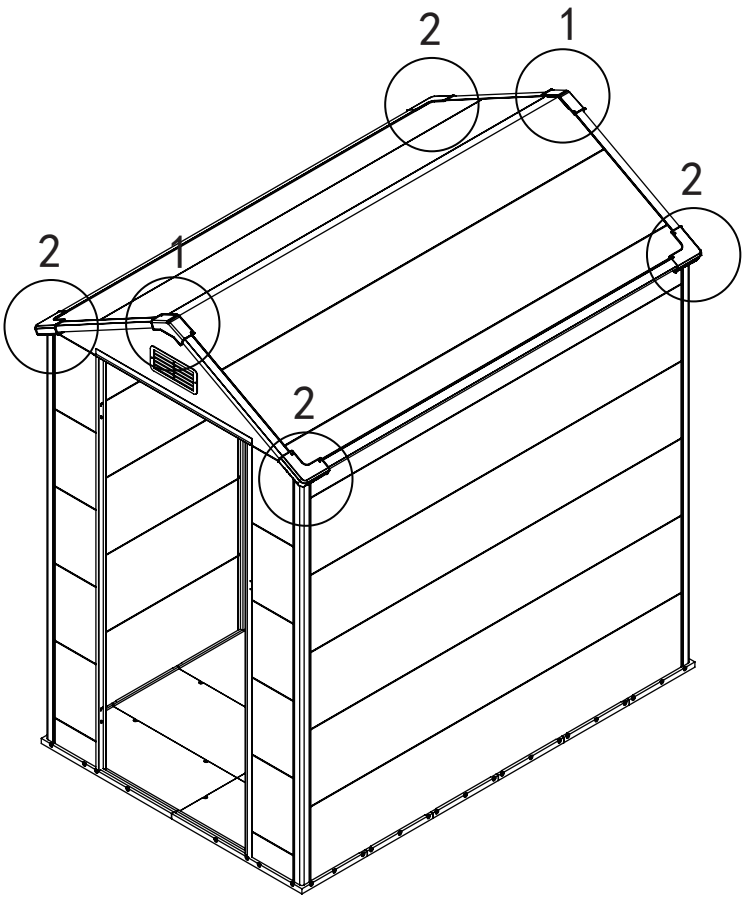

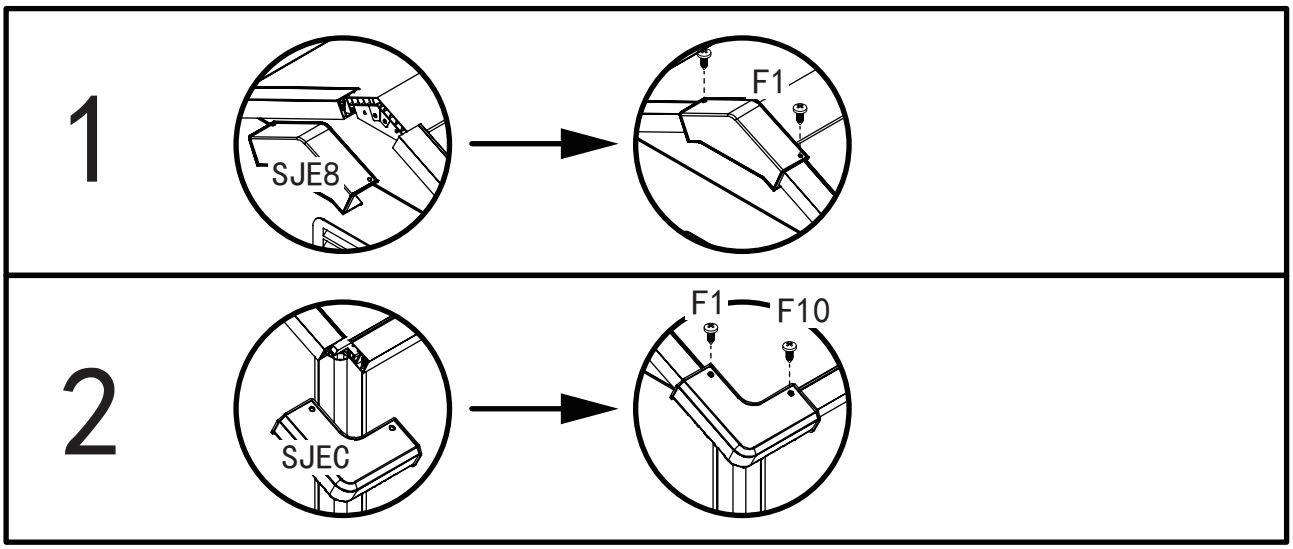


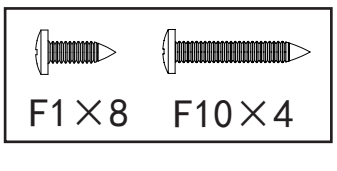


STEP 38

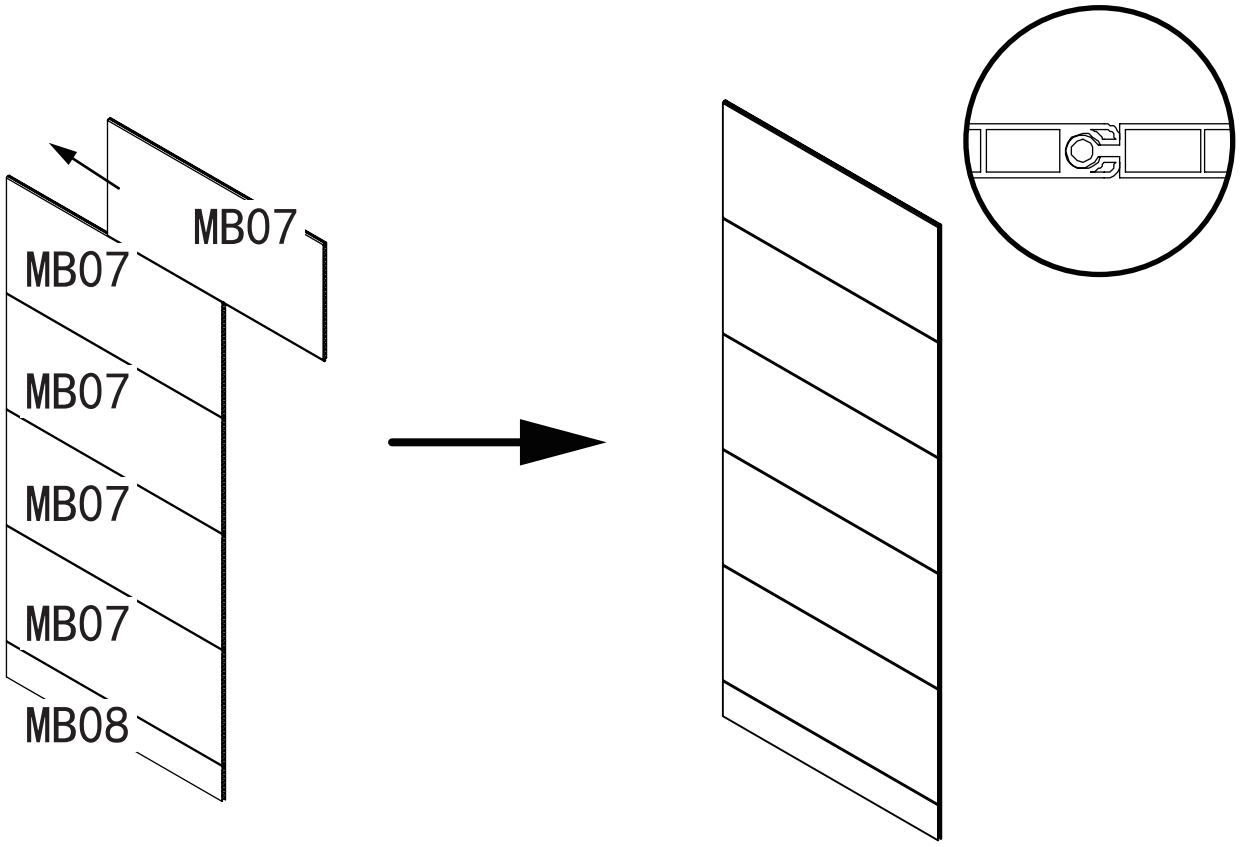



STEP 39

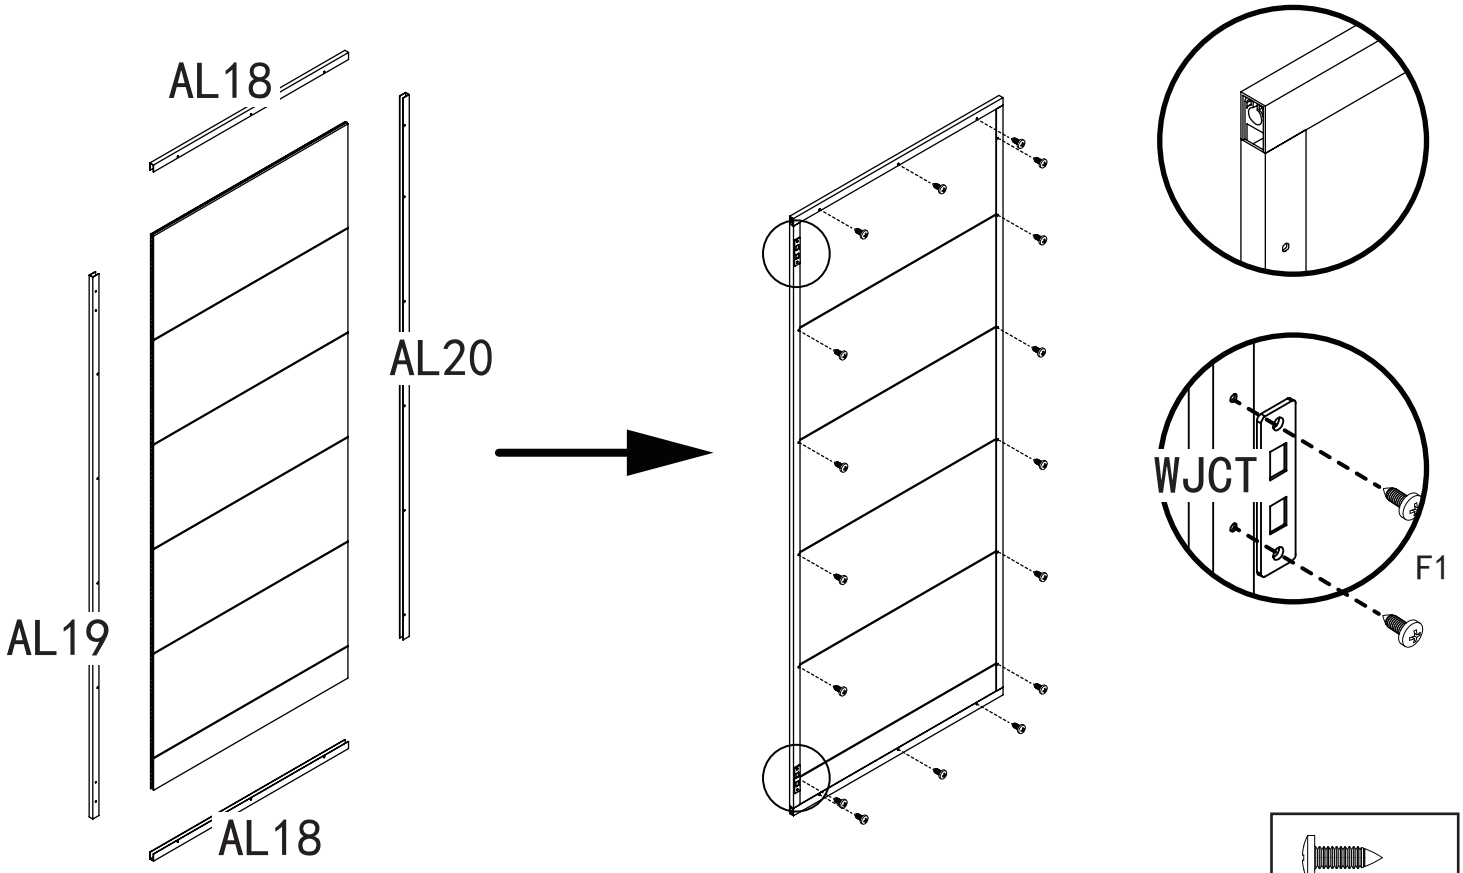


STEP 40

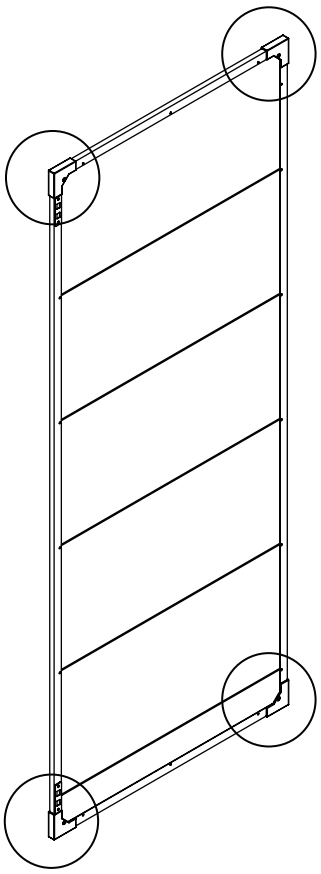


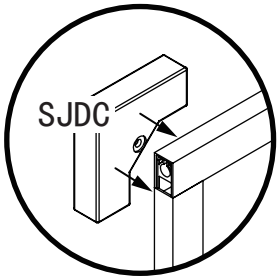

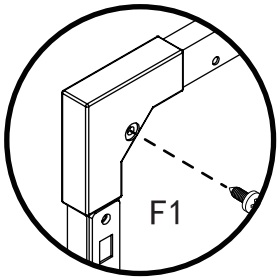


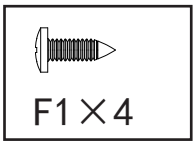


STEP 41

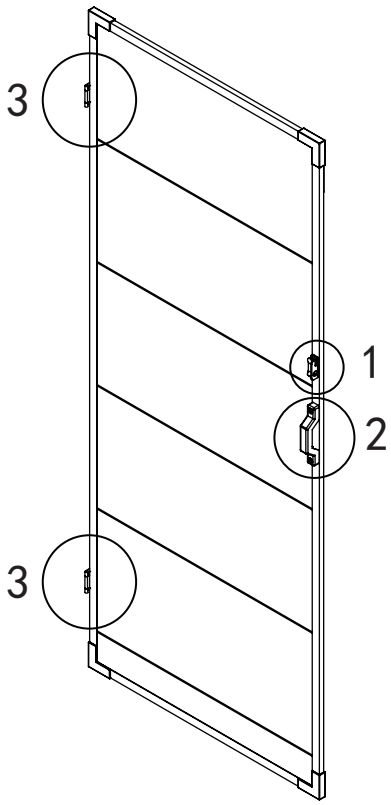


1

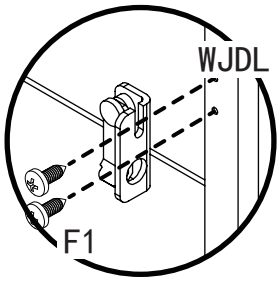


2

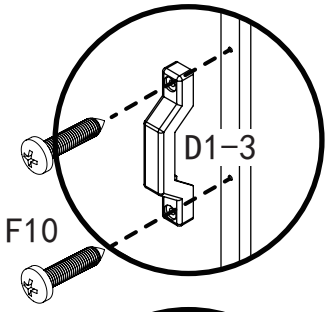


3

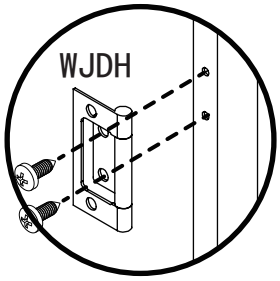


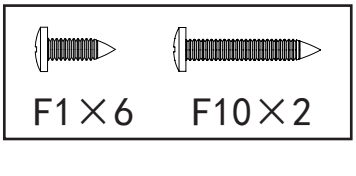


STEP 42

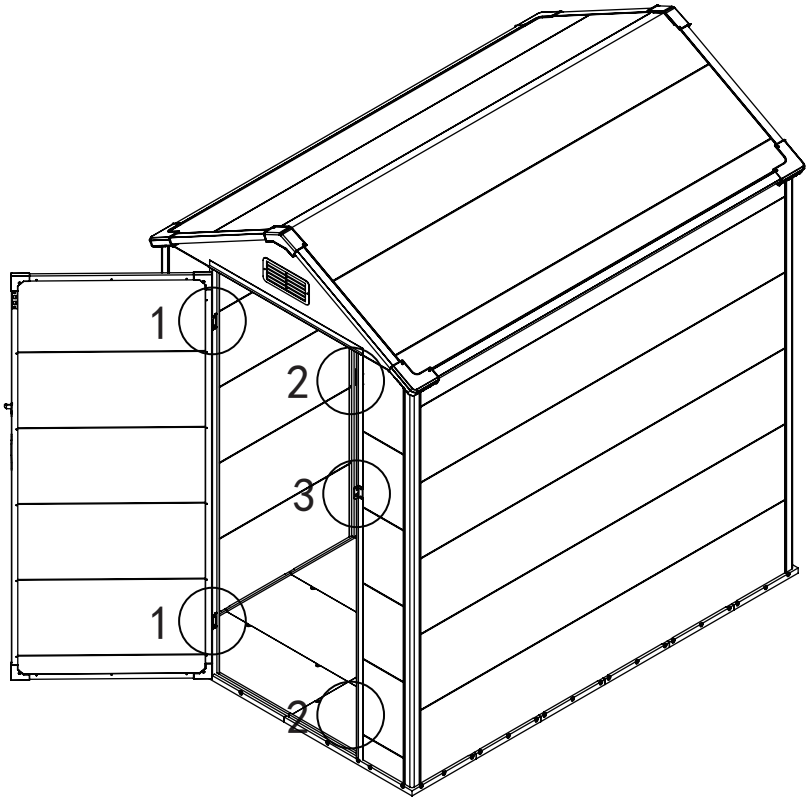


1

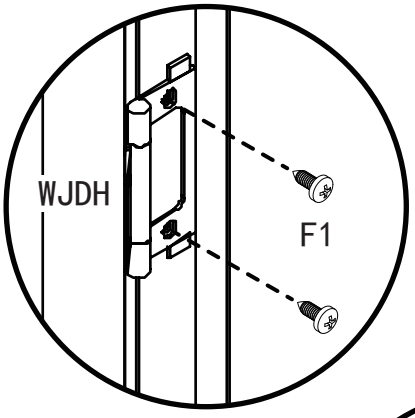


2

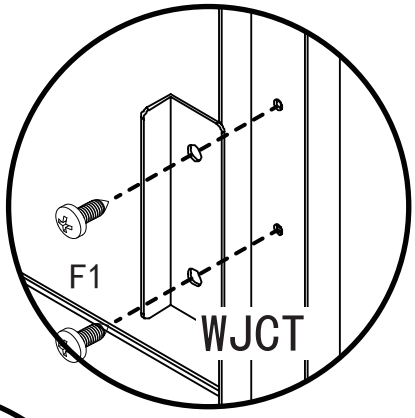


3

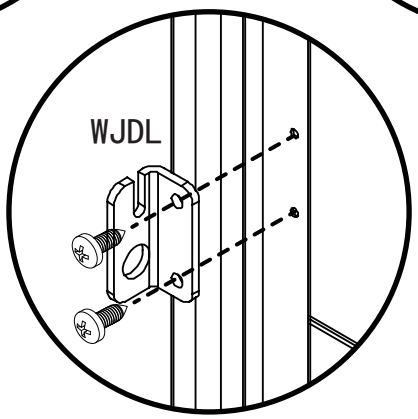

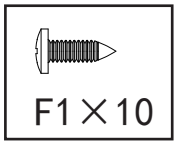

STEP 42

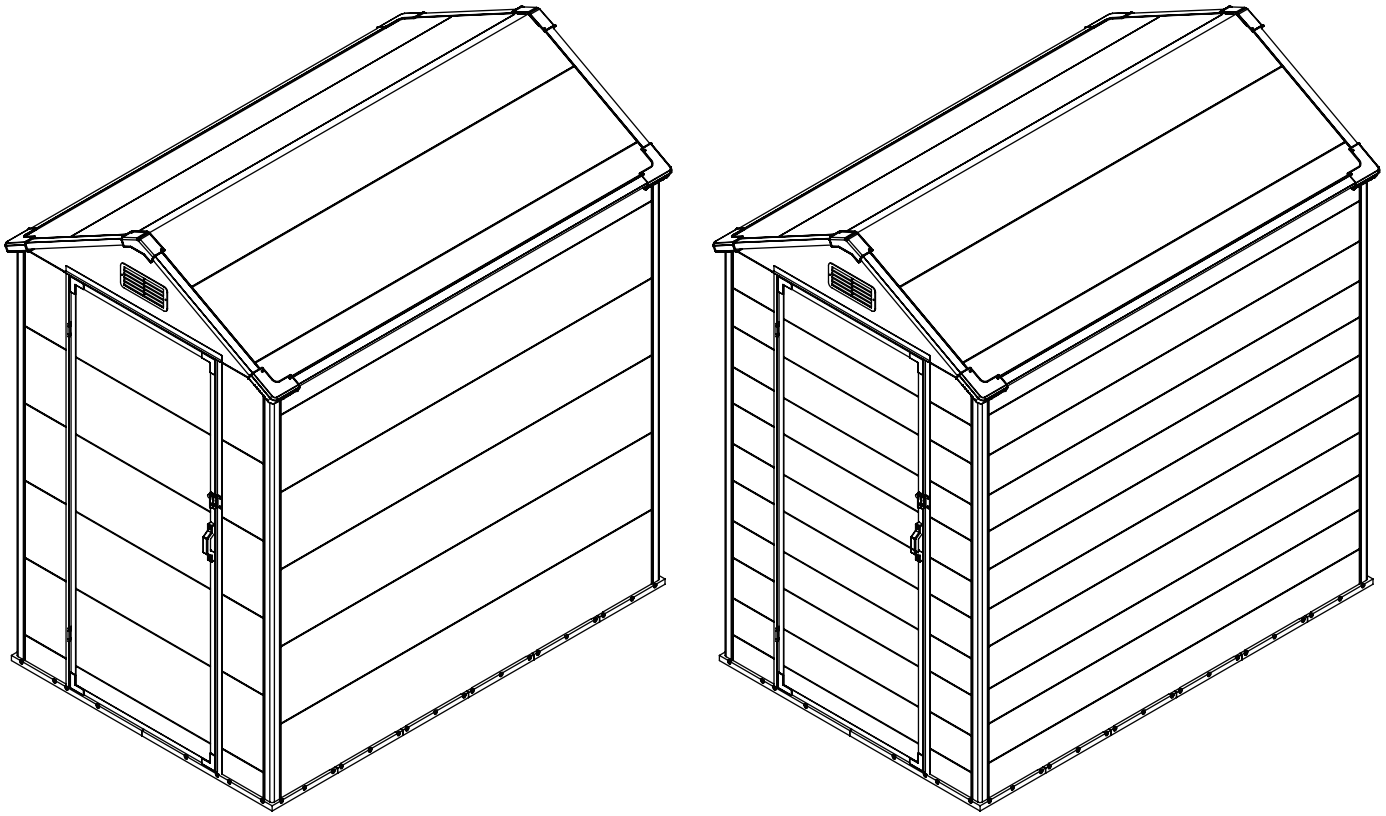

Our wall panels have a flat wood grain effect on one side and a grooved design on the other. After receiving the product, please find the wall panel according to the instructions and install it to your liking. We hope you like our product design. Thank you for choosing us.