



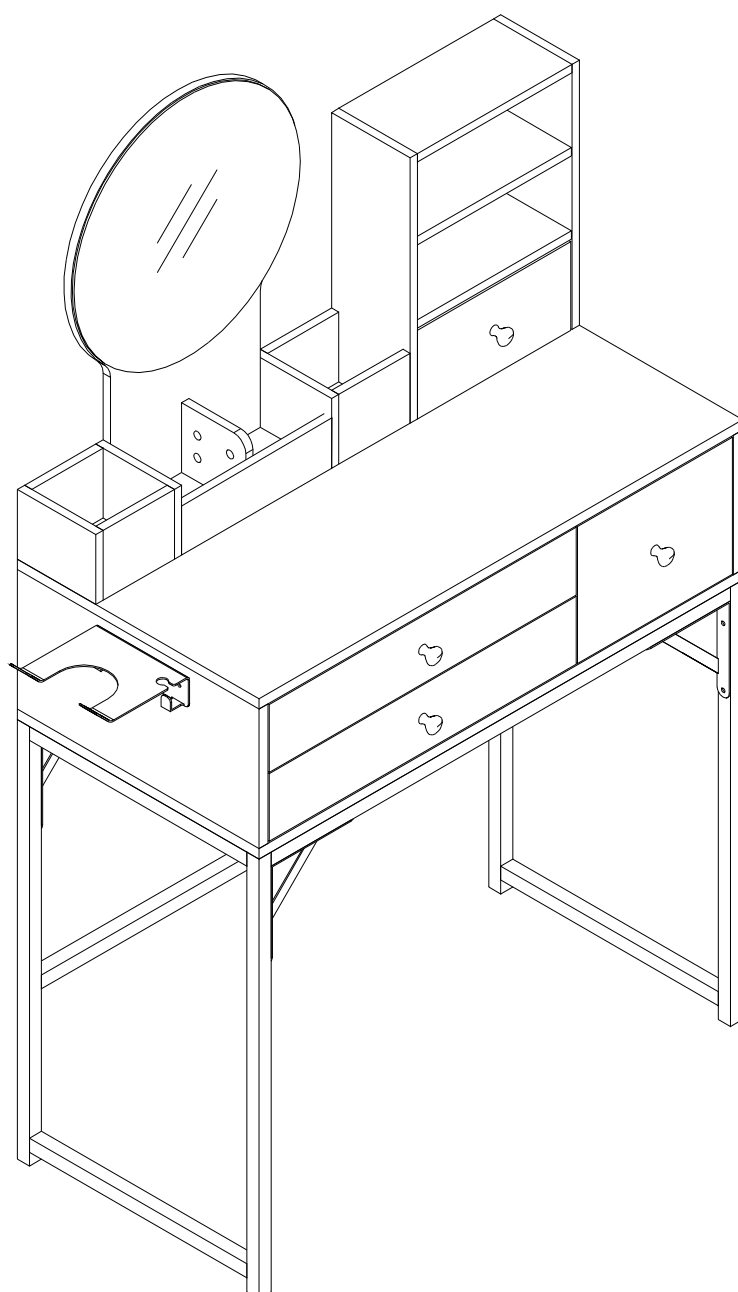

ASSEMBLY INSTRUCTION

KIND REMINDER

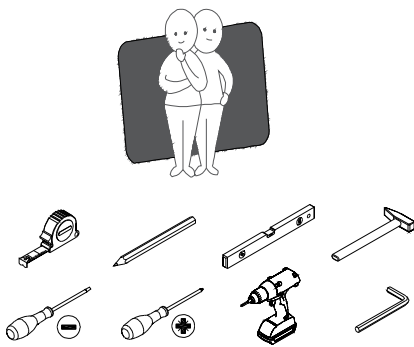





Two persons and
tools required for
assembly




Wipe with dry cloths

HARDWARE


A	x84	B	x84	C	x16		
 M6*35mm		 φ15*12mm		 φ4*35mm			
D	x32	E	x14	F	x16		
 φ3.5*12mm		 M6*30mm		 M6*20mm			
G	x4	H	x4	I	x8		
 M4*16mm							
J	x3	K	x1	L	x1		
							
M	x1						
							

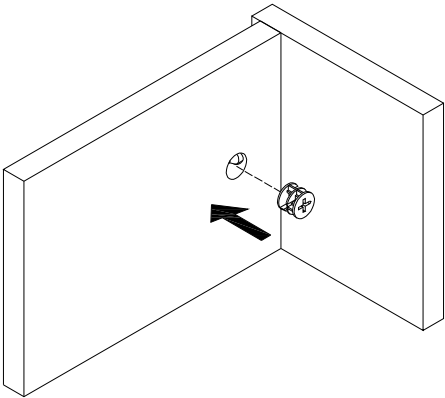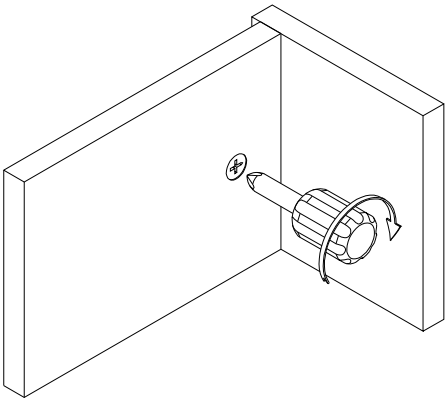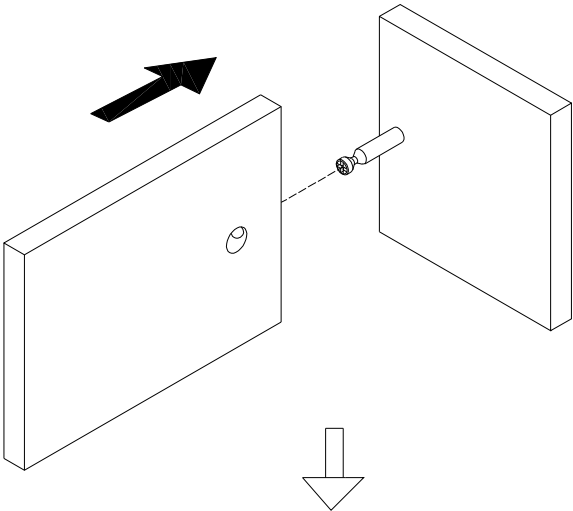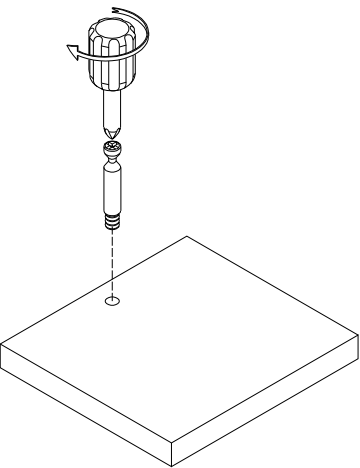

PARTS

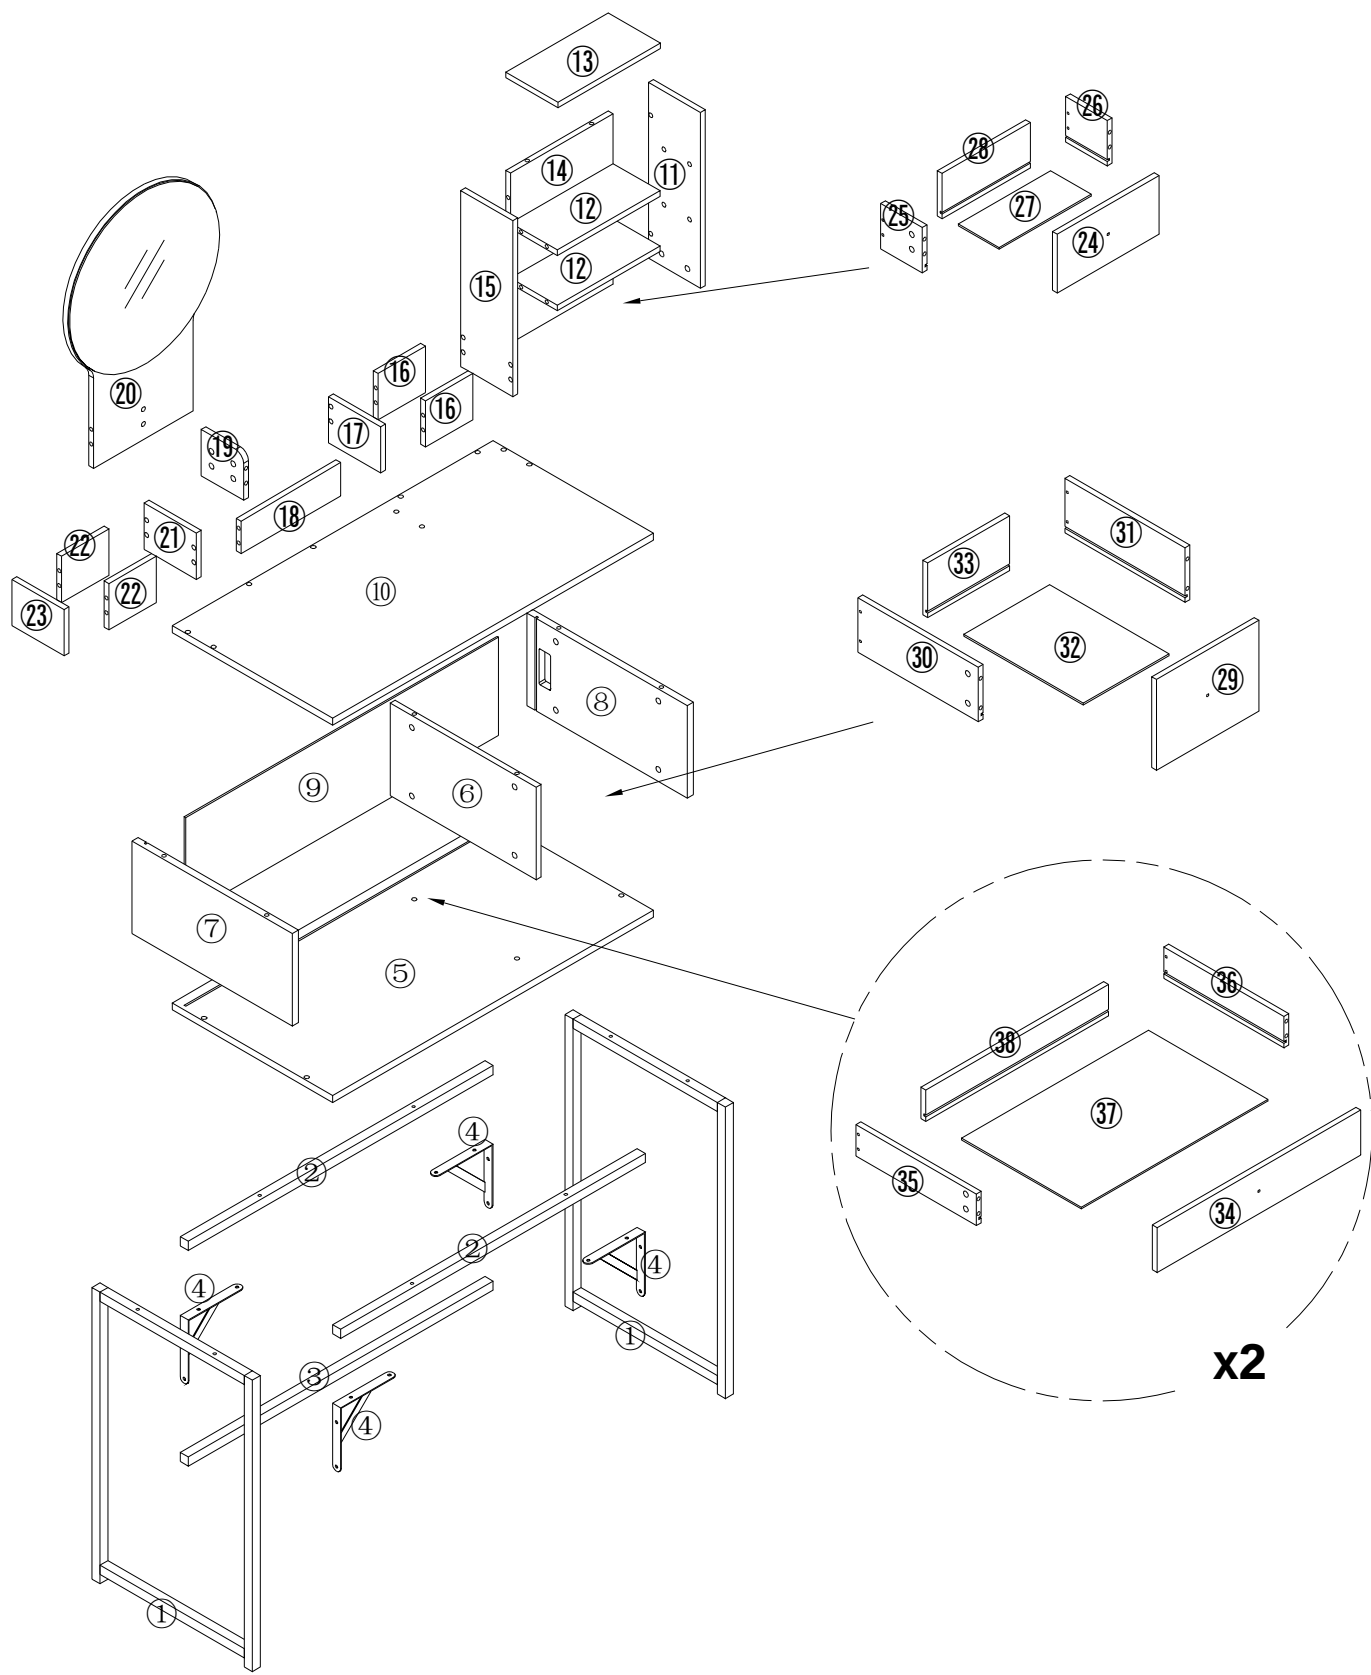


Step1

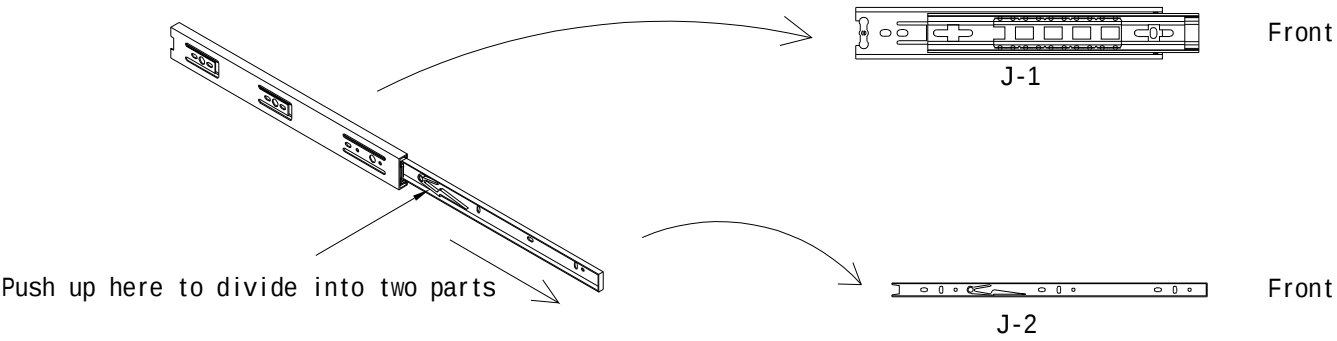


Step2

Please install the drawer in this step and check that the drawer is installed correctly before proceeding to the next step of installation.

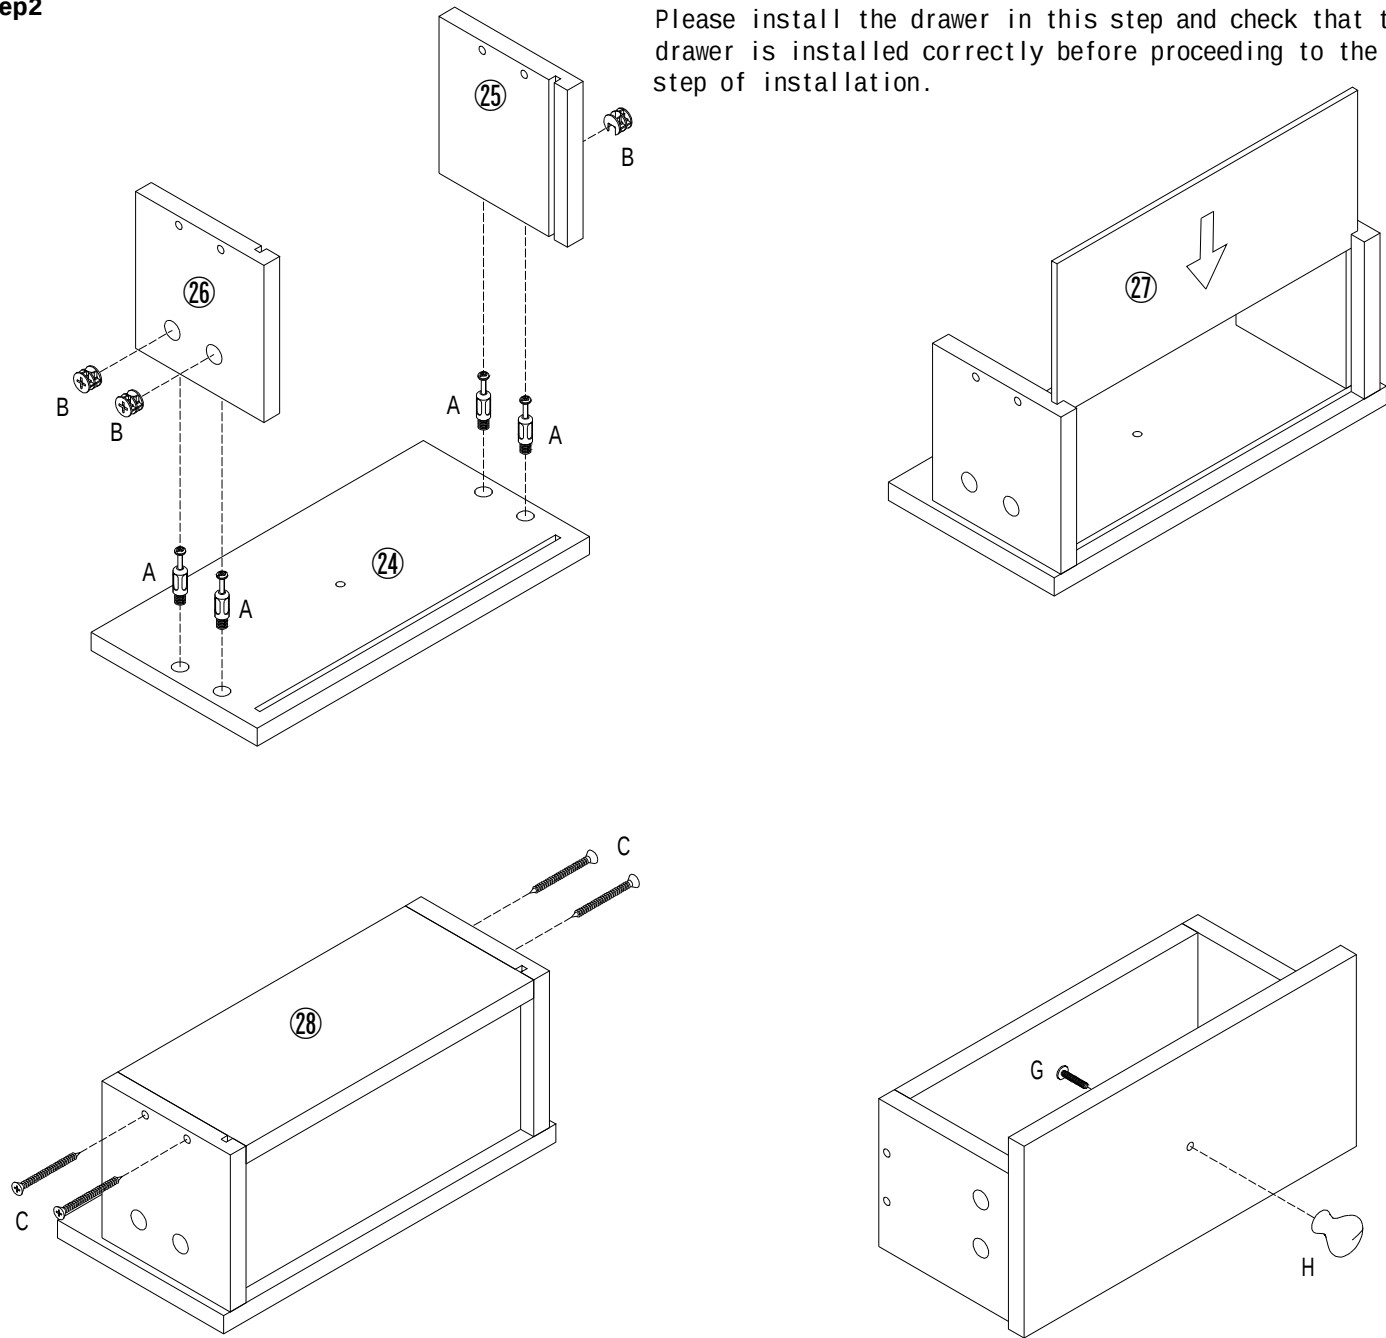


A	x4	B	x4	C	x4	G	x1	H	x1
									
M6*35mm		φ15*12mm		φ4*35mm		M4*16mm			

Step3

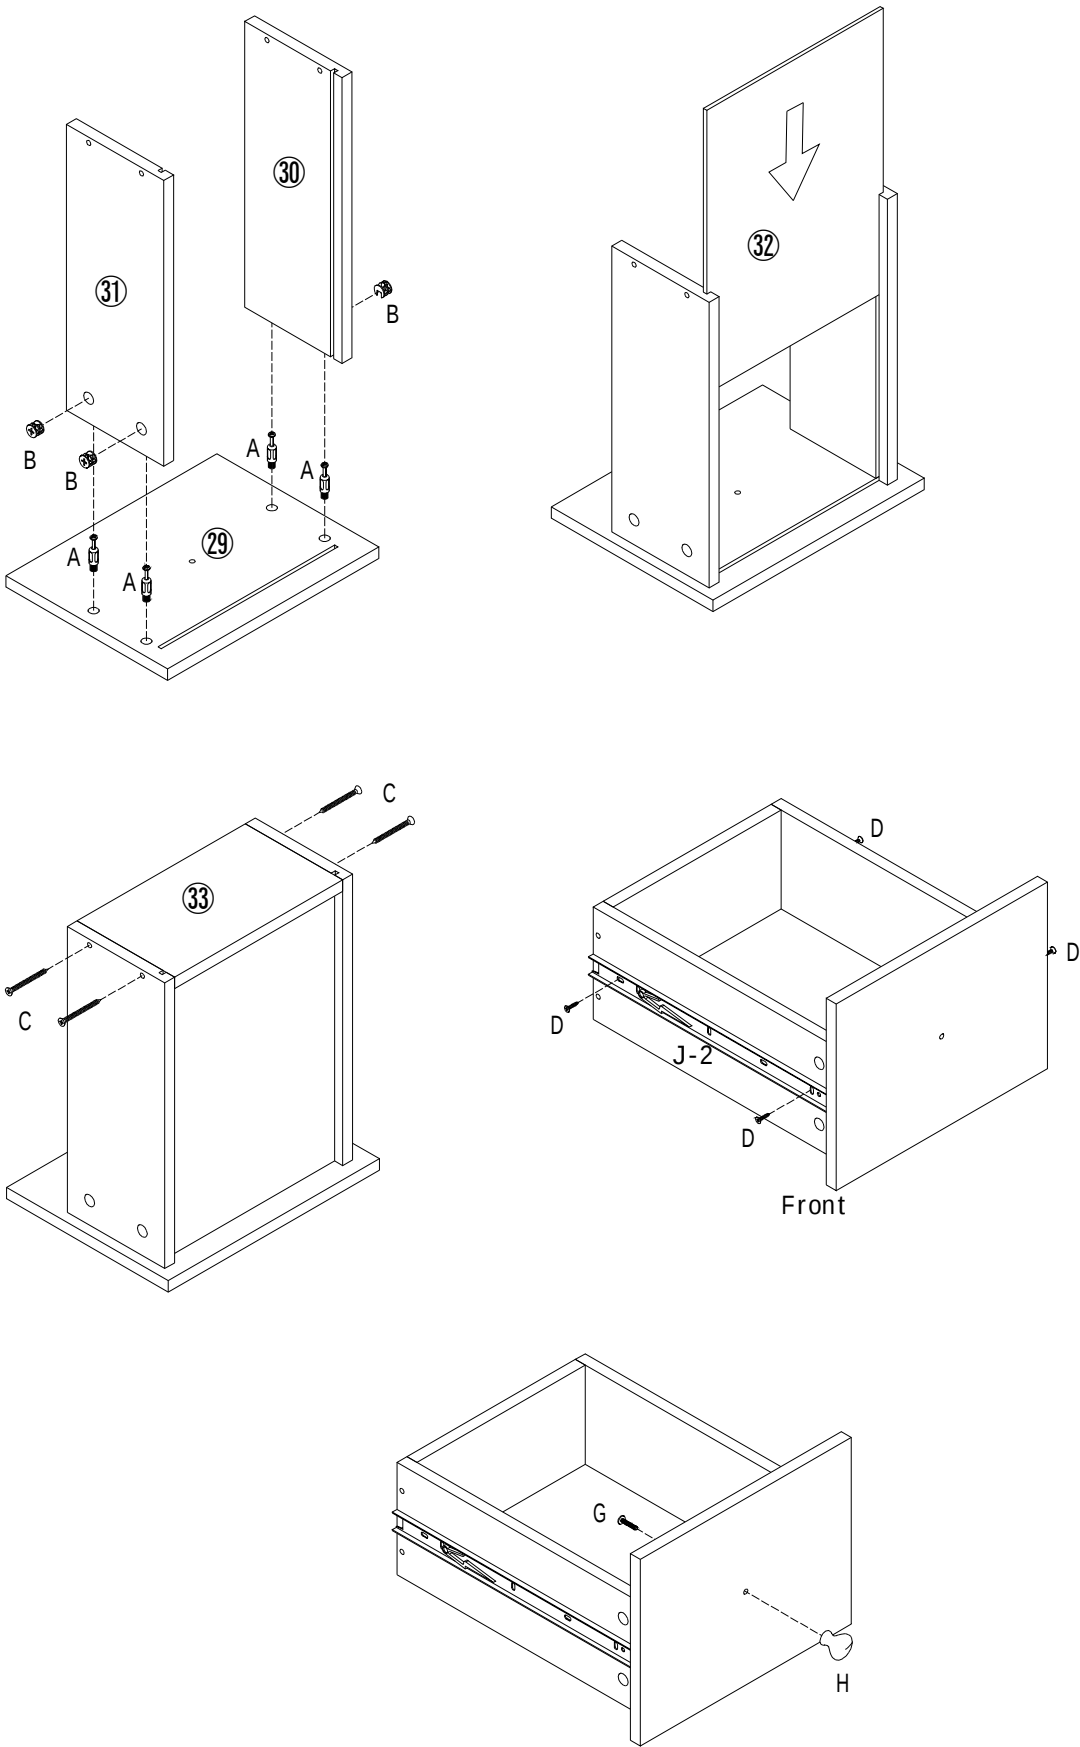


A	x4	B	x4	C	x4	D	x4	G	x1	H	x1	J-2	x1
													
M6*35mm		φ15*12mm		φ4*35mm		φ3.5*12mm		M4*16mm					

Step4

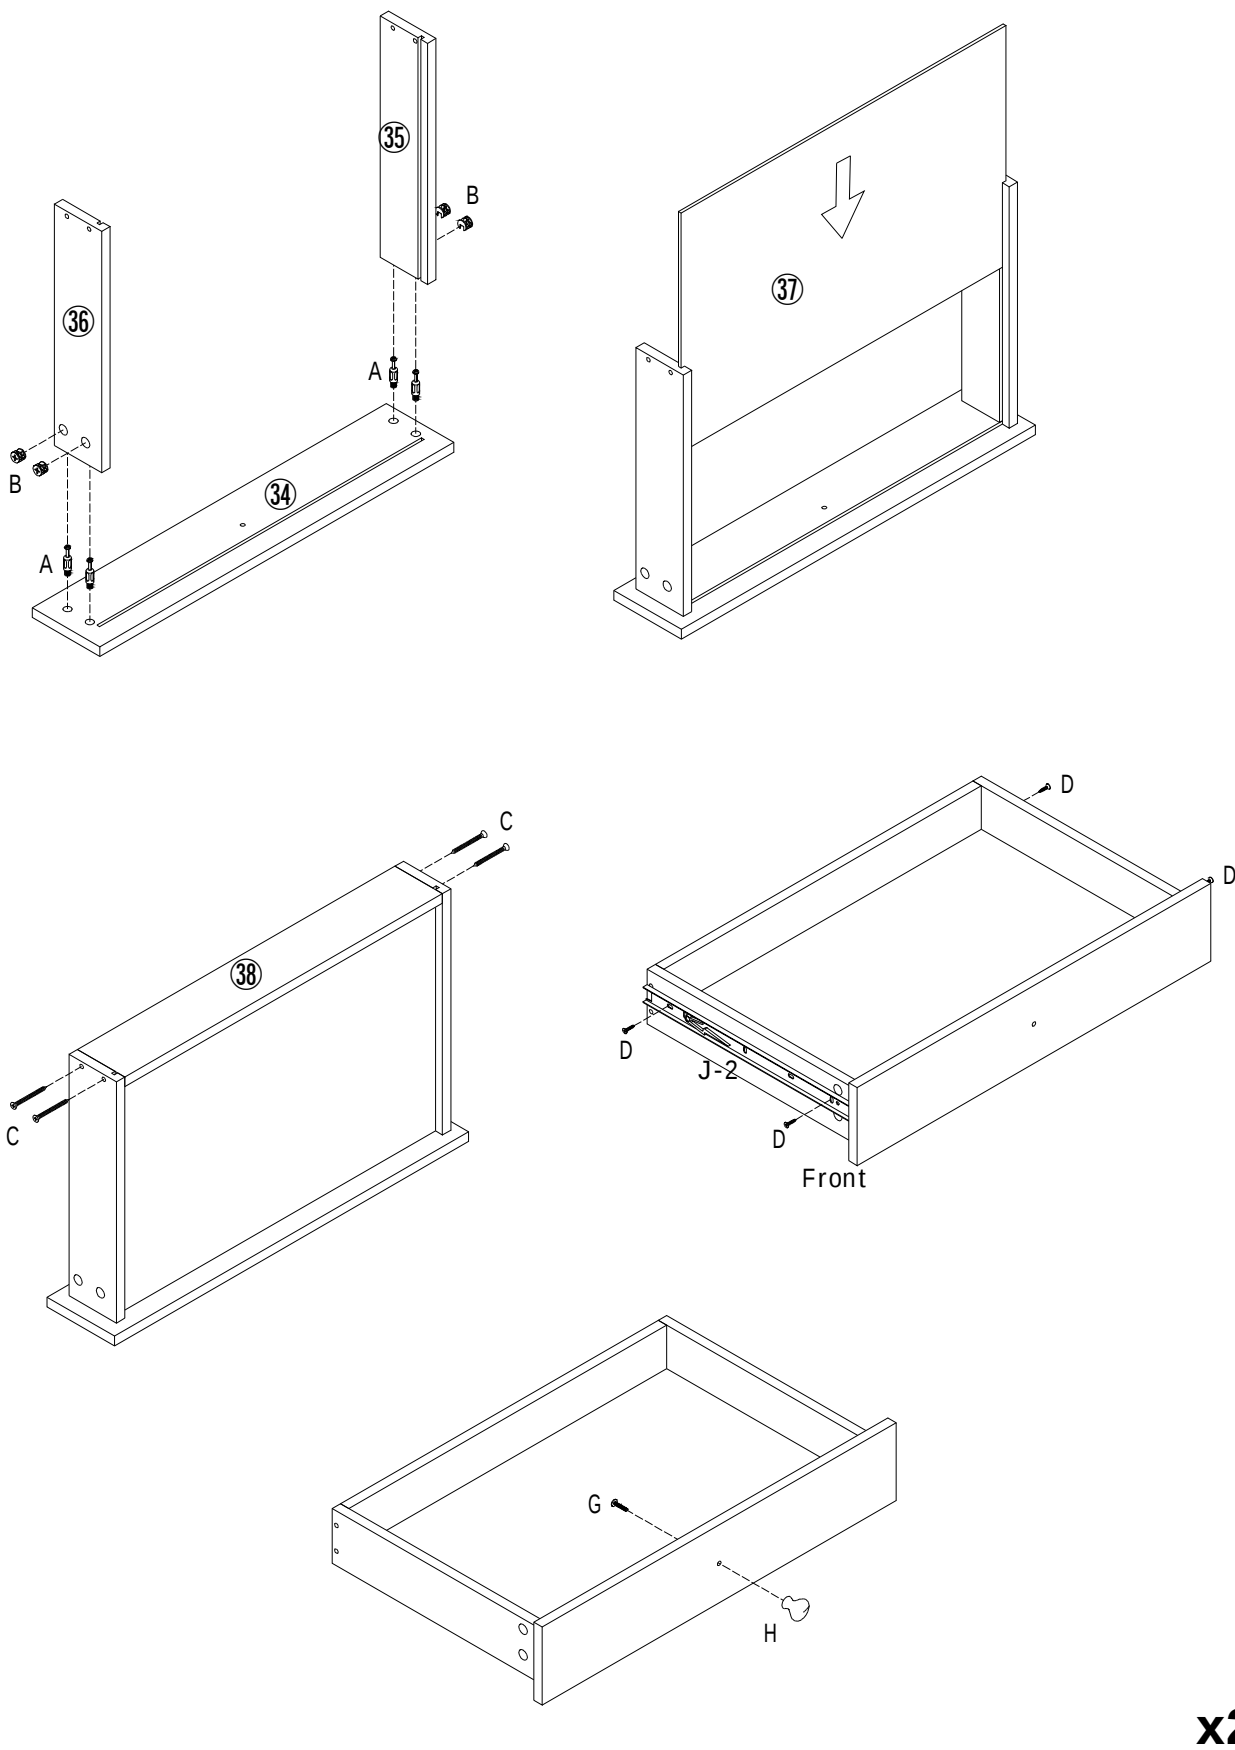


A	x8	B	x8	C	x8	D	x8	G	x2	H	x2	J-2	x2
													
M6*35mm		φ15*12mm		φ4*35mm		φ3.5*12mm		M4*16mm					

Step5

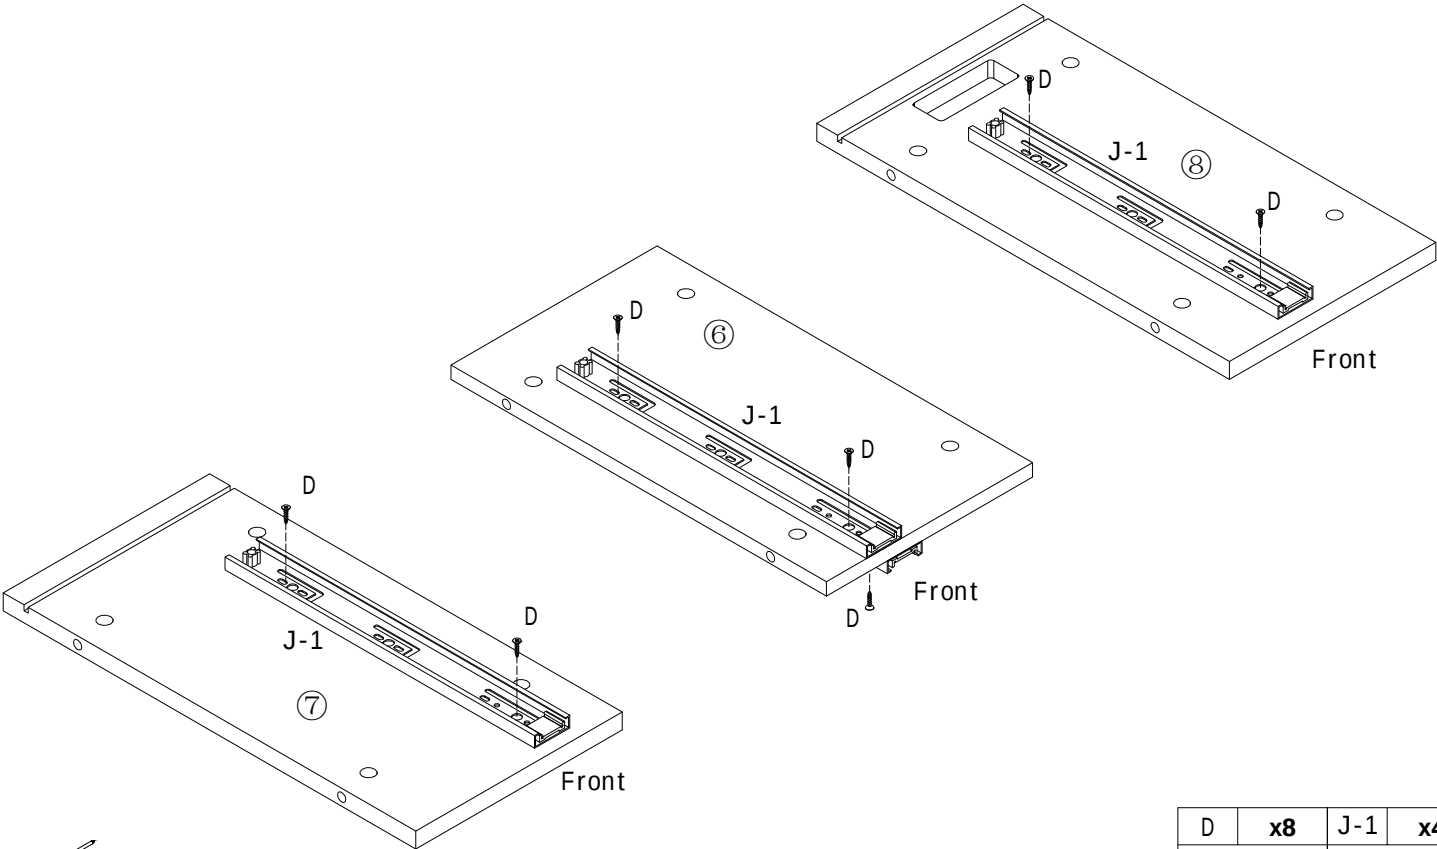


D	x8	J-1	x4
			
ø3.5*12mm			

Step6

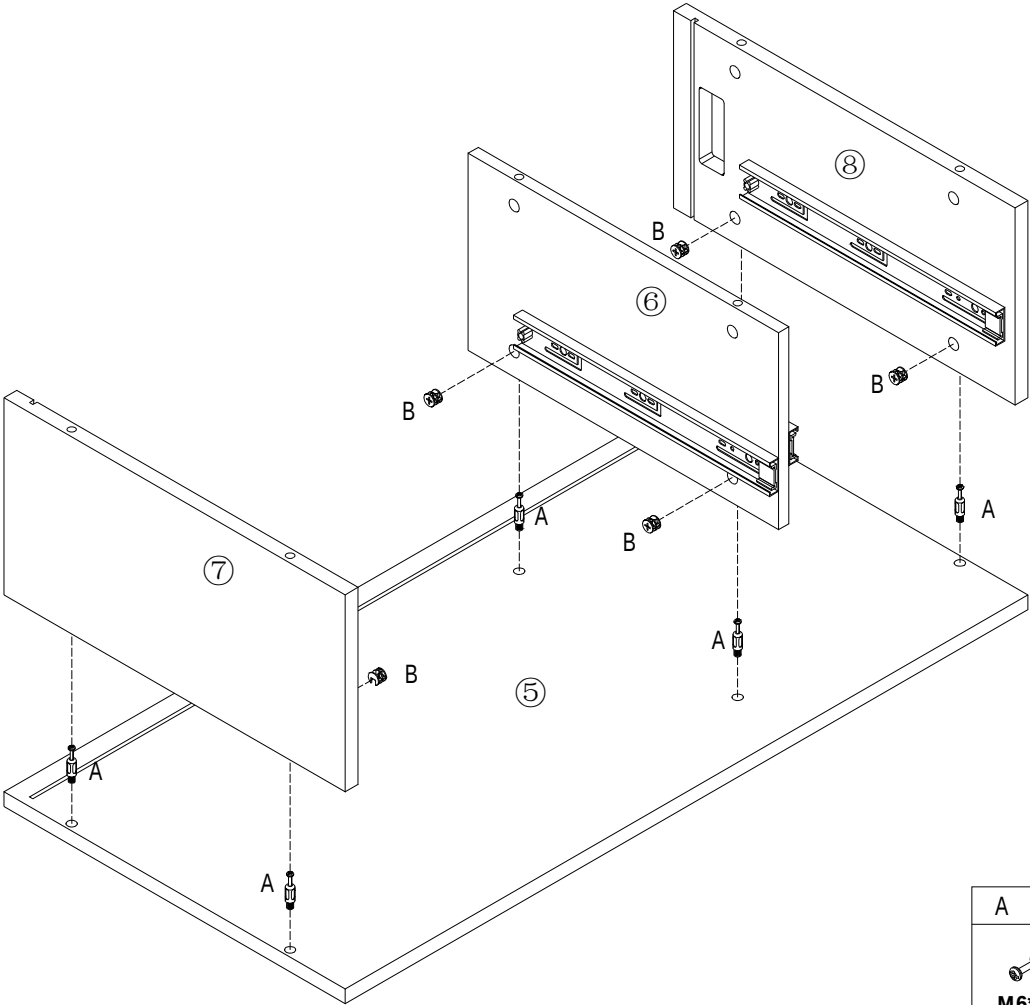


A	x6	B	x6
			
M6*35mm		ø15*12mm	

Step7

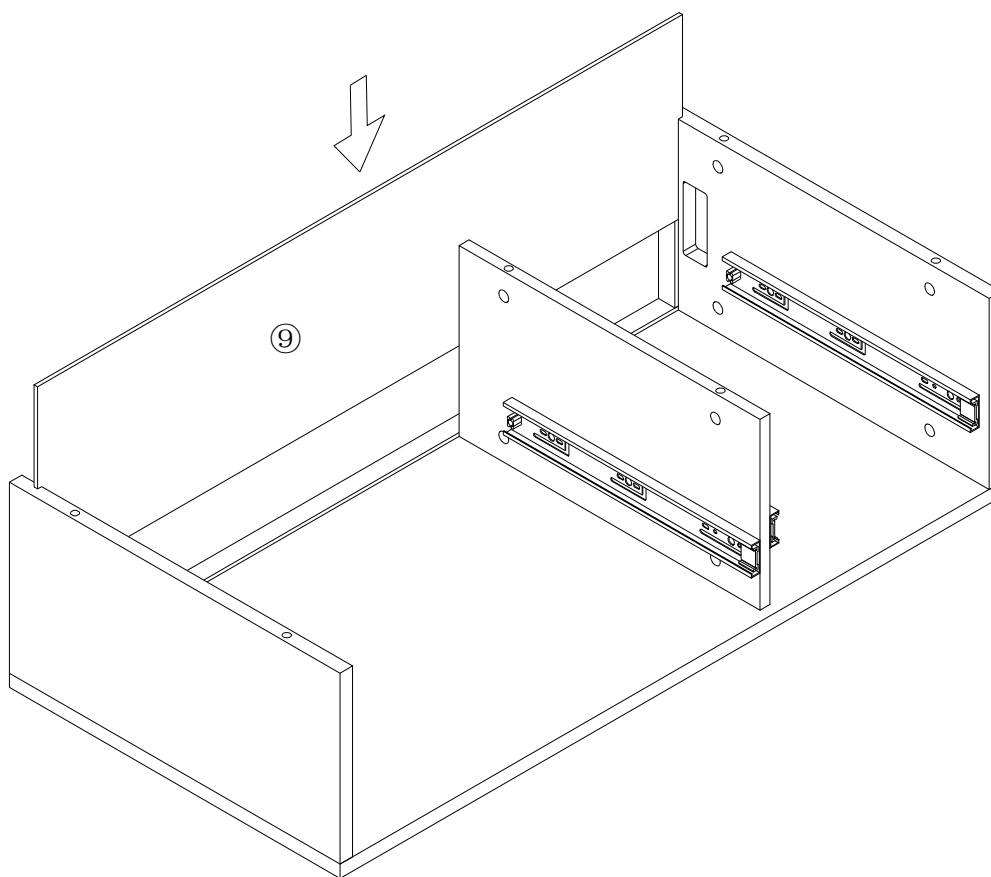


Step8

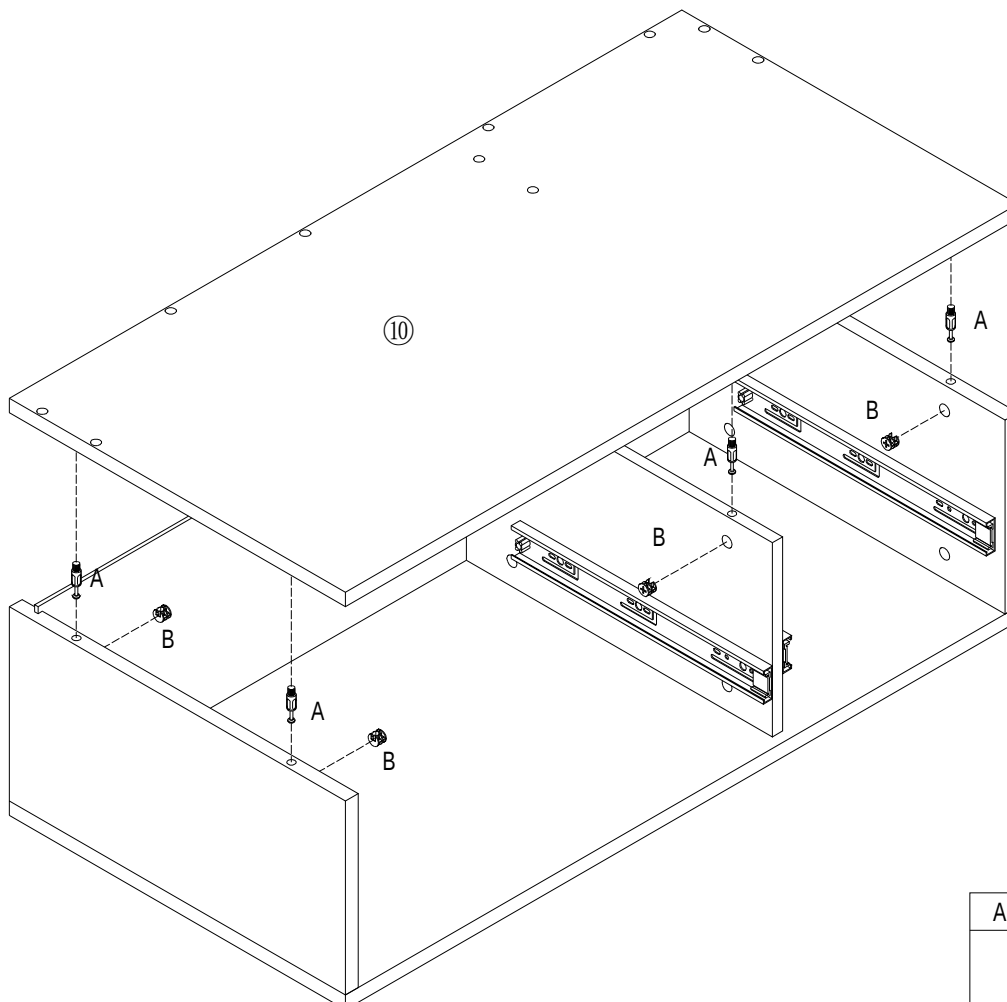


A	x6	B	x6
			
M6*35mm		Ø15*12mm	

Step9

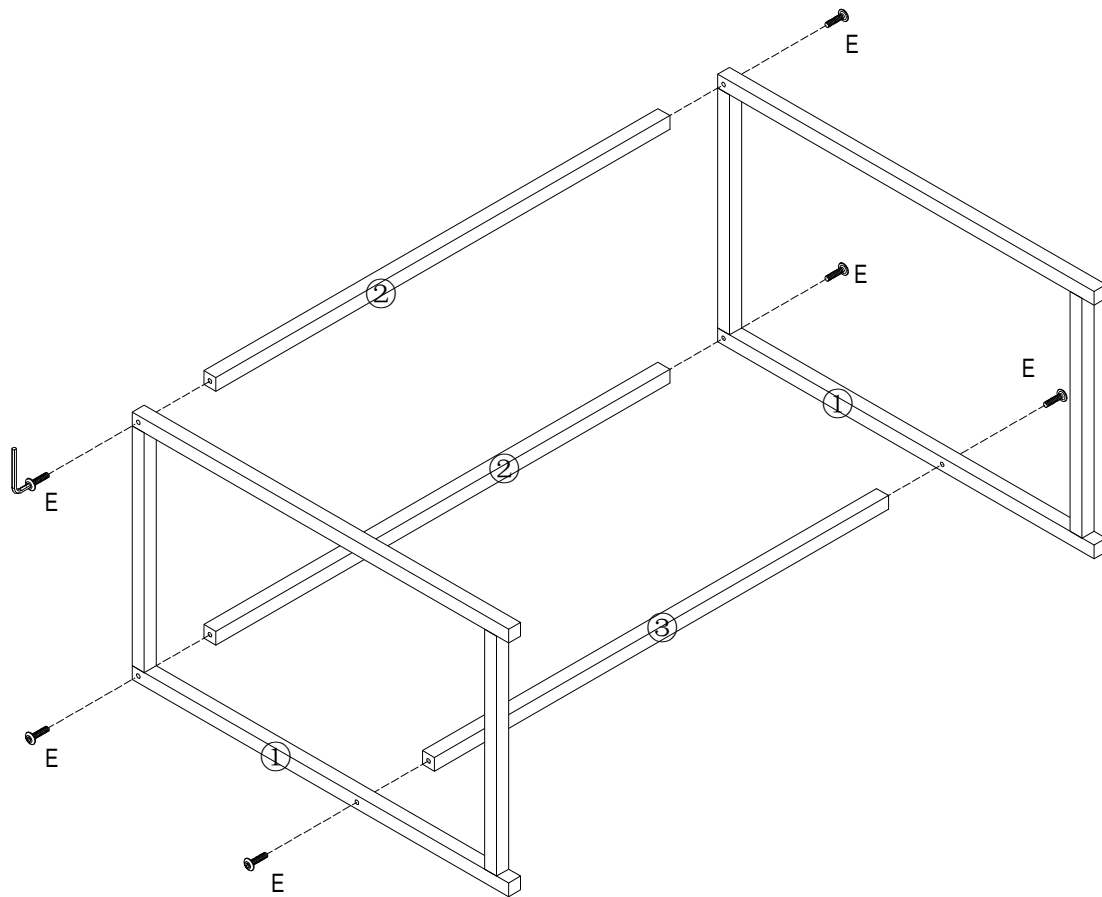


E	x6
 M6*30mm	

Step10

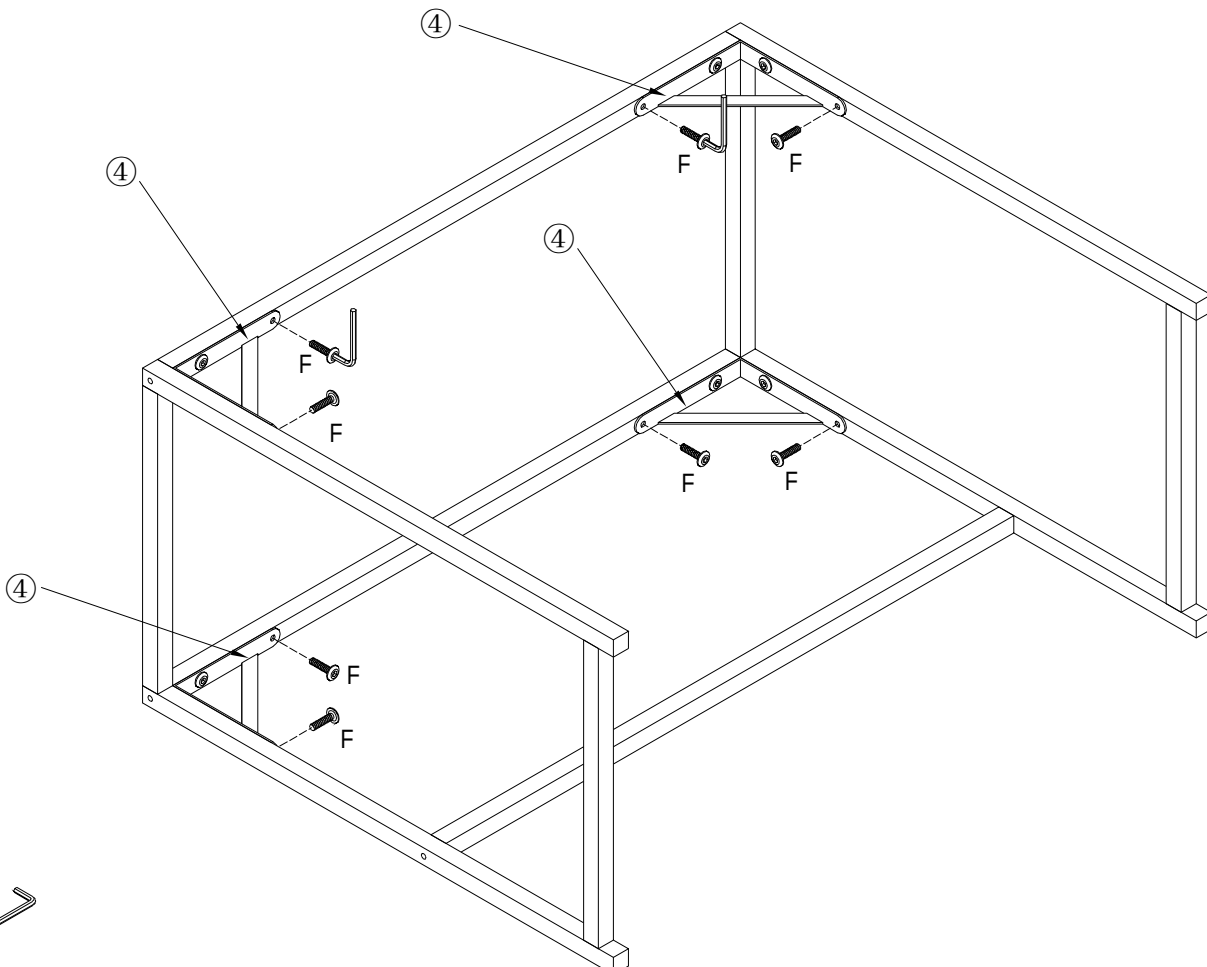


F	x16
 M6*20mm	

Step11

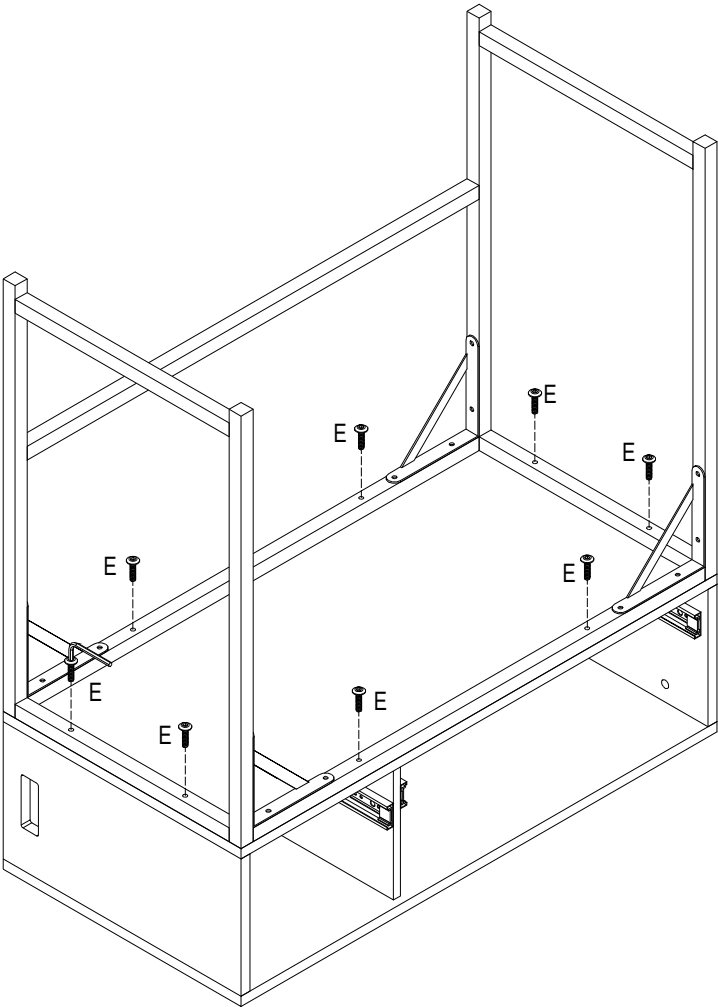


E	x8
 M6*30mm	

Step12

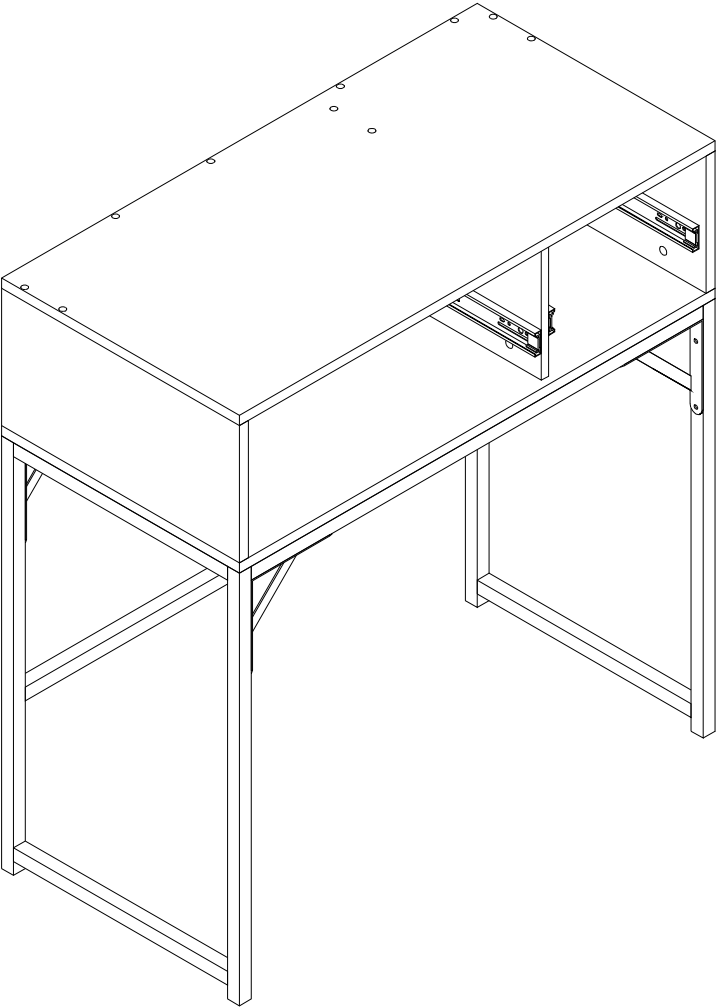


Step15

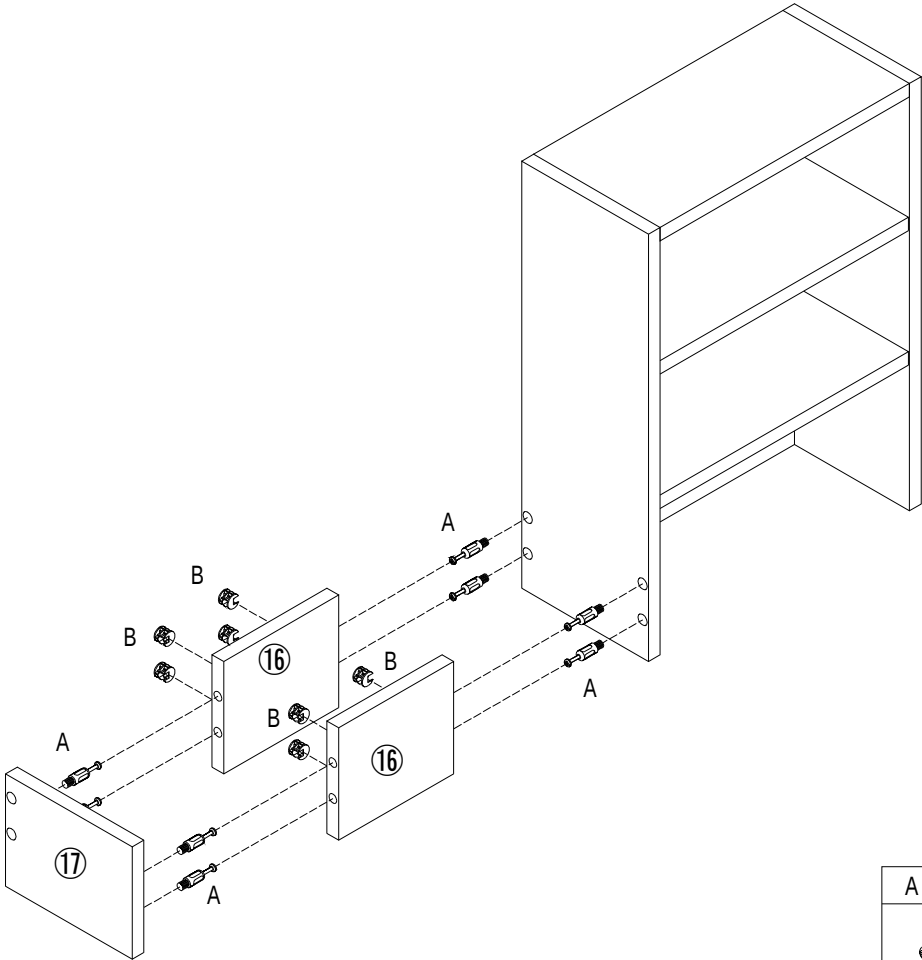


A	x8	B	x8
			
M6*35mm		ø15*12mm	

Step16

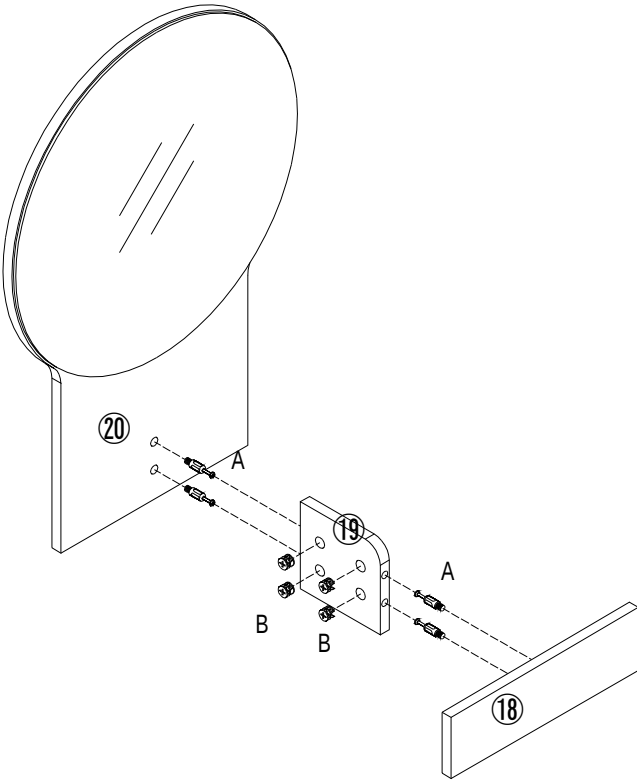


A	x4	B	x4
			
M6*35mm		ø15*12mm	

Step13

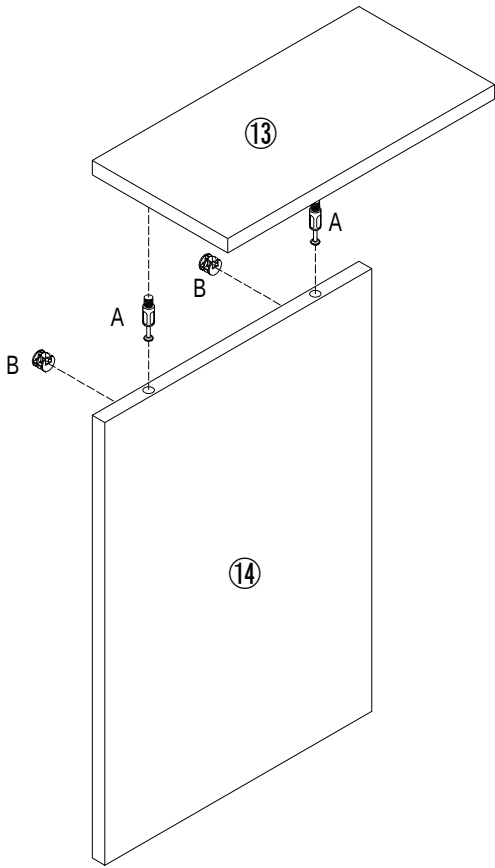


A	x2	B	x2
			
M6*35mm		ø15*12mm	

Step14

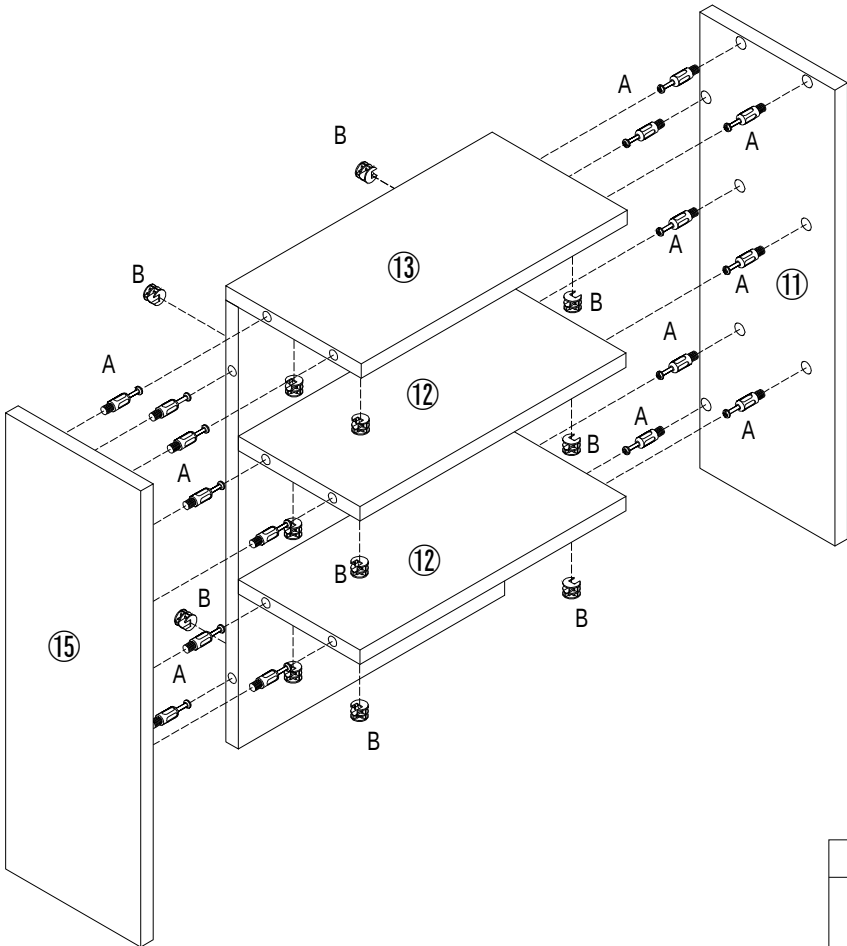


A	x16	B	x16
			
M6*35mm		ø15*12mm	

Step17

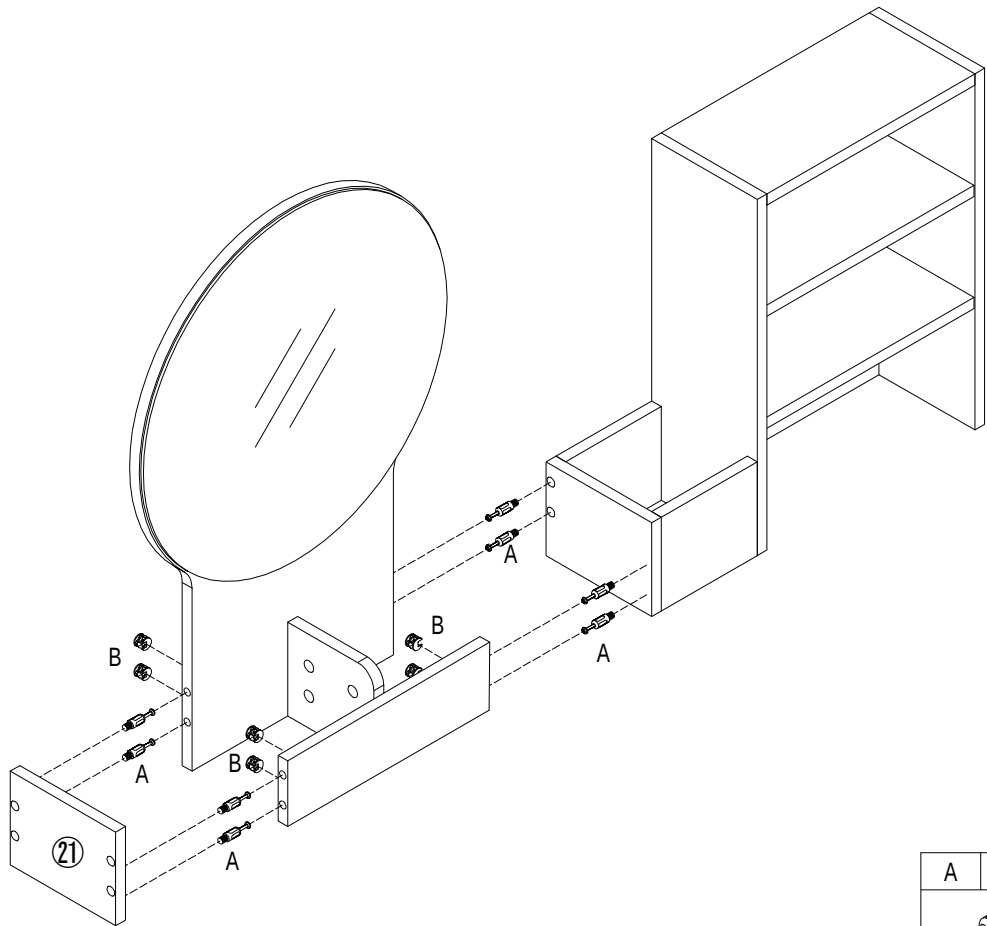


A	x8	B	x8
			
M6*35mm		Ø15*12mm	

Step18

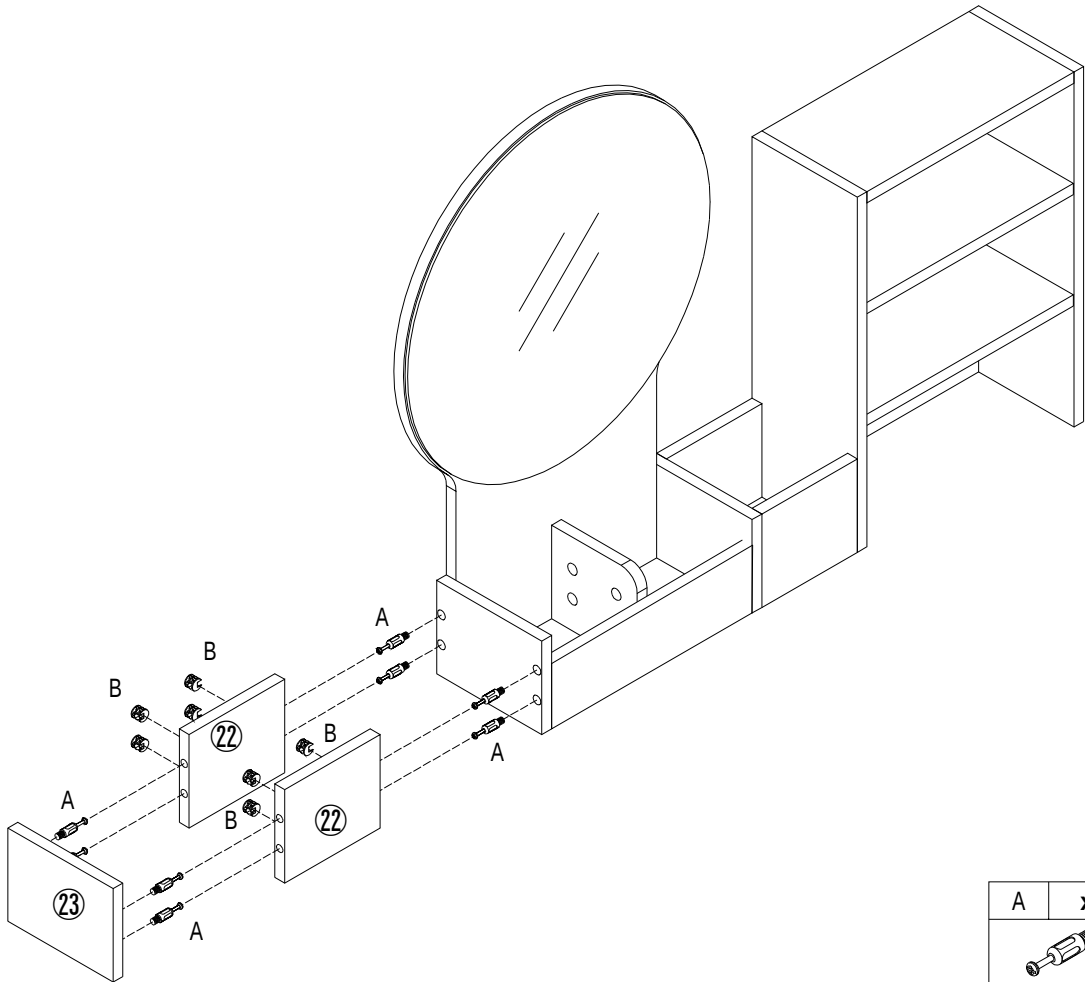


A	x8	B	x8
			
M6*35mm		Ø15*12mm	

Step19

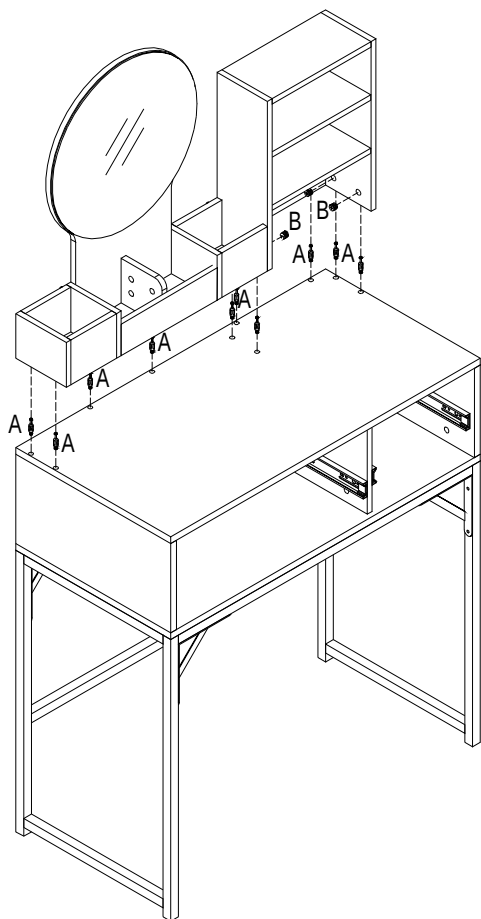


A	x10	B	x10
			
M6*35mm		Ø15*12mm	

Step20

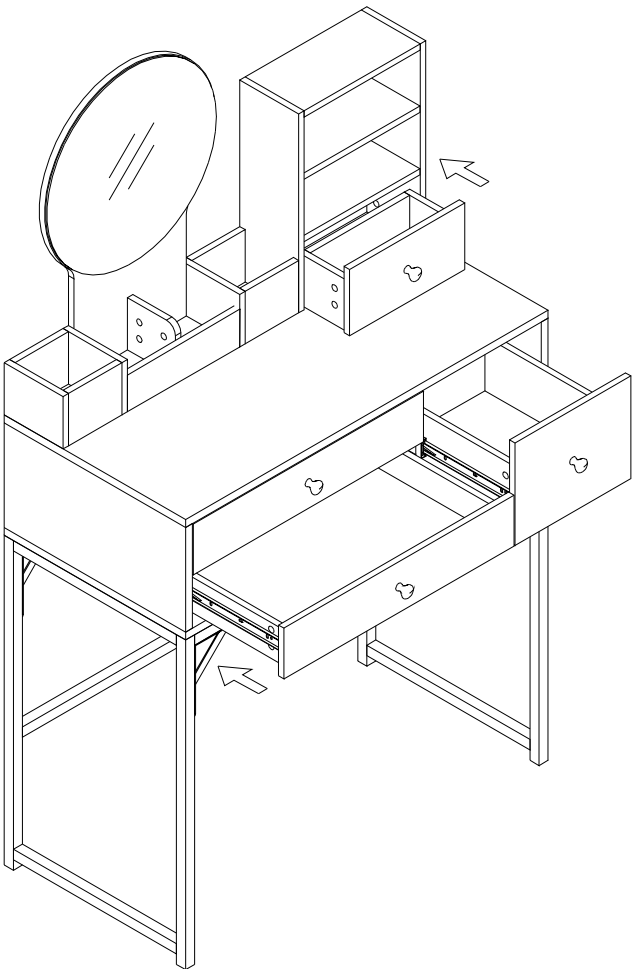

Step21

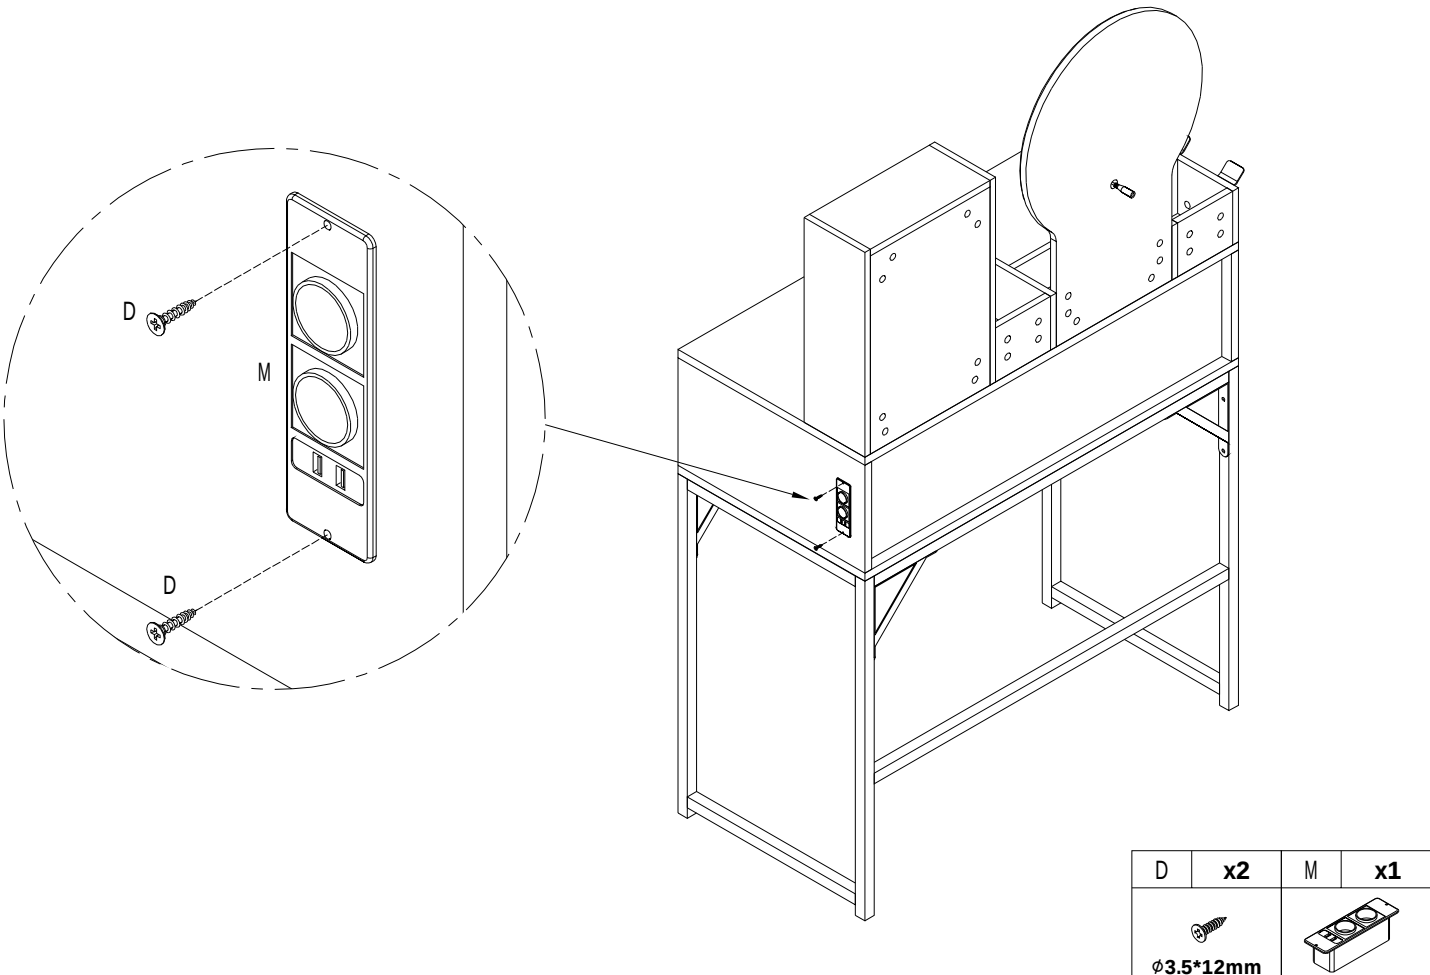

Step22

