



Singer Bathroom Vanity








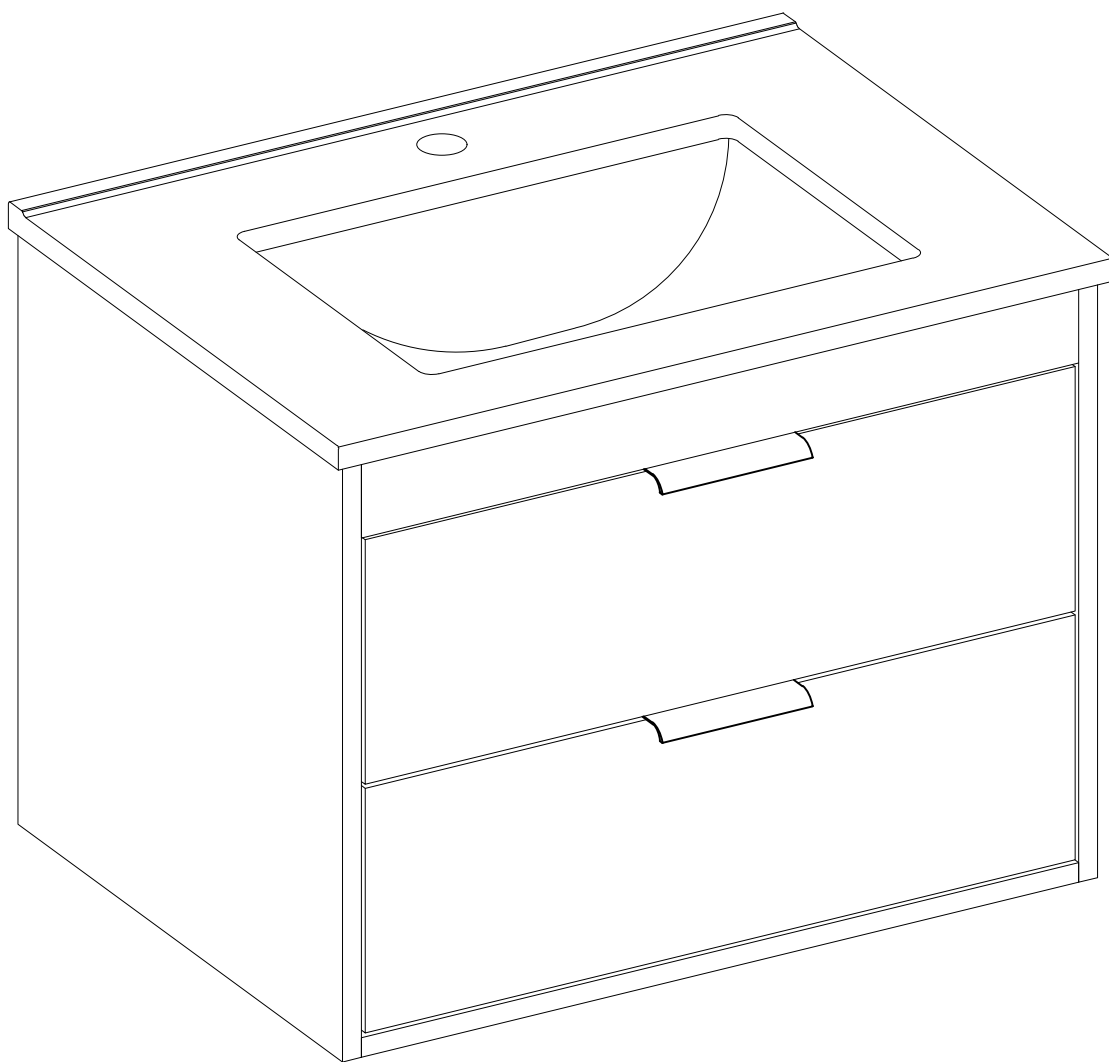


PACKAGE CONTENTS

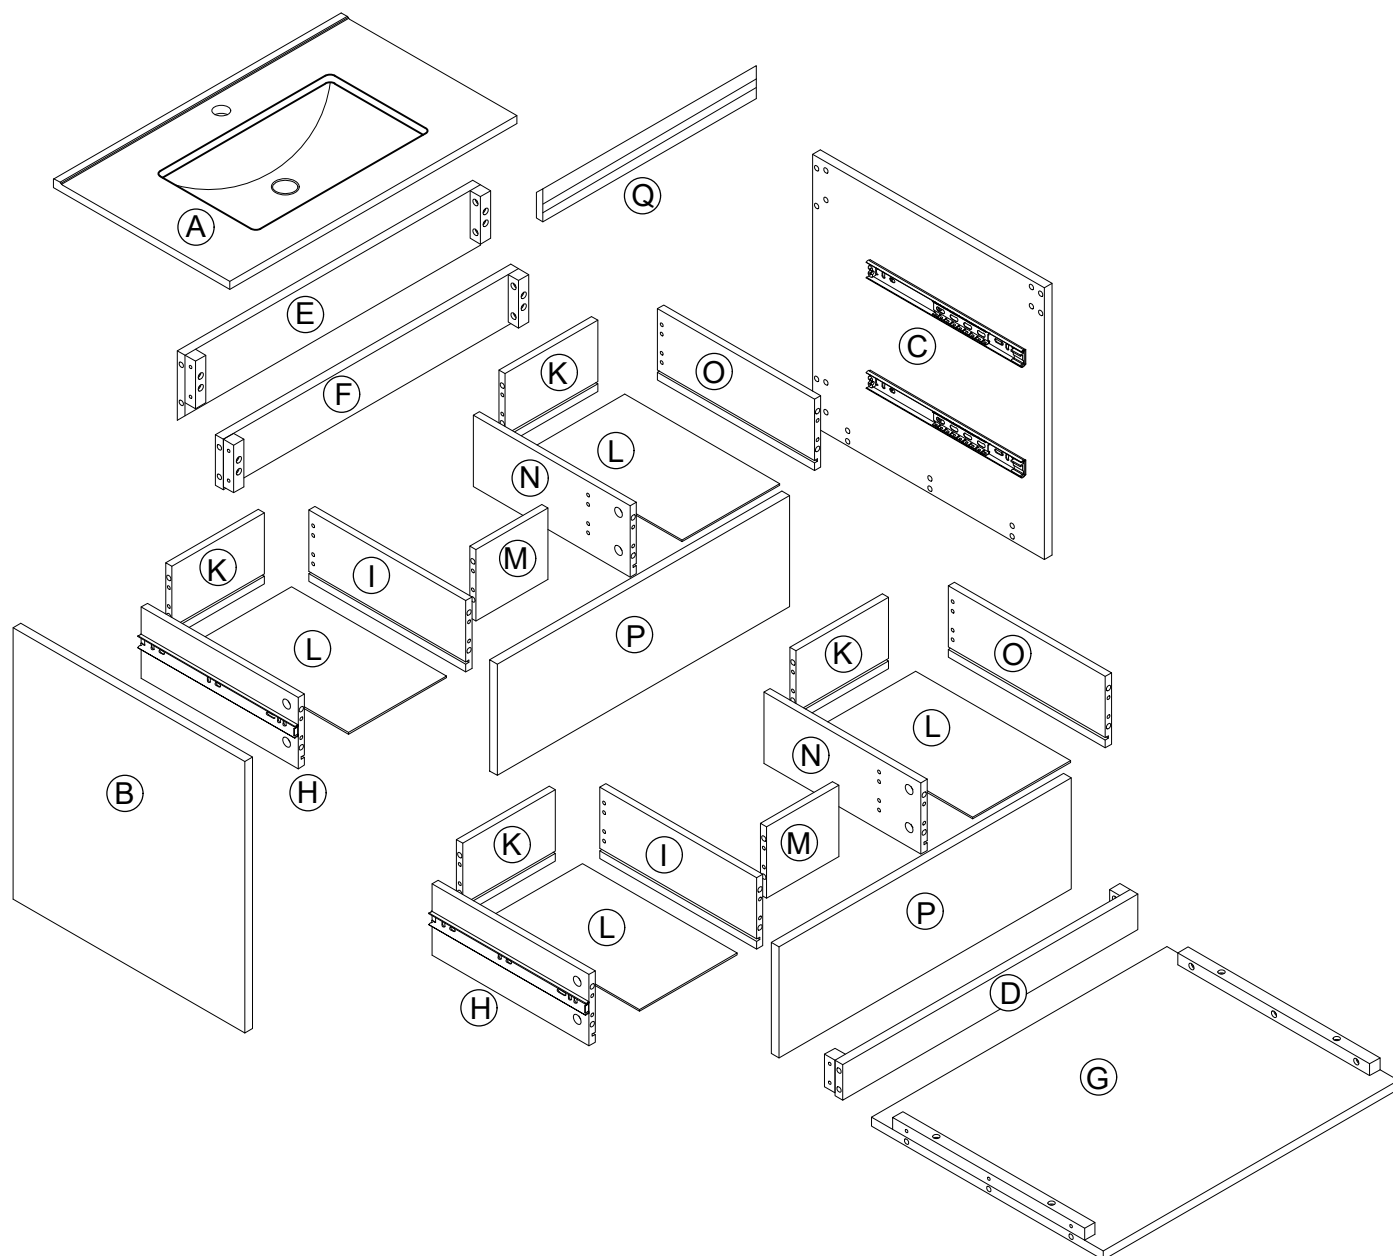


PART	DESCRIPTION	QTY	PART	DESCRIPTION	QTY
A	Sink	X1	I	Drawer Left Middle Panel	X2
B	Left Side Board	X1	K	Drawer Back Panel	X4
C	Right Side Board	X1	L	Drawer Bottom Panel	X4
D	Front Upper Rail	X1	M	Middle Drawer Panel	X2
E	Back Upper Rail	X1	N	Drawer Right Middle Panel	X2
F	Back Lower Rail	X1	O	Drawer Right Panel	X2
G	Bottom Panel	X1	P	Drawer Front Panel	X2
H	Drawer Left Panel	X2	Q	Back Rail	X1

HARDWARE CONTENTS

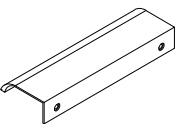1	2	3	4
			
Ø8*30mm 18PCS	Ø6*30mm 40PCS	Ø6*33mm 40PCS	M6*25mm 18PCS
5	6	7	8
			
Ø15*9mm 40PCS	2PCS	Ø3*12mm 4PCS	Ø8*40mm 3PCS
9	10		
			
Ø4*38mm 3PCS	1PC		


STEP1

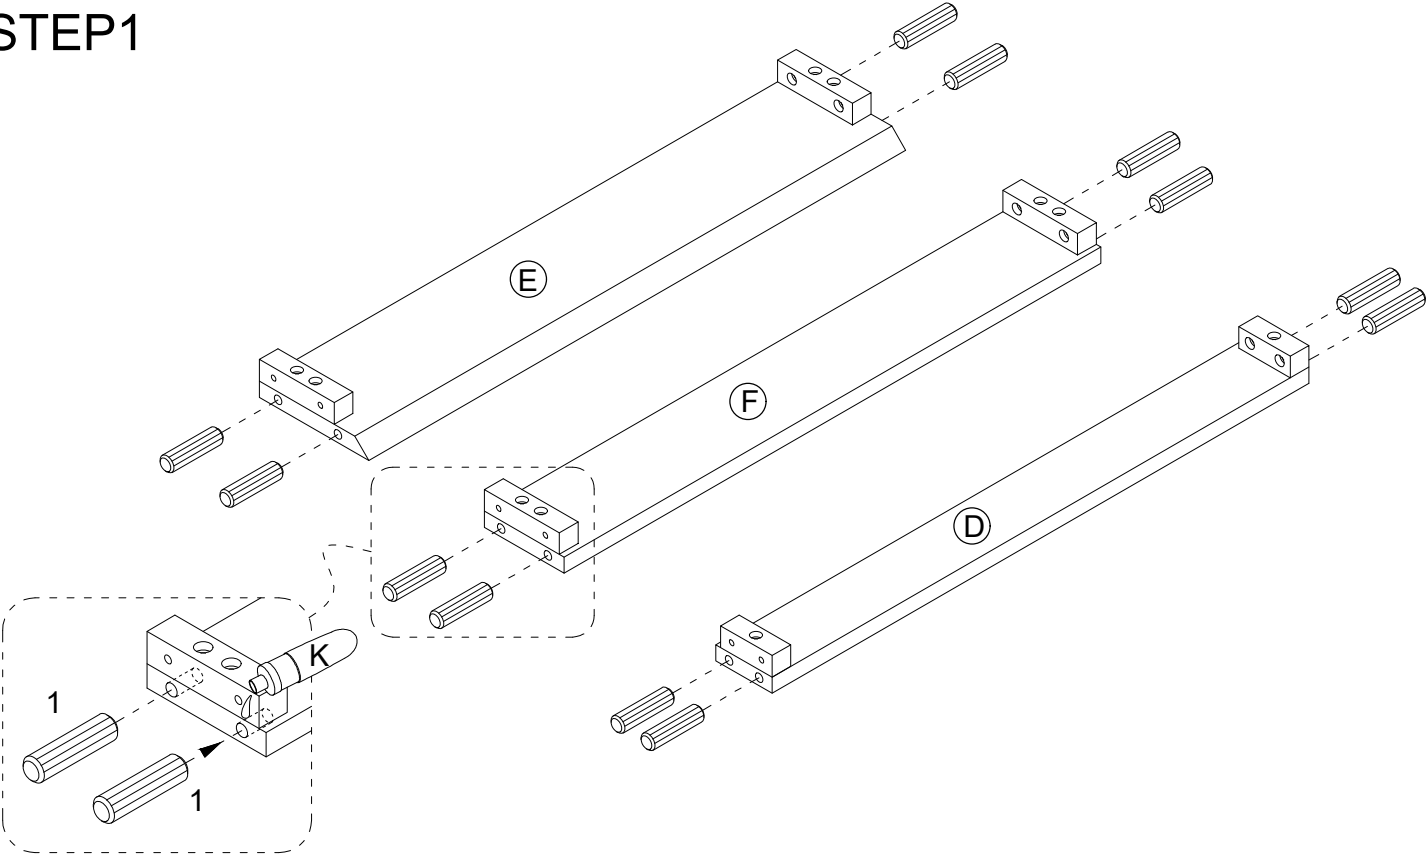

Glue the wood dowels 1 into the inner holes on the front upper rail D ,E and F .
NOTE: It is very important to use a small amount of glue 10 on ends of dowels and wipe away excess glue immediately.

	1 x 12pcs
	10 x 1pc


STEP2

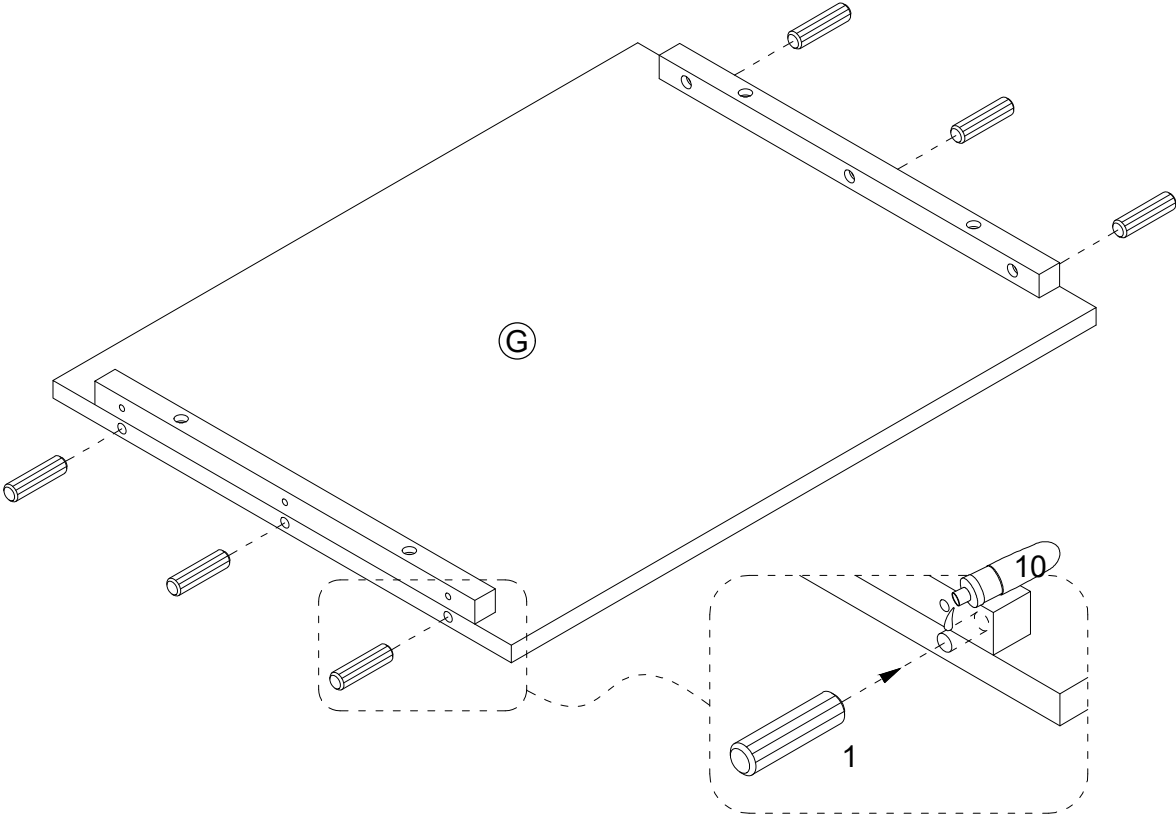

Glue the wood dowels 1 into the inner holes on the side panels G.
NOTE: It is very important to use a small amount of glue 10 on ends of dowels and wipe away excess glue immediately.

	1 x 6pcs
	10 x 1pc


STEP3

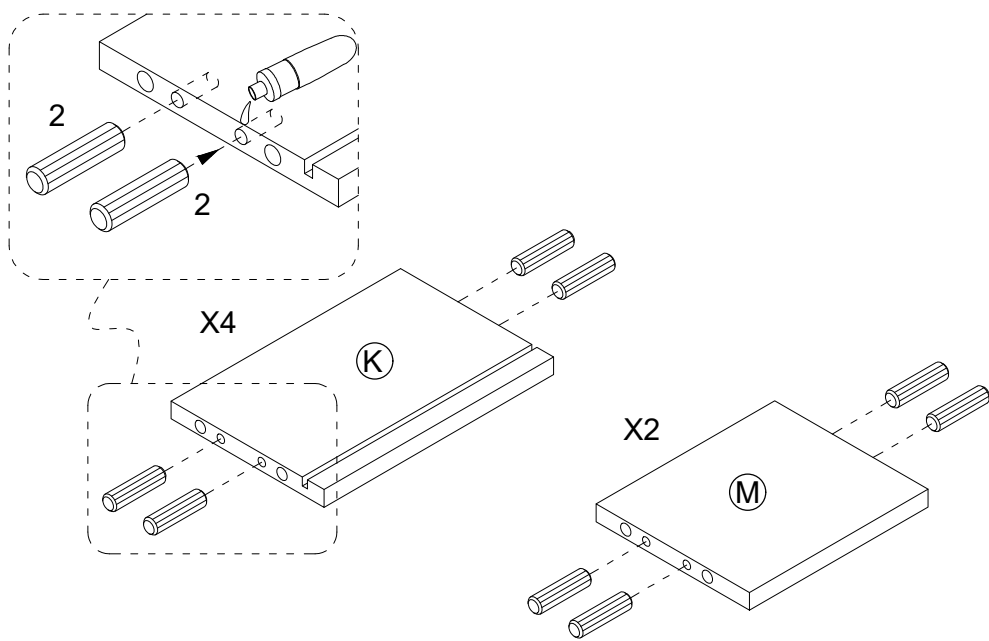

Glue the wood dowels 2 into the inner holes on the front upper rail K and M .
NOTE: It is very important to use a small amount of glue 10 on ends of dowels and wipe away excess glue immediately.

	2 x 24pcs
	10 x 1pc


STEP4

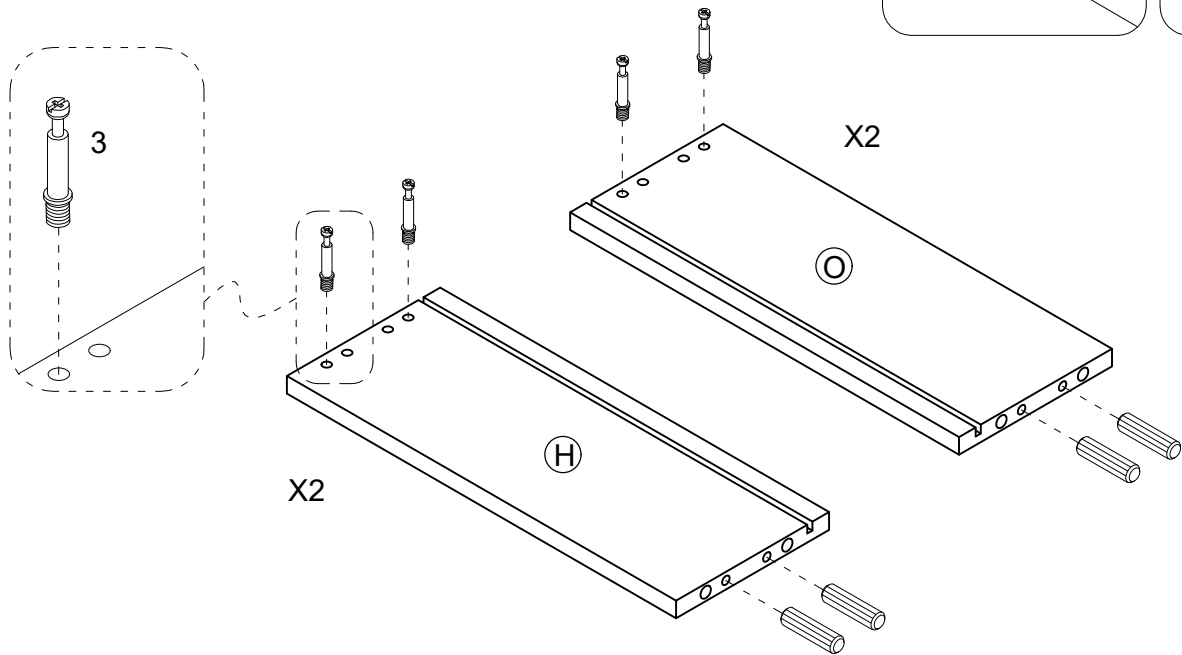

Glue the wood dowels 2 into the inner holes on the front upper rail H and O .
NOTE: It is very important to use a small amount of glue 10 on ends of dowels and wipe away excess glue immediately.

	2 x 8pcs
	3 x 8pcs
	10 x 1pc


STEP5

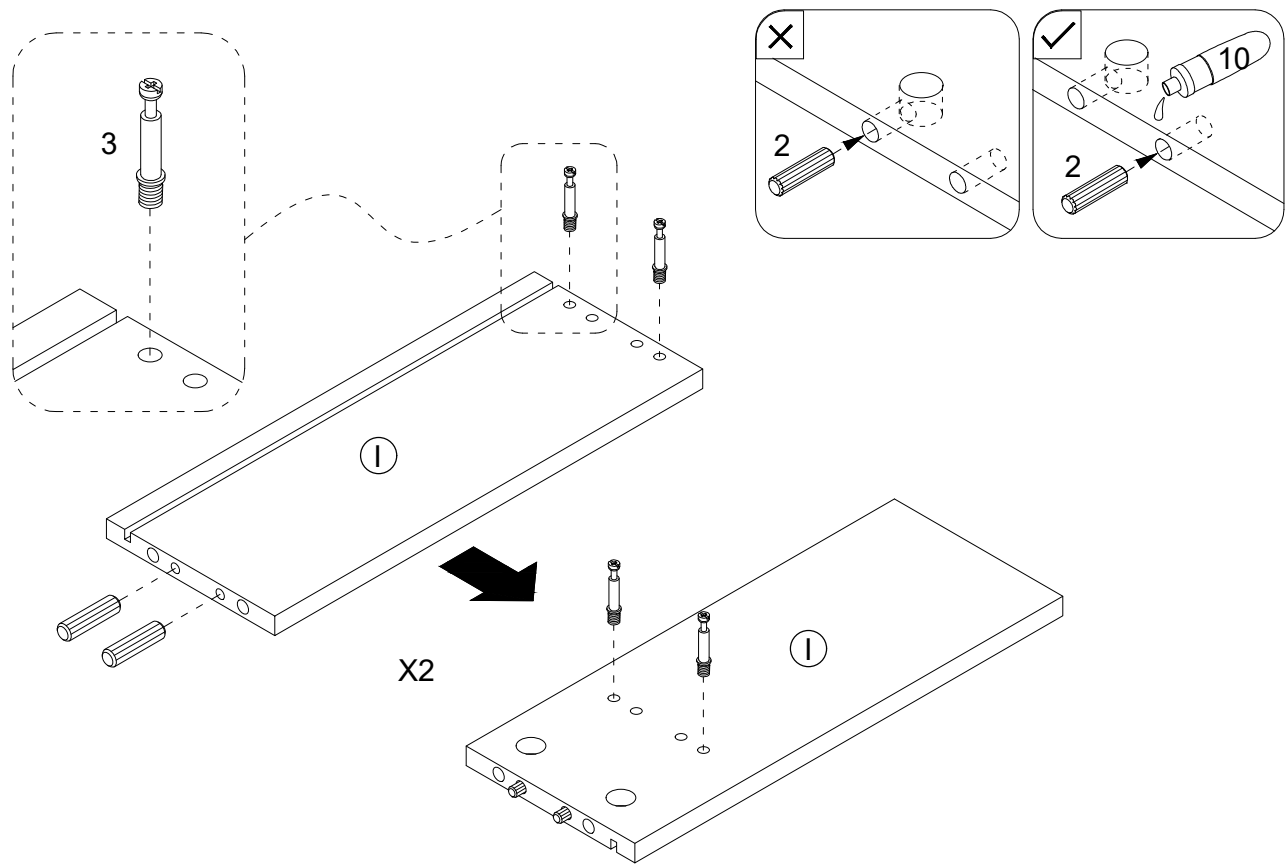

Glue the wood dowels 2 into the inner holes on the side panels I.
NOTE: It is very important to use a small amount of glue 10 on ends of dowels and wipe away excess glue immediately.

	2 x 4pcs
	3 x 8pcs
	10 x 1pc


STEP6

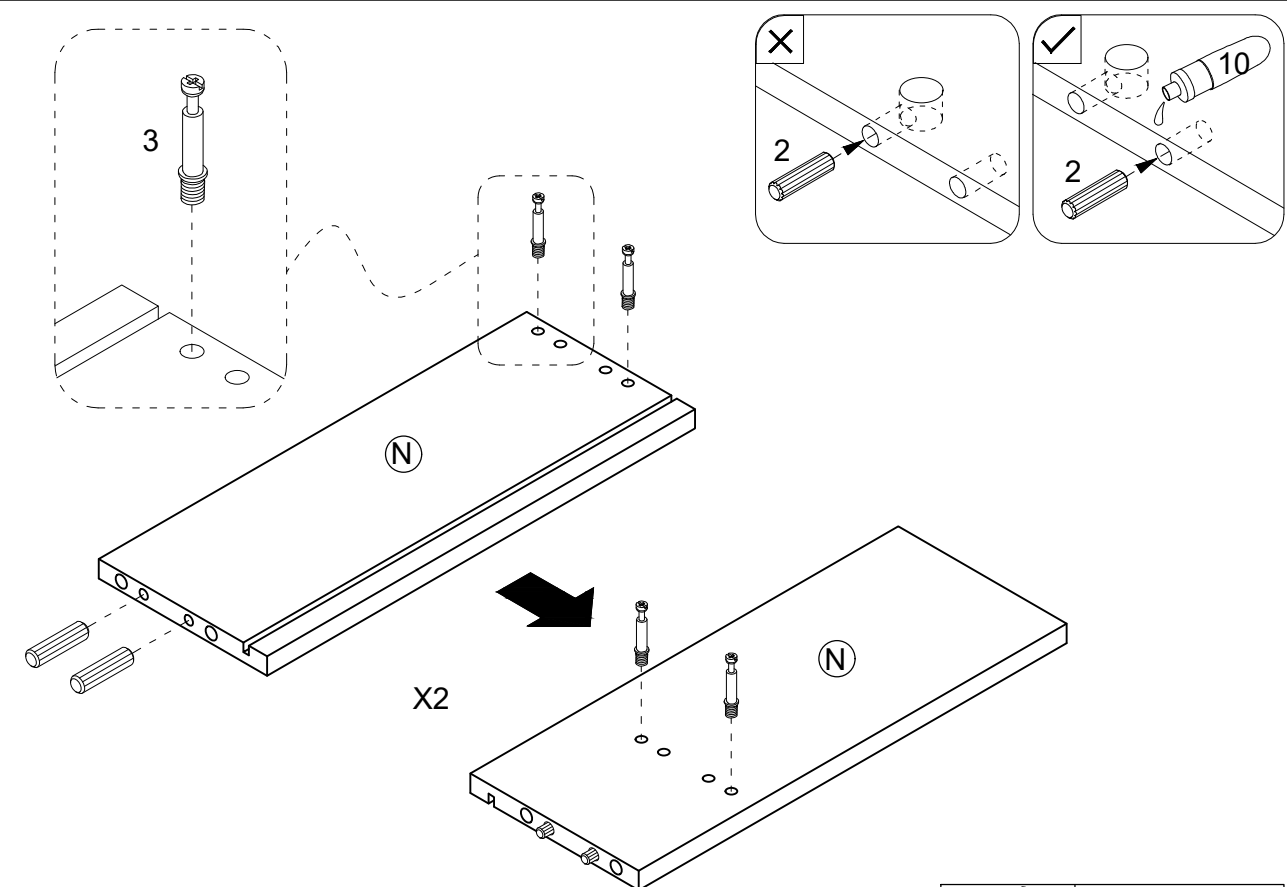

Glue the wood dowels 2 into the inner holes on the side panels N.
NOTE: It is very important to use a small amount of glue 10 on ends of dowels and wipe away excess glue immediately.


	2 x 4pcs
	3 x 8pcs
	10 x 1pc

STEP7

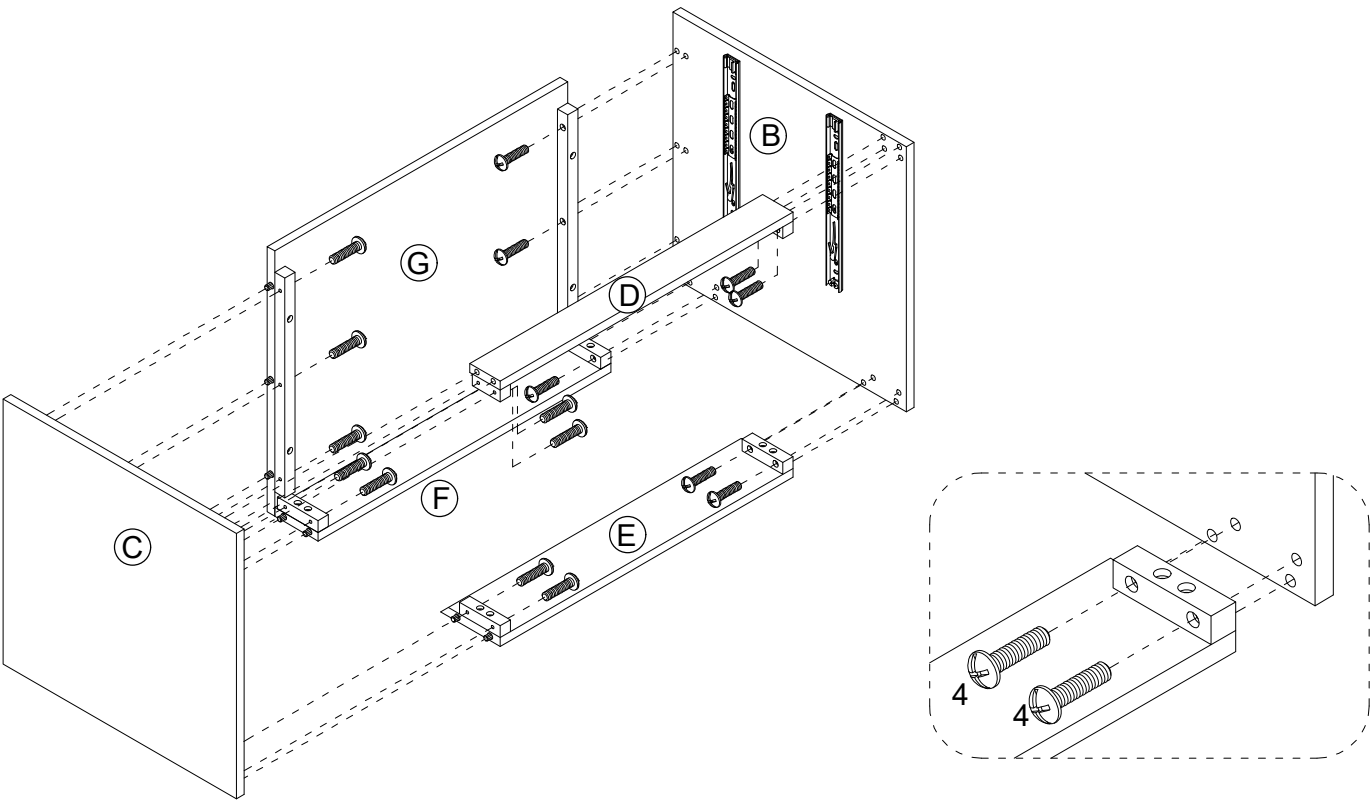


	4 x 18pcs
---	-----------

STEP8

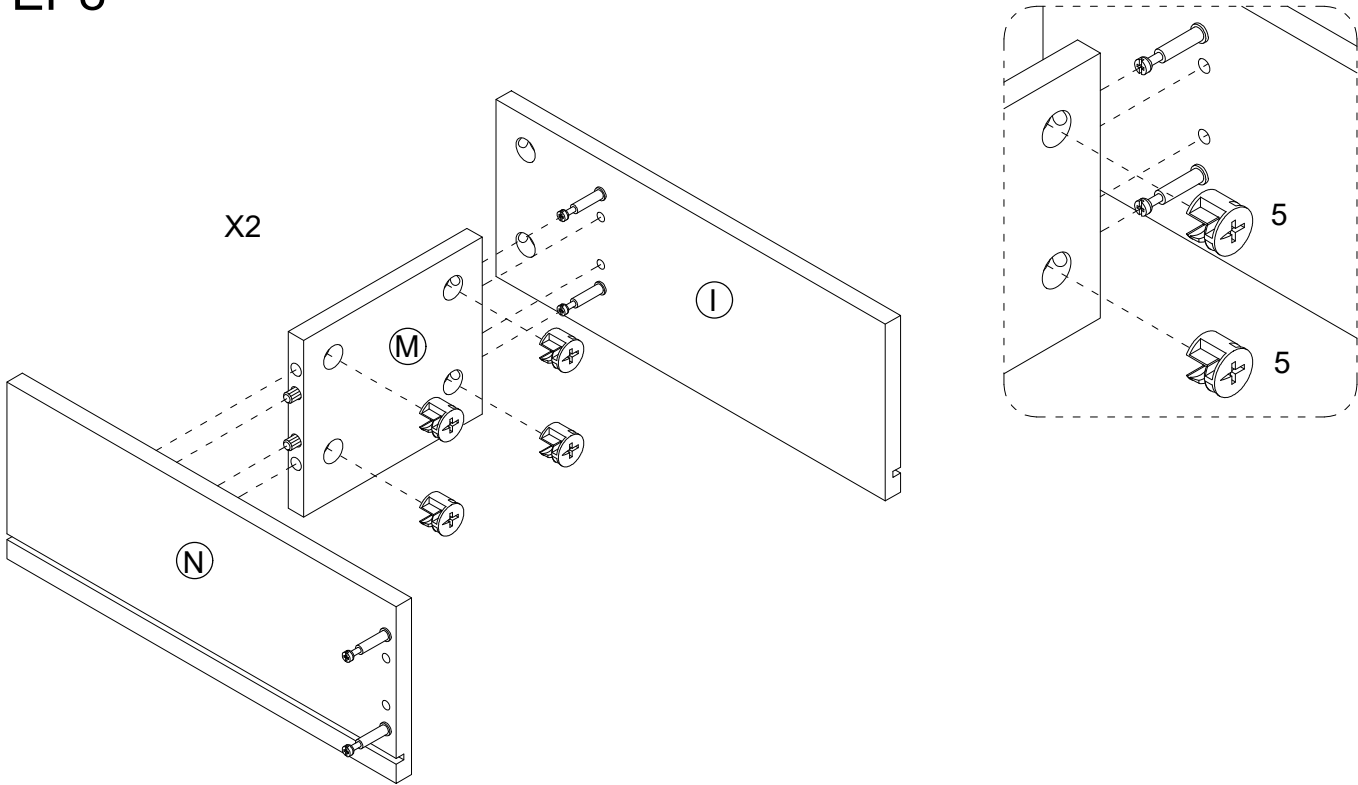


	5 x 8pcs
---	----------


STEP9

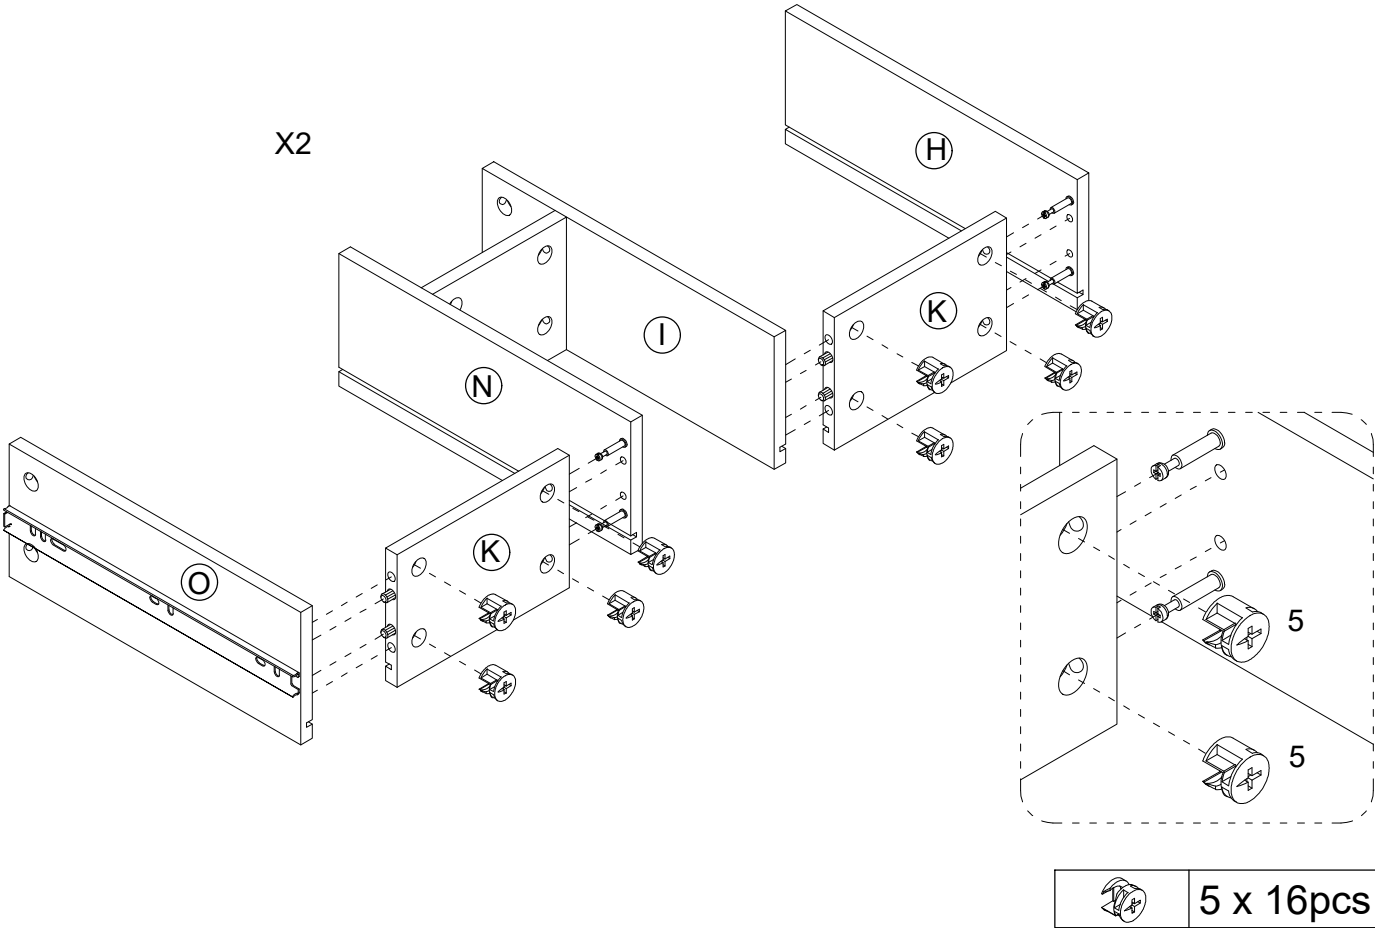


STEP10

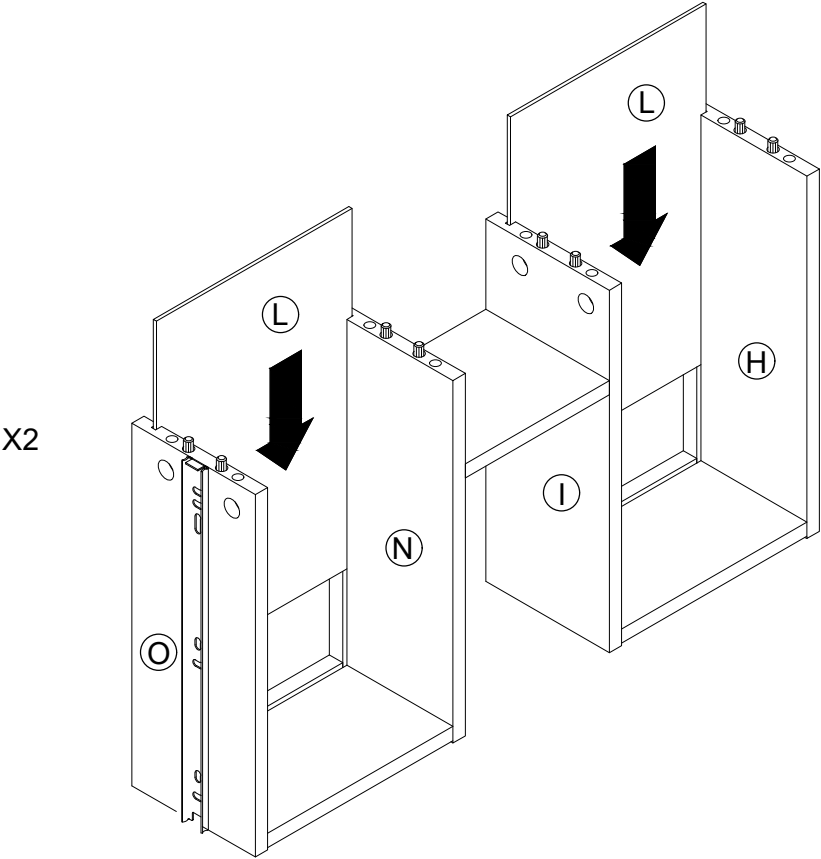


STEP11

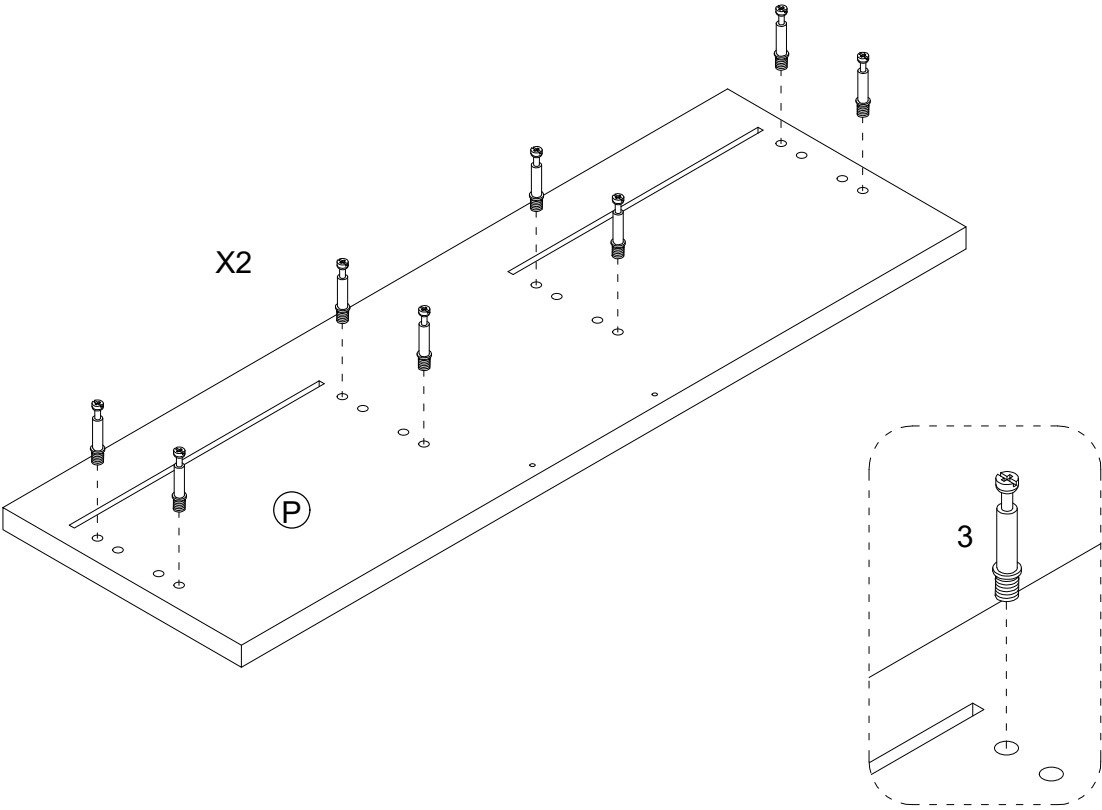


 3 x 16pcs

STEP12

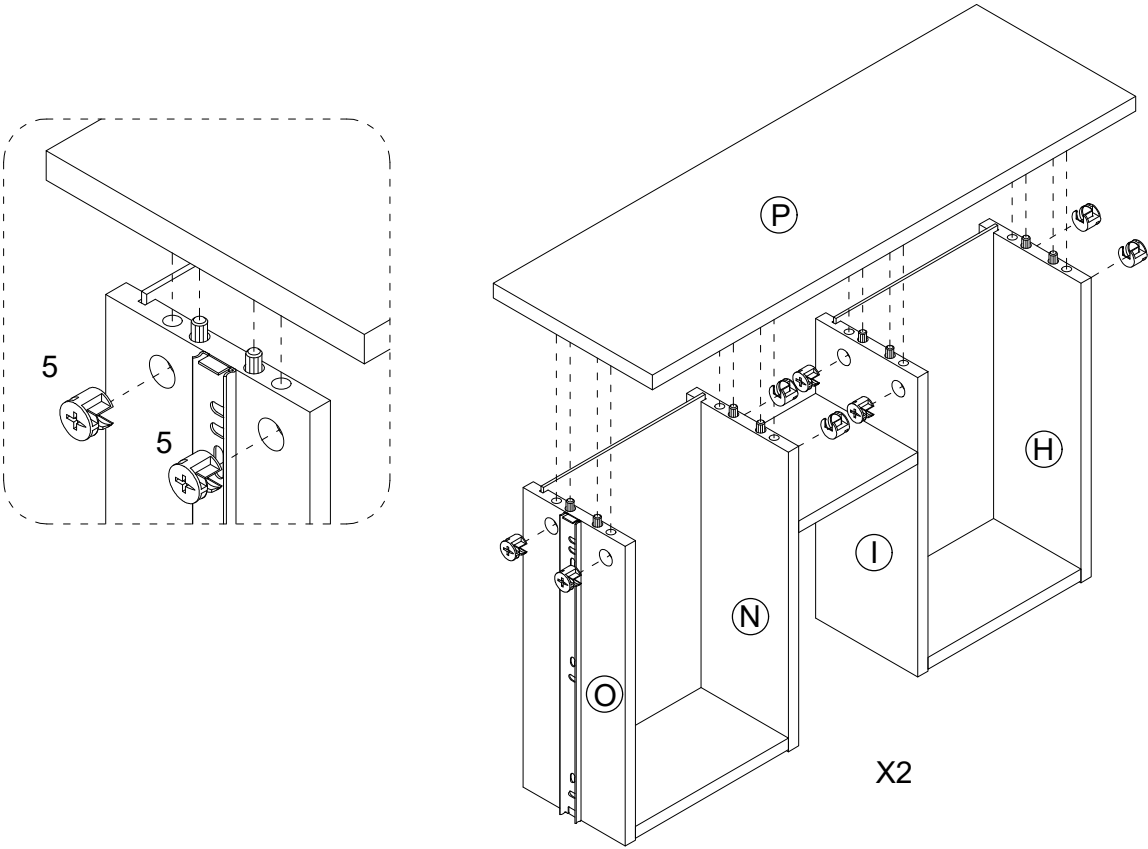


 5 x 16pcs

STEP13


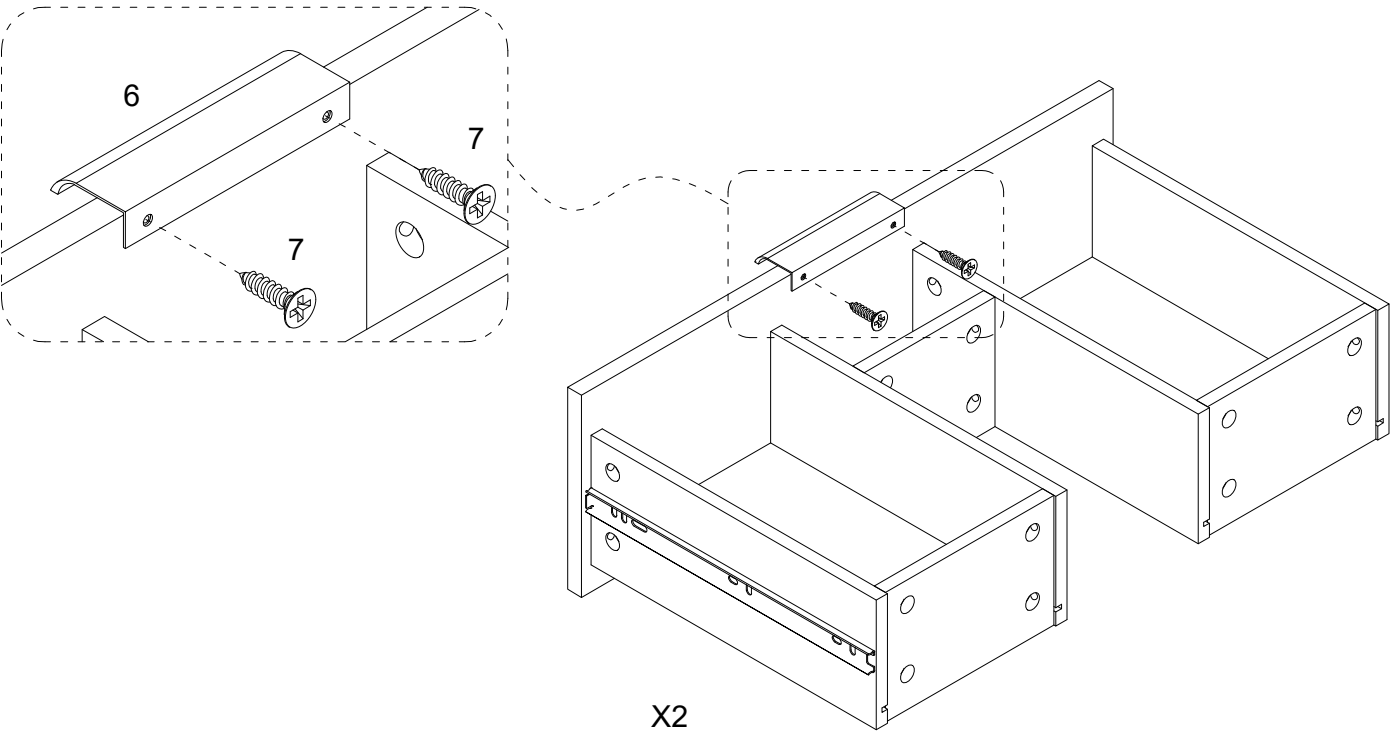


	6 x 2pcs
	7 x 4pcs

STEP14

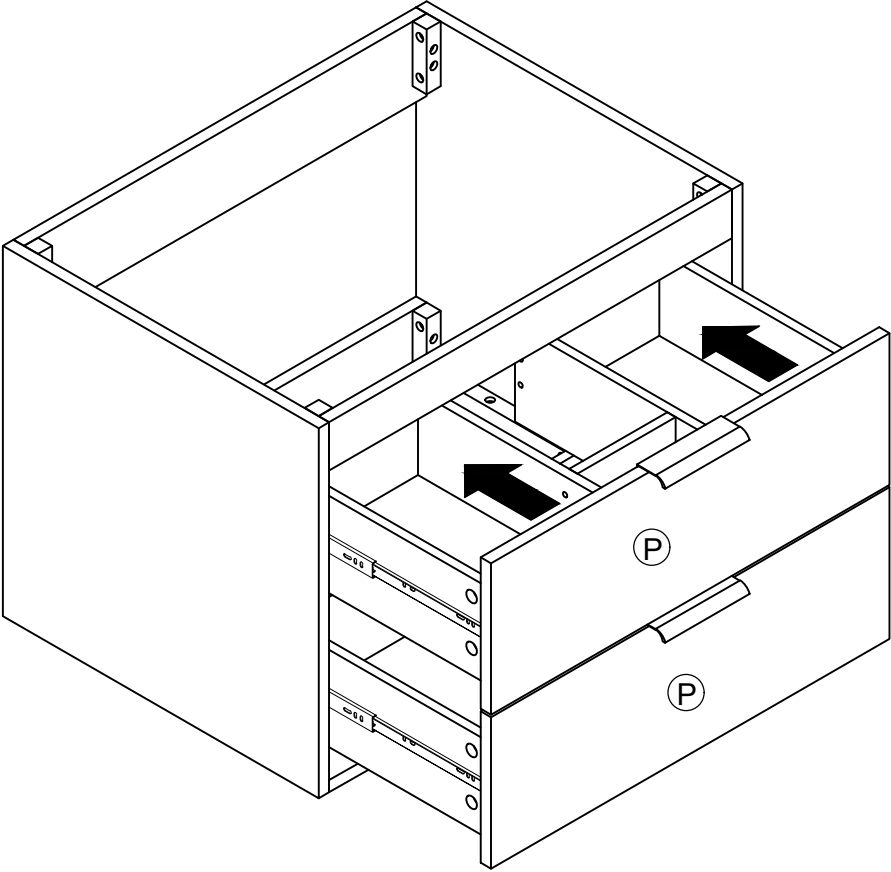


STEP15

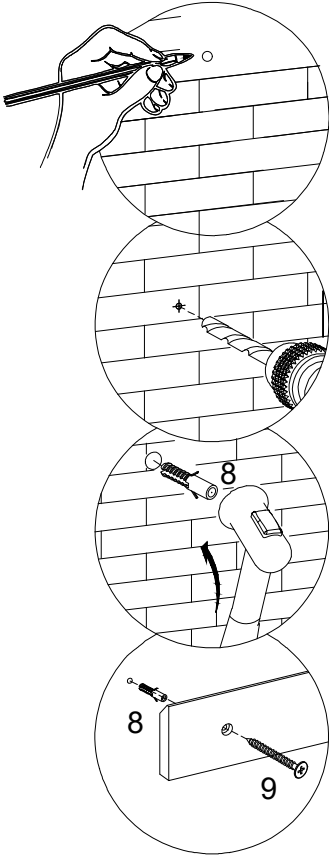
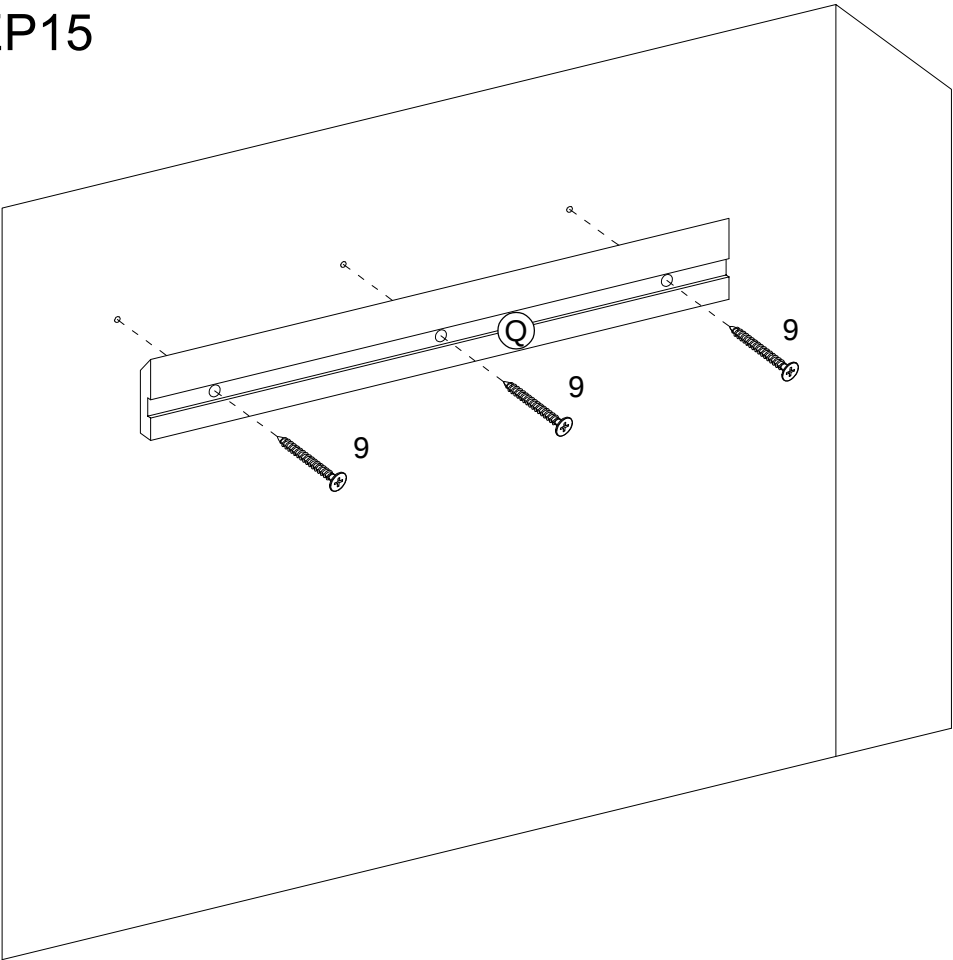


	8 x 3pcs
	9 x 3pcs

STEP16

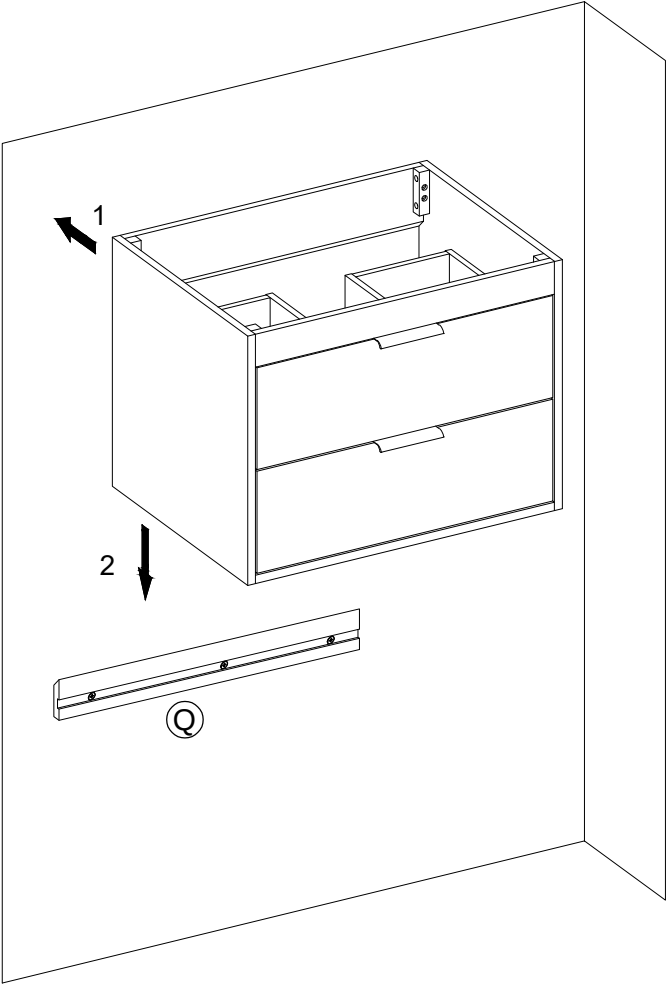

STEP17

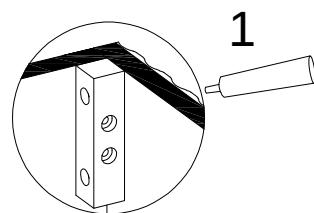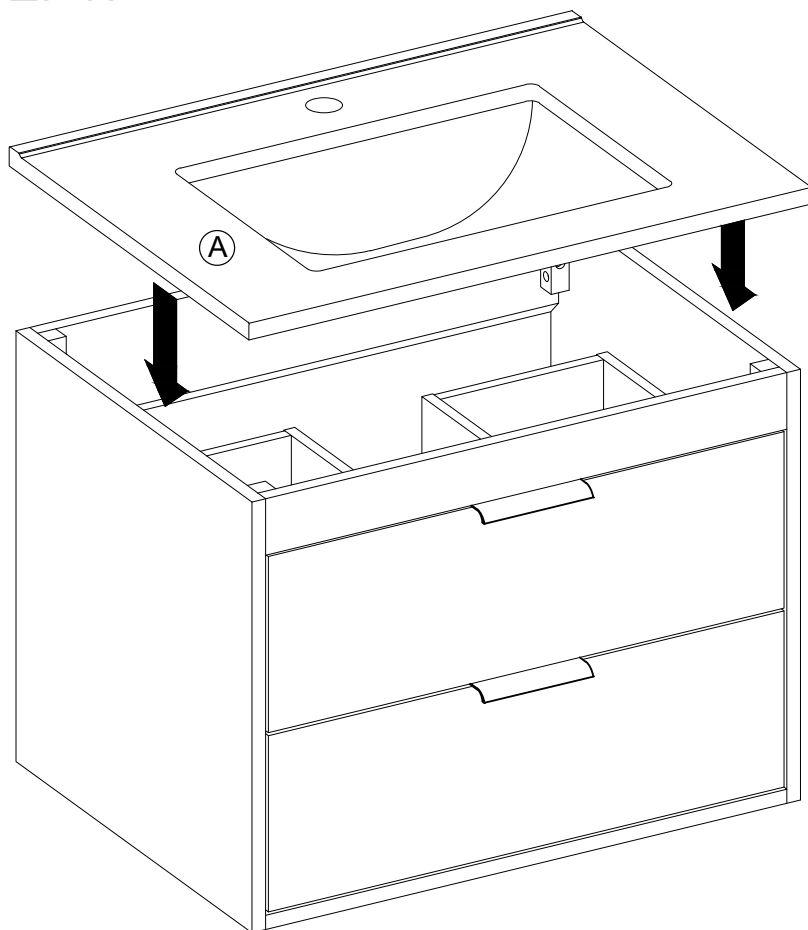

To install the Top (1) to the vanity (2). Apply silicone caulk to the top edge of the wood cabinet. With the help of another adult, gently lower the Sink top with assembled sink onto the cabinet. Make sure the Sink top is flush with the back side of the wood cabinet and the wood cabinet left and right side walls.

STEP18

