


Please consult your electrician for hanging fixture and wiring.

WARNING: Wires need to be connected to driver found in canopy and should not be connected directly to power source or a short may occur.

The fixture is designed to dim with a standard Triac forward phase dimmer. Dimming levels will vary by dimmer. The above belongs in box with recommended drivers.

Due to inrush current wattage should not exceed 150 watts of product a 600 watt dimmer.

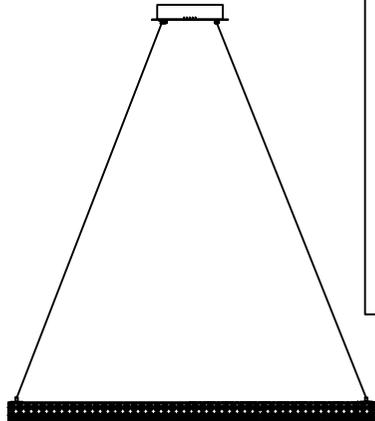


38.5W LED

IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation



(A)
Mounting
Bracket




(B)
Canopy




(C)
Finial

Locate all hardware & components before discarding packaging

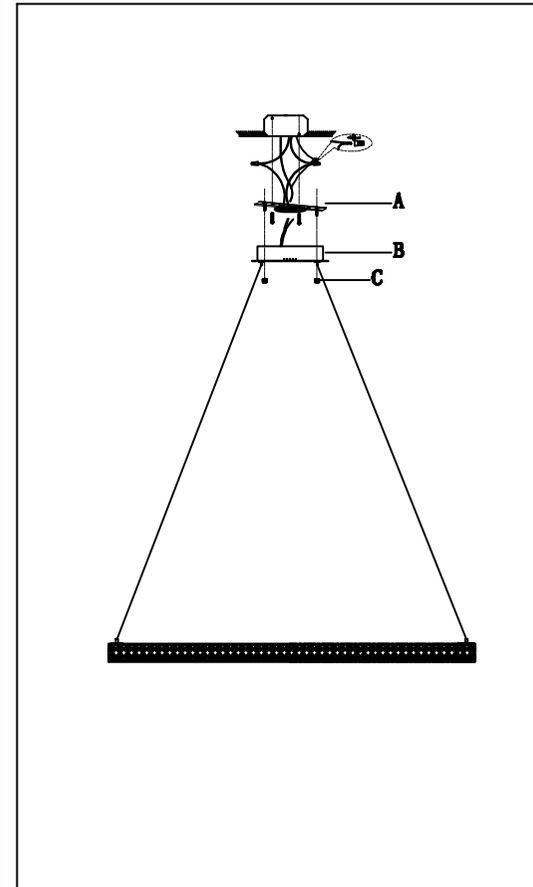


Cleaning & Care:
Clean with soft cloth and a mild detergent.
Do not use abrasive cleaner.

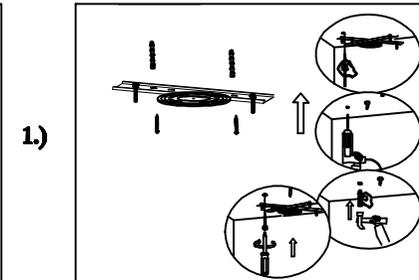


1.)

Step 1: Remove mounting bracket (A) and install to electrical box. Mark where anchors meet ceiling, remove mounting bracket from ceiling, and then drill holes using 3/16" drill bit where marked (B). Install mounting bracket and attach anchors to secure bracket at ends.

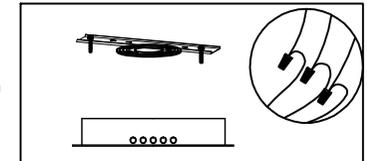

2.)

Step 2: Wire fixture to wires in outlet box. Bare wire is for Ground.

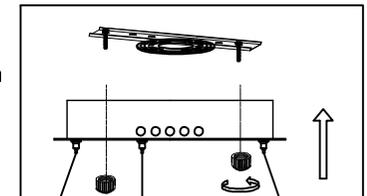

3.)

Step 3: Adjust wire to desired mounting height. Secure fixture to ceiling using finials (C) provided.