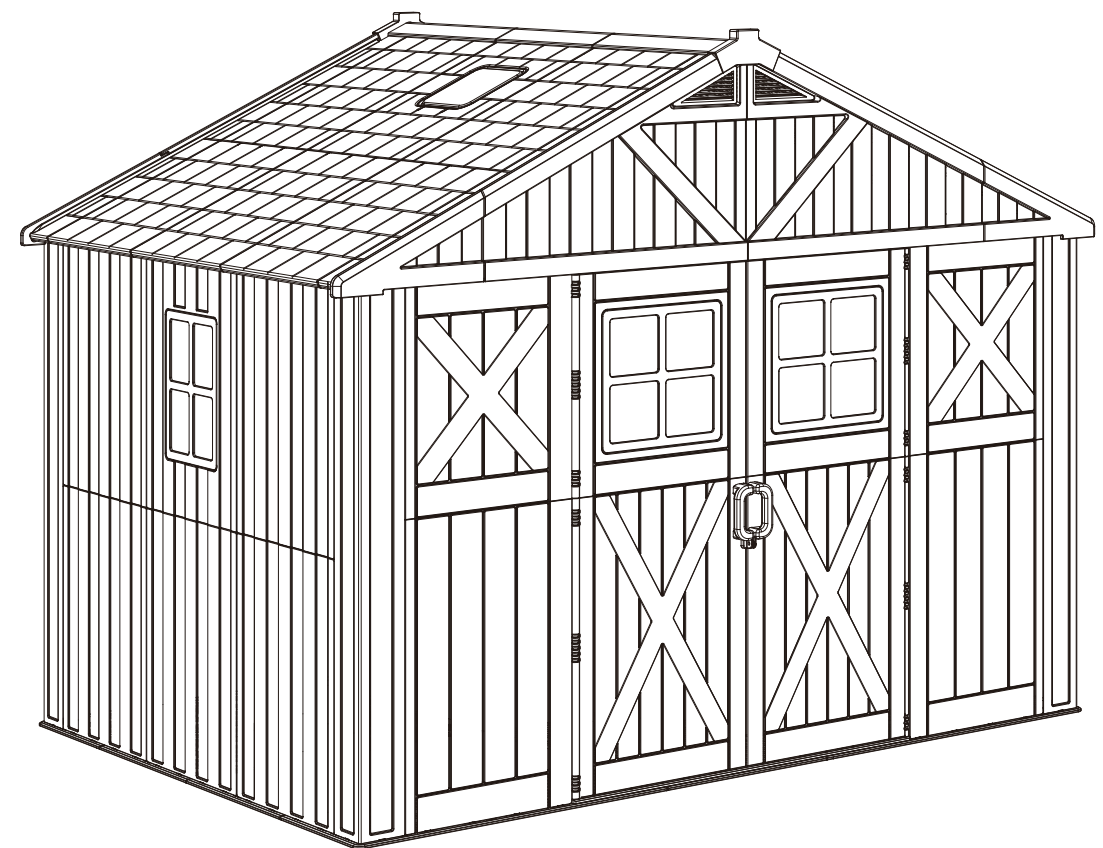


Store
Your
Patio Well

ASSEMBLY INSTRUCTIONS

10X8FT RESIN GARDEN SHED

SKU: T-PS24-0781A-10



E-mail:
saleservice@madepot.com




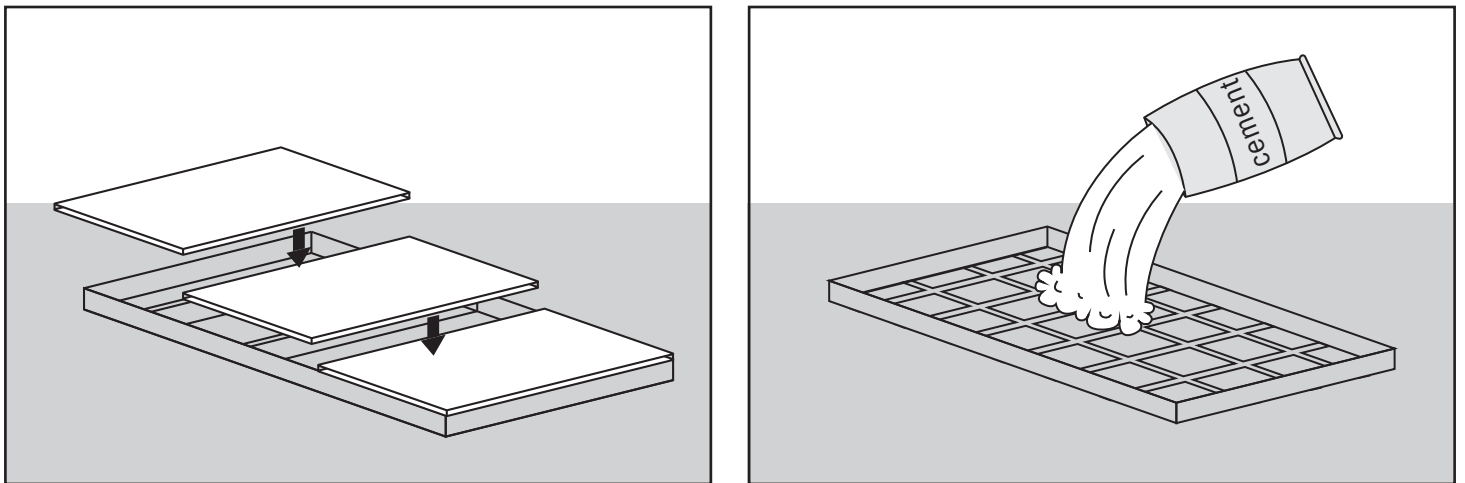
Please read the instruction manual strictly,
Please assemble the resin garden shed in
the following steps.

SITE PREPARATION

Level the ground surface.



Recommendation: Construct a wooden or concrete base as a foundation.



Before installation, please measure the ground with a tool and make sure the ground is level before installation.

BEFORE STARTING ASSEMBLY

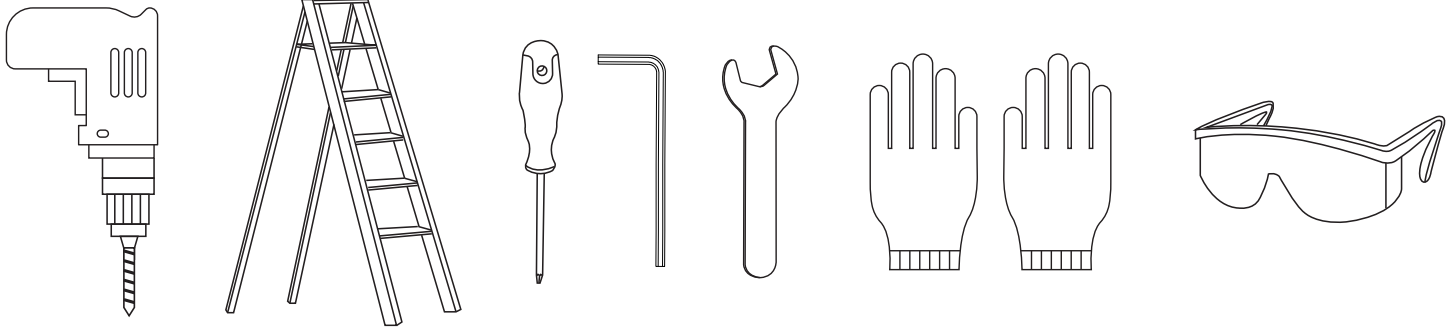
Remove all of the pieces from the 7 packages and spread them out on the ground. Before installation, please check the type and quantity of parts first.

It is recommended to use a clean work surface to spread the parts out and for pre-assembly steps. Review all instructions before you begin, continue to refer to instructions during assembly.

Be sure to follow all steps thoroughly.

Please prepare these components in advance at the beginning of each stage.

REQUIRED TOOLS



CAUTION

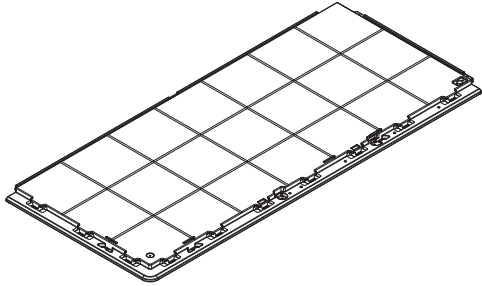
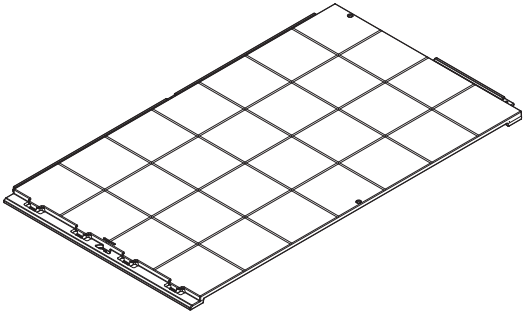
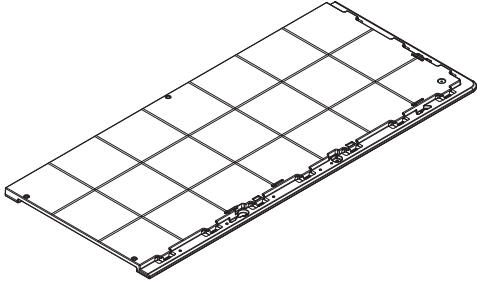
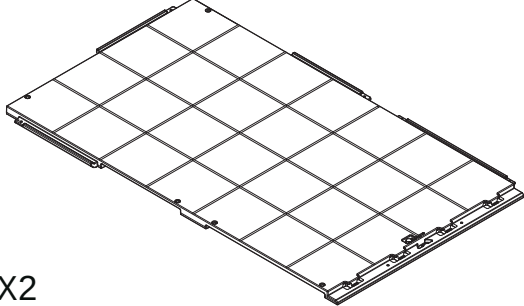
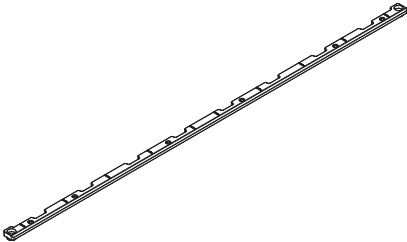
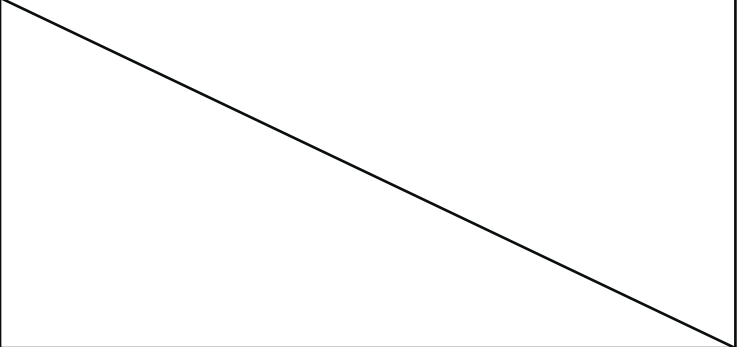
Some parts have steel edges. Please be careful when handling components. Always wear work gloves, eye protection and long sleeves when assembling or performing any maintenance on your shed. Do not attempt assembly on days with strong winds or low temperatures.







Requires two people and takes 2-3 hours for Installation.
Recommended to wear gloves to avoid scratches.
Please read the manual carefully before installation.

DO NOT RETURN YOUR UNIT
TO THE STORE
Contact us first
saleservice@madepot.com




FLOOR PARTS

 A1 X2	 A2 X4
 A3 X2	 10-A6 X2
 A4 X1	

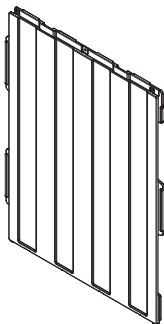
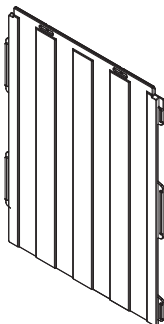
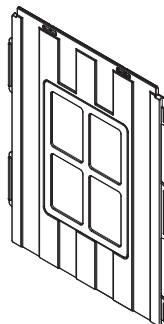
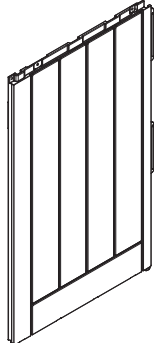
WALL PARTS

 10-B1 X10	 10-B2 X9	 10-B3 X1	 10-B5 X1
--	---	--	---











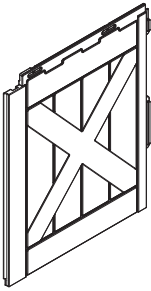
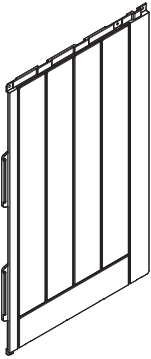
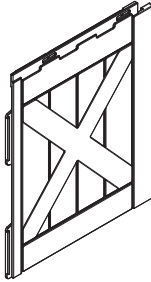
WALL PARTS

			
10-B7 X1	10-B8 X1	10-B9 X1	B4 X2
			
B6 X2	B2-1 X8	B2-2 X2	B2-3 X9

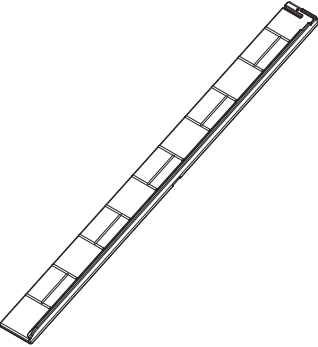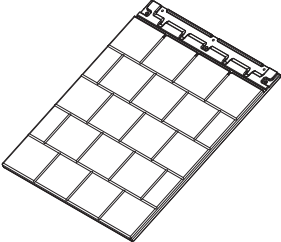
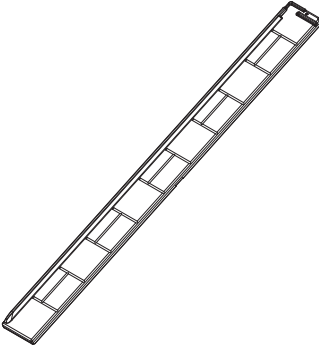
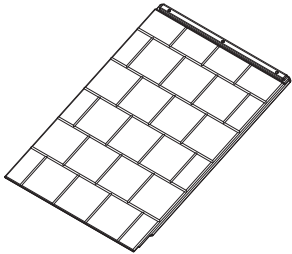
ROOF PARTS

			
10-D1 X2	10-D2 X6	10-D3 X2	10-D4 X4

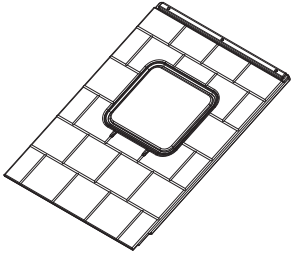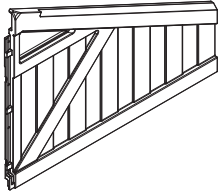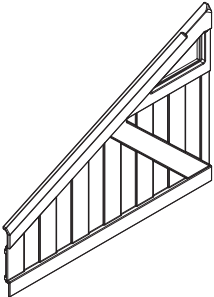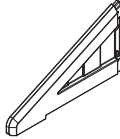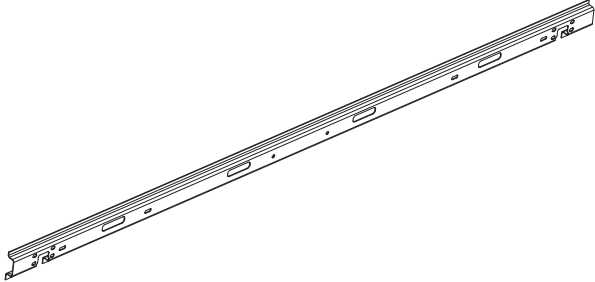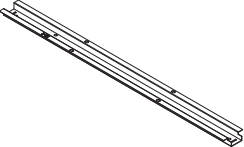

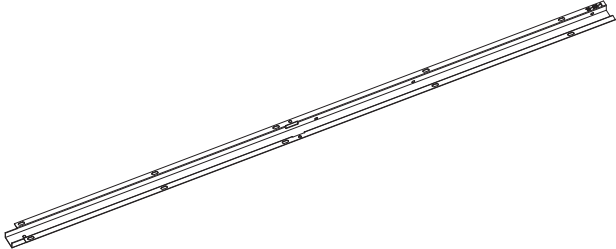
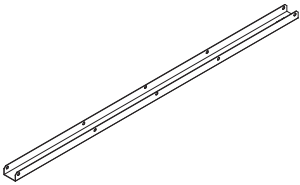
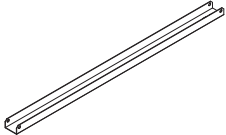
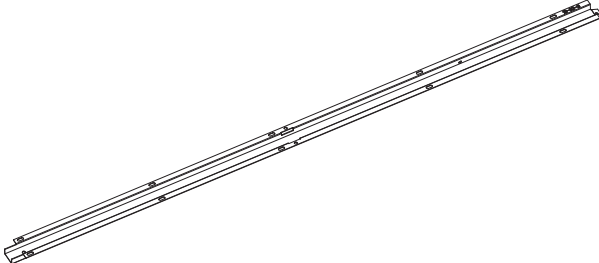
ROOF PARTS

			
10-D5 X2	10-E1 X2	10-E2 X1	10-CR X2
			
10-CL X2	10-CR-1 X2	10-CL-1 X2	B2-4 X2
			
10-B2-5 X1	10-B2-6 X2	DD X1	
			
E1-1 X2	E2-1 X1	10-D2-1 X4	
			
D2-2 X2	D2-4 X2	10-D2-3 X4	






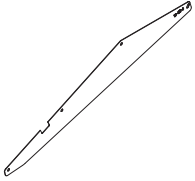
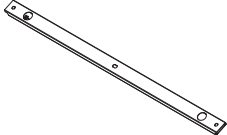
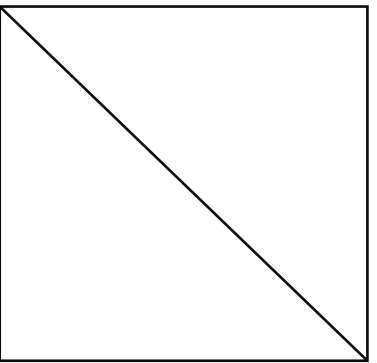
ROOF PARTS

 10-D2-6 X8	 10-D2-7 X6	 10-D2-8 X4	
---	---	--	---




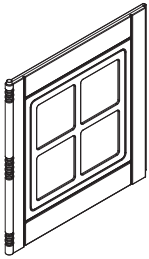
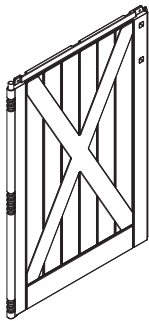
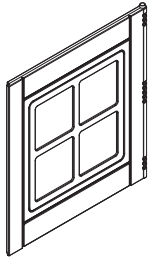
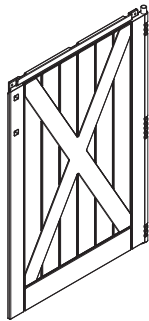
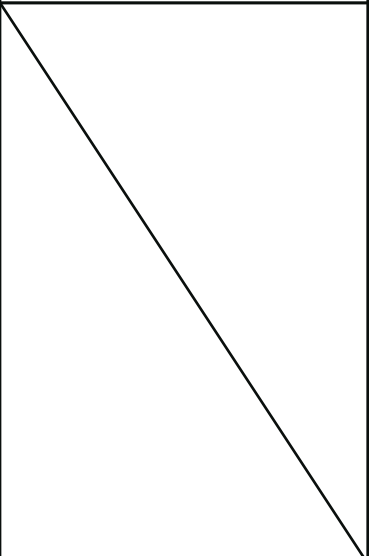
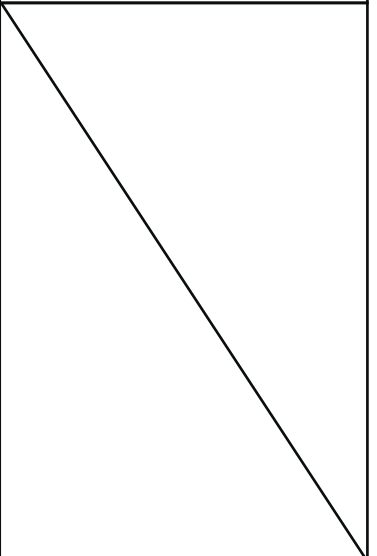
DOOR PARTS

 DL-1 X1	 DL-2 X1	 DR-1 X1	 DR-2 X1
 DZ X2	 DG X2		


ACCESSORIES

			
A5 X2	10-A8 X4	8/10-A9 X1	8/10-A10 X1
			
10-A11 X2	A1-1 X1	10-BC X26	B1-1 X2
			
E3X2	CRI X2	CLI X2	DC X1
			
			D4 X16
			
D2-5 X6	D2-6 X4	E4 X2	10-HR1 X1
			
10-HR2 X2	10-HL1 X1	DDZ X2	M6 X74
			
			Z6 X8

SCREW


 271 pcs   SP6-15 M6*15	 240 pcs   SP6-20 M6*20
 16 pcs   M6-25 M6*25	 10 pcs   M6-10 M6*10
 26 pcs   M6-55 M6*55	 22 pcs   M6-15 M6*15
 30 pcs   SPF6-20 M6*20	 6 pcs   SF4-15 M4*15
 18 pcs   M5-8 M5*8	 8 pcs   M5-12 M5*12
 16 pcs   SP6-25 M6*25	 6 pcs   SP6-35 M6*35

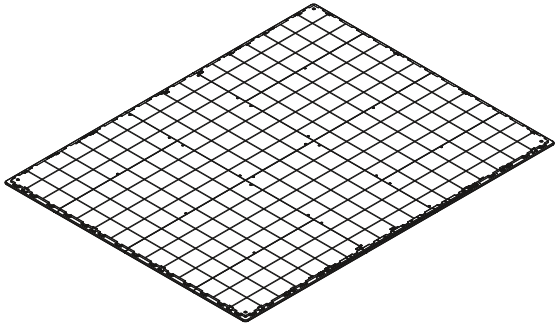CONTENTS




Floor Part Instruction

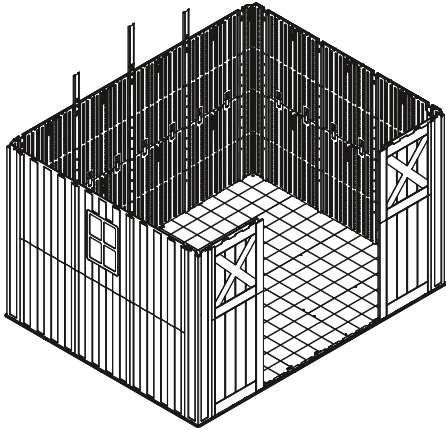11-16
(page)




Wall Part Instruction

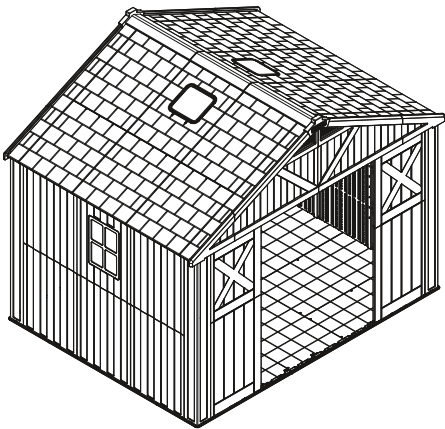17-29
(page)



Roof Part Instruction


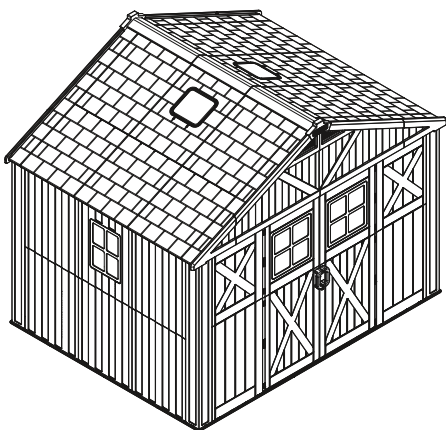
30-47
(page)





Door Part Instruction

48-52
(page)

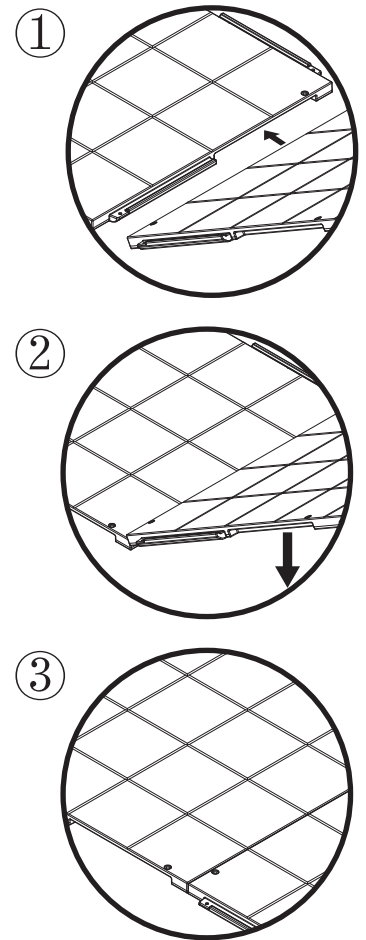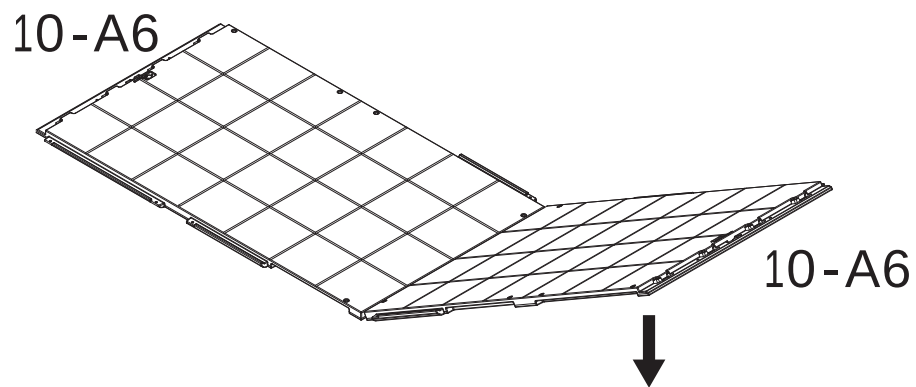STEP 1





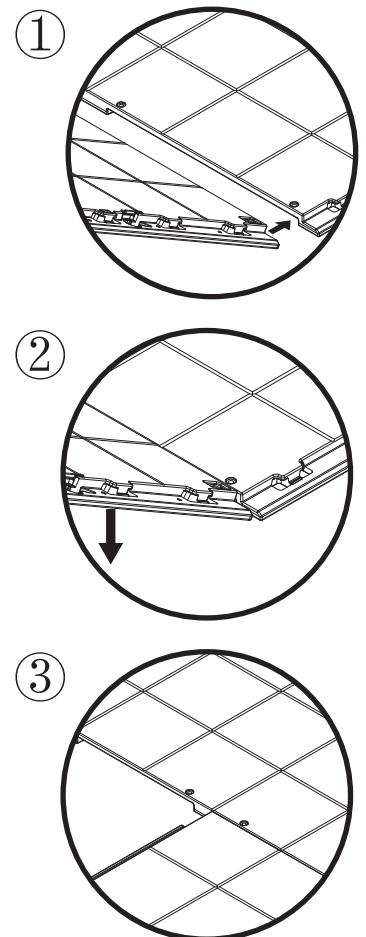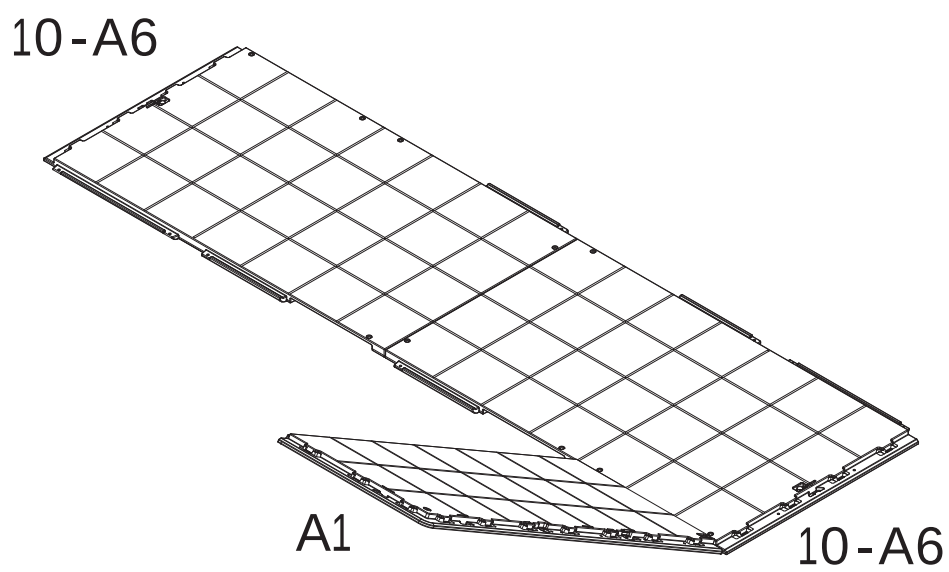STEP 2





STEP 3

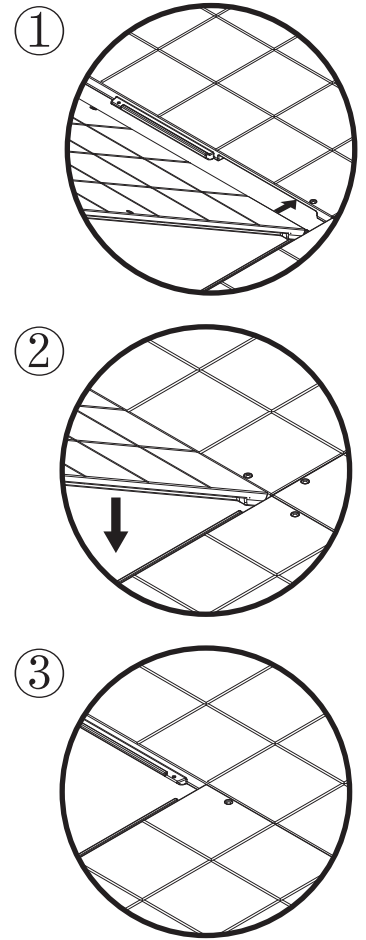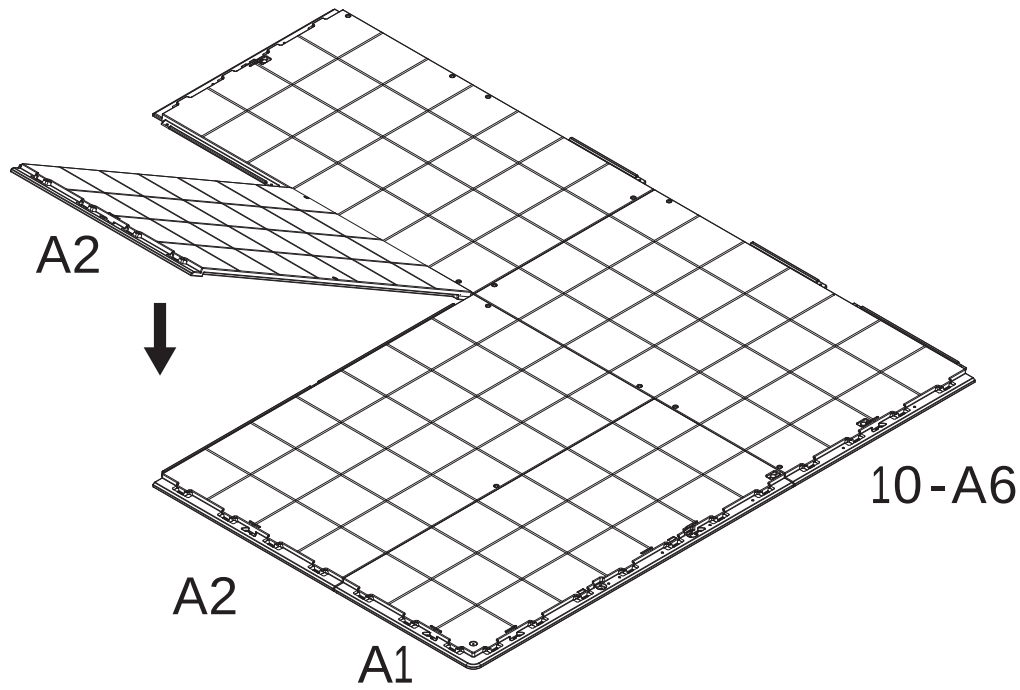Refer to STEP 2 to Install 2 A2s in sequence.




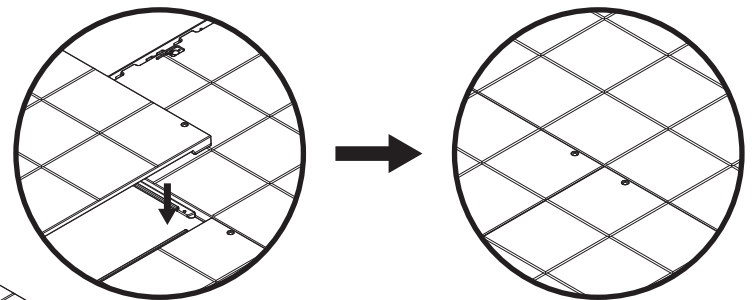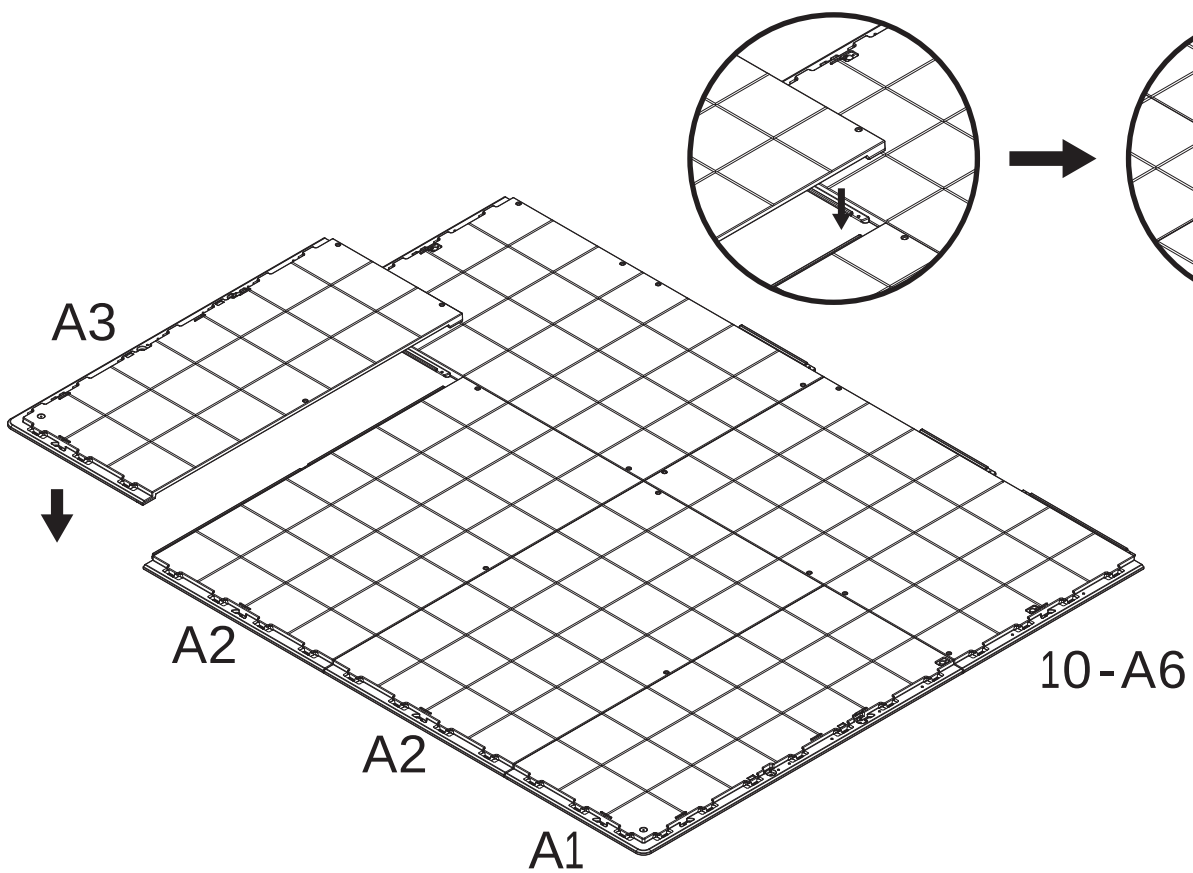STEP 4




STEP 5

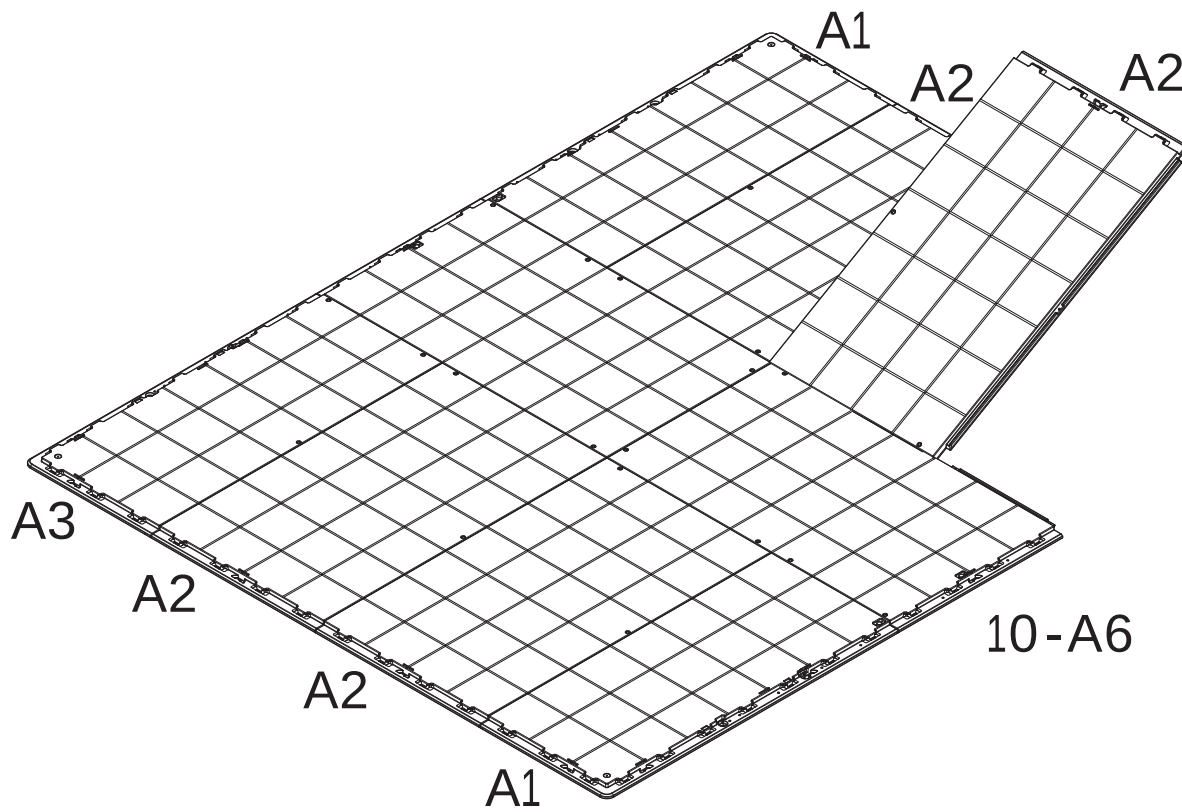
Refer to STEP 2 to Install A1 and 2 A2s in sequence.



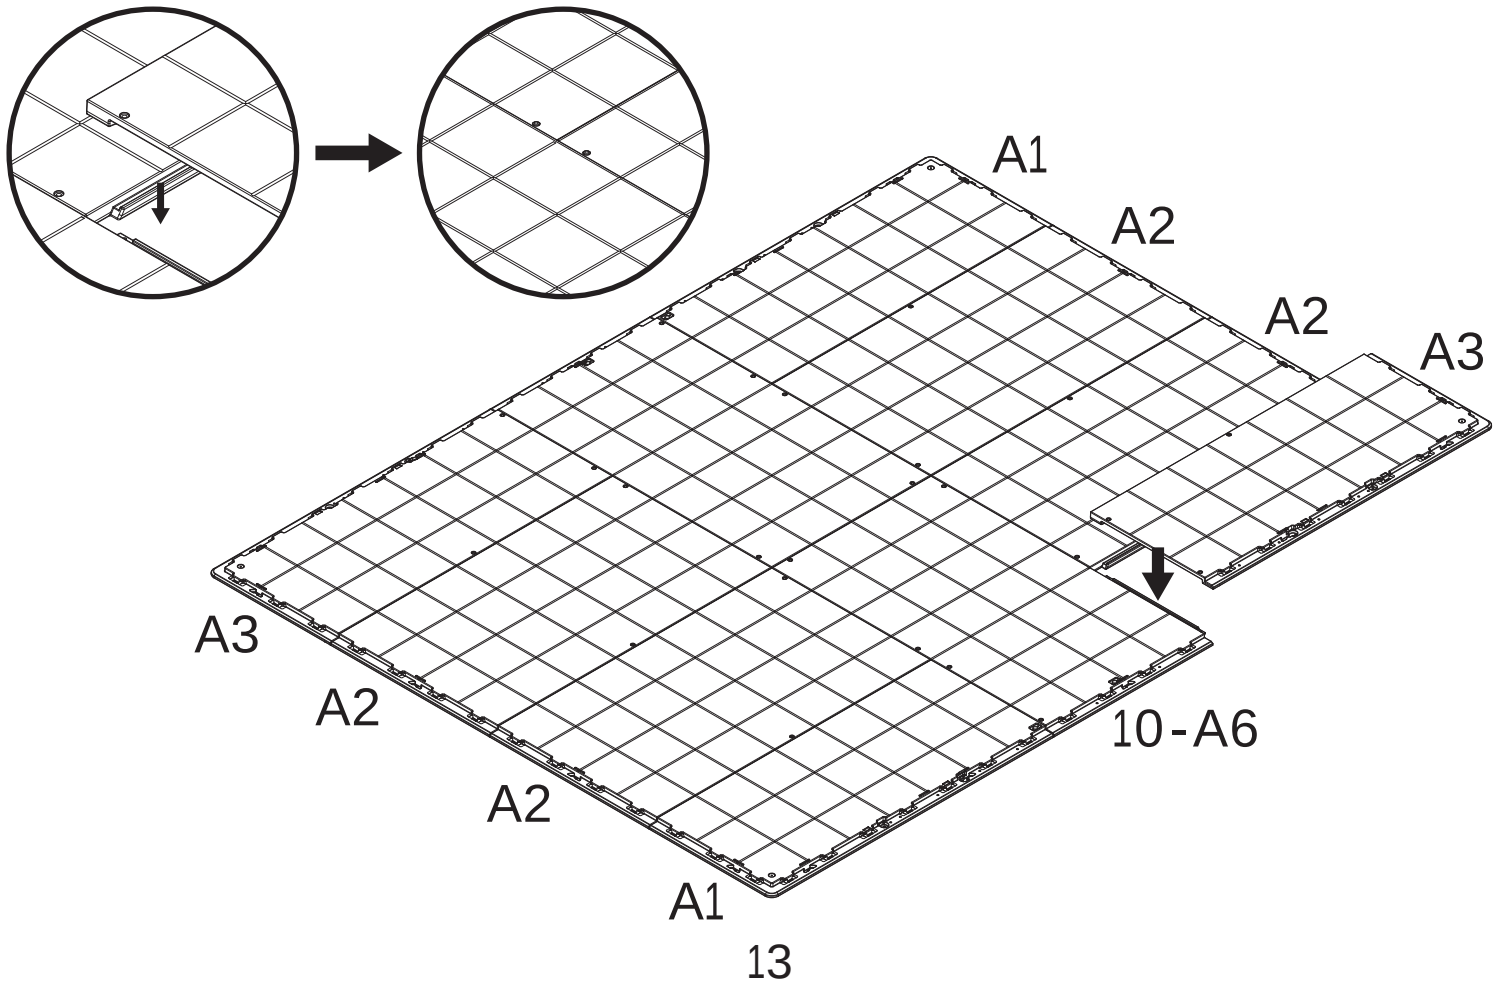
STEP 6



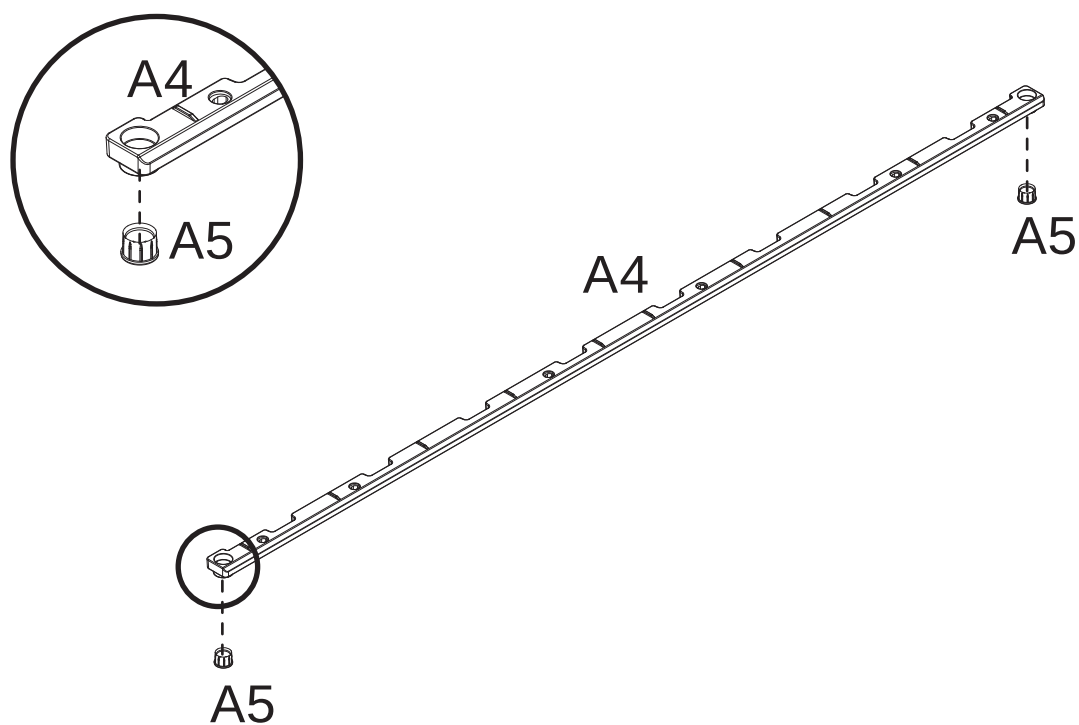
STEP 7



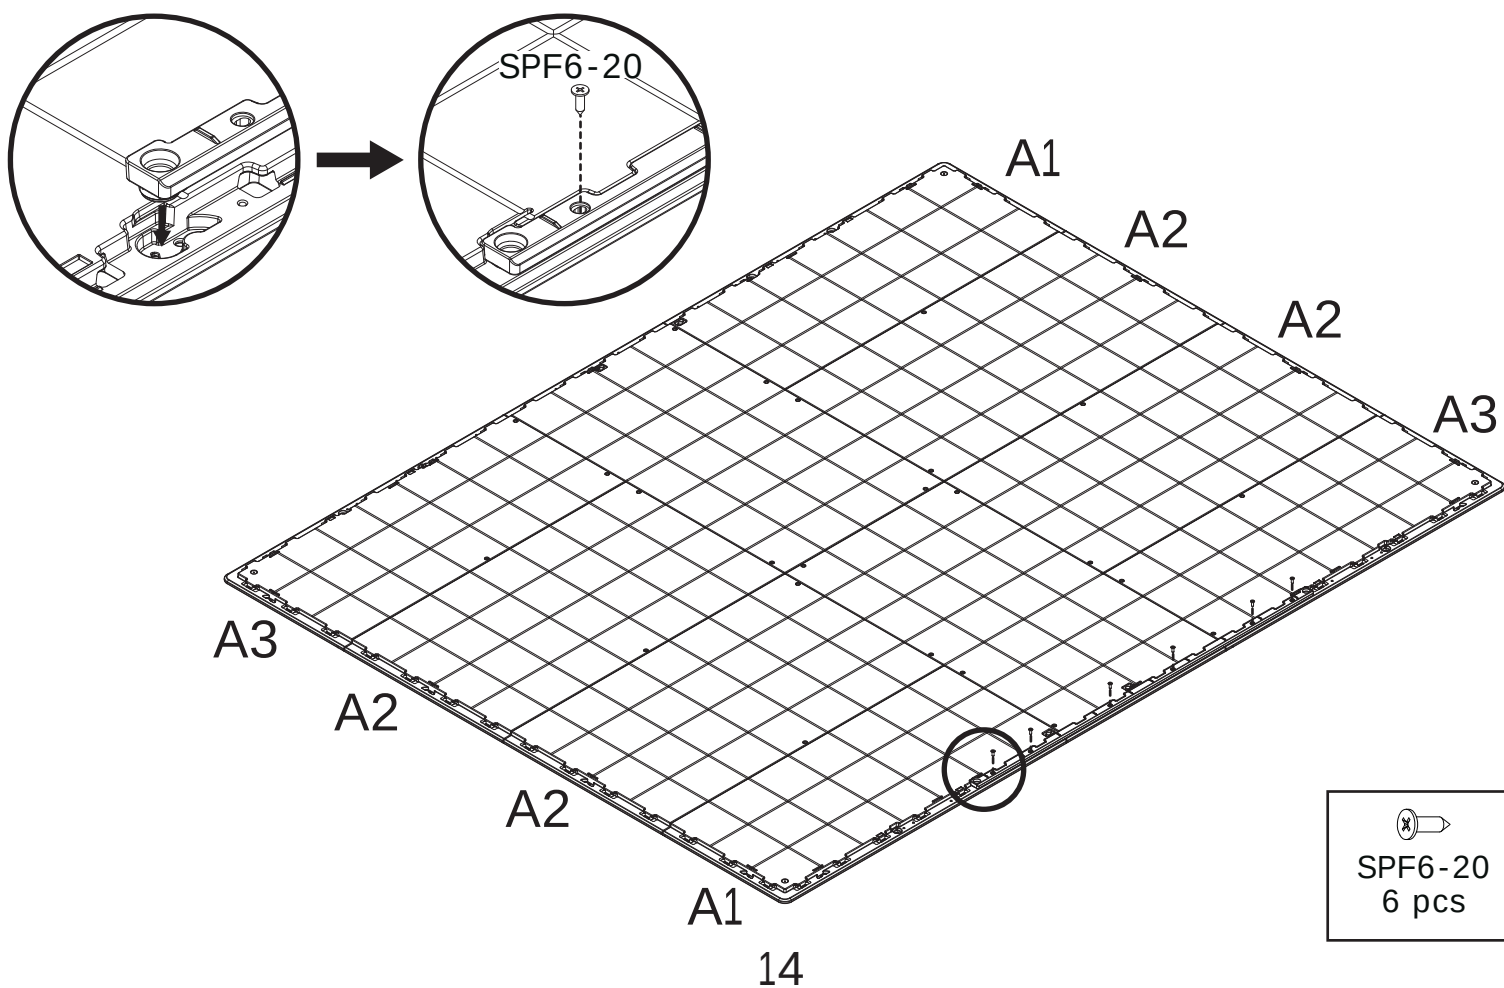
STEP 8







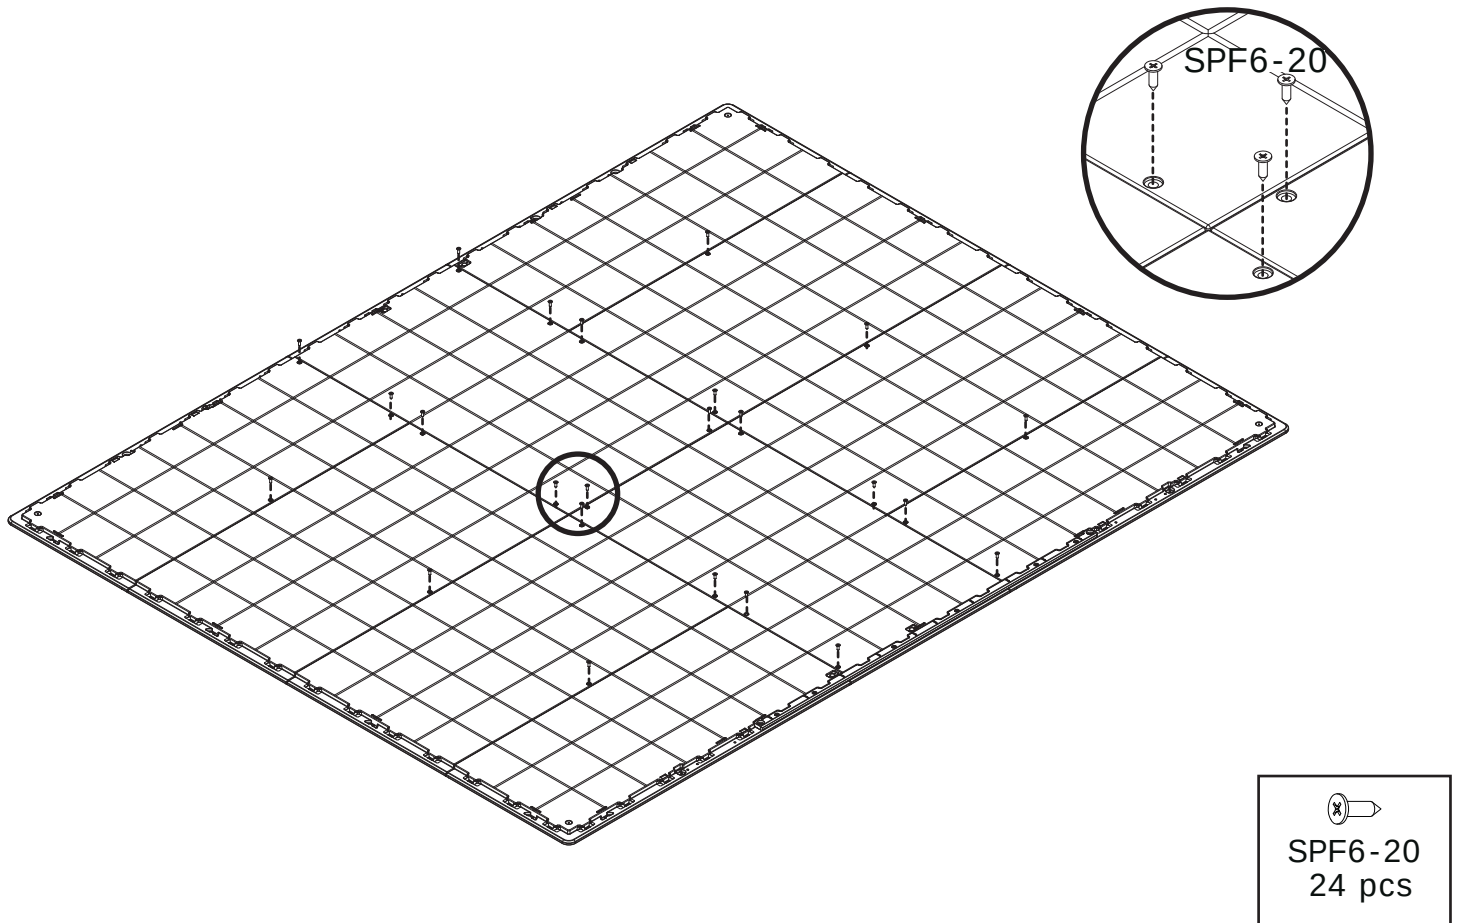
STEP 9



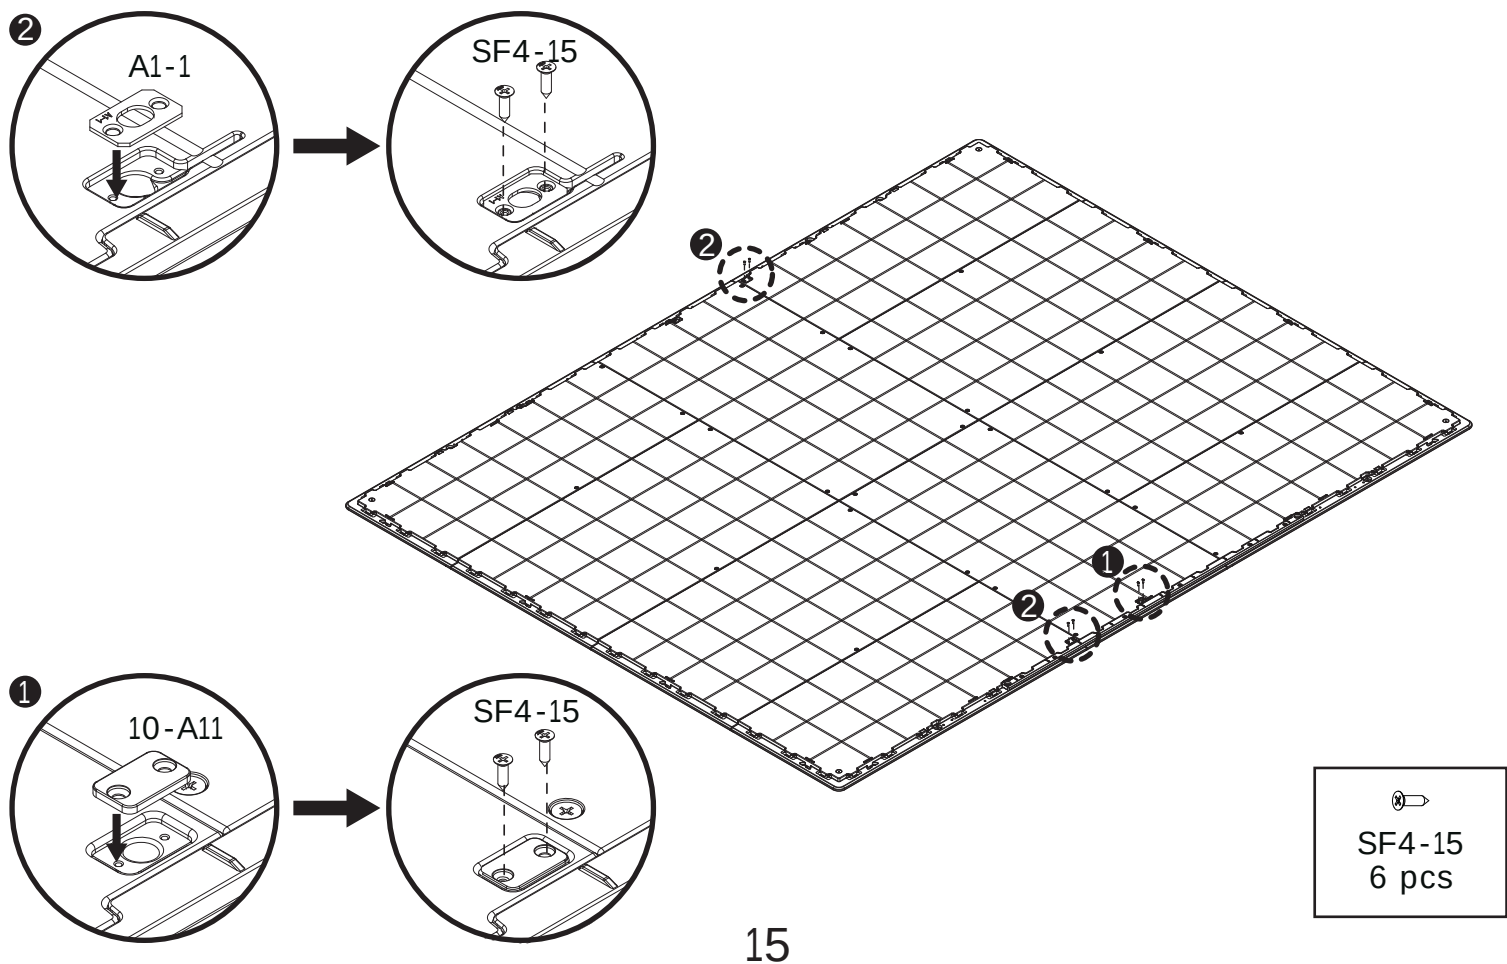STEP 10




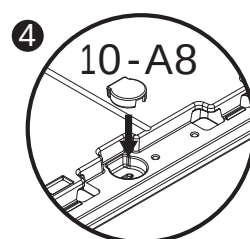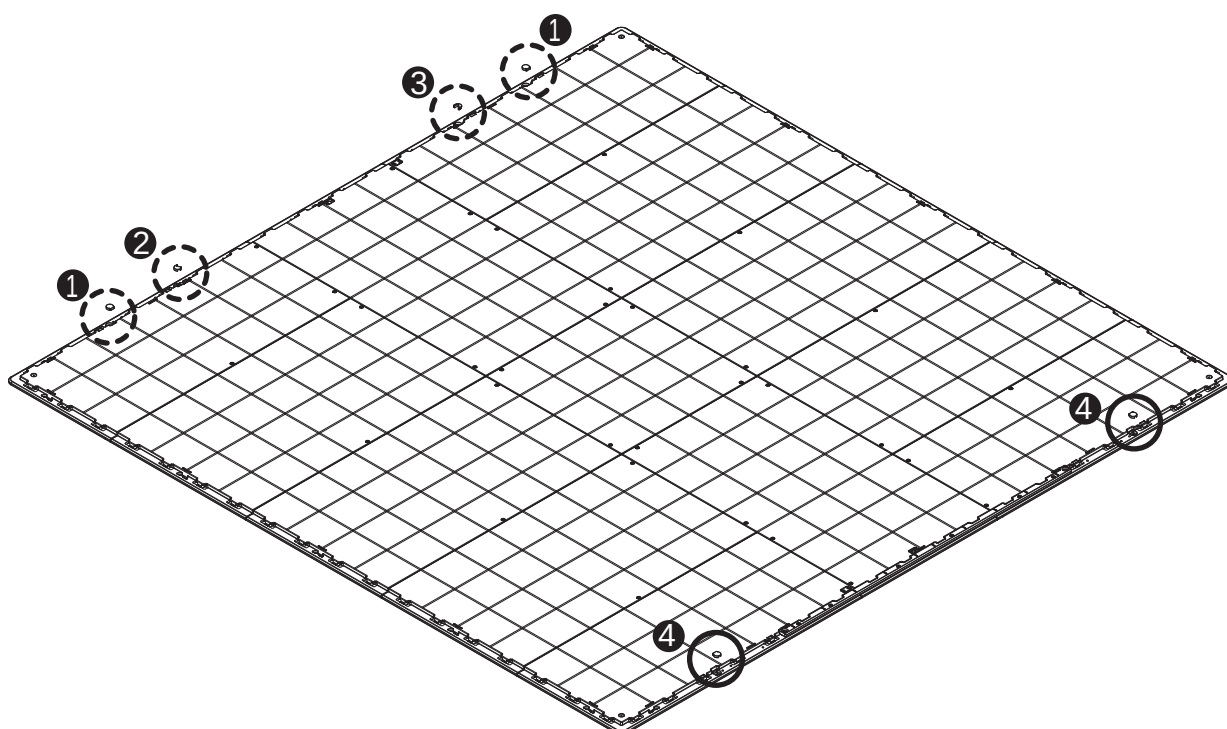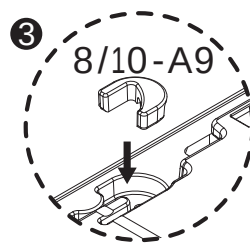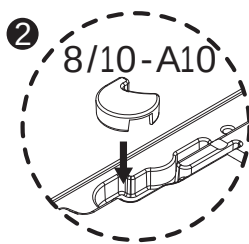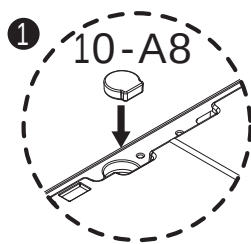STEP 11



STEP 12

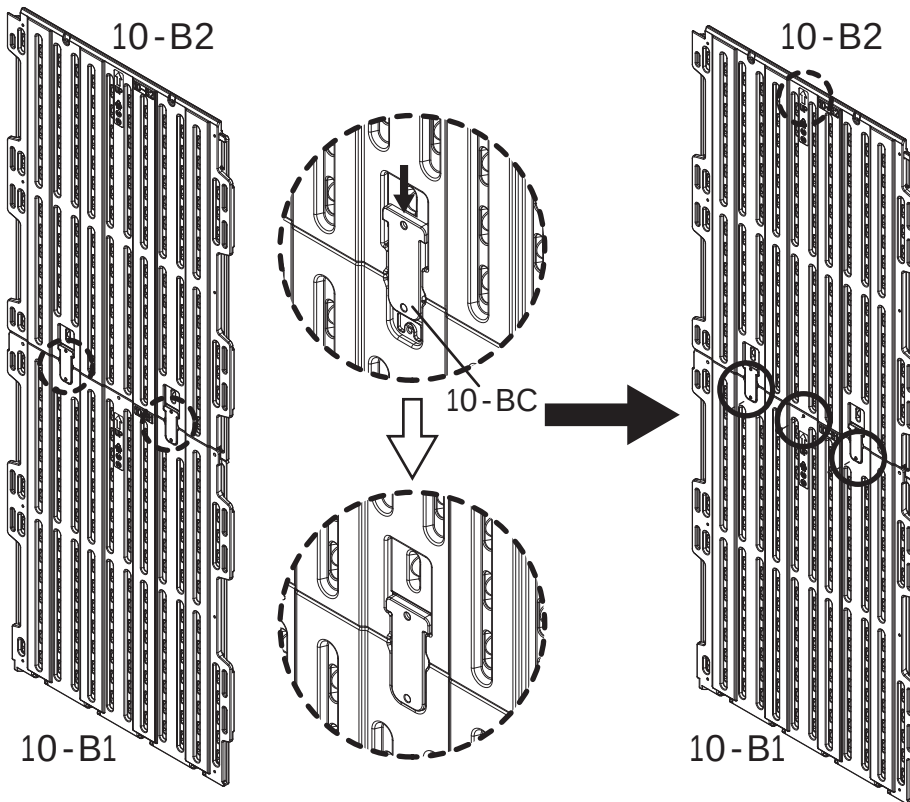Please note the direction of the arrow when installing.




x9

SP6-15

SP6-15
27 pcs

STEP 13

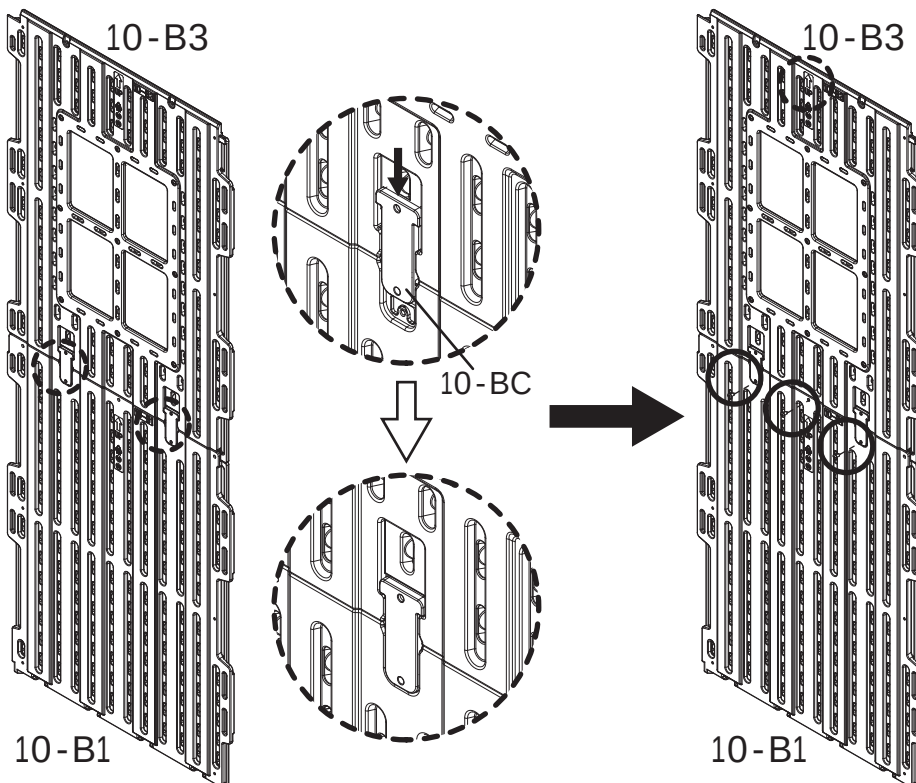Please note the direction of the arrow when installing.




SP6-15

SP6-15
3 pcs


STEP 14

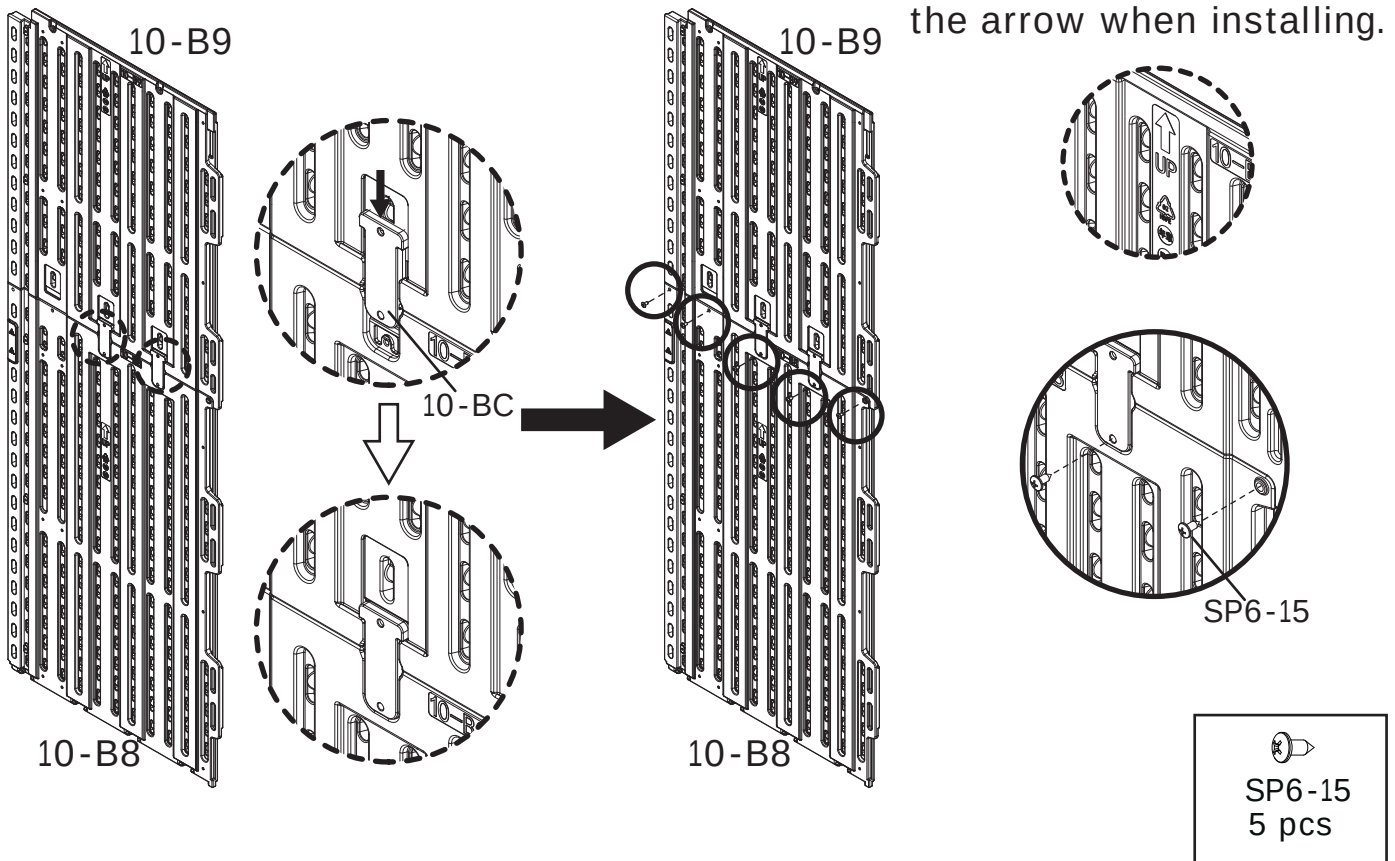Please note the direction of the arrow when installing.



STEP 15

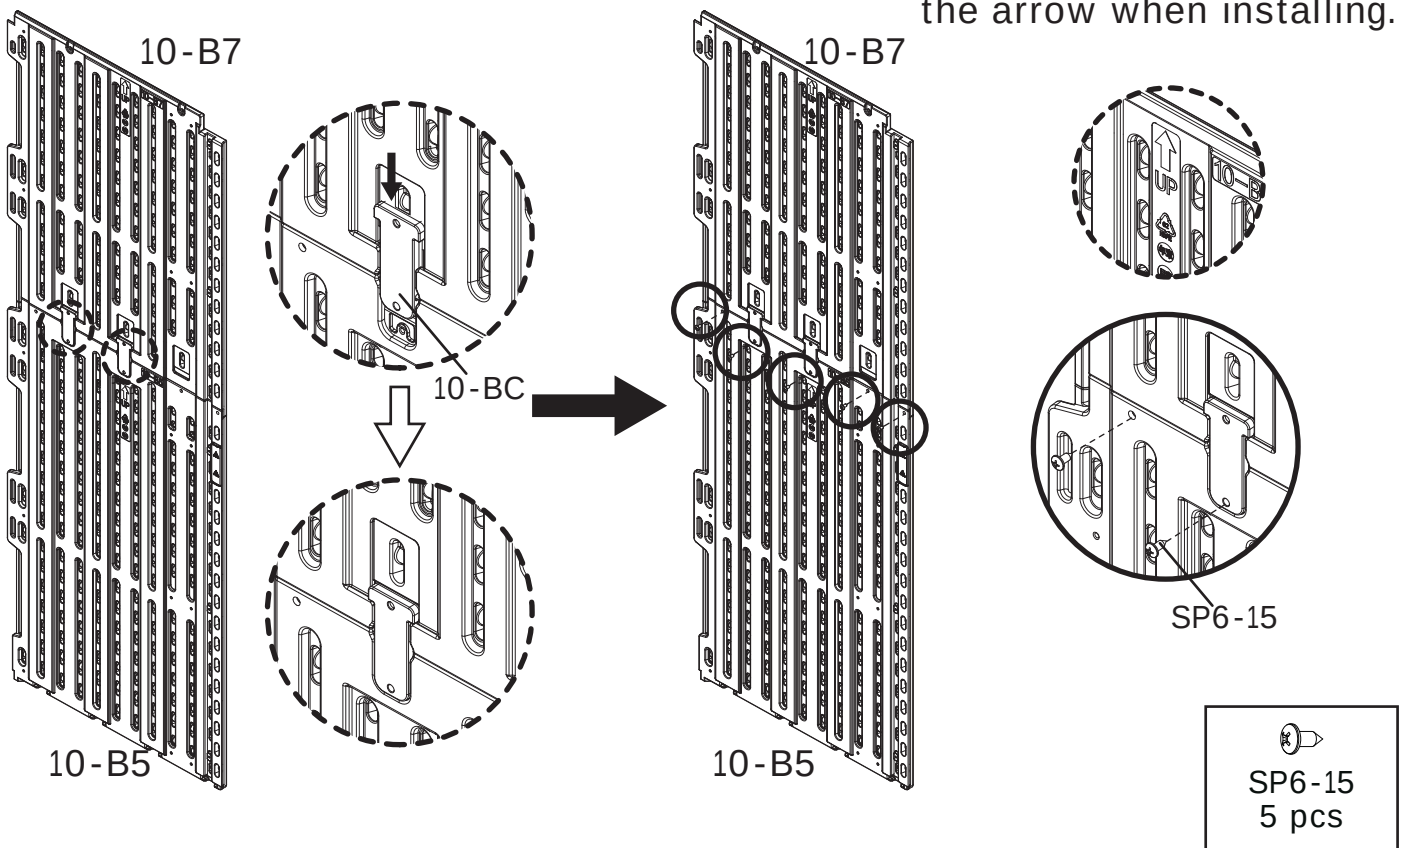
Please note the direction of the arrow when installing.





STEP 16

Place the assembled 10-B9 and 10-B8 at the corresponding position on the floor and rotate them into the groove.




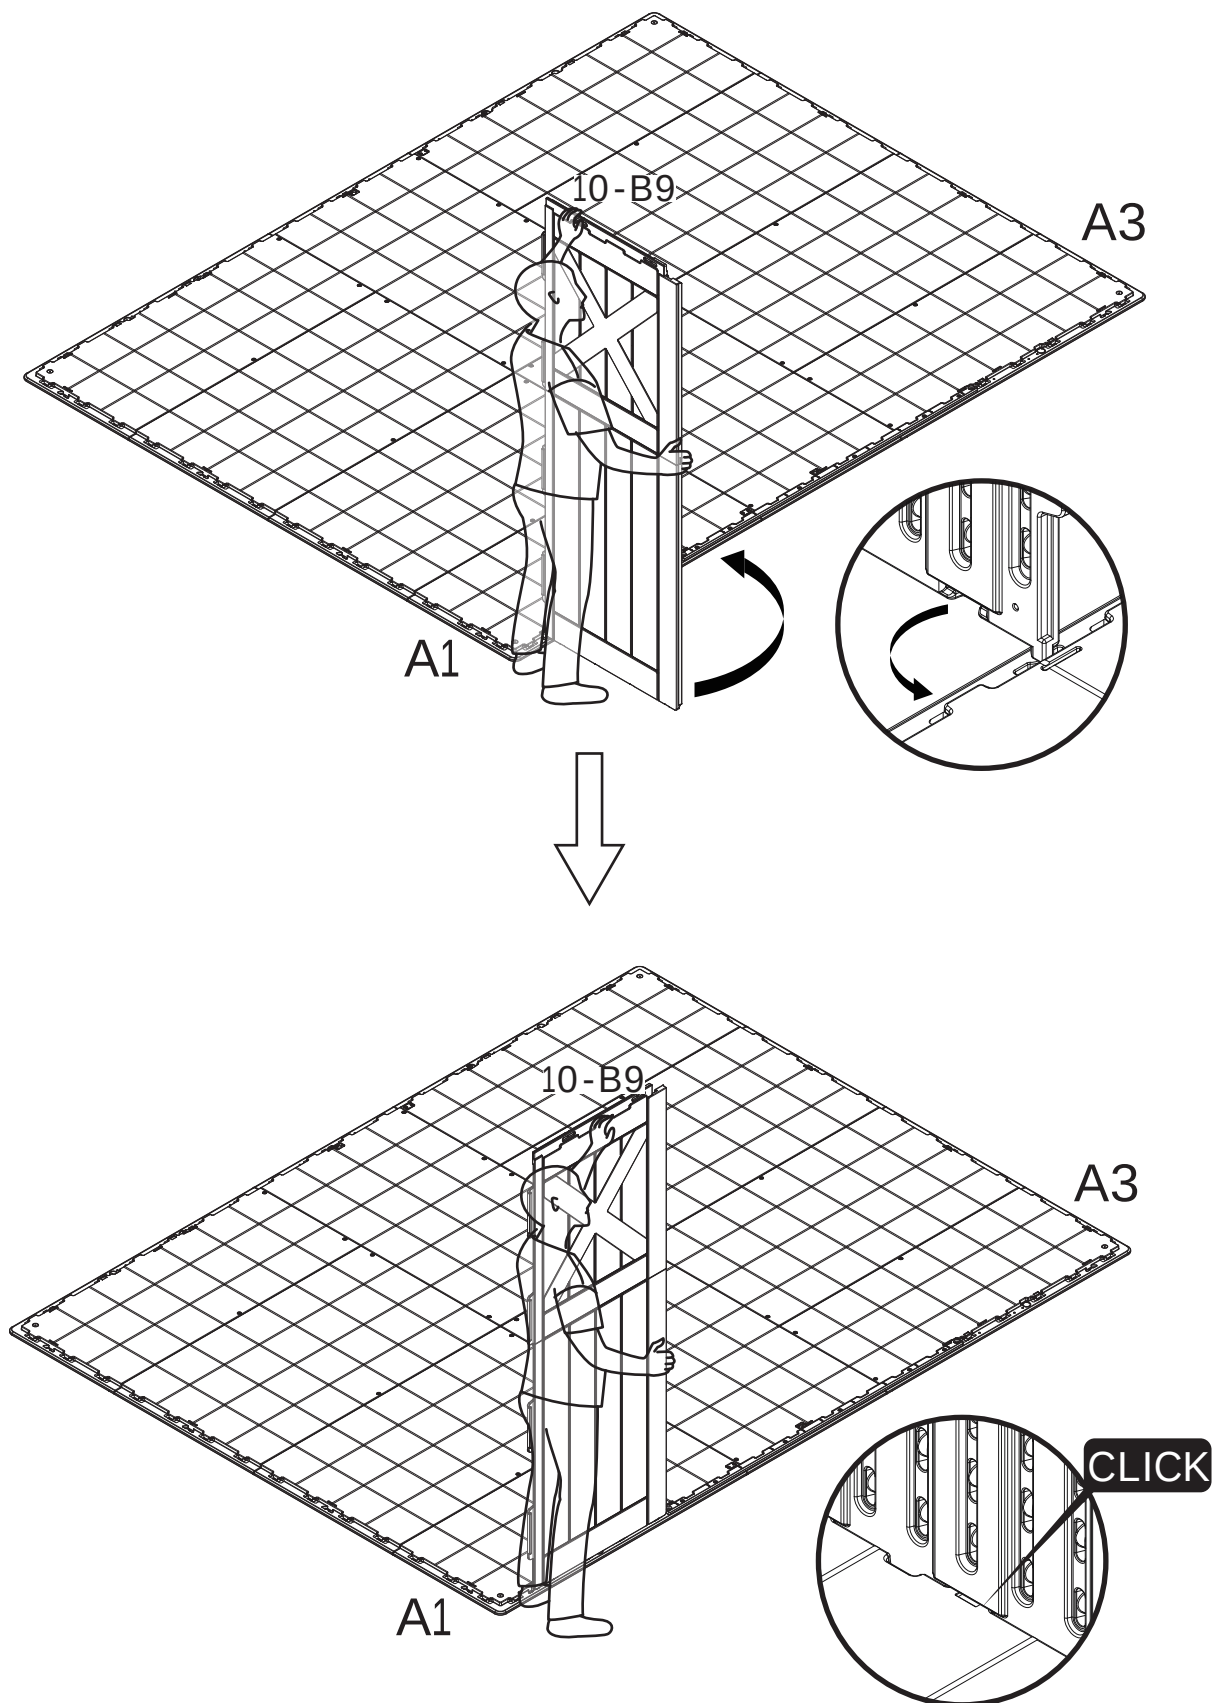
Then Press 10-B9 to make the bottom of 10-B8 align with the floor, kick 10-B8 and snap it into place.



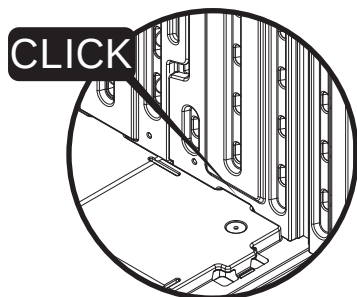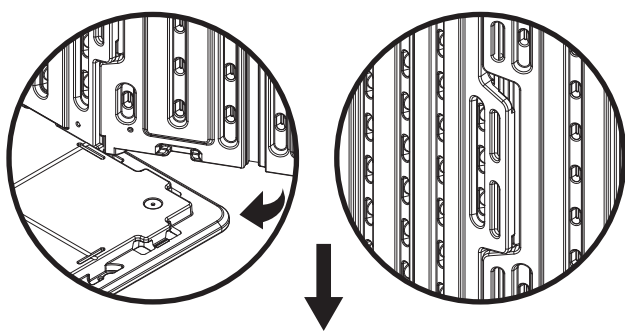STEP 17




Pre-fold B6.

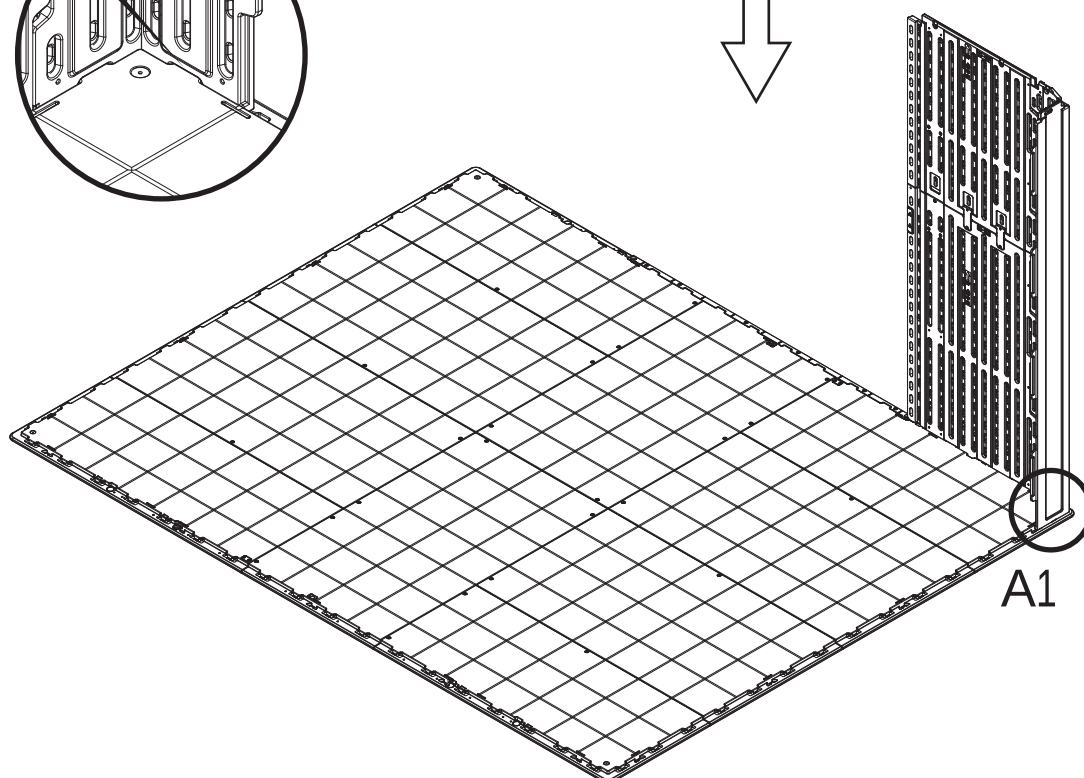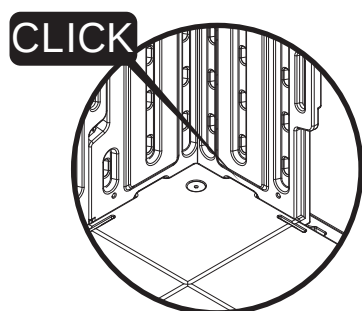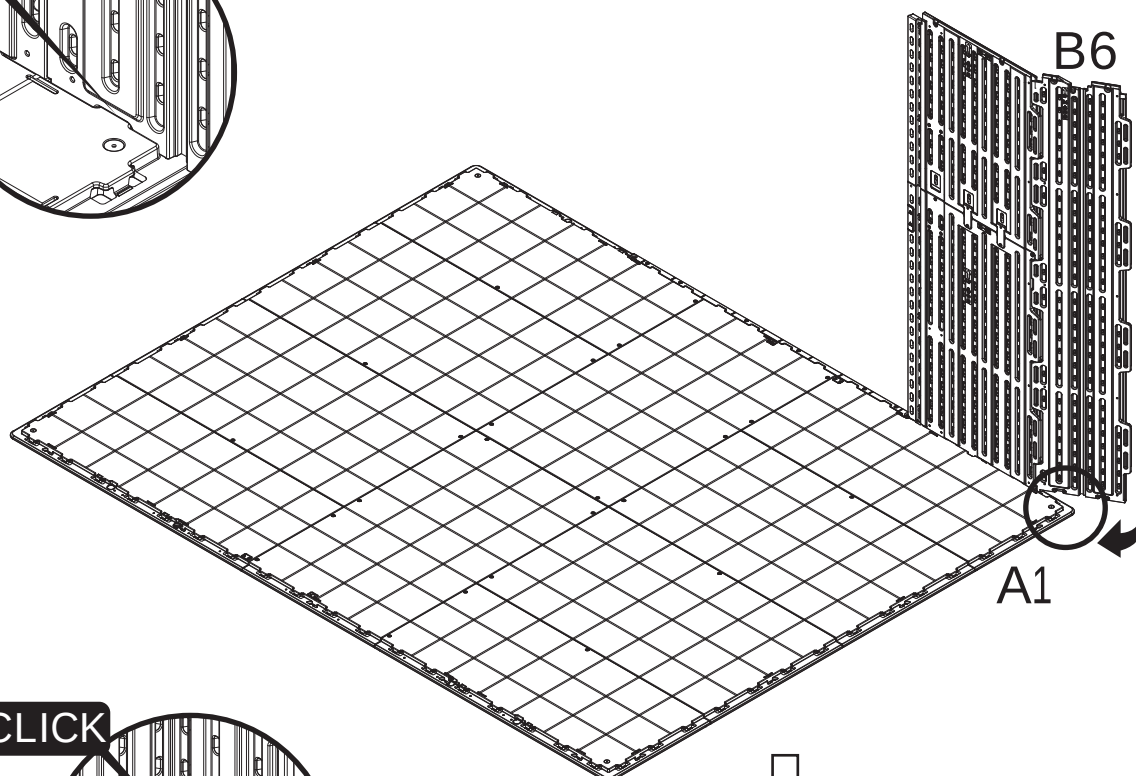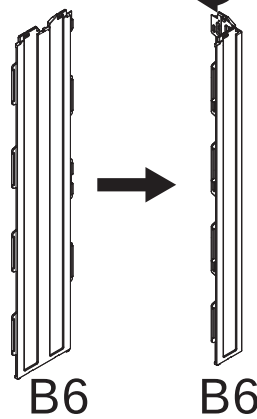

STEP 18


Place the assembled 10-B2 and 10-B1 at the corresponding position on the floor and rotate them into the groove.

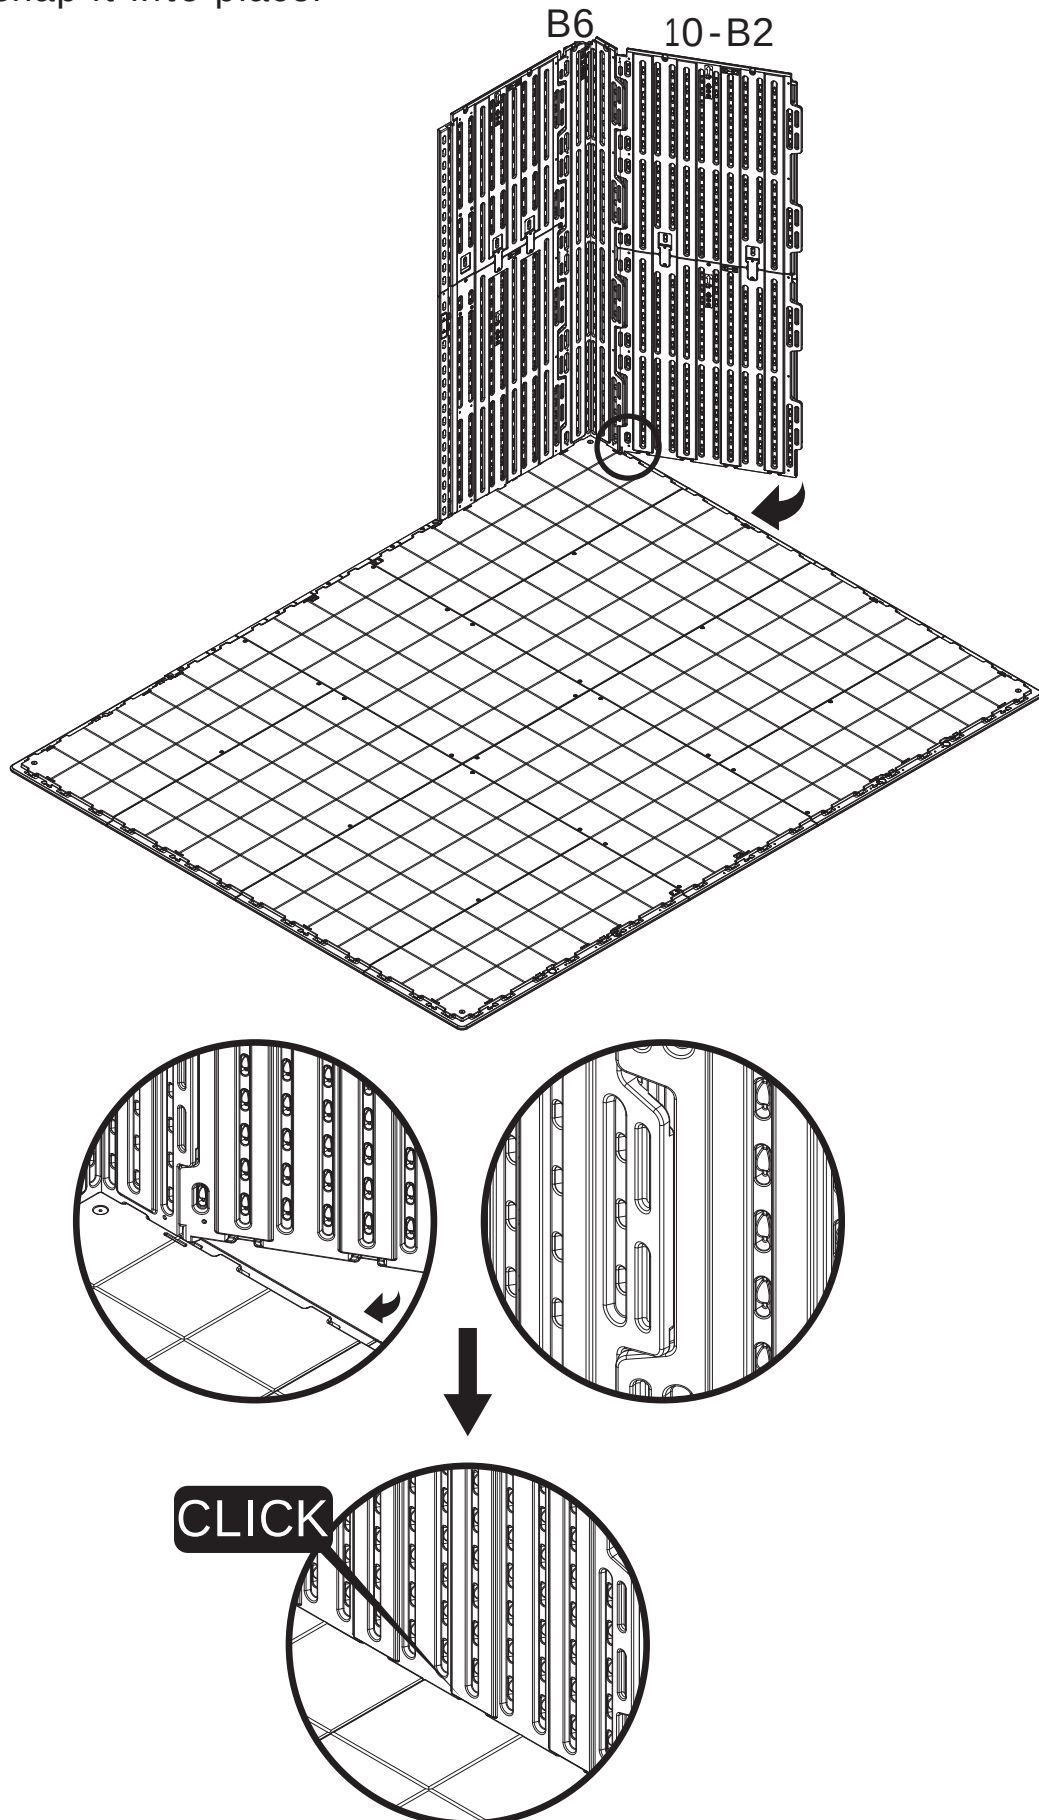Then press 10-B2 to make the bottom of 10-B1 align with the floor, kick 10-B1 and snap it into place.




STEP 19

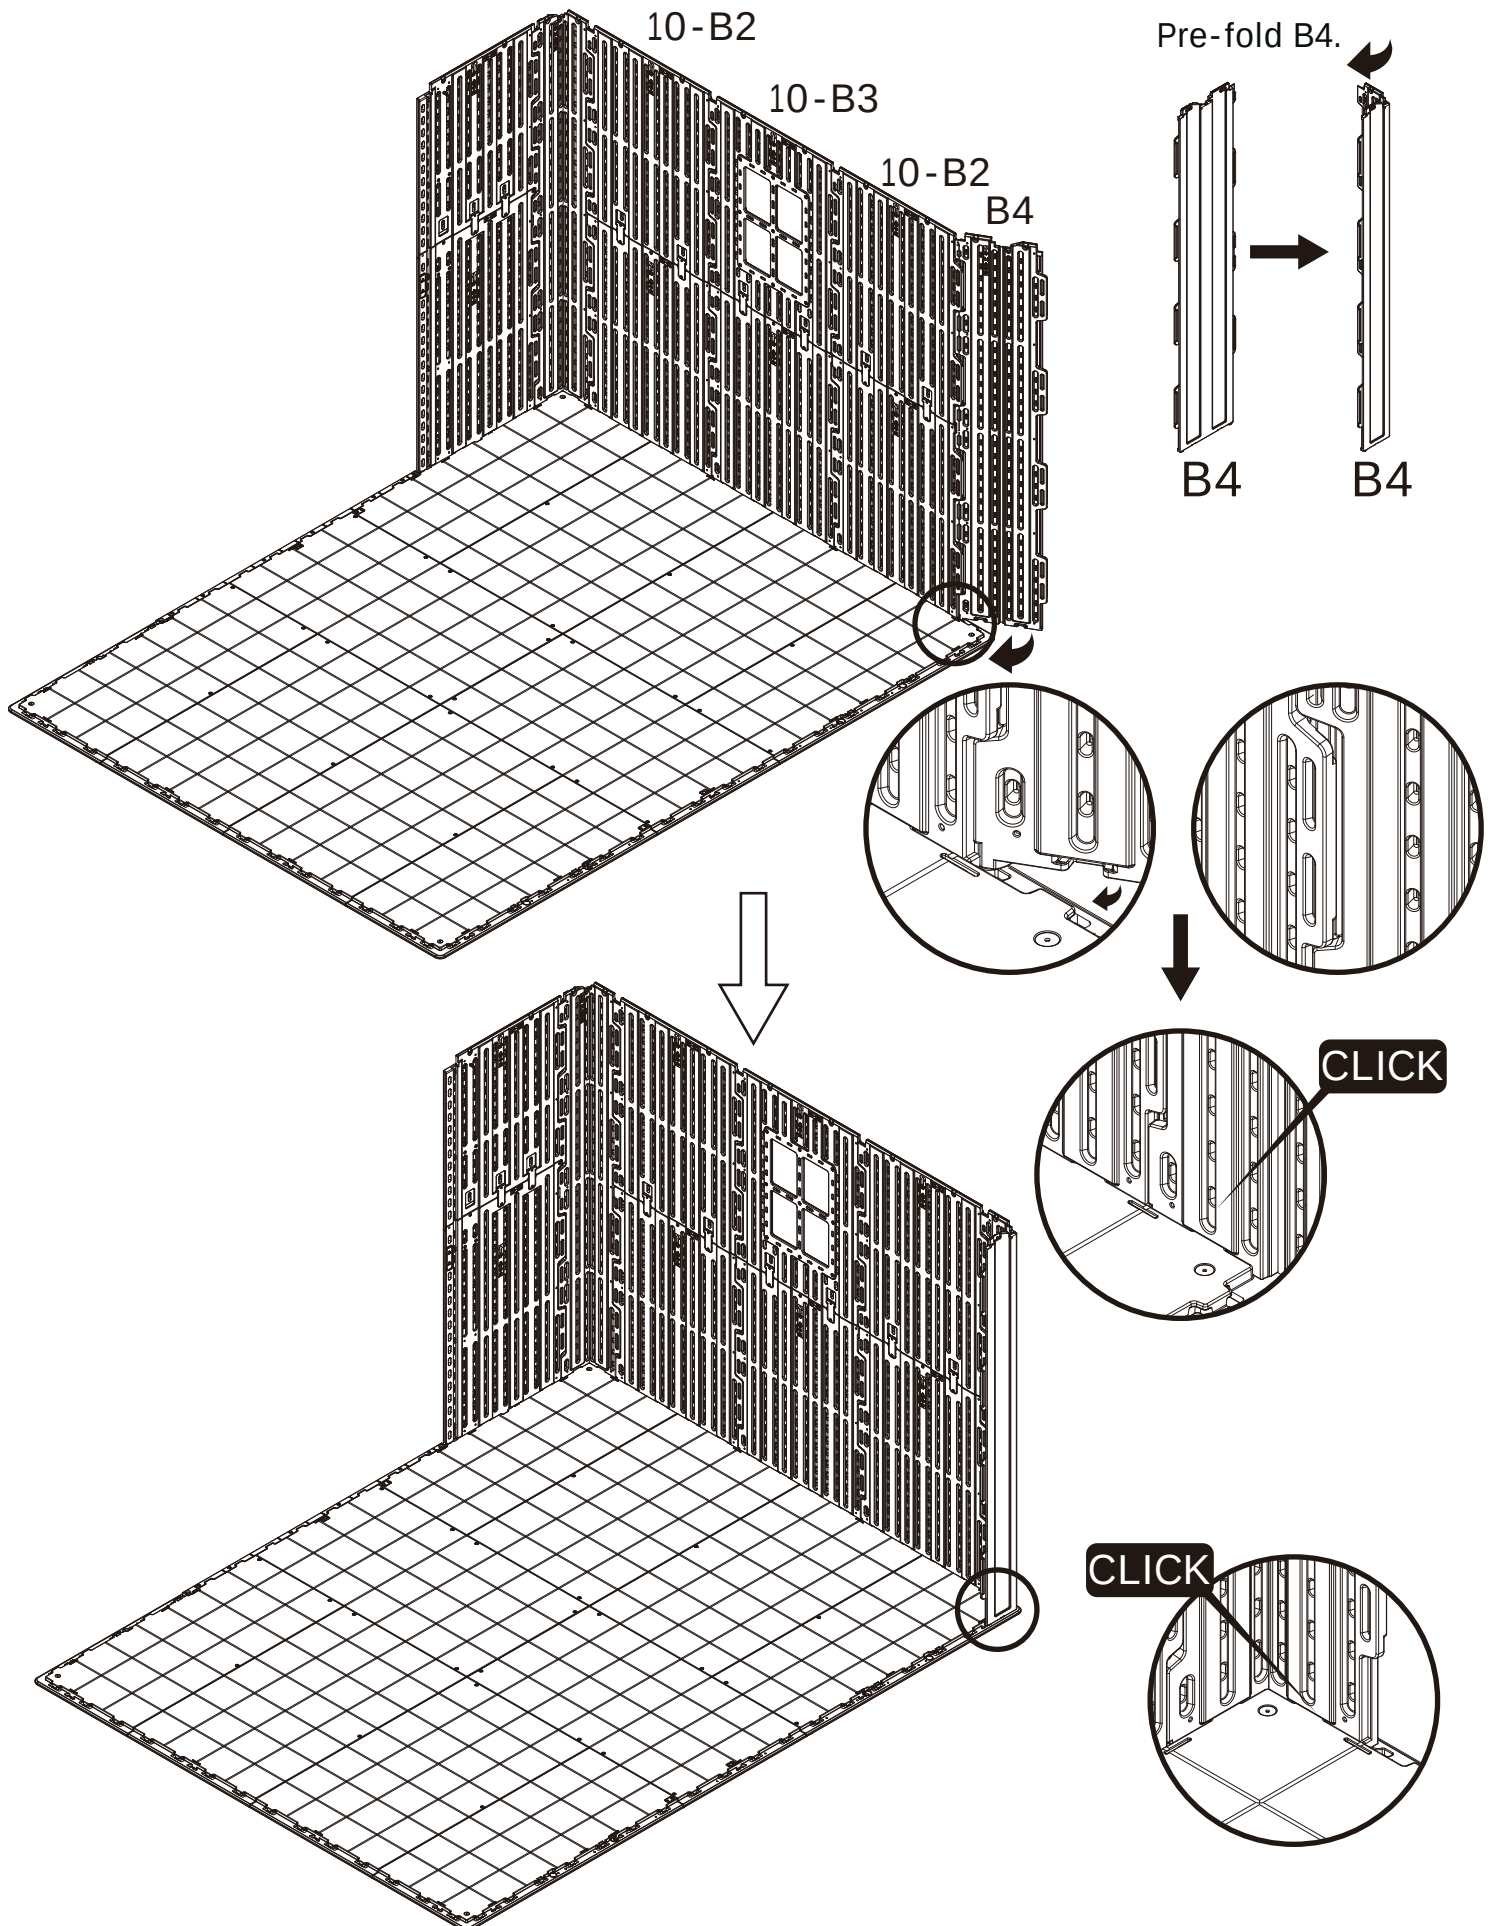Please install the assembled 10-B2, 10-B3, 10-B2 and B4 in order.




STEP 20

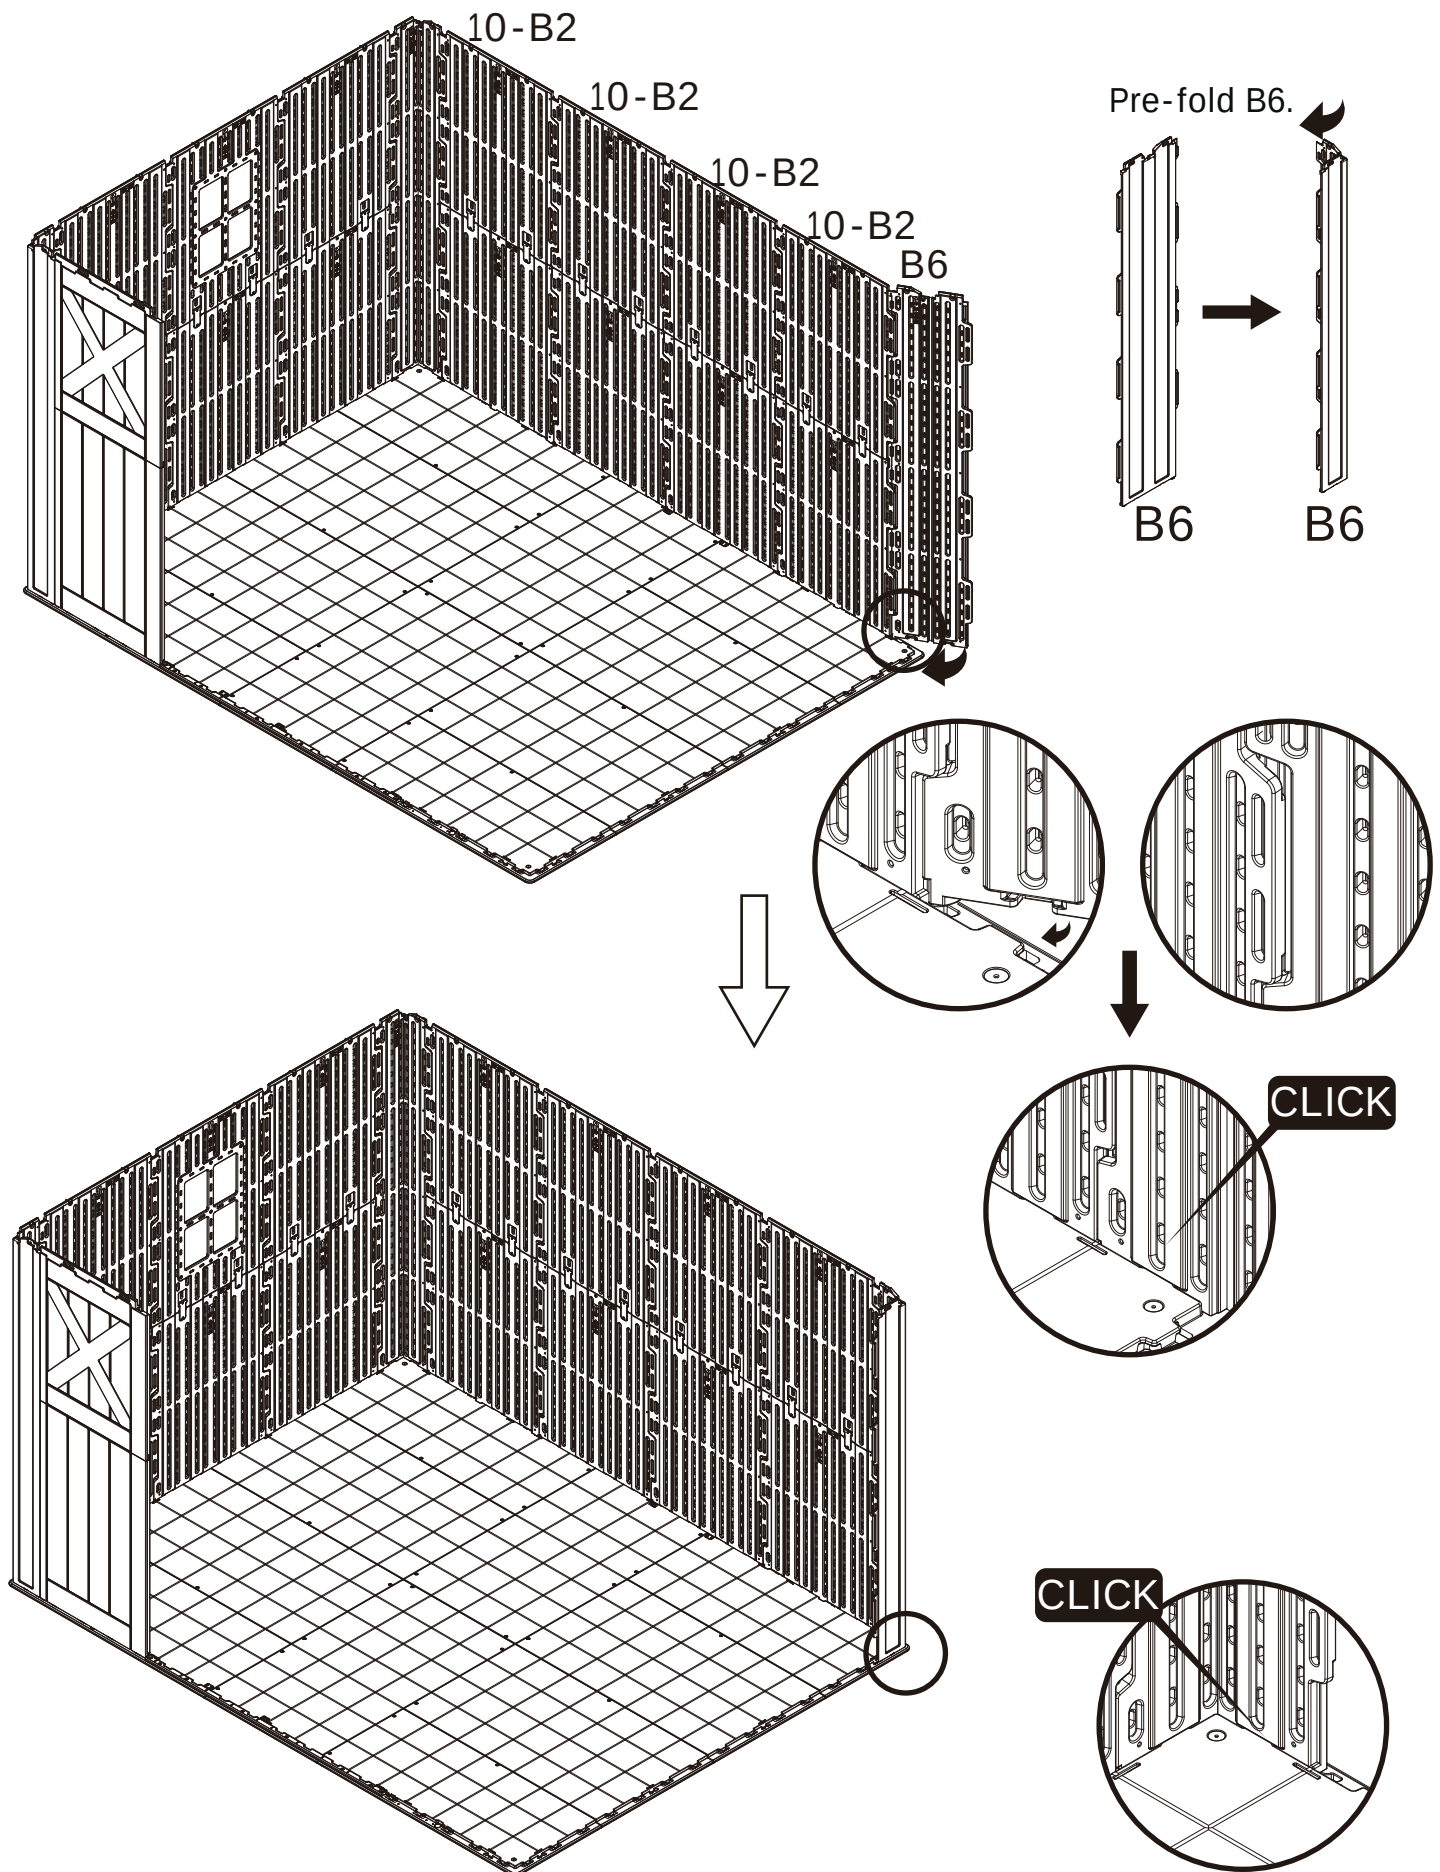Please Install assembled 10-B2, 10-B2, 10-B2, 10-B2and B6 in order.



STEP 21

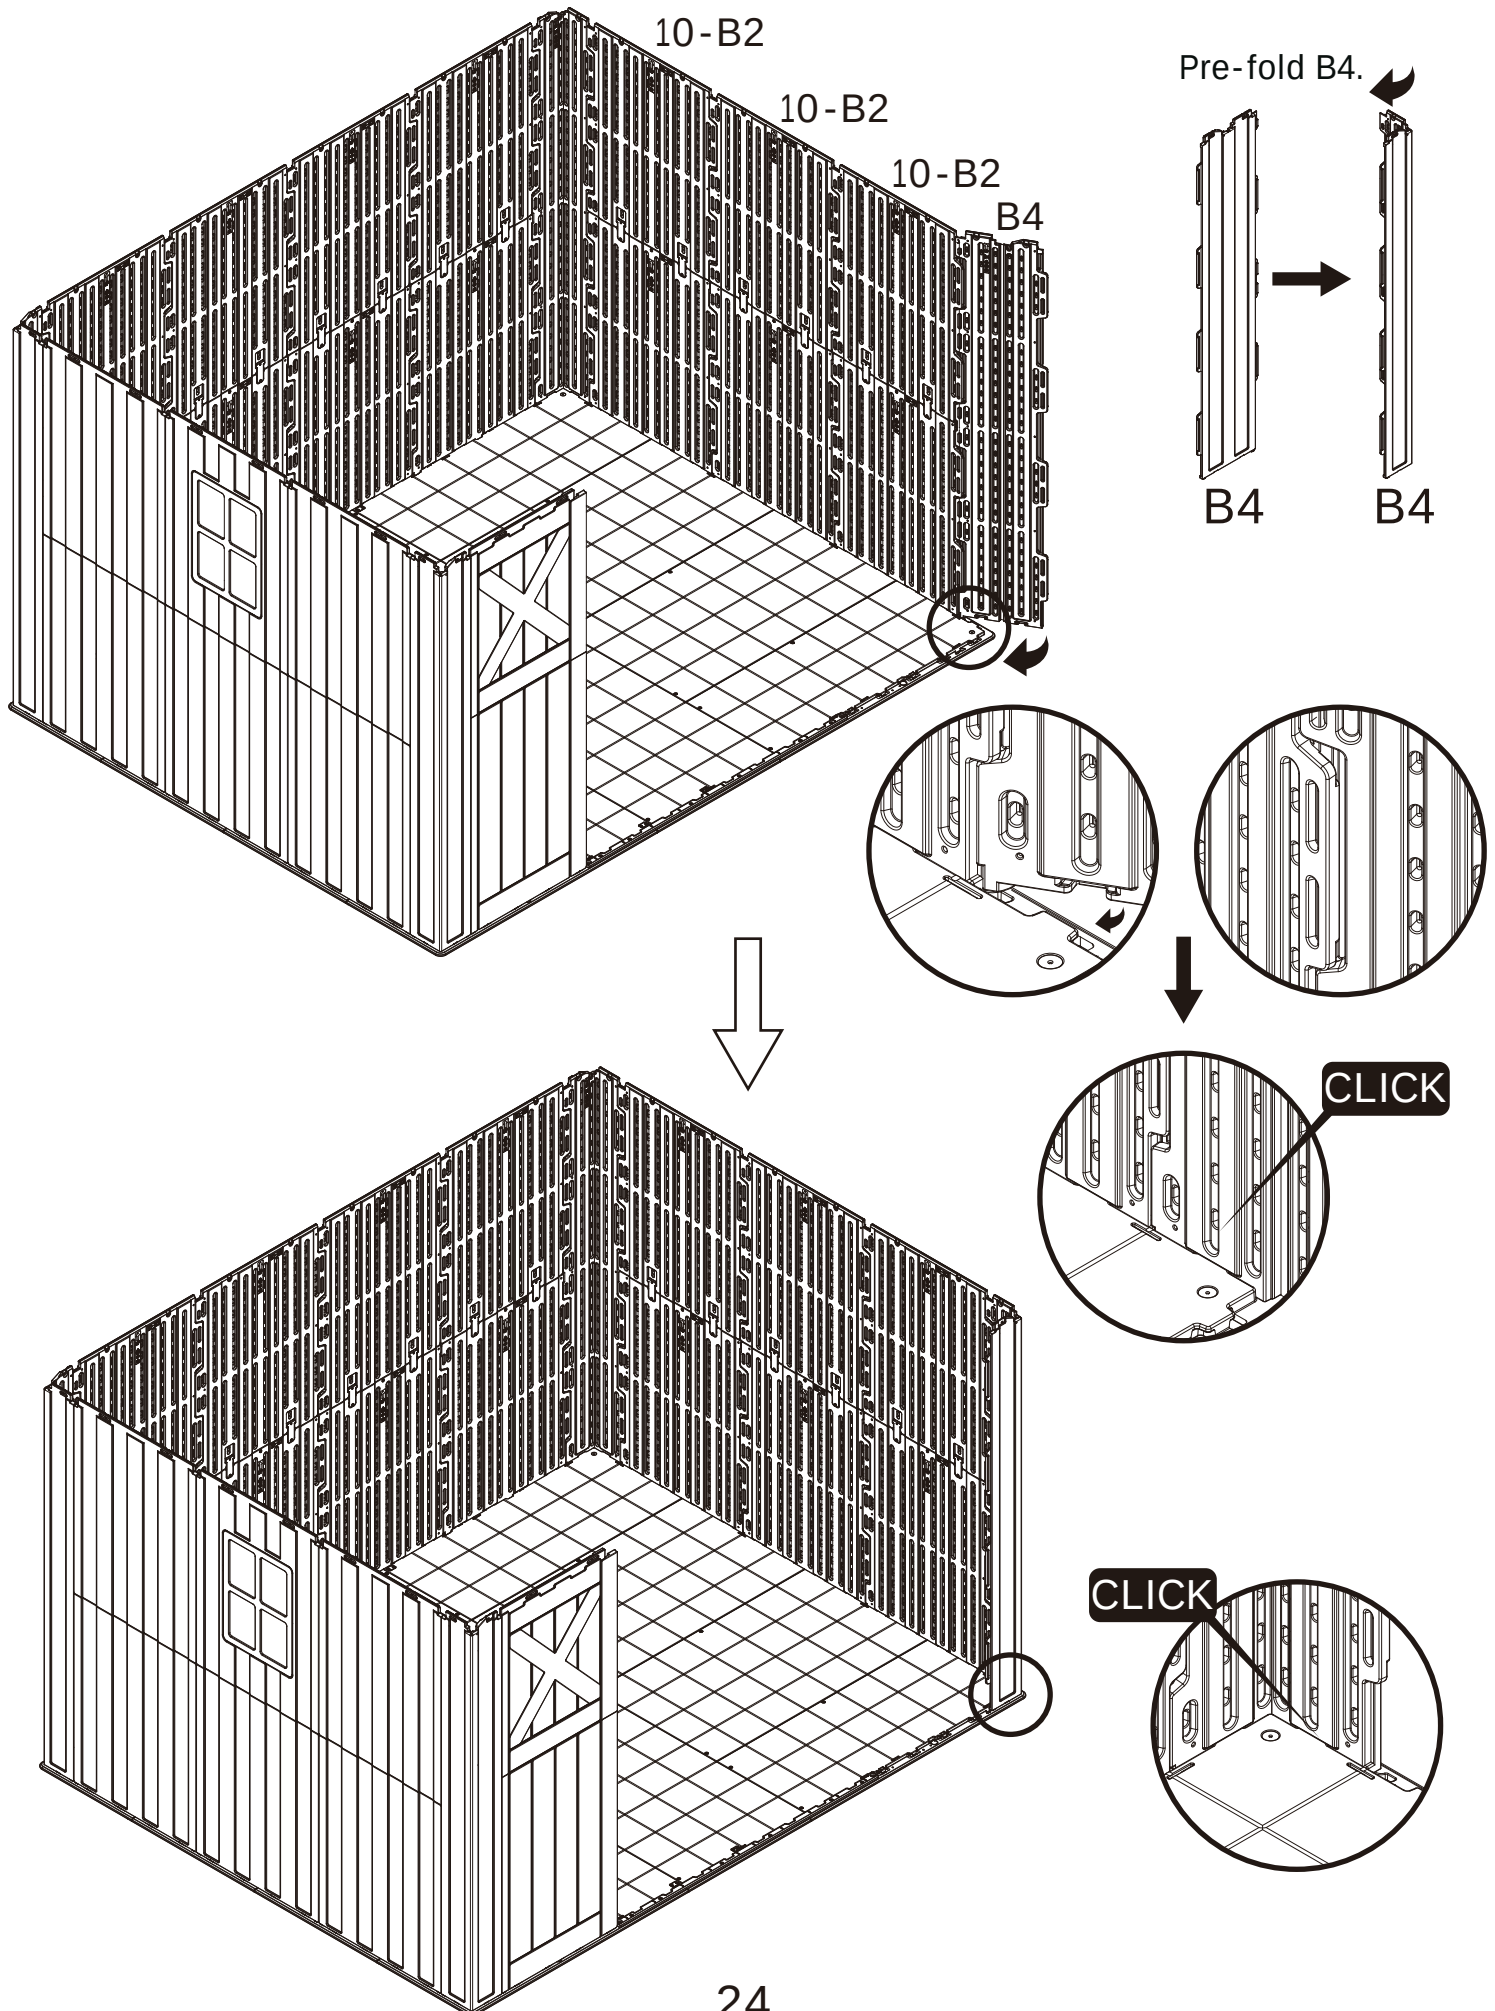Please install the assembled 10-B2, 10-B2, 10-B2 and B4 in order.



STEP 22

