

STEP 7

- 7.1 Attach Drawer Slider(5B) to Keyboard Panel (C) using Screw(6), as shown.
- 7.2 Attach Keyboard Stopper(8) to Keyboard Panel(C) using Power Pin(9), as shown.

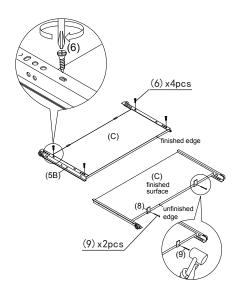


STEP 8

Slide Keyboard Panel(0) to the assembled unit, as shown:

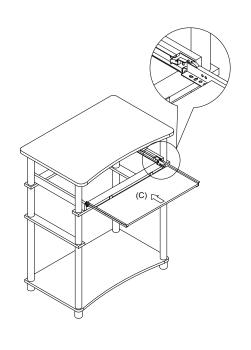

Recommended Maximum Weight

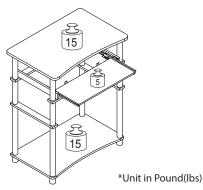

WARNING:

- >This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.
- >DO NOT allow children to climb on unit.
- >Put heavier items on lower shelves.

Assembly Instruction Home Laptop Notebook

Computer Desk


DIMENSION: 23.6"(W) x 29.6"(H) x 15.6"(D)






Recomm. 1 Person



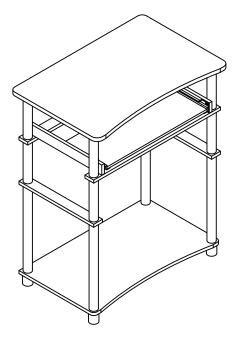

No	Hardware List		Qty
1	Long Tube		4pcs
2	Short Tube		8pcs
3	Short Leg		4pcs
4	Insert Cap	•	4pcs
5	Drawer Slider (5A) x 2pcs	(5B) x 2pcs	1pcs
6	Short Screw		8pcs
7	Long Screw		4pcs
8	Keyboard Stopper		2pcs
9	Power Pin		2pcs

No	Parts List	Qty
Α	Top Panel	1pcs
В	Bottom Panel	1pcs
С	Keyboard Panel	1pcs
D	L/R Slider Panel	2pcs
Е	F/B Apron	2pcs
F	L/R Cross Bar	2pcs

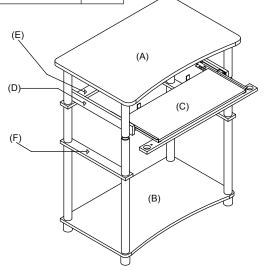


USEFUL HINTS BEFORE YOU START:

- 1. Read each step carefully before starting.
- 2. It is important that each step is performed in correct order to avoid difficulties.
- 3. Identify, sort and count the parts before assembly.
- 4. Assemble your furniture on packaging cardboard to prevent scratch or damage.
- 5. Clean the product with mild cleanser using soft damped cloth. Do not use harsh or abrasive cleanser.
- 6. Using uncompatible hardware might cause damage to product.


STEP 1

Attach Insert Cap(4) to Top Panel(A) using Short Tube(2), as shown.

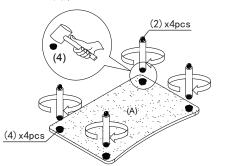


STEP 2

Attach Drawer Slider (5A) to L/R Slider Panel (D) using Screw (6), as shown.

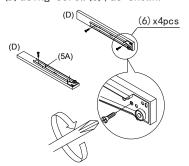


STEP 3

Attach F/B Apron Panel (E) to assembled parts from Step 2, using Long Screw (7), as shown.

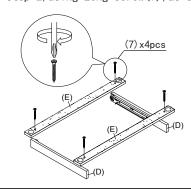


STEP 4

Attach Short Tube (2) to assembled parts from Step 1 & Step 3, as shown.

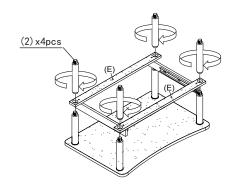

STEP 5

Attach L/R Panel (F) to assembled parts from Step 4, using Long Tube (1), as shown.

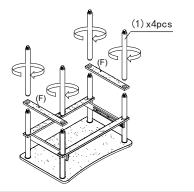

STEP 6

Attach Bottom Panel (B) to assembled parts from Step 5, using Short Leg(3), as shown.

