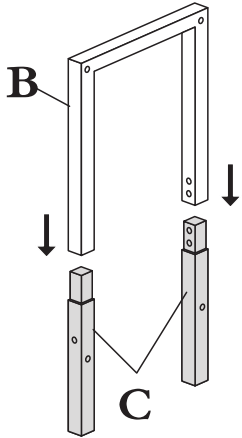

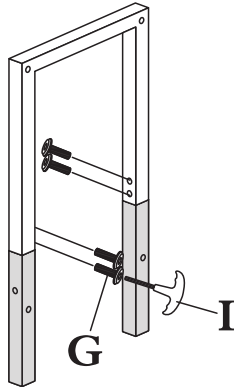

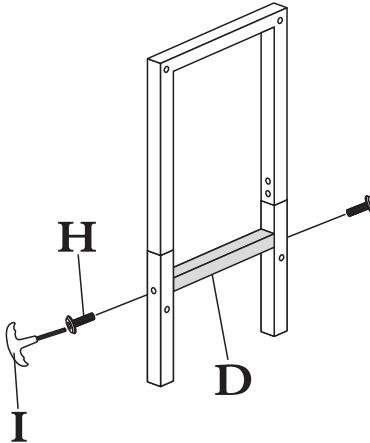

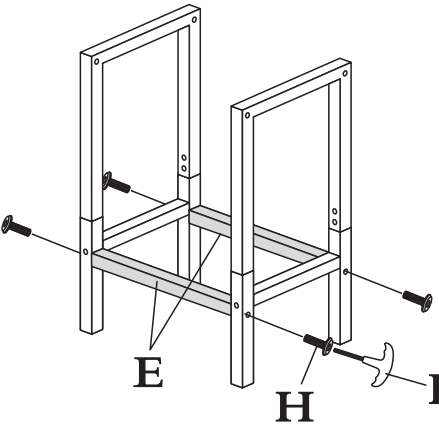

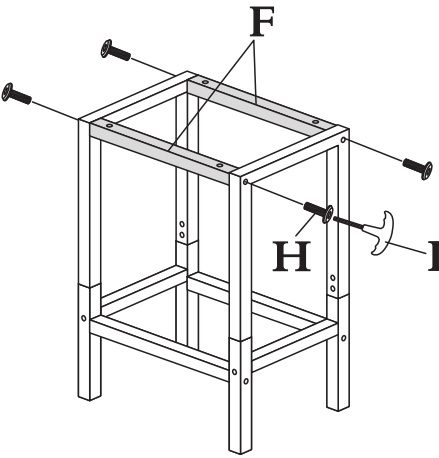

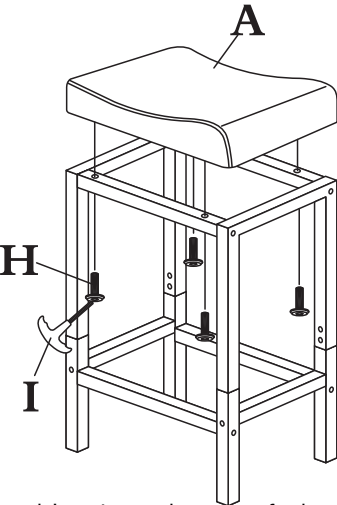



Assembling Instruction

A		1 UN	1		Assemble 2 identical side frames: Fit one Bside frame onto two C leg connectors vertically to form one side support unit. Repeat to make a second identical unit.
B	 305-385mm	2 UN	2		For each assembled side frame unit: Use G short screws (6×14mm) to fasten the joint between B frame and C leg connector. Tighten screws with wrench I. Complete this for both side frames.
C	 305-355mm	4 UN	3		Install D short cross bars (230mm) between the two vertical legs of each side frame: Pass H long screws (6×40mm) through the frame holes into D bars, then secure with wrench I. Finish both side frames.
D	 230mm	2 UN	4		Connect the two separate side frames together with E middle cross bars (350mm): Align E bars between the two side frames, insert H long screws through frame holes into E bars, and fully tighten all fasteners using wrench I.
E	 350mm	2 UN	5		Mount F top cross bars (350mm) on the top of the whole frame to form the upper square rack: Thread H long screws through the frame into F bars, then tighten all screws evenly with wrench I to stabilize the full stool frame.
F	 350mm	2 UN	6		Place cushion A on the top of the finished metal frame, align it with the top rack, and secure it with the remaining H screws. Double-check all screws with wrench I to ensure everything is tight, assembly complete.
G	 6x14mm	8 UN			
H	 6x40mm	16 UN			
I		1 UN			