

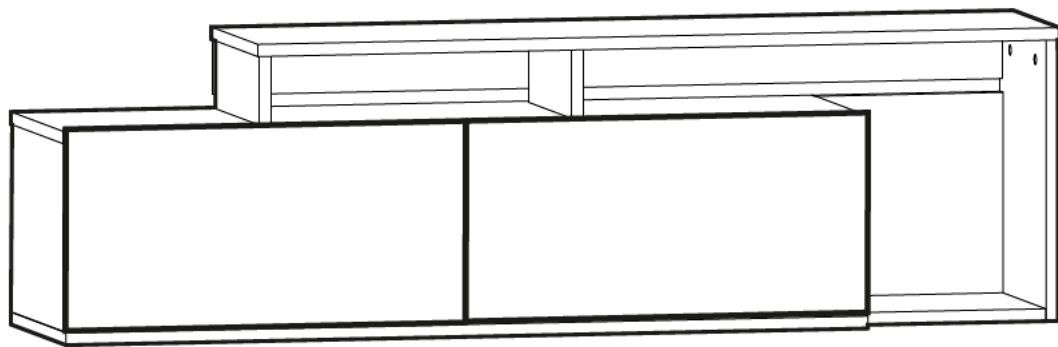
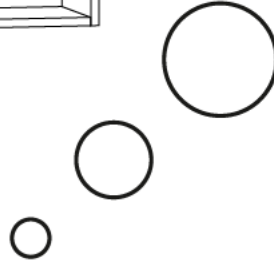


# Assembly Instruction

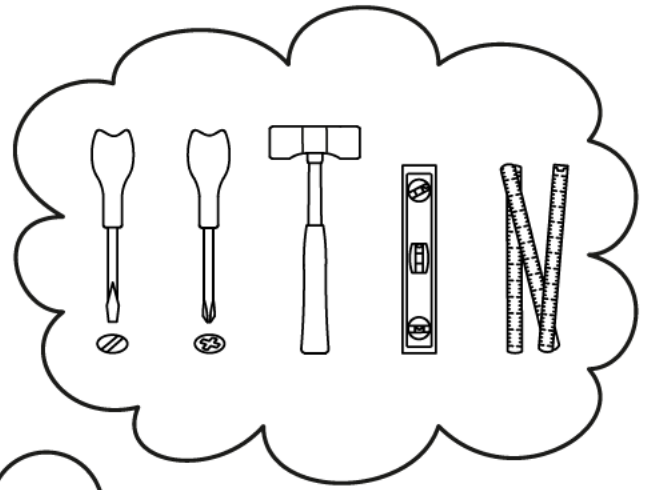

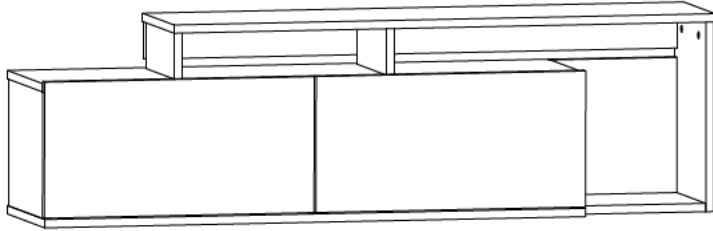



## Disassembled Parts

Part#1	1x
Part#2	1x
Part#3	3x
Part#4	2x
Part#5	2x
Part#6	1x
Part#7	1x
Part#8	1x
Part#9	1x
Part#10	1x

---

**Total 14x**

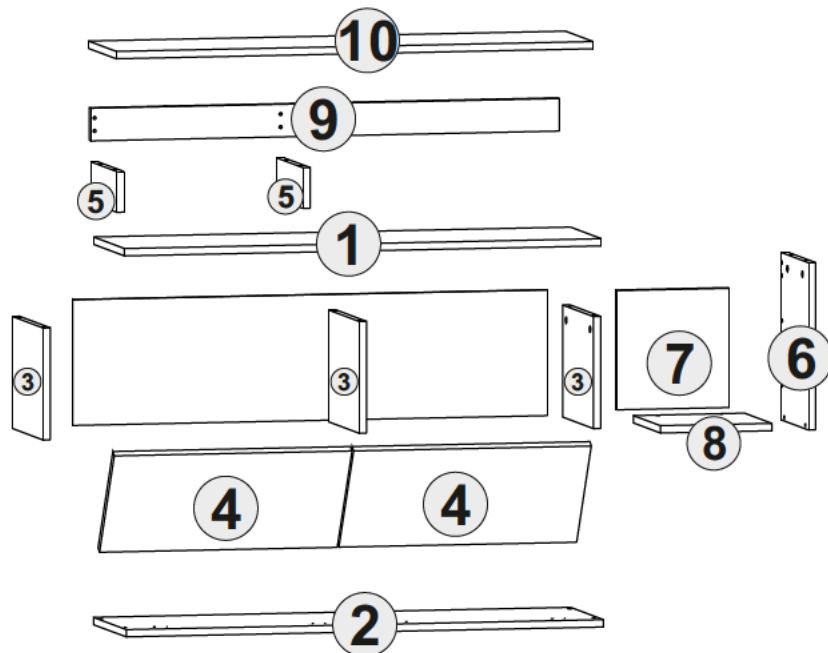

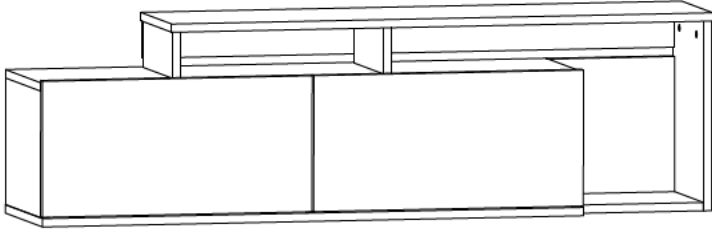

## Tools & Installation Components



A19 3,5x18 SNT VDASI

16x




A23 Q10 mil

14x



A02 15x14 gövde

14x



A17 6x50 KBN VDASI

18x




A21 Q15 ypşkn tapa 1

12x



C01 SDB

4x



C04 aks37 taban

4x



A28 çivi

20x




A20 Q12 ypşkn tapa 1




6x







Please be aware that C01(bracket) and C04(pivot) parts may come as attached together.

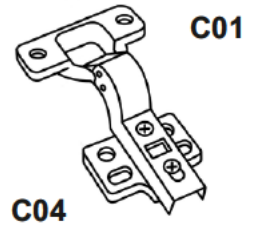





# 1

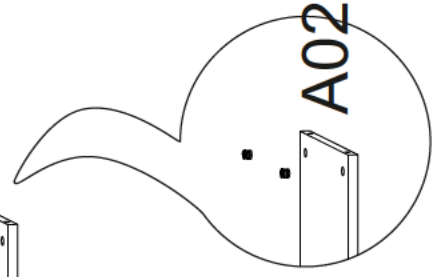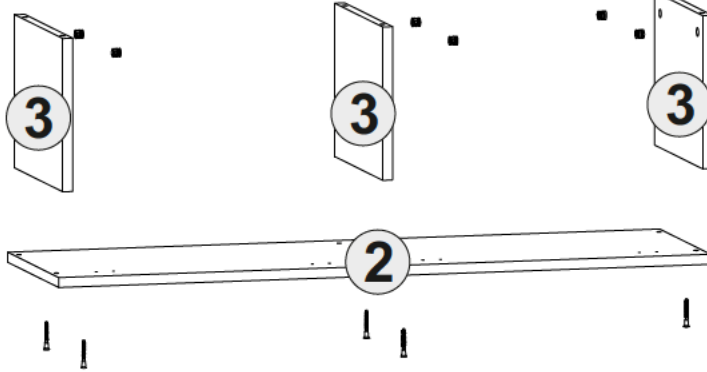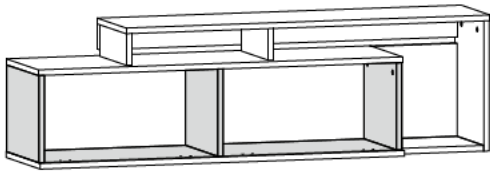


# 2


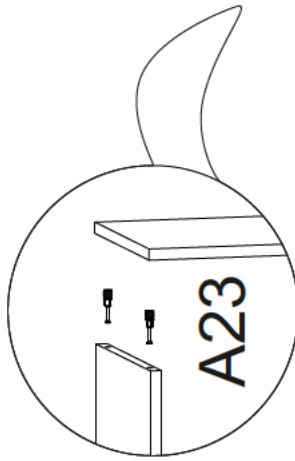
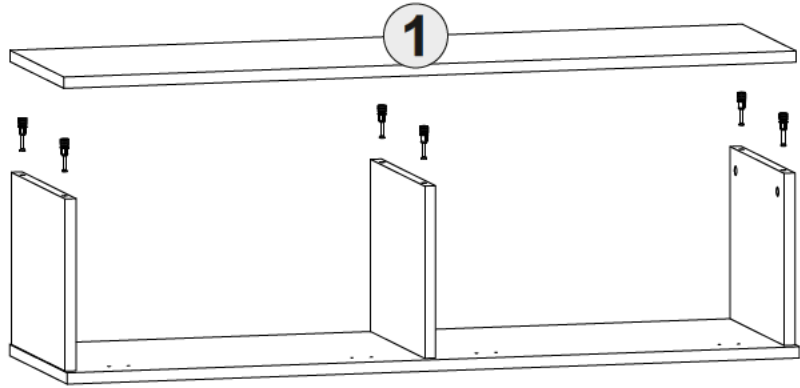
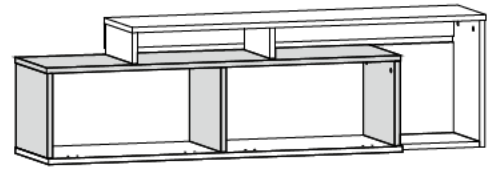
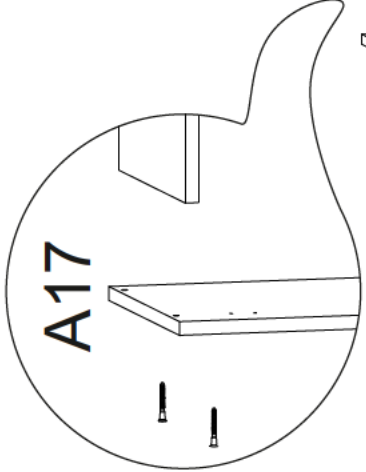


# 3

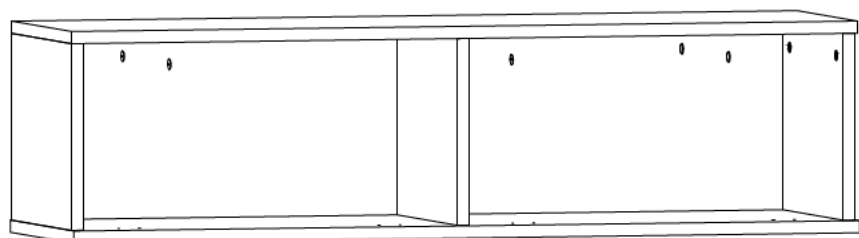
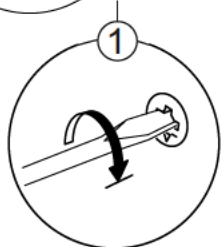
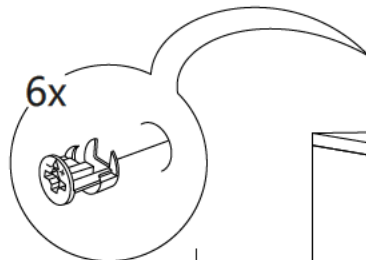
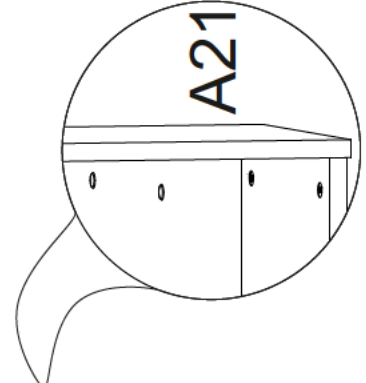


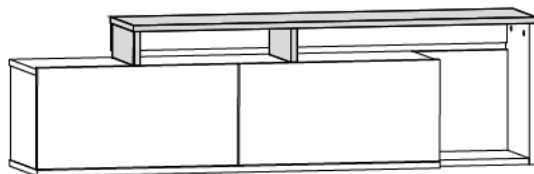



**4**

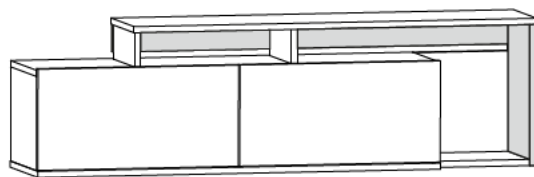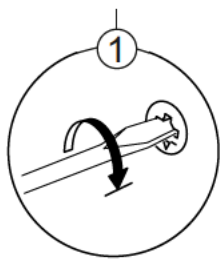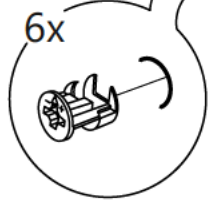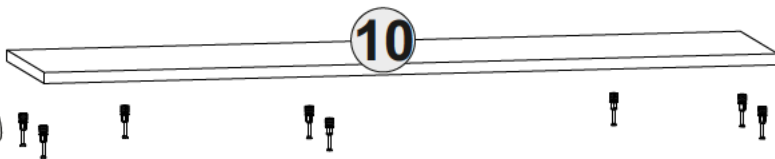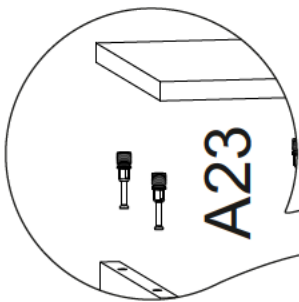





**5**

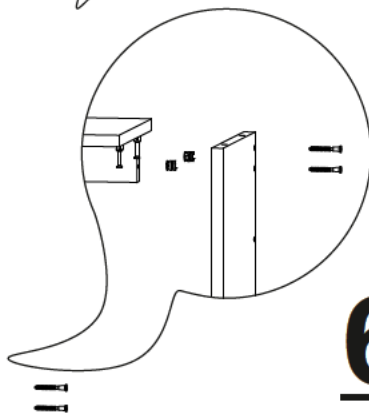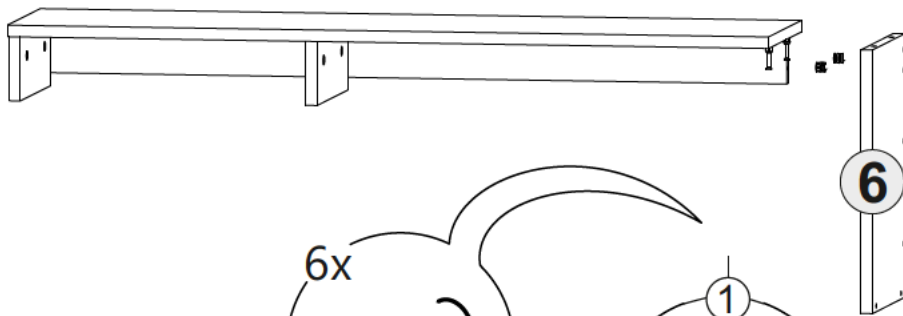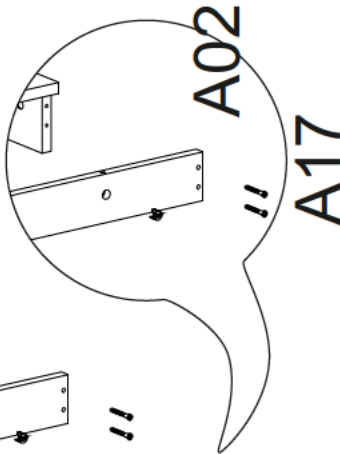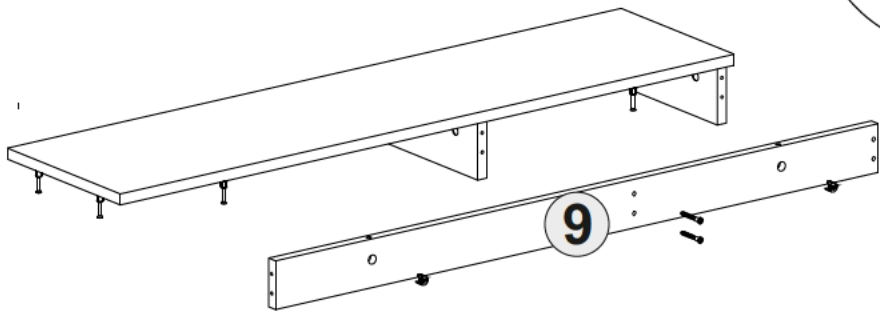



**6**

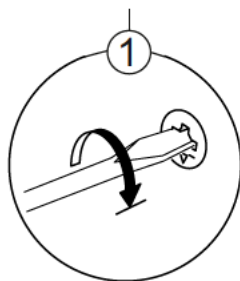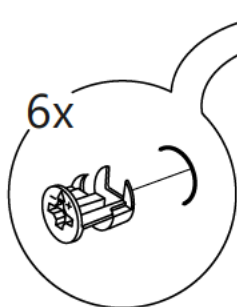

# 7

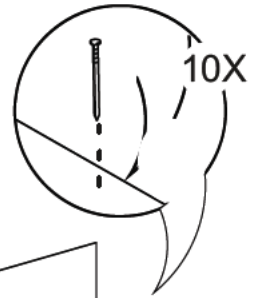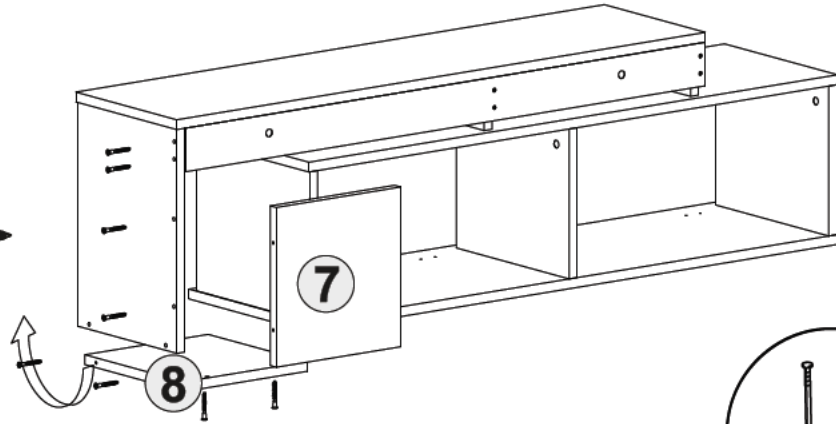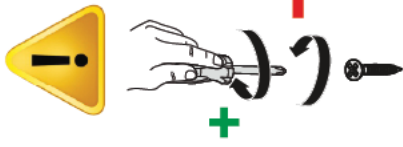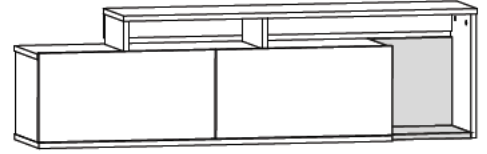

# 8

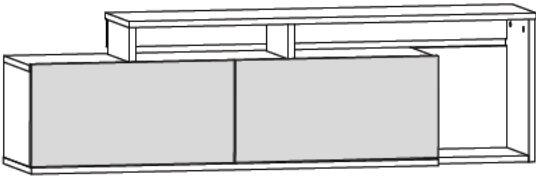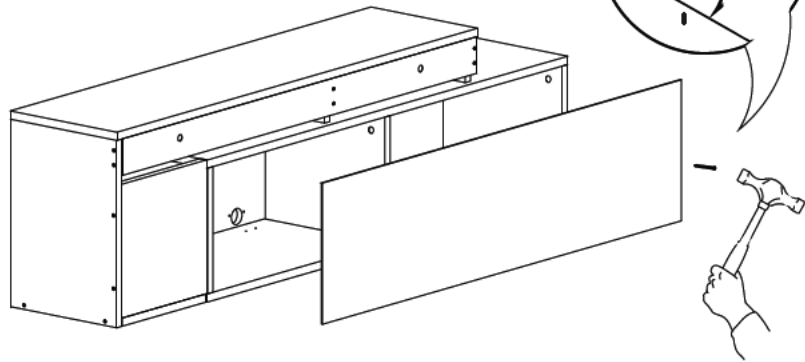

# 9

