



BED FRAME

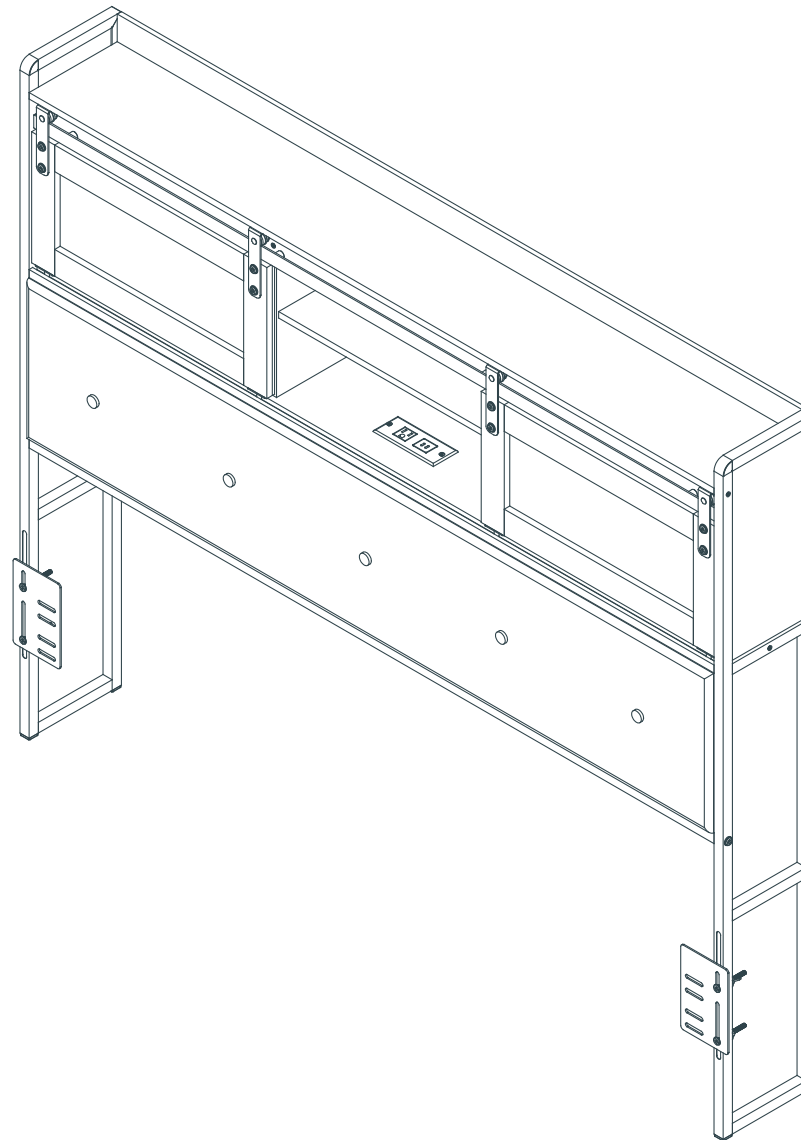

Thank you for choosing our products, please assemble and use it following the instructions.

Assembly Instruction




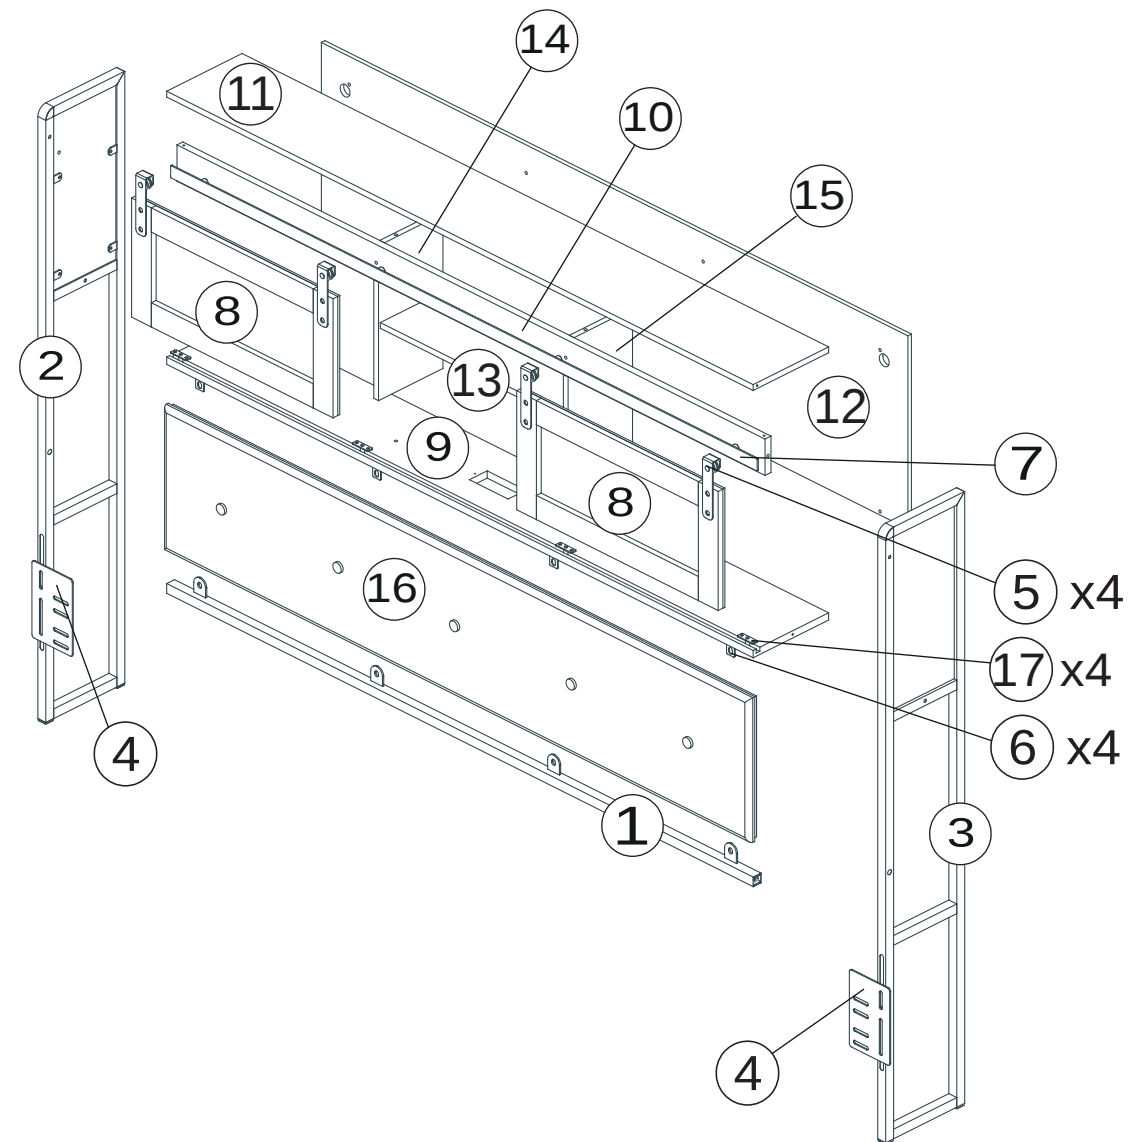


Important Note


HARDWARE NOTE :

1. Two or more people are required for assembly
2. Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.

Components

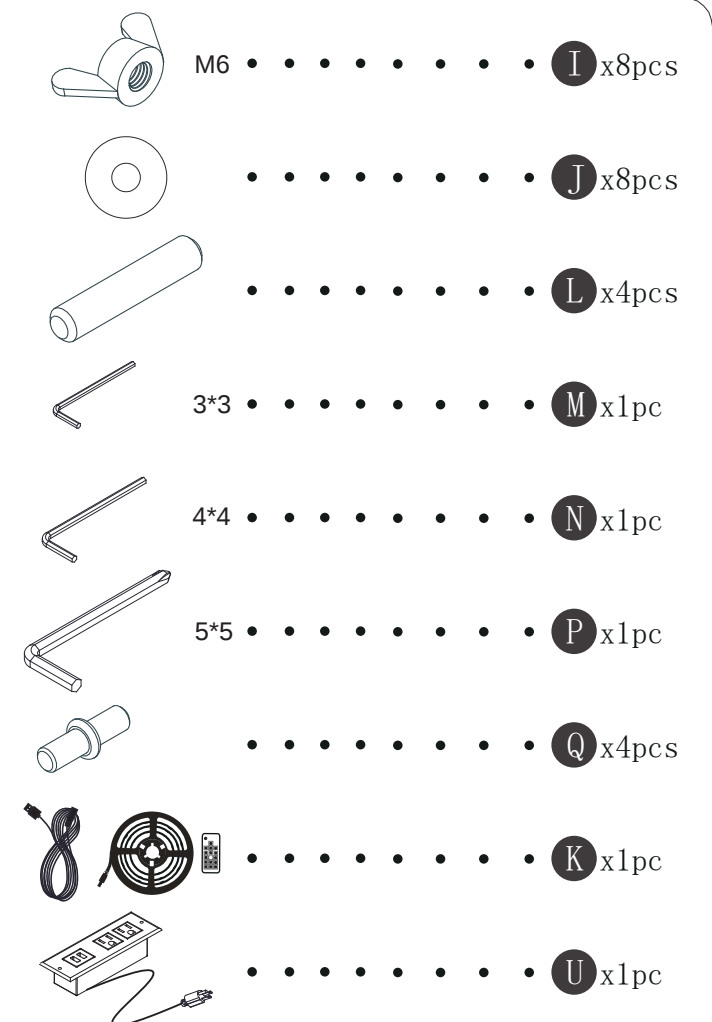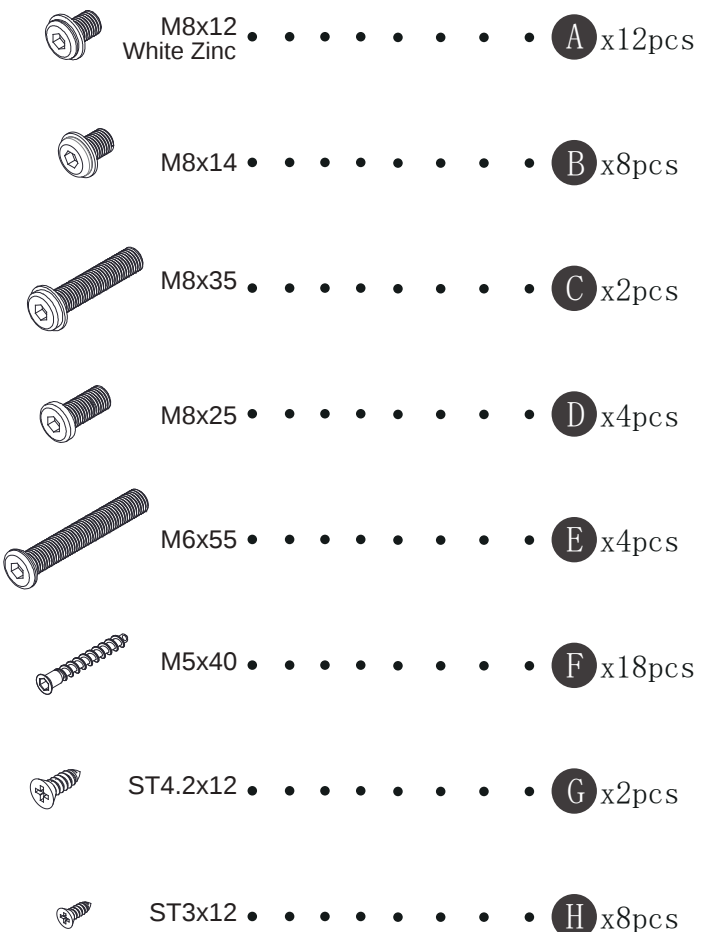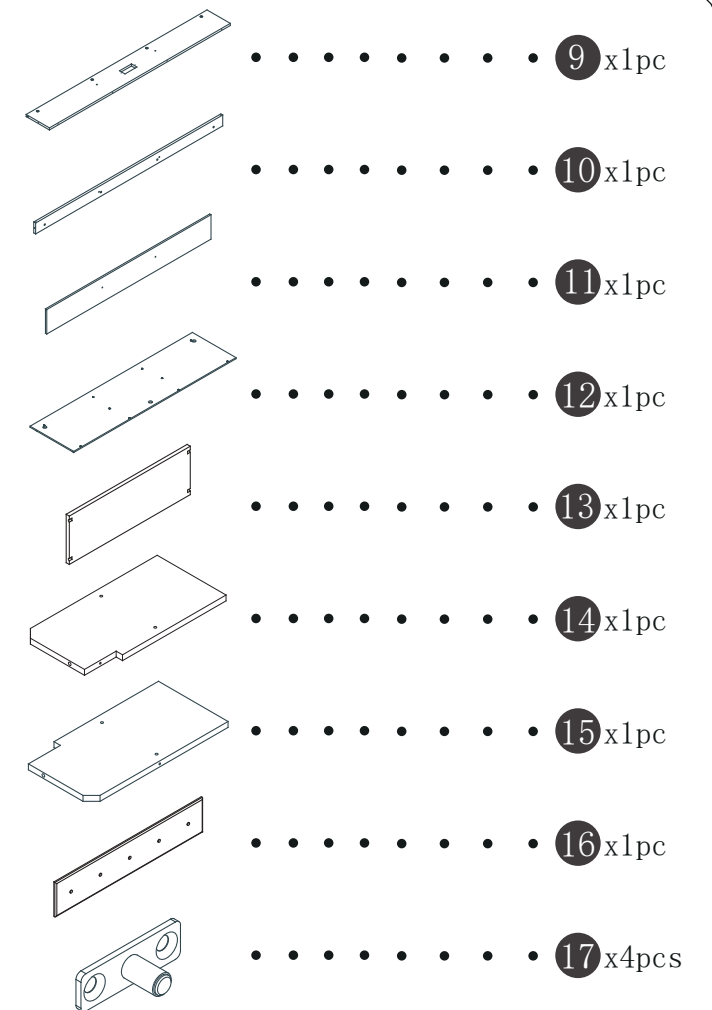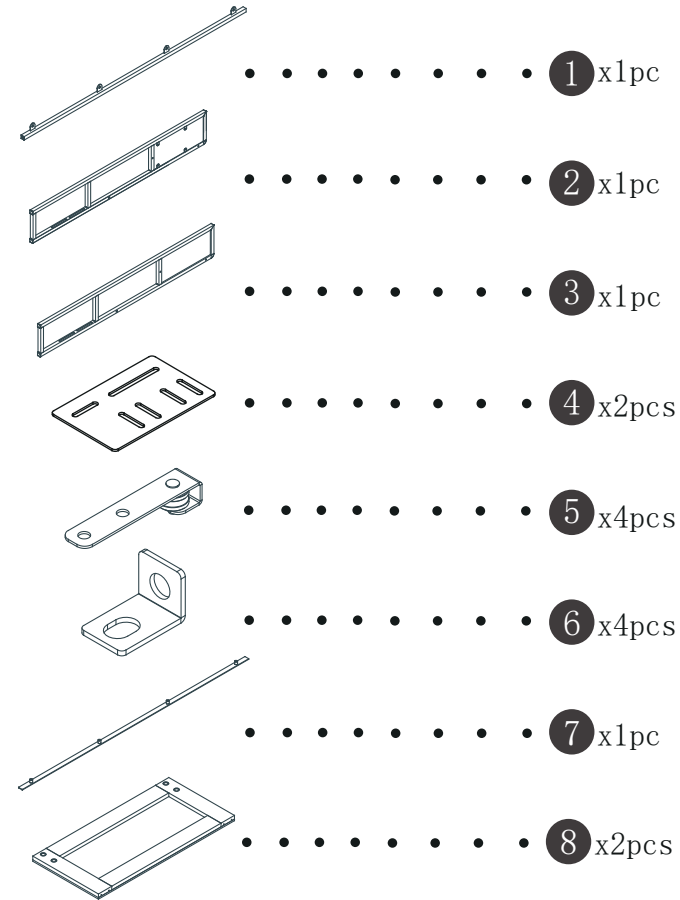


1

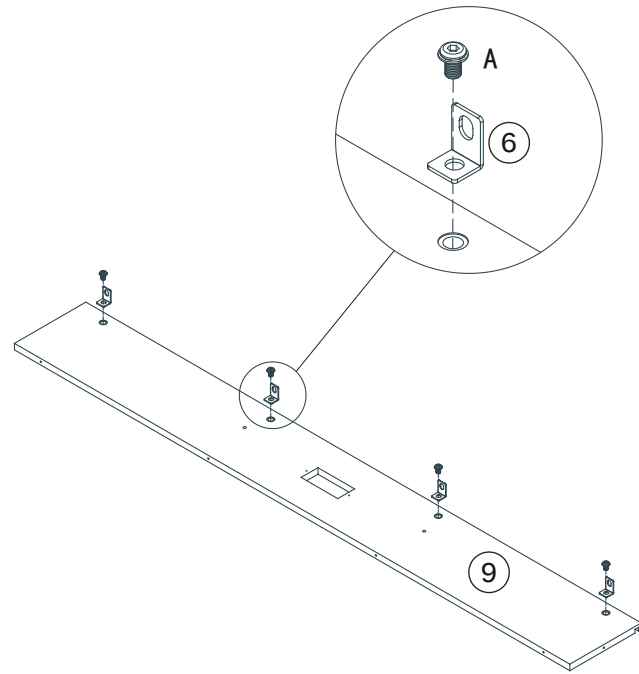


A  M8x12 4pcs White Zinc

2

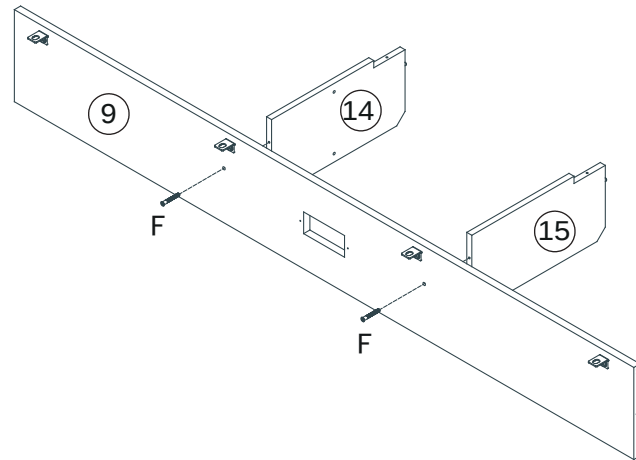


F  M5 x40 2pcs

3

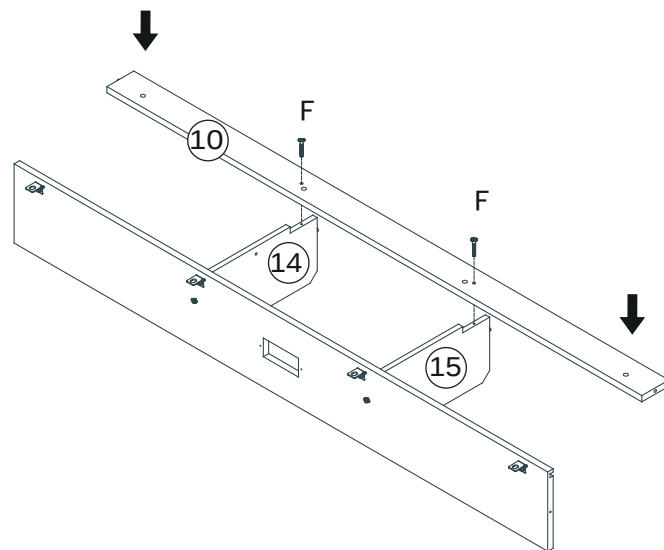

F  M5 x40 2pcs


4





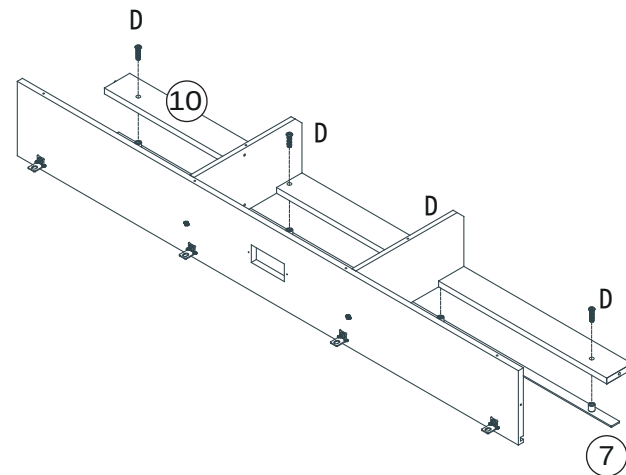


D  M8x25 4pcs


Assembly Instruction

18

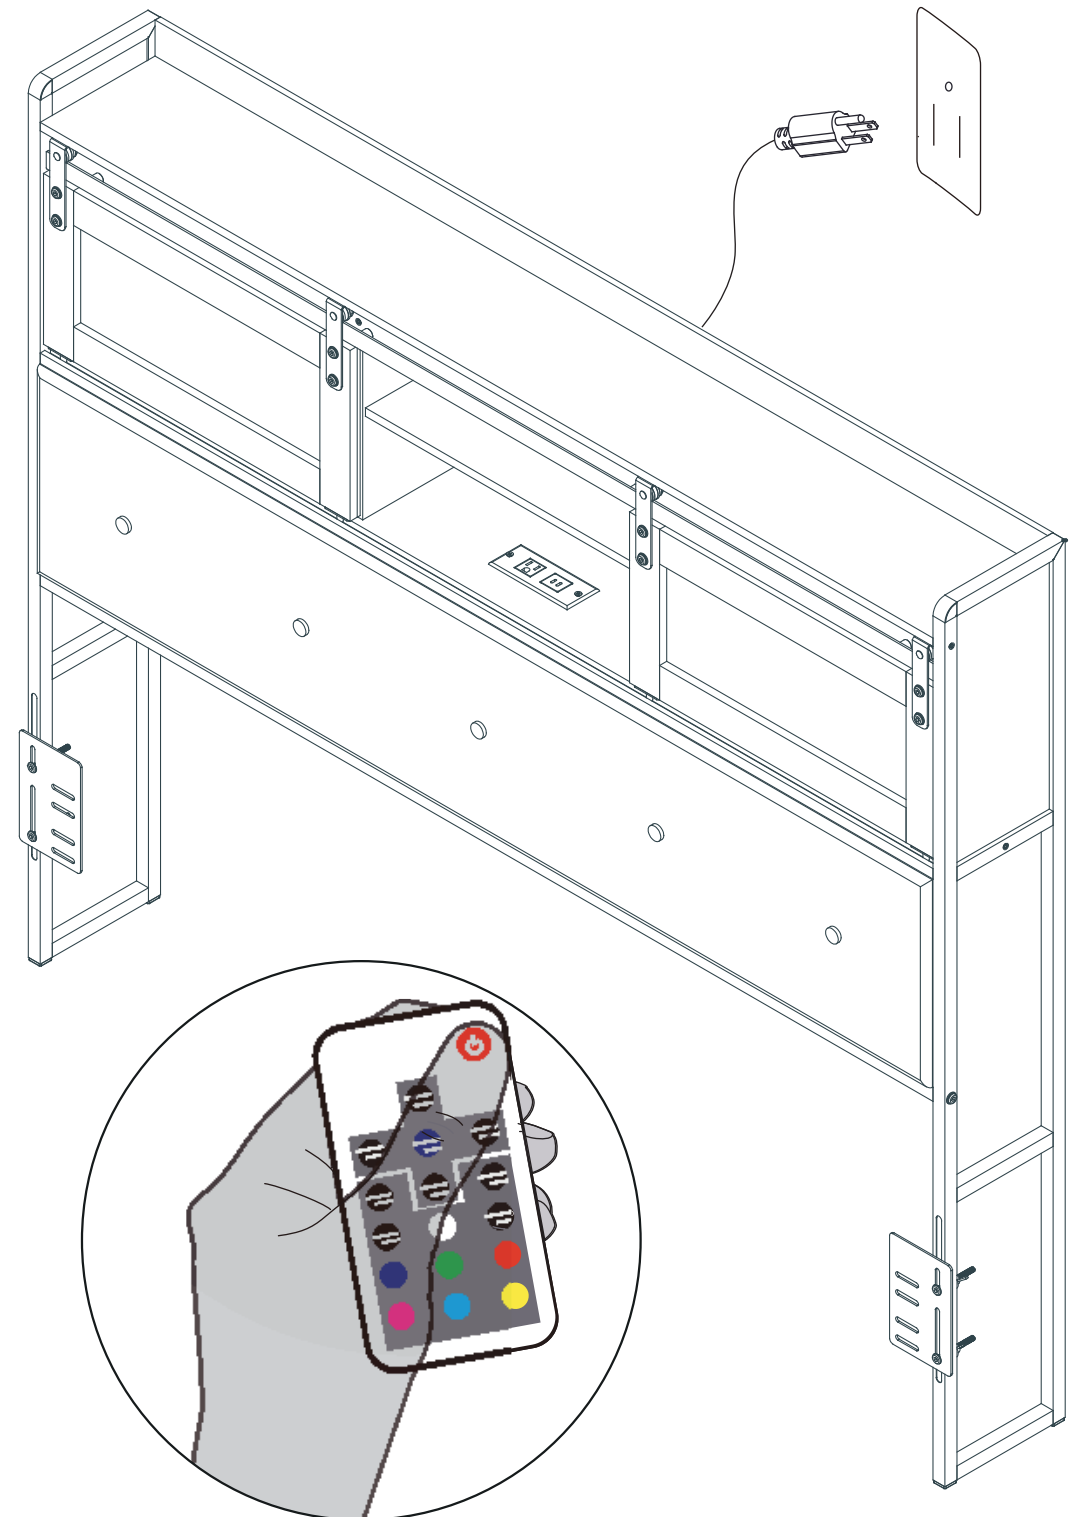

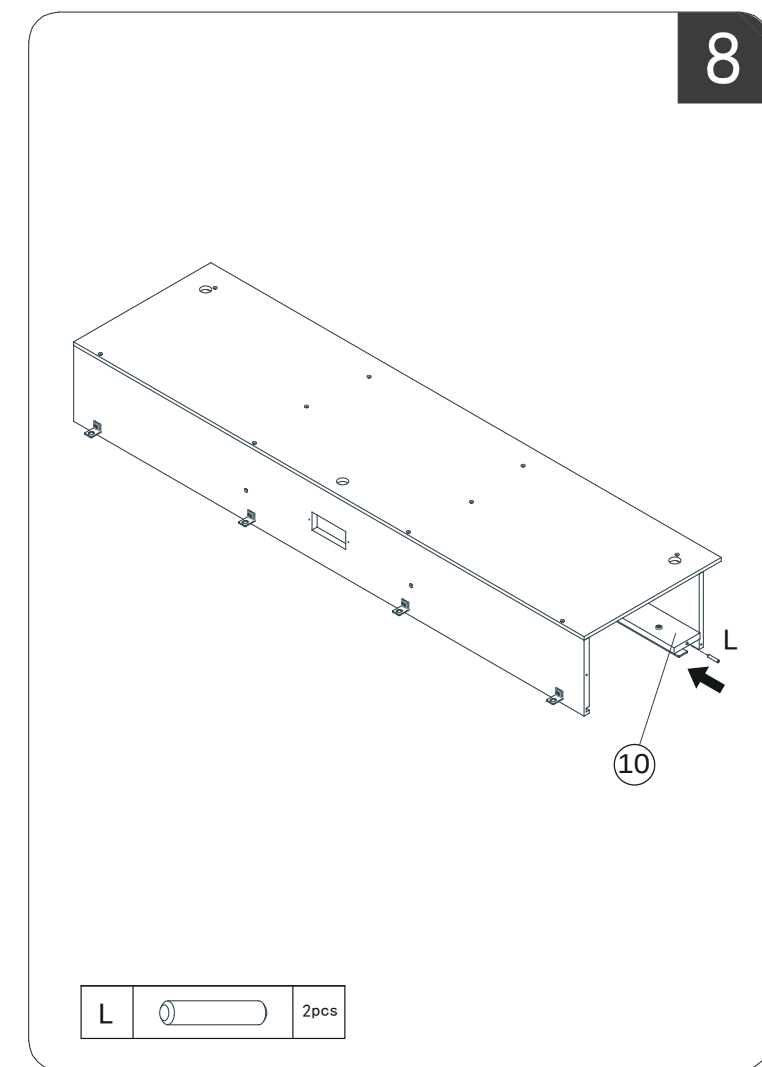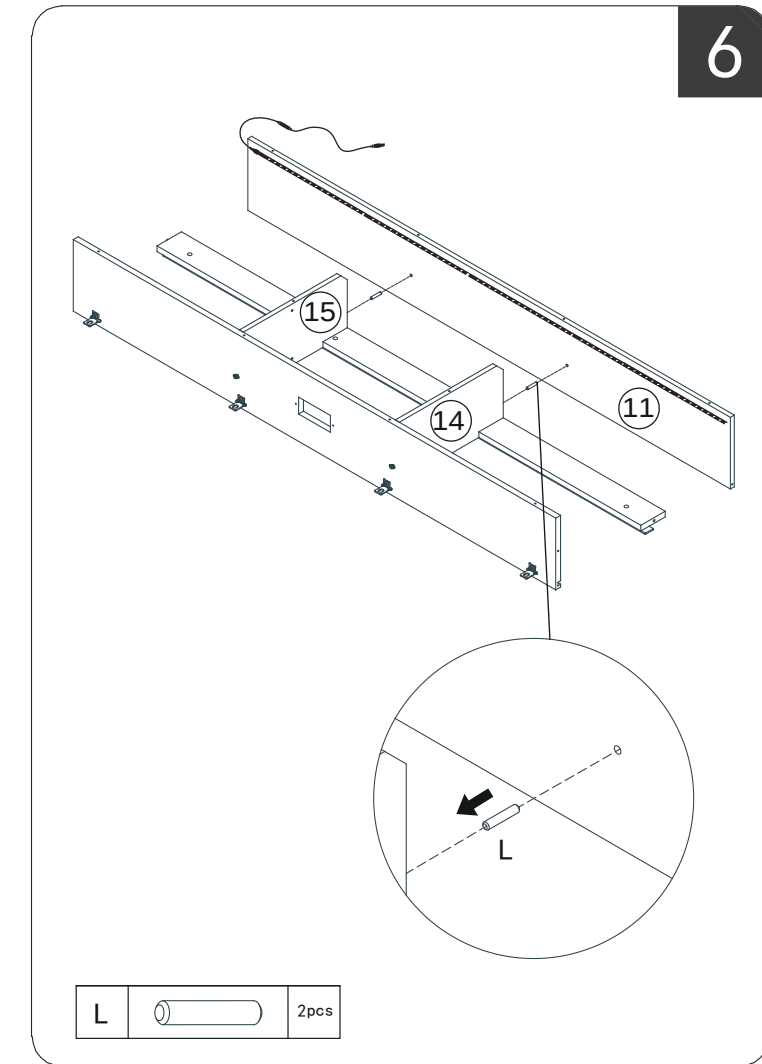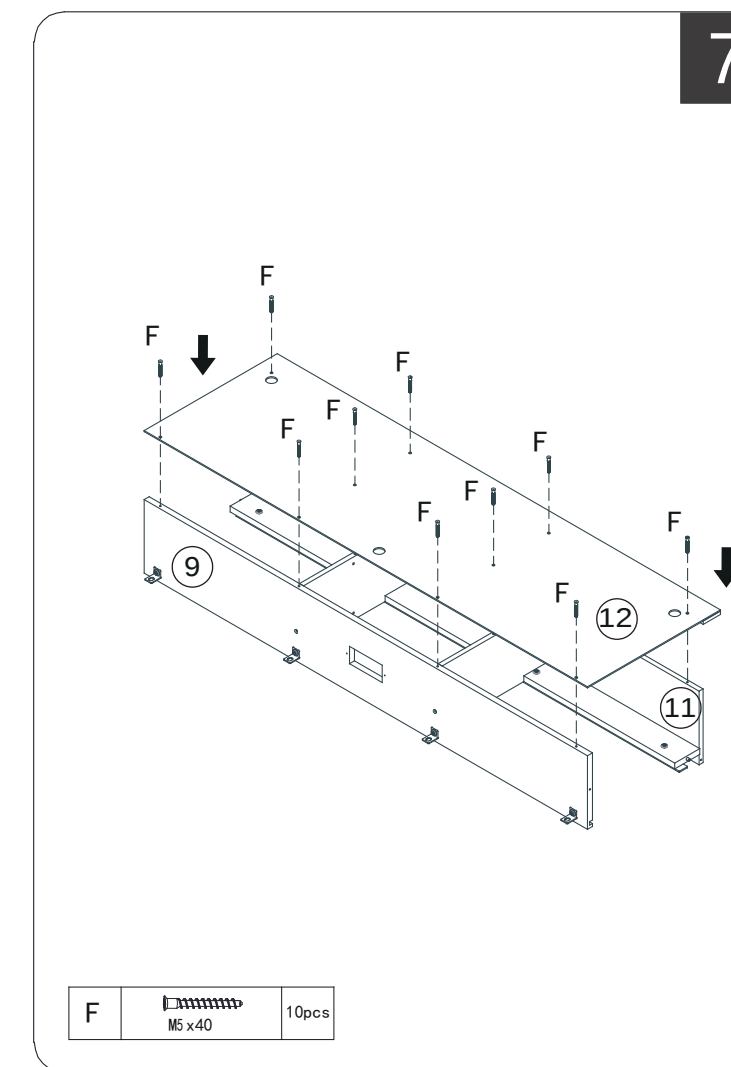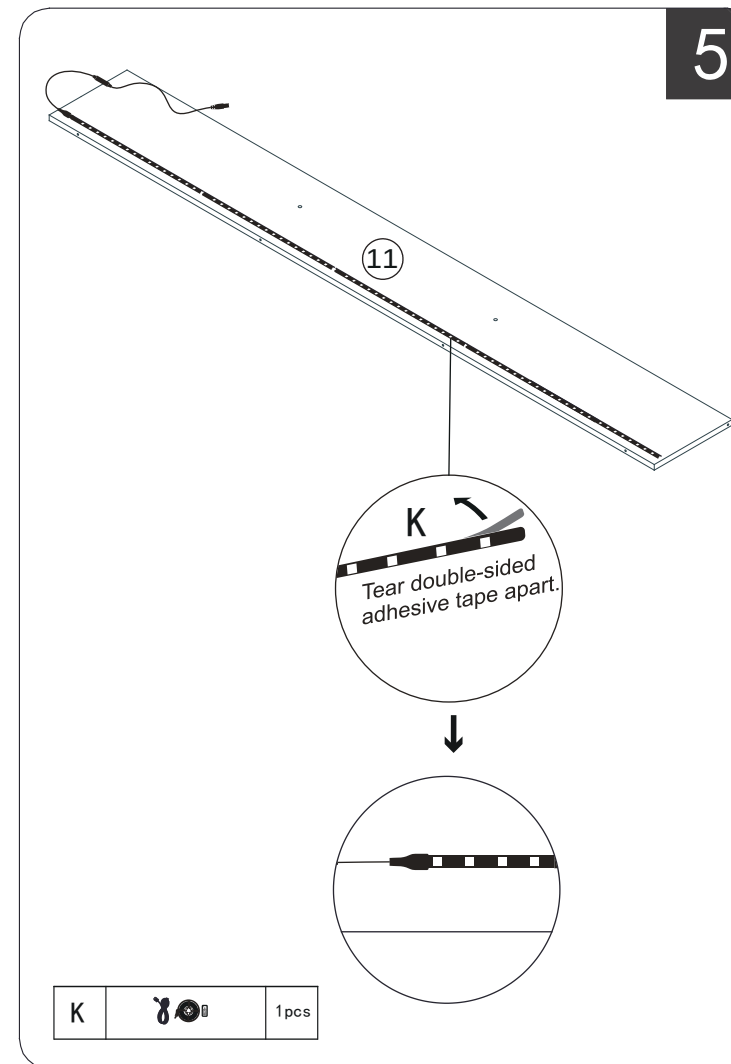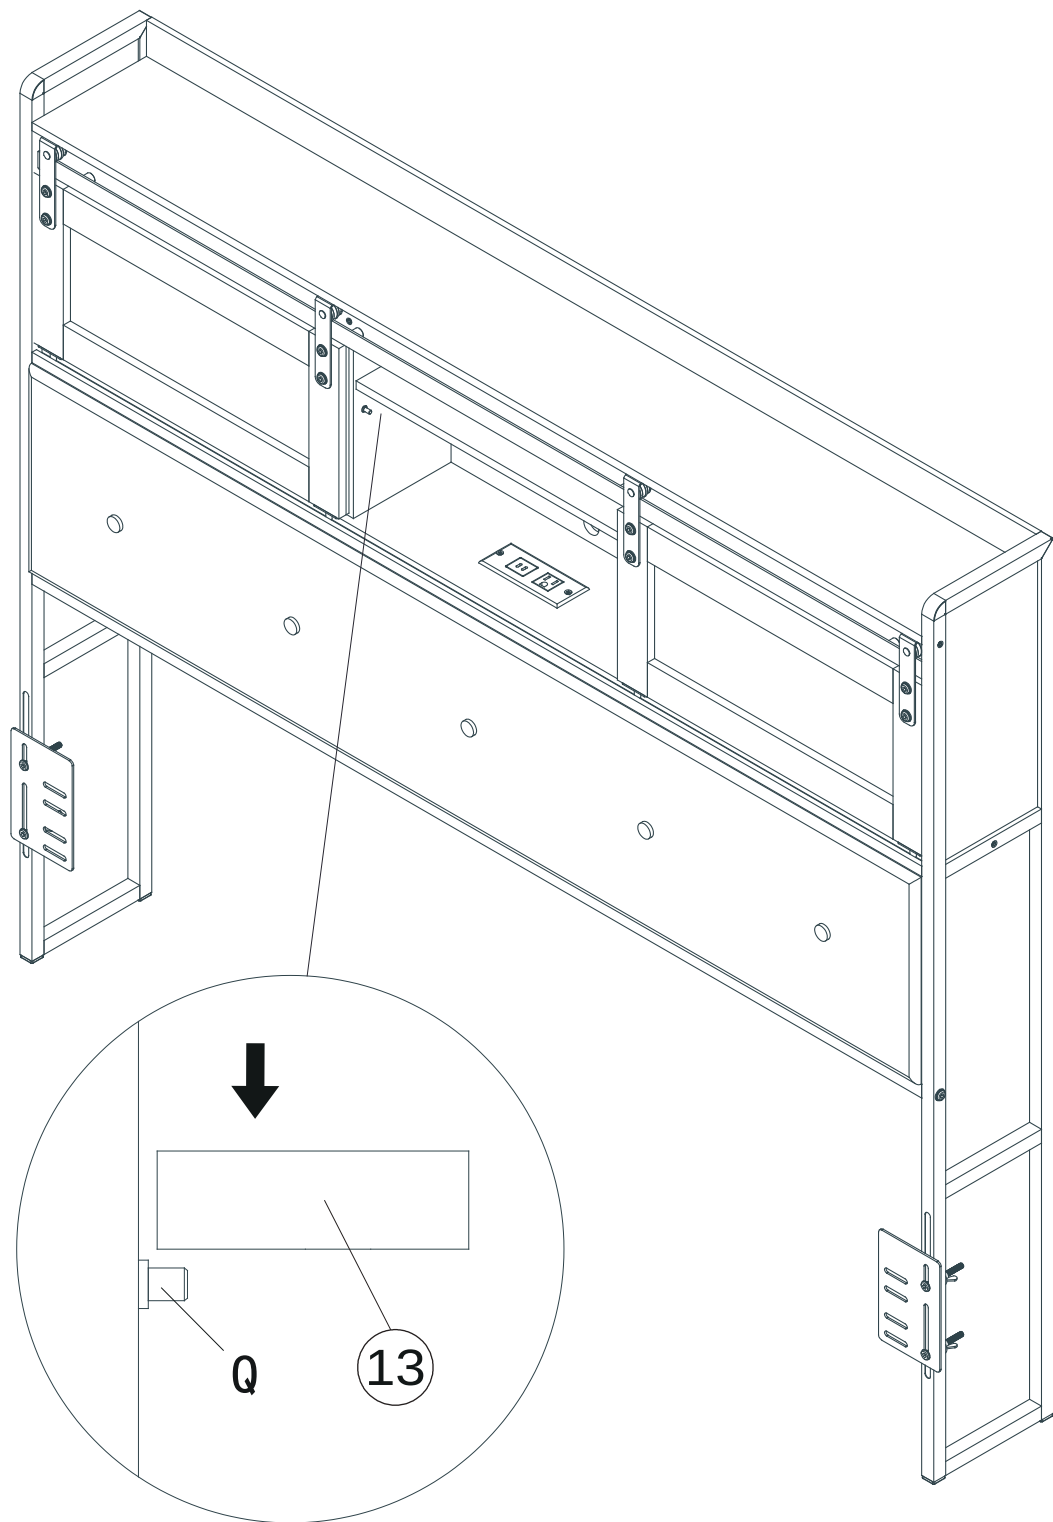


9

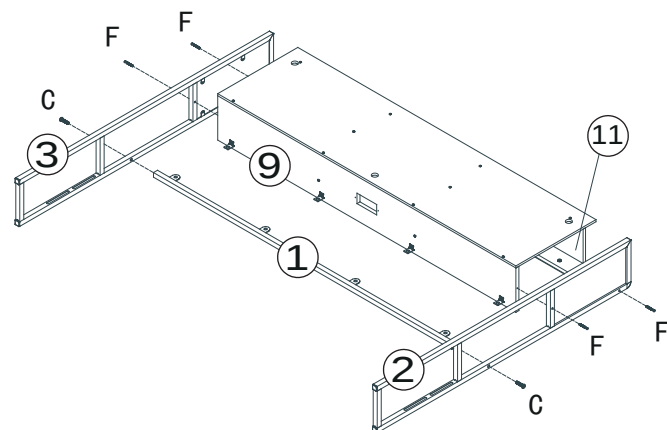


C		2pcs
F		4pcs

10

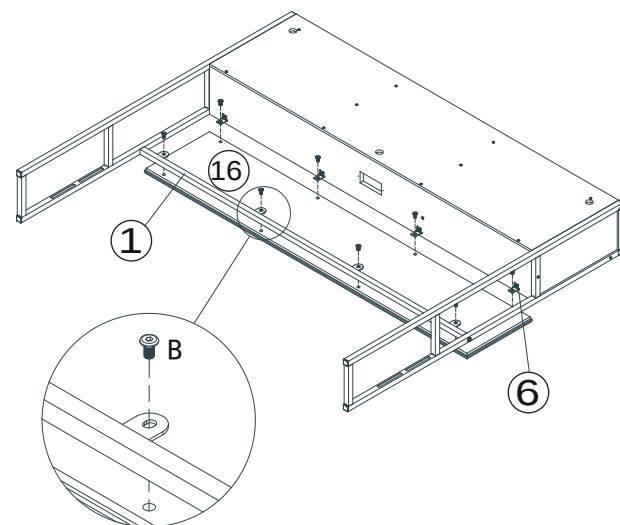


B		8pcs
---	--	------

13

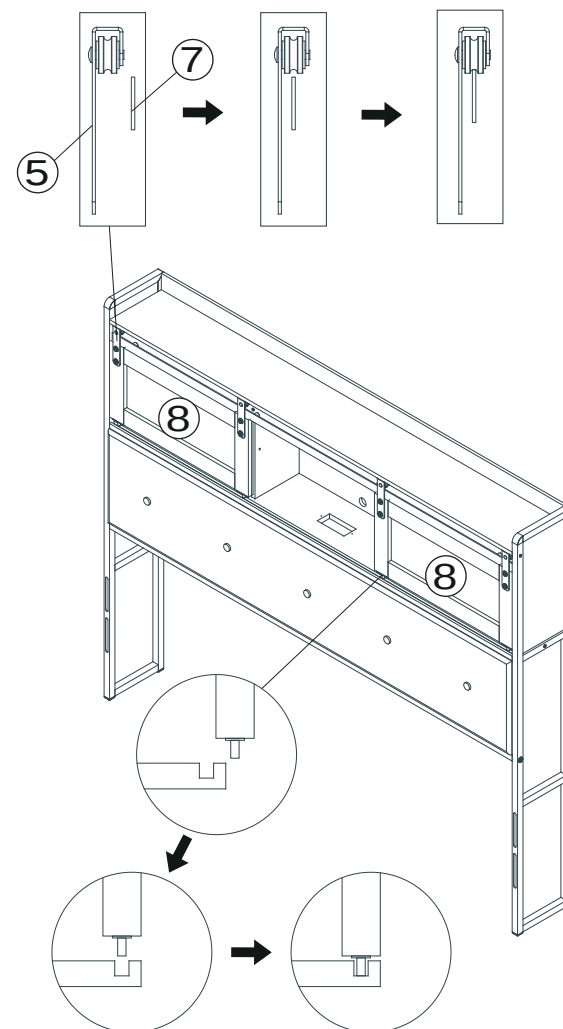


14

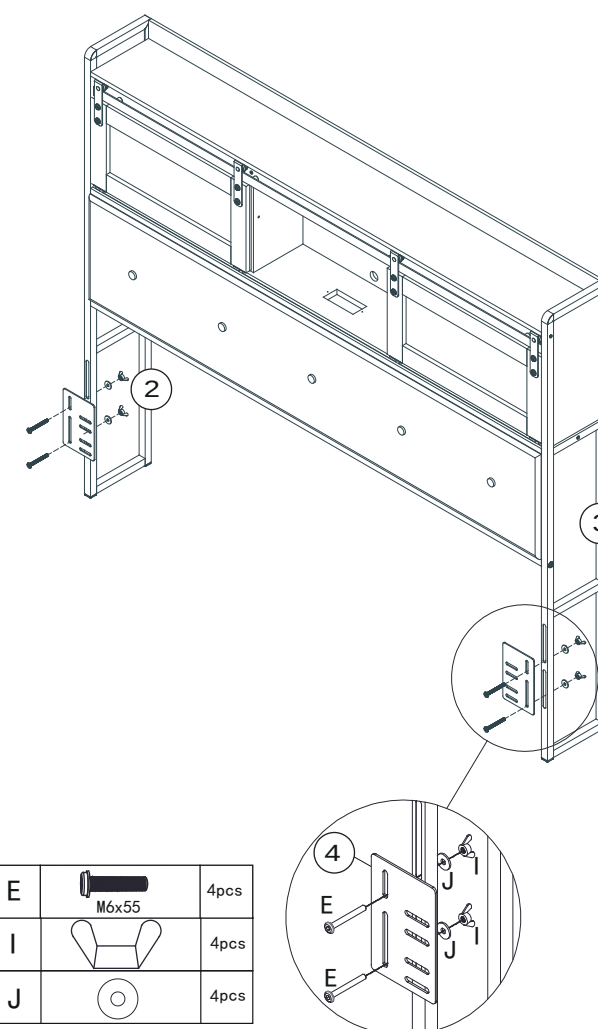

E		4pcs
I		4pcs
J		4pcs

11


X2

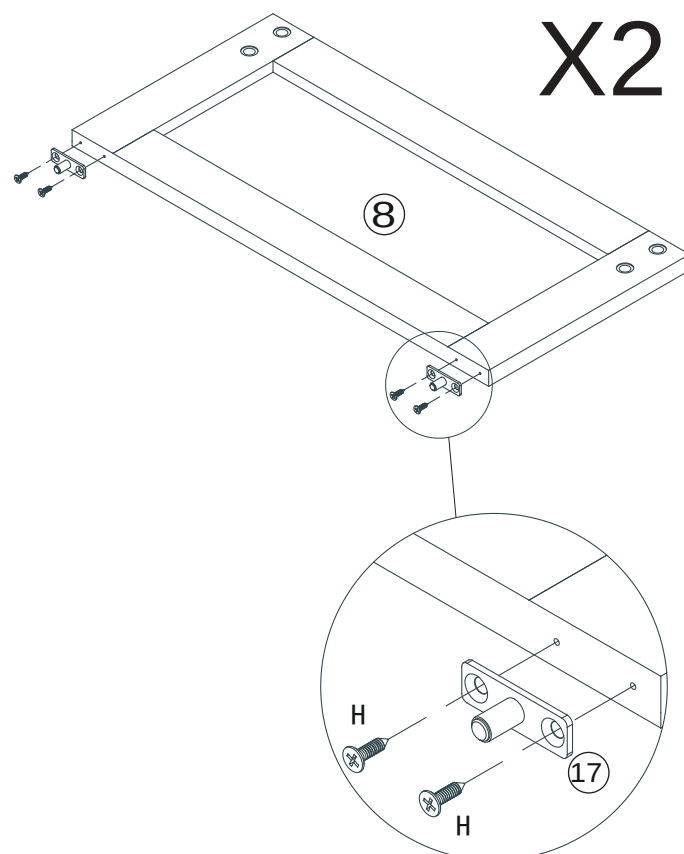

H		8pcs
---	--	------

12


X2

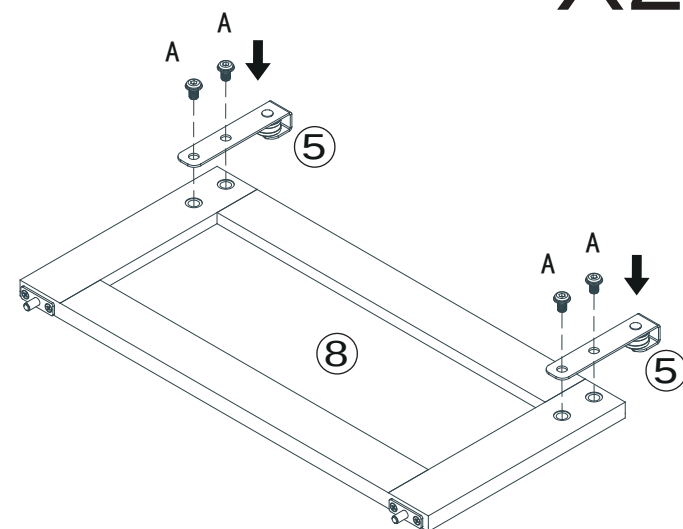

A		8pcs
---	--	------


White Zinc

15

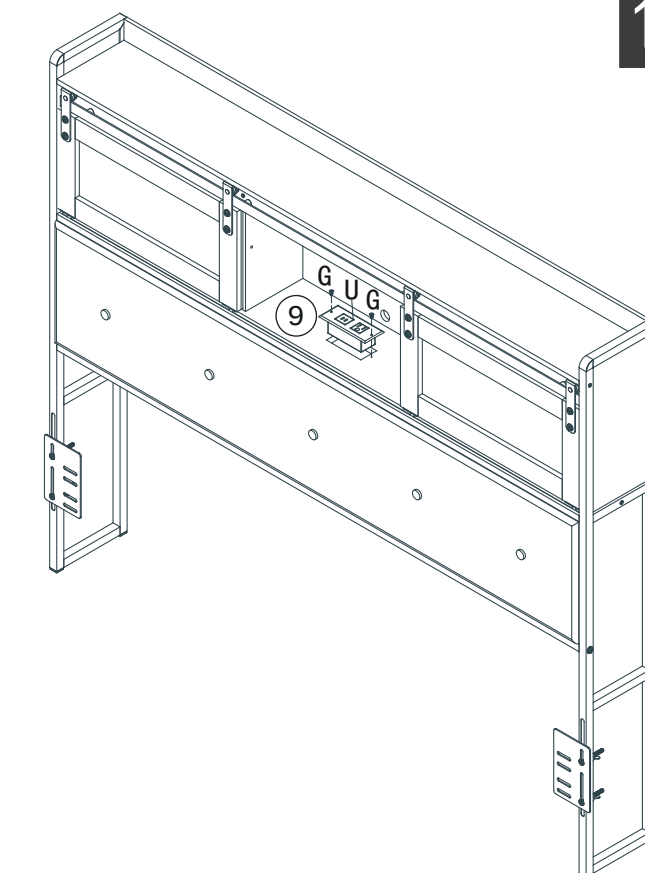

G		2pcs
---	--	------

16

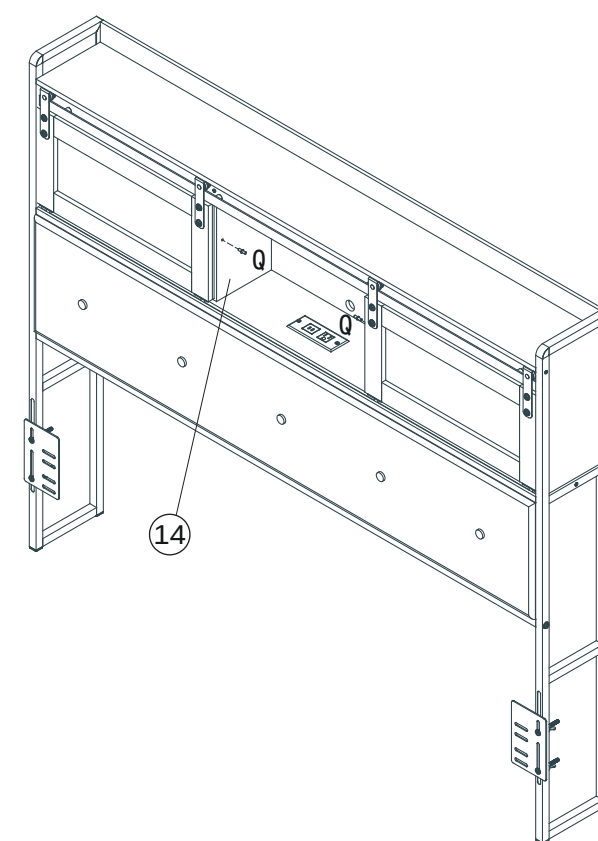

Q		4pcs
---	--	------