


## Accessory list

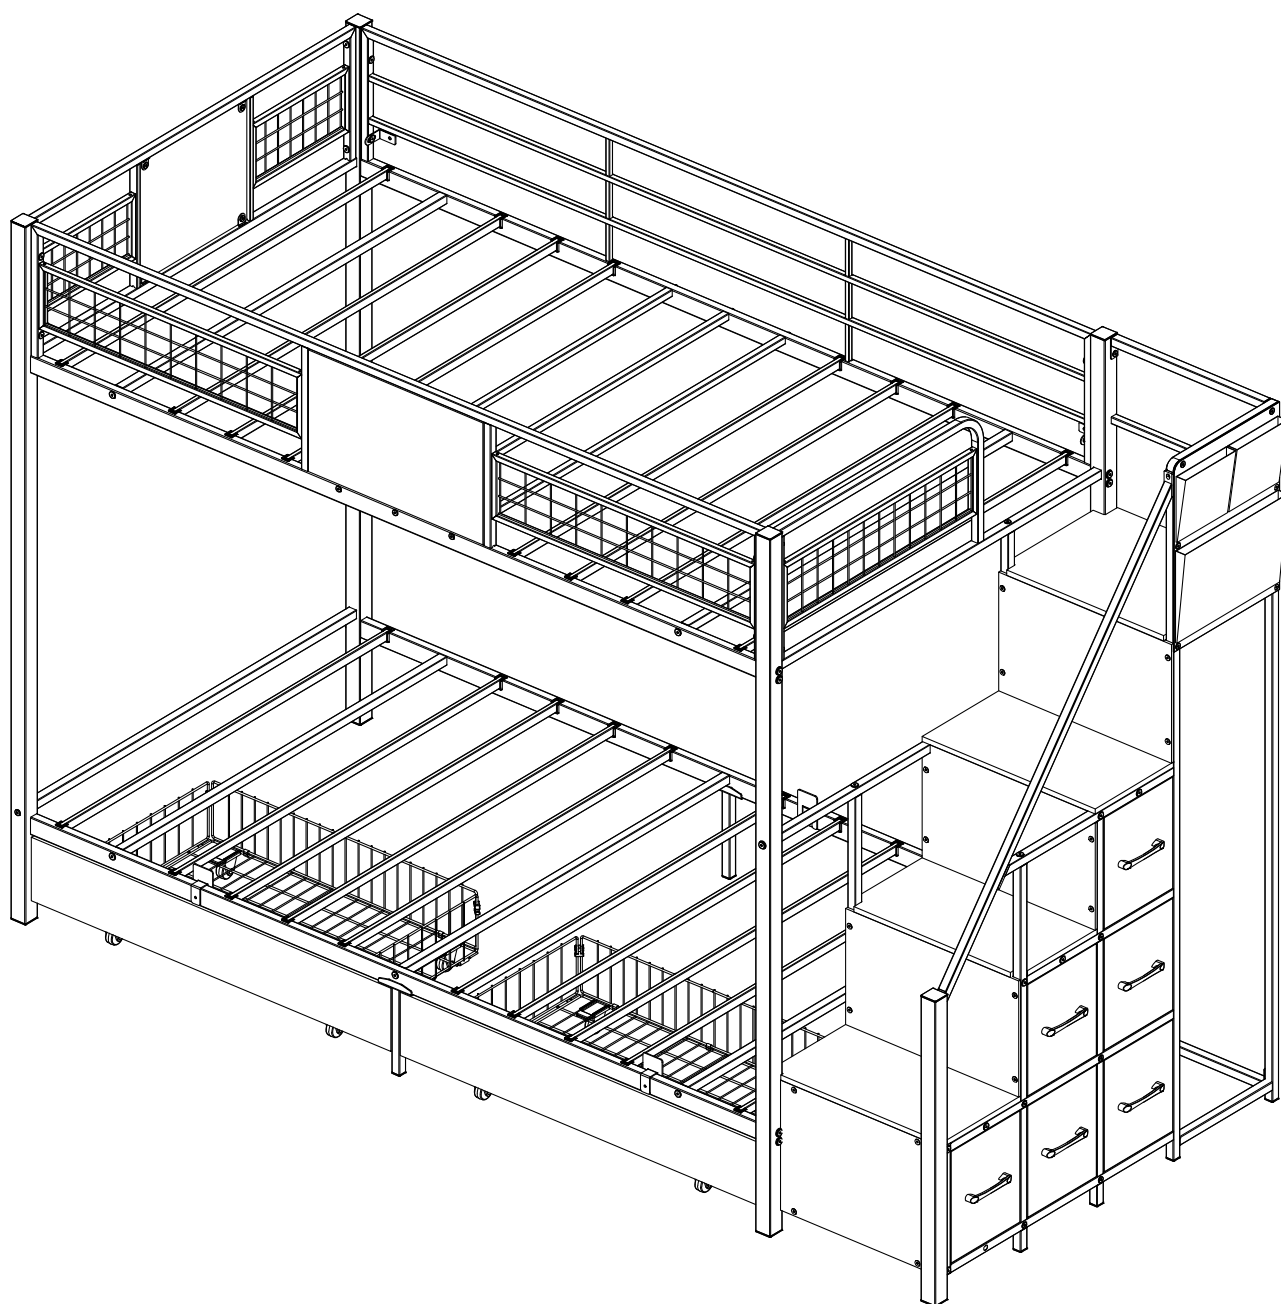


**GSI-005T**


**V-3.0**

# PARTS LIST A


## Install parts

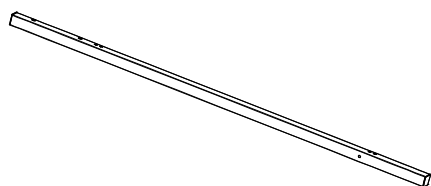


**1** x1

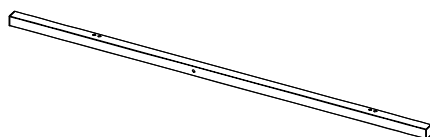


**2** x1

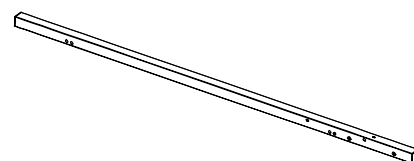


**3** x1

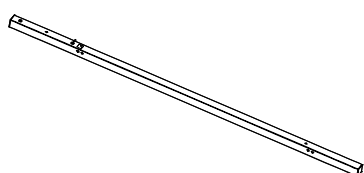


**4** x1

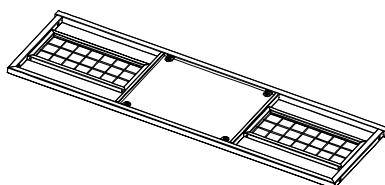


**5** x1

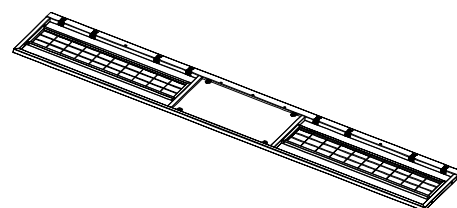


**6** x1

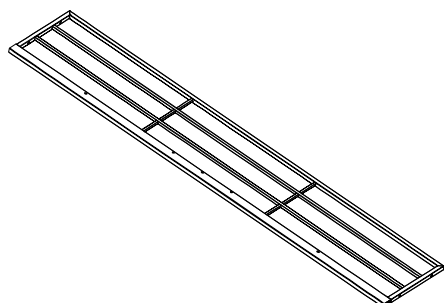


**7** x1

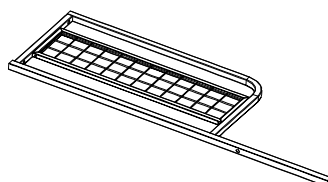


**8** x1

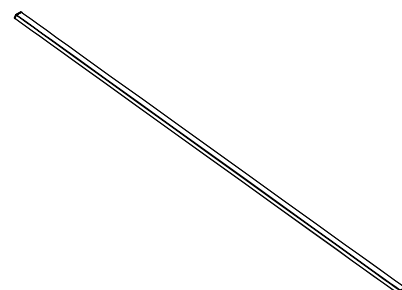


**9** x18

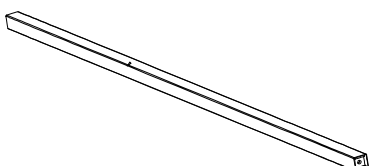

**10** x1

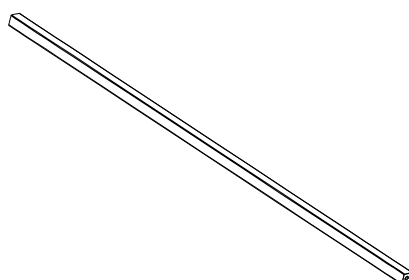


**11** x5

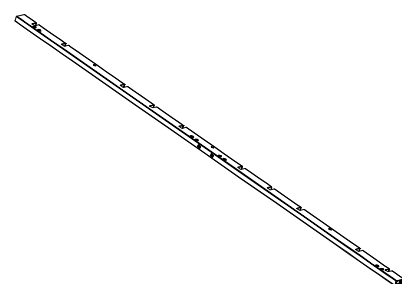


**12** x1

# PARTS LIST A


## Install parts

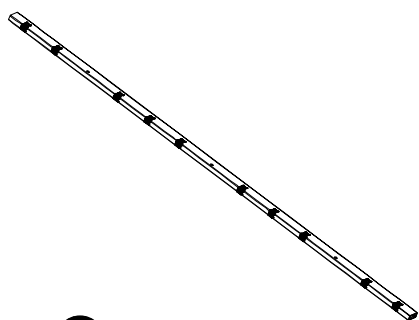


**13** x1




**14** x2

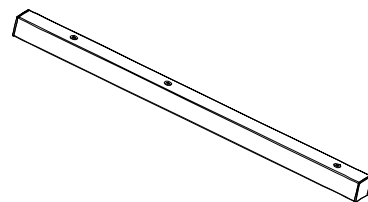


**16** x1

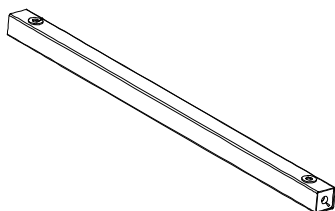


**18** x4

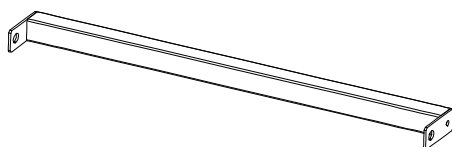


**26** x2

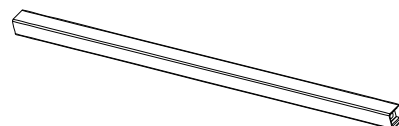


**27** x1




**28** x1

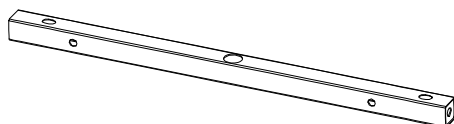

**29** x1

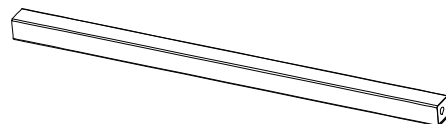


**30** x3



**31** x2




**32** x1

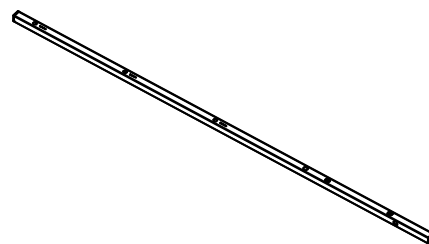


**33** x1

# PARTS LIST A


## Install parts




**34** x1

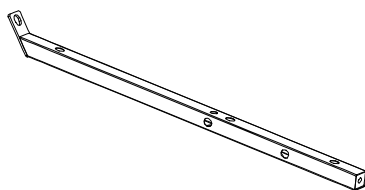


**35** x1

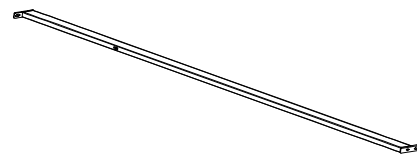


**36** x1

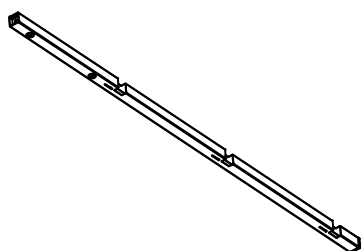


**37** x2

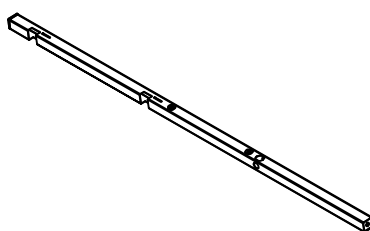


**38** x2

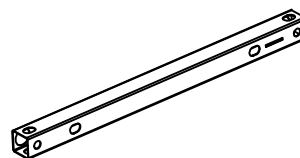


**39** x2

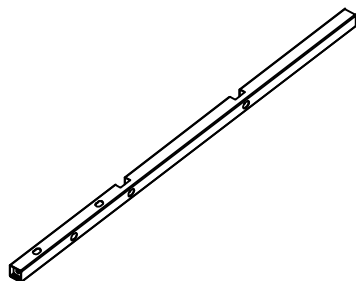


**40** x4

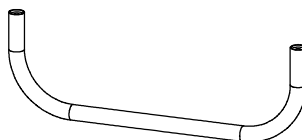


**41** x1

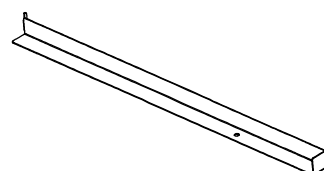


**42** x6

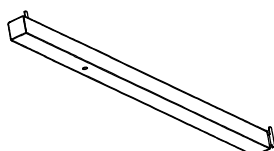

**43** x6

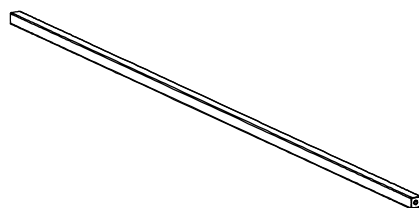


**46** x3

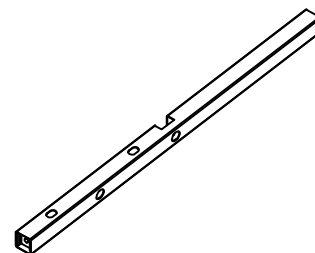


**47** x2

PARTS LIST A


Install parts

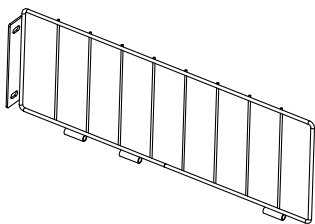


48 x2

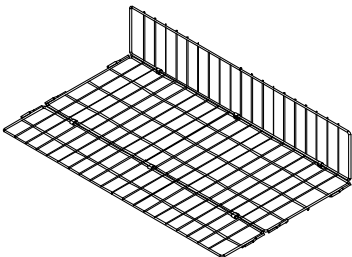


52 x2

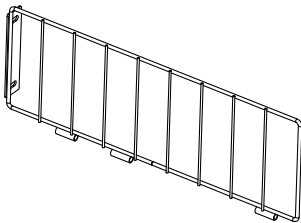


53 x2

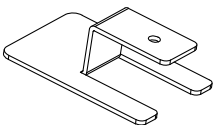


Px3

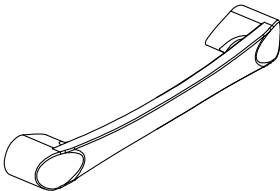


Rx6




Sx2




Tx2

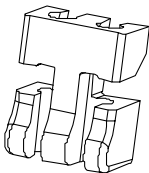


Ux4

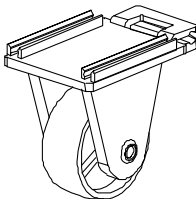


Vx8

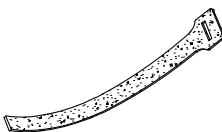


Wx4

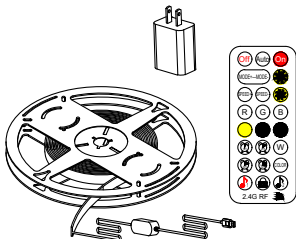

Xx1




Yx4

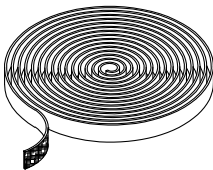


54 x1

# PARTS LIST B


## Install parts

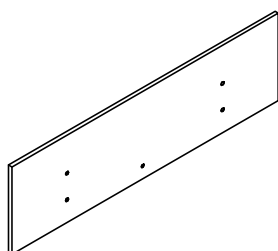


**15** x2

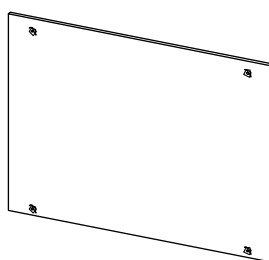


**17** x1 390x298mm

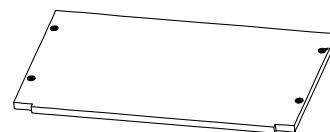


**19** x1 448x242mm

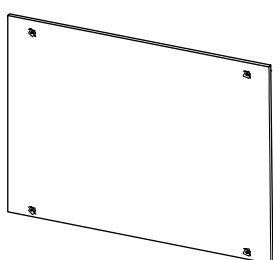


**20** x1 448x266mm

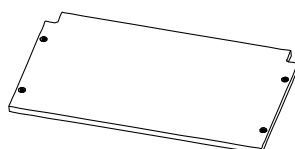


**21** x1 448x242mm

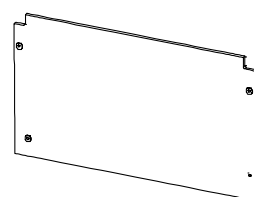


**22** x1 448x266mm

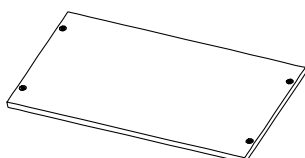


**23** x1 448x242mm

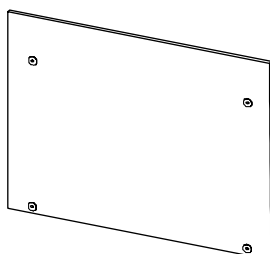


**24** x1 448x272mm

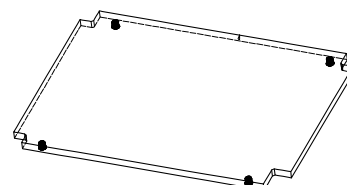


**25** x1 448x331mm

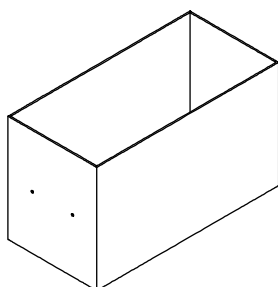

**44** x6

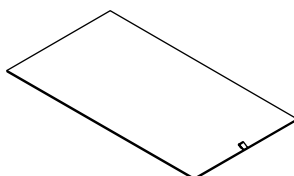


**45** x6

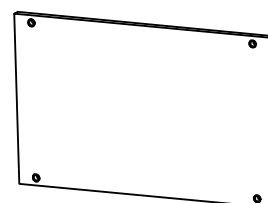


**49** x1 452x279mm

## PARTS LIST B

## Install parts

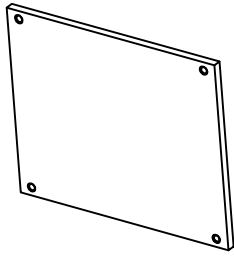














**50** x1 336x279mm

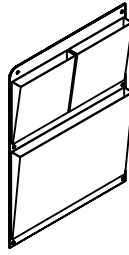


**51** x1

## PARTS LIST B


## Accessory list

|            |                                                                                     |              |              |            |                                                                                     |              |              |
|------------|-------------------------------------------------------------------------------------|--------------|--------------|------------|-------------------------------------------------------------------------------------|--------------|--------------|
| <b>A</b>   |    | <b>M6*10</b> | <b>x18+2</b> | <b>Q</b>   |   | <b>M6*40</b> | <b>x1</b>    |
| <b>B</b>   |    | <b>M8*15</b> | <b>x4</b>    | <b>Z</b>   |   | <b>M6*60</b> | <b>x2</b>    |
| <b>C</b>   |    | <b>M8*60</b> | <b>x18+2</b> | <b>O 2</b> |  | <b>M6*12</b> | <b>x10+1</b> |
| <b>D</b>   |    | <b>M6*55</b> | <b>x3</b>    | <b>NS4</b> |  | <b>S4</b>    | <b>x1</b>    |
| <b>E</b>   |    | <b>M6*35</b> | <b>x21+2</b> | <b>L1</b>  |   | <b>M6</b>    | <b>x1</b>    |
| <b>F</b>   |    | <b>M6*25</b> | <b>x10+1</b> | <b>M1</b>  |   | <b>M8*40</b> | <b>x2</b>    |
| <b>G</b>   |   | <b>M4*12</b> | <b>x12+2</b> |            |                                                                                     |              |              |
| <b>H</b>   |  | <b>M6*15</b> | <b>x18+2</b> |            |                                                                                     |              |              |
| <b>I</b>   |  | <b>M6*28</b> | <b>x16+2</b> |            |                                                                                     |              |              |
| <b>J</b>   |  | <b>M6*23</b> | <b>x16+2</b> |            |                                                                                     |              |              |
| <b>K</b>   |  | <b>M8*30</b> | <b>x14+2</b> |            |                                                                                     |              |              |
| <b>L</b>   |  |              | <b>x1</b>    |            |                                                                                     |              |              |
| <b>M</b>   |  | <b>M8*35</b> | <b>x29+2</b> |            |                                                                                     |              |              |
| <b>NS5</b> |  | <b>S5</b>    | <b>x1</b>    |            |                                                                                     |              |              |
| <b>O</b>   |  | <b>M6*18</b> | <b>x10+1</b> |            |                                                                                     |              |              |


**Note:**  
1, should be assembled on flat ground to keep balance.  
2, Before completing the installation, do not tighten the screws.

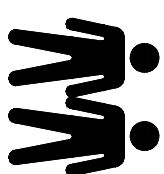

It needs at least two people to install.

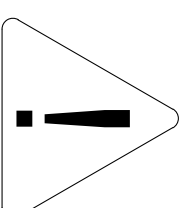


Before starting follow the the assembly, you must read the whole manual and instructions.

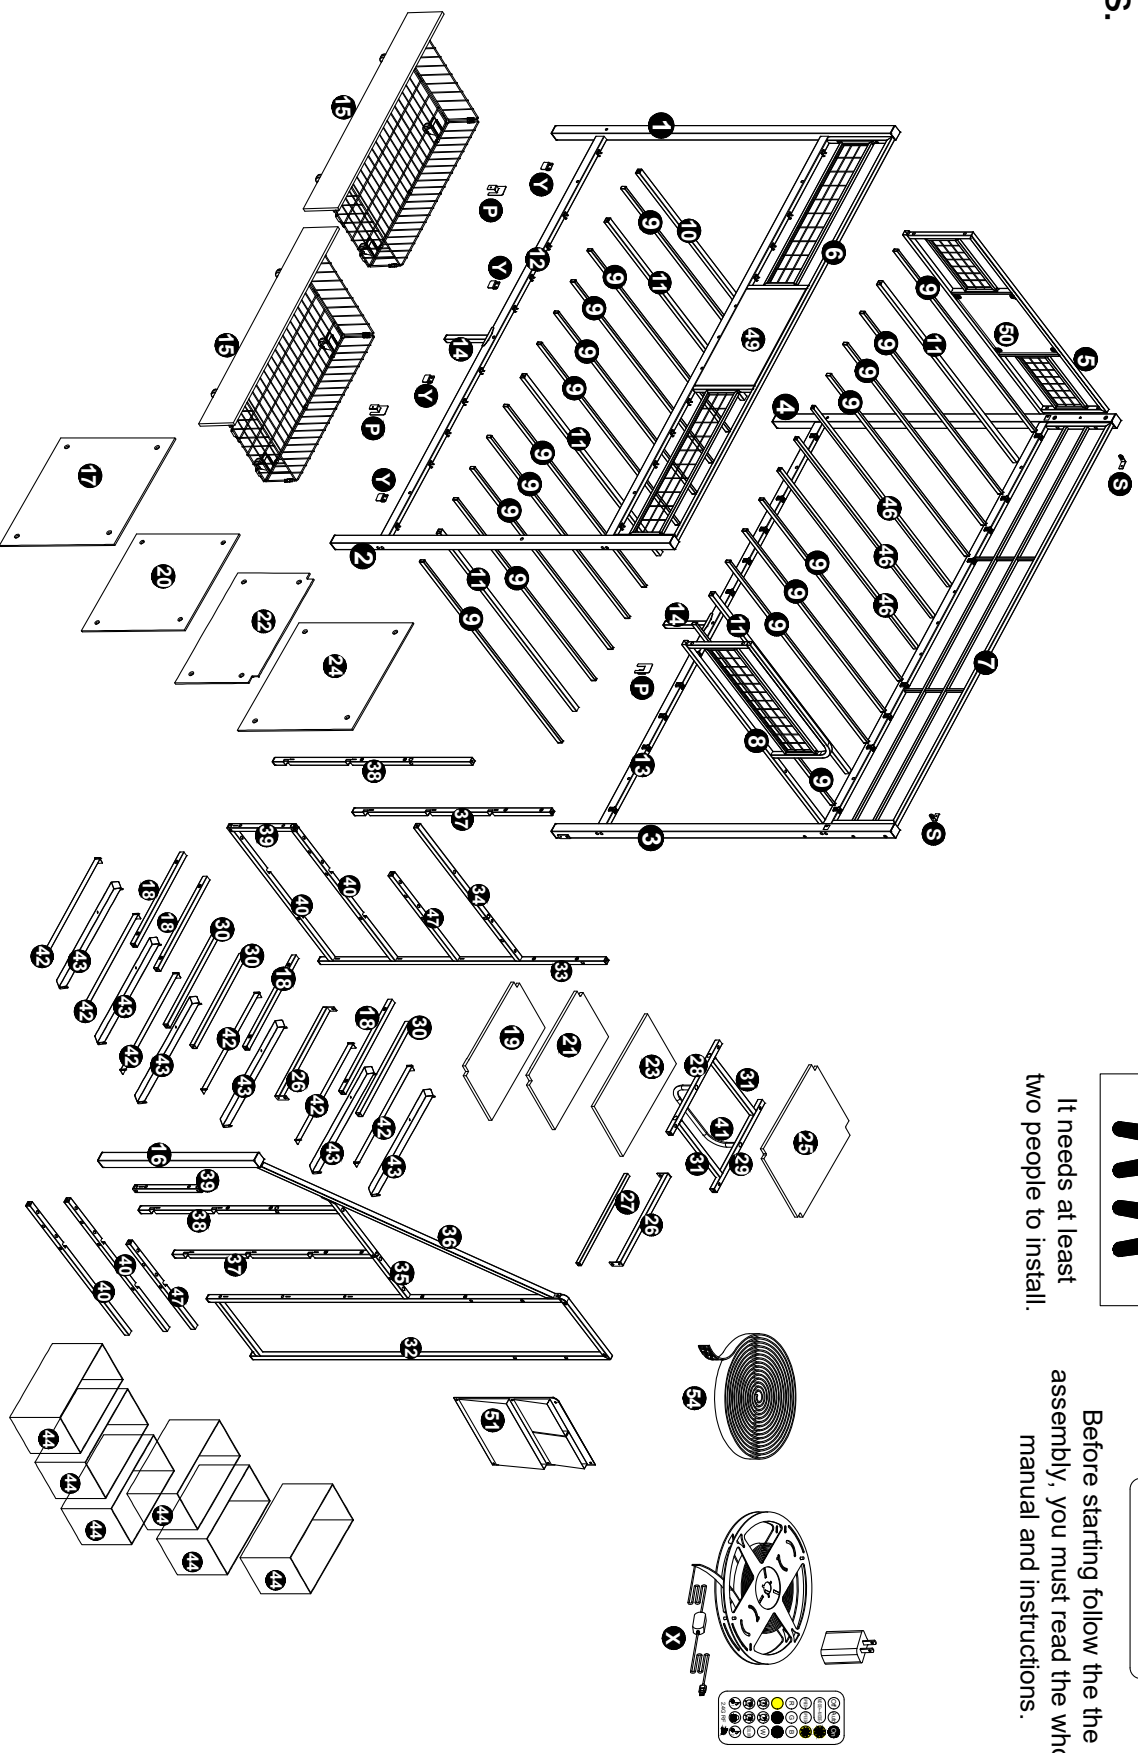

PRODUCT ASSEMBLY


Step 1

|   |                                                                                     |       |      |
|---|-------------------------------------------------------------------------------------|-------|------|
| A |  | M6*10 | 4pcs |
|---|-------------------------------------------------------------------------------------|-------|------|

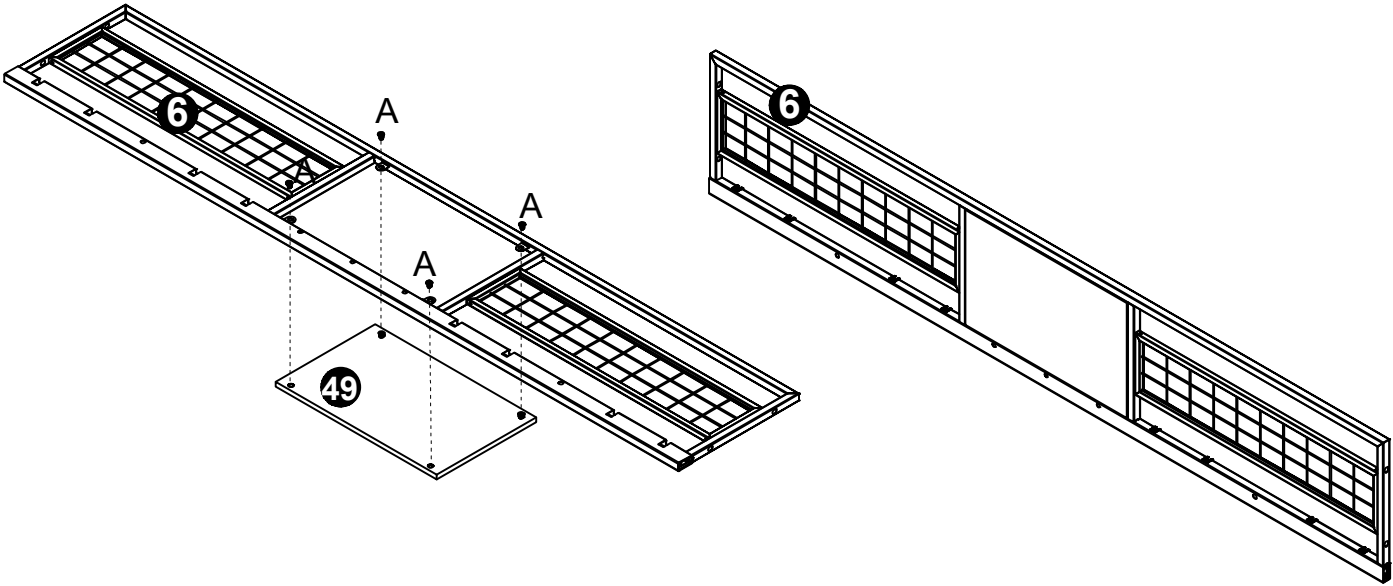


Step 2


|   |                                                                                       |       |      |
|---|---------------------------------------------------------------------------------------|-------|------|
| A |  | M6*10 | 4pcs |
|---|---------------------------------------------------------------------------------------|-------|------|

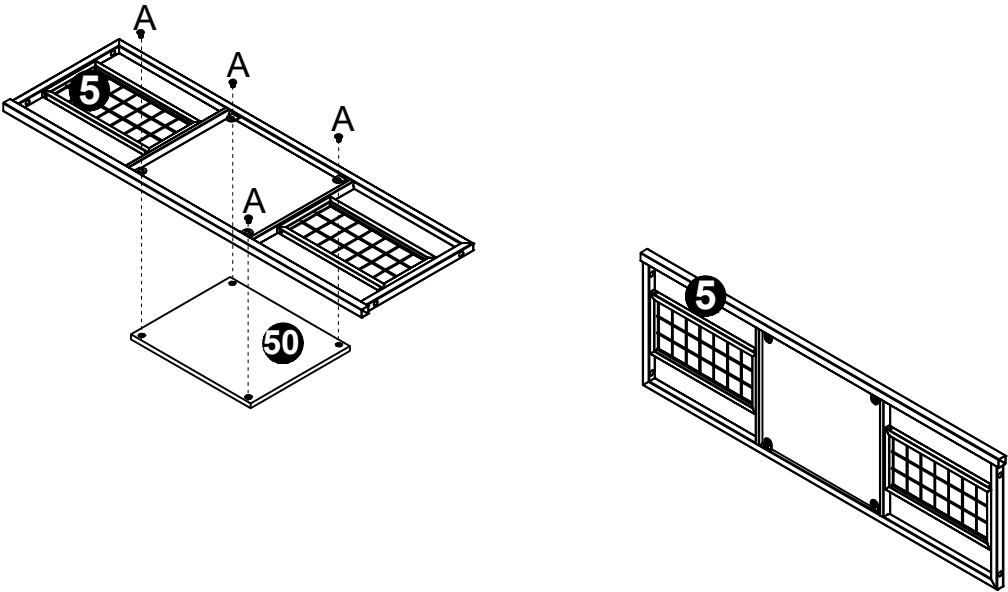

PRODUCT ASSEMBLY



Step 3


|   |                                                                                     |       |      |
|---|-------------------------------------------------------------------------------------|-------|------|
| C |  | M8*60 | 4pcs |
| K |  | M8*30 | 4pcs |

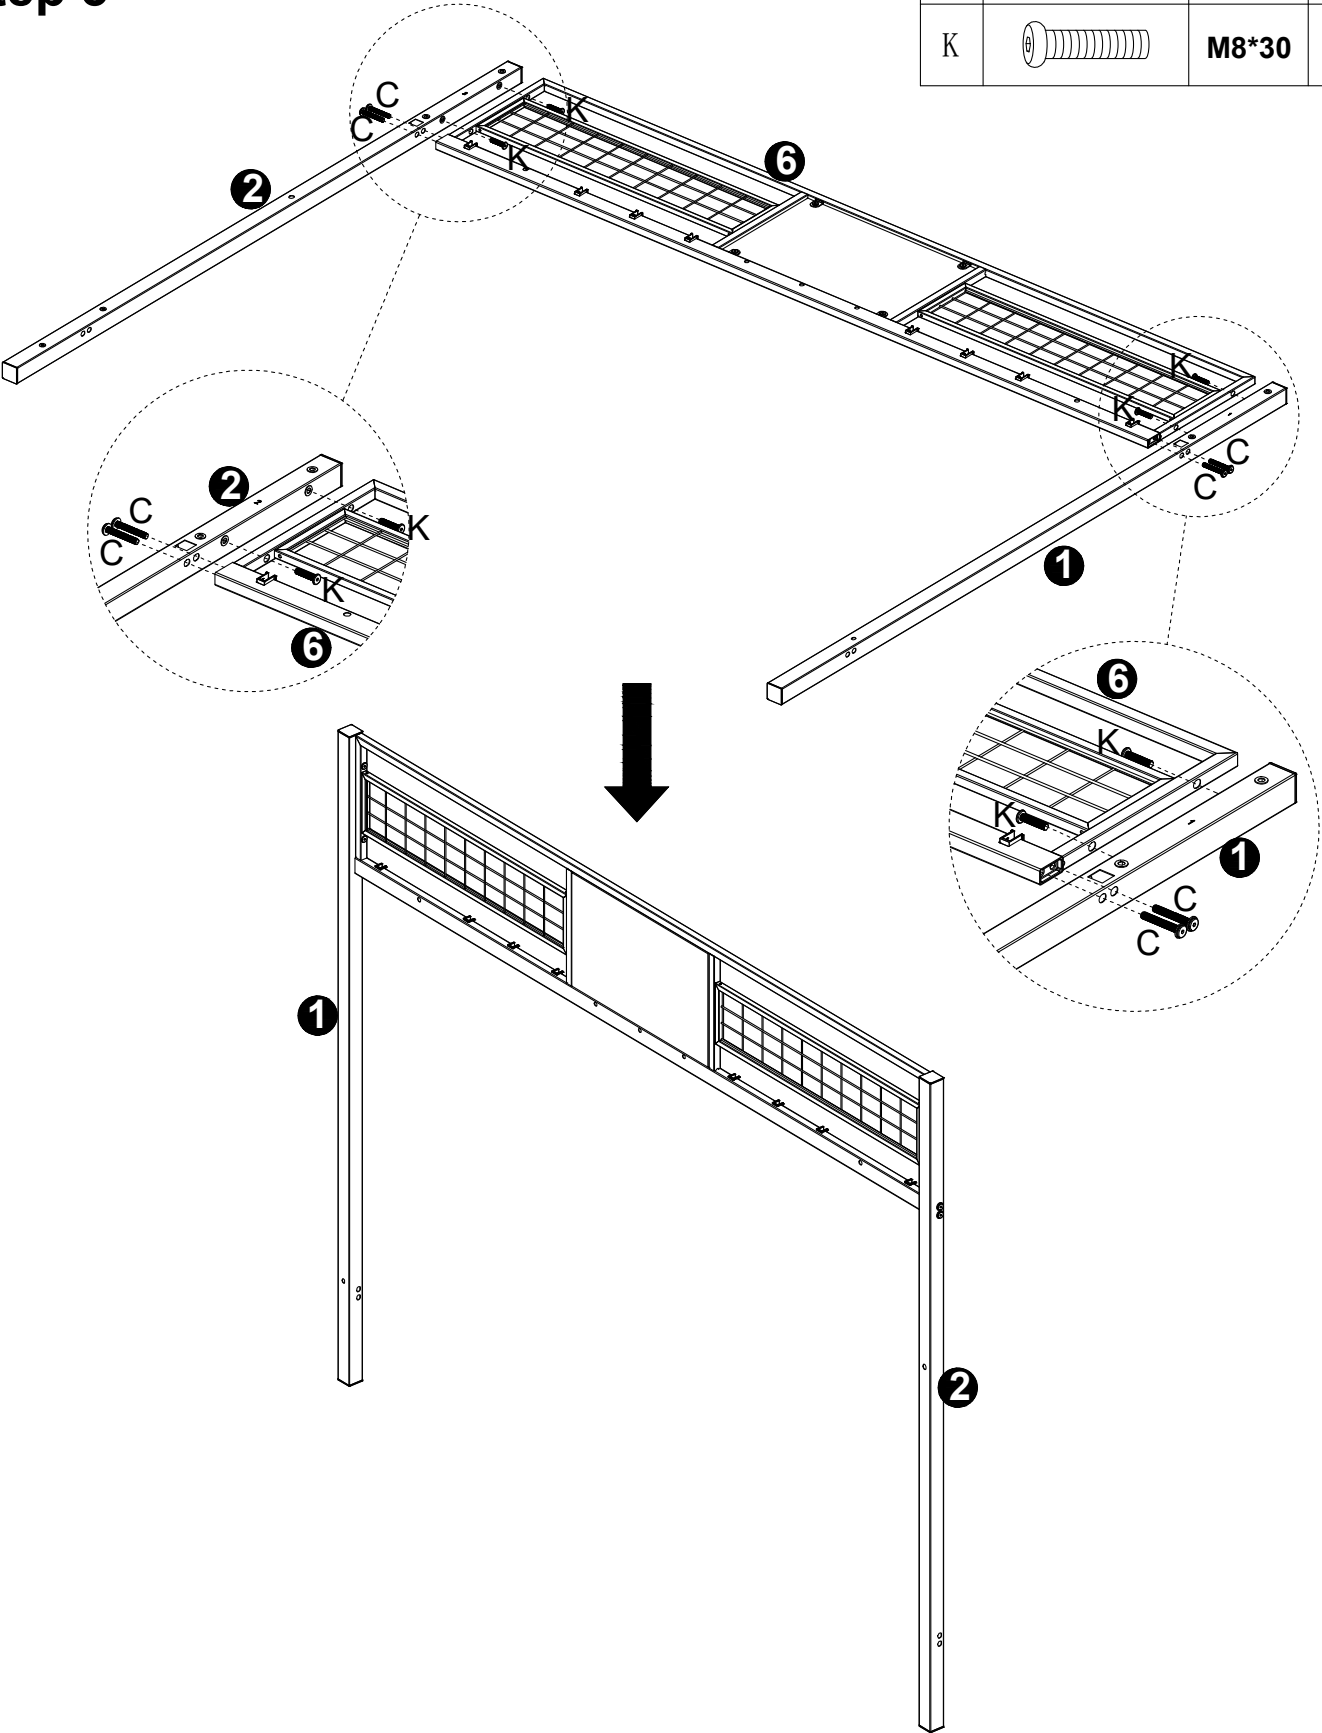

PRODUCT ASSEMBLY

Step 4

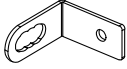
|   |                                                                                     |       |      |
|---|-------------------------------------------------------------------------------------|-------|------|
| C |  | M8*60 | 4pcs |
| K |  | M8*30 | 4pcs |
| S |  |       | 2pcs |

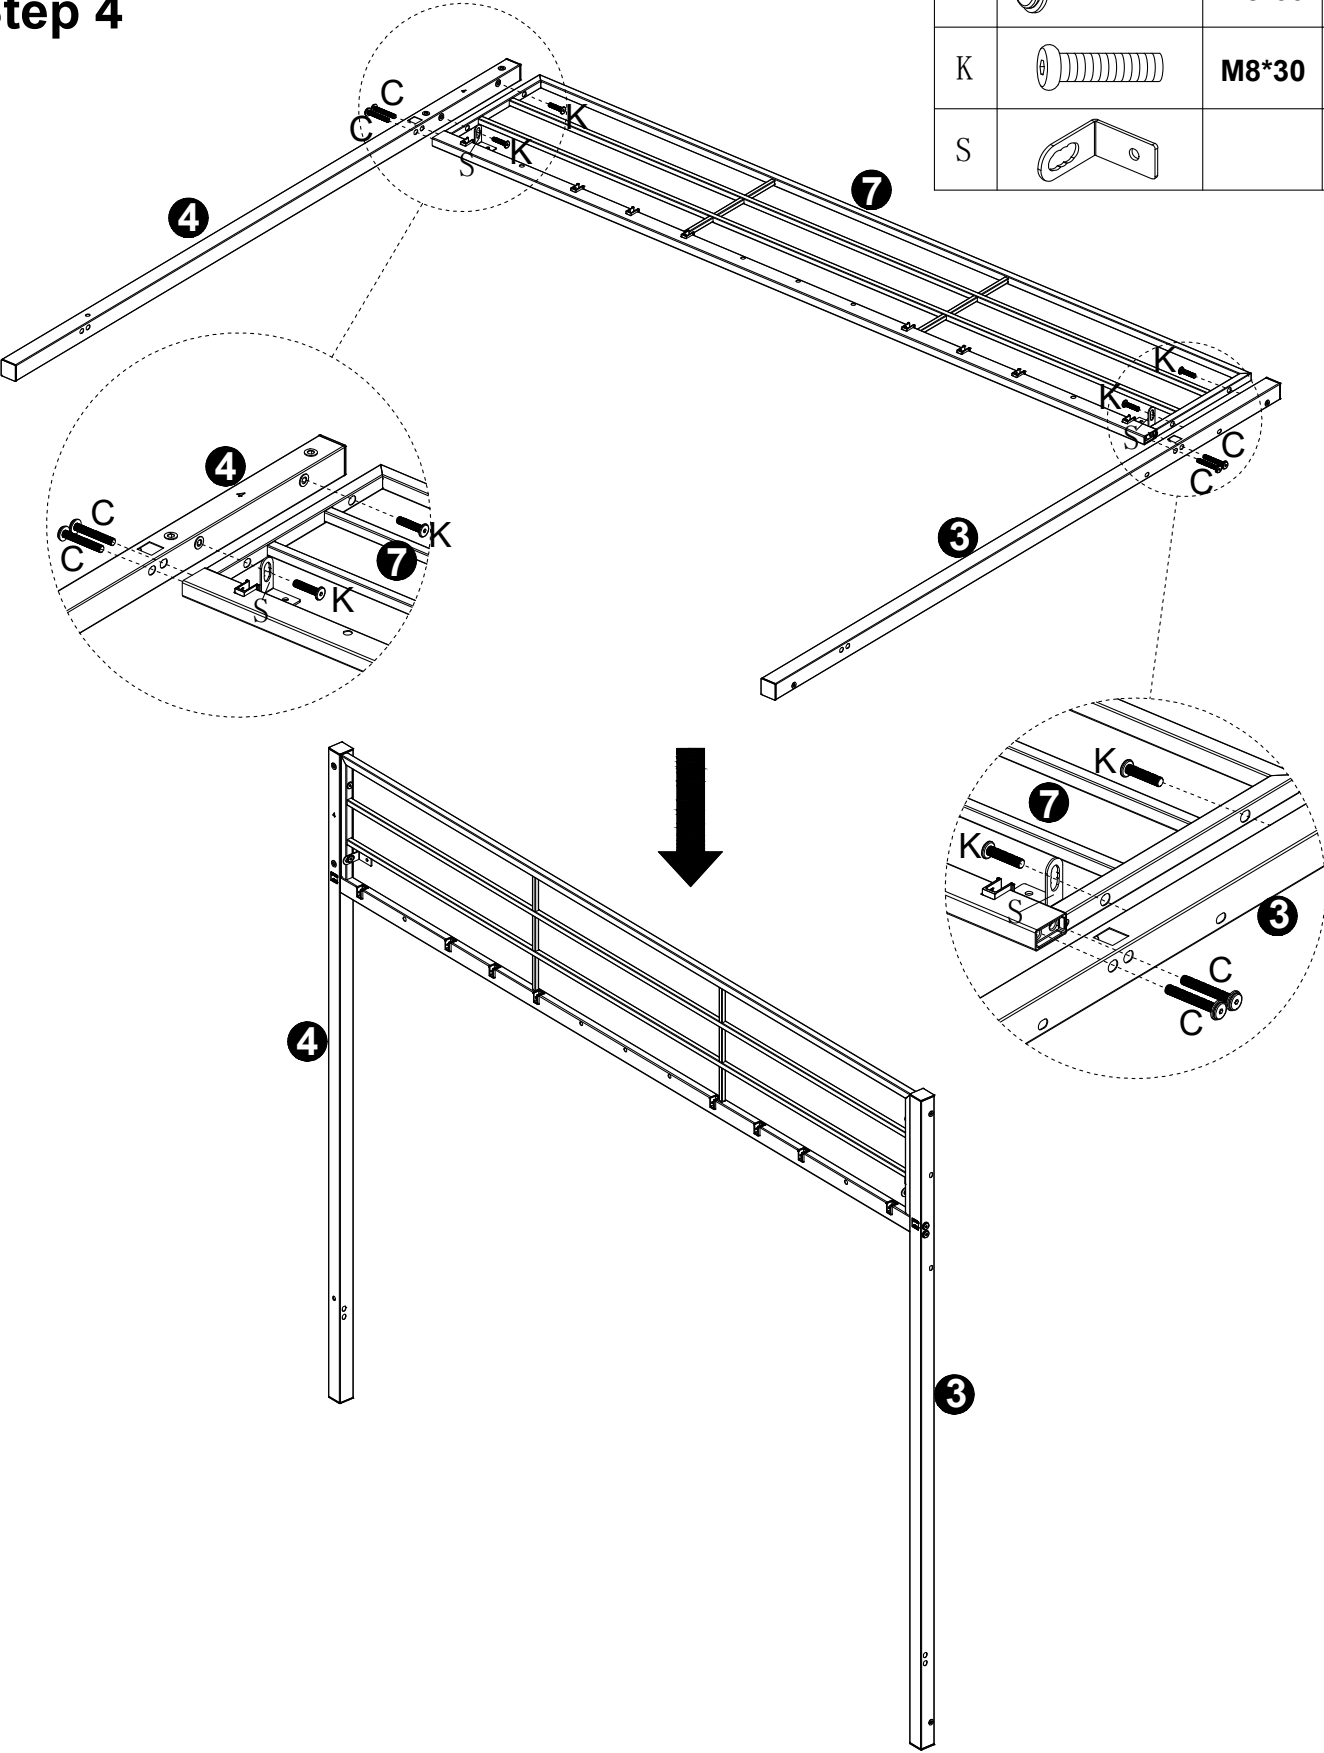

PRODUCT ASSEMBLY


Step 5

|   |                                                                                     |       |      |
|---|-------------------------------------------------------------------------------------|-------|------|
| H |  | M6*15 | 8pcs |
| Y |  |       | 4pcs |

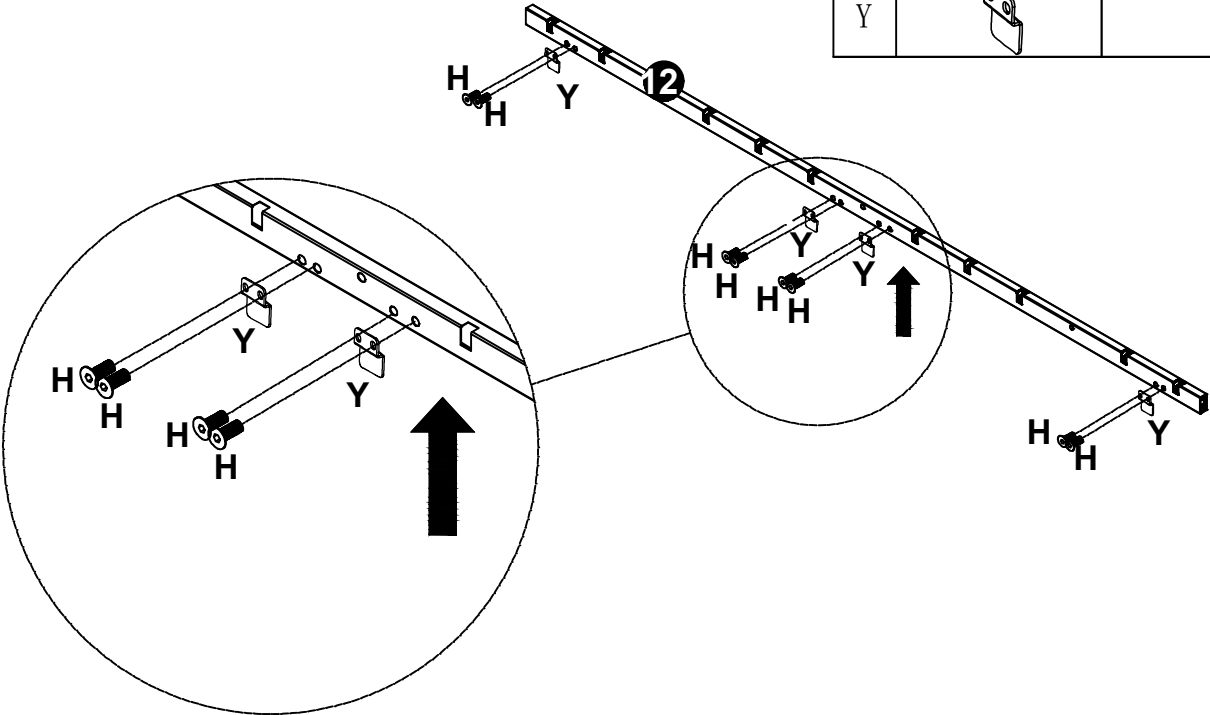



Step 6


|   |                                                                                       |       |      |
|---|---------------------------------------------------------------------------------------|-------|------|
| B |  | M8*15 | 4pcs |
|---|---------------------------------------------------------------------------------------|-------|------|

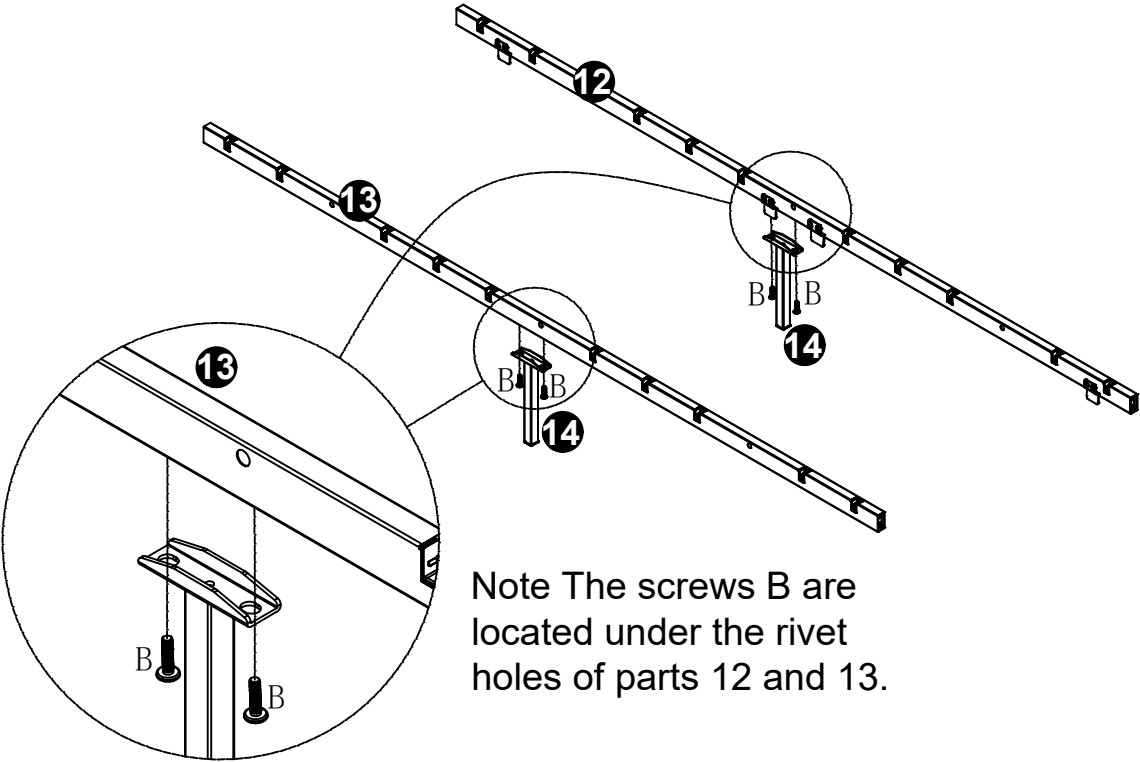



PRODUCT ASSEMBLY

Step 7

|   |                                                                                     |       |      |
|---|-------------------------------------------------------------------------------------|-------|------|
| C |  | M8*60 | 8pcs |
| D |  | M6*55 | 2pcs |
| K |  | M8*30 | 6pcs |

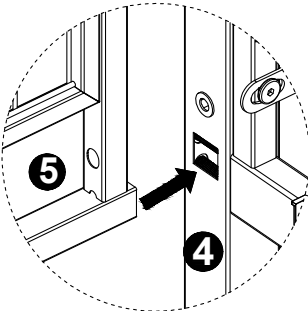


Align part 5 with this gap and insert it

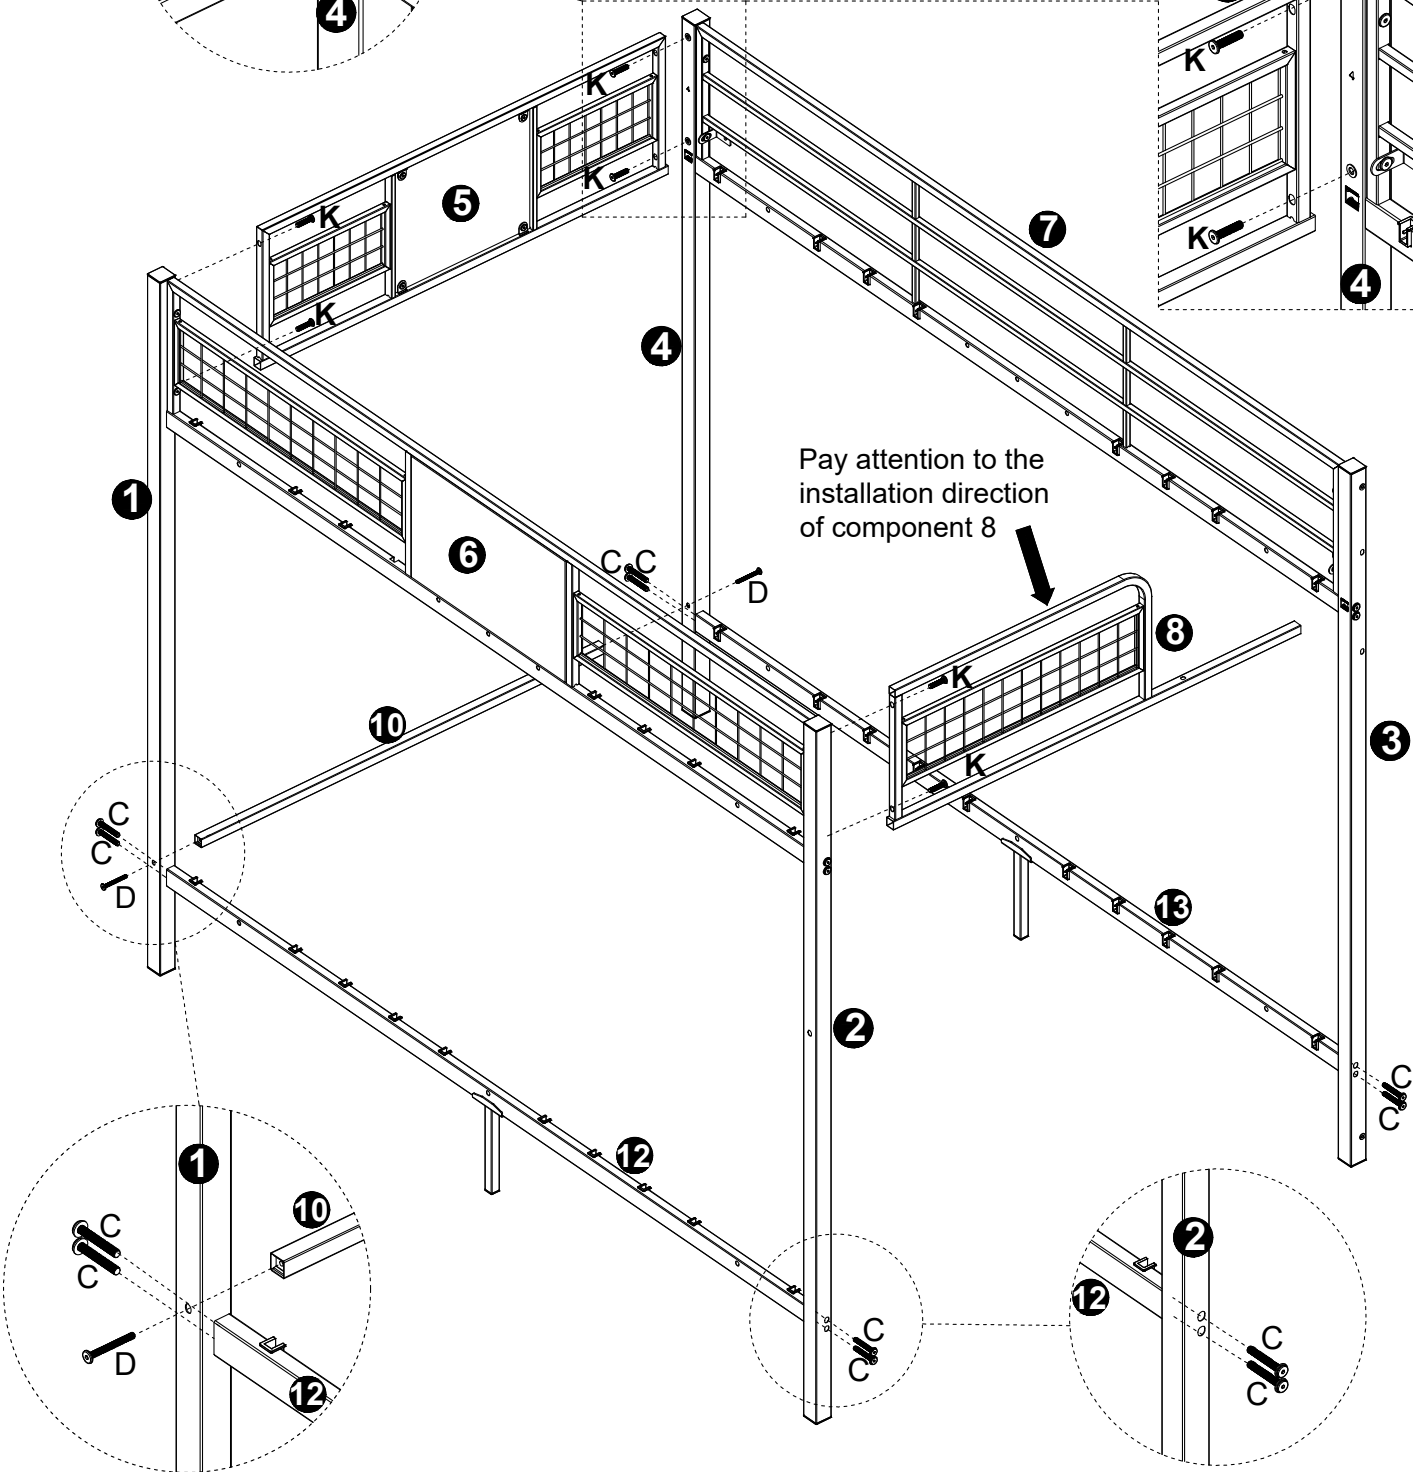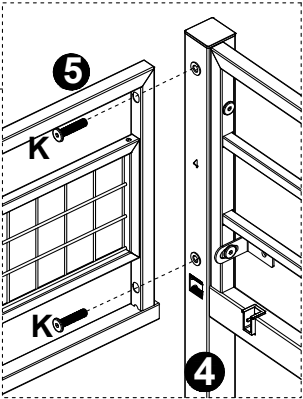

PRODUCT ASSEMBLY


Step 8

|   |                                                                                     |       |      |
|---|-------------------------------------------------------------------------------------|-------|------|
| F |  | M6*25 | 4pcs |
|---|-------------------------------------------------------------------------------------|-------|------|

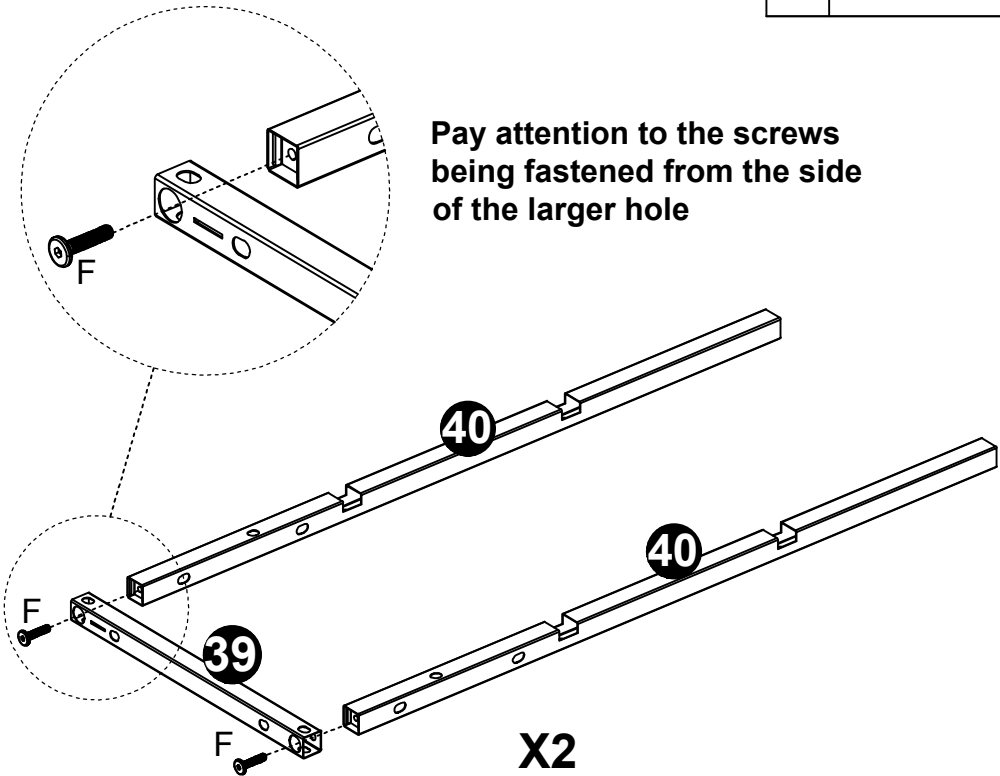

Step 9


|    |                                                                                       |       |      |
|----|---------------------------------------------------------------------------------------|-------|------|
| F  |  | M6*25 | 2pcs |
| O  |  | M6*18 | 2pcs |
| O2 |  | M6*12 | 2pcs |

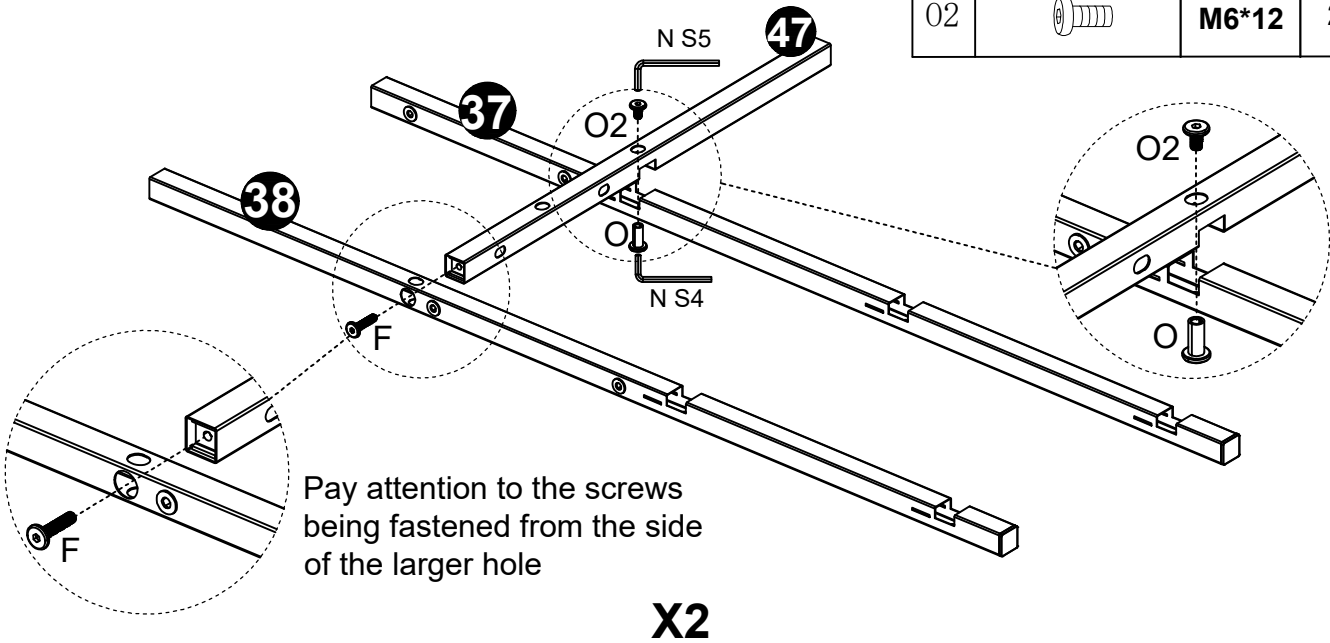



PRODUCT ASSEMBLY


Step 10

|    |                                                                                     |       |      |
|----|-------------------------------------------------------------------------------------|-------|------|
| 0  |  | M6*18 | 8pcs |
| 02 |  | M6*12 | 8pcs |

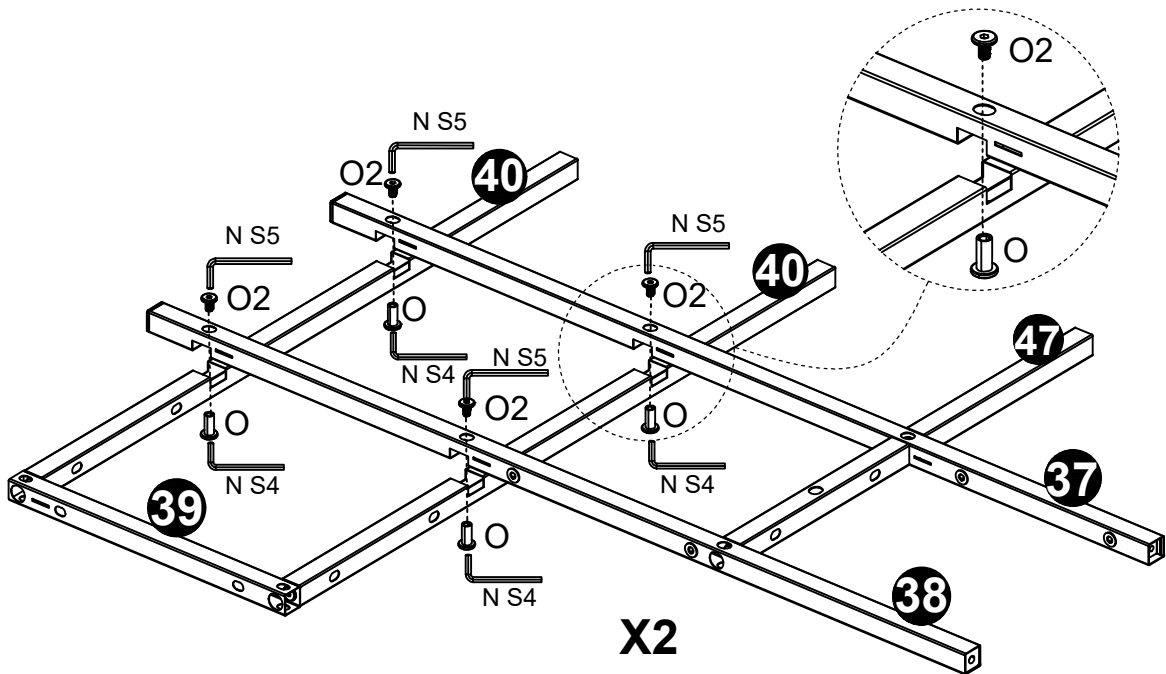

Step 11


|   |                                                                                       |       |      |
|---|---------------------------------------------------------------------------------------|-------|------|
| E |  | M6*35 | 4pcs |
| M |  | M8*35 | 2pcs |

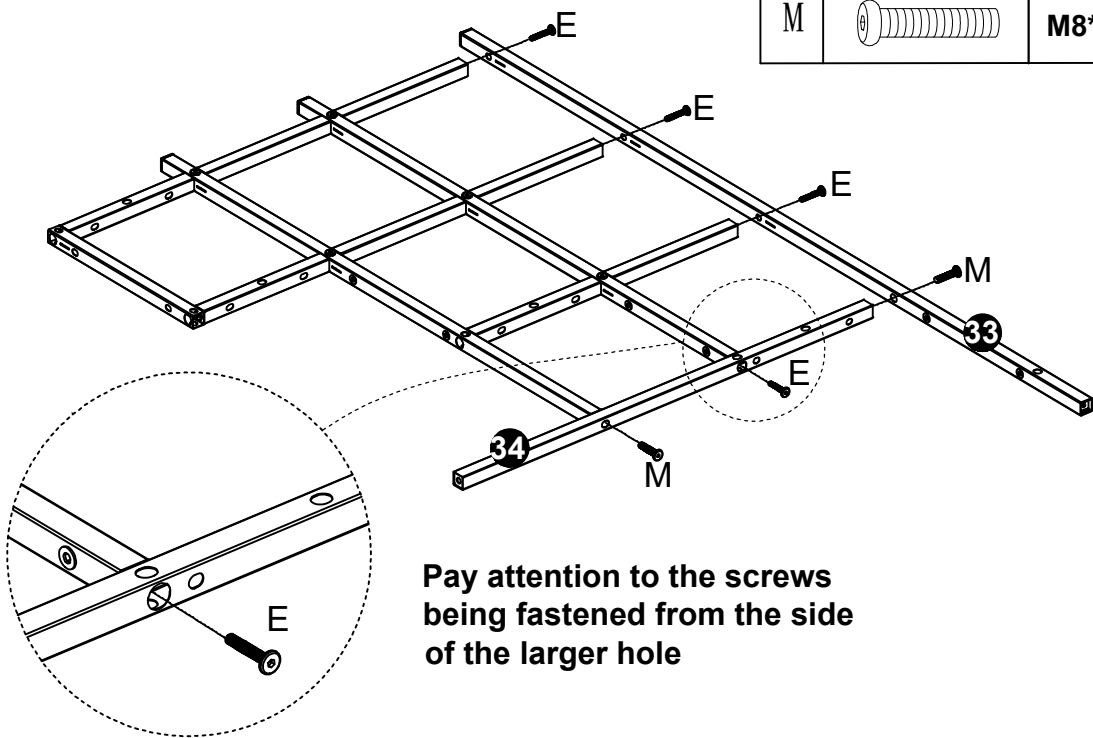



PRODUCT ASSEMBLY


Step 12

|   |                                                                                     |       |      |
|---|-------------------------------------------------------------------------------------|-------|------|
| C |  | M8*60 | 1pc  |
| E |  | M6*35 | 3pcs |

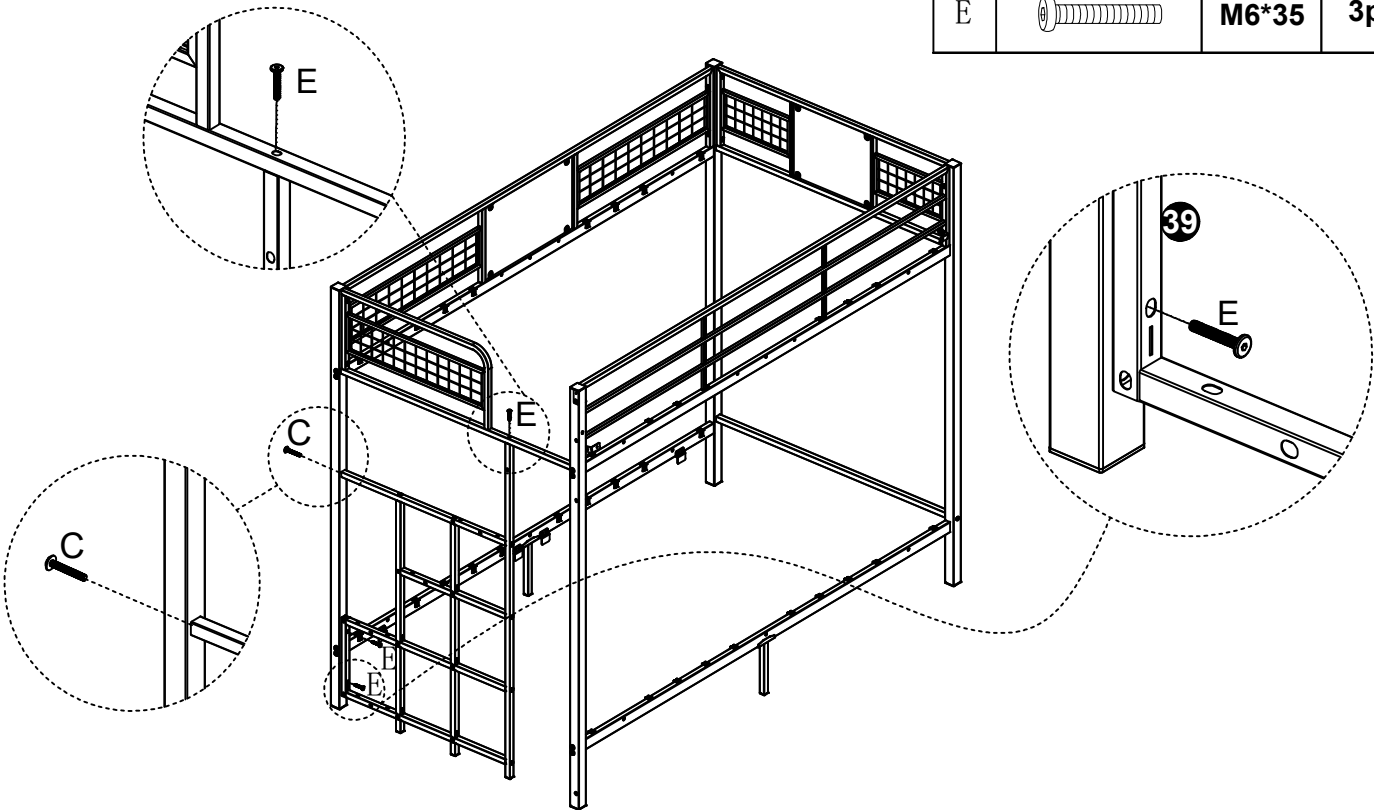

Step 13



|   |                                                                                       |       |      |
|---|---------------------------------------------------------------------------------------|-------|------|
| E |  | M6*35 | 3pcs |
| M |  | M8*35 | 1pc  |

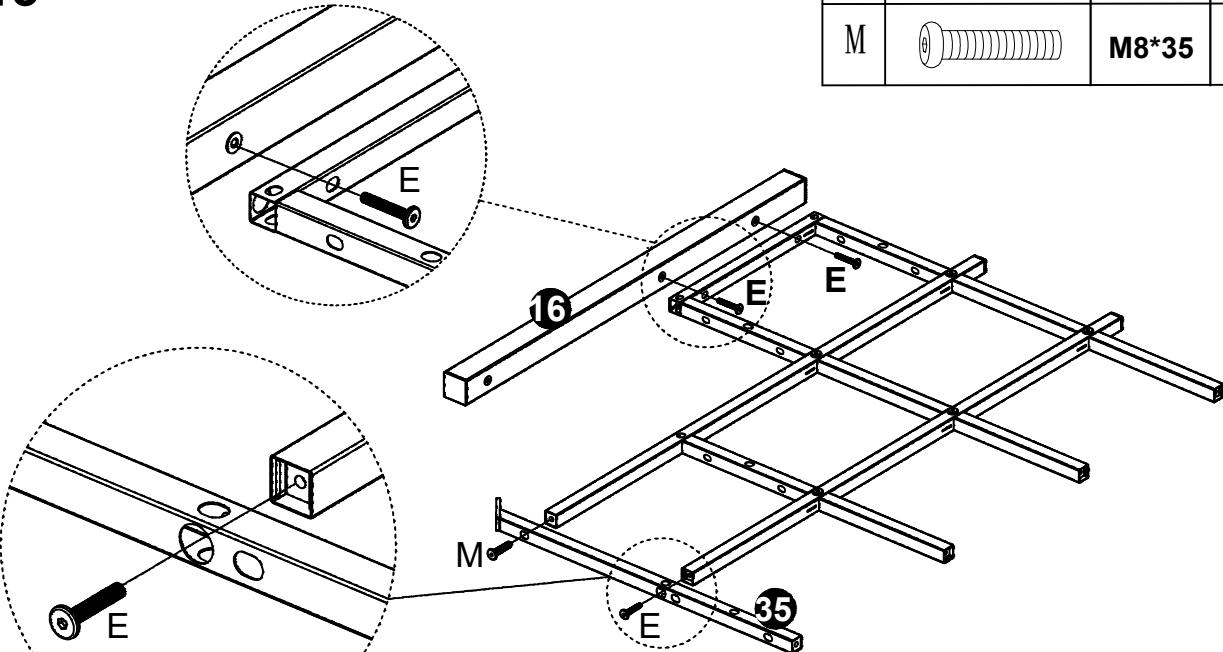


Pay attention to the screws  
being fastened from the side  
of the larger hole


PRODUCT ASSEMBLY


Step 14

|   |                                                                                     |       |      |
|---|-------------------------------------------------------------------------------------|-------|------|
| E |  | M6*35 | 3pcs |
| H |  | M6*15 | 3pcs |
| M |  | M8*35 | 1pc  |

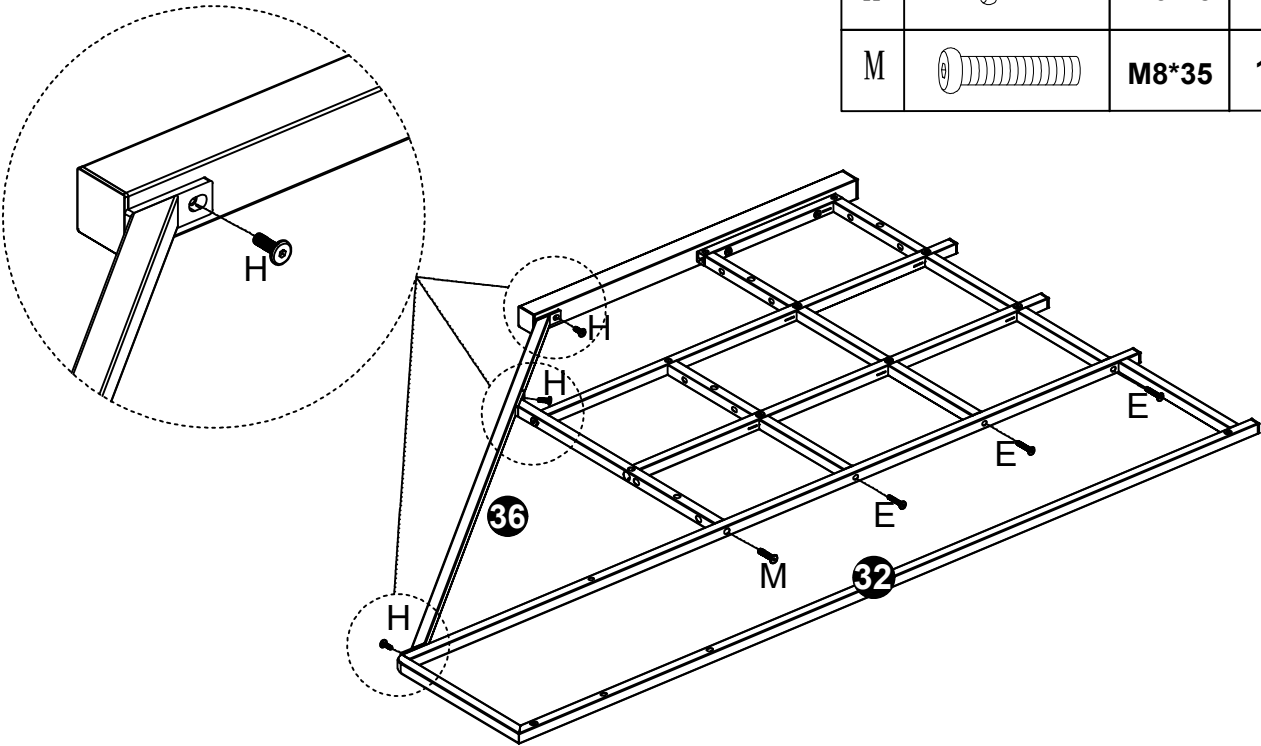


Step 15



|   |                                                                                       |       |      |
|---|---------------------------------------------------------------------------------------|-------|------|
| E |  | M6*35 | 2pcs |
| F |  | M6*25 | 4pcs |

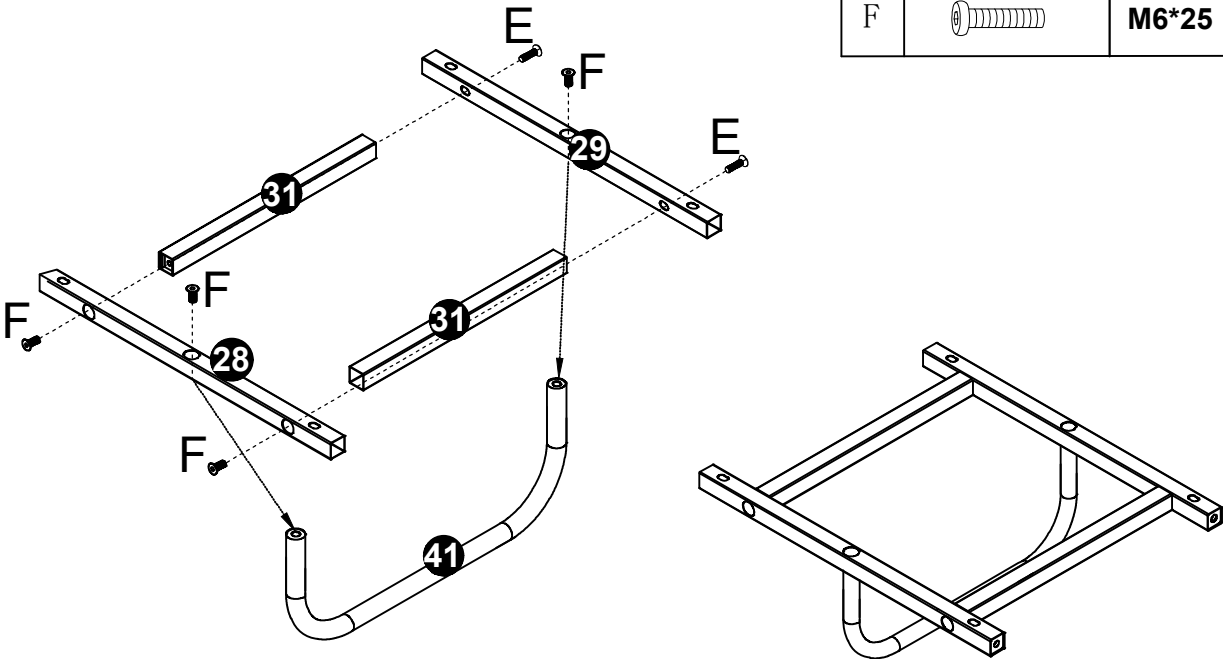

PRODUCT ASSEMBLY

Step 16

|   |                                                                                     |       |       |
|---|-------------------------------------------------------------------------------------|-------|-------|
| M |  | M8*35 | 10pcs |
| H |  | M6*15 | 4pcs  |



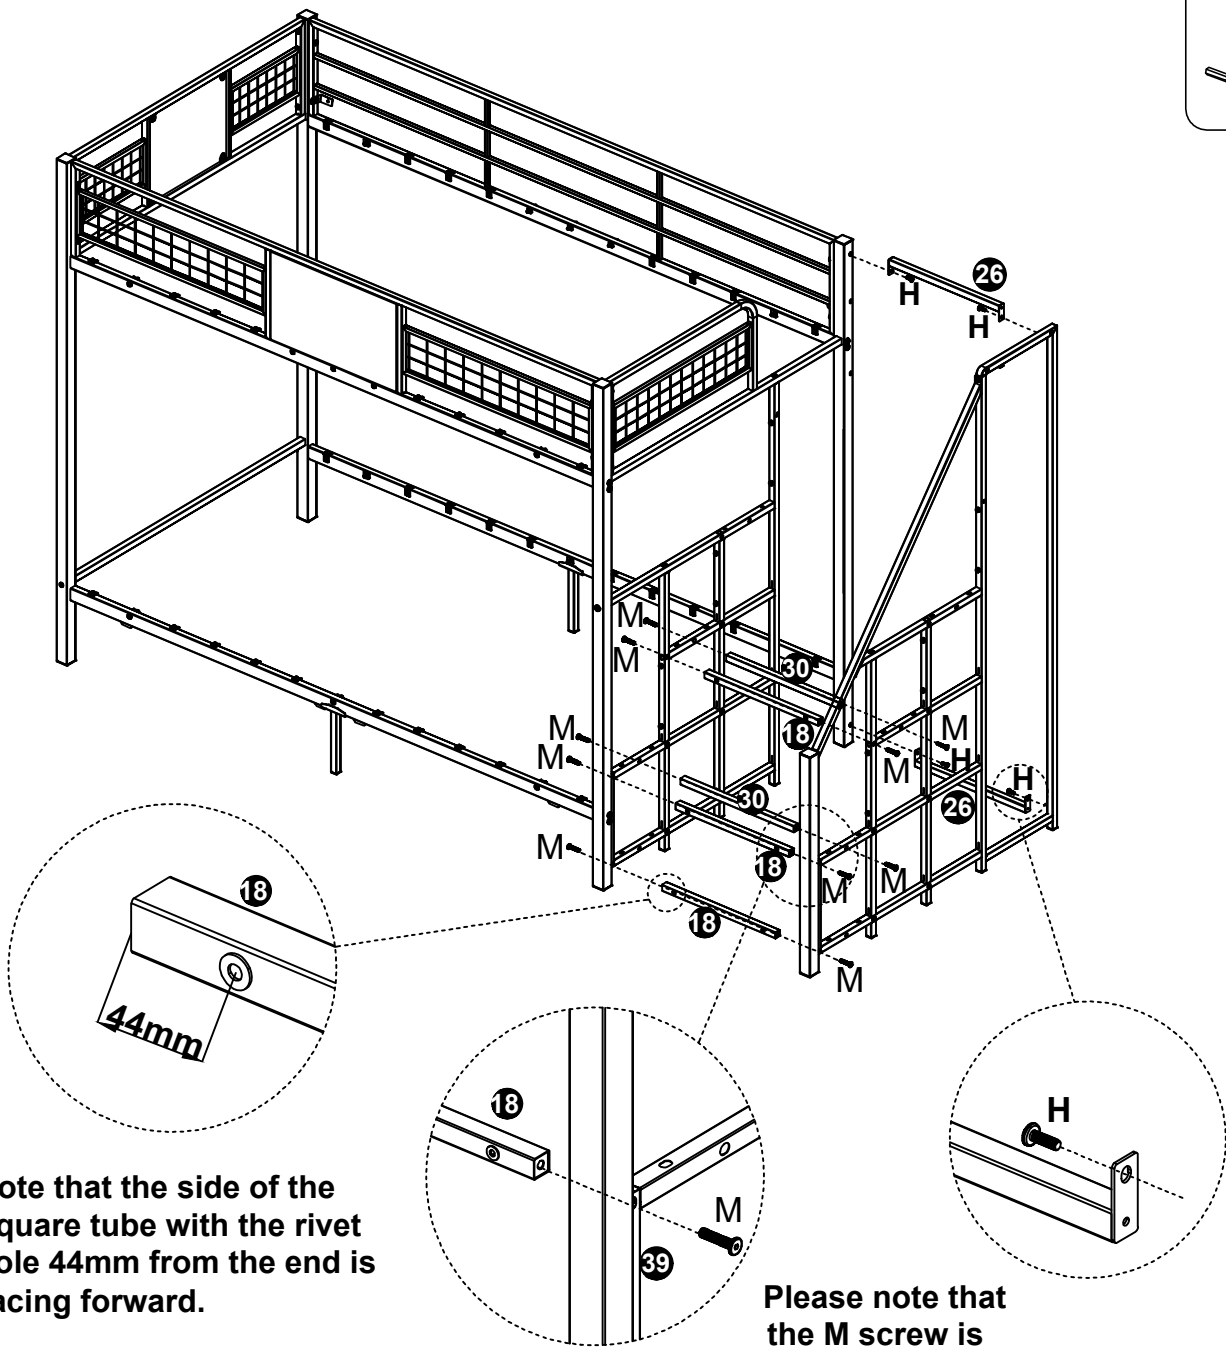
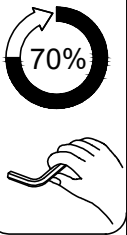




Note that the side of the square tube with the rivet hole 44mm from the end is facing forward.

Please note that the M screw is locked onto the hole of part 39

PRODUCT ASSEMBLY


Step 17

|    |                                                                                     |       |      |
|----|-------------------------------------------------------------------------------------|-------|------|
| C  |  | M8*60 | 1pc  |
| D  |  | M6*55 | 1pc  |
| H  |  | M6*15 | 3pcs |
| M  |  | M8*35 | 5pcs |
| Q  |  | M6*40 | 1pc  |
| M1 |  | M8*40 | 2pcs |

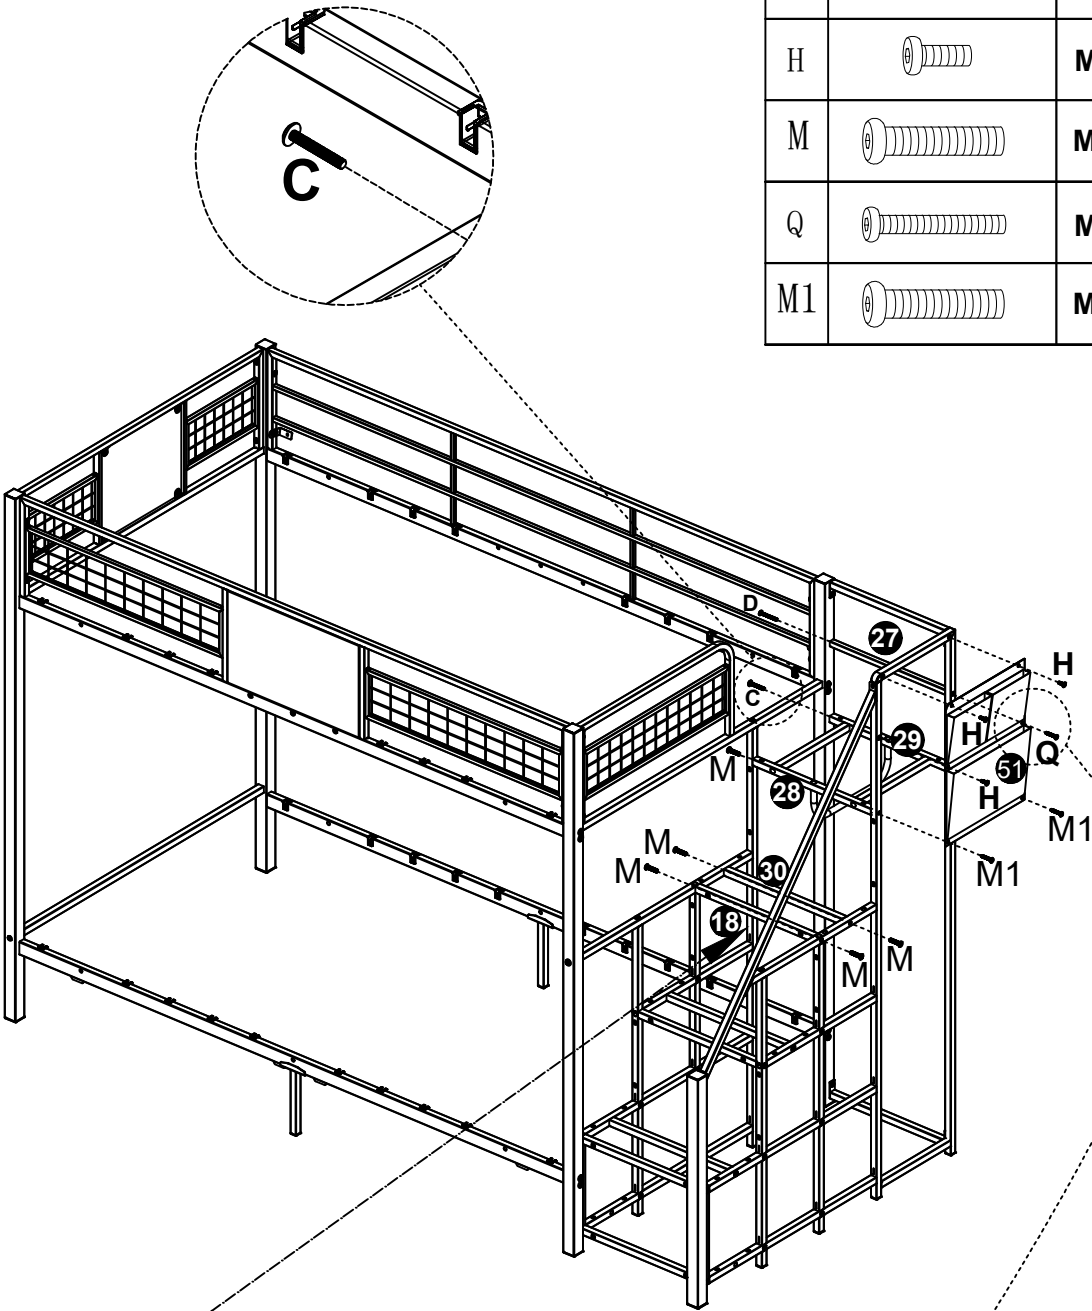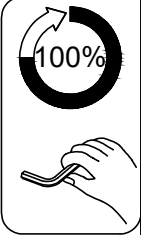



Note that the side of the square tube with the rivet hole 44mm from the end is facing forward.


Pay attention to the length of the screw here

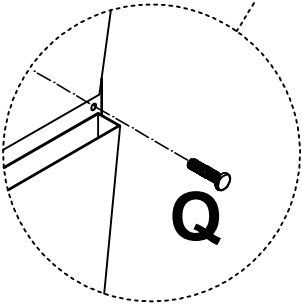

PRODUCT ASSEMBLY


Step 18


|   |                                                                                     |       |      |
|---|-------------------------------------------------------------------------------------|-------|------|
| E |  | M6*35 | 6pcs |
| M |  | M8*35 | 4pcs |

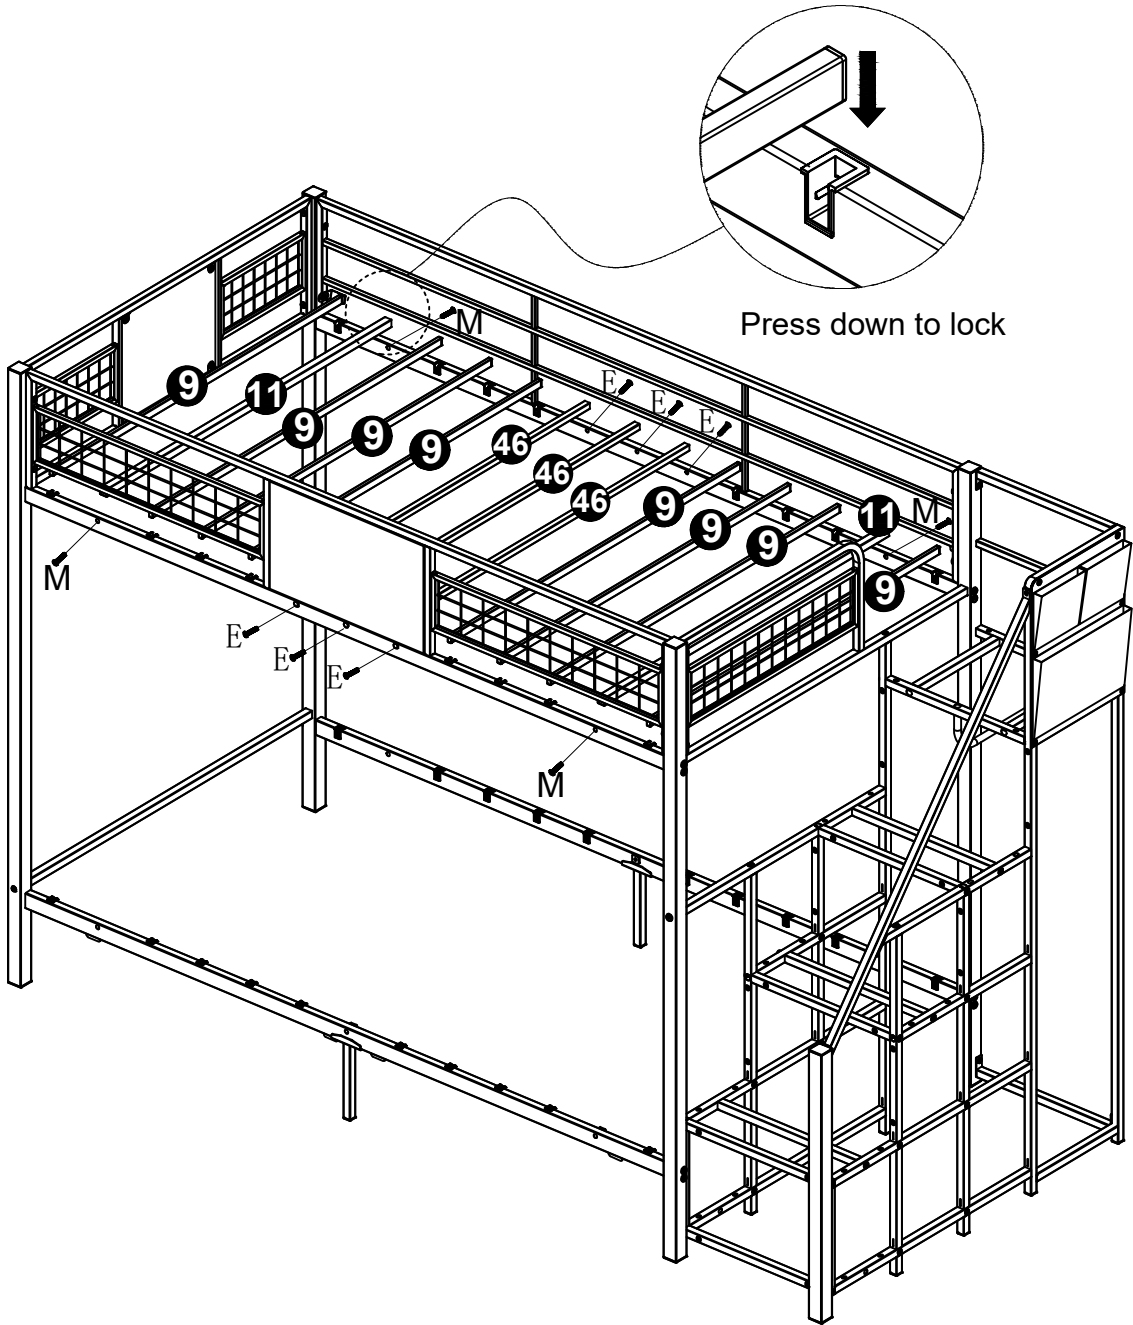

PRODUCT ASSEMBLY

Step 19


|   |                                                                                     |       |      |
|---|-------------------------------------------------------------------------------------|-------|------|
| M |  | M8*35 | 6pcs |
|---|-------------------------------------------------------------------------------------|-------|------|

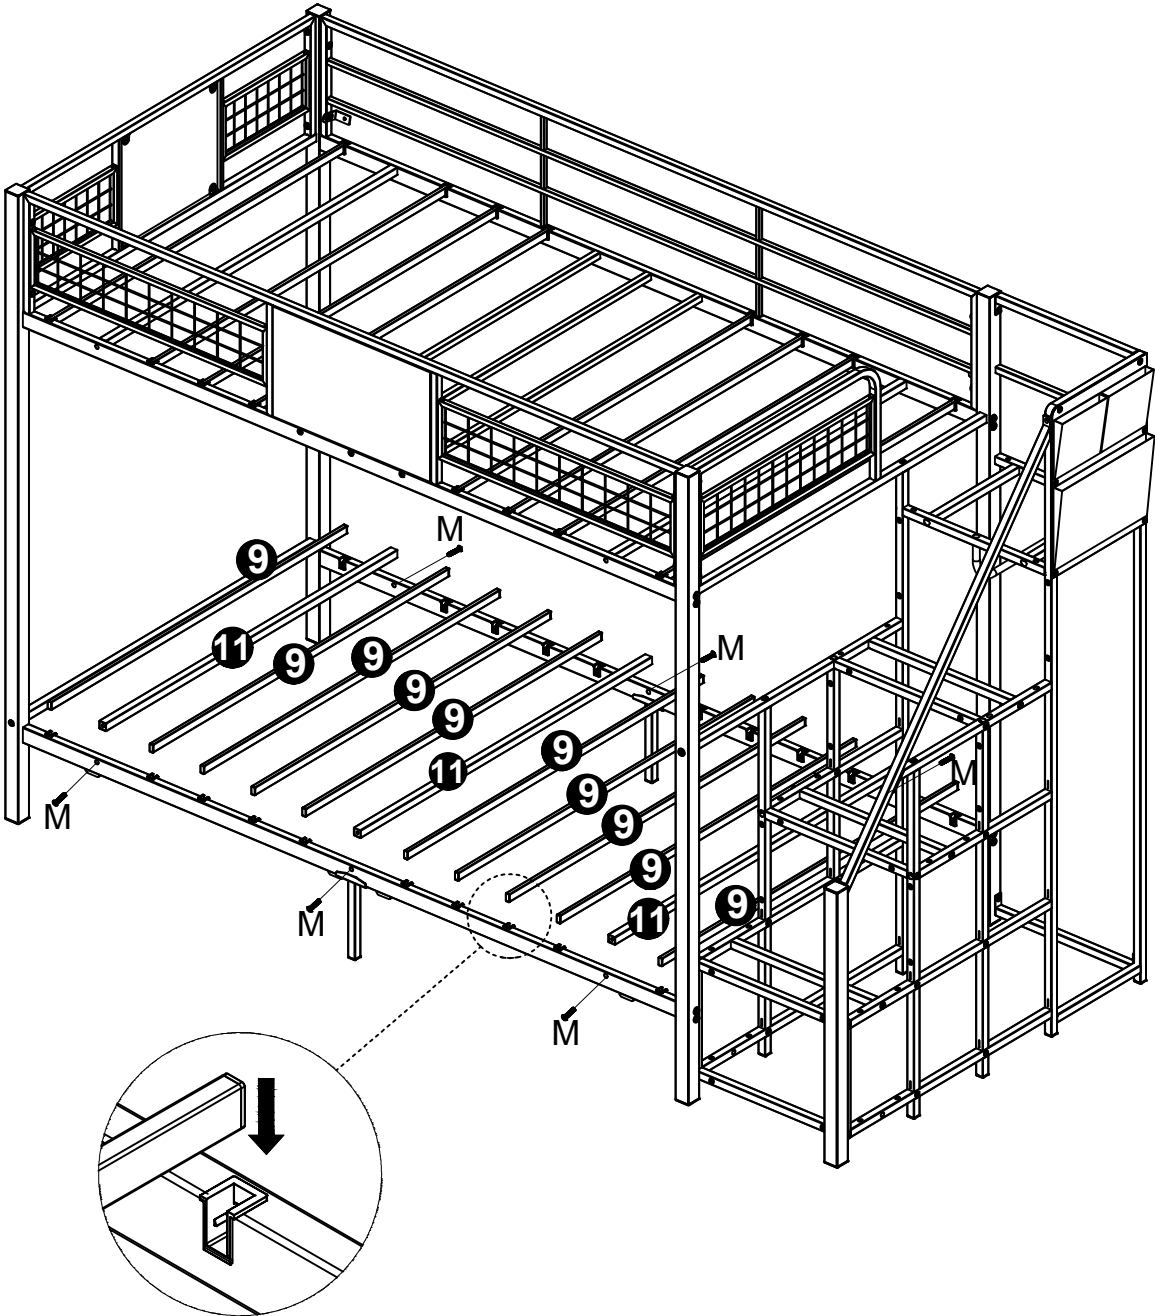


Press down to lock

## PRODUCT ASSEMBLY

### Step 20

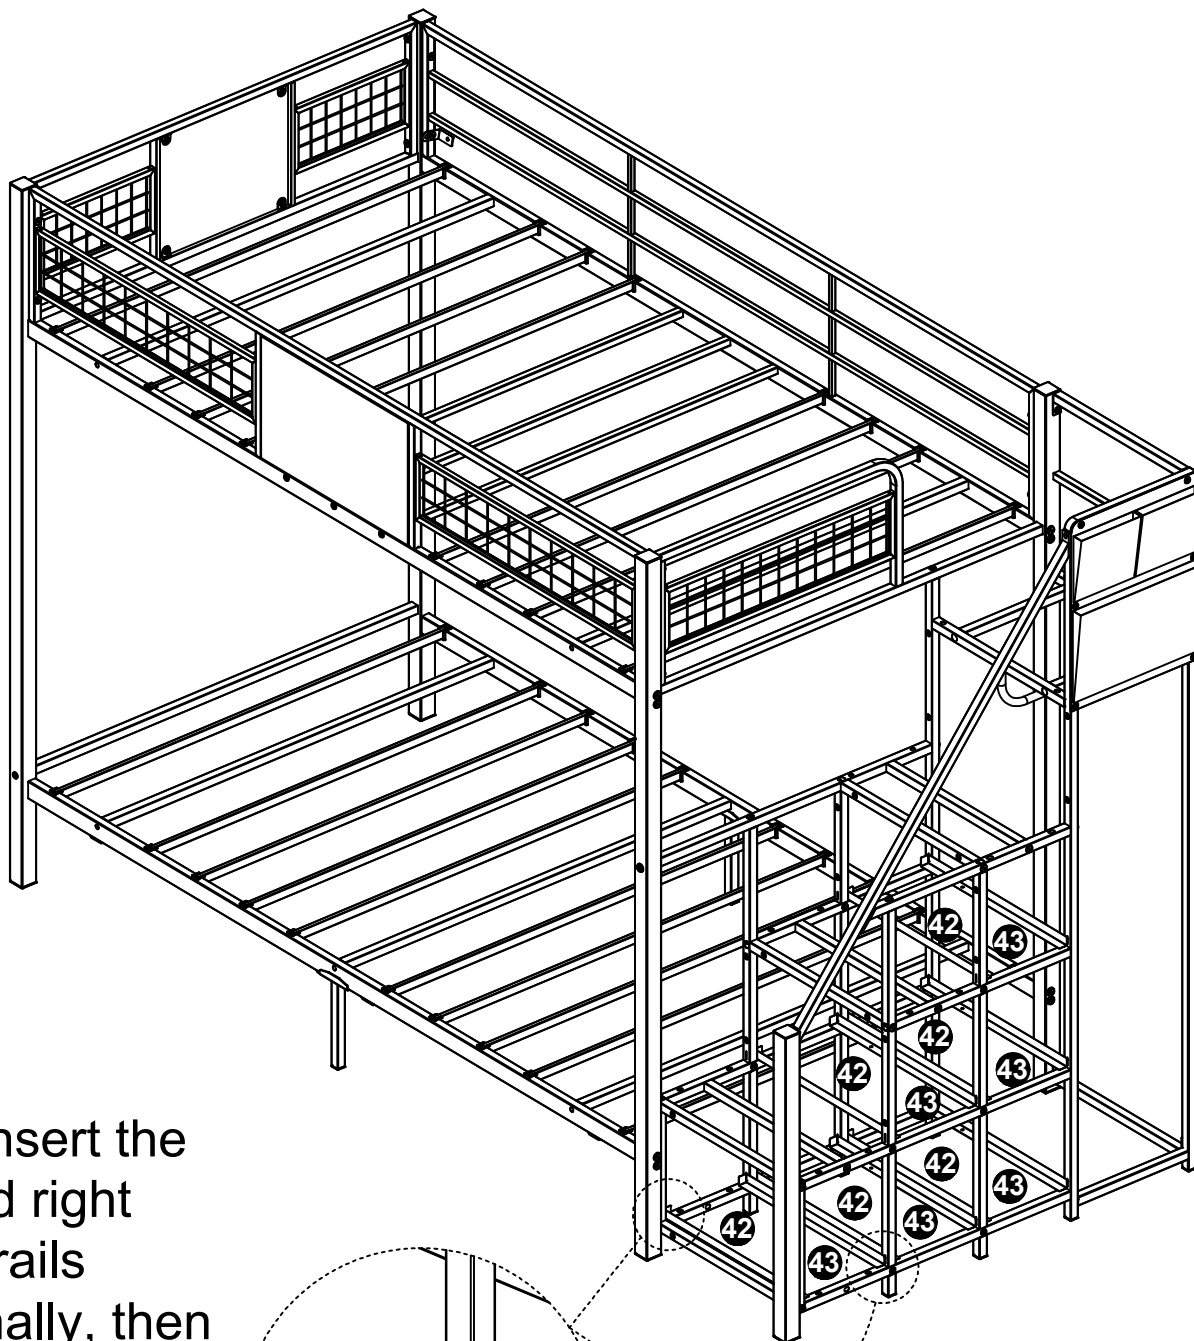



First, insert the left and right guide rails diagonally, then insert them and press down

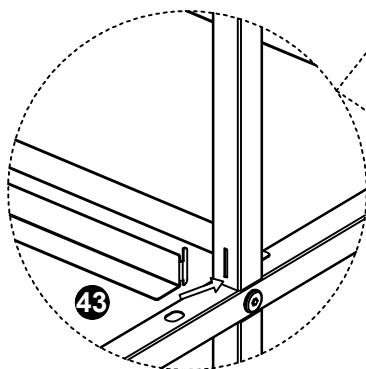

PRODUCT ASSEMBLY


Step 21


|   |                                                                                     |       |       |
|---|-------------------------------------------------------------------------------------|-------|-------|
| I |  | M6*28 | 16pcs |
| P |  |       | 3pcs  |

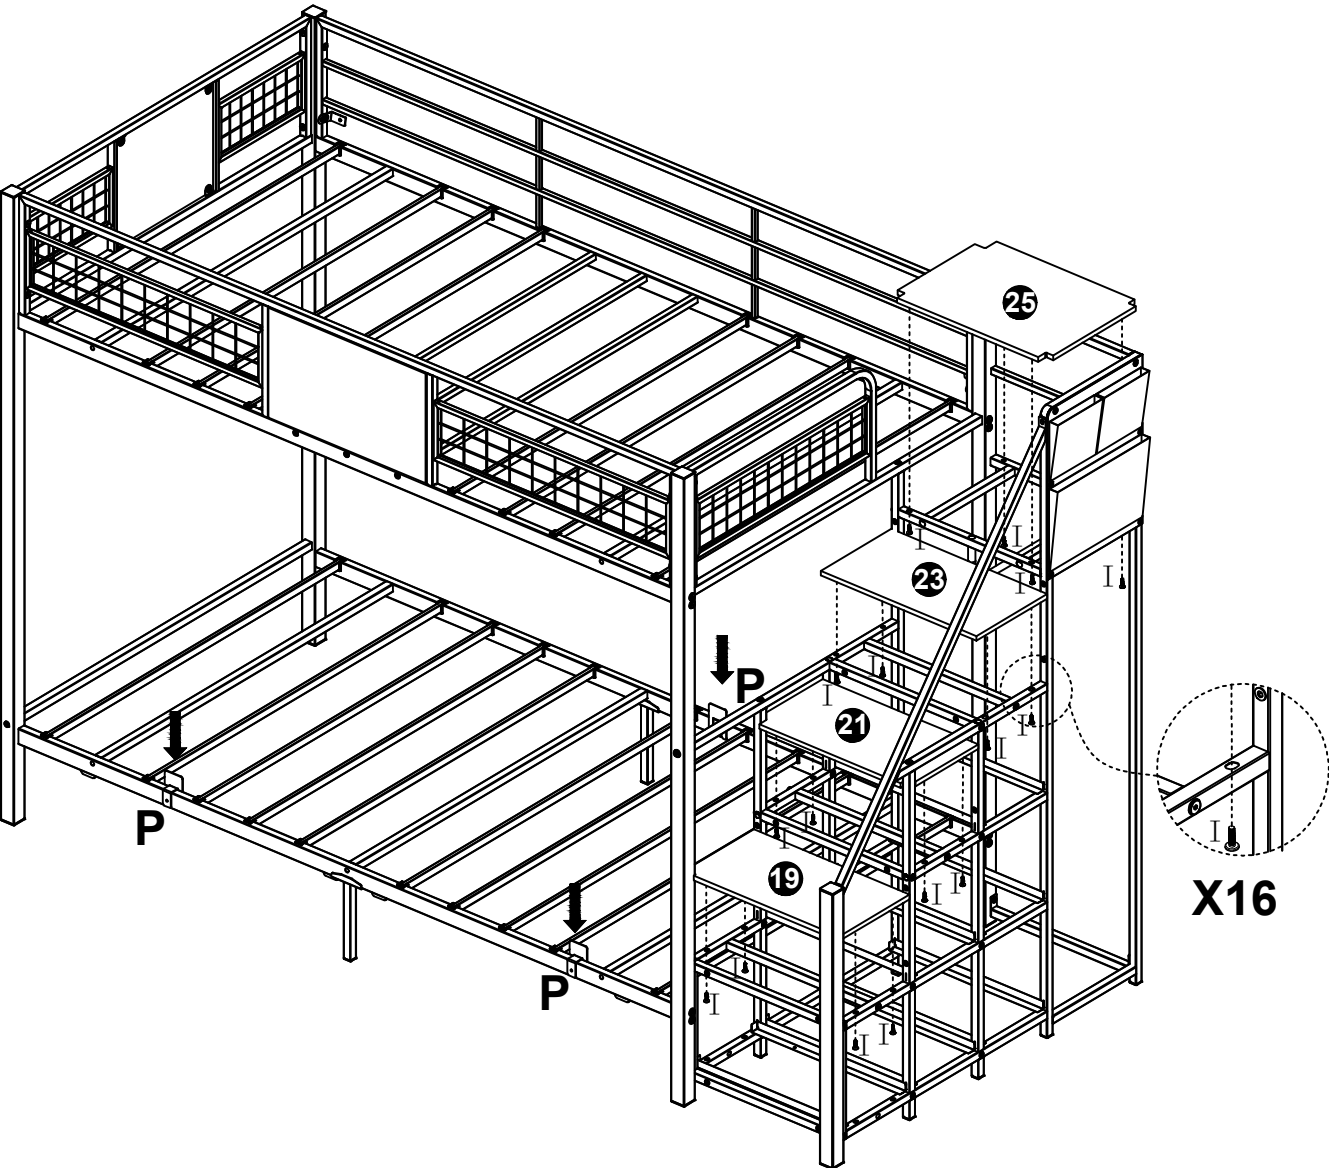


PRODUCT ASSEMBLY


Step 22

|   |                                                                                     |       |       |
|---|-------------------------------------------------------------------------------------|-------|-------|
| G |  | M4*12 | 12pcs |
| R |  |       | 6pcs  |
| L |  |       | 1pc   |

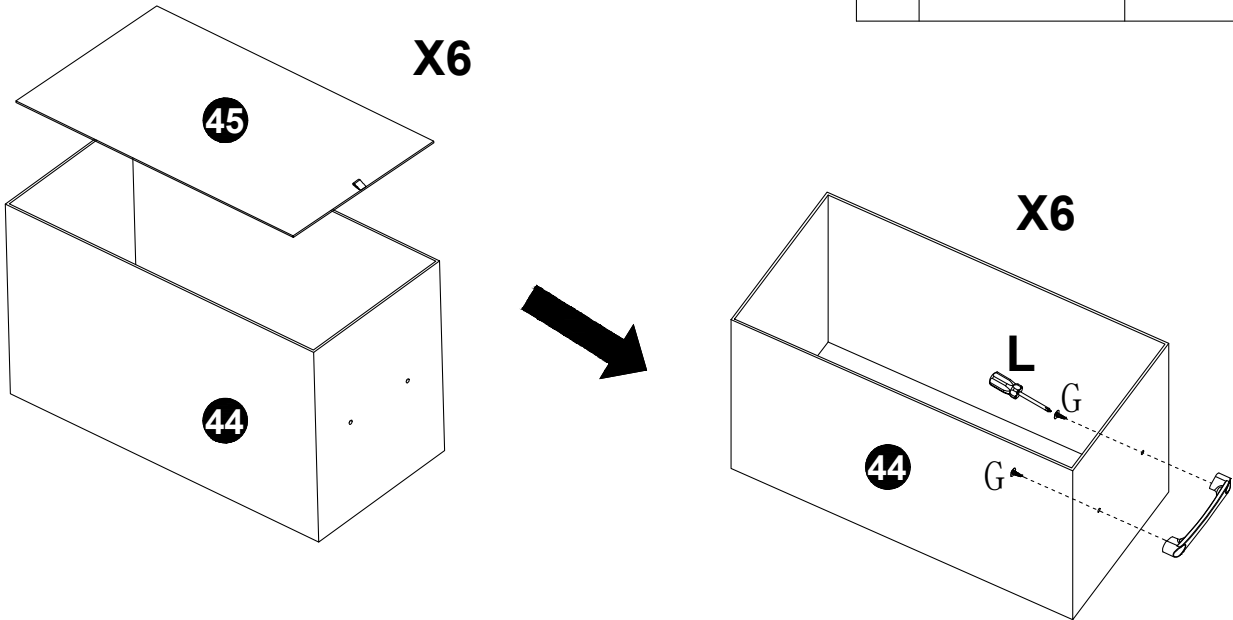


Step 23

|   |                                                                                       |       |       |
|---|---------------------------------------------------------------------------------------|-------|-------|
| J |  | M6*23 | 16pcs |
|---|---------------------------------------------------------------------------------------|-------|-------|

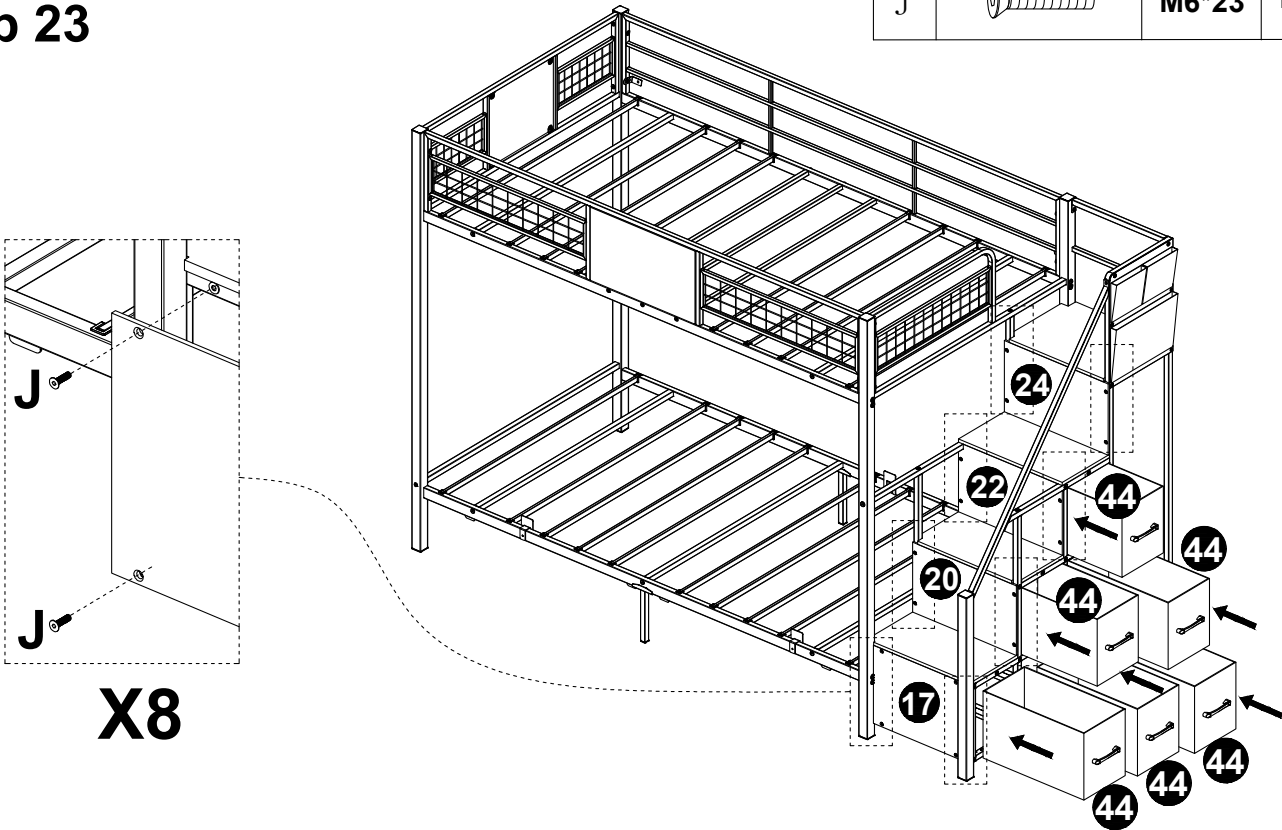


PRODUCT ASSEMBLY

Step 24

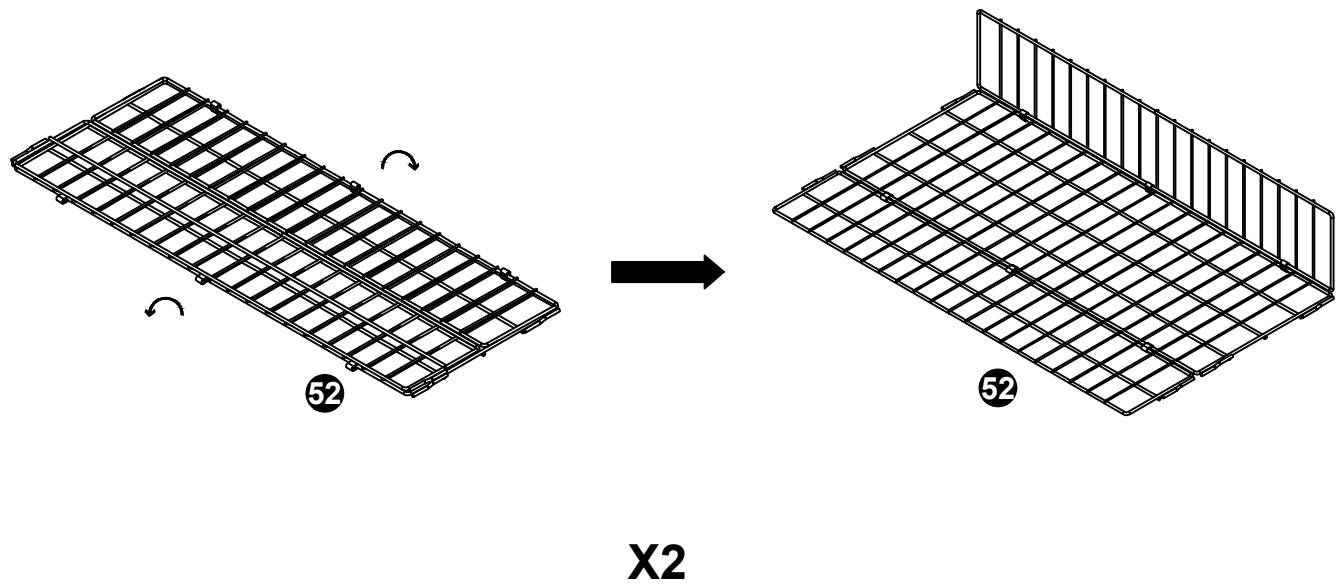


Step 25

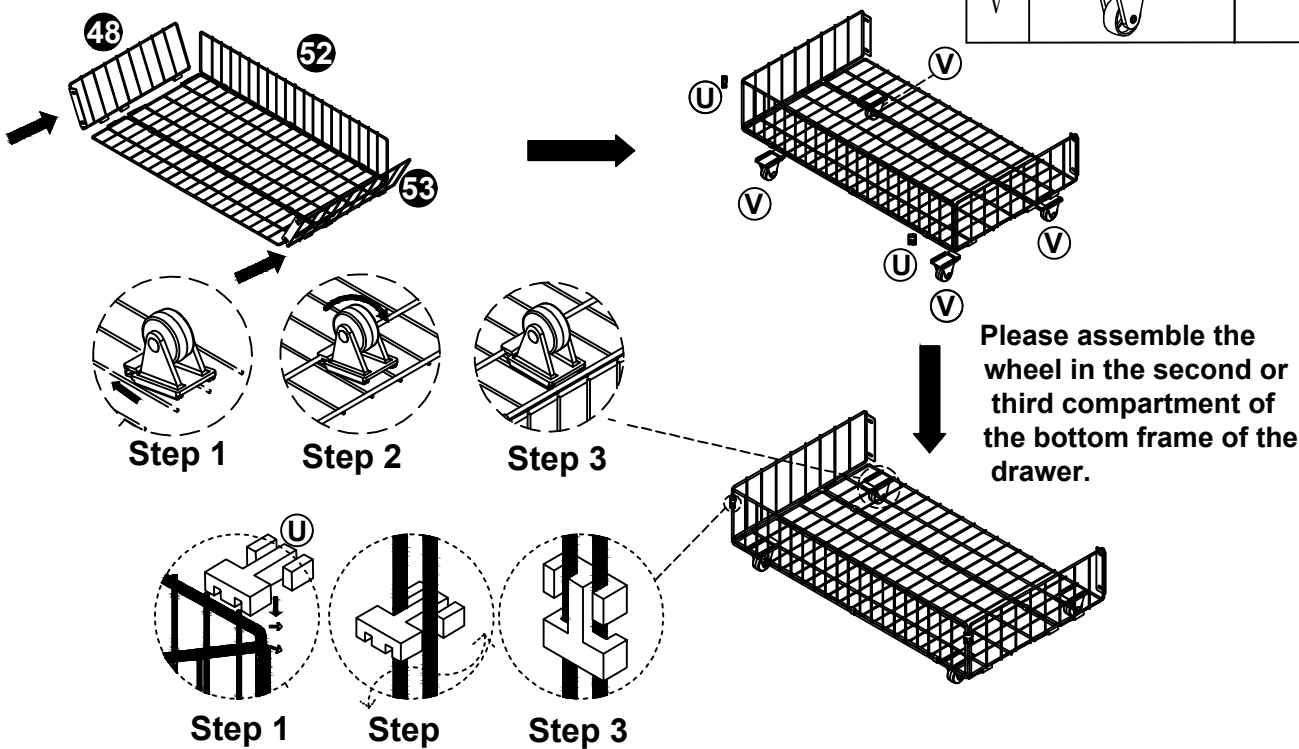

# PRODUCT ASSEMBLY


## Step 26

|   |                                                                                     |       |       |
|---|-------------------------------------------------------------------------------------|-------|-------|
| A |  | M6*10 | 10pcs |
| T |  |       | 2pcs  |

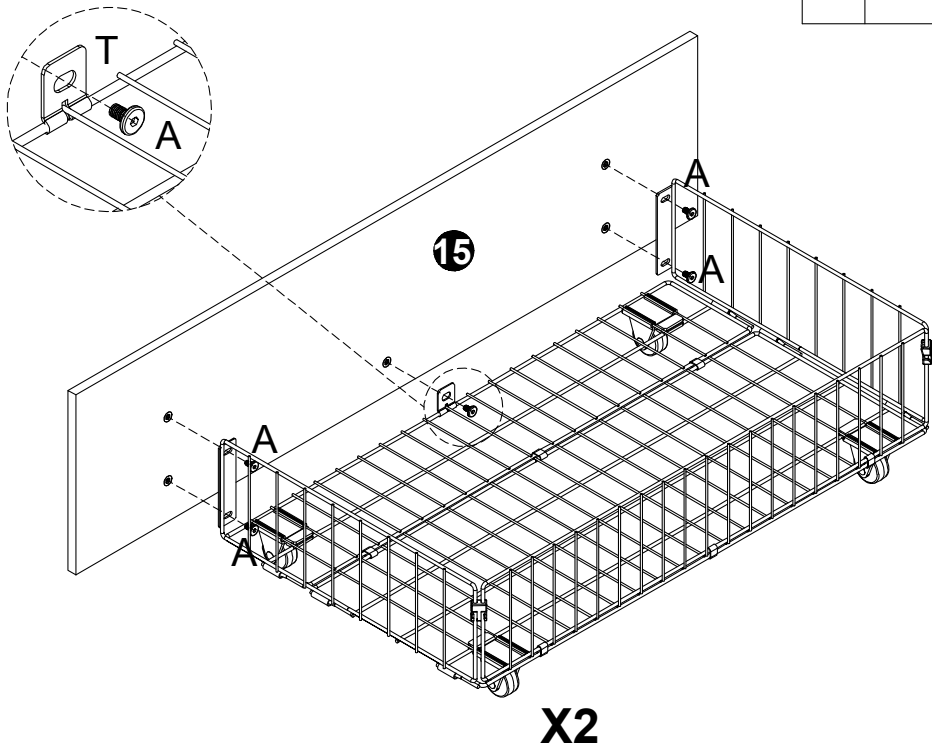


## Step 27

First, lift the drawer up and place it diagonally under the bed. Then, halfway through, lower the drawer and push it flat

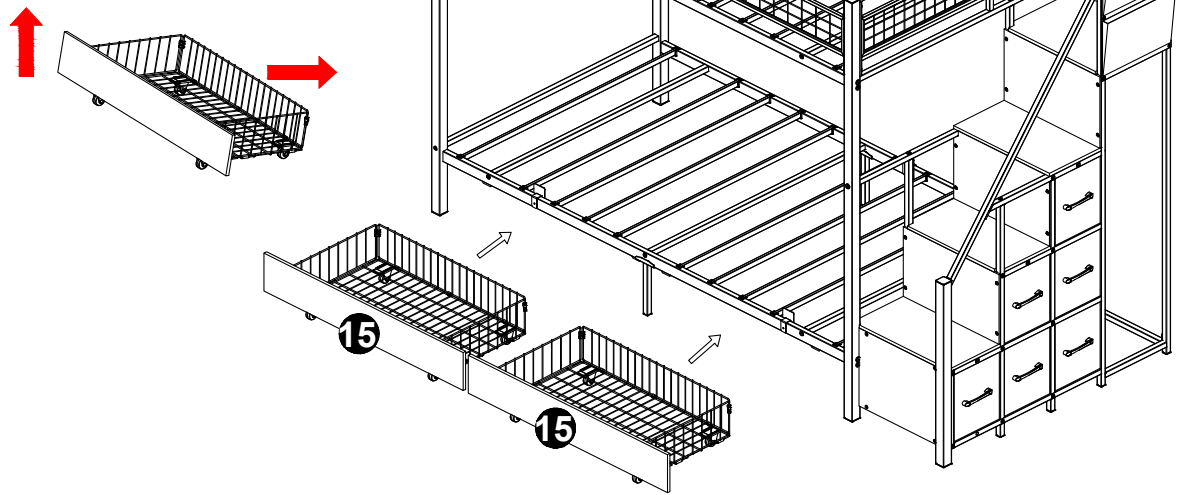


## PRODUCT ASSEMBLY

### Step 28

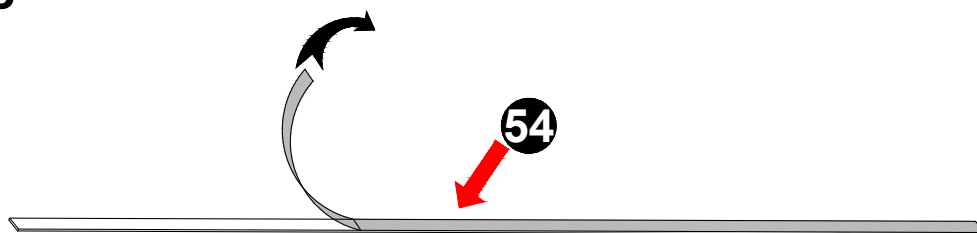

Peel off the protective paper on Velcro then stick it under the part 7.

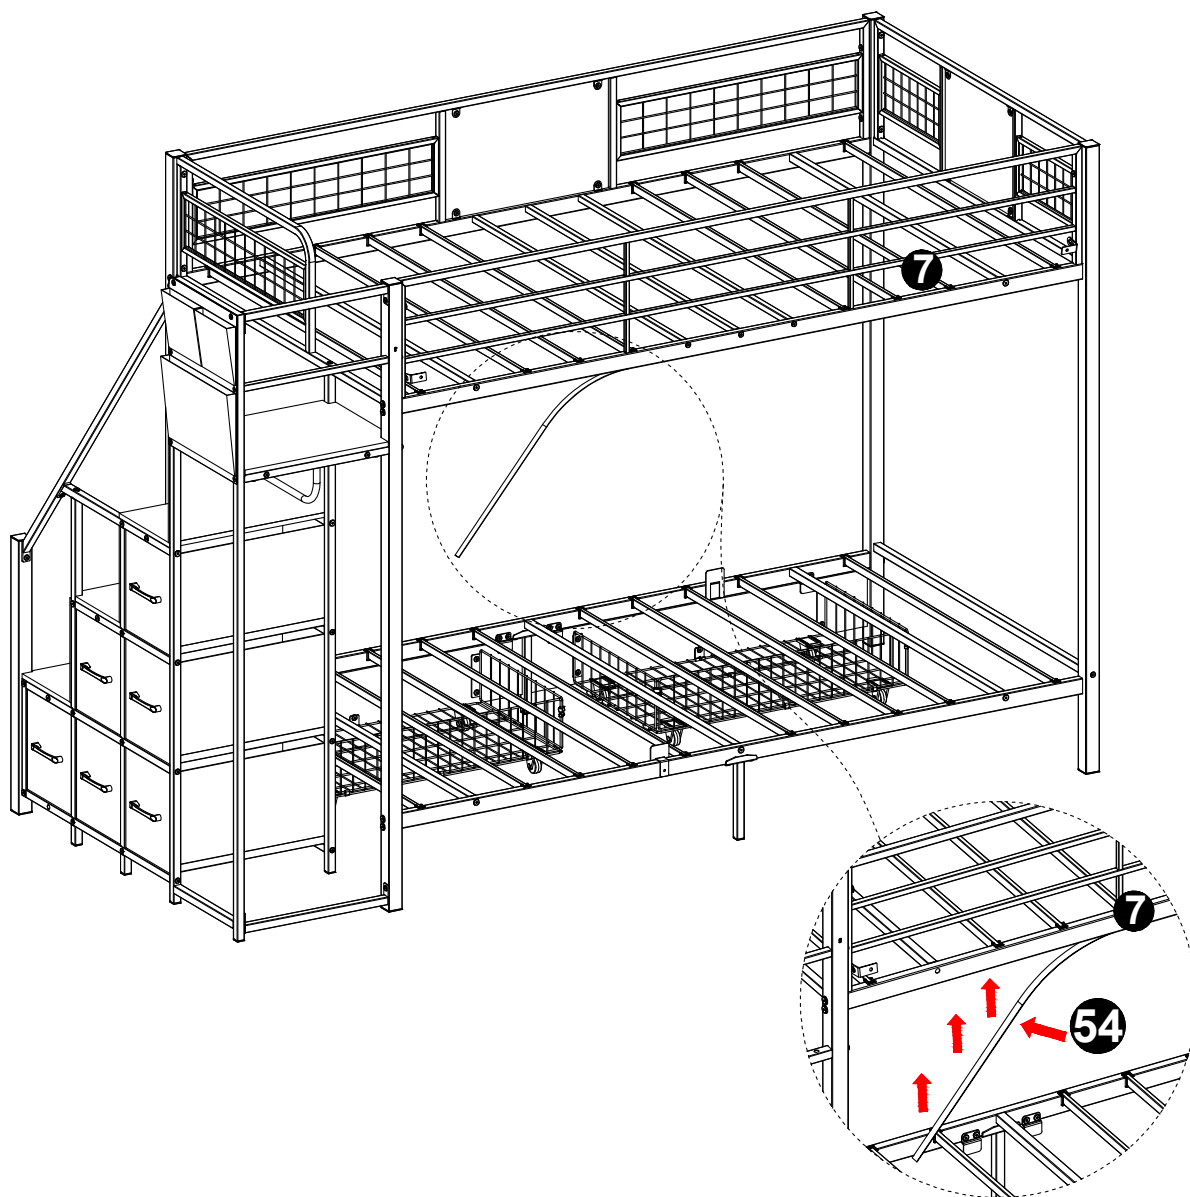


# PRODUCT ASSEMBLY


## Step 29

|   |                                                                                     |  |      |
|---|-------------------------------------------------------------------------------------|--|------|
| W |  |  | 4pcs |
| X |  |  | 1pc  |

Stick the light strip with Velcro attached underneath part 7 and secure it with Cable ties W.


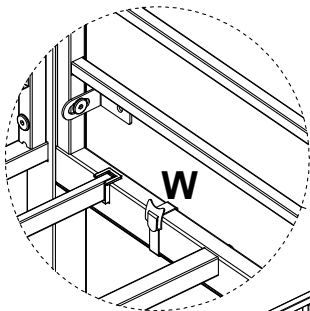


Insert the LED strip USB port into the adapter charging port

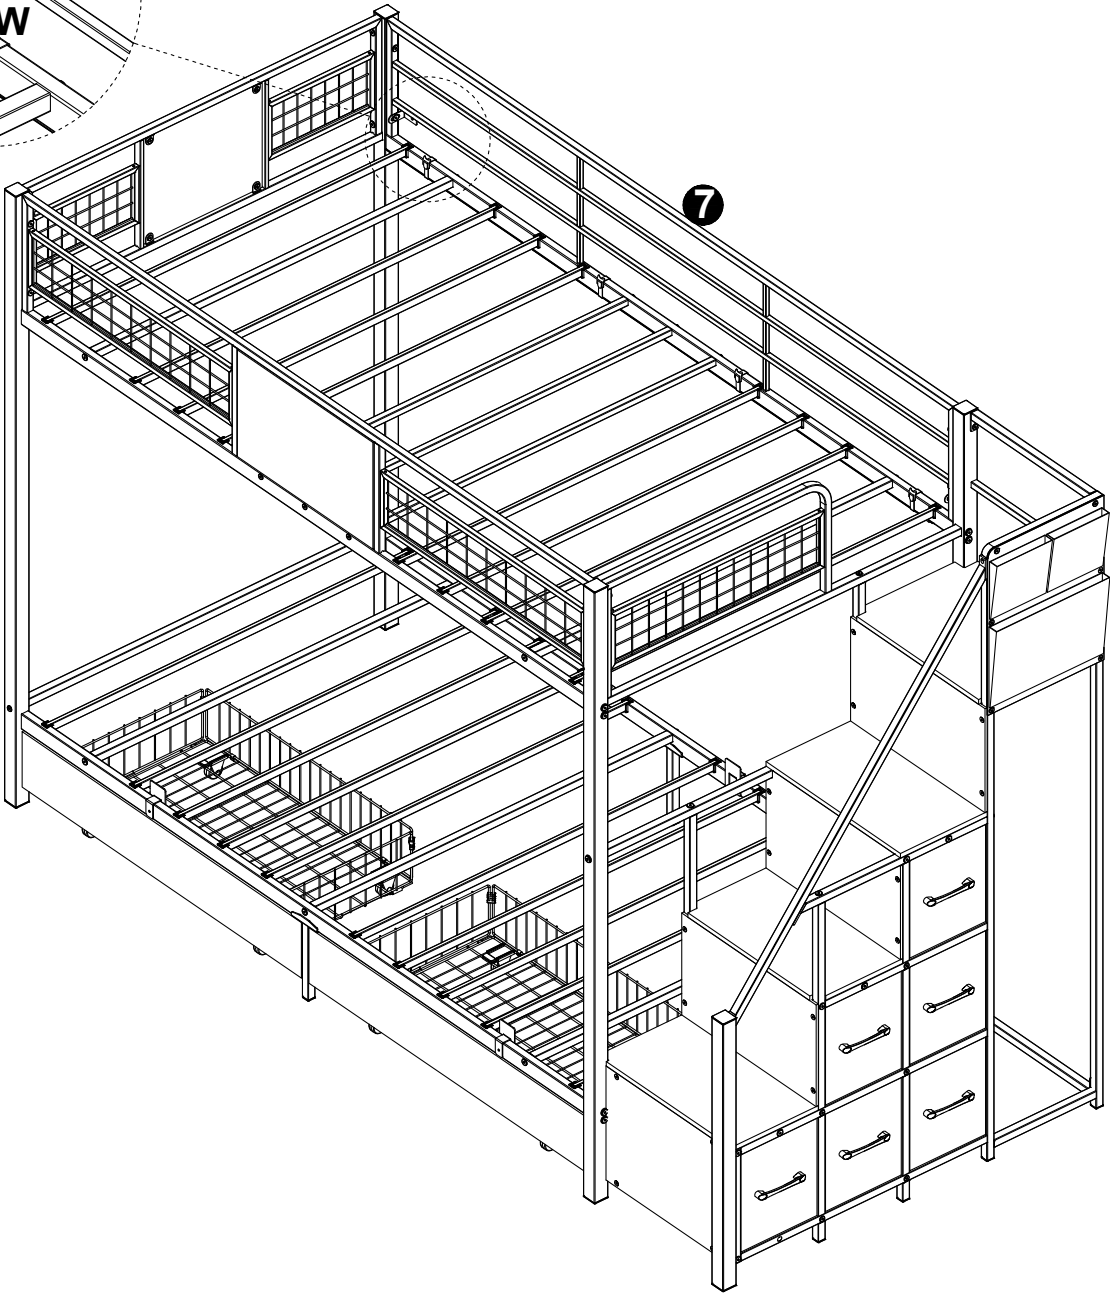

PRODUCT ASSEMBLY

Step 30

|    |                                                                                     |       |      |
|----|-------------------------------------------------------------------------------------|-------|------|
| Z  |  | M6*60 | 2pcs |
| L1 |  | M6    | 1pc  |

