


Assembly Instructions

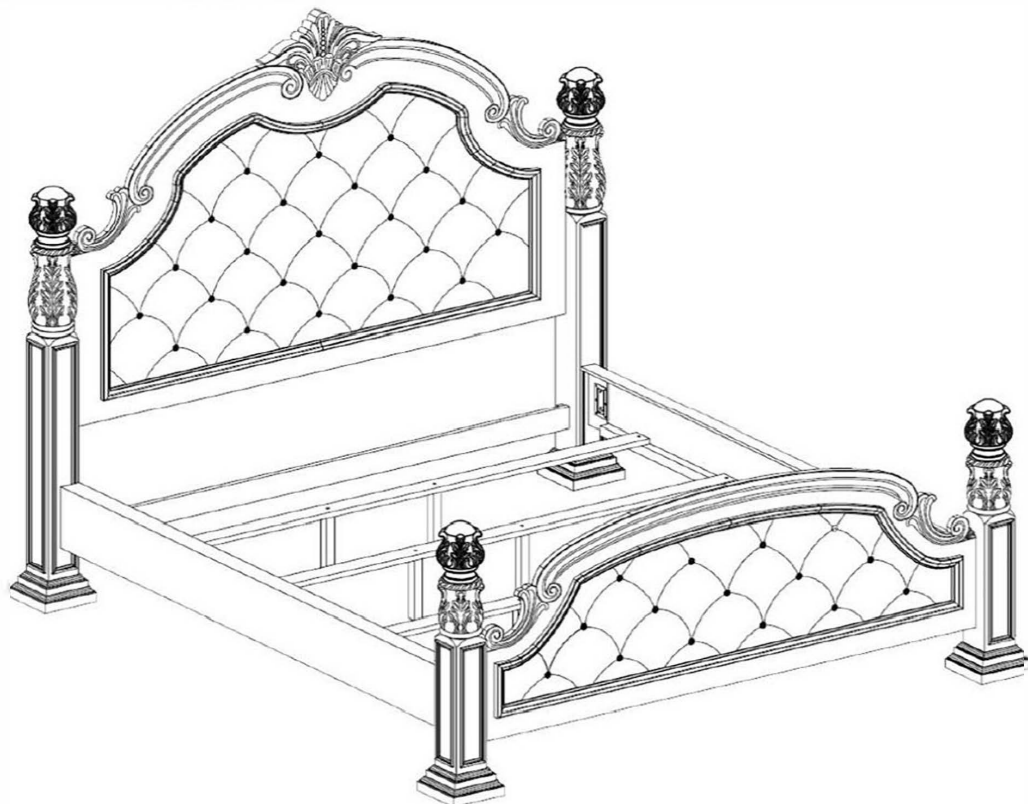

Instructions Include Scrollwork Canopy (Sold and Packed Separately)

ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

EASY



DIFFICULT

Tools Required for Assembly:

Allen Wrench



(Included)

Wrench



(Included)

Phillips Screwdriver



(Not Included)




2 PERSONS RECOMMENDED


ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


BASIC ASSEMBLY TECHNIQUES

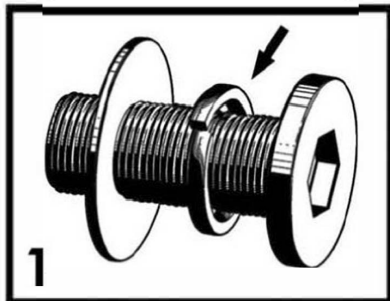


1
When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

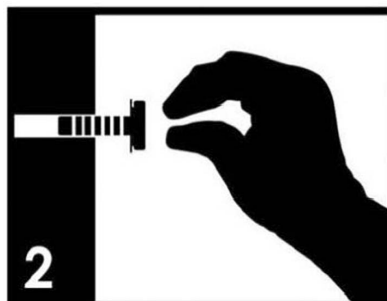


2
Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

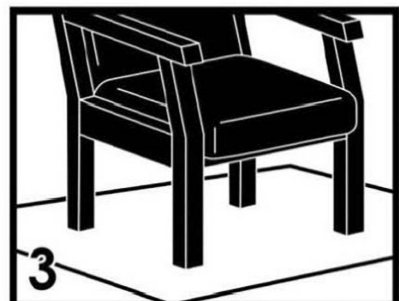


3
Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

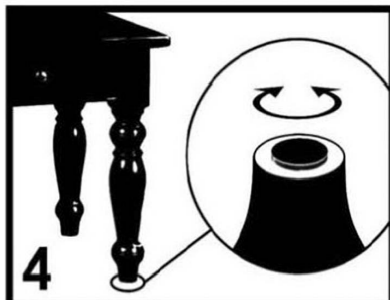

4
Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

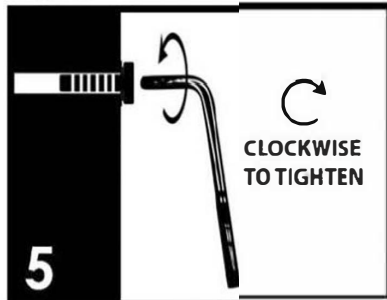

5
Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

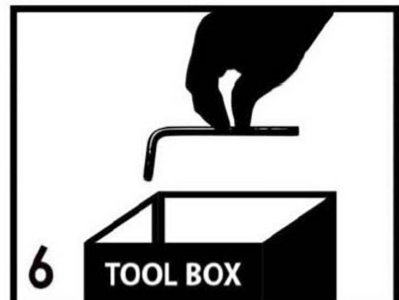

6
Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Before you begin, please read Page 2 of "Assembly and Care Advice".


And remember, do not tighten until each step is completed or instructed.

MD

Parts List

	#1 x 1 pc Headboard
	#2 x 1 pc Footboard
	#3 x 4 pcs Finial
	#4 x 2 pcs Side Rail
	#5 x 4 pcs Slat
	#6 x 8 pcs Slat Support Leg
	#7 x 1 pc H/Board leg rail

Hardware List

	#A x 8 pcs Threaded Stud
	#B x 8 pcs Hex Nut
	#C x 1 pc Wrench
	#D x 8 pcs Screw
	#E x 4 pcs Bolt 5/16"x1-3/4"
	#F x 12 pcs Lock washer
	#G x 12 pcs Flat washer
	#H x 1 pc Allen wrench




Due to the size and/or weight of this product, it is highly recommended that the assembly should be done near the area of its intended location. Make sure you have enough space to move around during the assembly. ALWAYS have at least two people to help with transporting and assembling of the product to avoid any potential injury and/or damage.




1. Prepare 4 bolt assemblies by first inserting a lock washer (#F) onto the bolt (#E) then a flat washer (#G) onto that same bolt (#E).

2. Align each end of the h/board leg rail (#7) to the holes along the legs of the headboard (#1). Insert 2 bolt assemblies into each end and secure using the Allen wrench (#H).

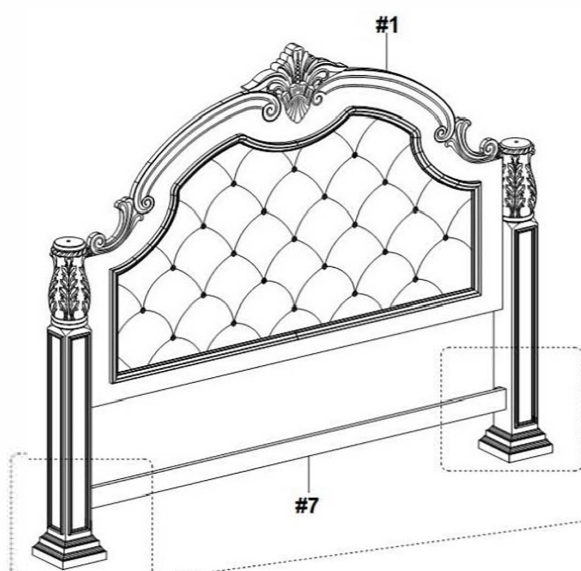

#E x 4 pcs
#F x 4 pcs
#G x 4 pcs

Turn right (clockwise) to tighten

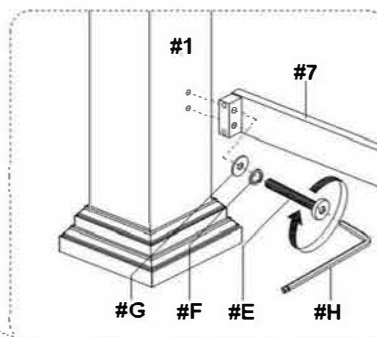


Note: Right and left are determined by facing the front of the bed in upright position.




1. Insert the threaded studs (#A) into the holes along the headboard (#1) and footboard (#2), turn right to tighten.

2. Apply the side rails (#4) onto those threaded studs (#A).

3. Apply a hex nut (#B) onto each threaded stud (#A) from within the side rails (#4). Secure using the wrench (#B).

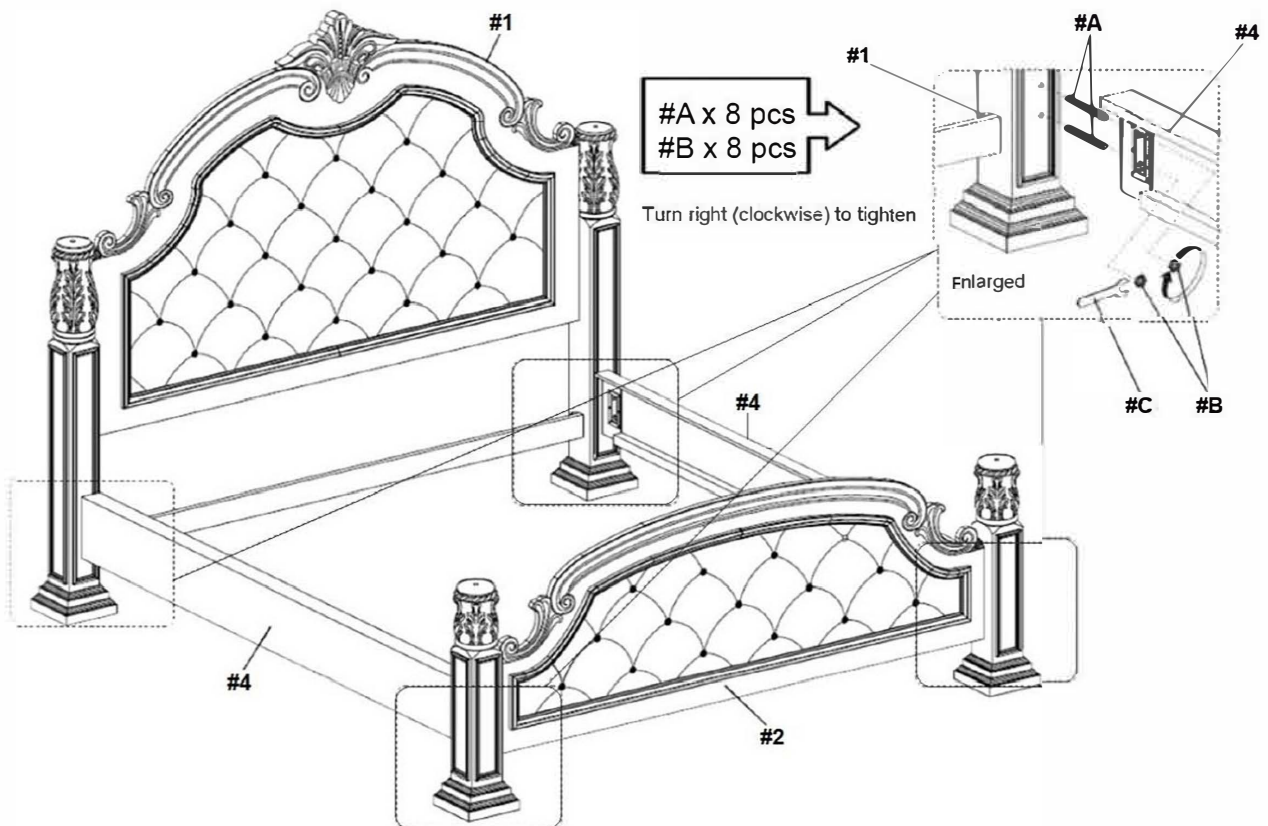


Insert the threaded end of the slat support legs (#6) into the holes along the slat (#5). Turn right to tighten.

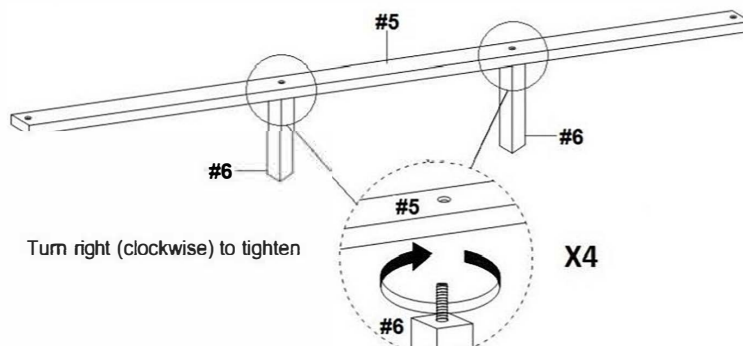




Place the slats (#5) onto the side rails (#4) and align the holes. Insert a screw (#D) into each slat end, then secure using a screwdriver.

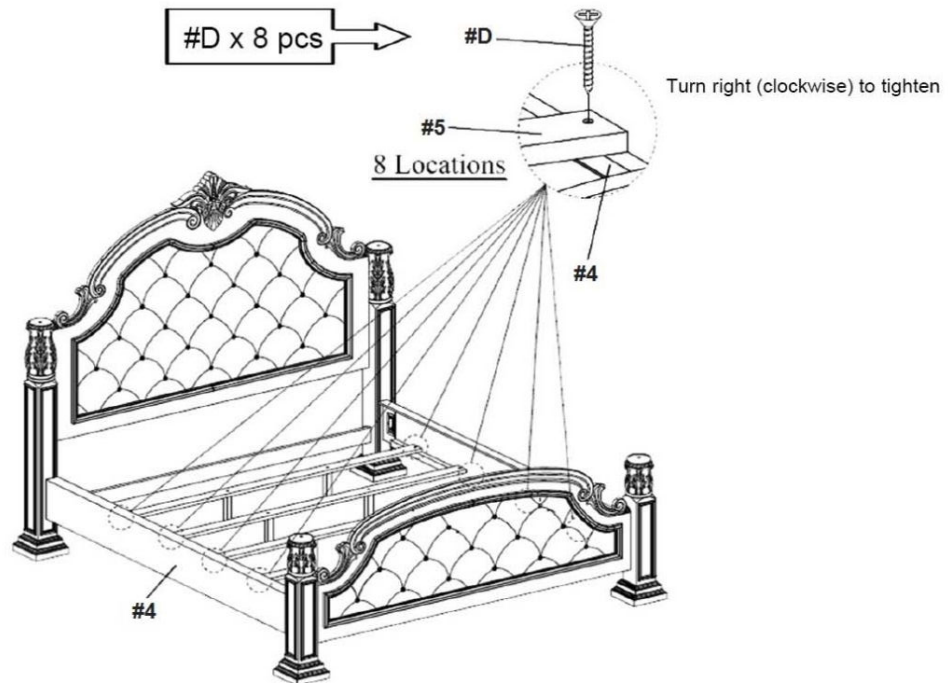

Insert the finial (#3) onto the threaded ends along the top of the headboard (#1) and footboard (#2). Turn right to tighten.

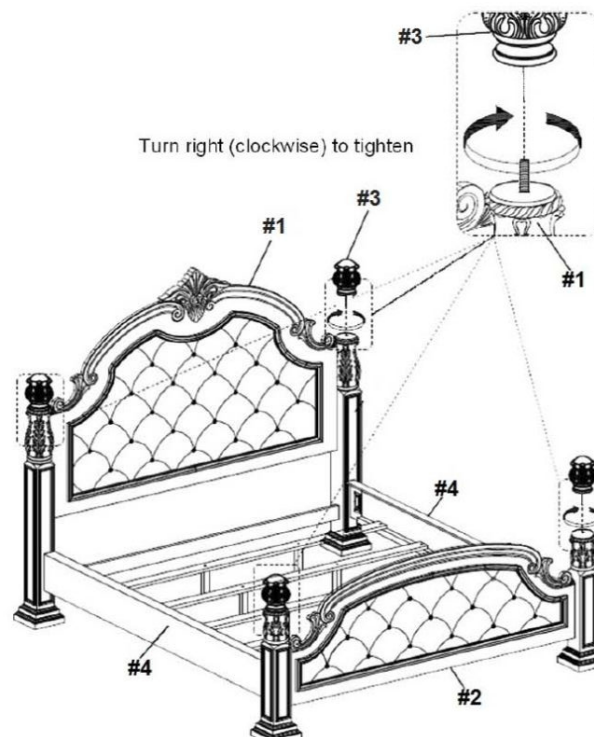



These instructions are for the assembly of scrollwork canopy (sold and packed separately) onto the fully assembled CM7296 bed.


MD

Parts List

	#8 x 2 pcs Headboard Post
	#9 x 2 pcs Footboard Post
	#10 x 4 pcs Scrollwork Frame
	#11 x 1 pc Mounting Plate
	#12 x 1 pc Top Center Finial
	#13 x 1 pc Bottom Center Finial


Hardware List

	#J x 4 pcs Bolt 1/4"x1/2"
	#K x 1 pc Allen Wrench

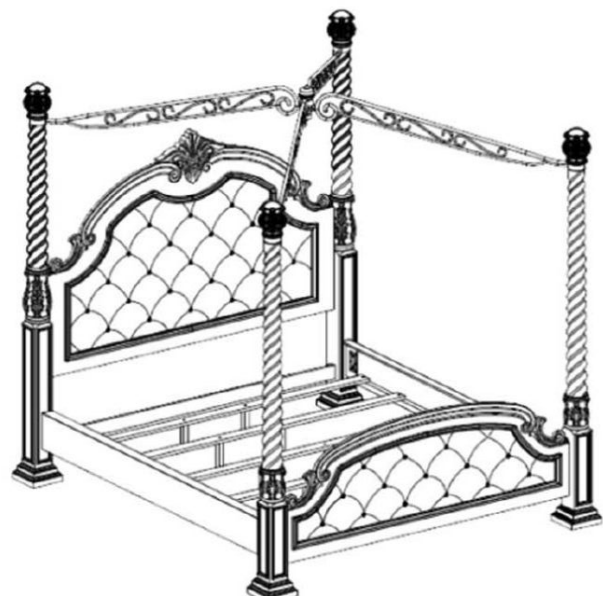



Place the headboard posts (#8) onto the threaded ends along the top of the headboard (#1).

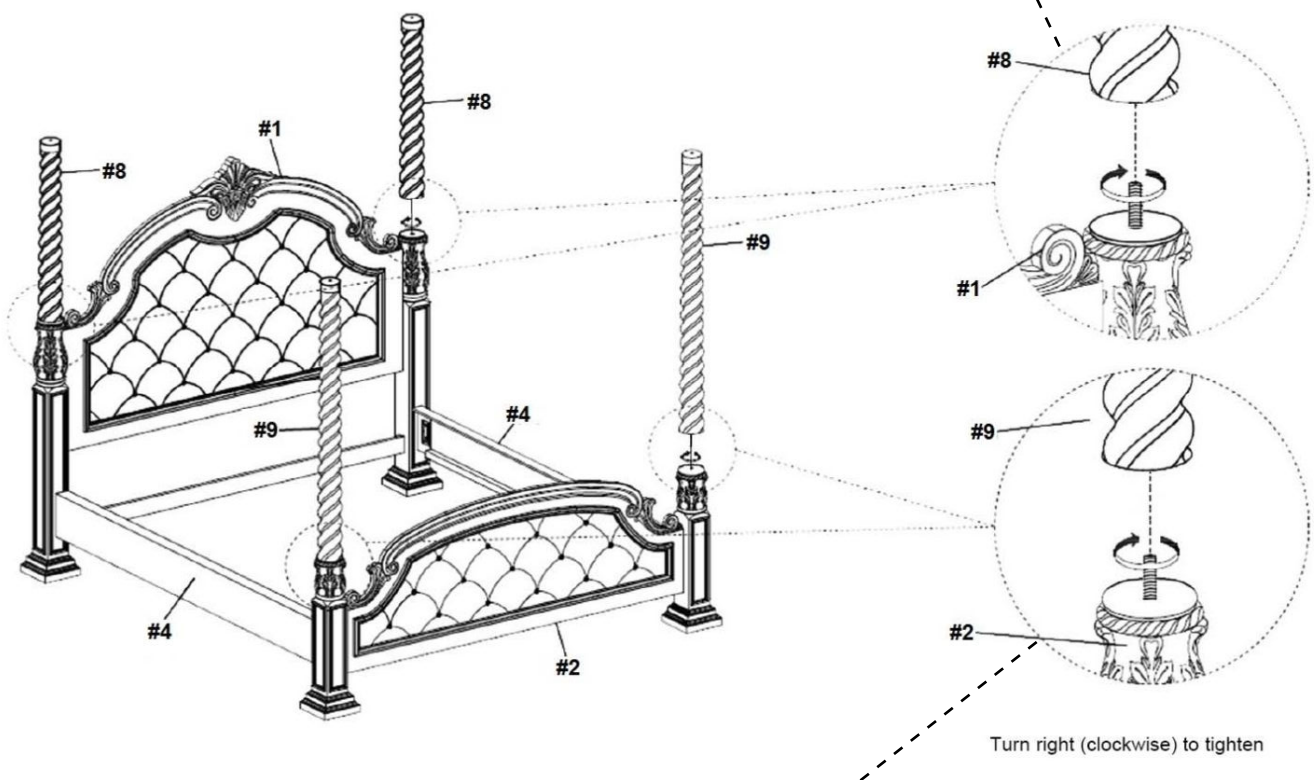



Place the headboard posts (#9) onto the threaded ends along the top of the footboard (#2).




2. Align the mounting plate (#11) to the bottom center finial (#13), then align them to the holes along the ends of the scrollwork frames (#10). Insert a bolt (#J) into each hole and secure using the Allen wrench (#K). After that insert the threaded end of the top center finial (#12) into the center hole. Turn right to tighten.

#J x 4 pcs →


1. Apply a scrollwork frame (#10) onto the threaded end of each post (#8,9).

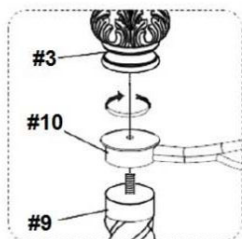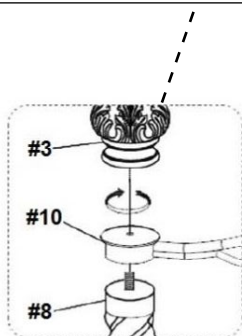

Turn right (clockwise) to tighten

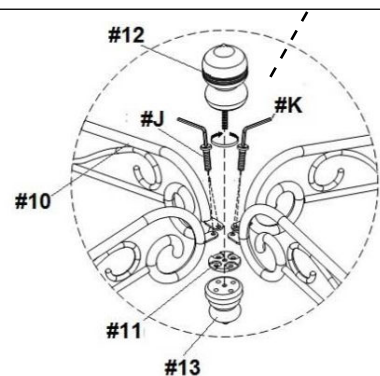

Turn right (clockwise) to tighten

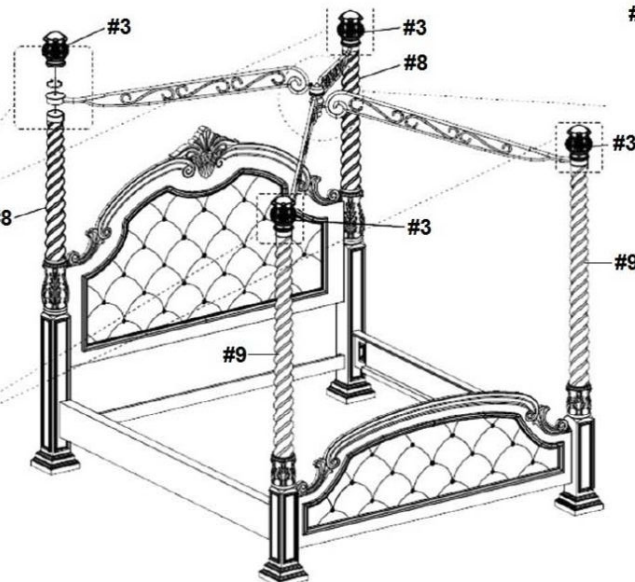

ASSEMBLY IS COMPLETED