



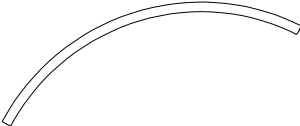





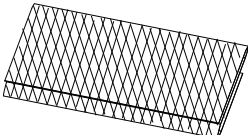


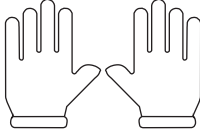
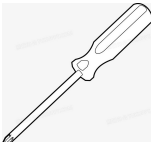


Galvanized Raised Garden Beds

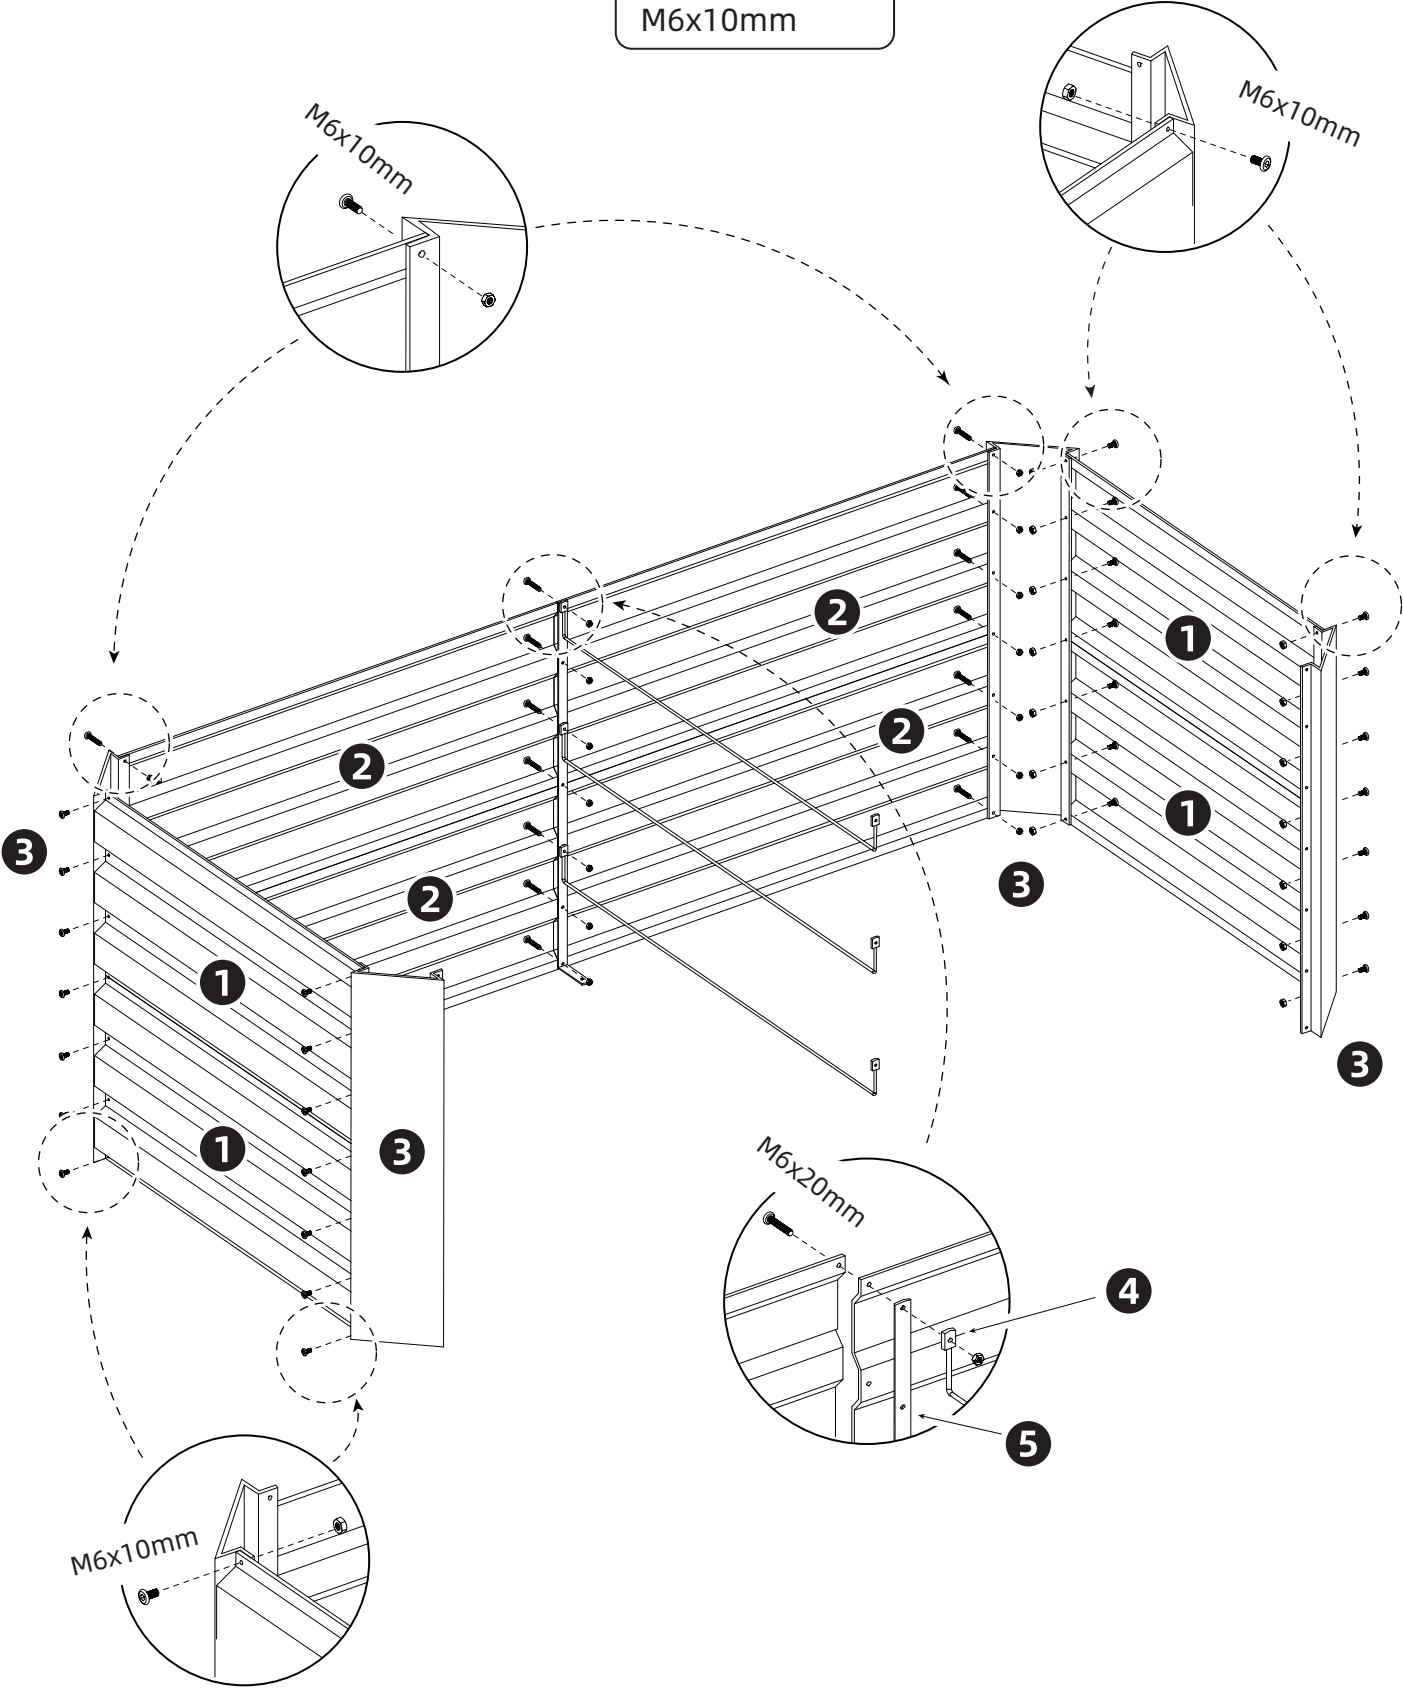


A		10pcs	C		5pcs
1		8pcs	2		16pcs
3		8pcs	4		6pcs
5		4pcs	6		6pcs
7		10pcs	8		6pcs
9		6pcs	10	 M6x10mm	100pcs
11	 M6x16mm	25pcs	12	 M6x45mm	20pcs
13		145pcs	14		20pcs
15		1pc	16		4pcs
17		8pc	18		2pc
19		1pcs			


STEP 1

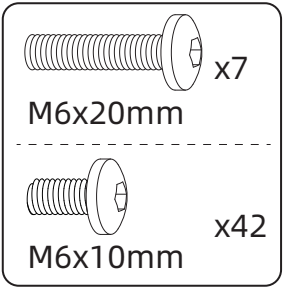


STEP 2

x4



M6x20mm

x8

M6x10mm



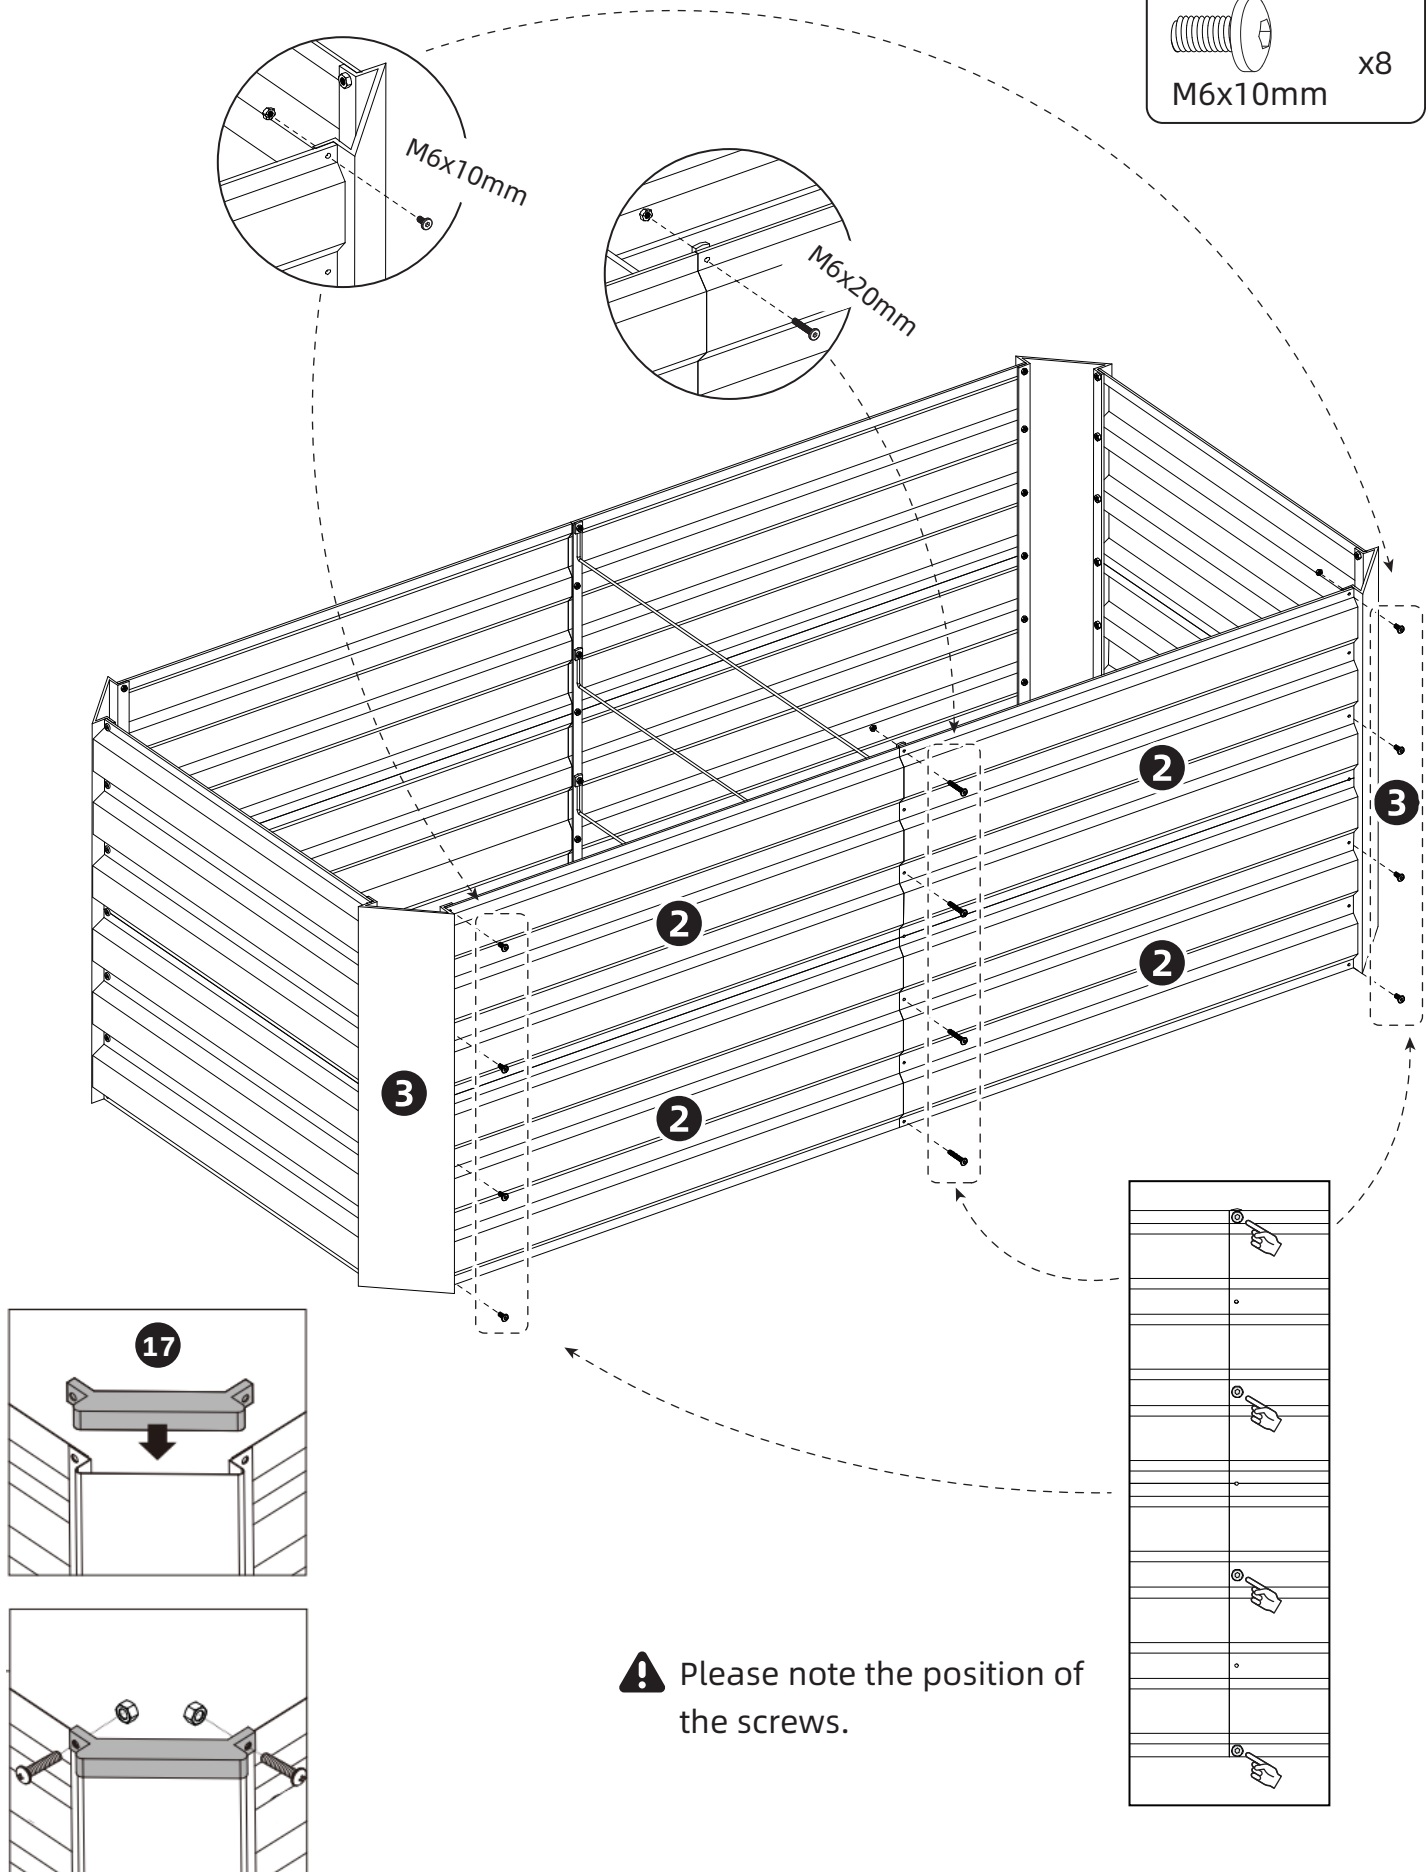


STEP 3


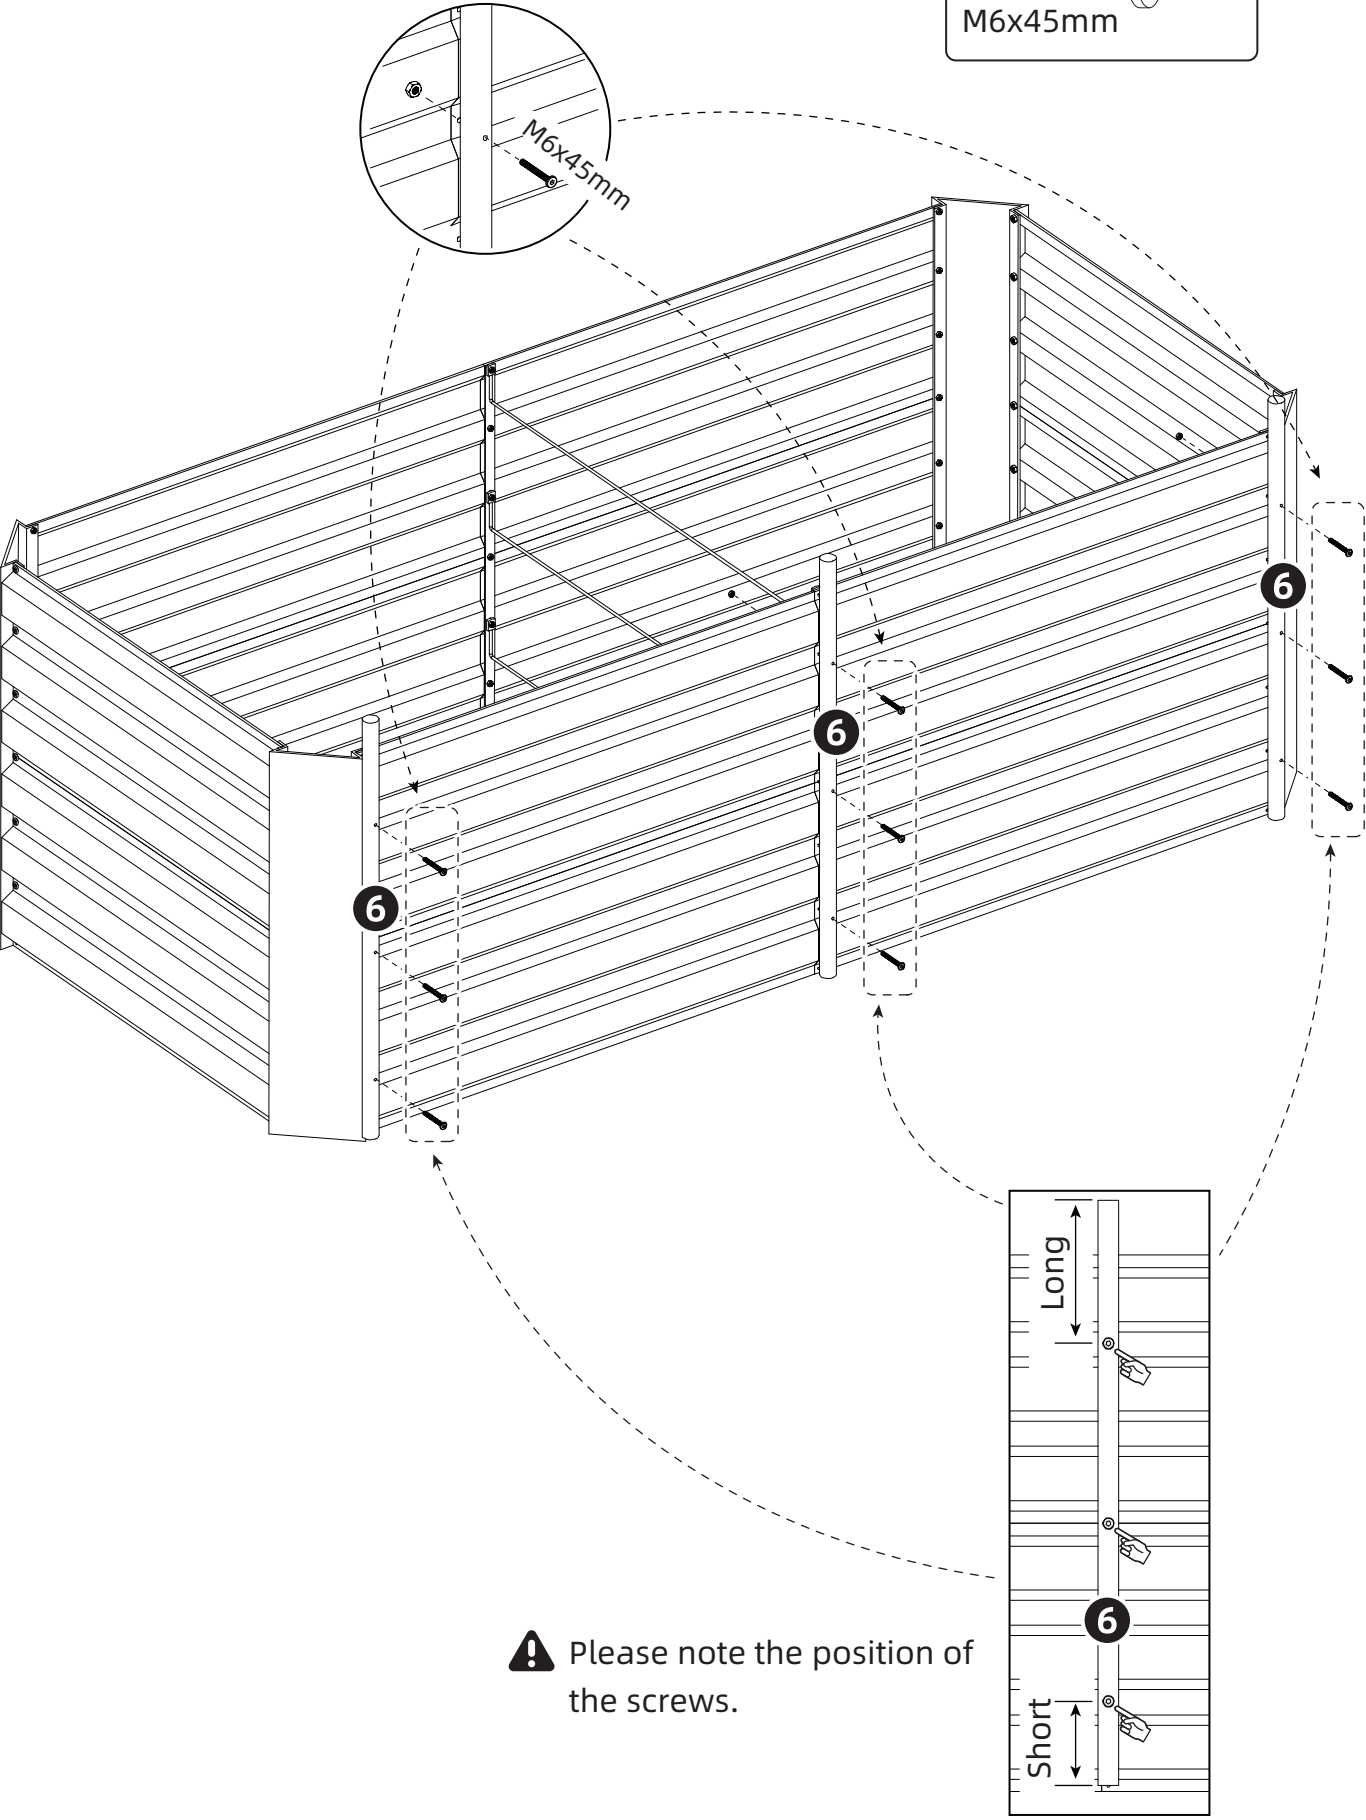
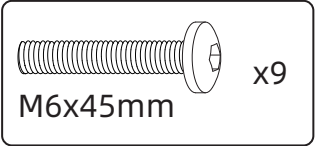


⚠ Please note the position of the screws.

STEP 4

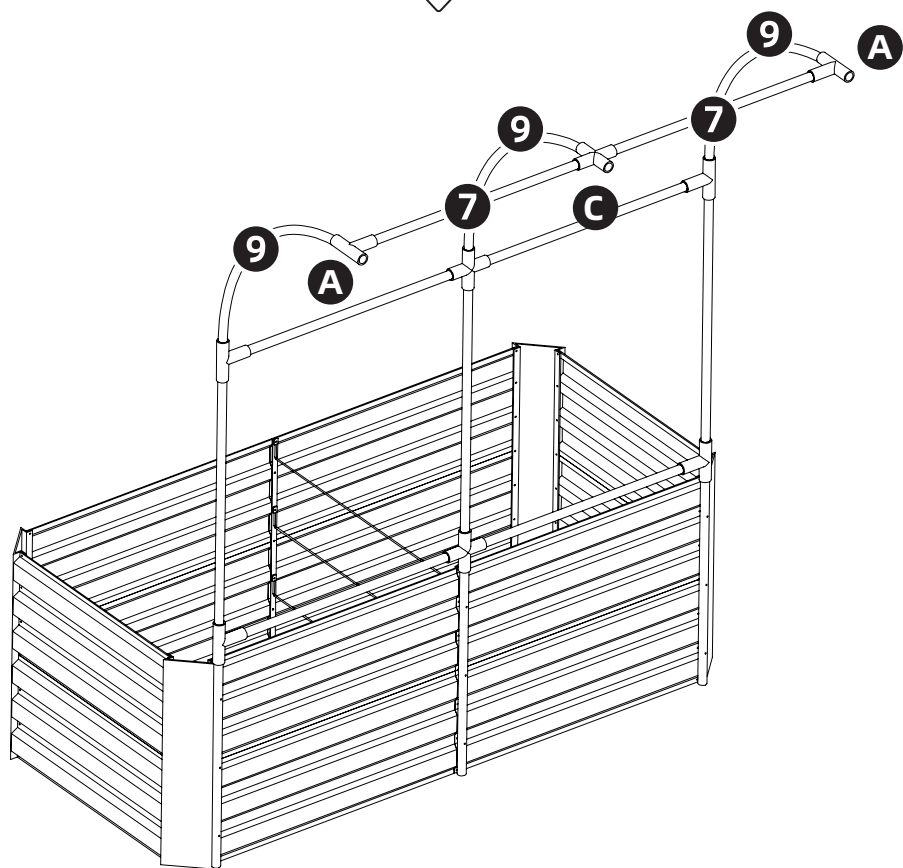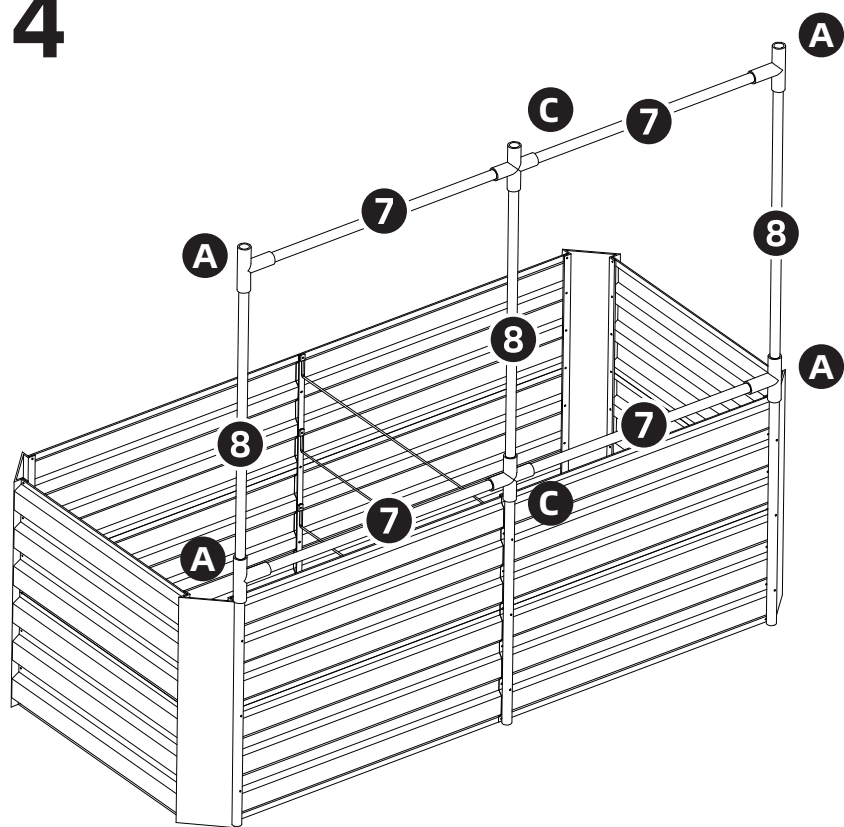

STEP 5

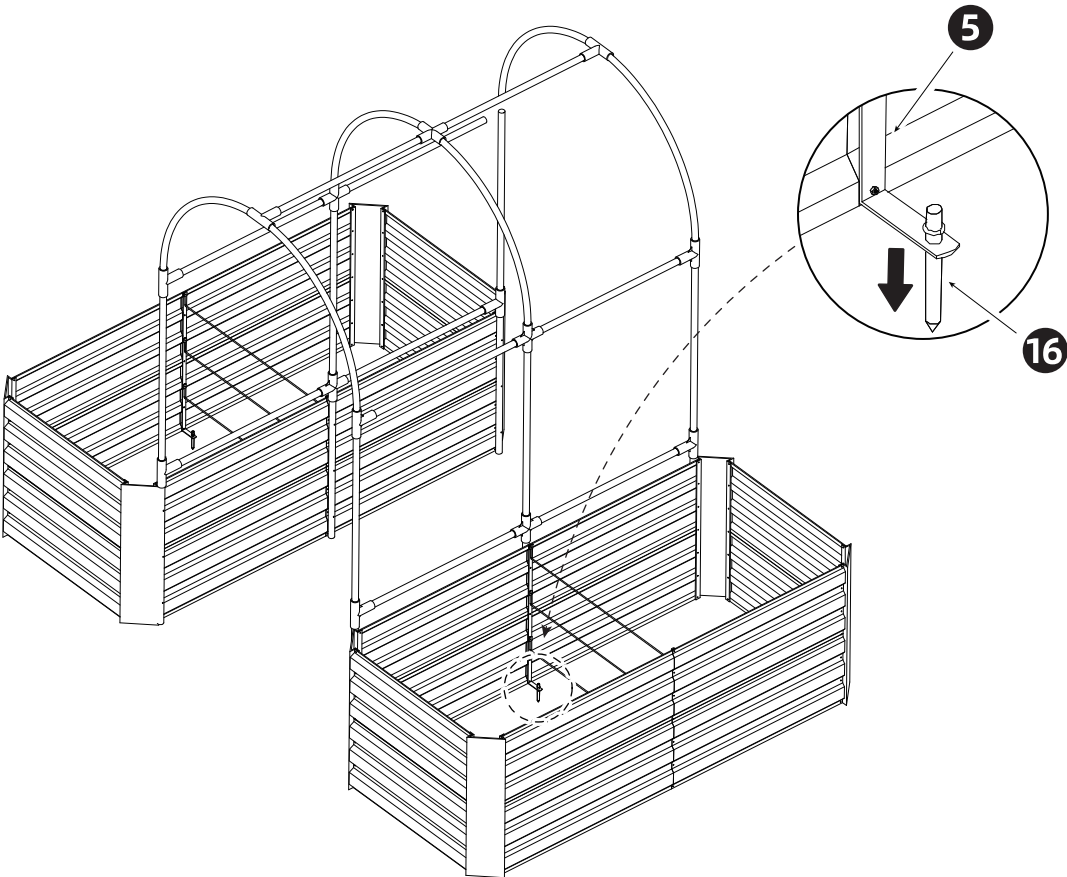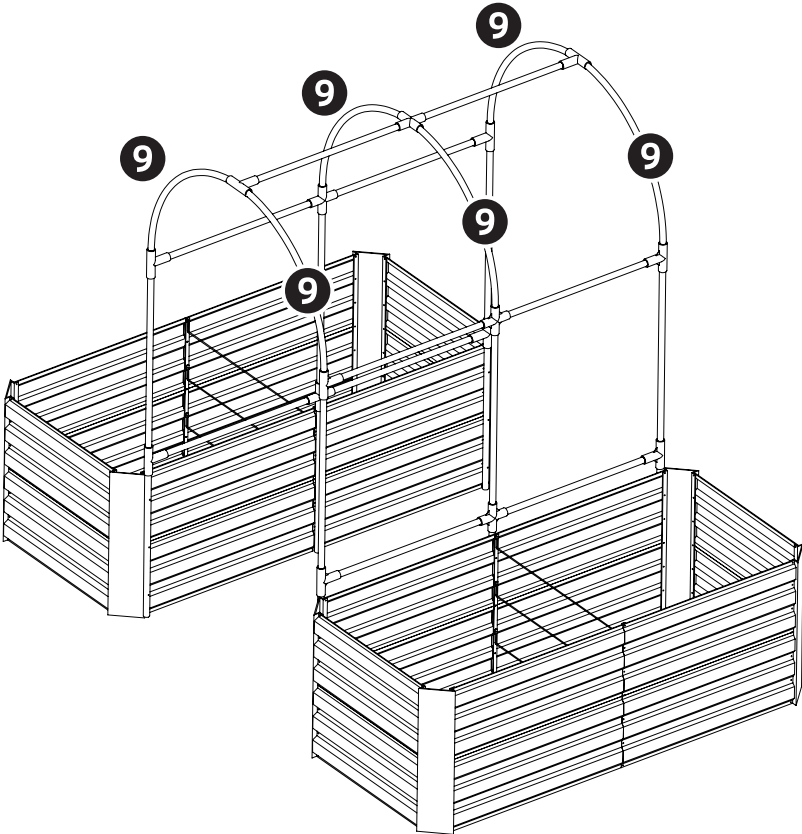

STEP 6

