

# Assembly Instructions

## Patio Outdoor Recliner




### Note

1. Please check the packing list before assembly and read the instructions step by step carefully. Incorrect steps might result in incomplete assembly. What's more, it may cause personal injury and property damage in the future.
2. Because of the weight of the base and armrests, sometimes it might be easier to assemble when putting one side of the chair on the ground.
3. If it's possible, please find someone to help you. Using an electric screwdriver would make the assembly much easier.
4. If you have any problems during the assembly that you can't solve by yourself, please email us immediately through platform, we'll reply to you as soon as possible.
5. Please do not tighten all the screws until all the parts were assembled.




Parts List

A

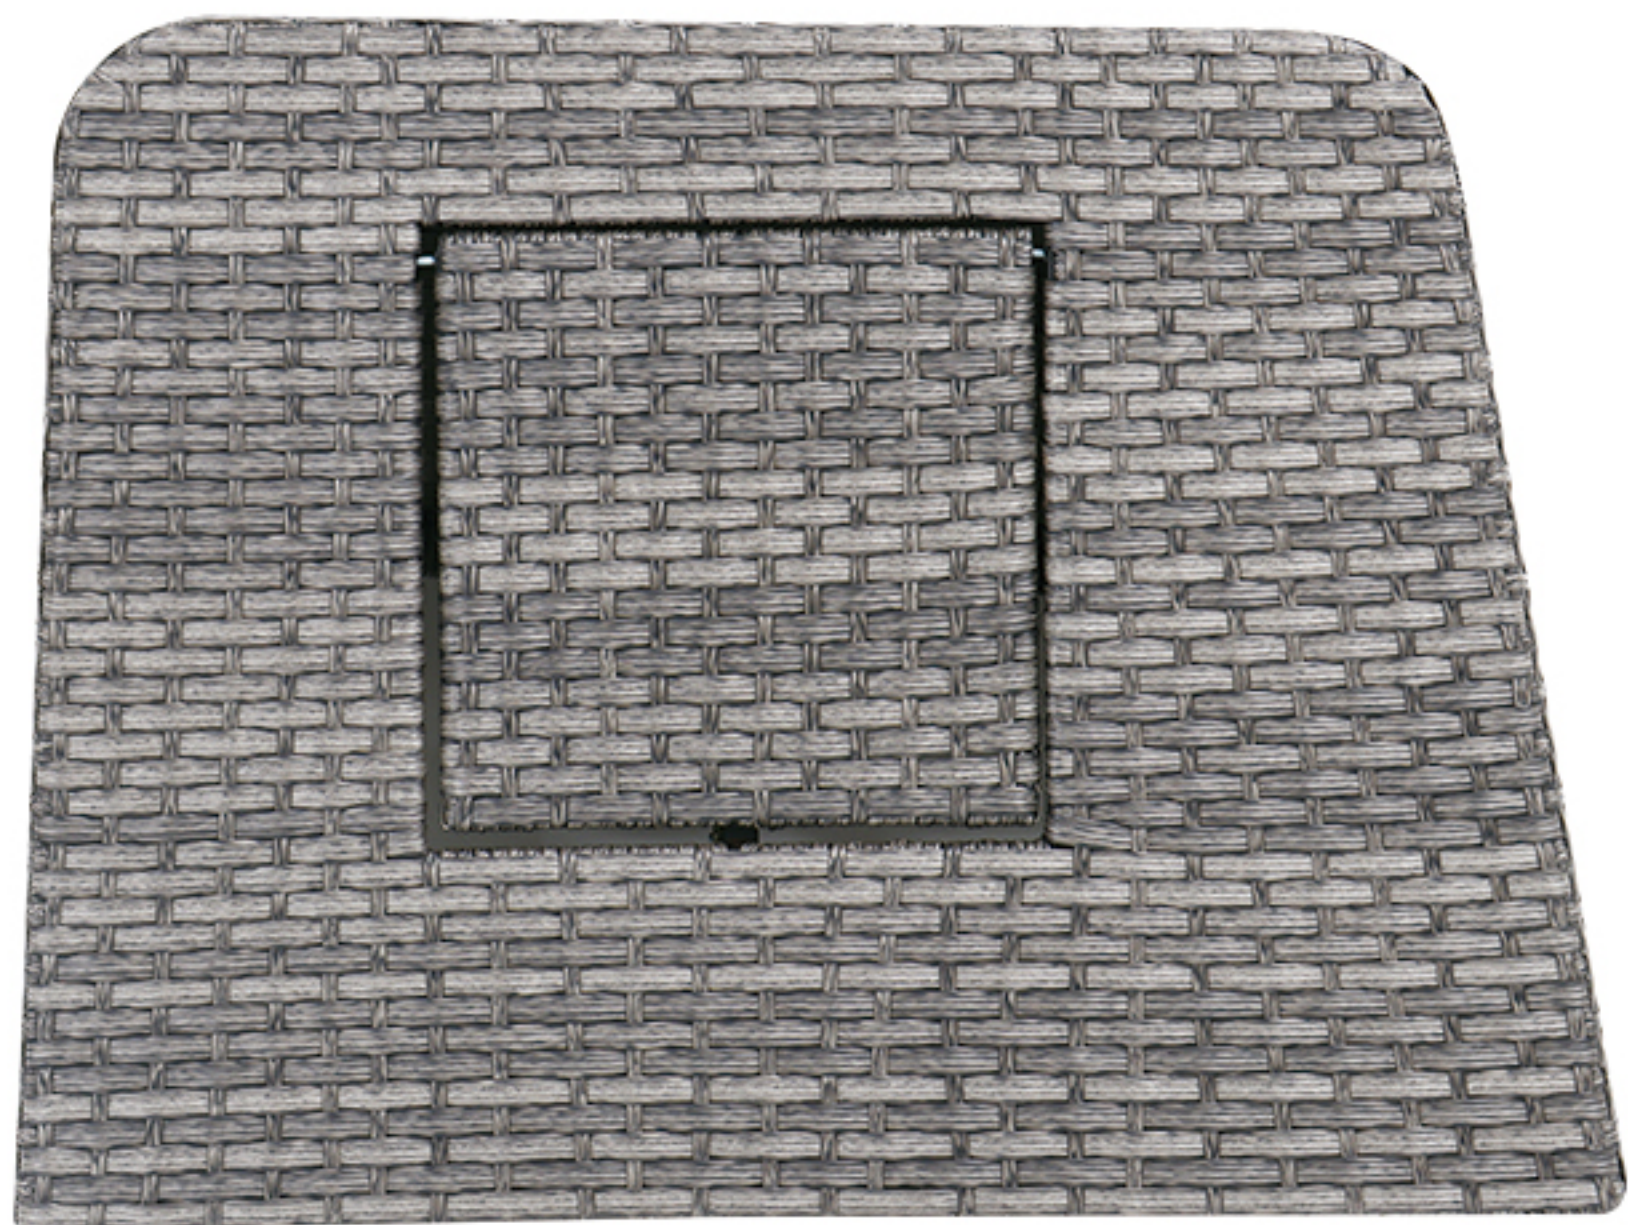


1 PC Left Armrest

B

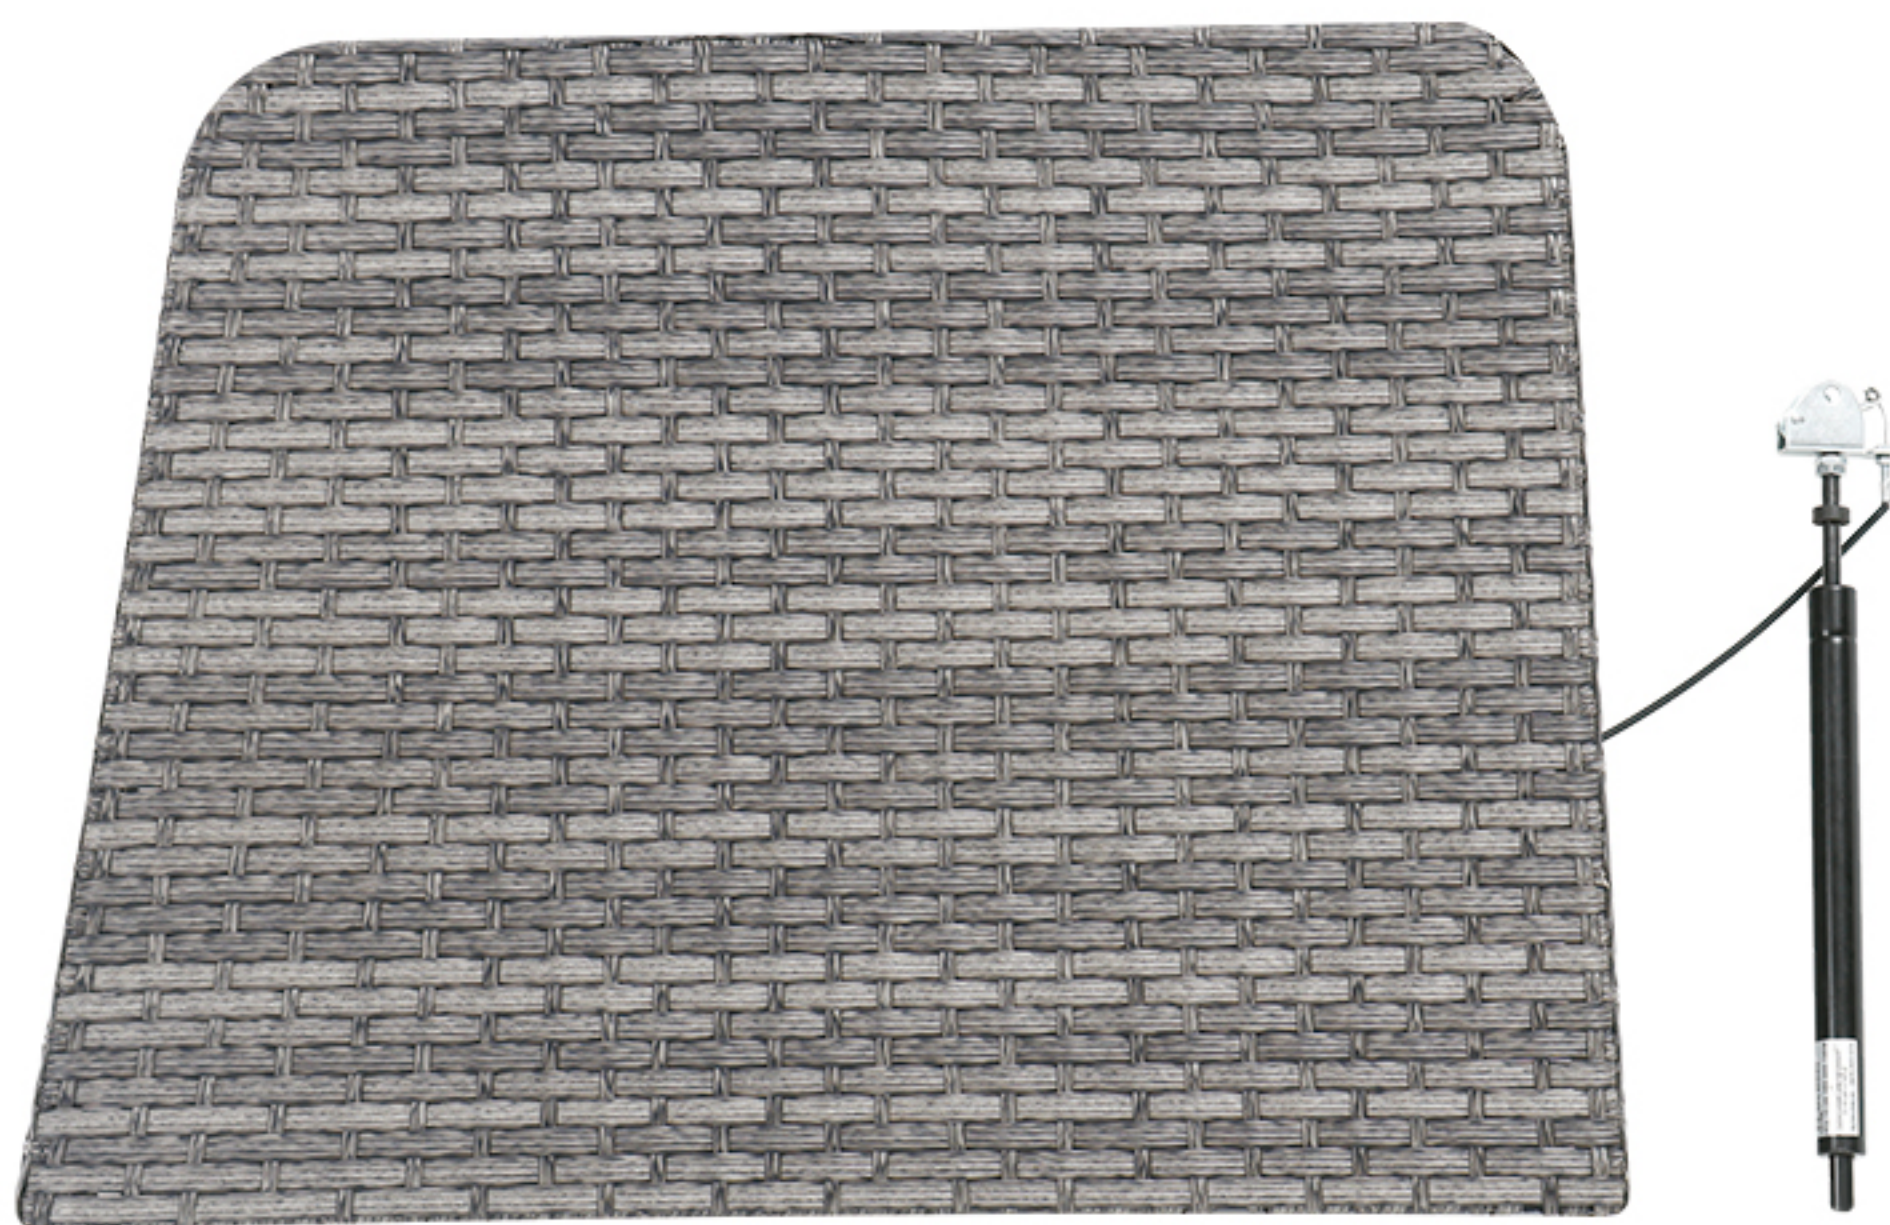


1 PC Right Armrest  
( Pneumatic Rod inside)

C

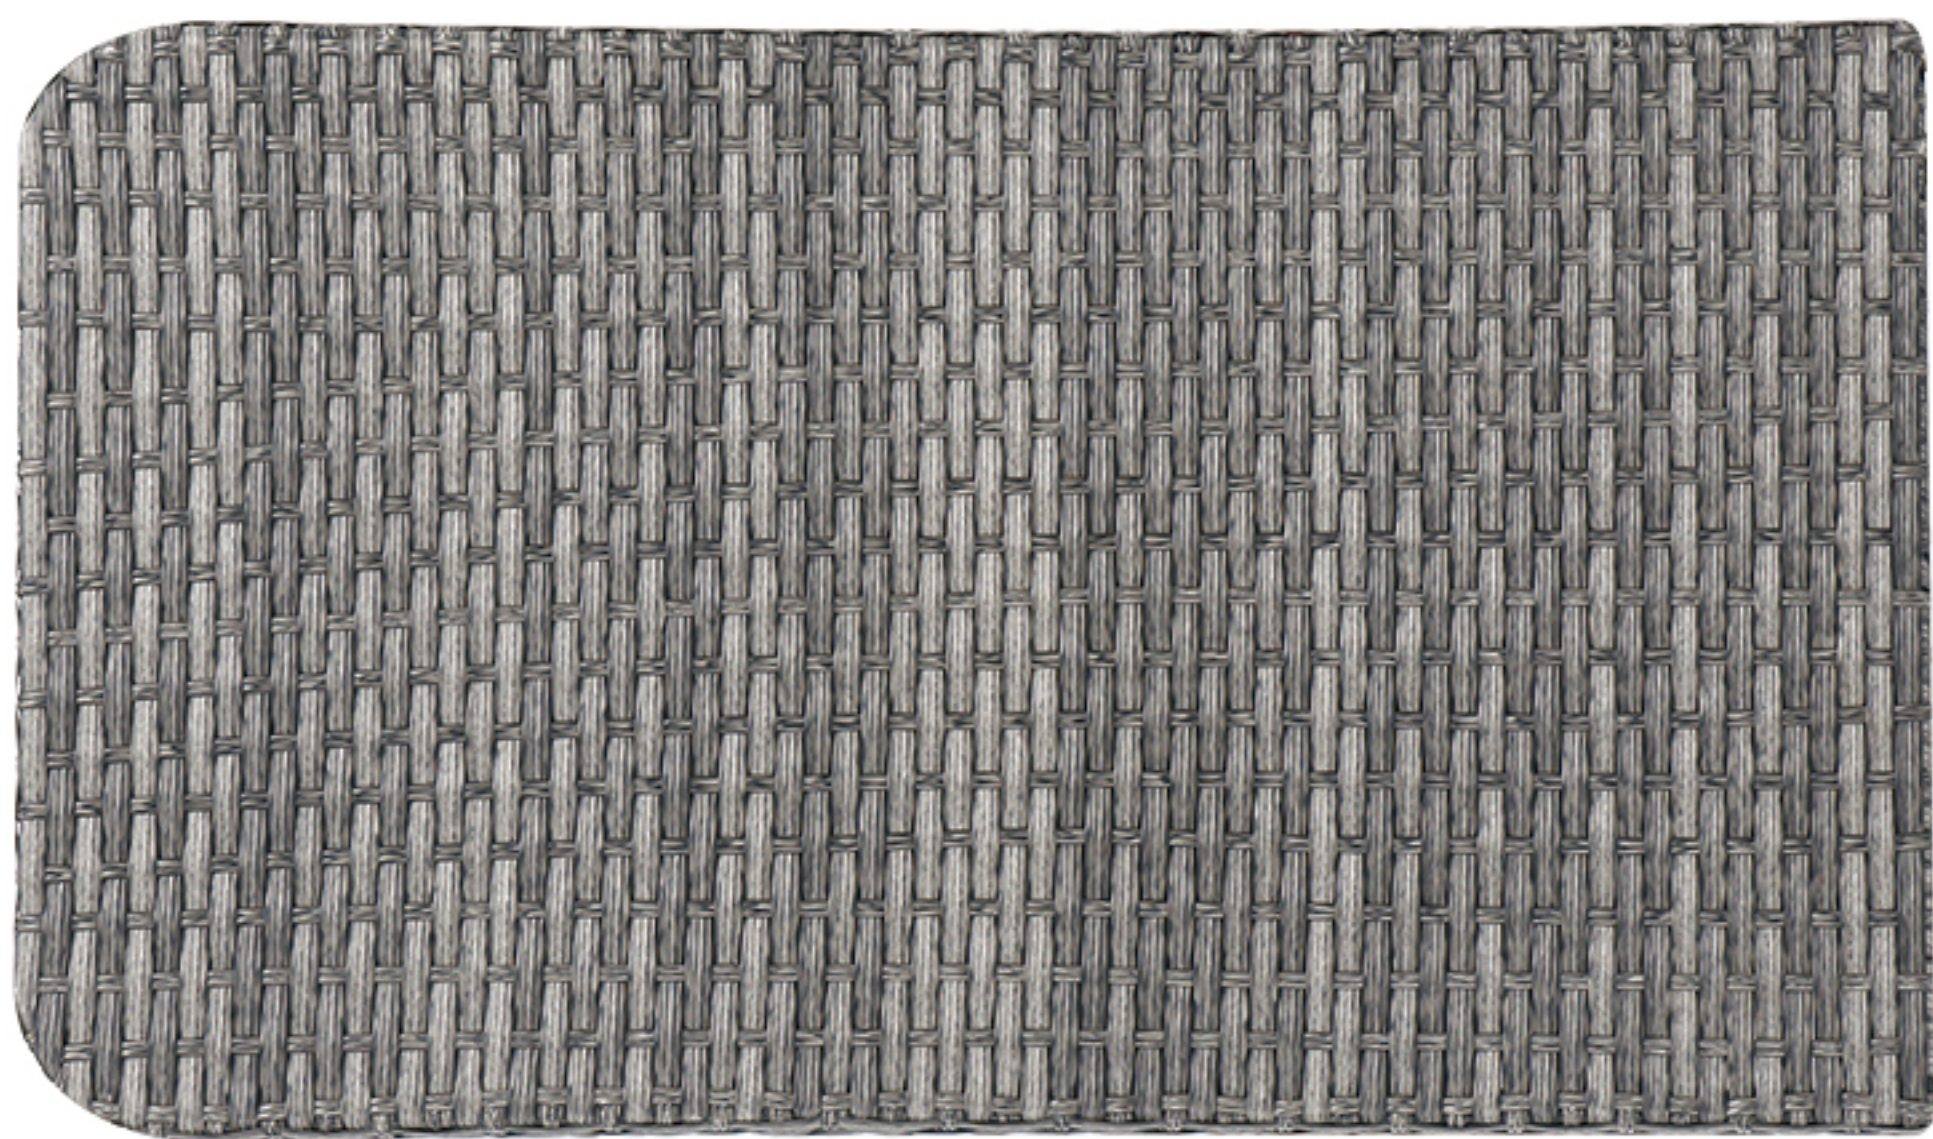


1 PC Backrest

D

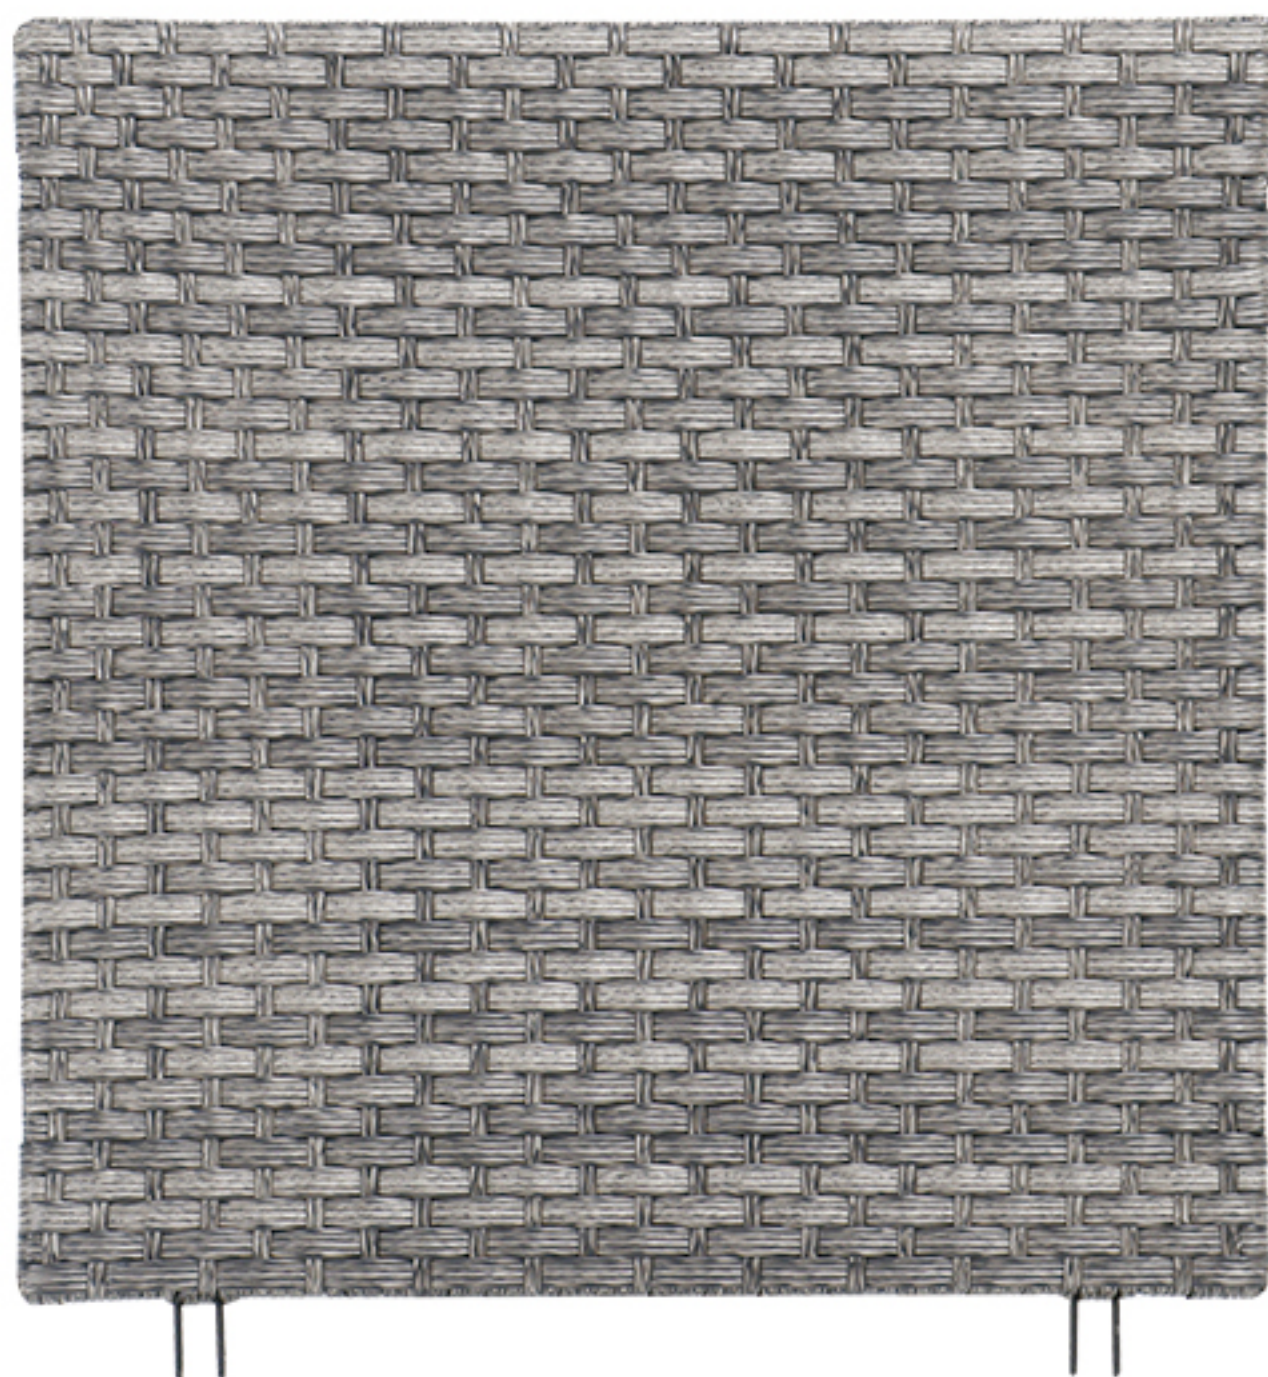


1 PC Seat Base

E

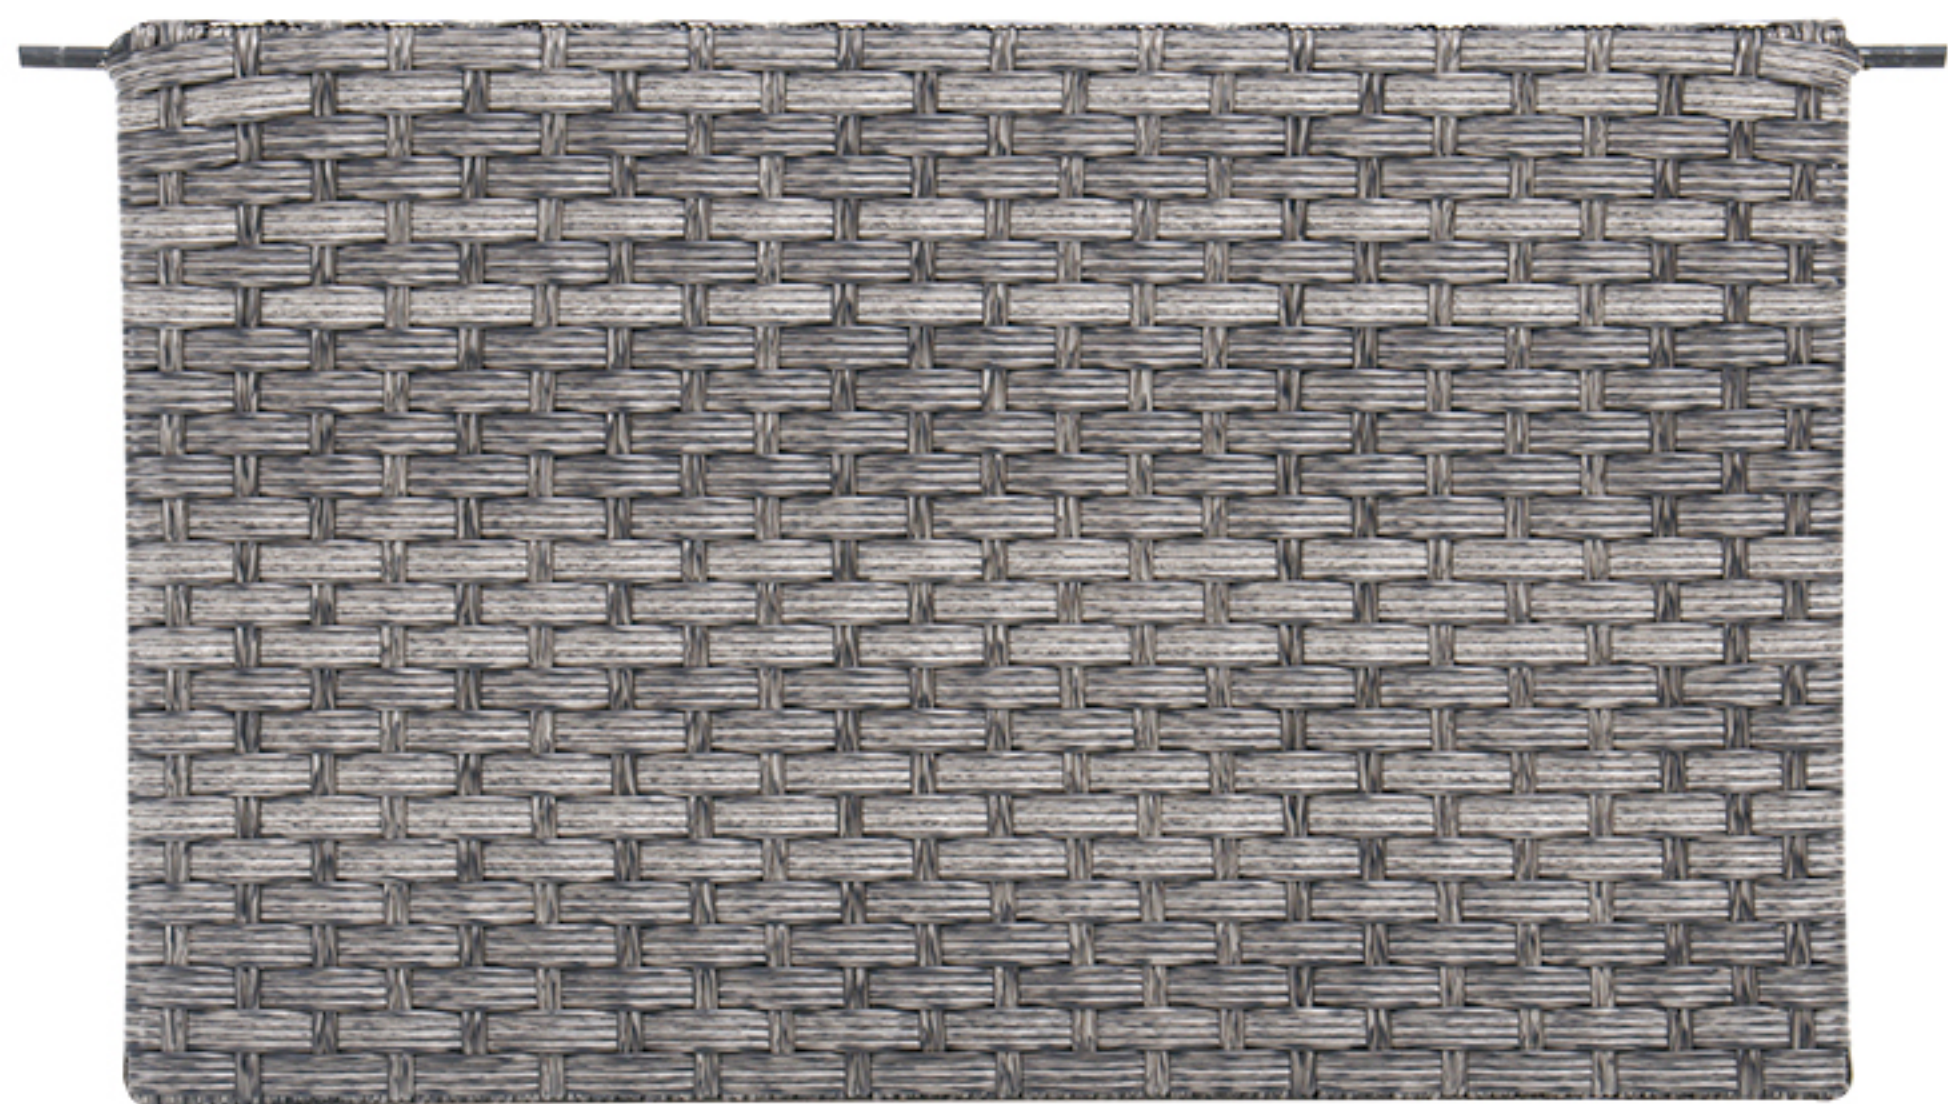

1 PC Footrest Panel

F

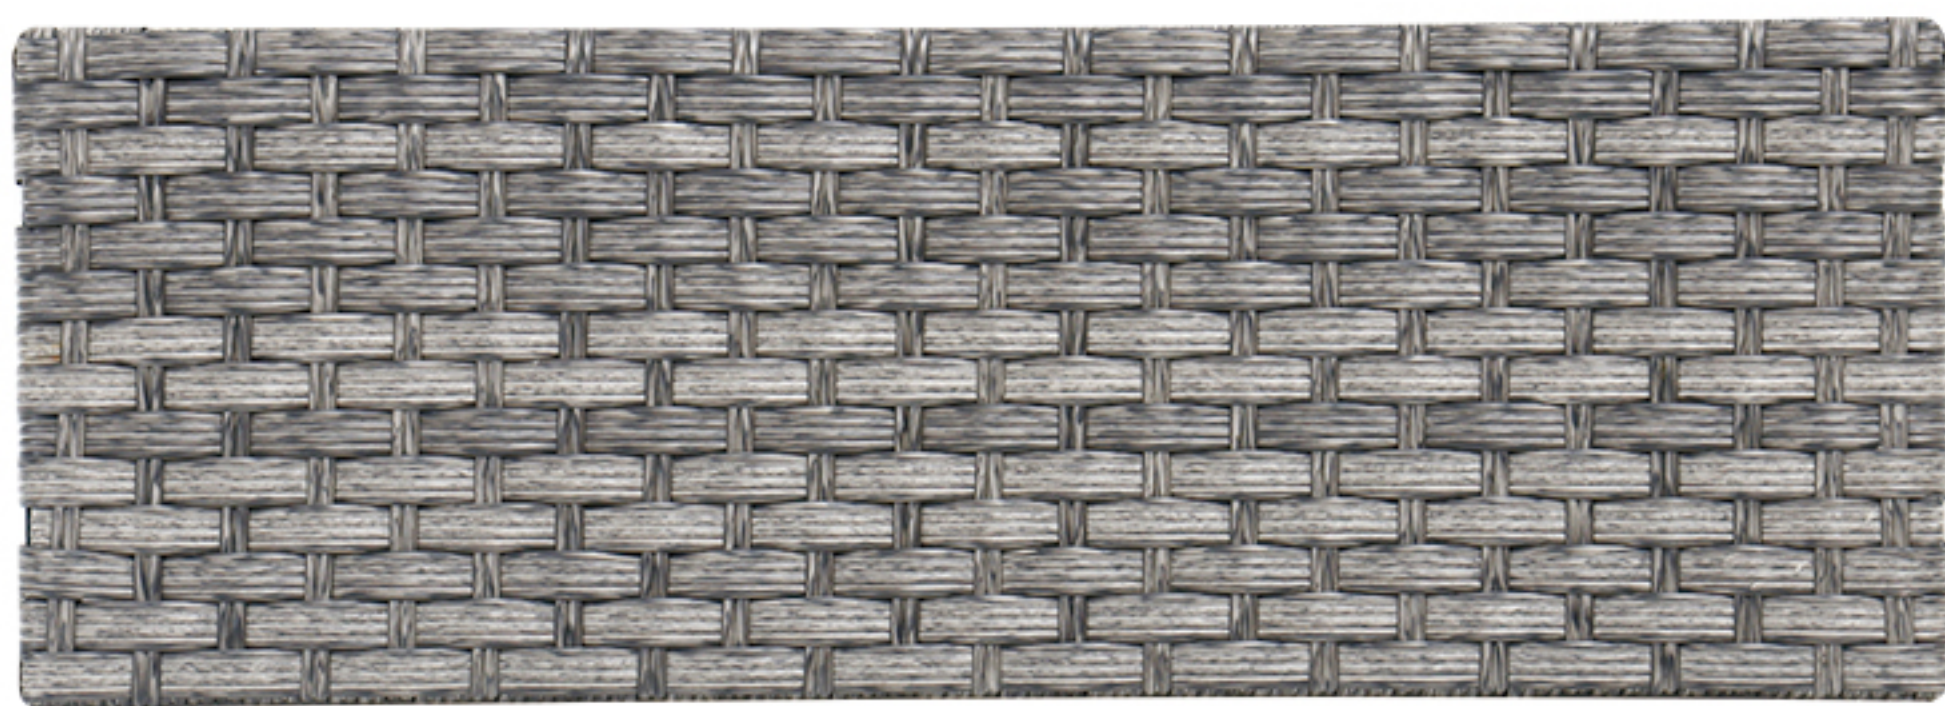

1 PC Back Panel

G



1 PC Seat Cushion

H



1 PC Backrest Cushion



## Parts List

I



1 PC Connecting Rod

J



2 PCS Connecting Rod

K




4 PCS Legs

M



8 PCS Nuts

N

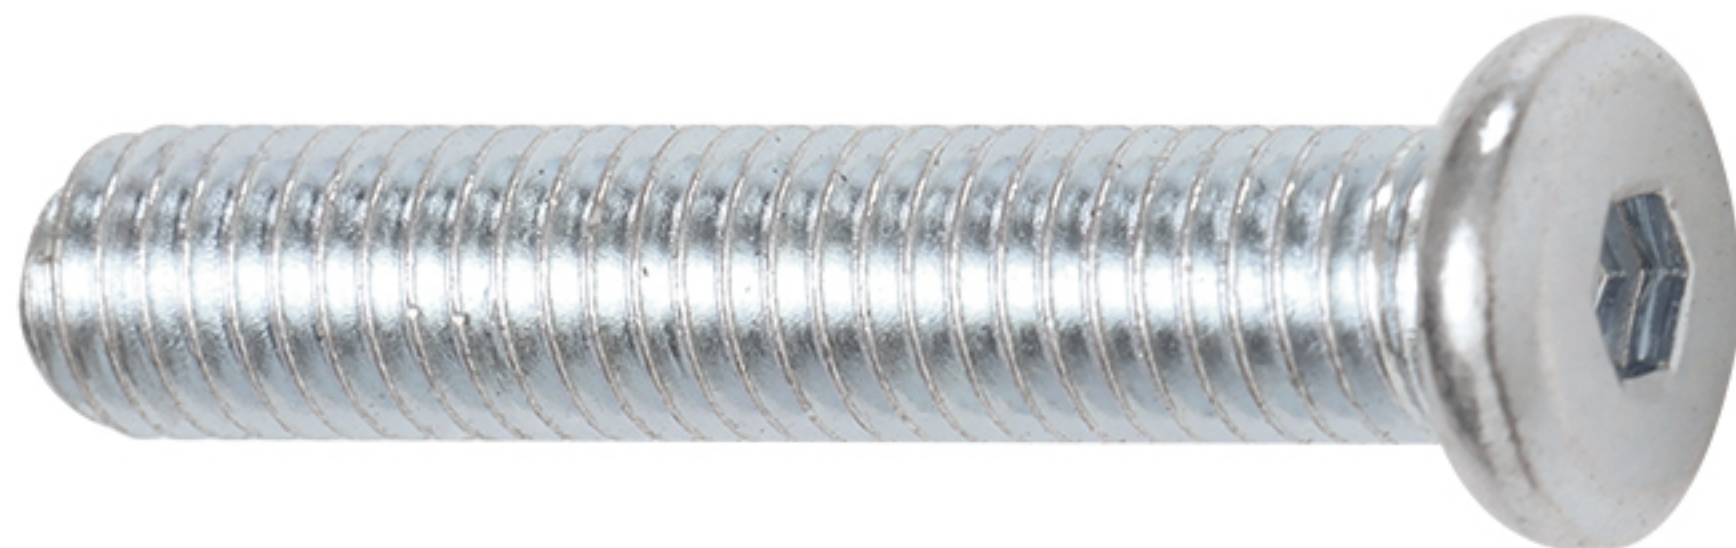


8 PC M8 Screws

O



12 PCS Washers

P

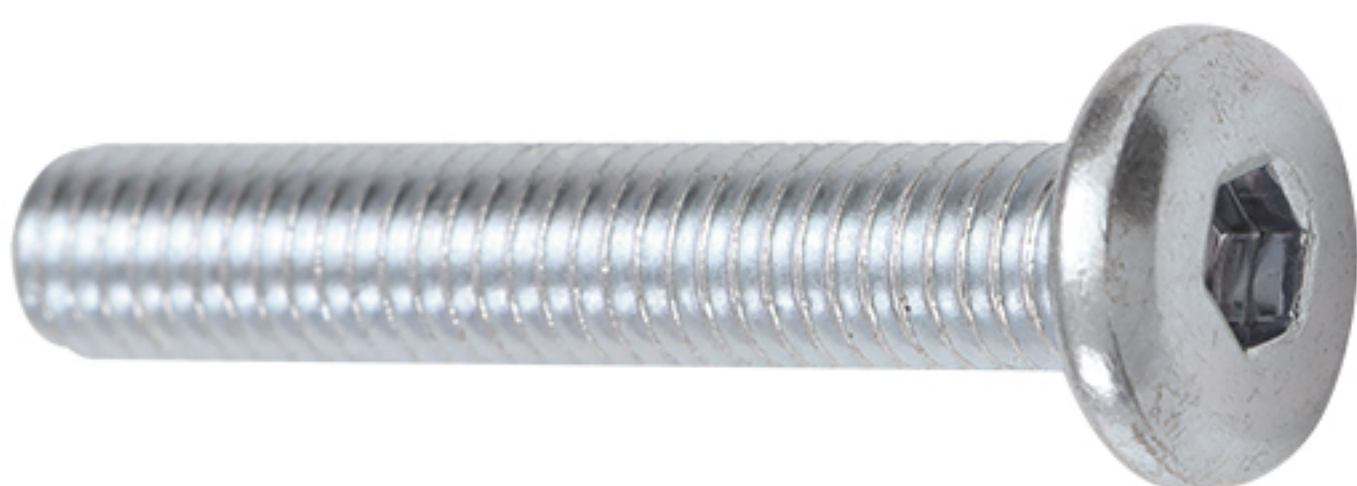

20 PCS M6 Screws

Q



1 PC Hex Key



R



1 PC Spanner




Step 1: Connect the Legs [K] to Armrests [A/B] with Screws [P] by using tool [Q].

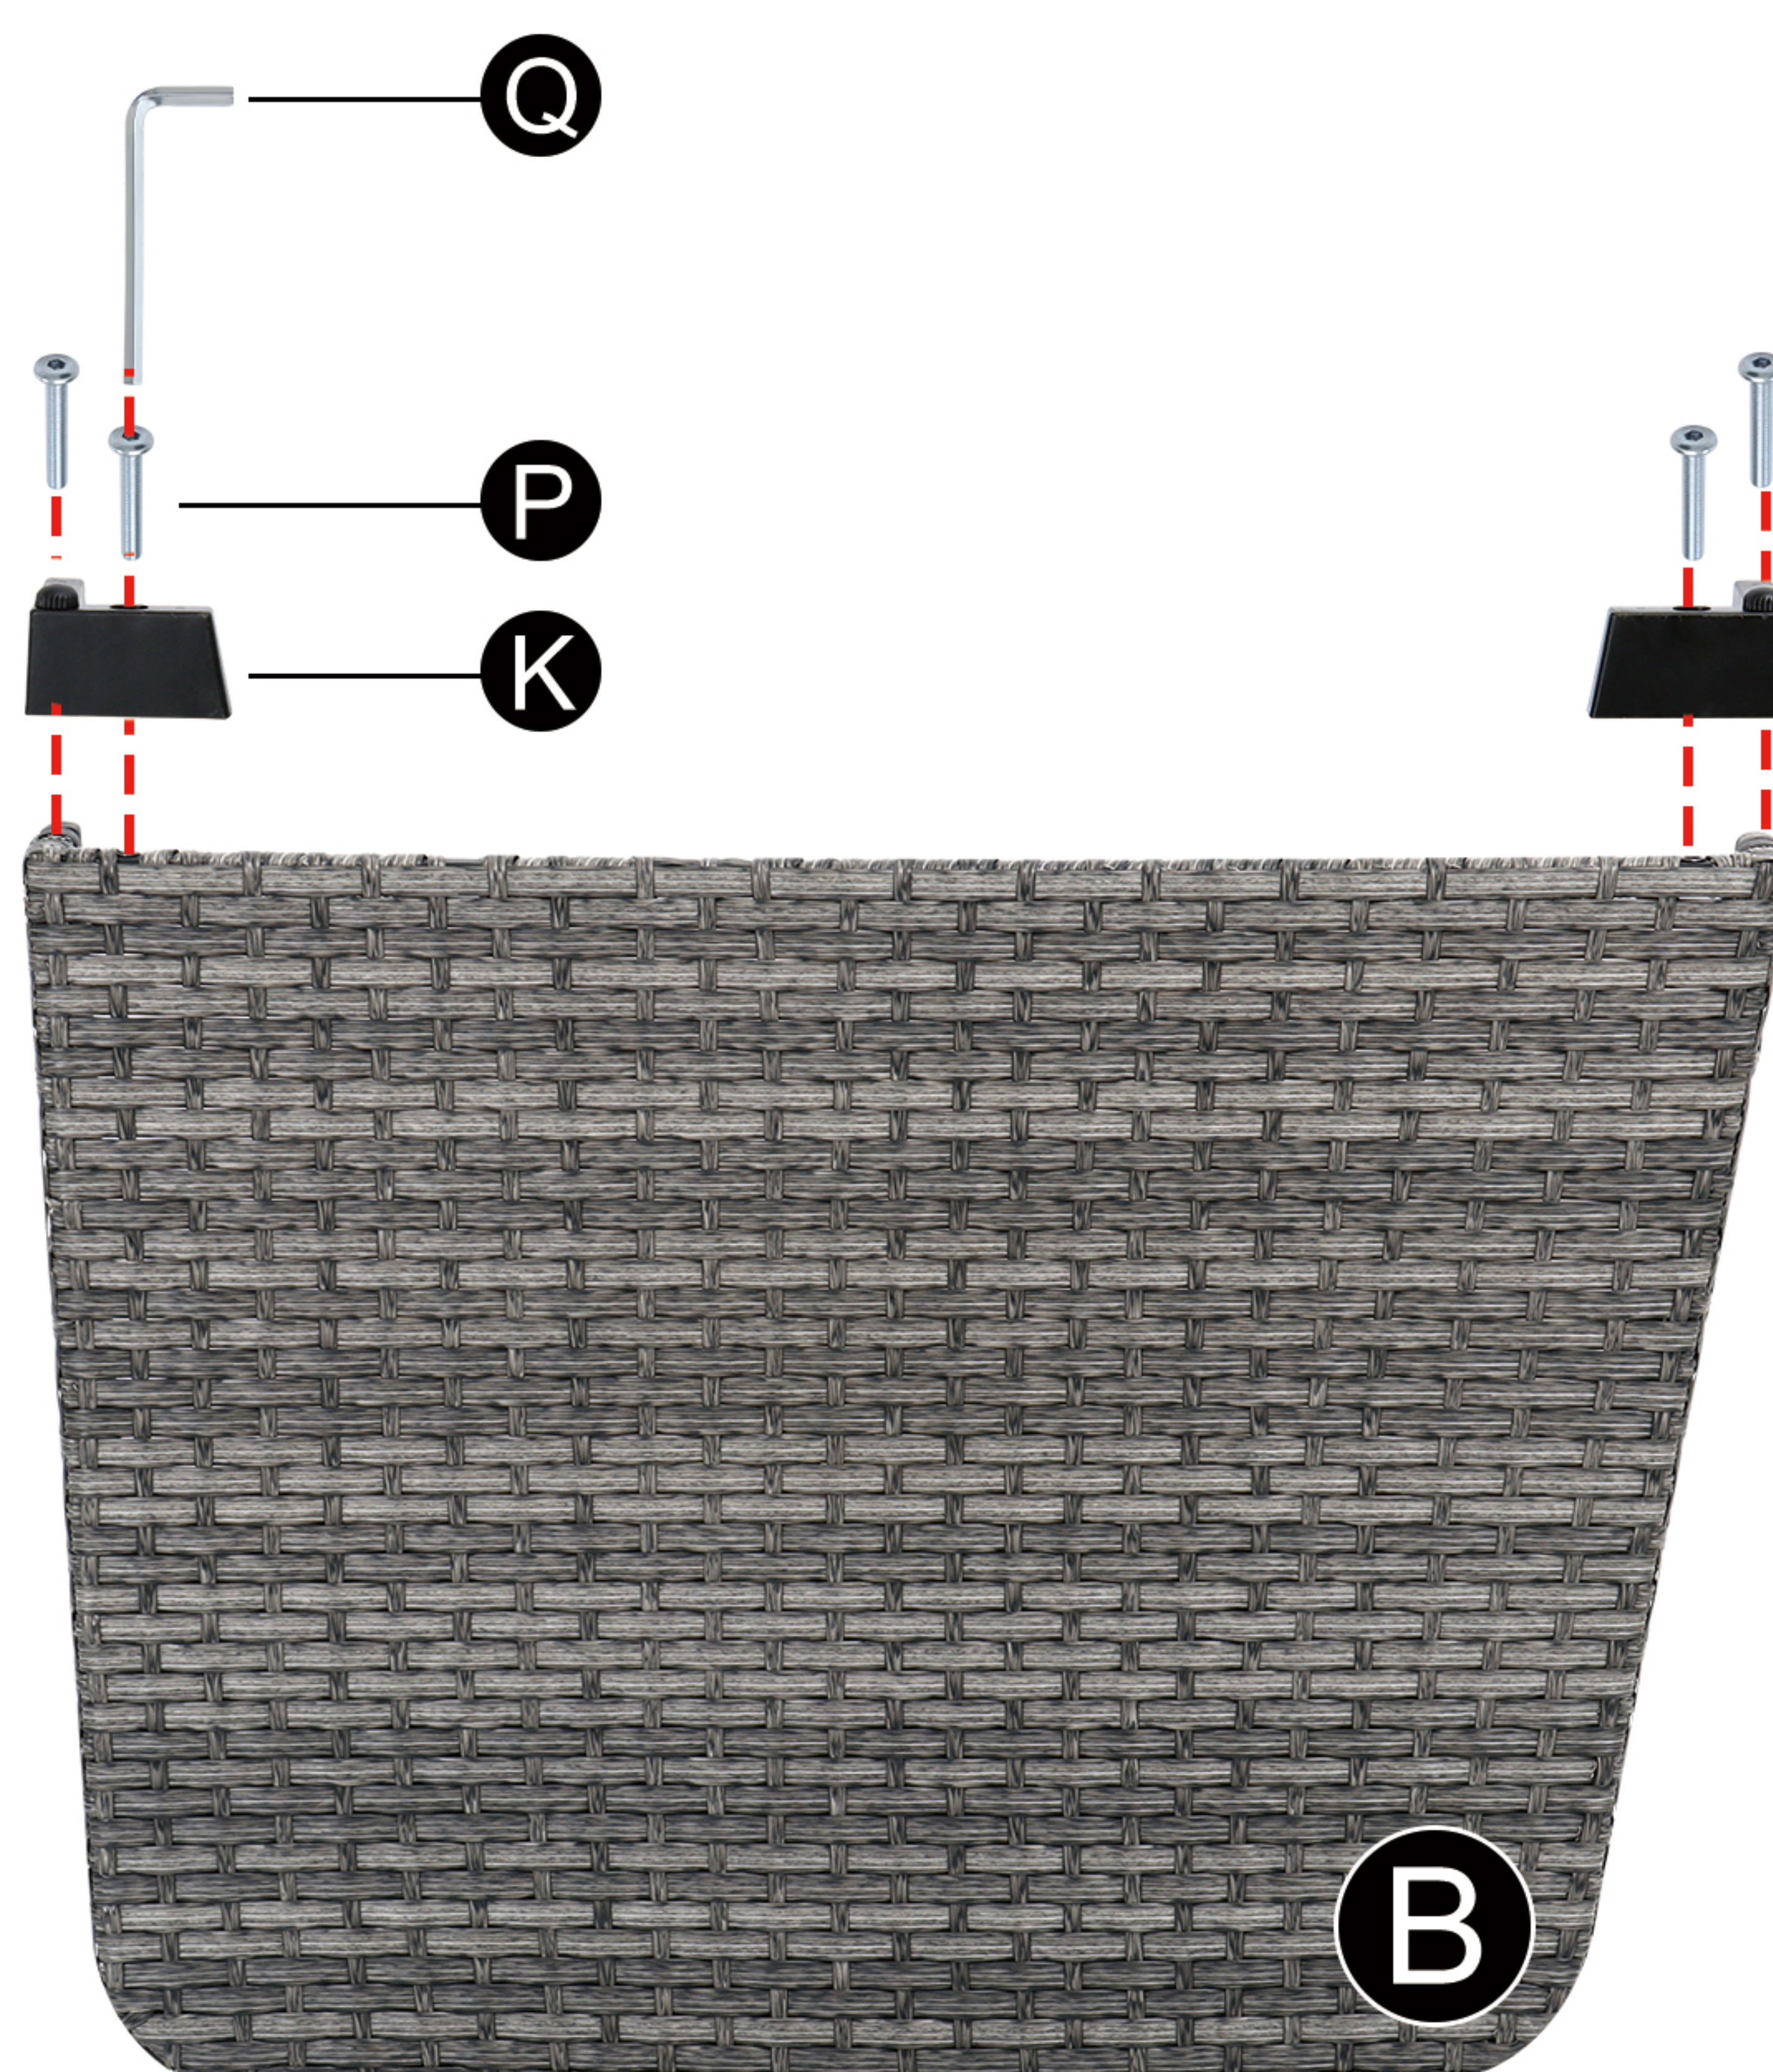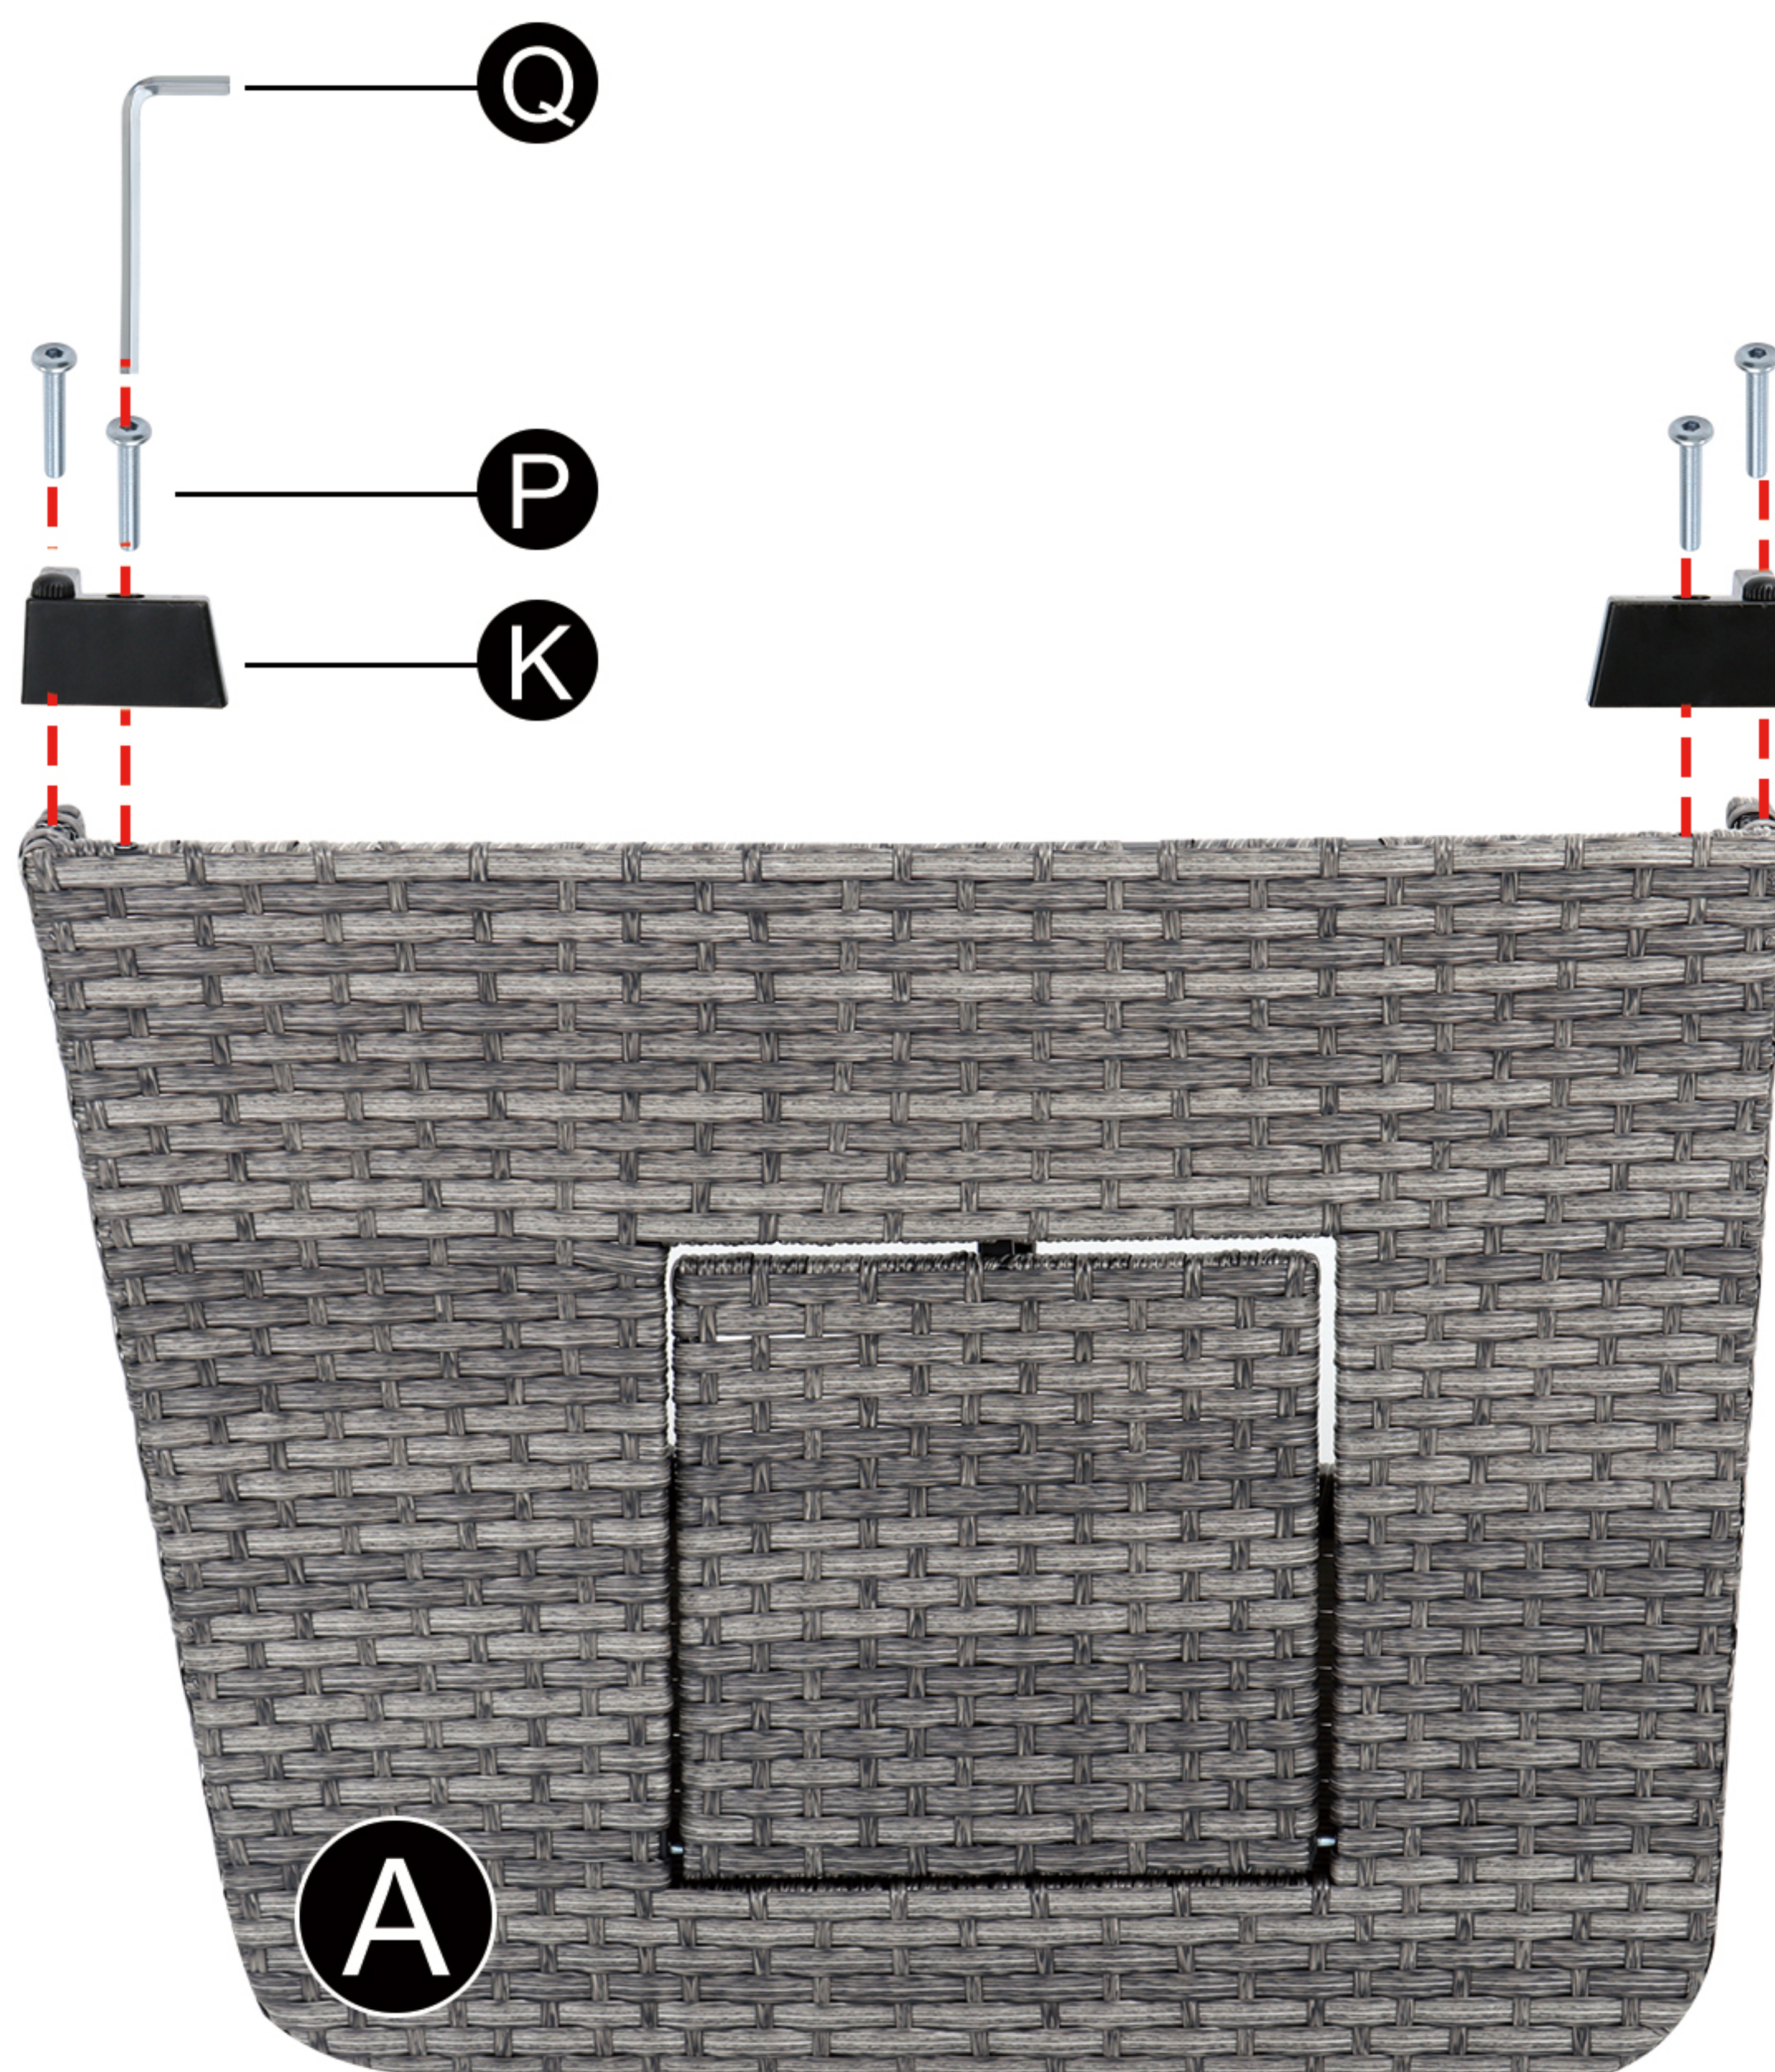




Step 2: Connect the Seat Base [D] to the Left Armrest [A] with Washers [O] and Screws [P] by using tool [Q].

**NOTE:**Please install it on the ground as the picture shown for easier installation

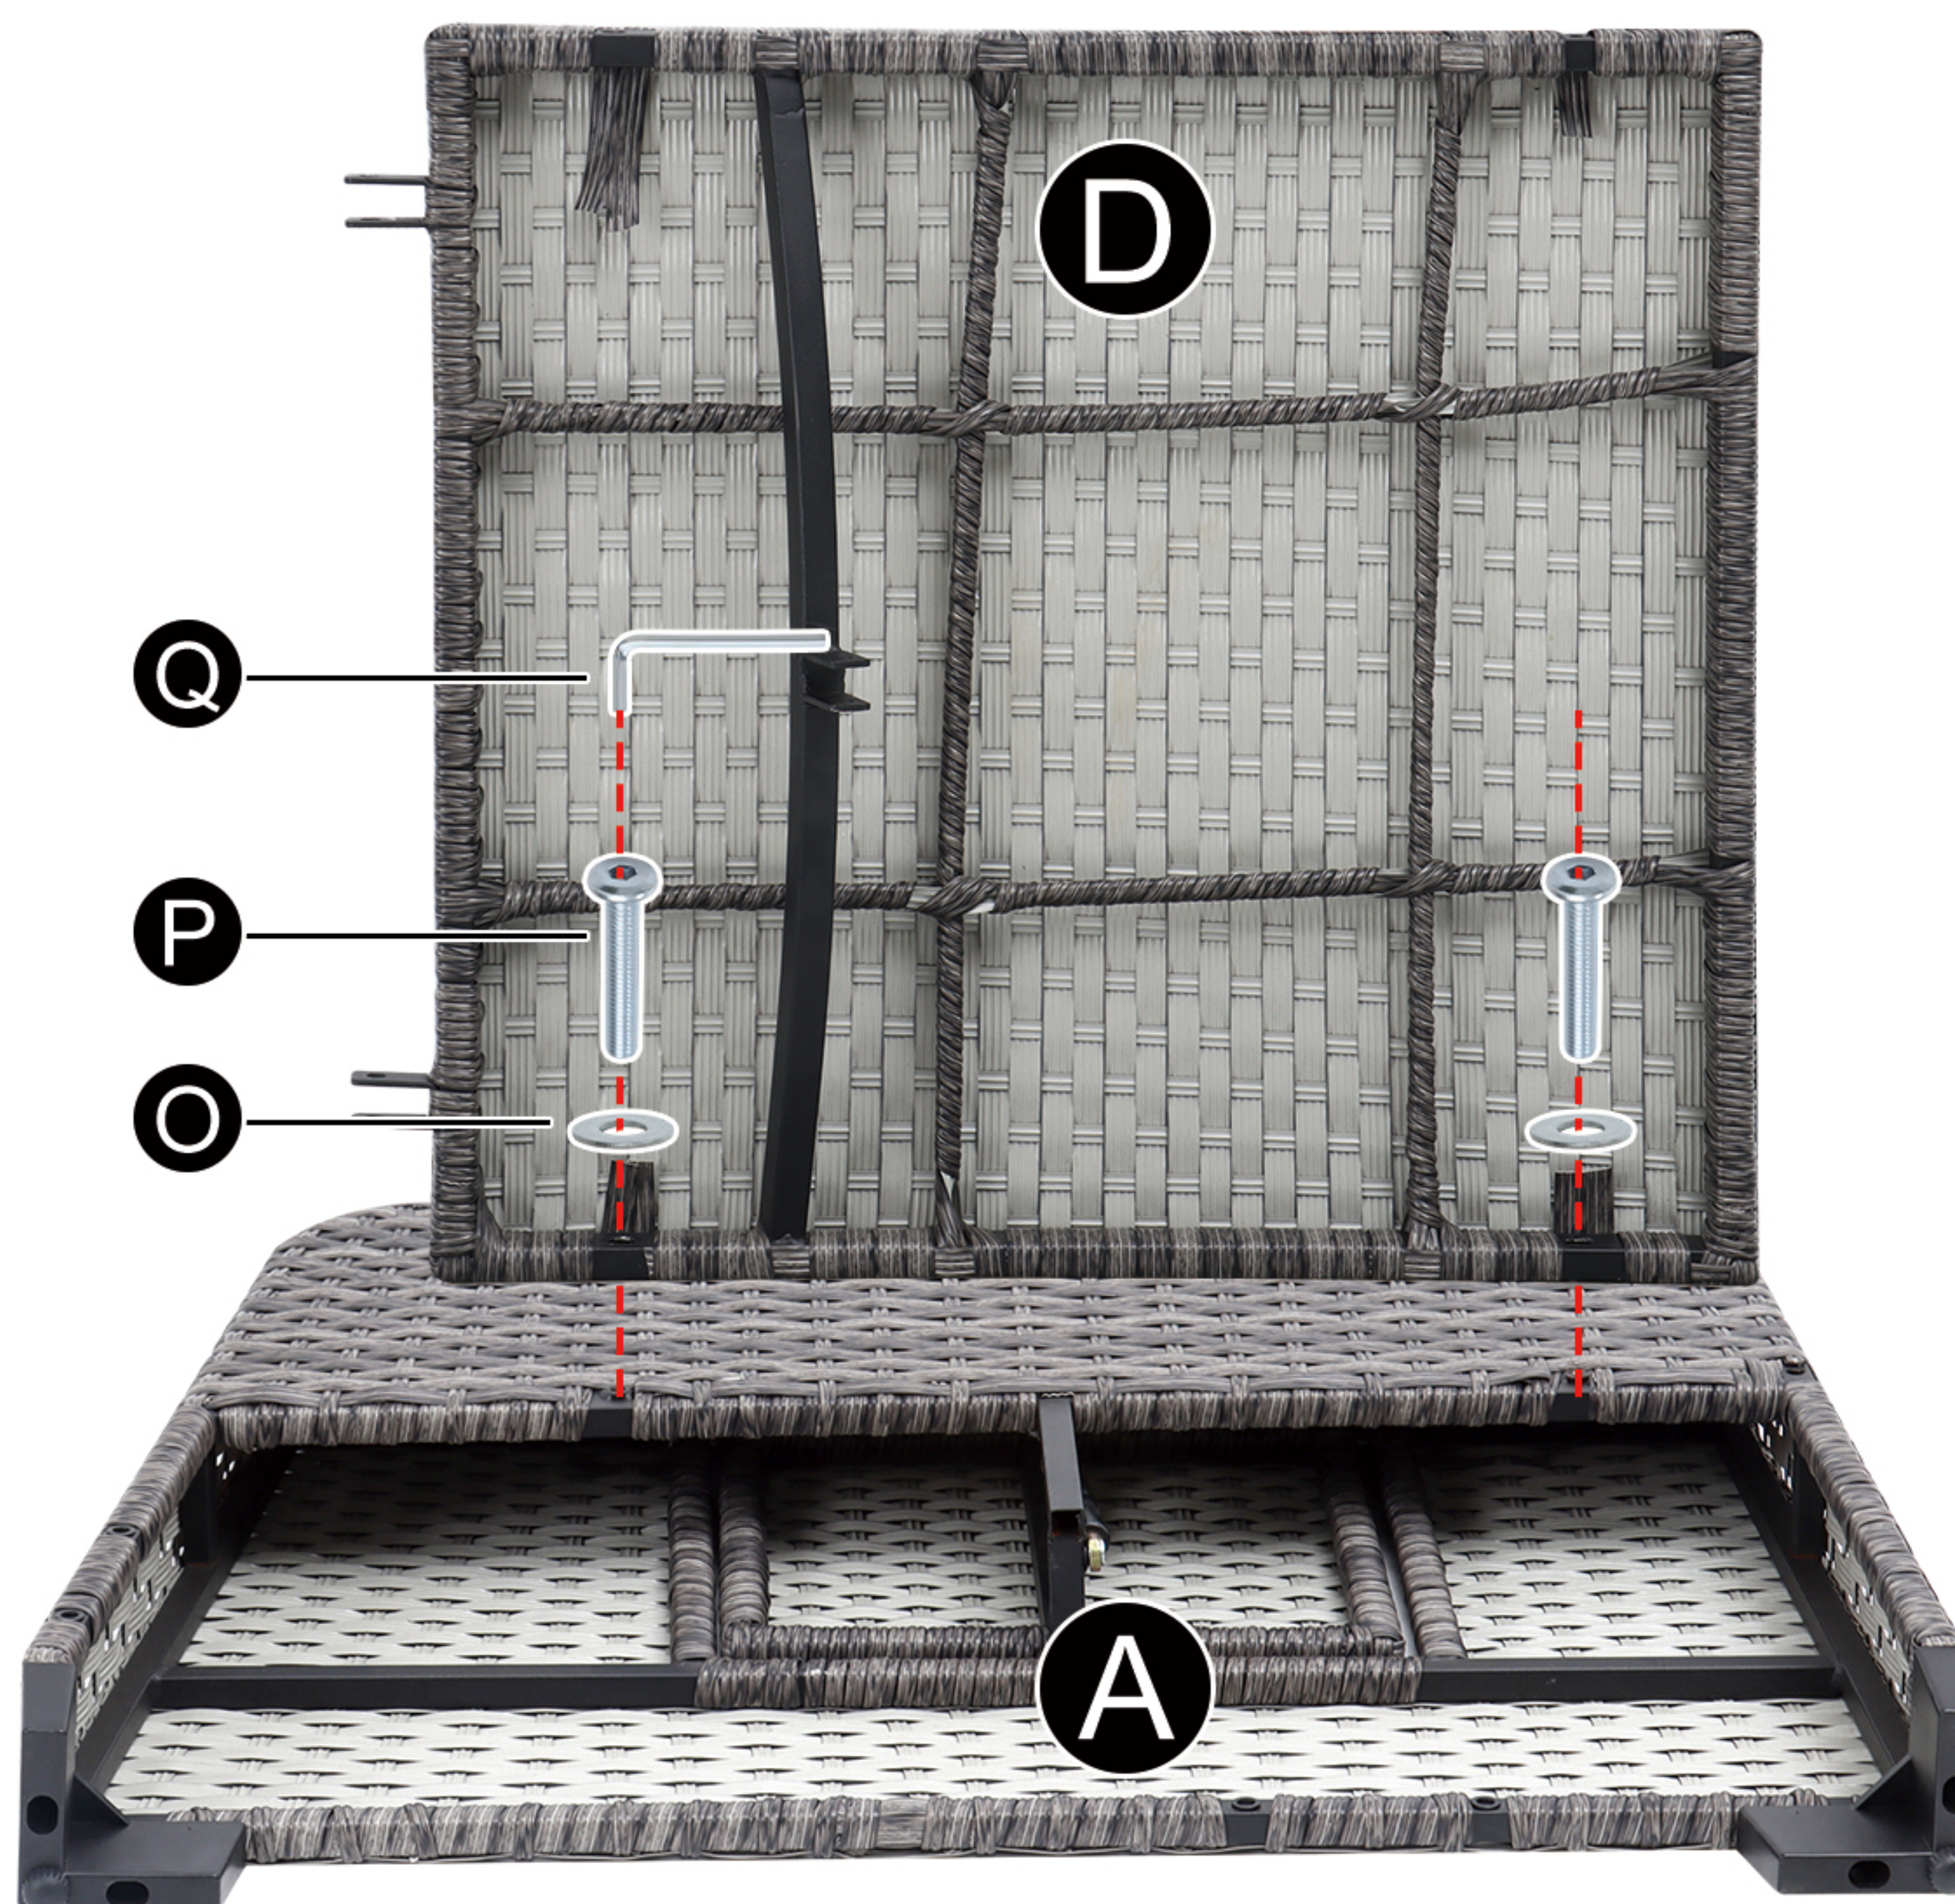


Step 3: Connect the Back Panel [F] to the Left Armrest [A] with Washers [O] and Screws [P] by using tool [Q].

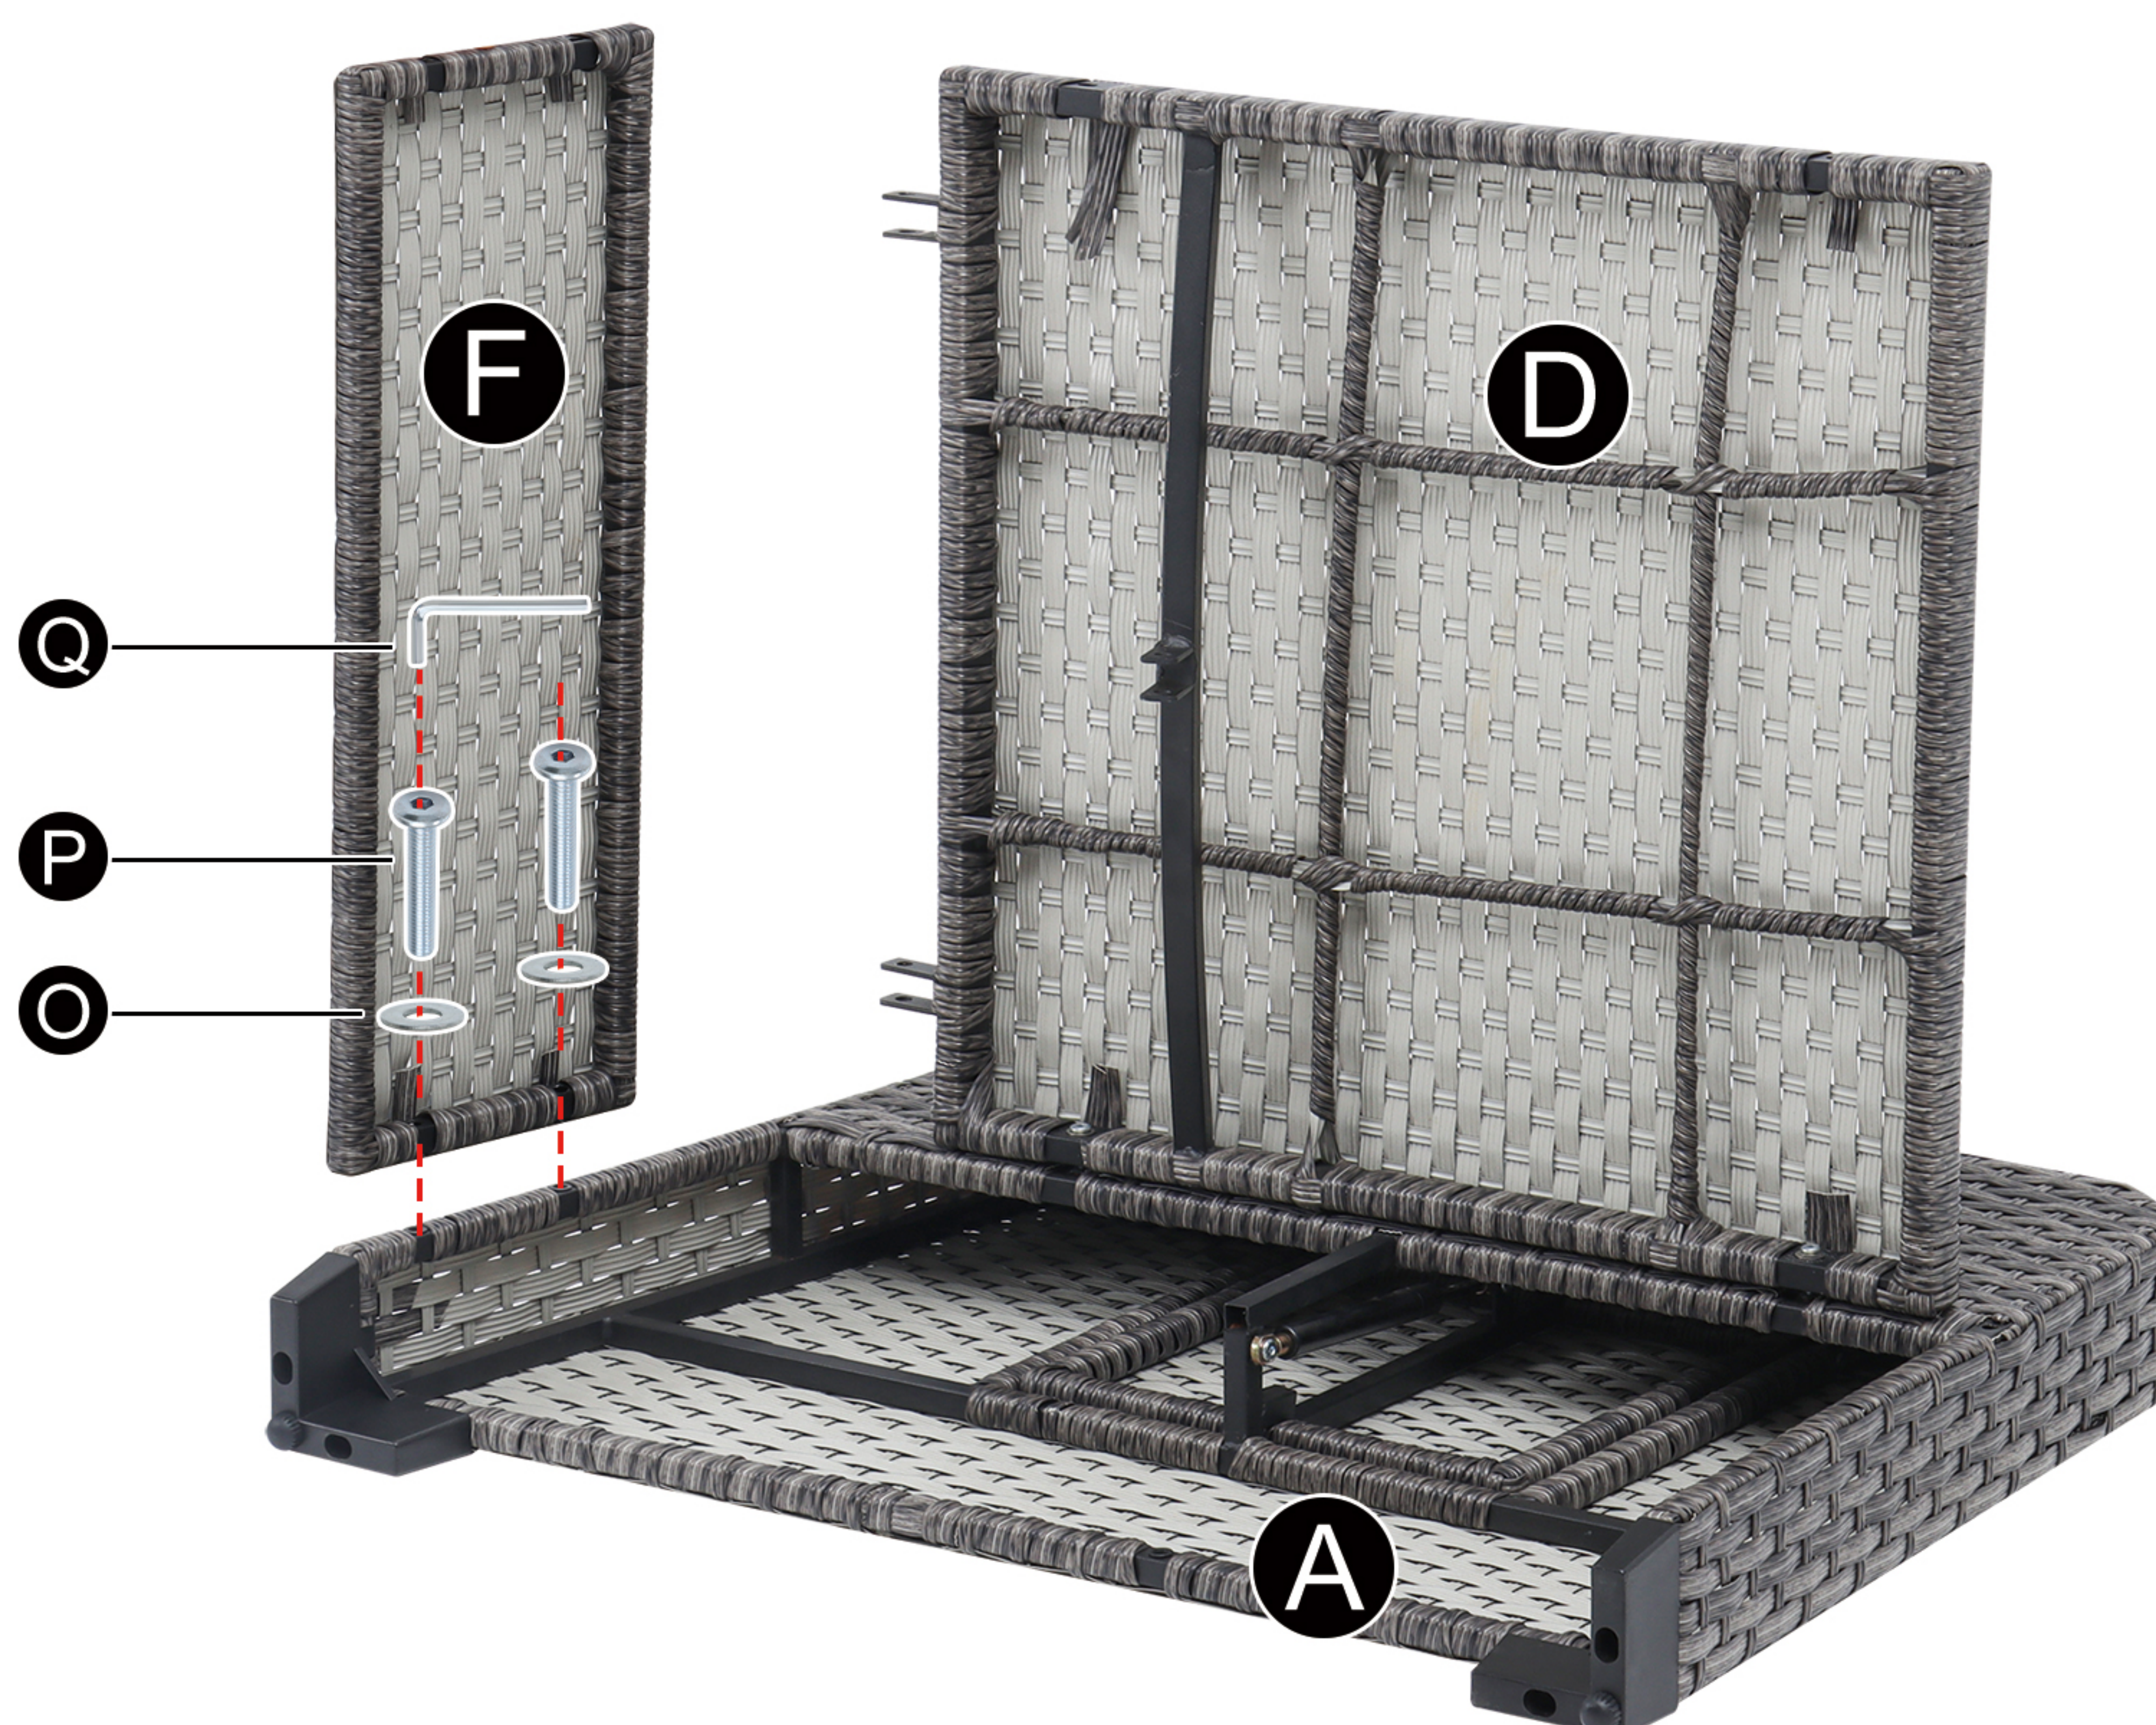




Step 4: Connect the Connecting Rod [I] to the Left Armrest [A] with Washers [O] and Screws [P] by using tool [Q].

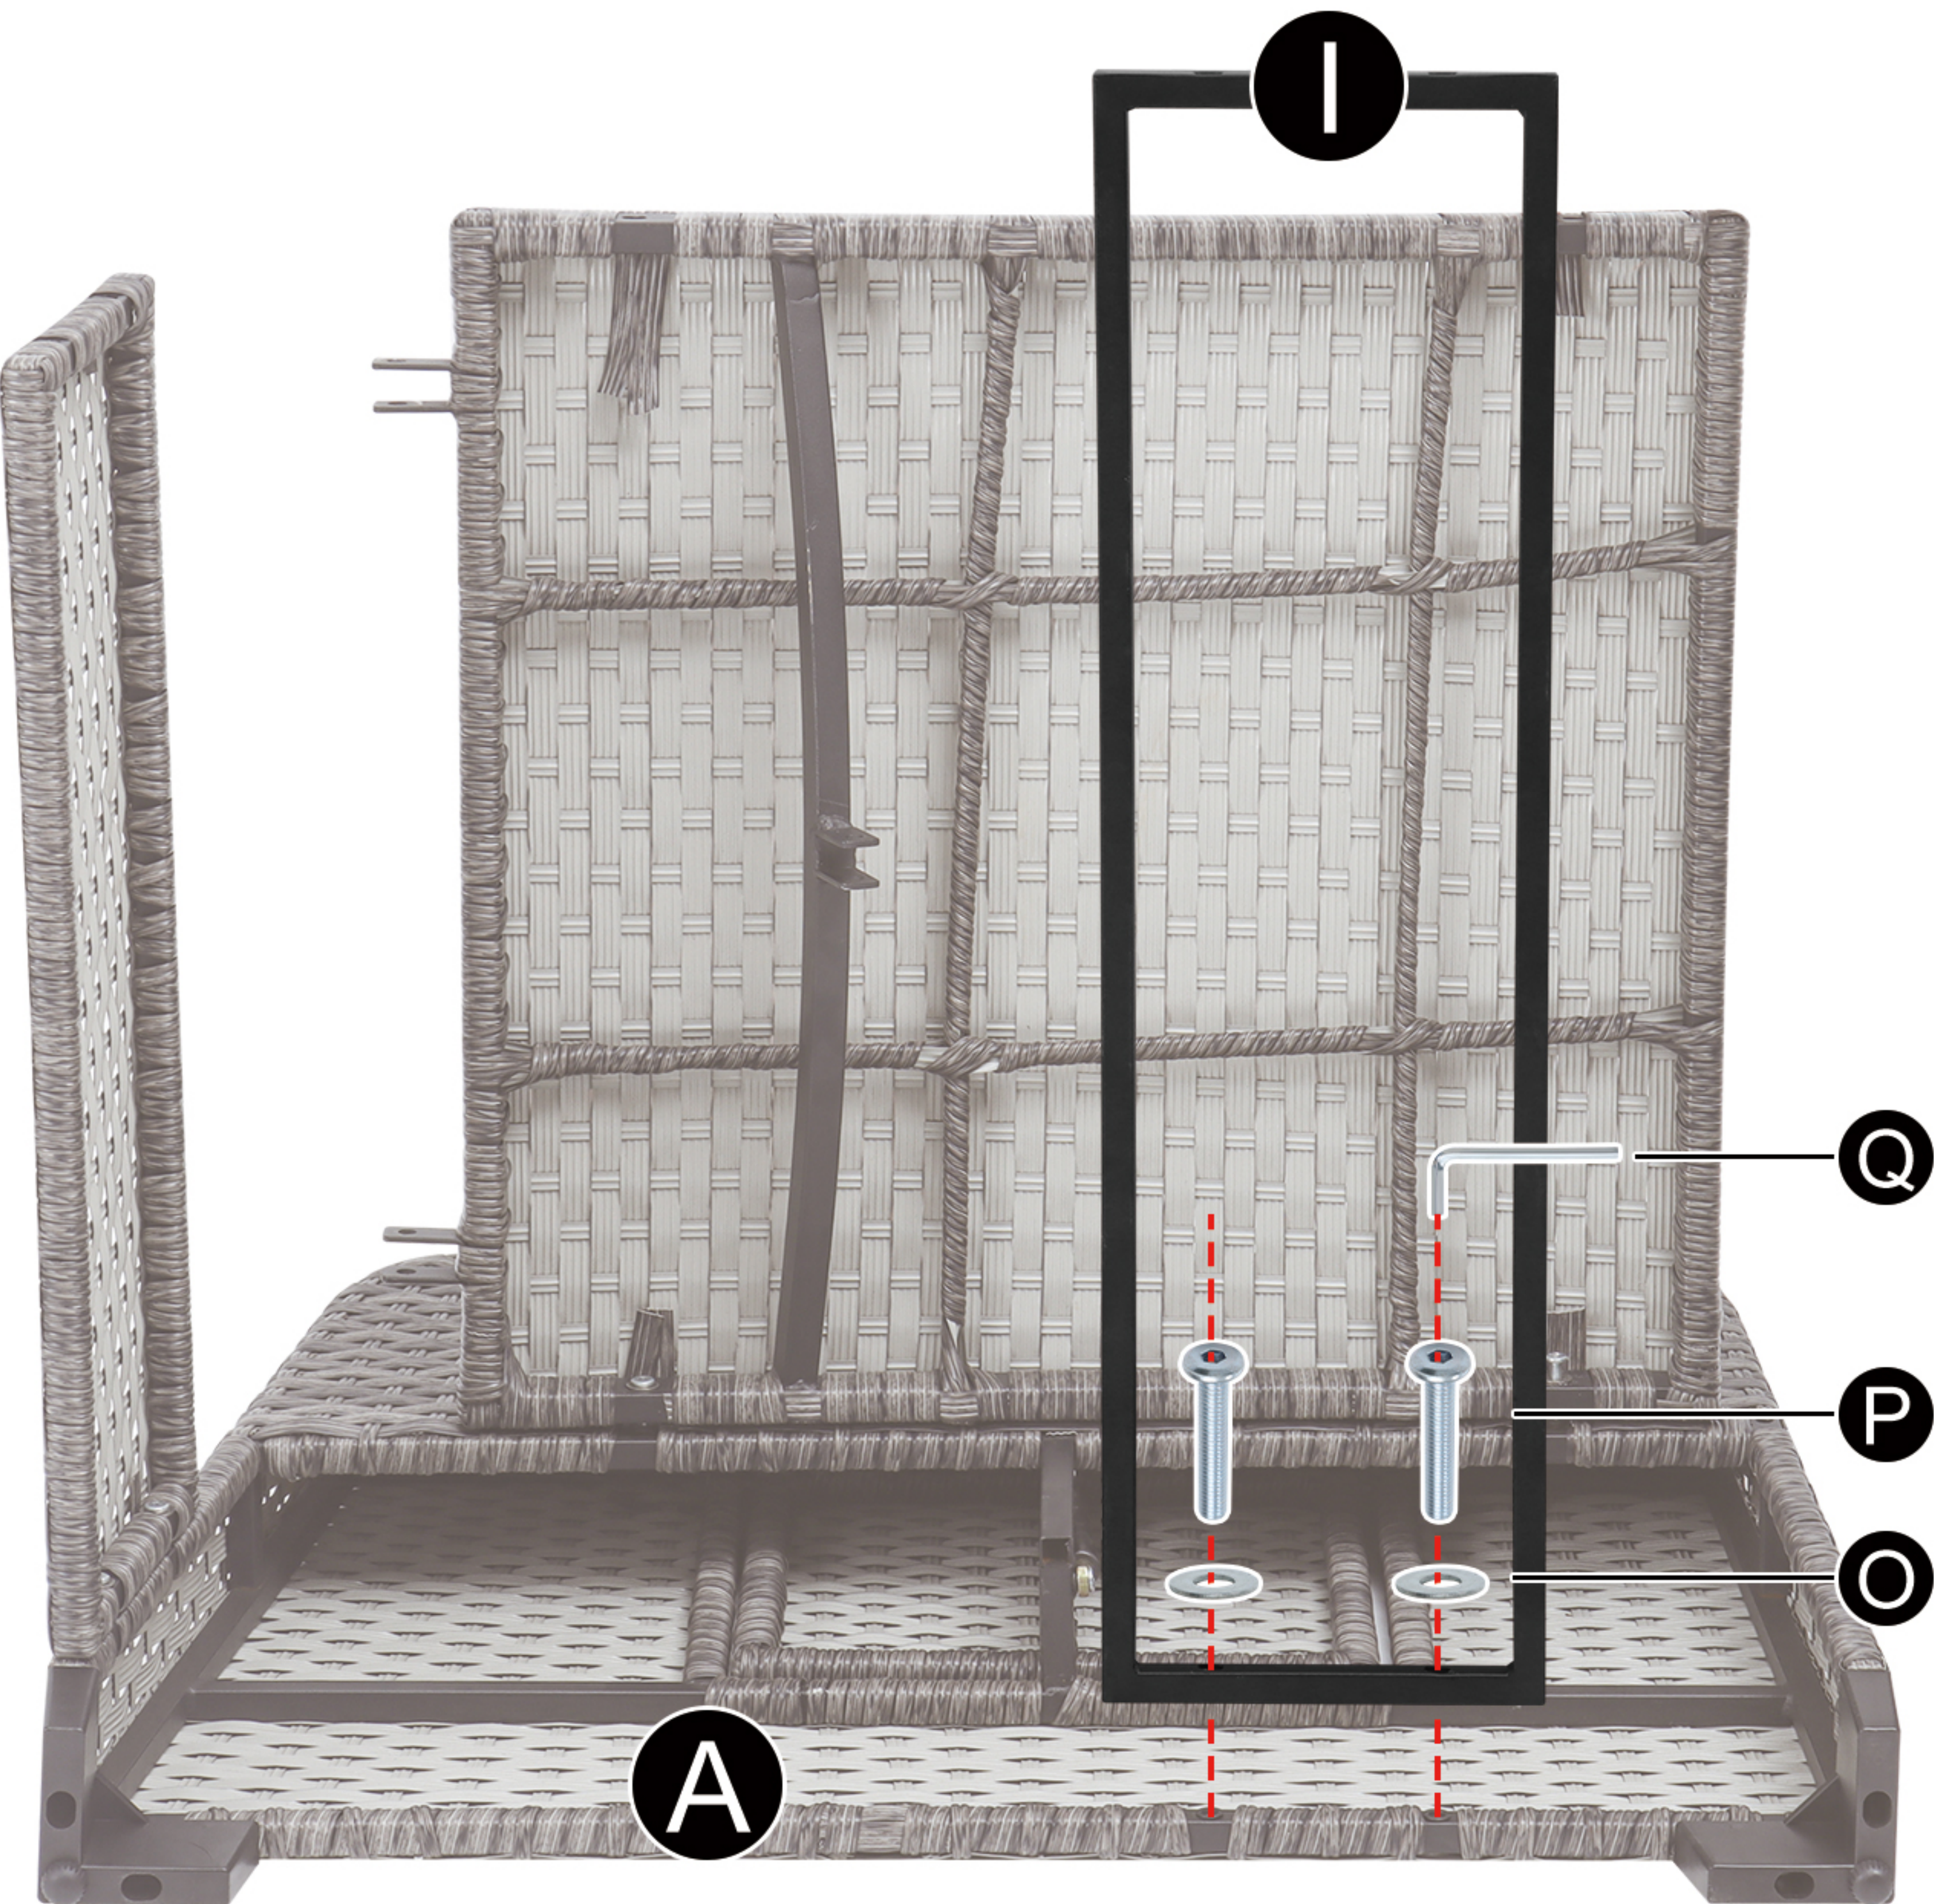


Step 5: Insert the Footrest Panel [E] to the Left Armrest [A] as shown below.

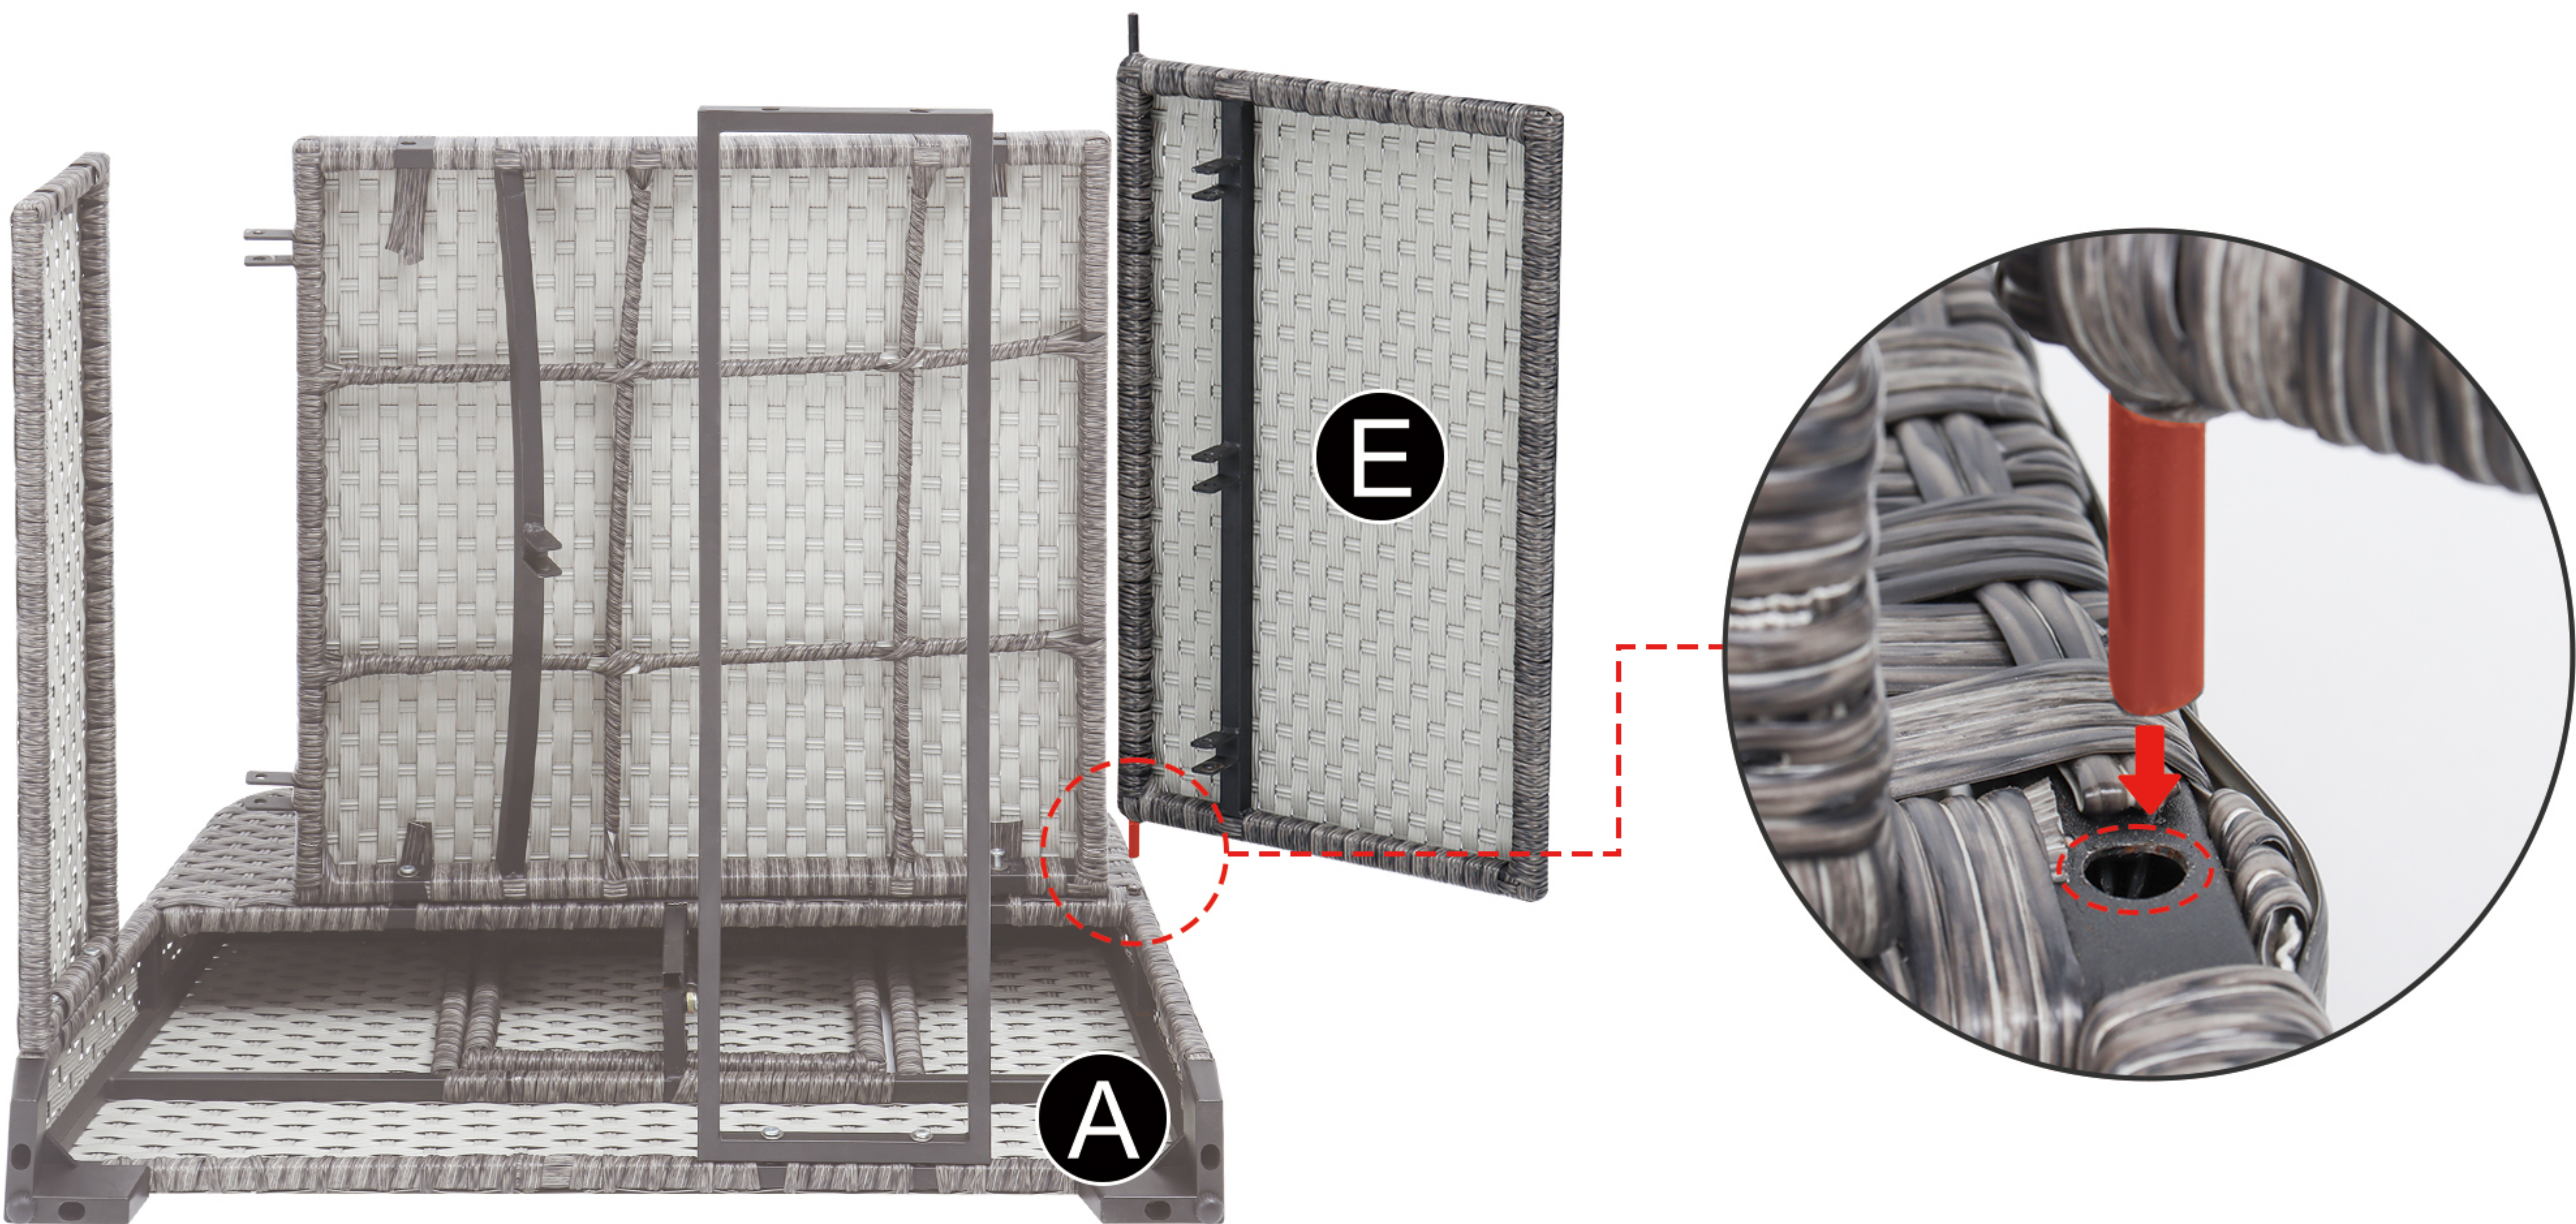




Step 6: Connect the Right Armrest [B] to the Former Installed Parts with Washers [O] and Screws [P] by using tool [Q].

NOTE: Please install it on the ground as the picture shown for easier installation.

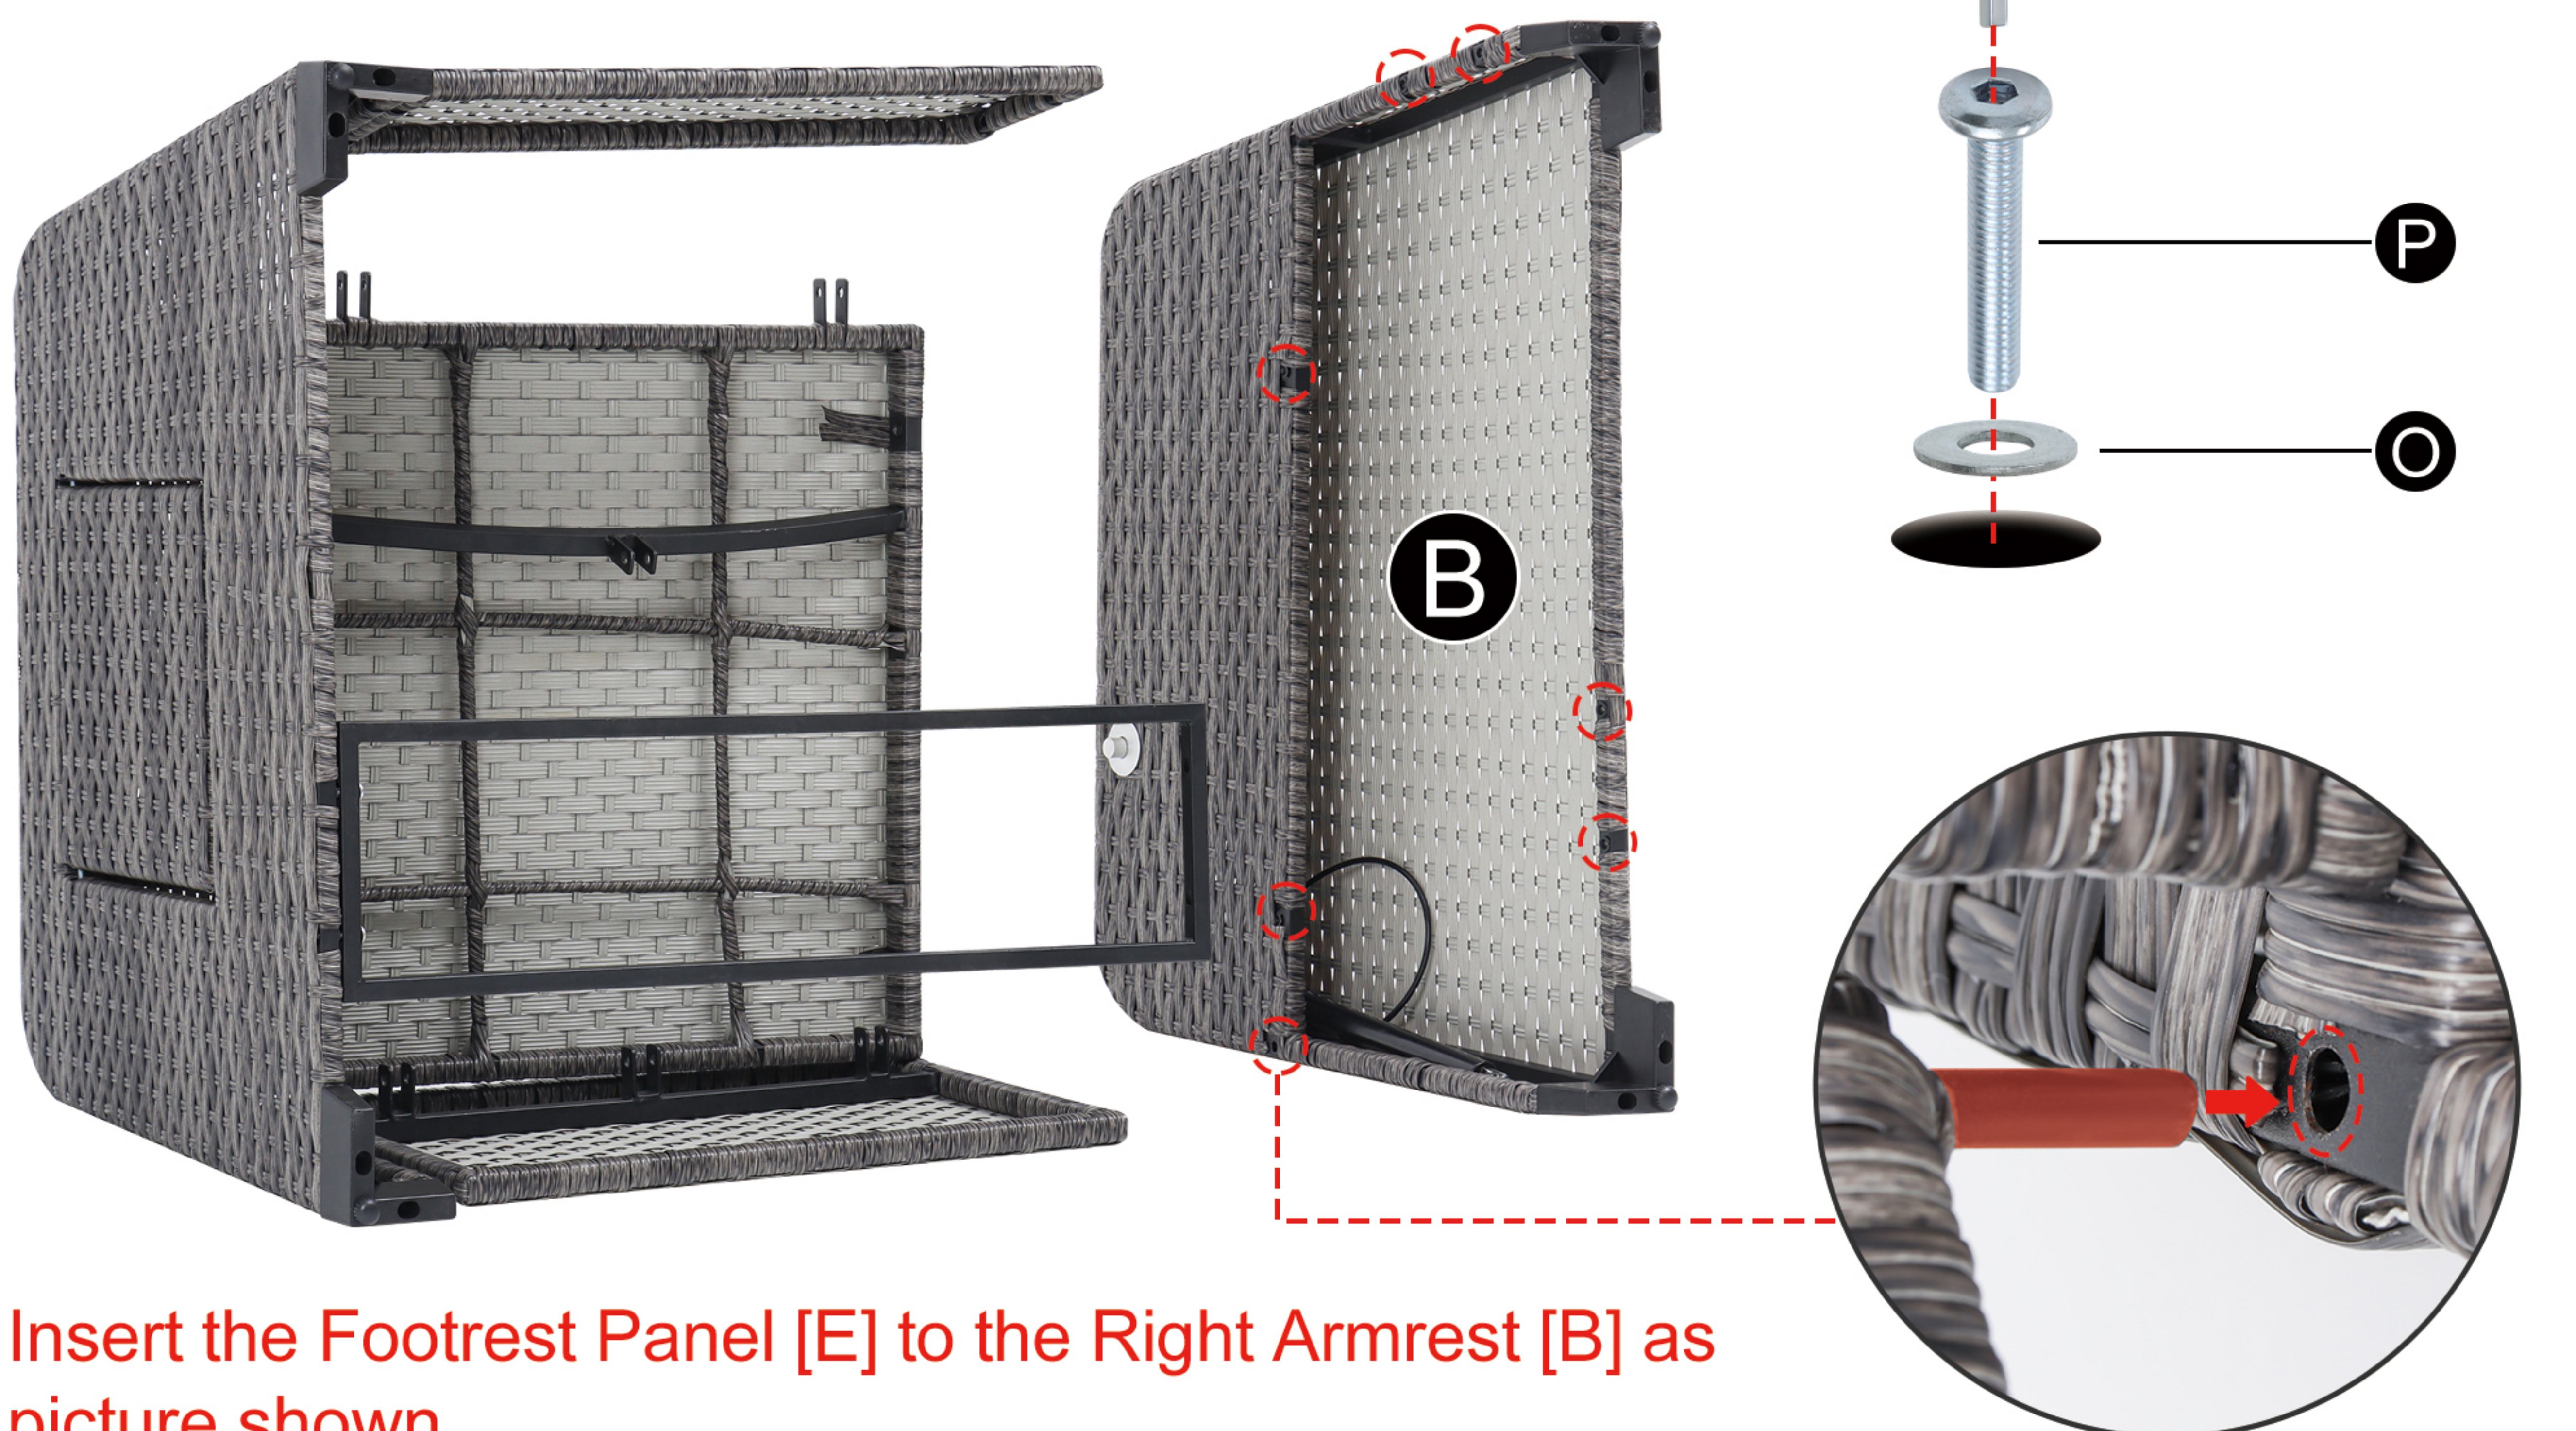

Insert the Footrest Panel [E] to the Right Armrest [B] as picture shown.




Step 7: Insert the Backrest [C] to the Seat Base [D] as picture shown.

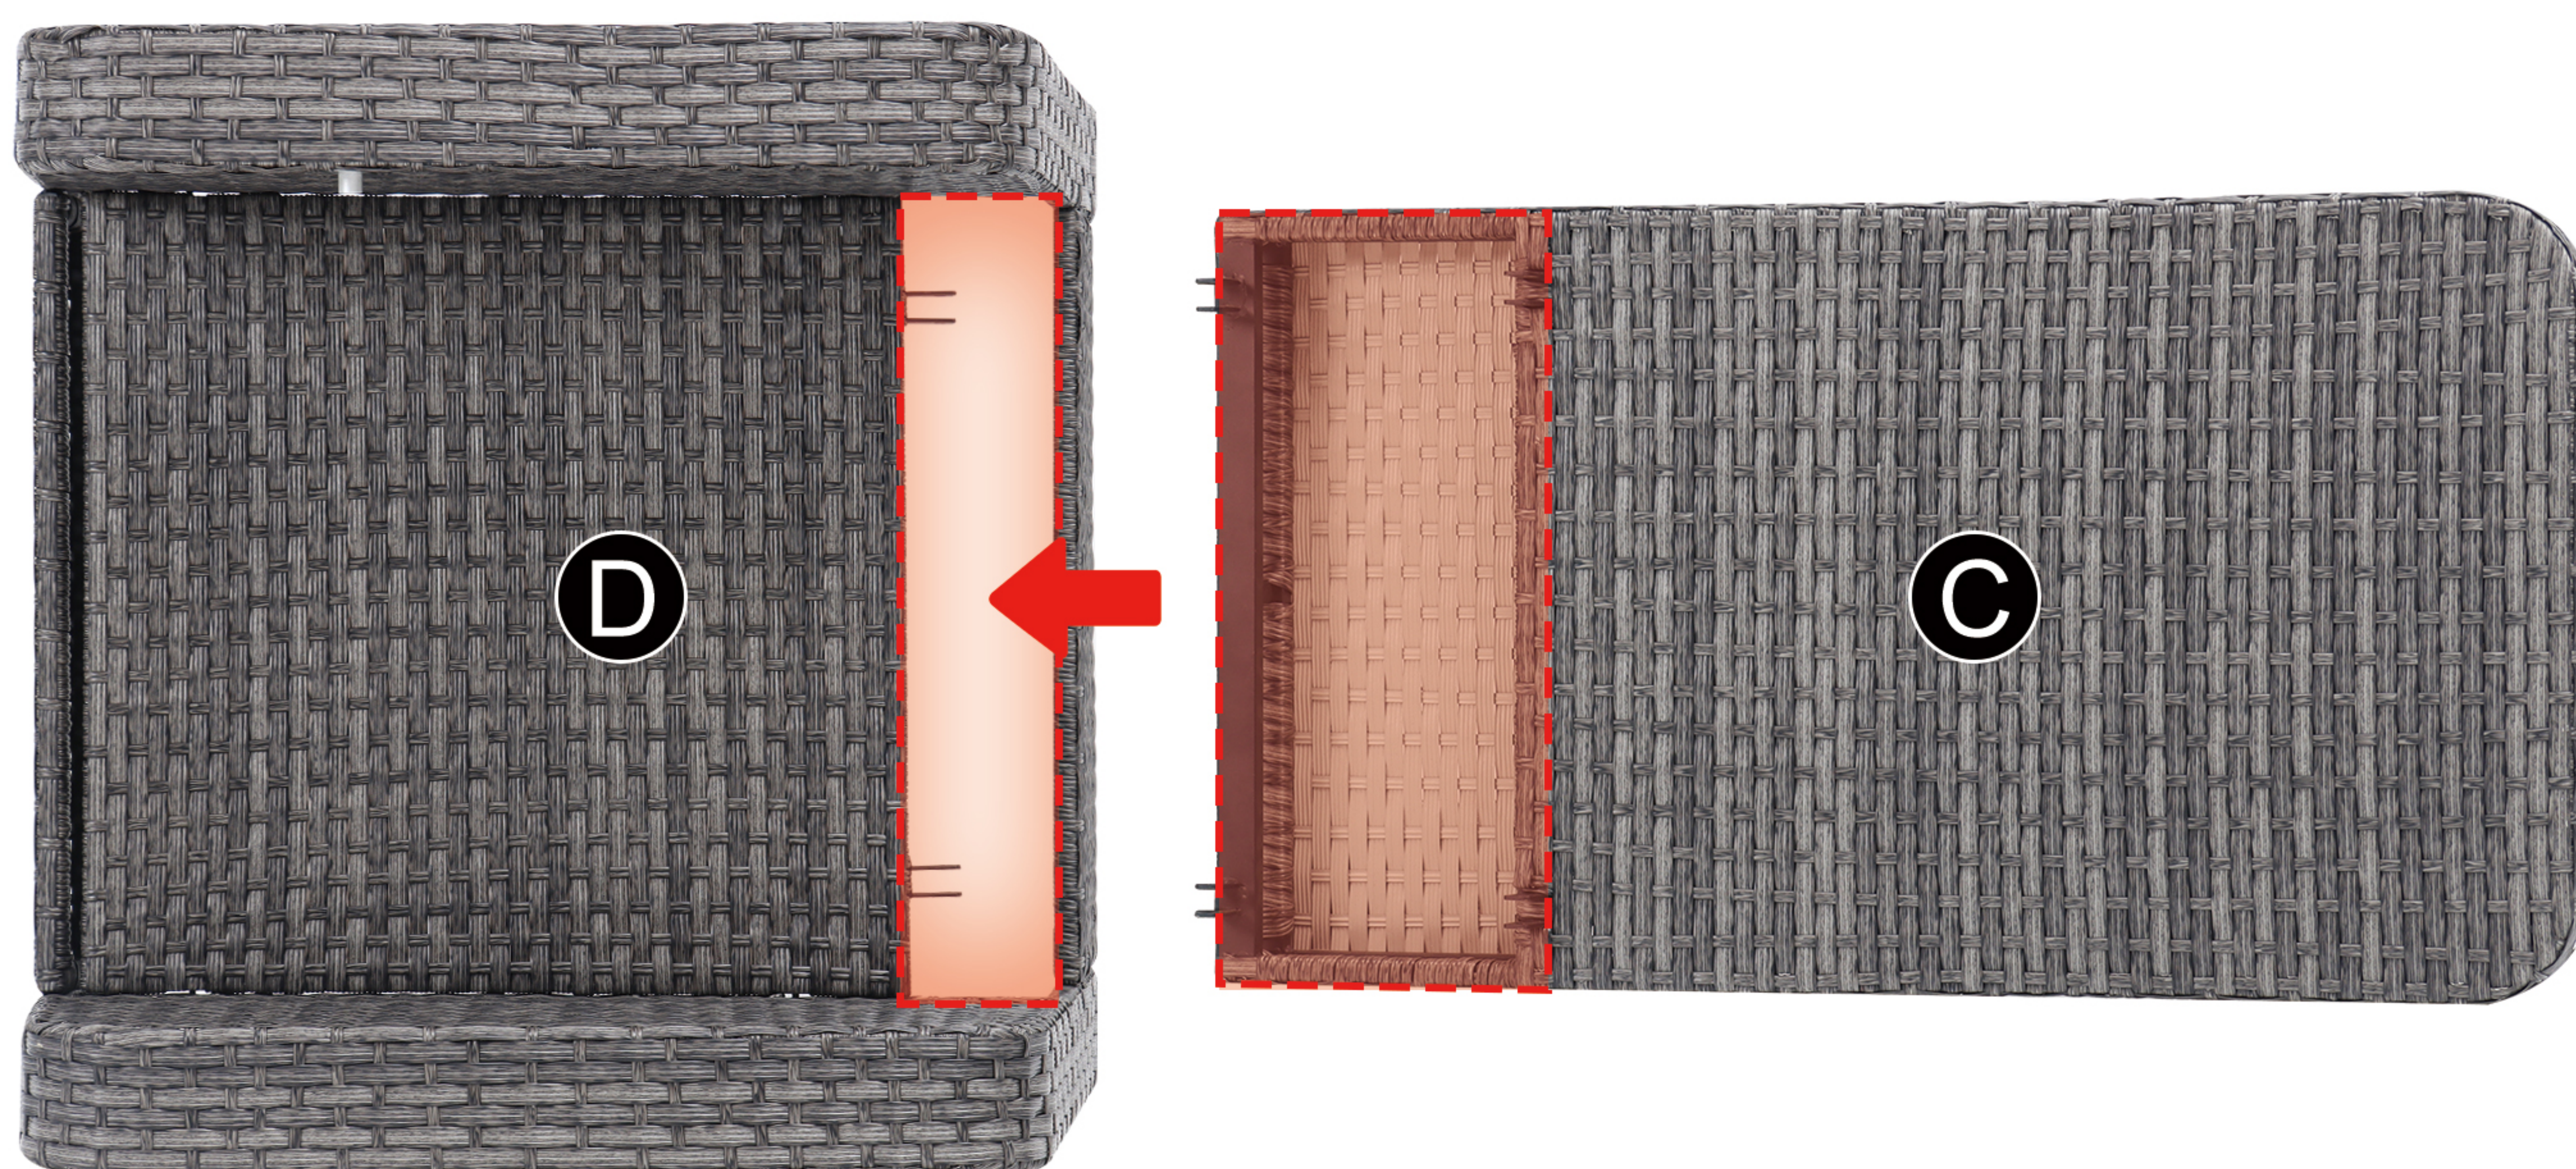




Step 8: Connect the Backrest [C] to the Seat Base [D] with Screws [N] and Nut [M] by using tool [R] to fix.

NOTE: Please lay the outdoor recliner down on the ground as shown for clearly view the hole position.

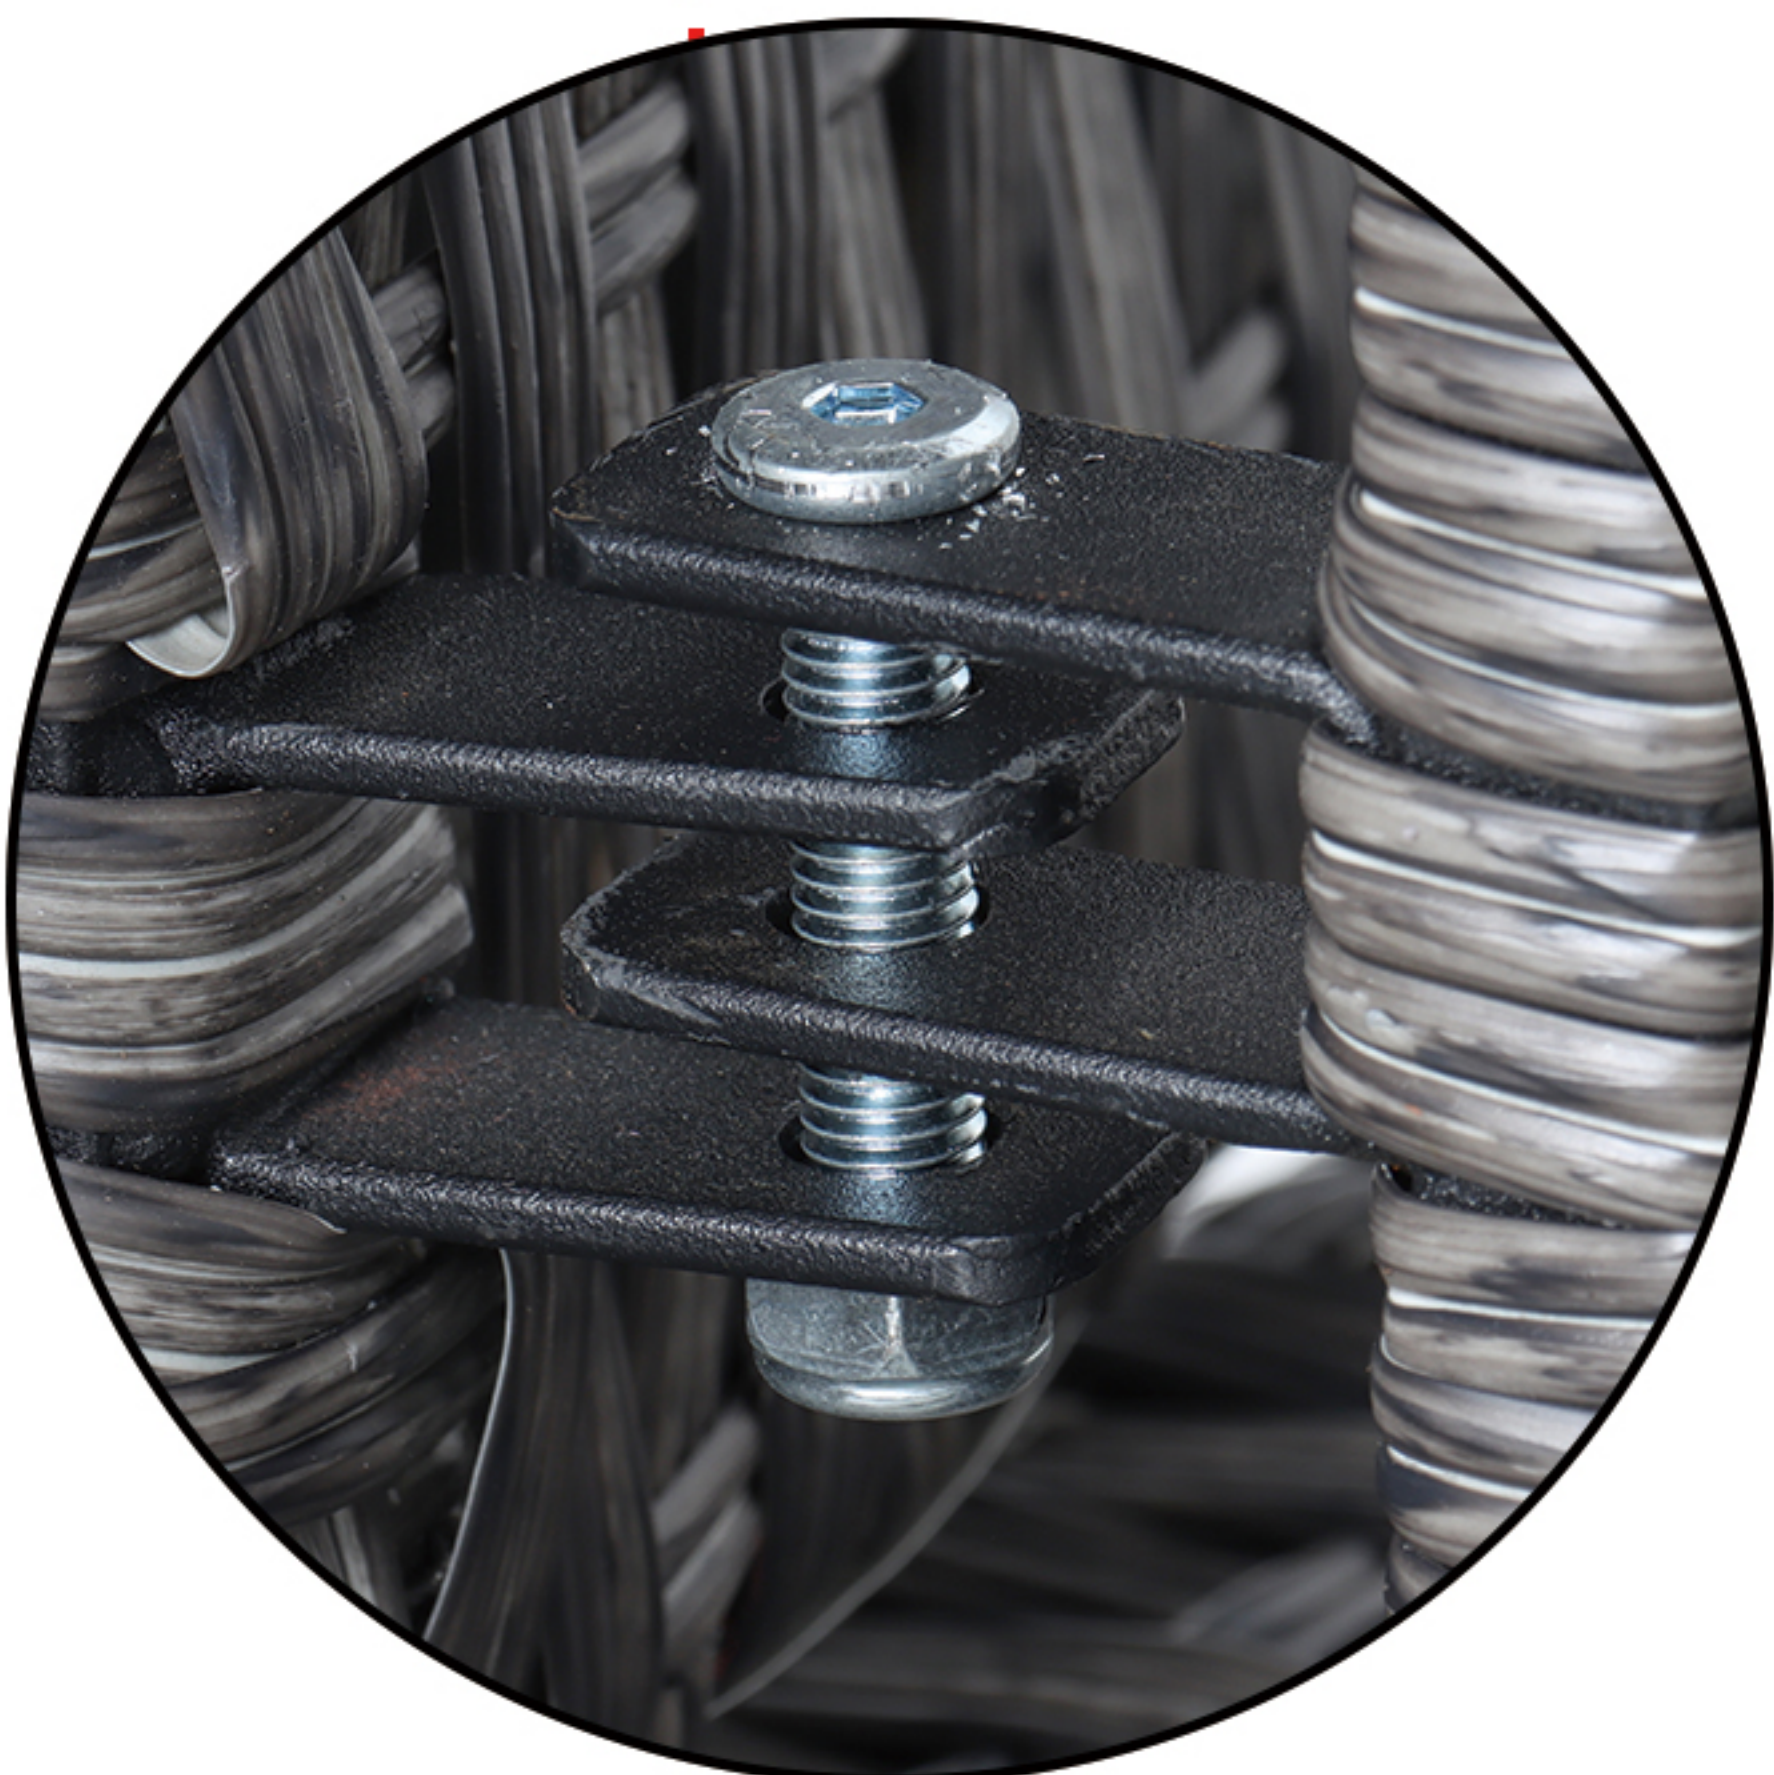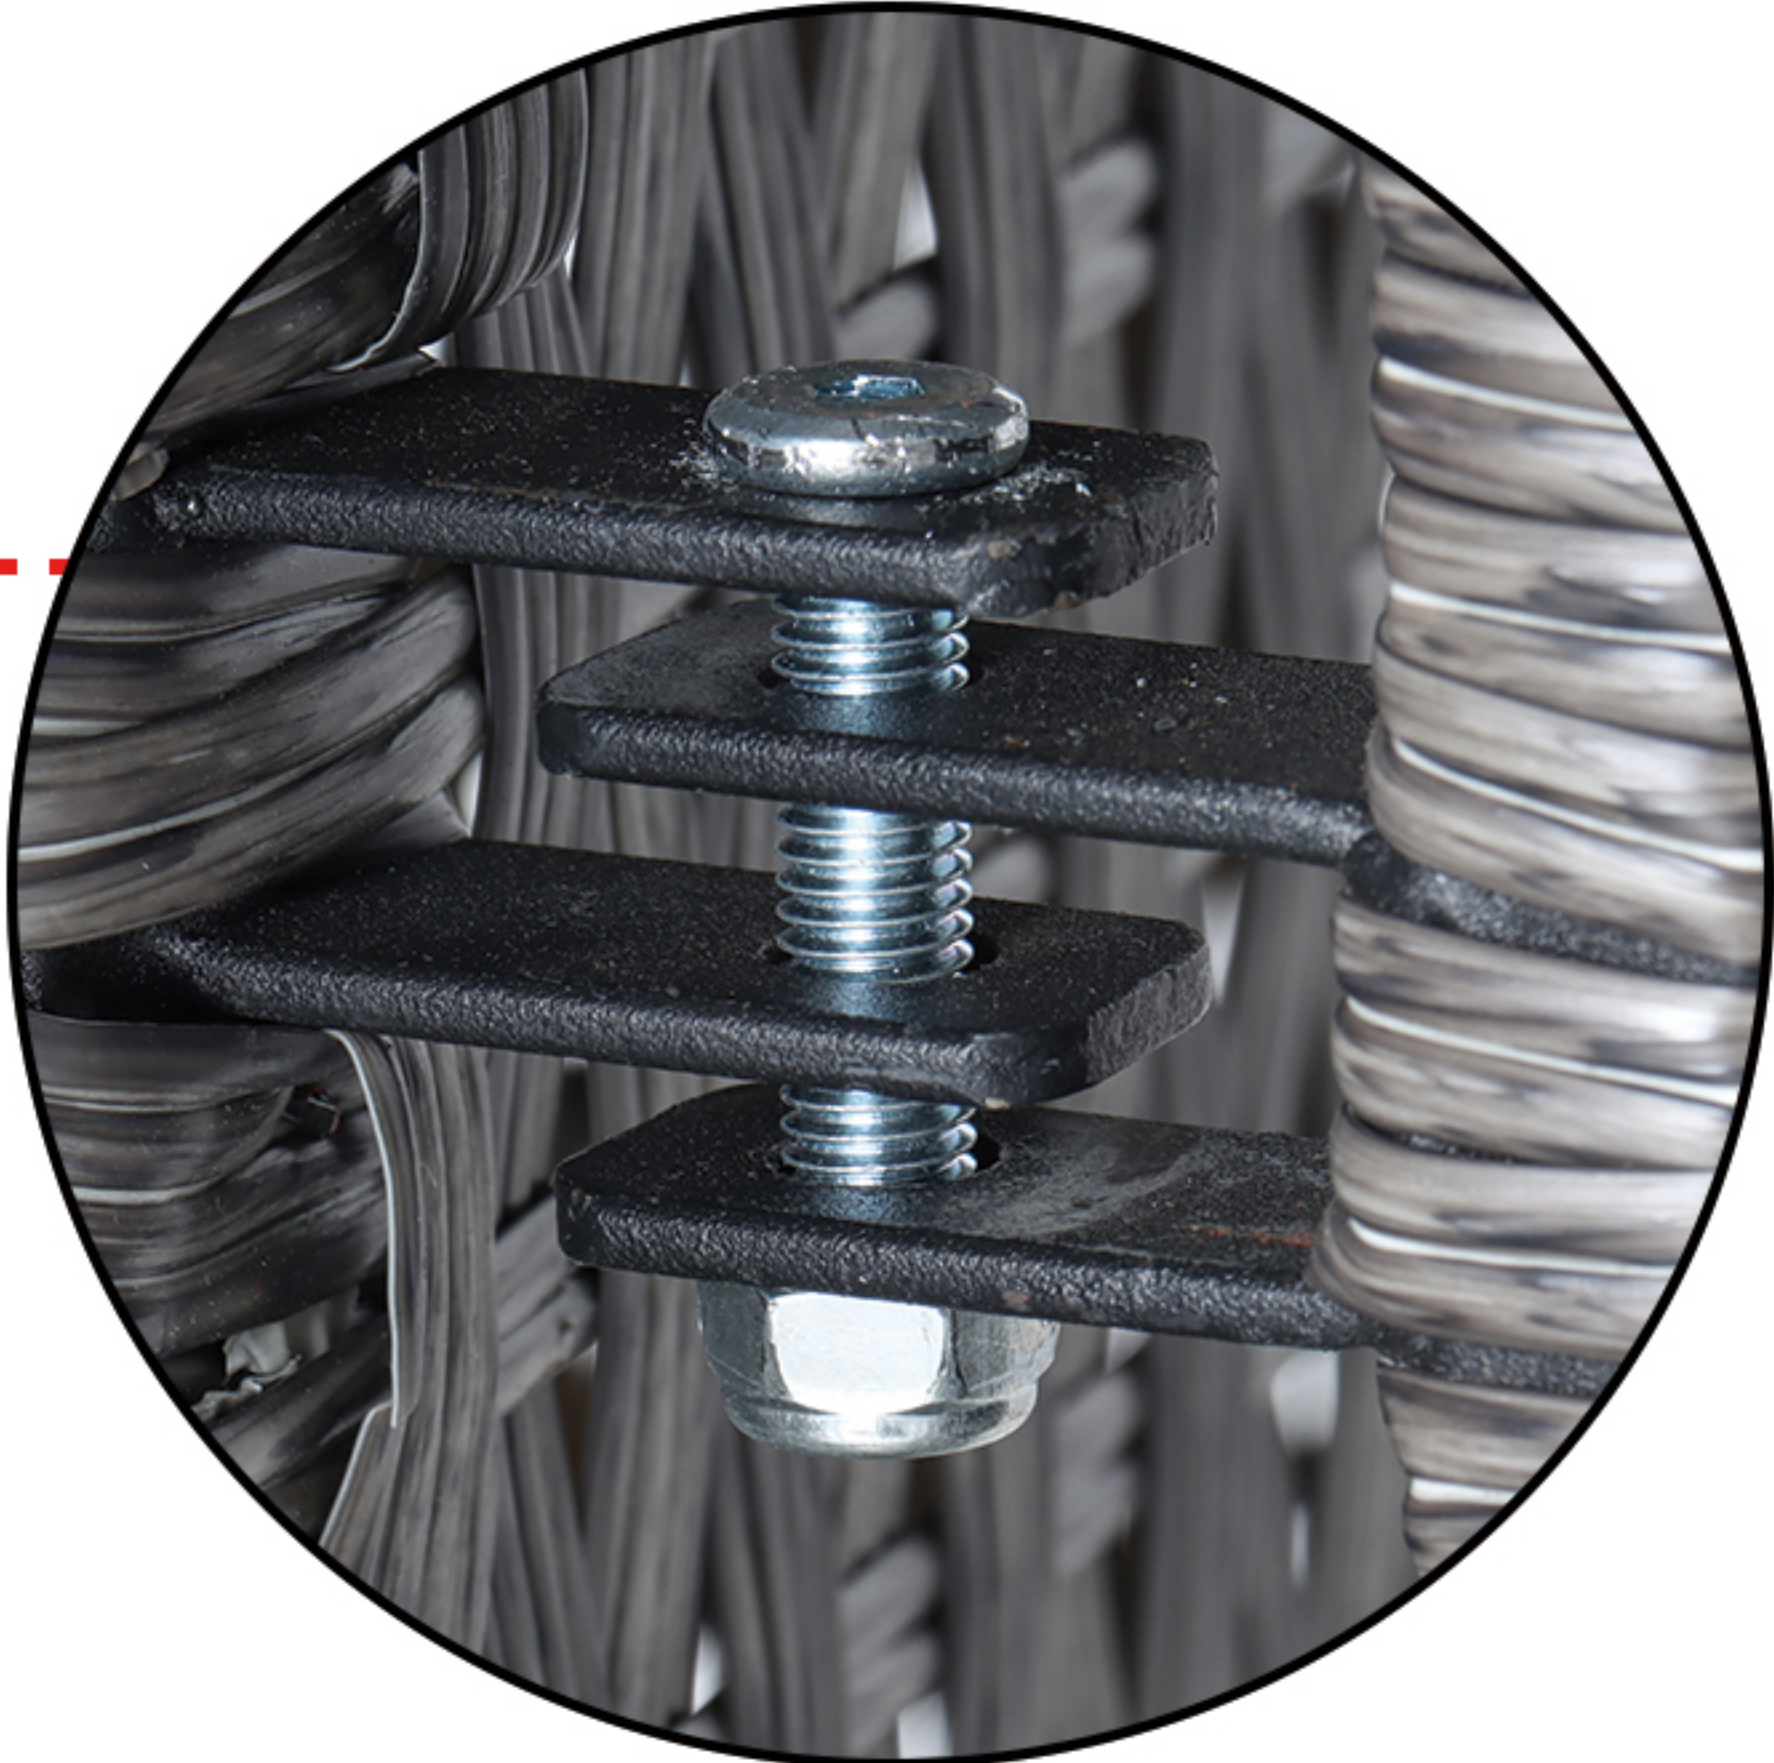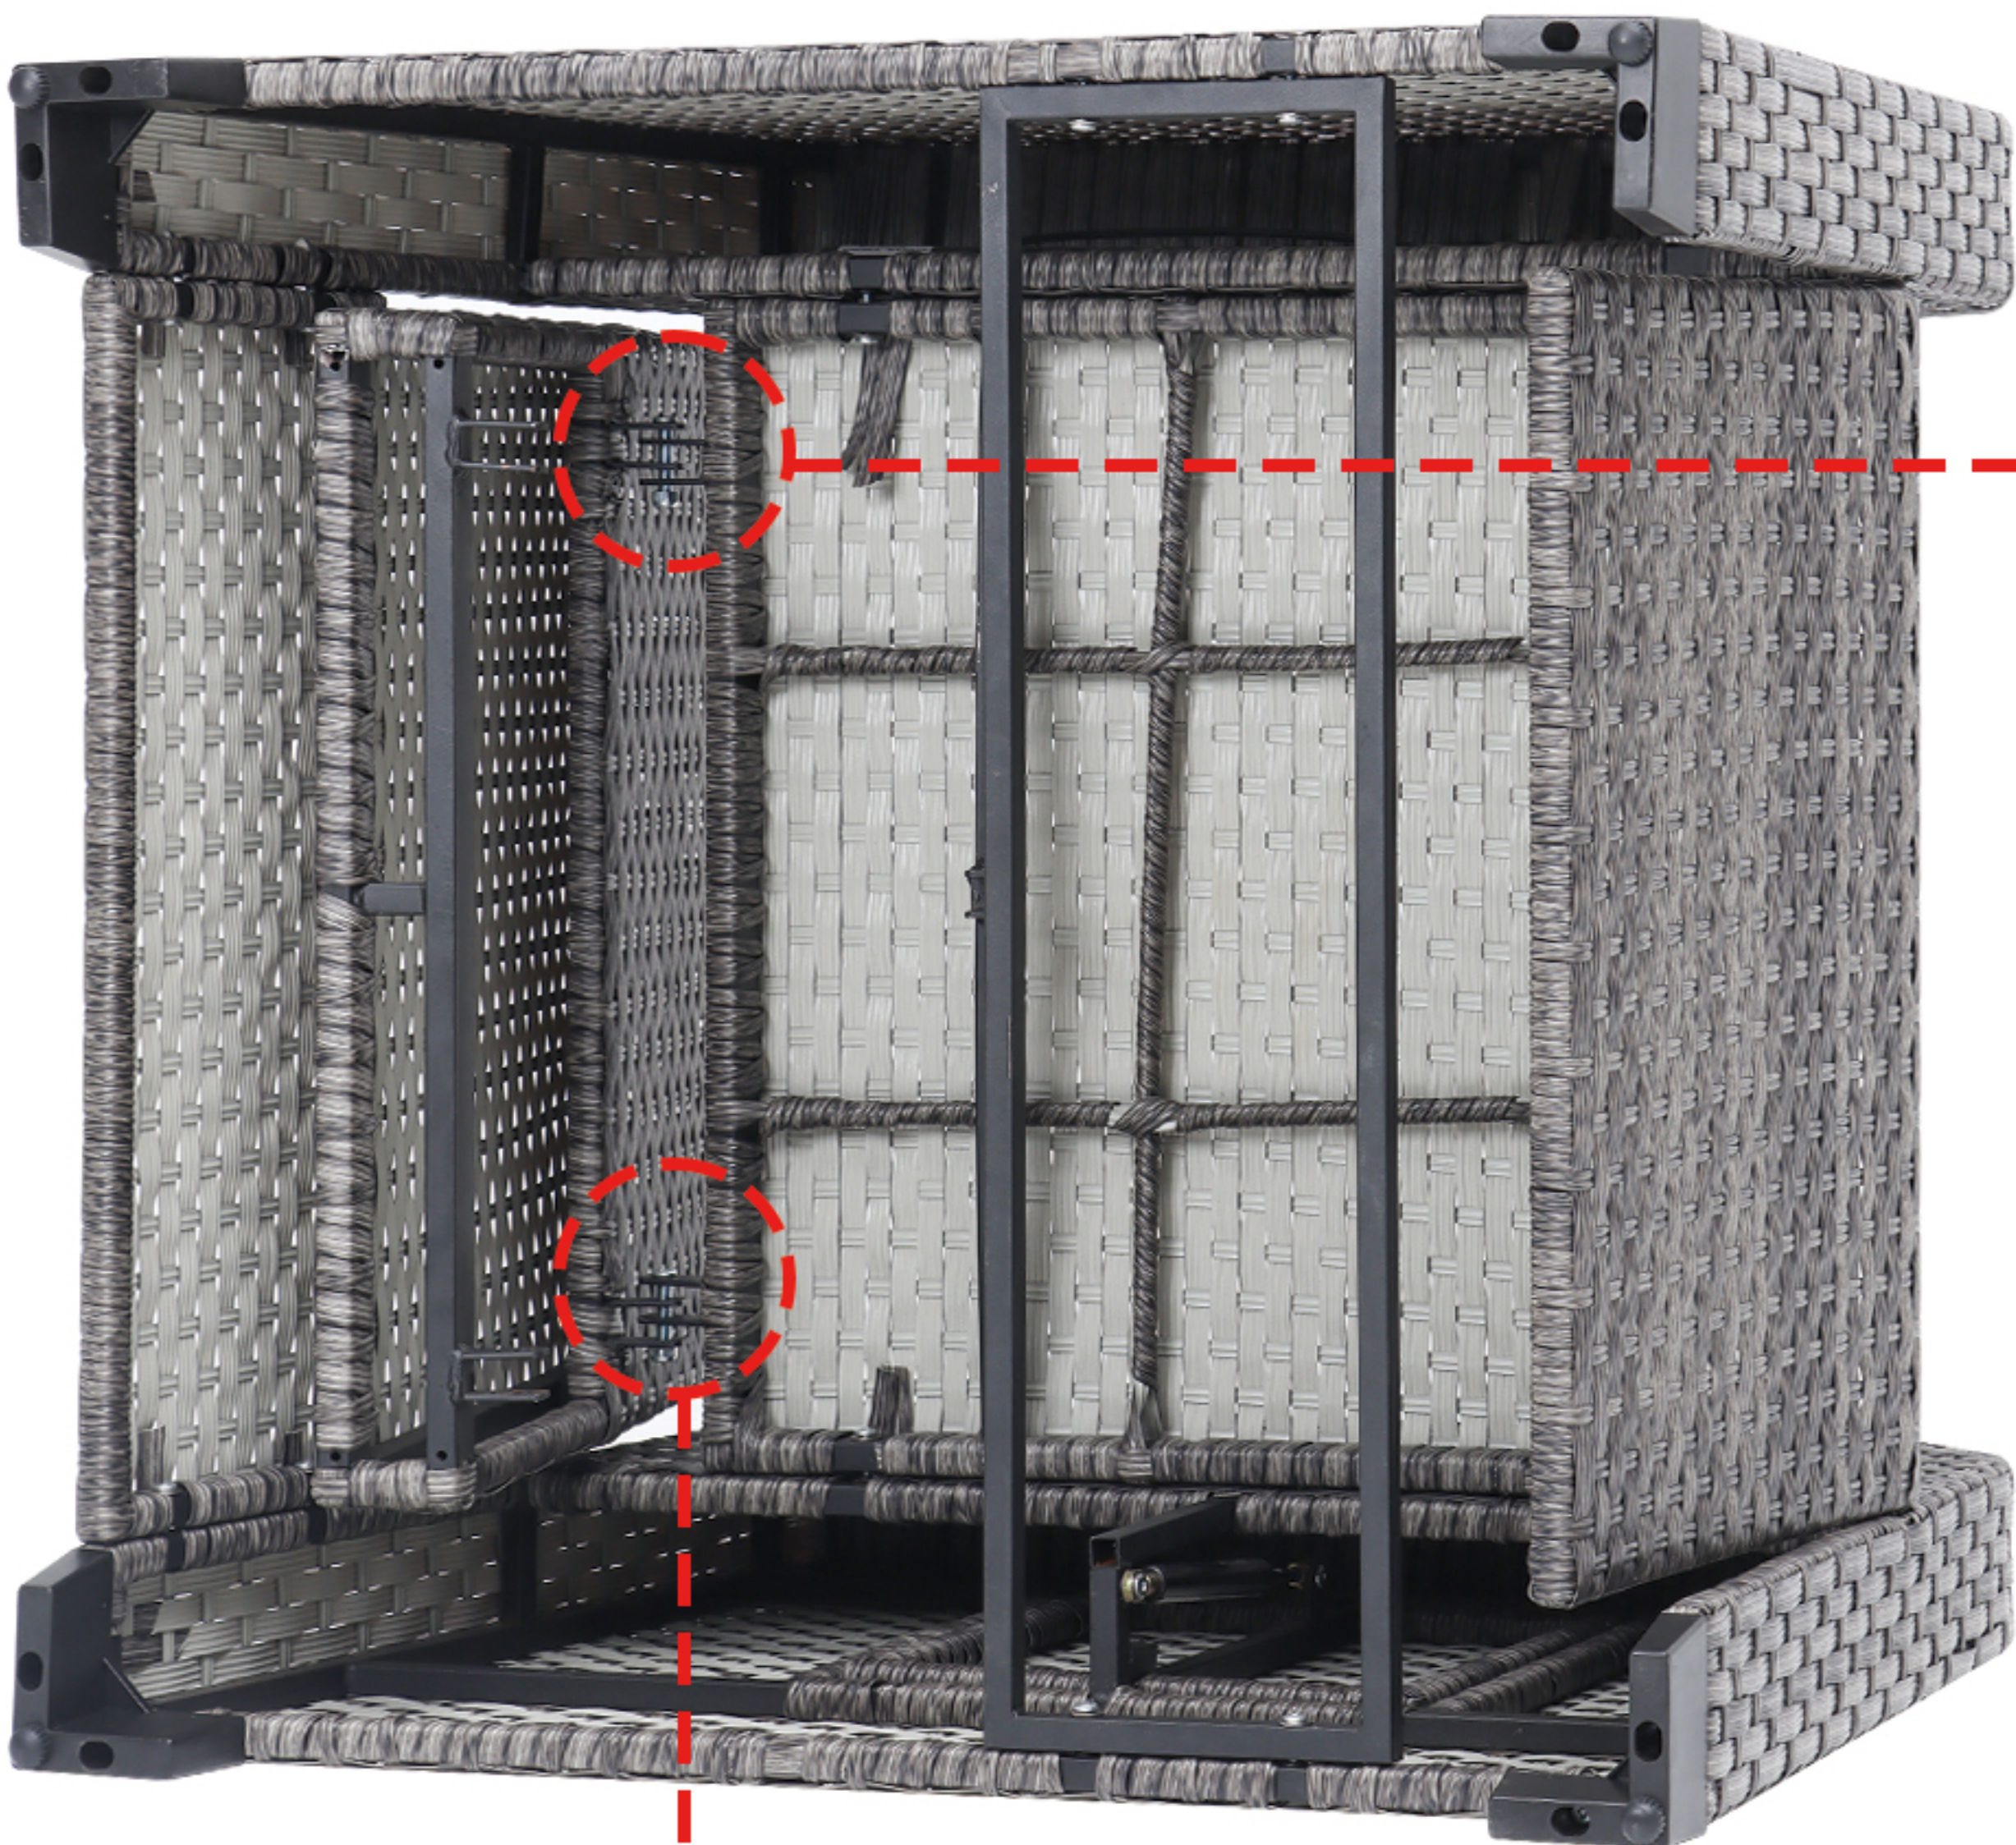


As pitcure shown

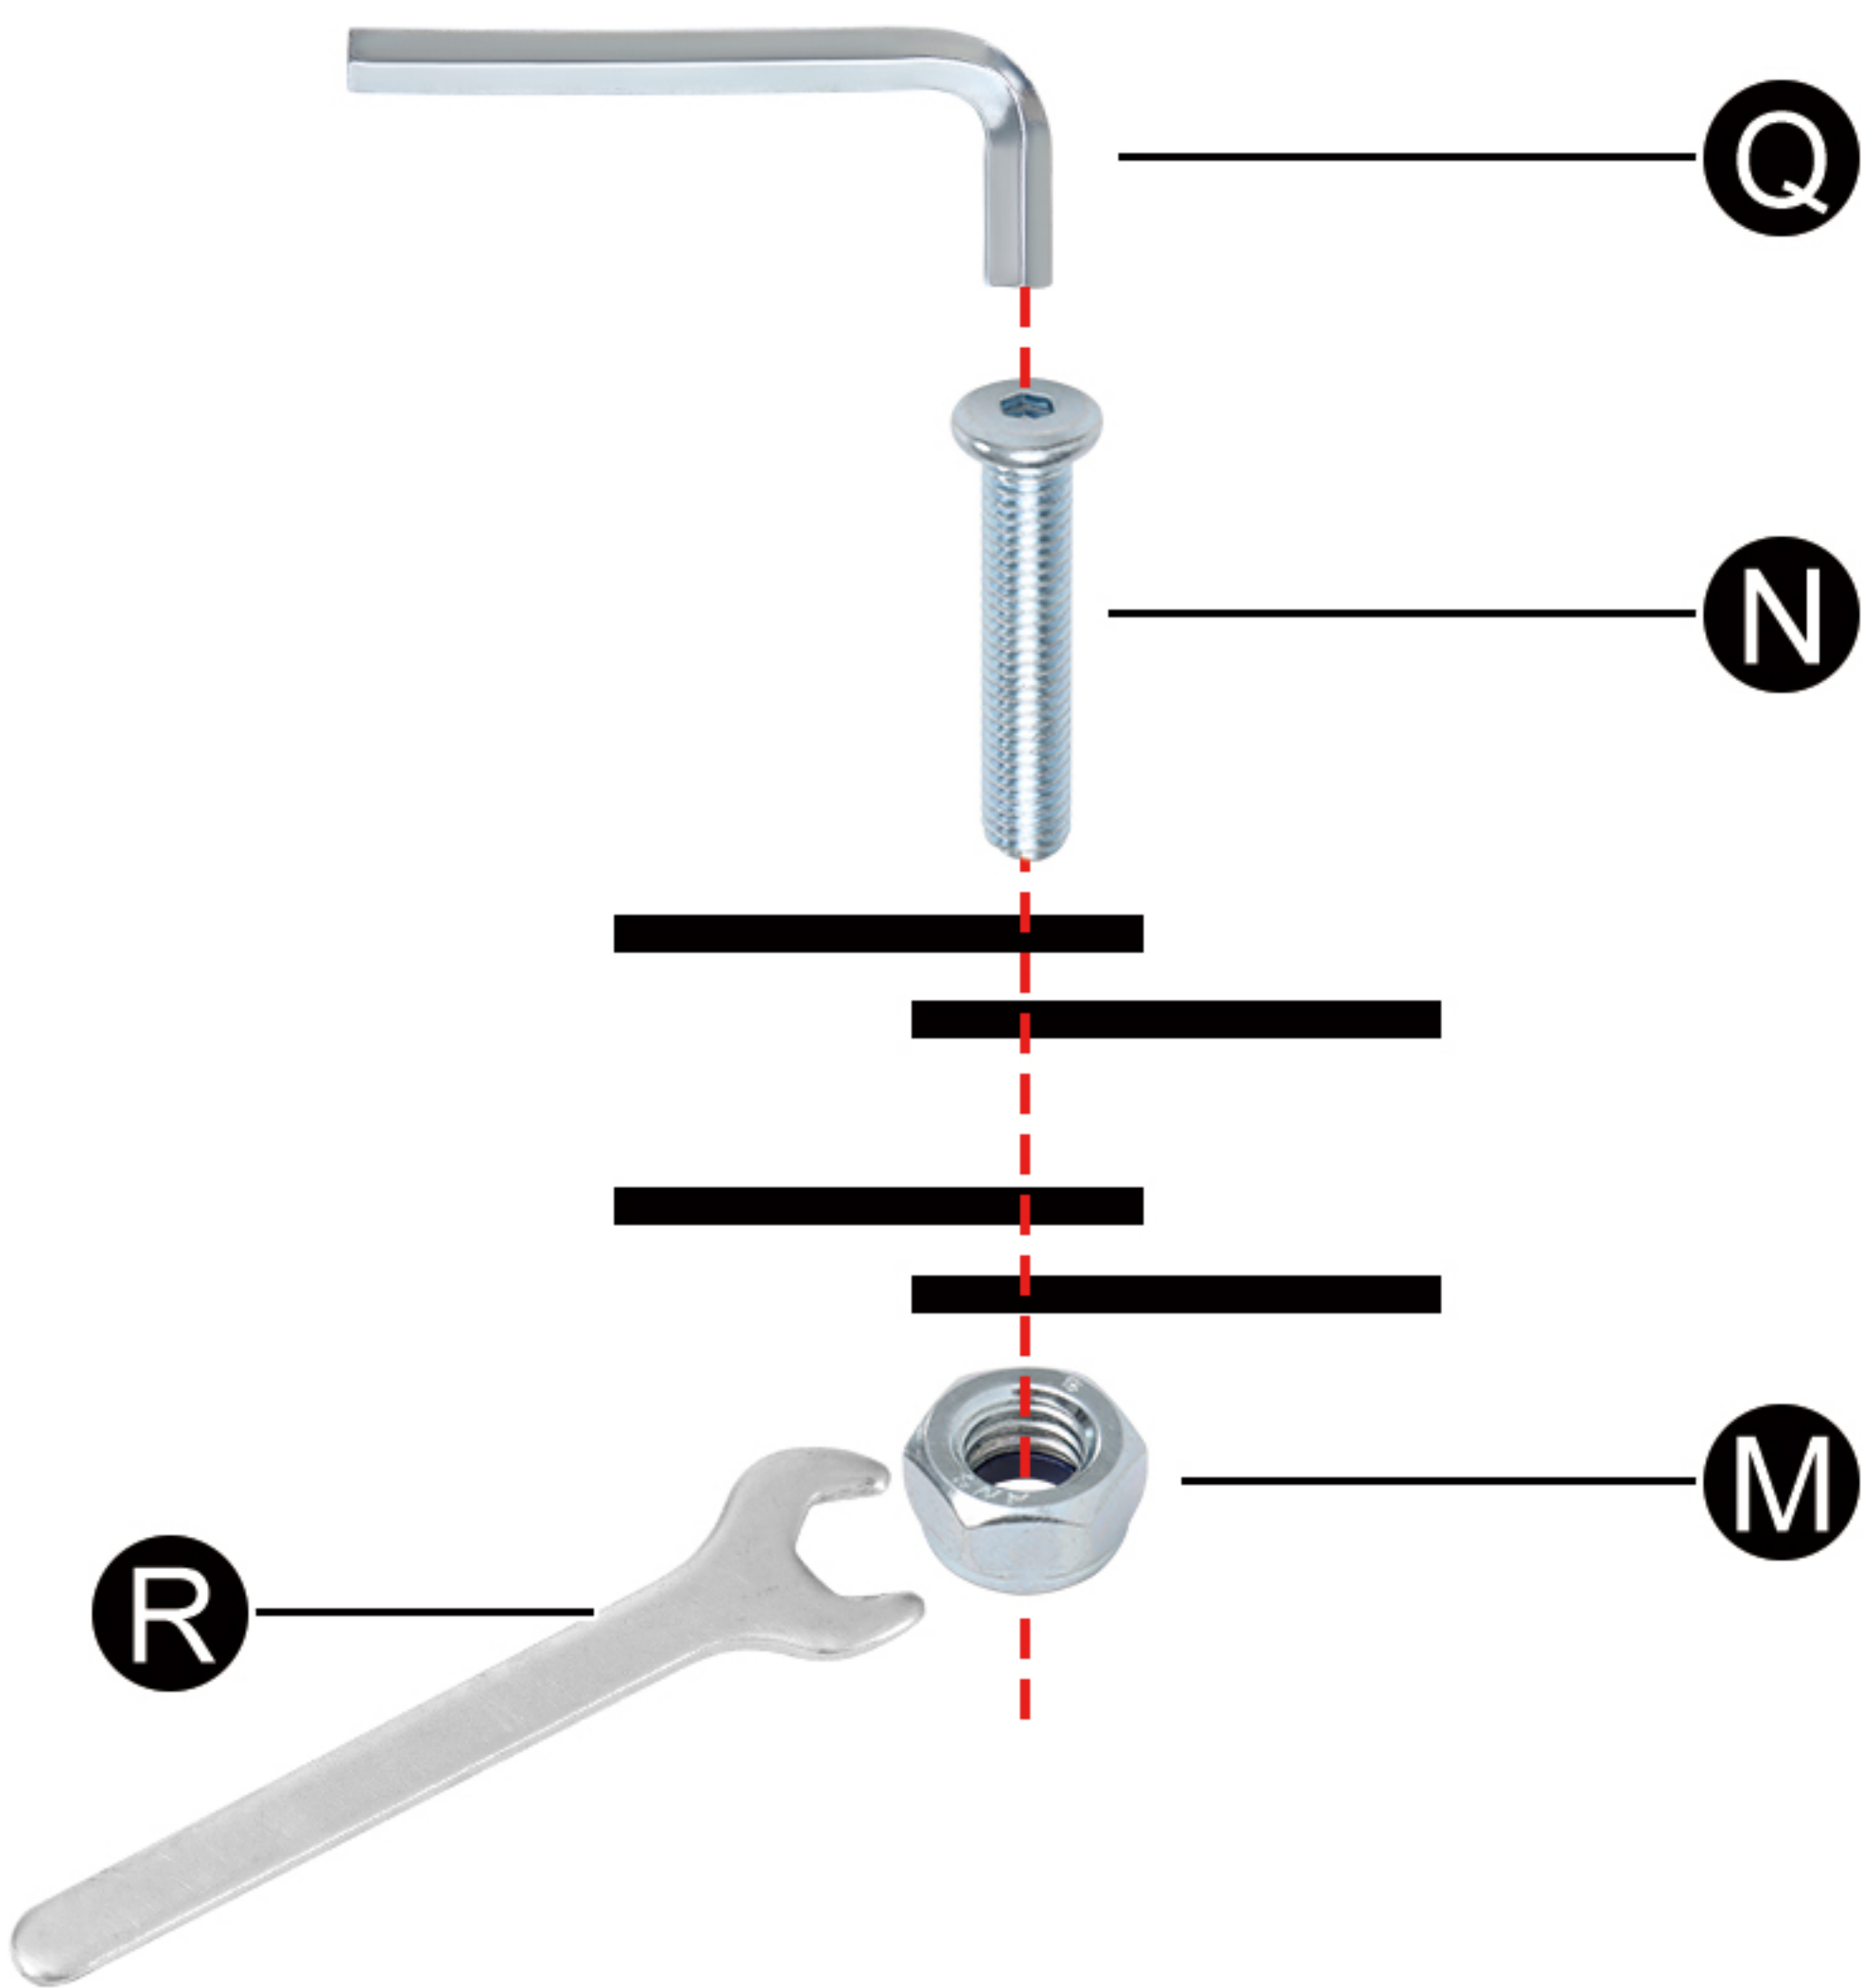





Step 9: Take the Pneumatic Rod from the Right Armrest [B], then connect the Pneumatic Rod with Seat Base [D] and Footrest Panel [E] with Screws [N] and Nut [M] by using tool [Q] as picture shown in the red parts.

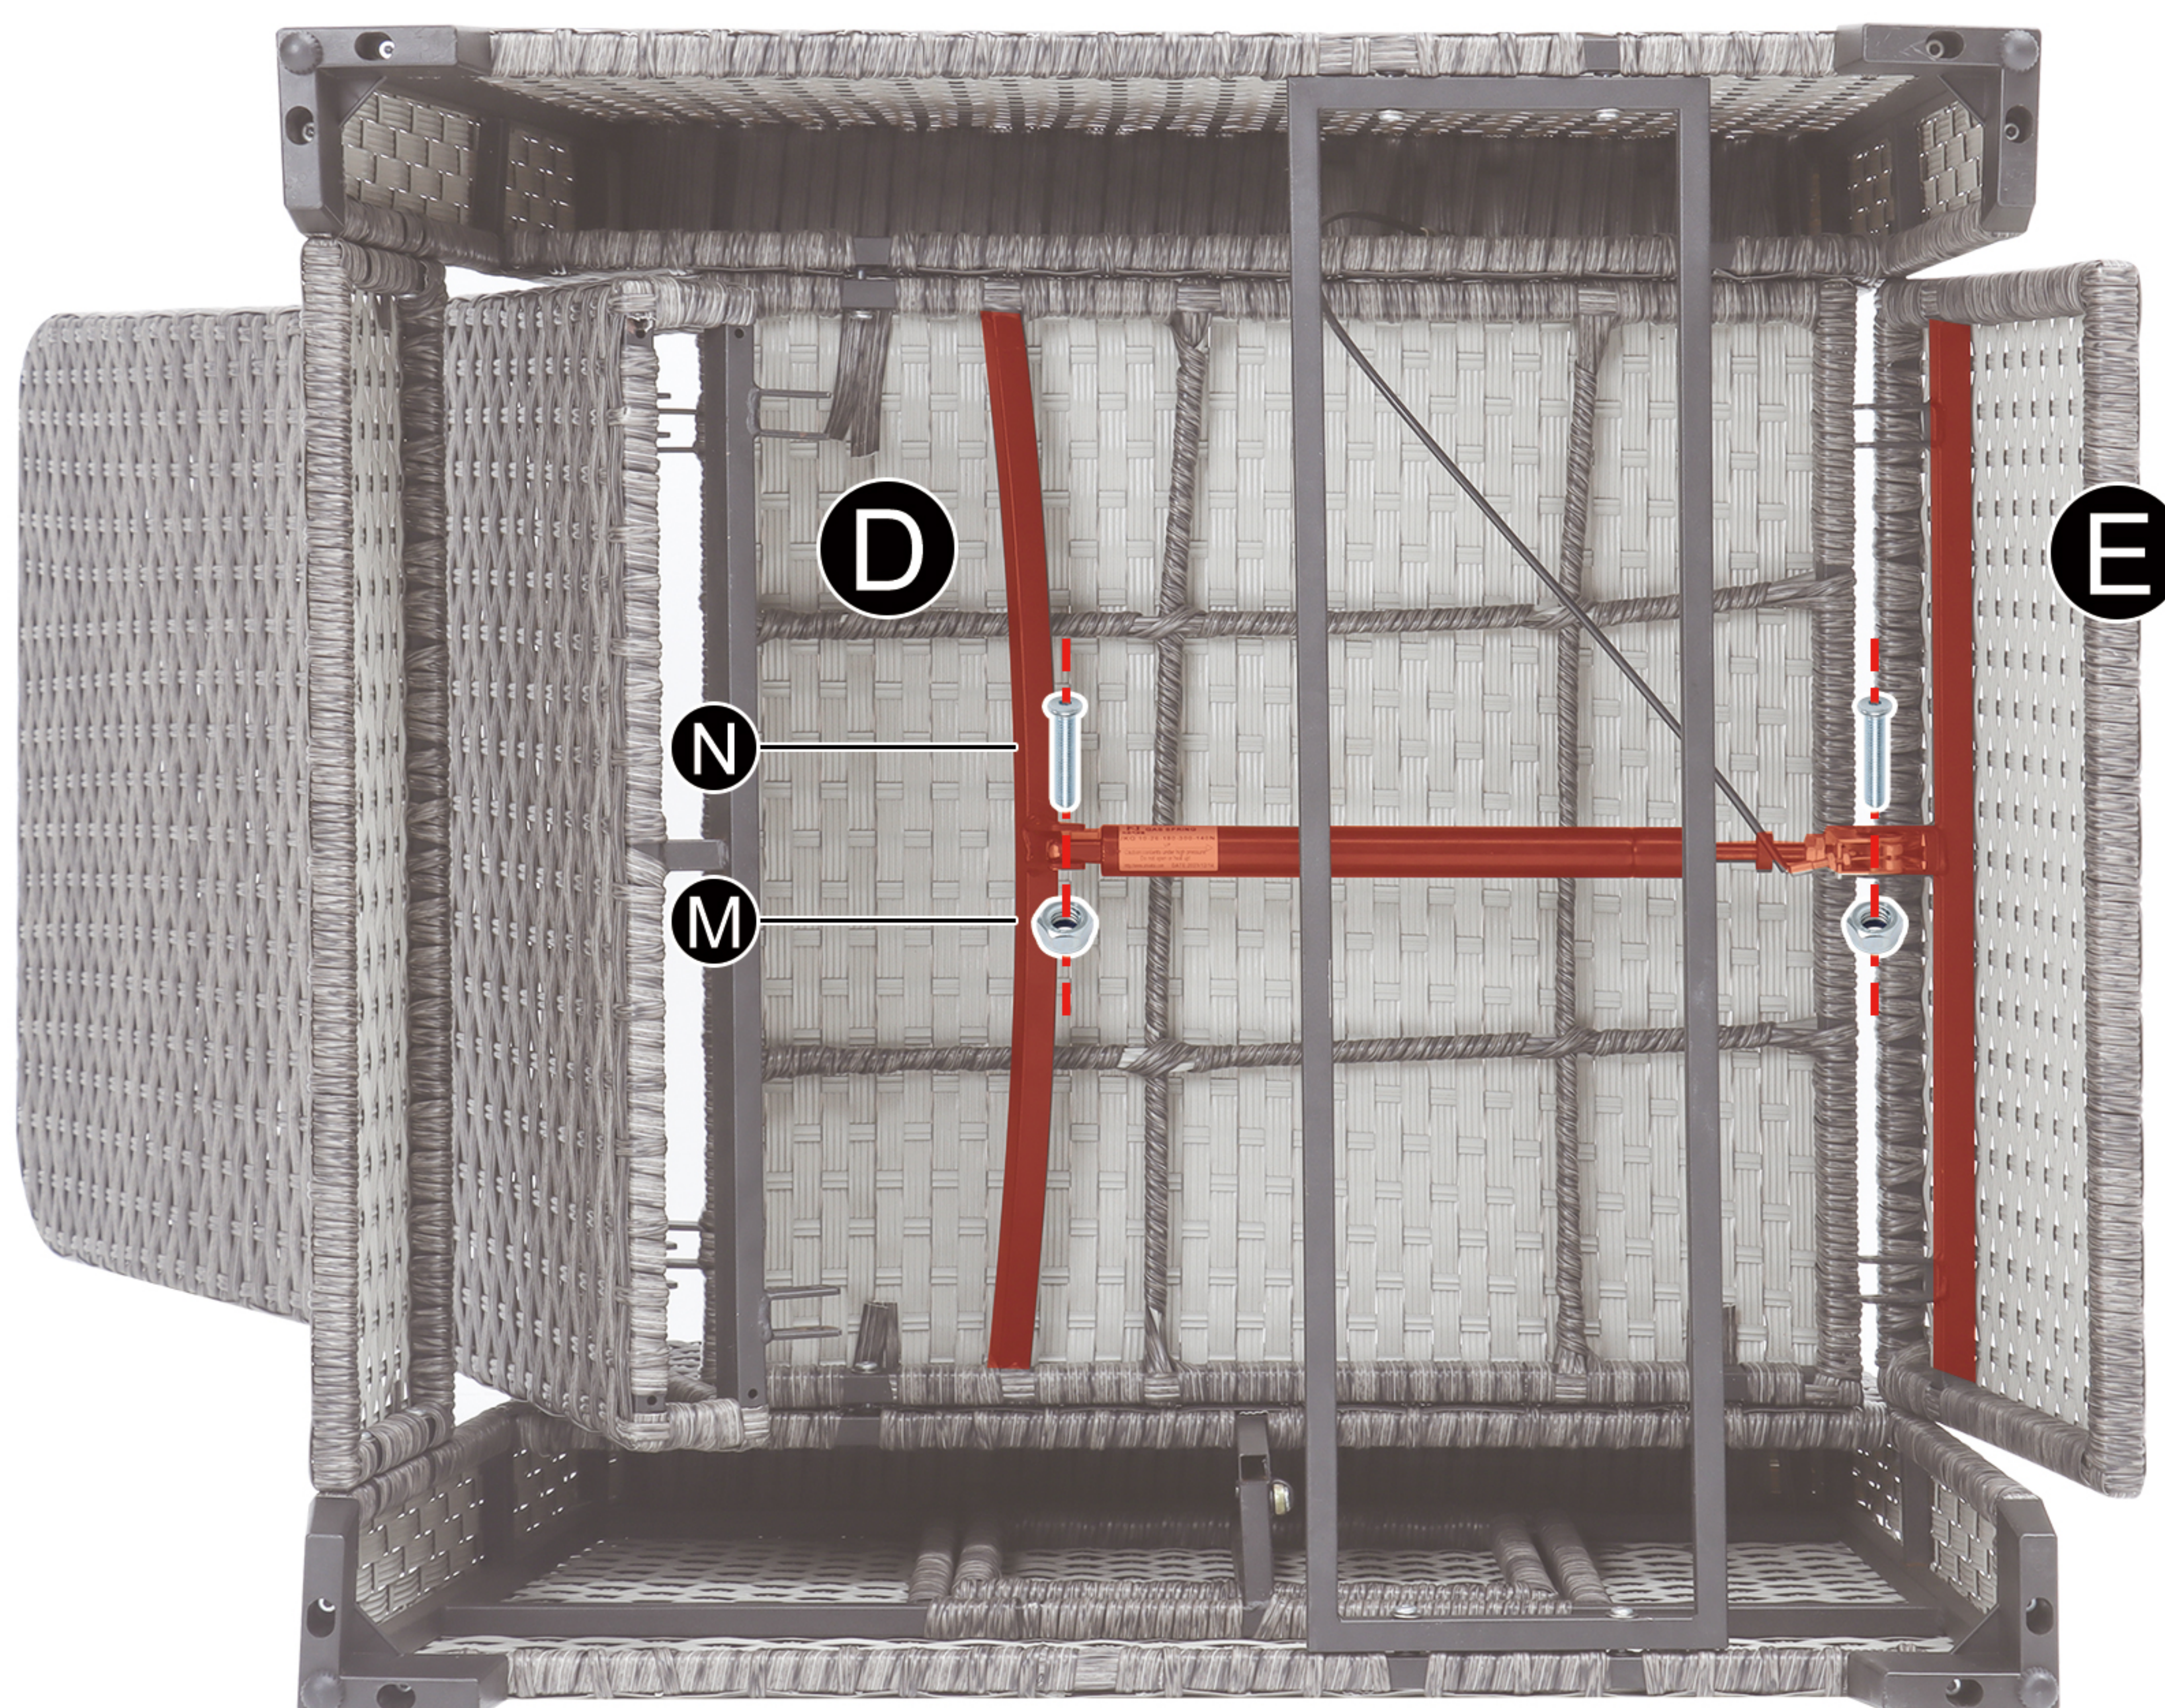

**Tighten the screws**



Step 10: Connect the 2PCS Connecting Rod [J] to Backrest [C] and Footrest [E] with Screws [N] and Nut [M] by using tool [Q].

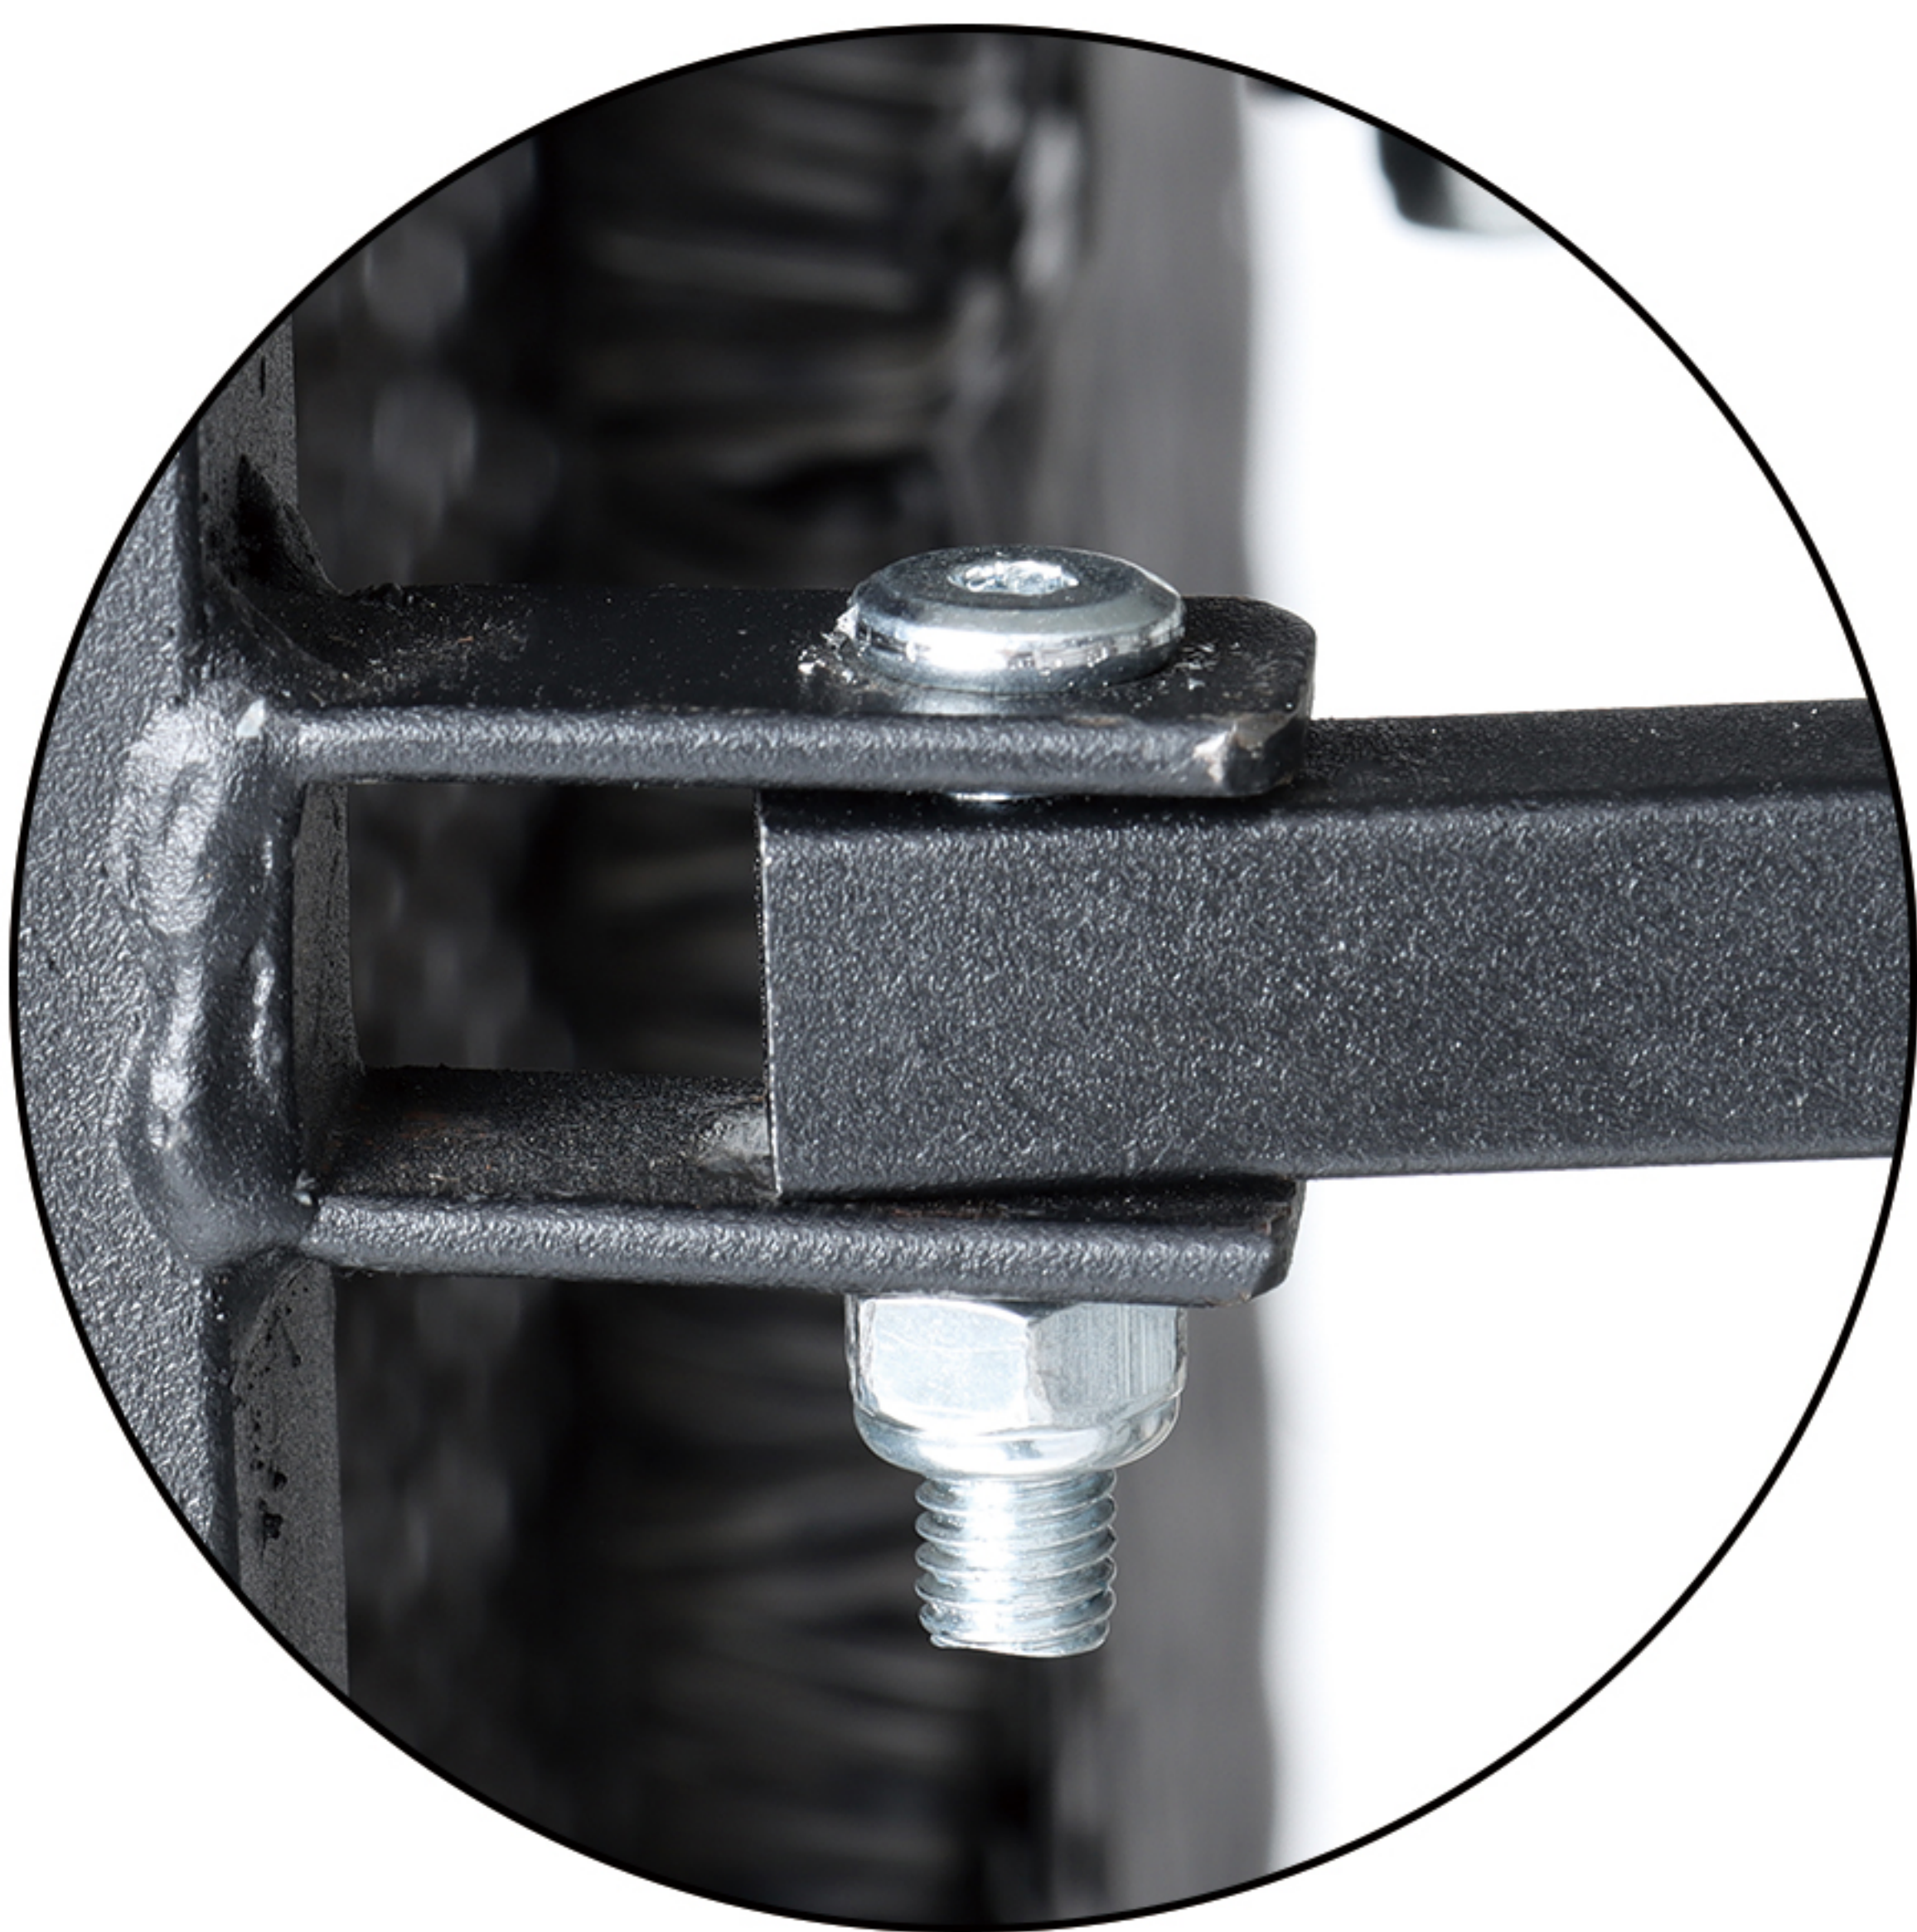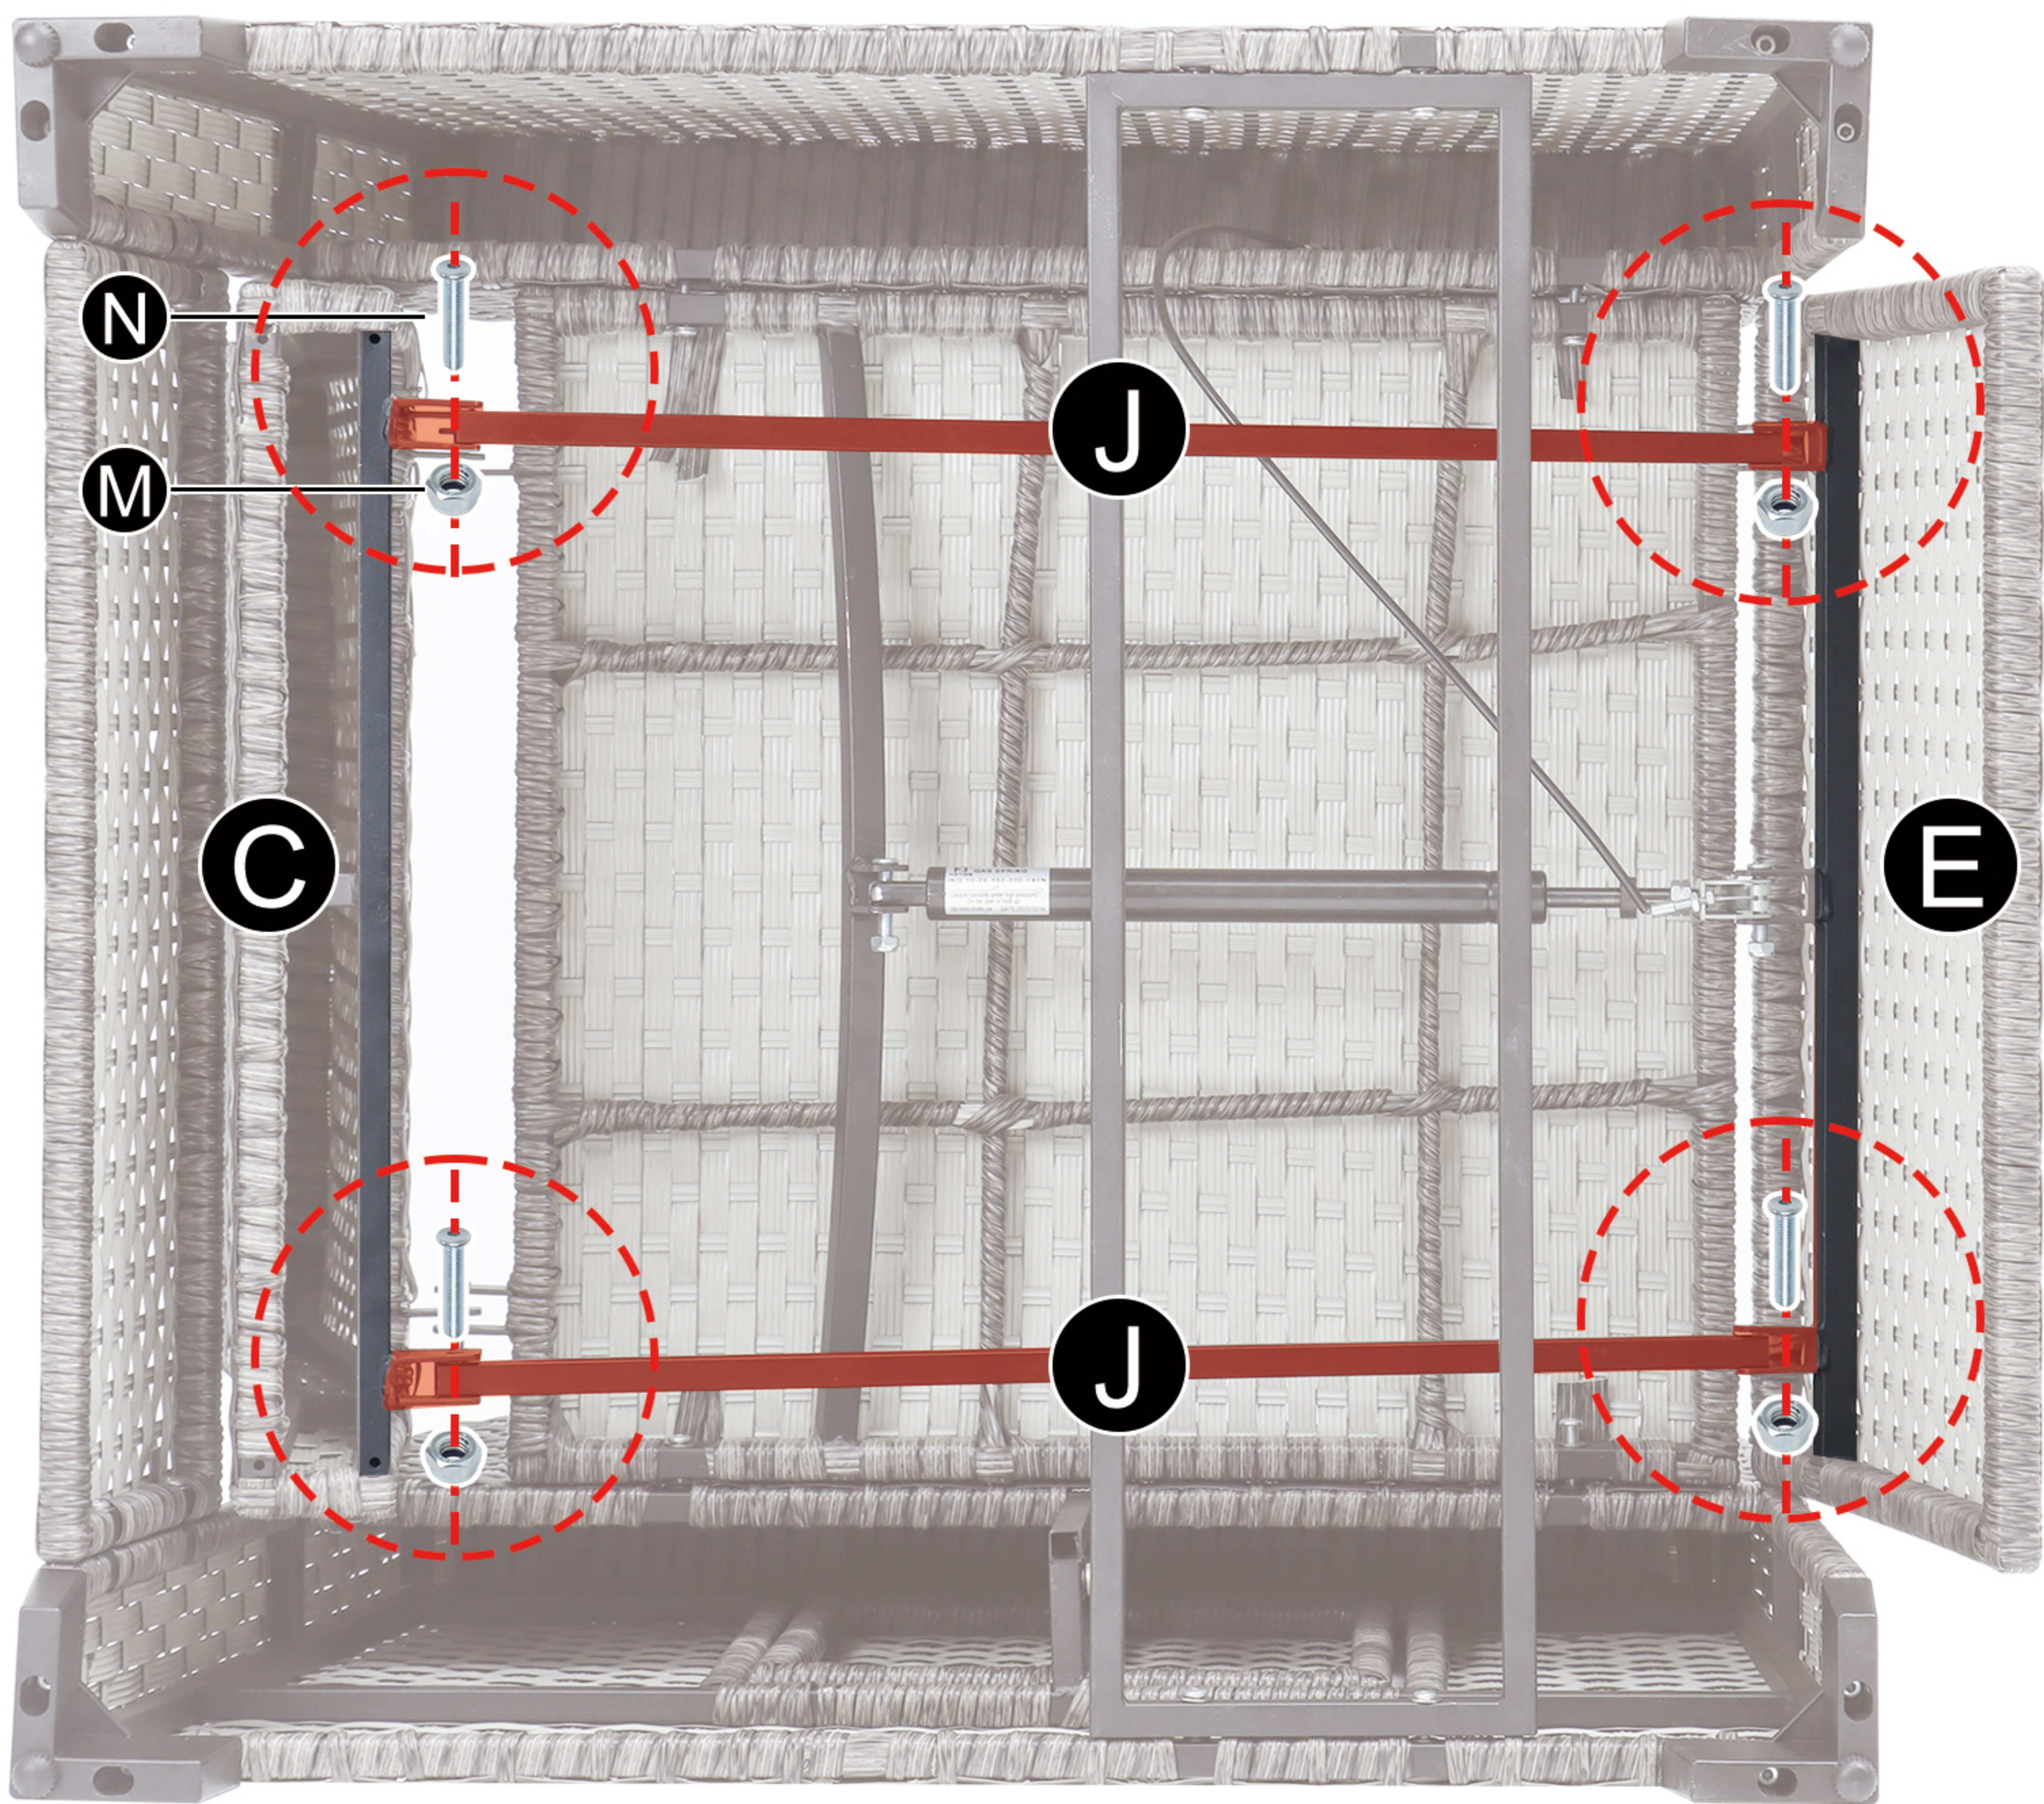


**Tighten the screws**



Step 11: After installation, lay it flat on the ground as the picture shown as below.




Step 12: Stick the Backrest Cushion [H] to the Seat Cushion [G] as picture shown as below.

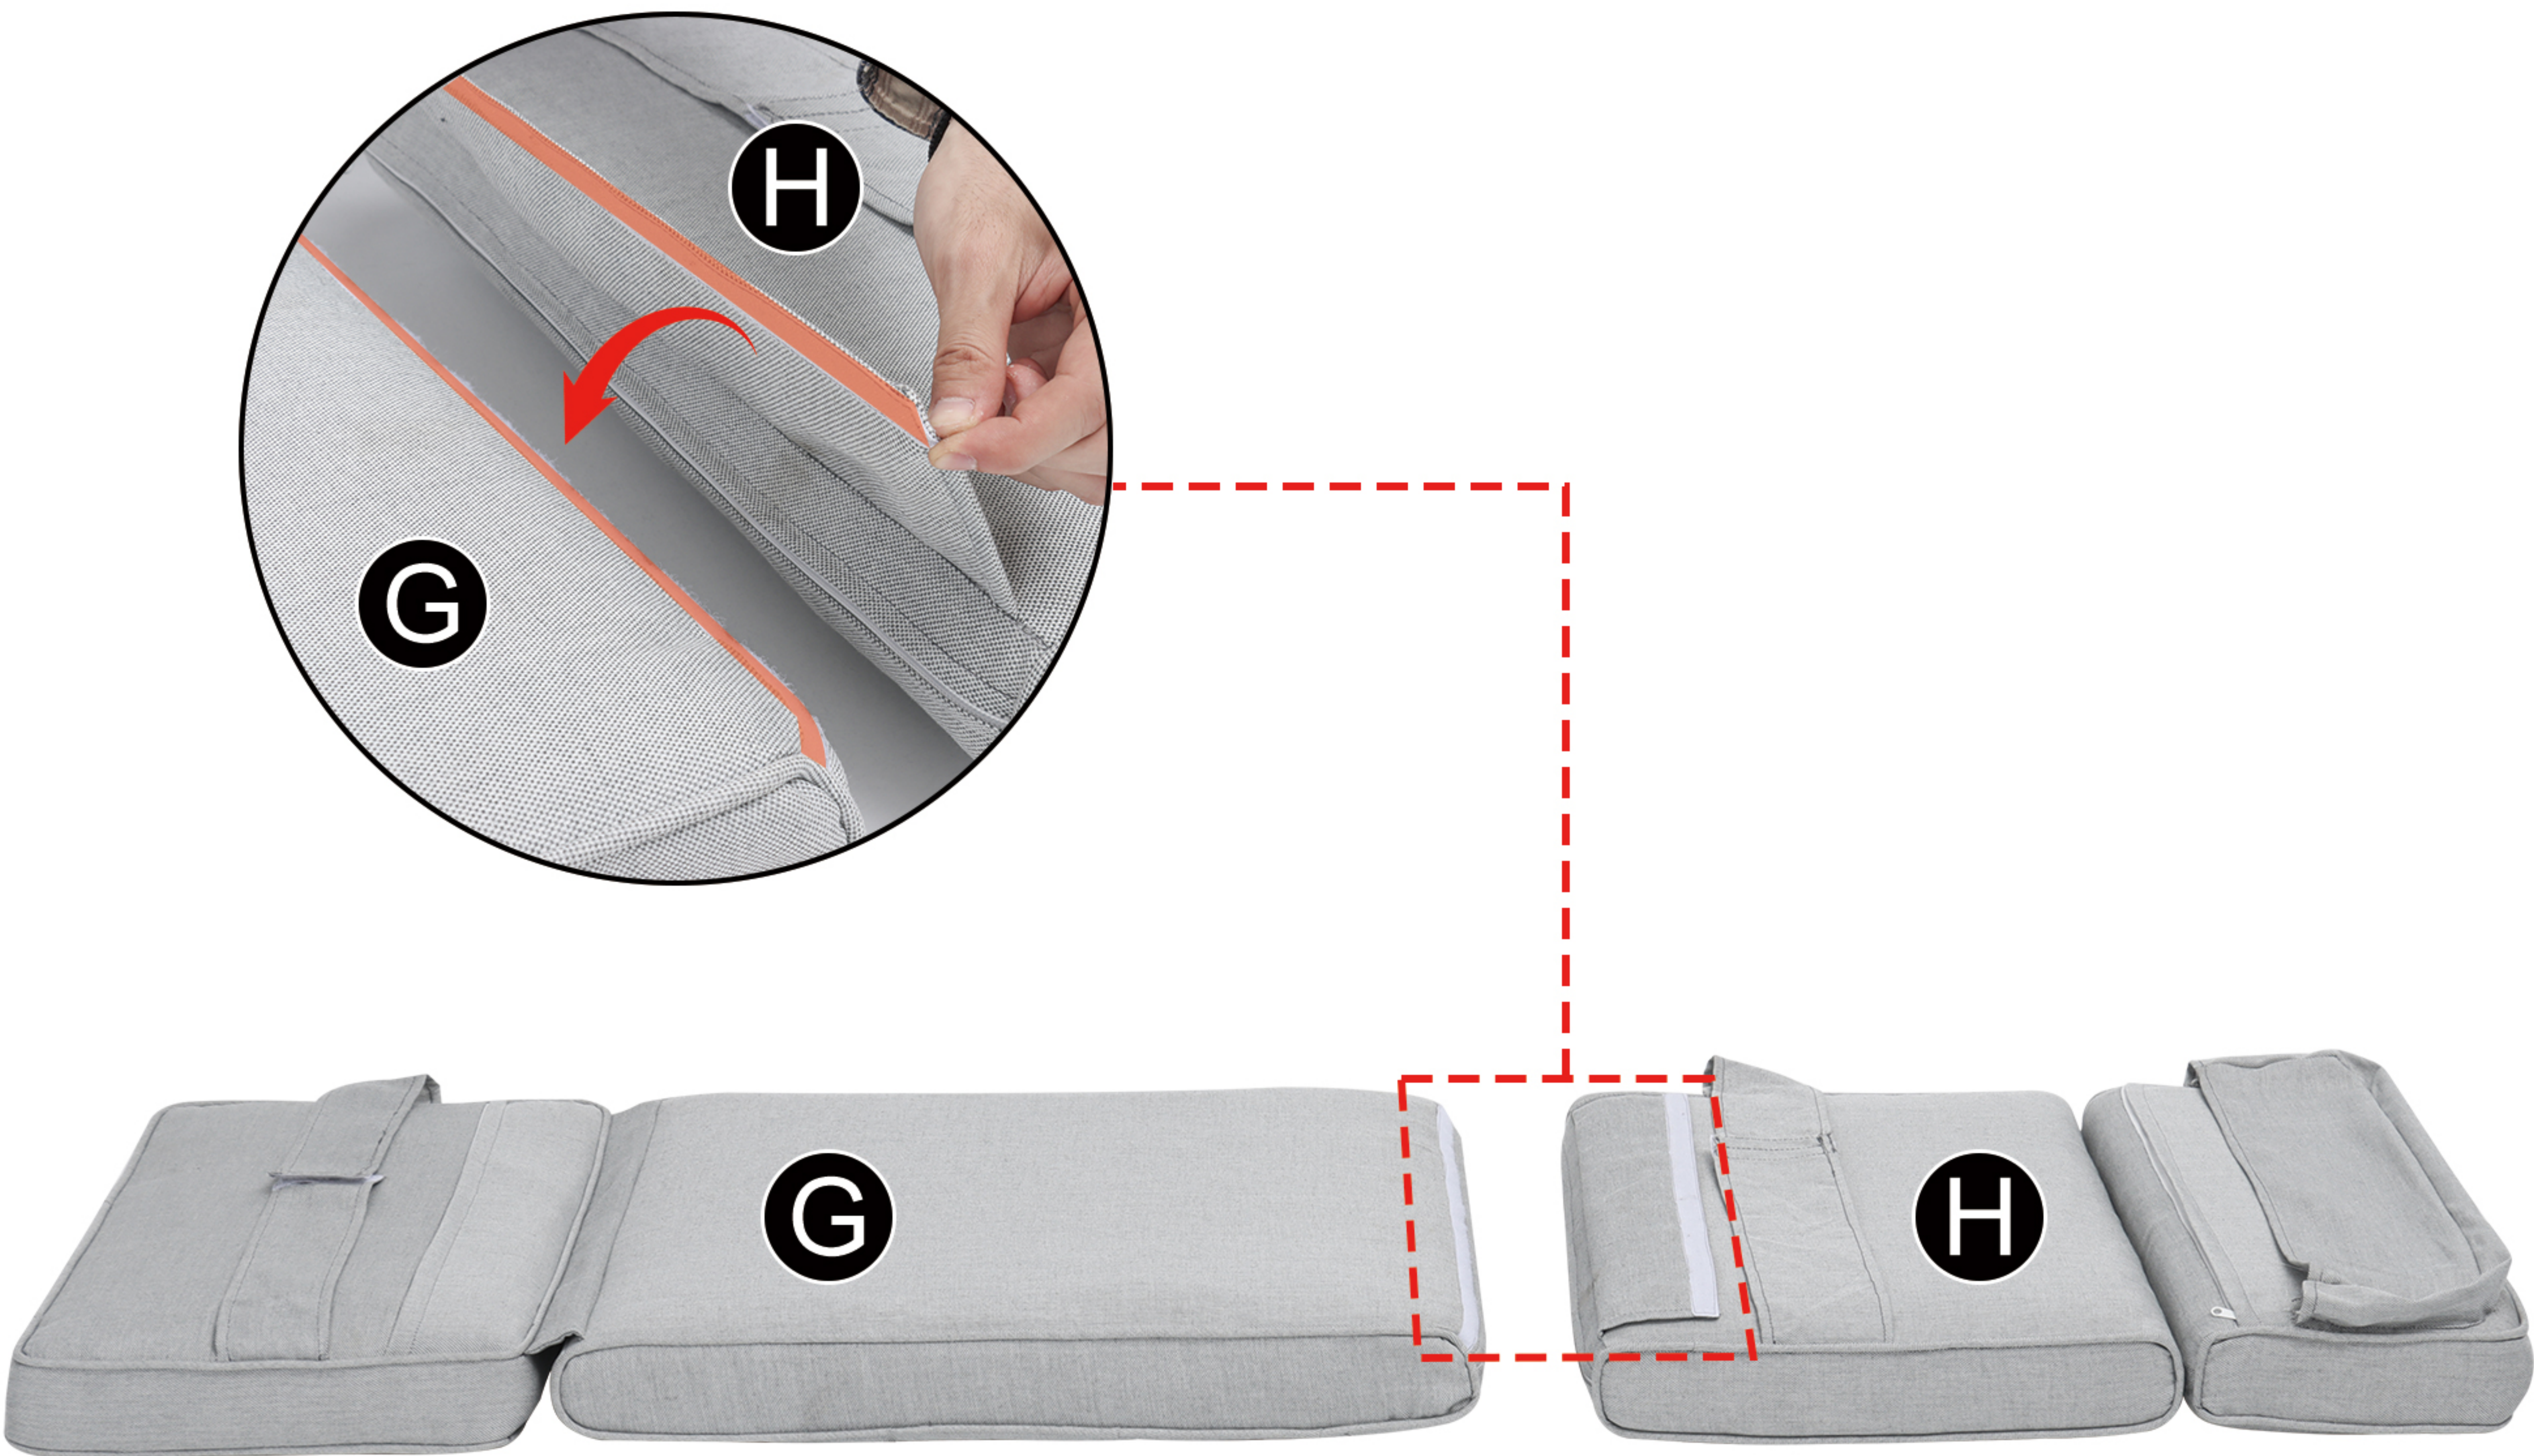



Step 13: Put it on the Outdoor Recliner and tie it tightly.

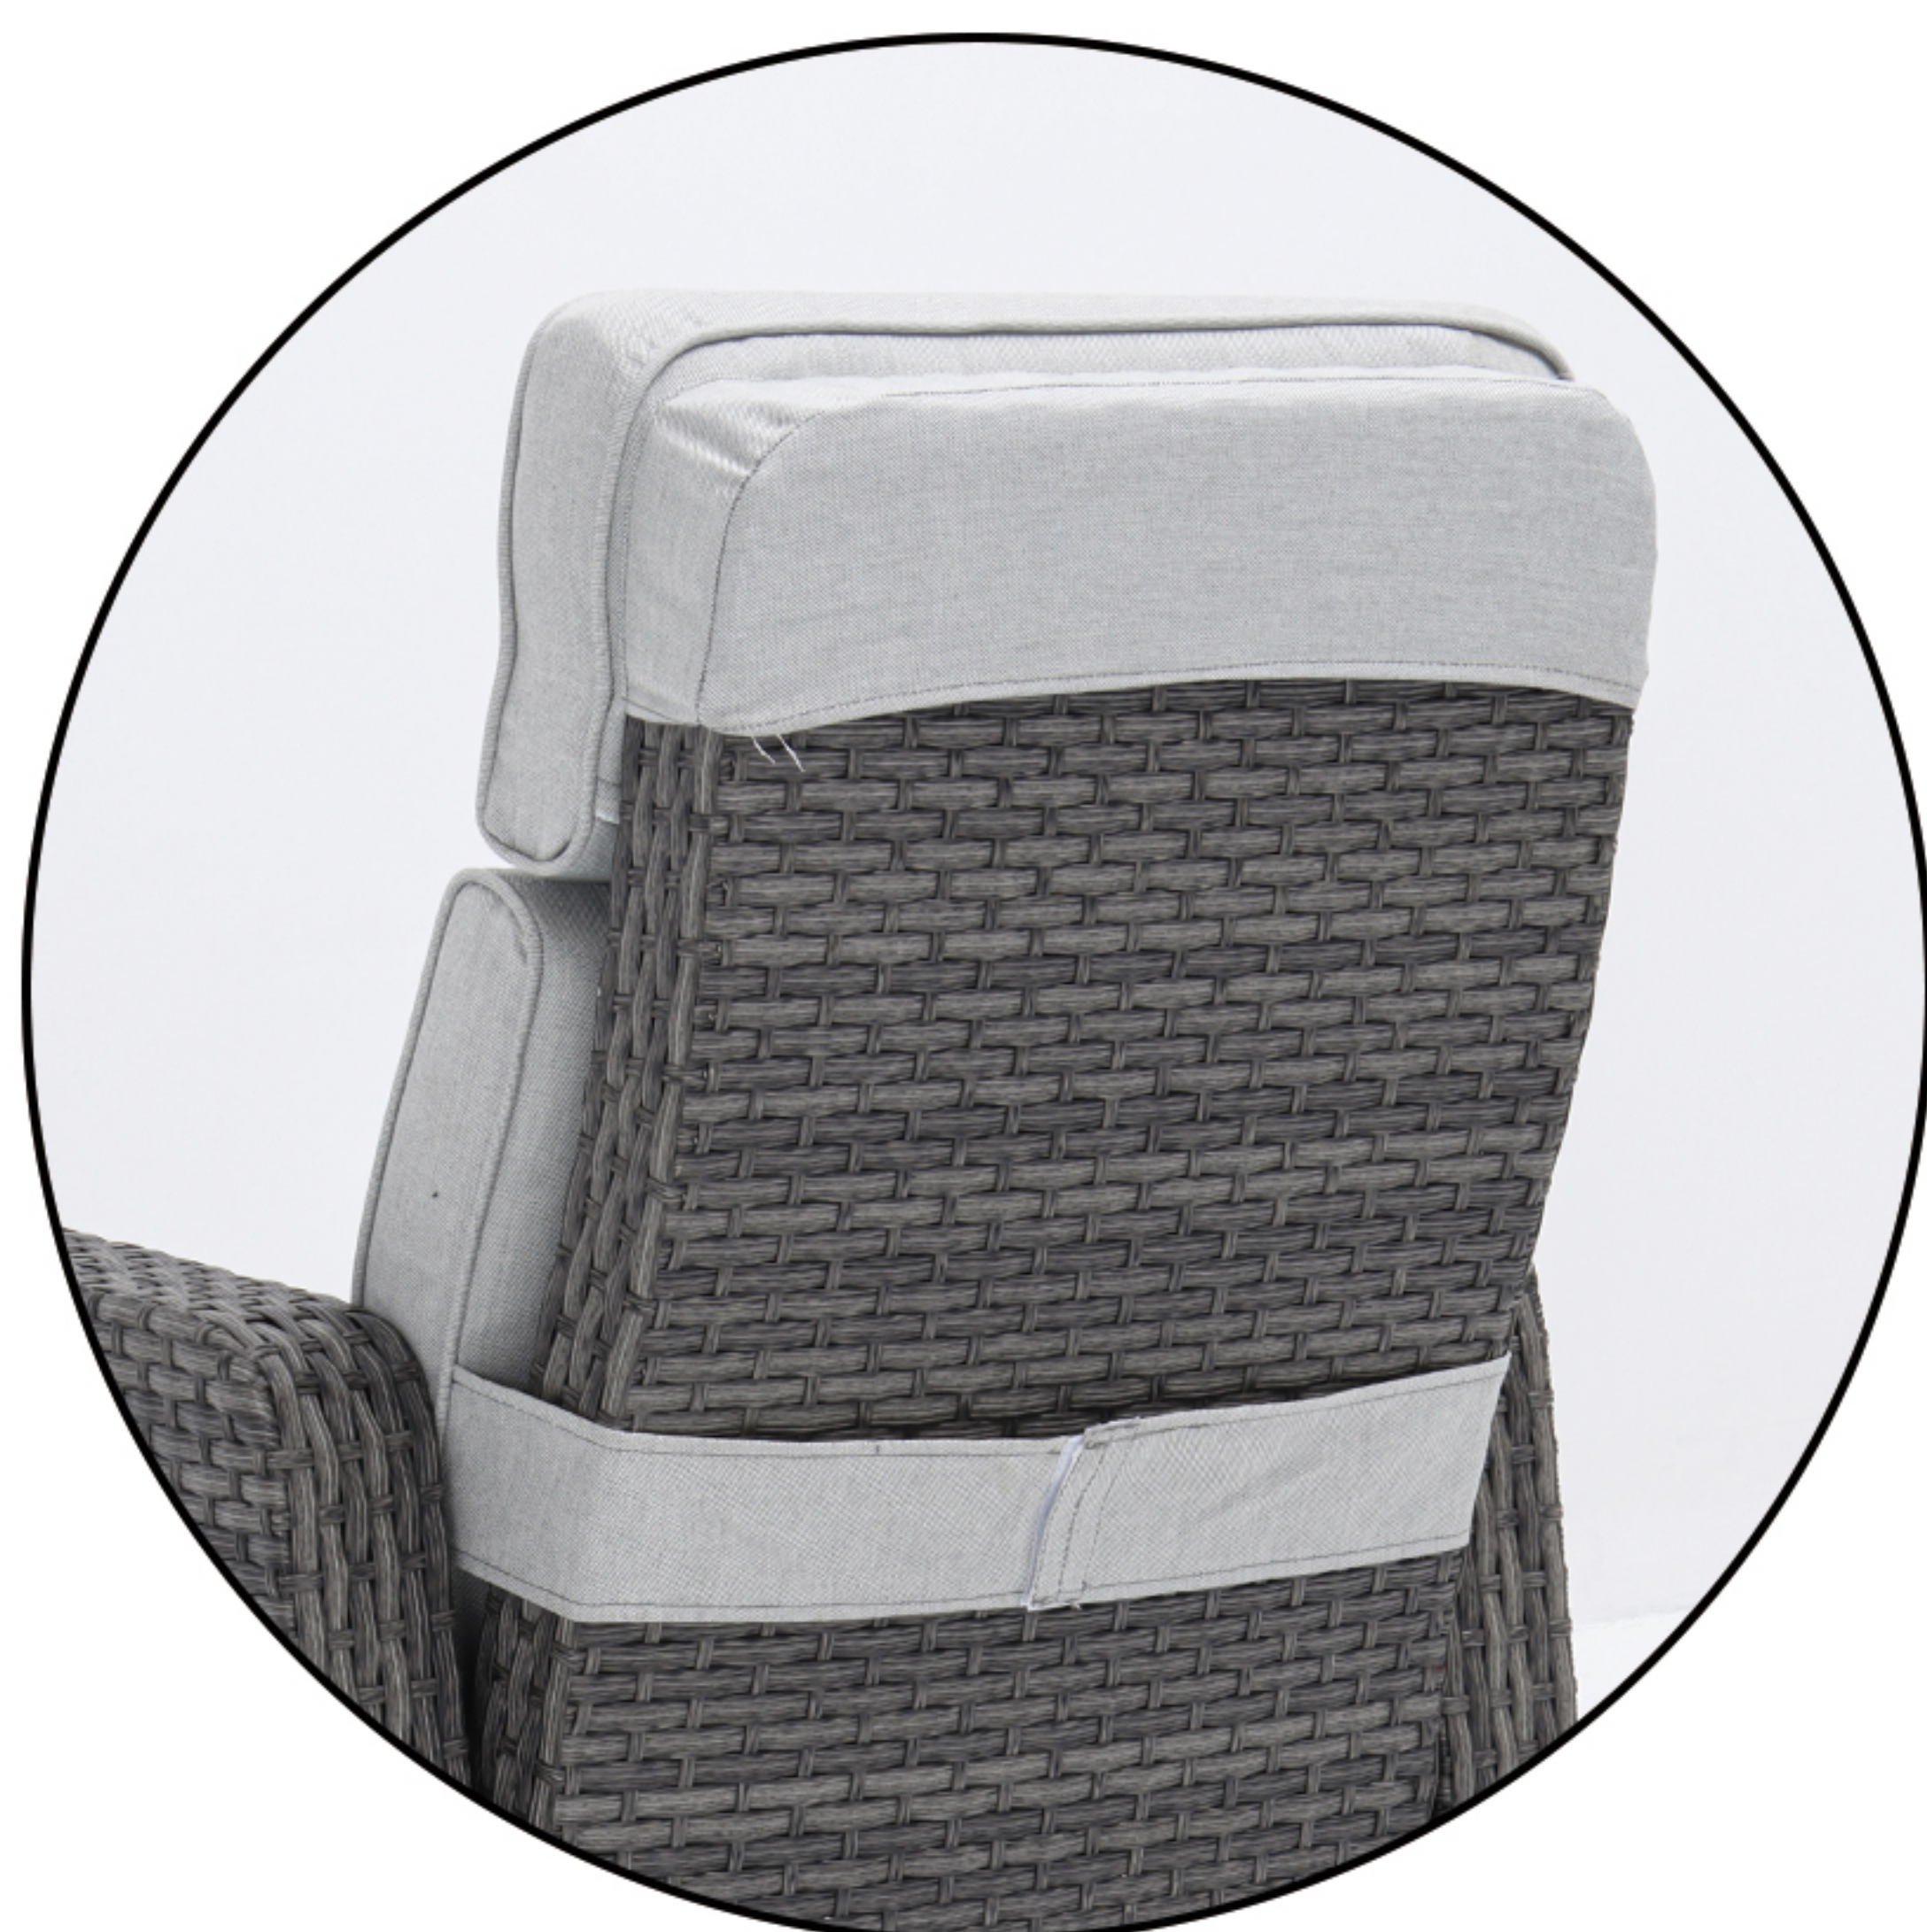

**Tie it tightly**





Step 14: Keep pushing the button on the Right Armrest to lie down for relaxing outdoor.



Step 15: Keep pushing down the button, meanwhile, exert downward force on the legs, the chair can be straightened.



Keep pushing down the button, meanwhile, exert downward force on the legs, the chair can be straightened.