
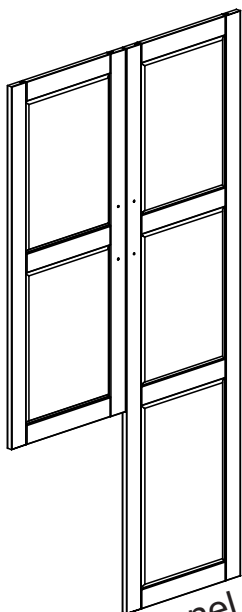



ASSEMBLY INSTRUCTIONS

METRO 2-DOOR WARDROBE



SKU 7101D / 7101M - White
SKU 7103D / 7103M - Mocha
SKU 7105D / 7105M - Gray
SKU 7106D / 7106M - Java
SKU 7107D / 7107M - Black

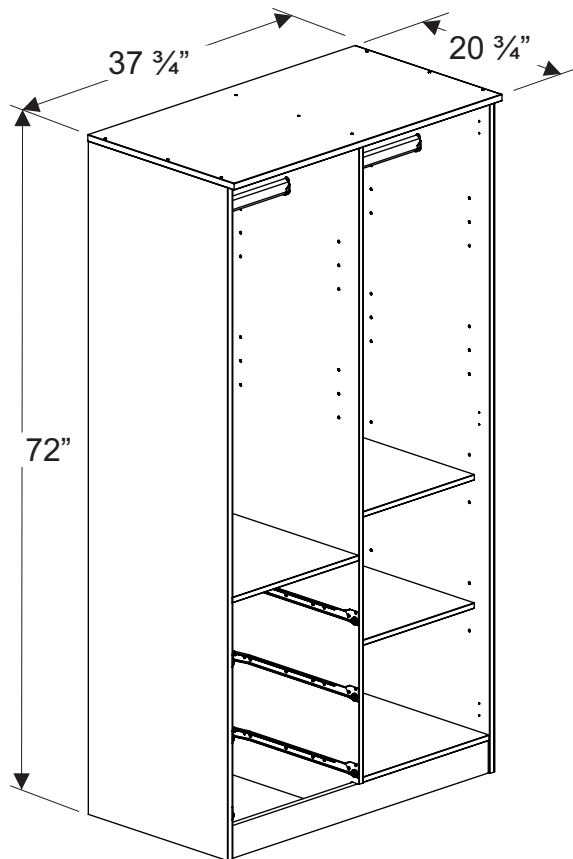


Raised Panel Doors

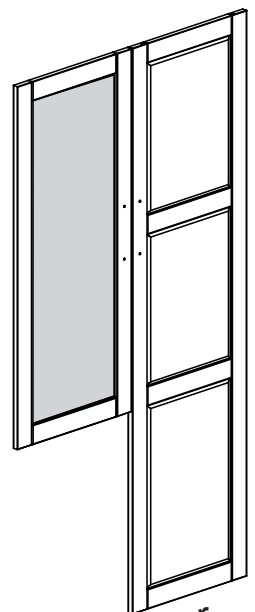

Mirror Door

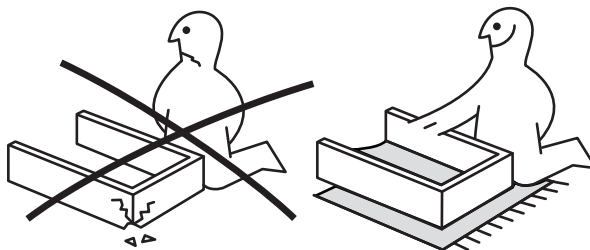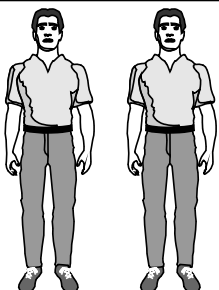

REV - 03/2023

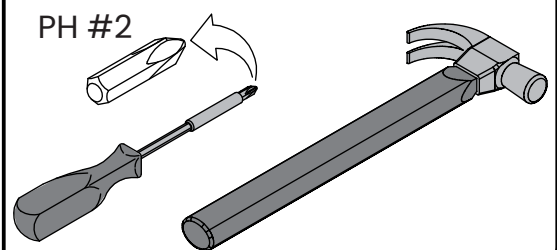


page 2/19











PRE-ASSEMBLY PREPARATION



- Please check the contents before assembling. A full checklist of parts is provided below.
- If any parts are missing or damaged, please contact us at info@palaceImportsInc.com
- Assemble on a flat, smooth surface on top of a blanket.
- Use only low-speed power drill setting.
- Assemble as near as possible to the point of use.
- The hardware pack contains SMALL ITEMS which should be KEPT AWAY FROM YOUNG CHILDREN.

PARTS DIAGRAM

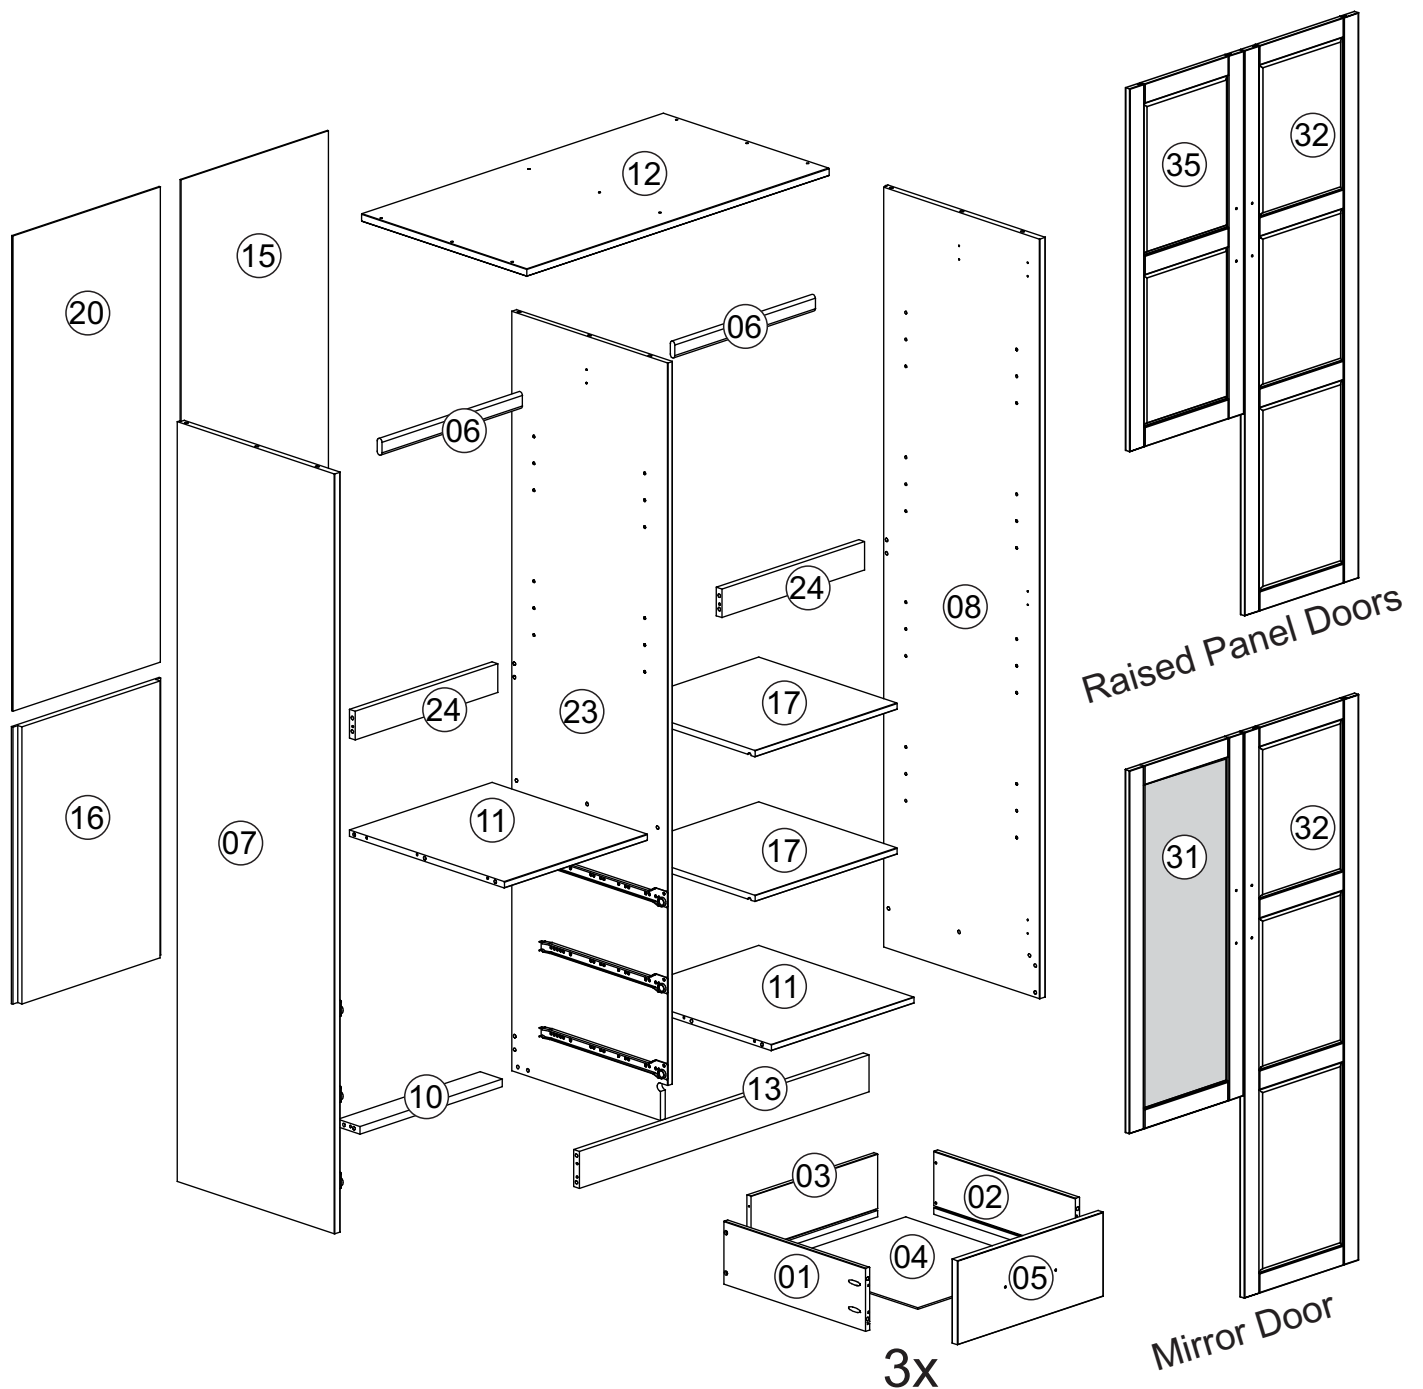

SCREWS ARE SHOWN IN ACTUAL SIZE


A1	 4,0x30	46+2
A16	 4,0x40	09+1
A25	 M4x25	10+1
A42	 4,0x14	20+1
A44	 3,5x14	30+1
C2	 8,0x25	49+2
D4		08+1
D10		04
D16		01
D27		08+1
E17	 450mm - 17 3/4"	03
E18	 450mm - 17 3/4"	03
F10		06
G1	 10x10	52
H12		05

FURNITURE ANTI-TIP KIT		
A8	 3,0x20	02+1
F8		02
F9		01

WARNING:
 **CHOKING HAZARD**
 Small Parts.
 Adult Supervision Required.
 Not for children under 3 years old.





WARNING:
 **FURNITURE TIPOVER CAN RESULT IN SERIOUS INJURY OR DEATH**
 This wardrobe includes tipover-prevention hardware that **MUST BE ATTACHED TO THE WALL** per the assembly instructions.

01)

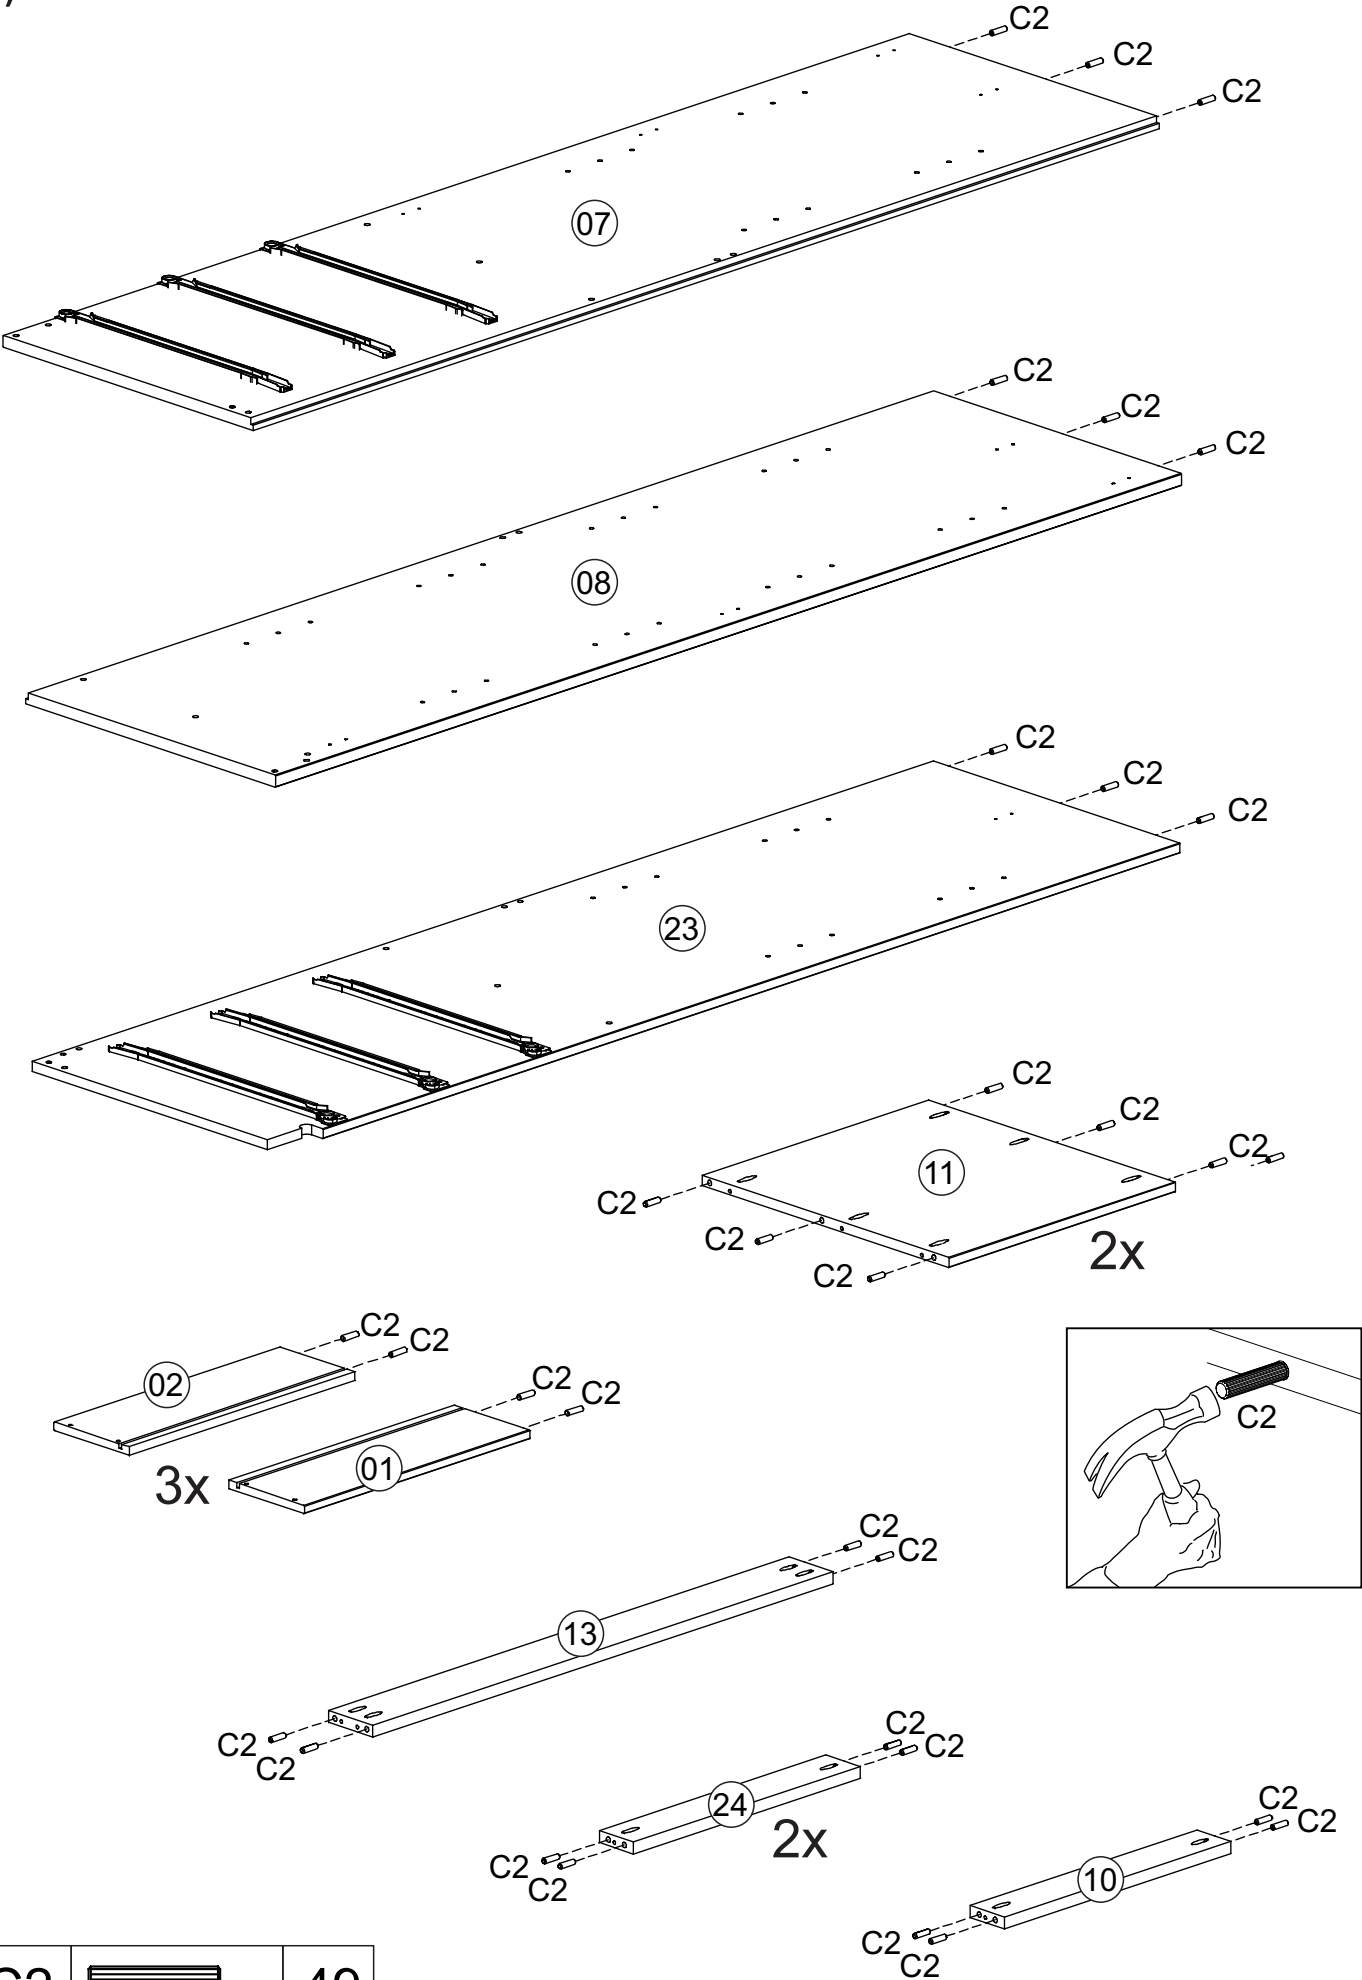


C2		49
8,0x25		





02)

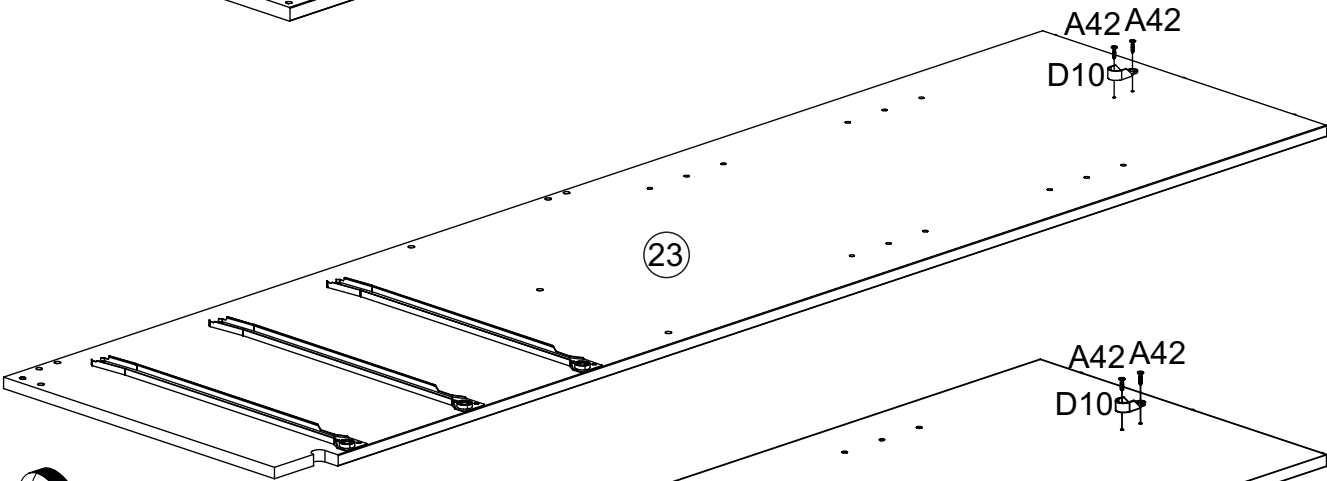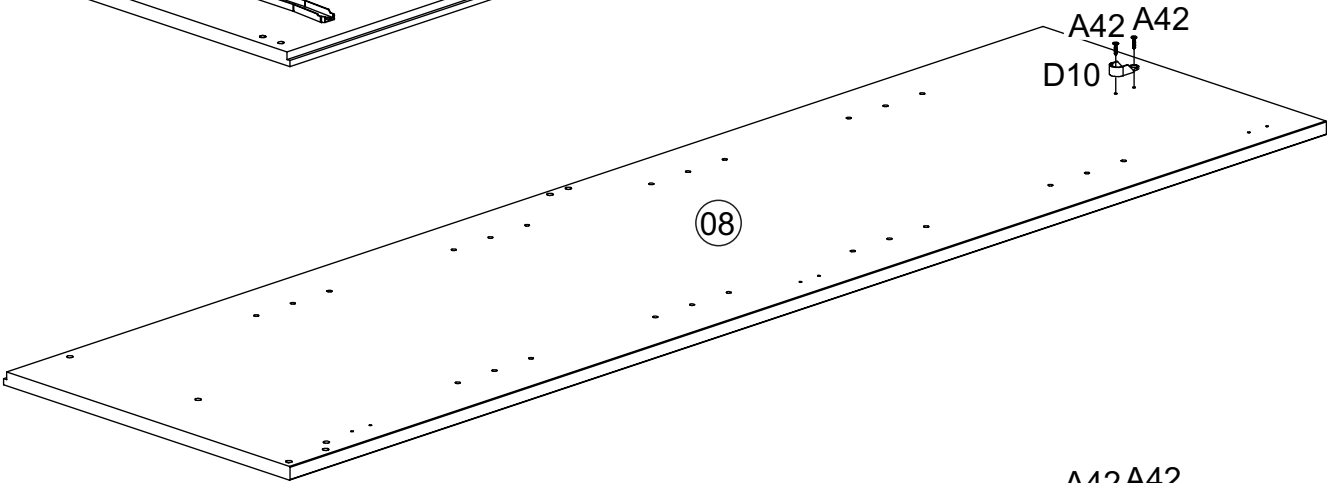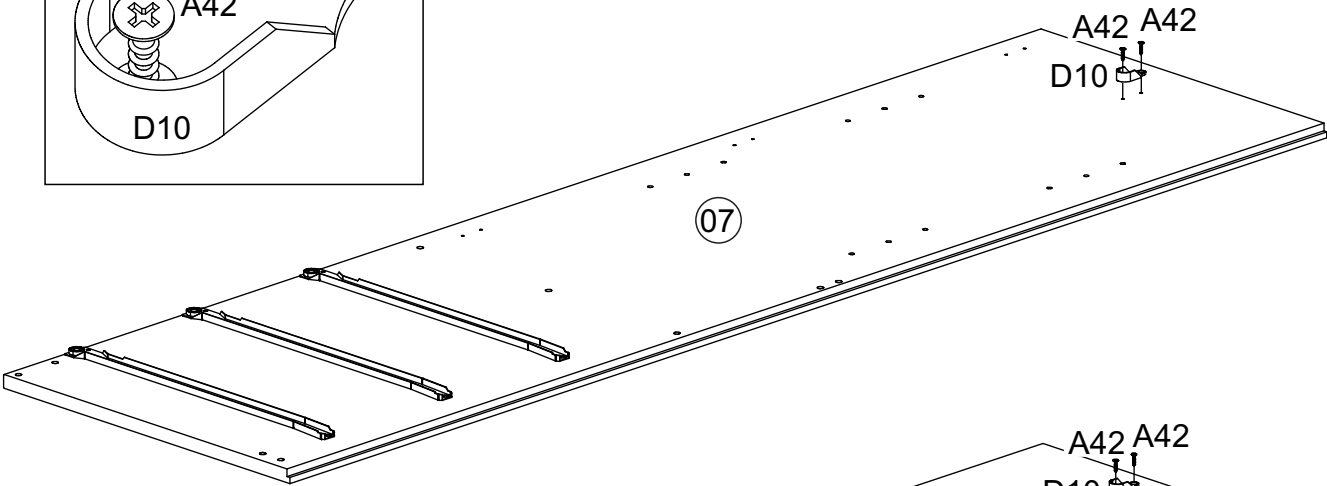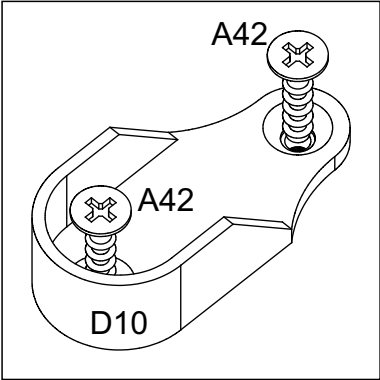




Turn part 23
OVER

A42		08	D10		04
		4,0x14			




03)

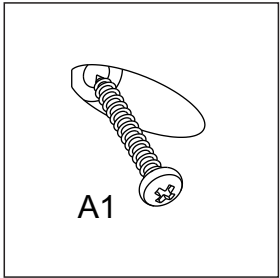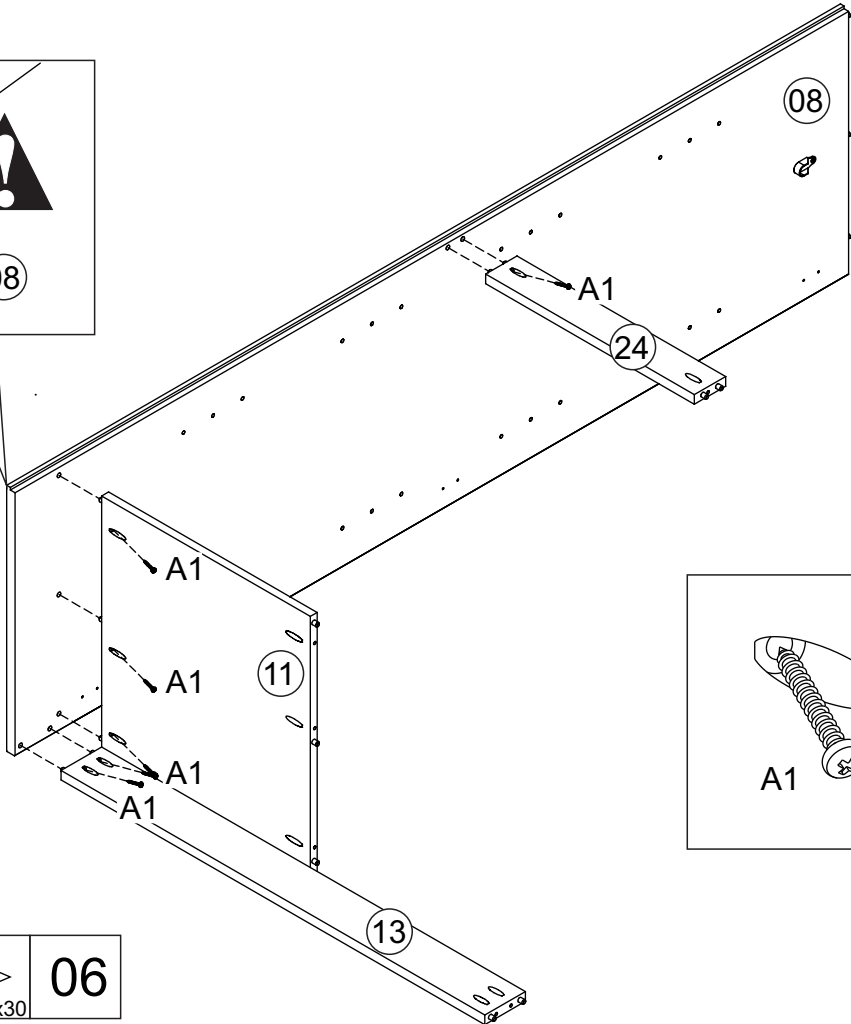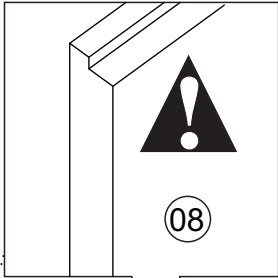




04)

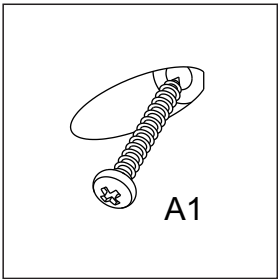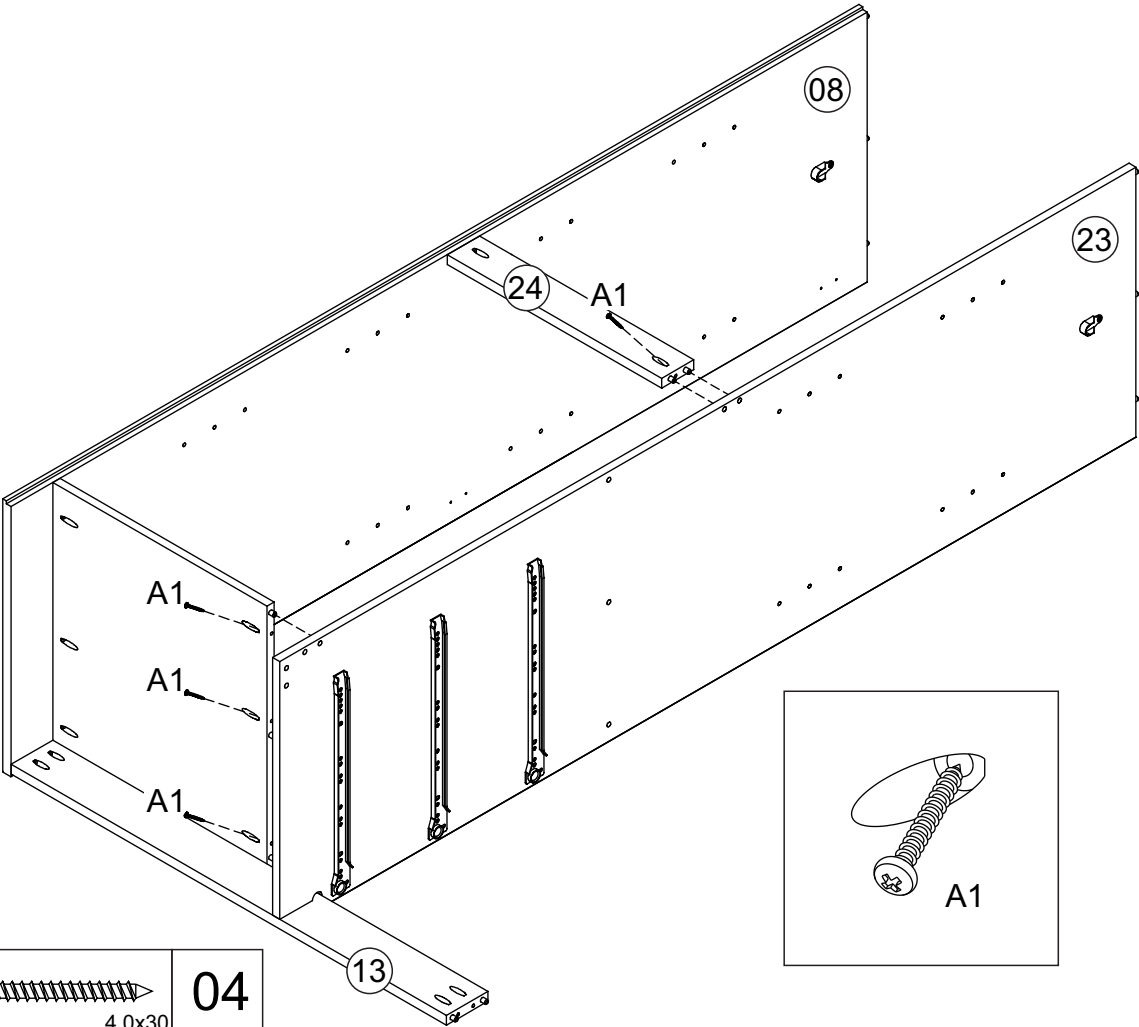


05)

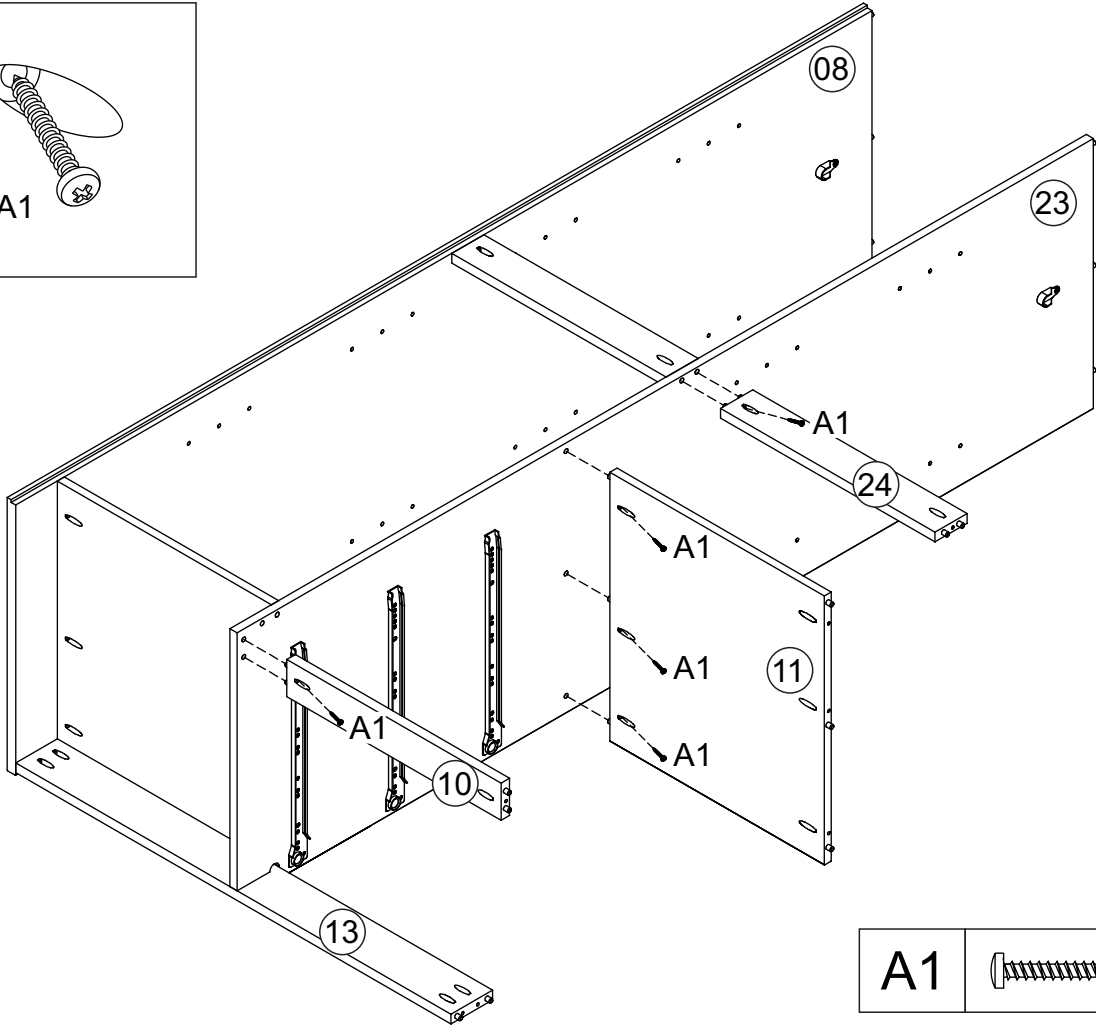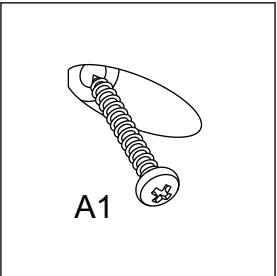


06)


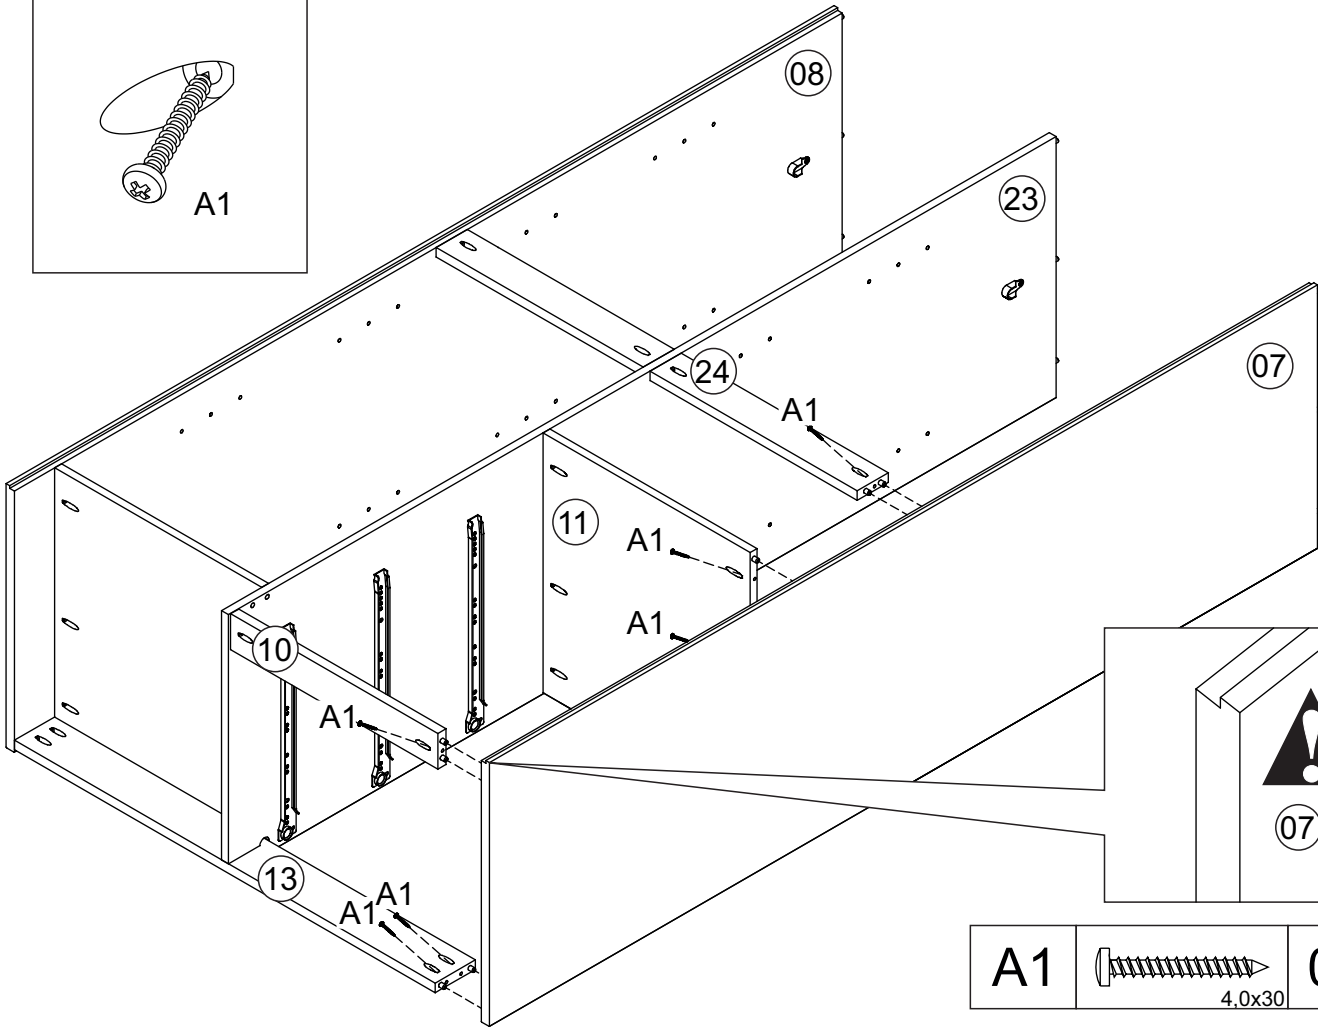
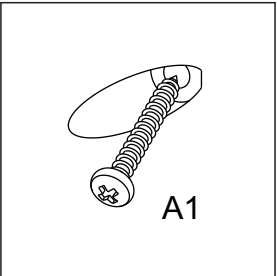



07)

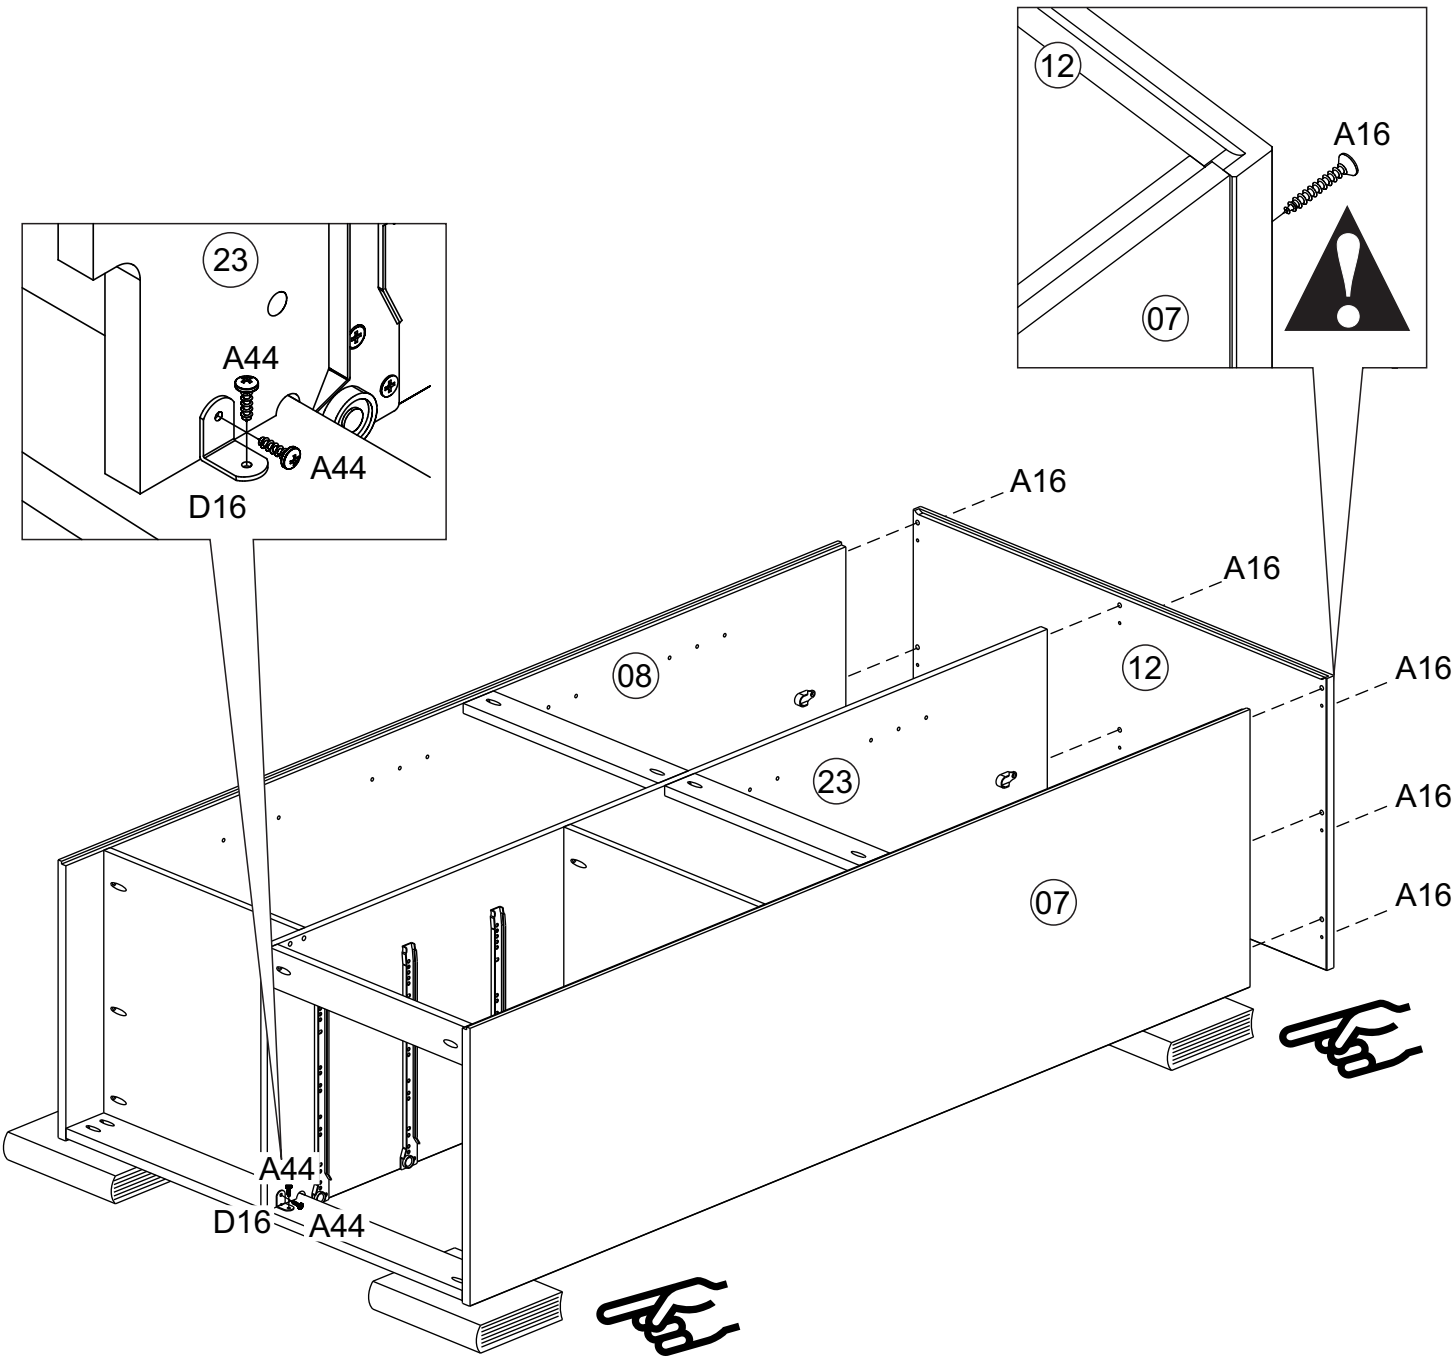

A16	 4,0x40	09
A44	 3,5x14	02
D16		01


08)

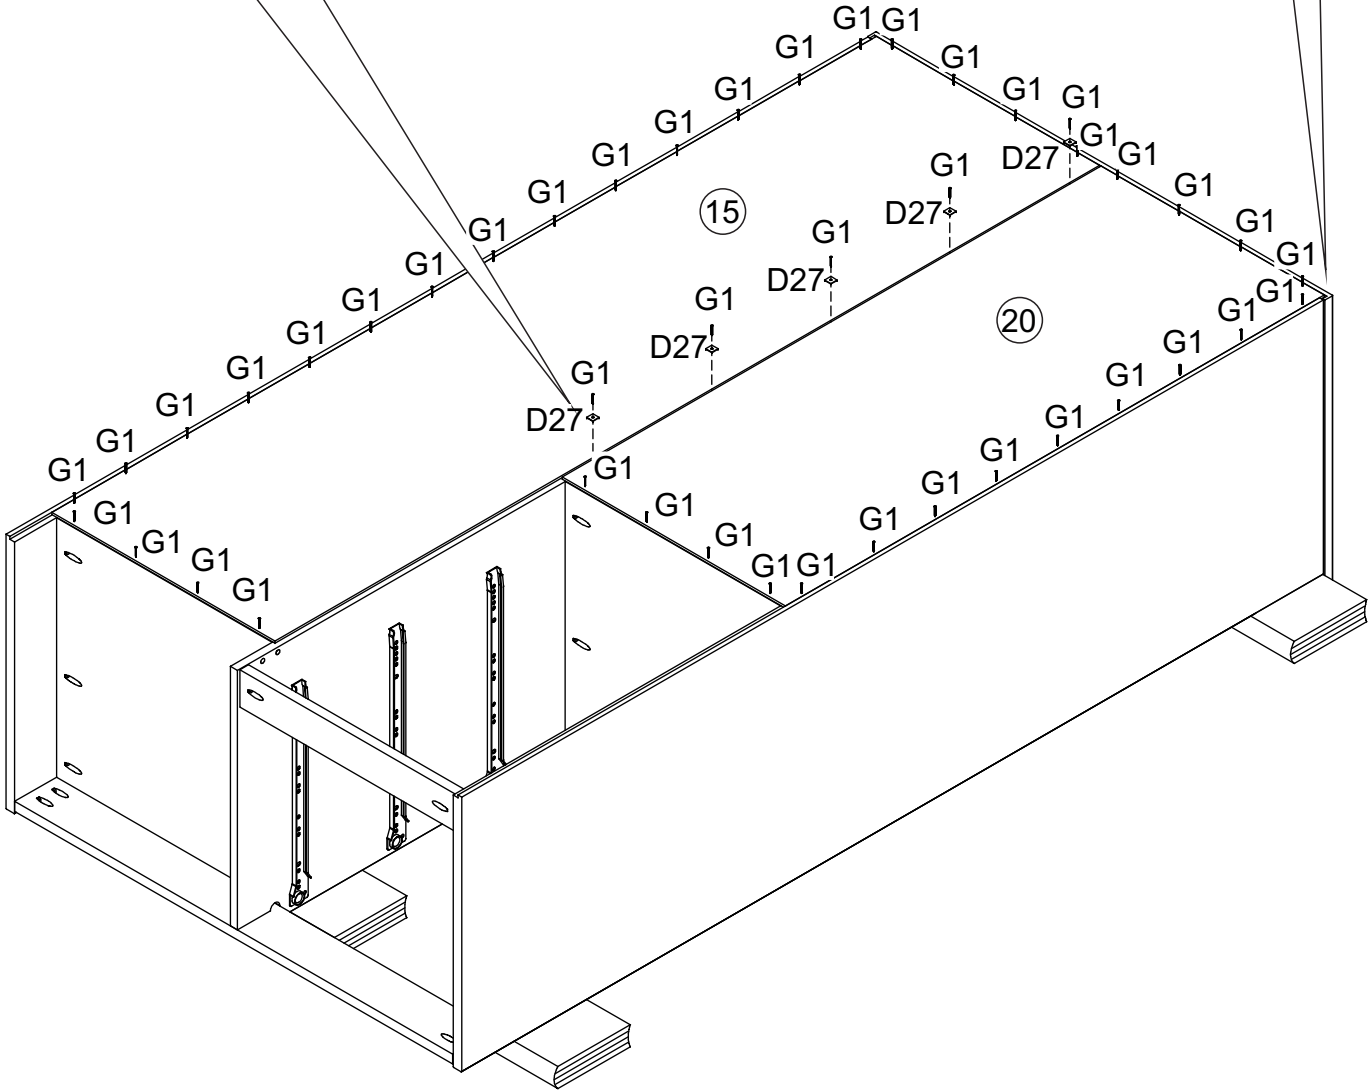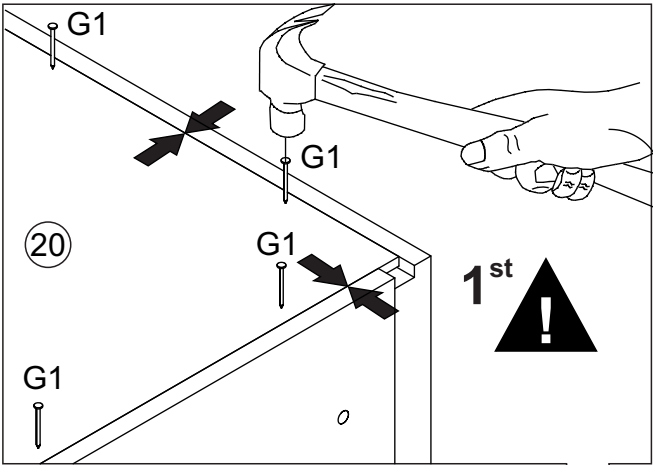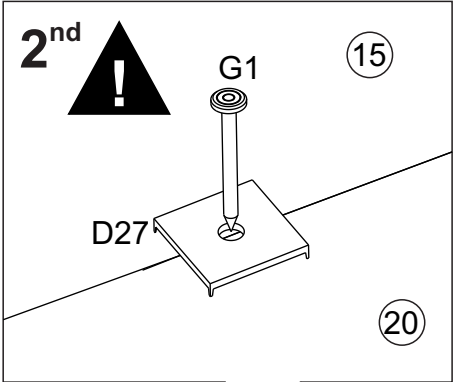


D27		05	G1		44
-----	---	----	----	--	----

10x10

09)

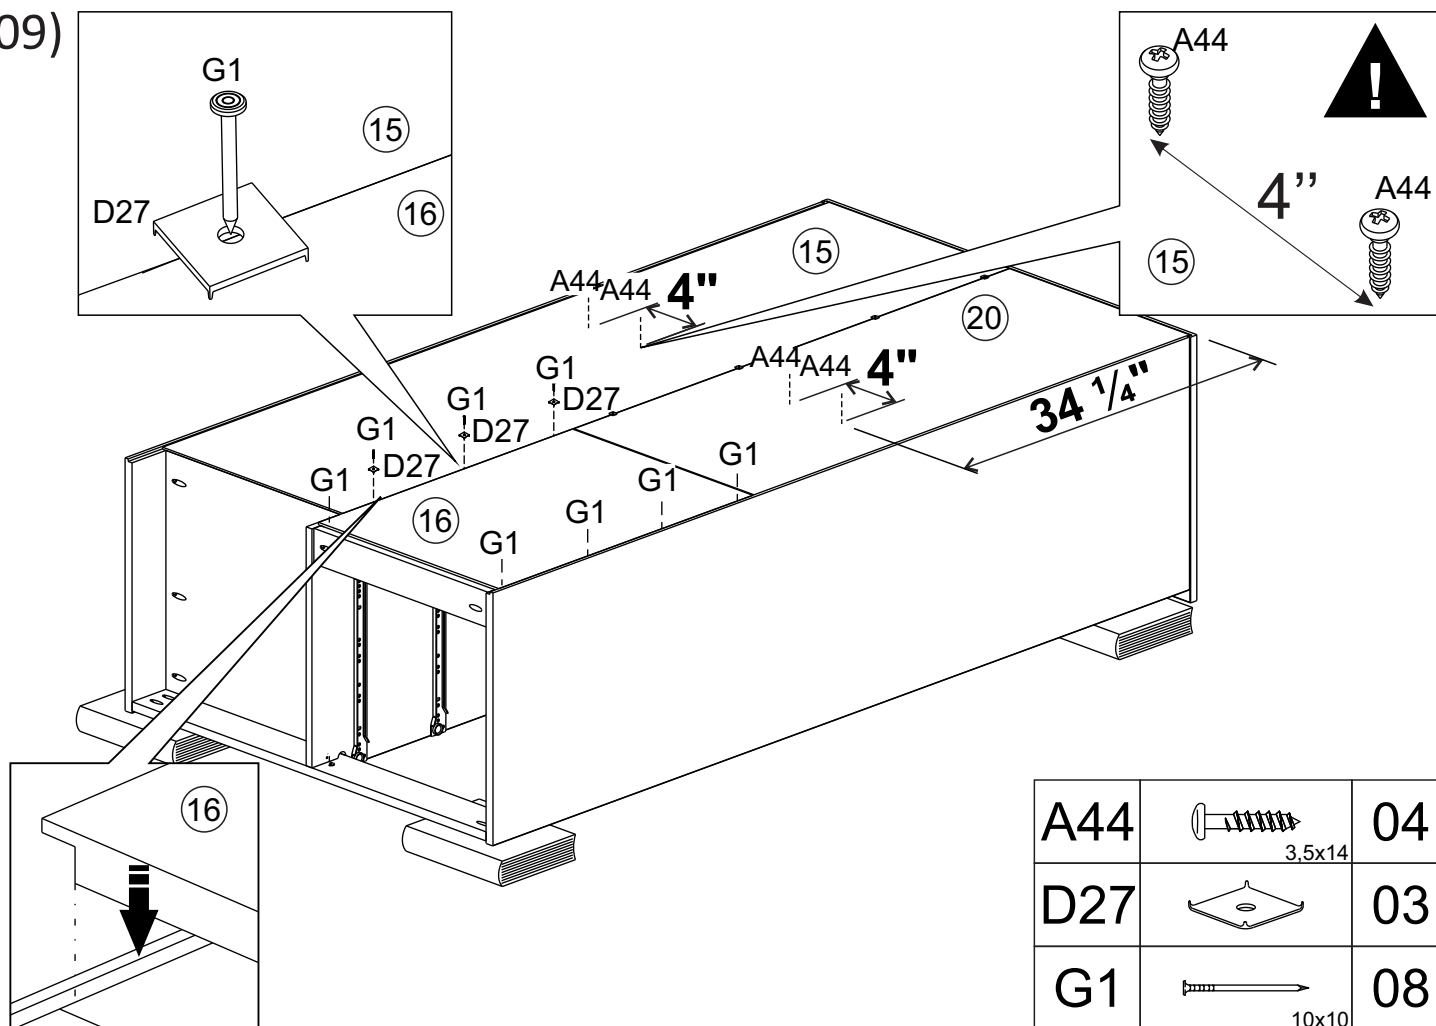


10)

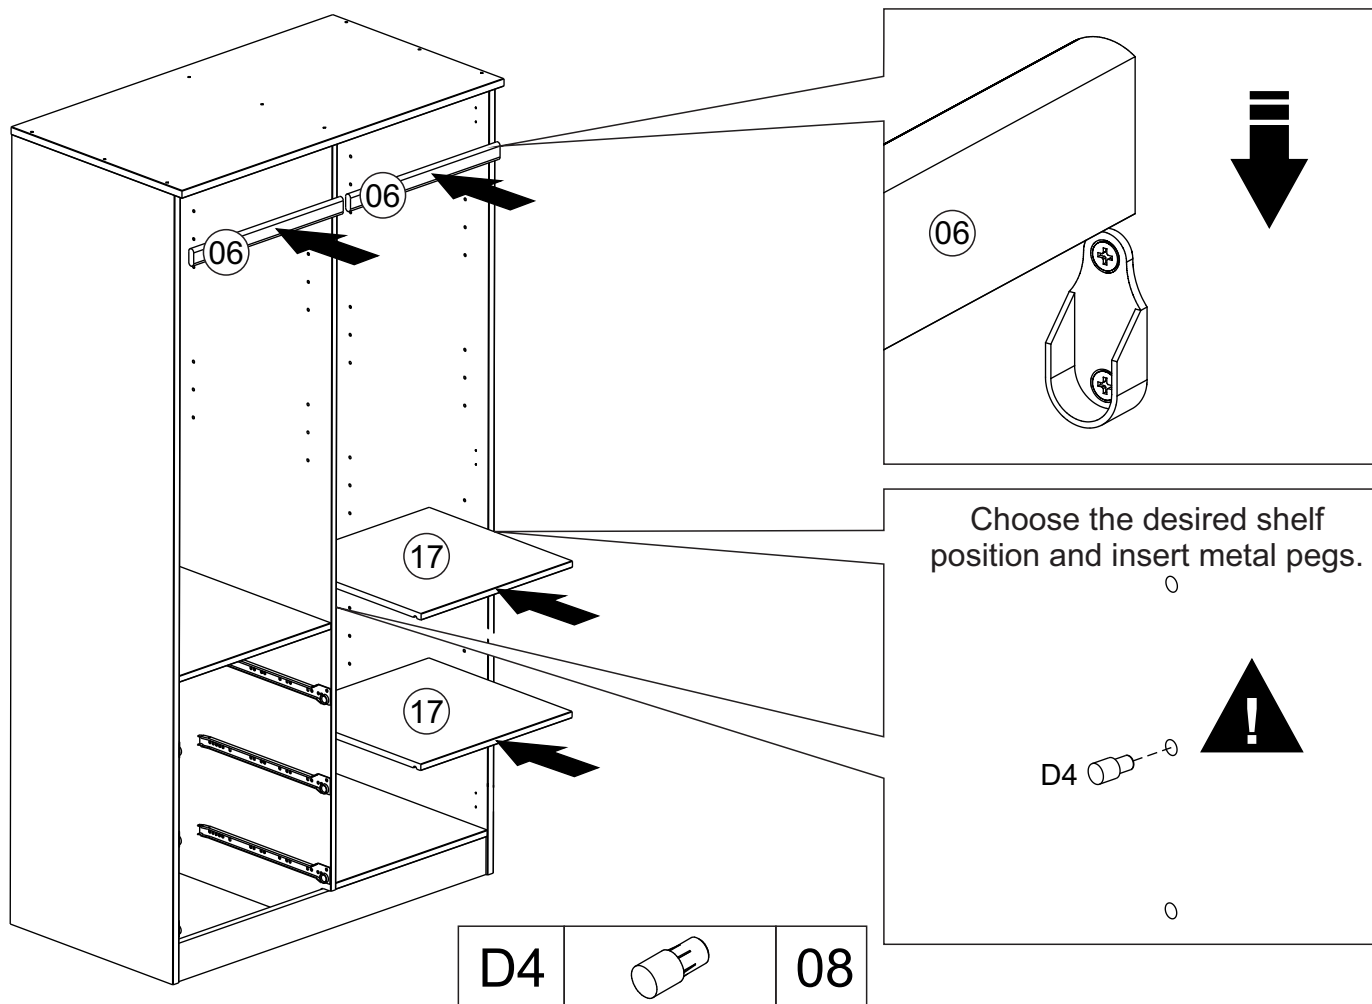



11)

Attach hinge (F10) to hinge plate if it comes separated.


Push hinge against plate until it clicks.

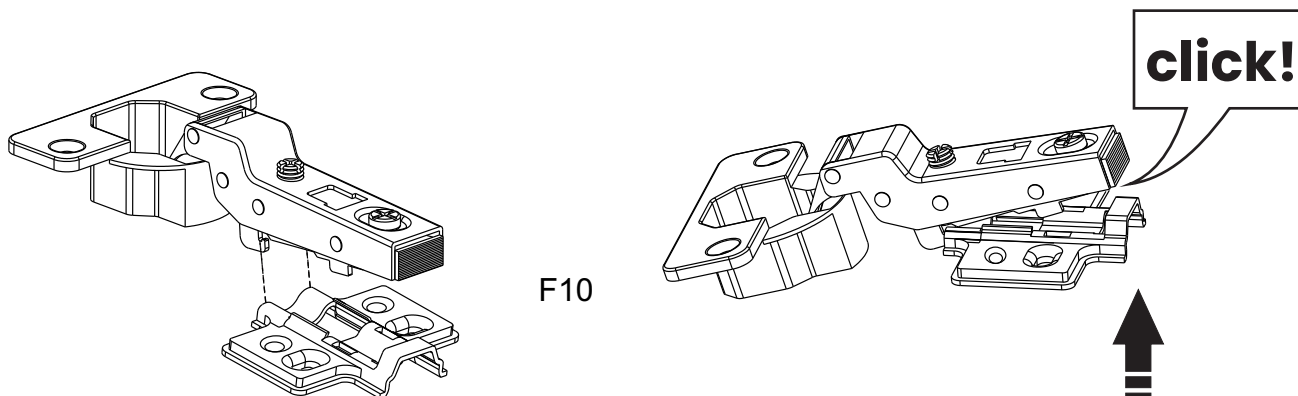

12)

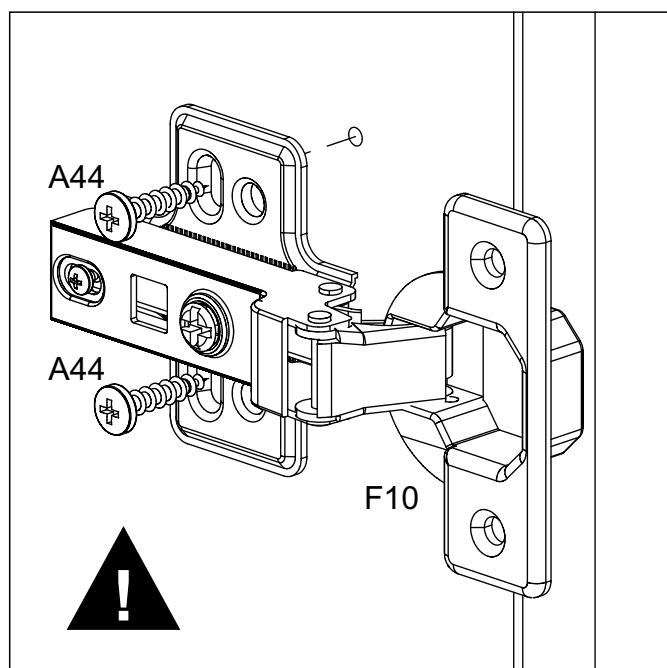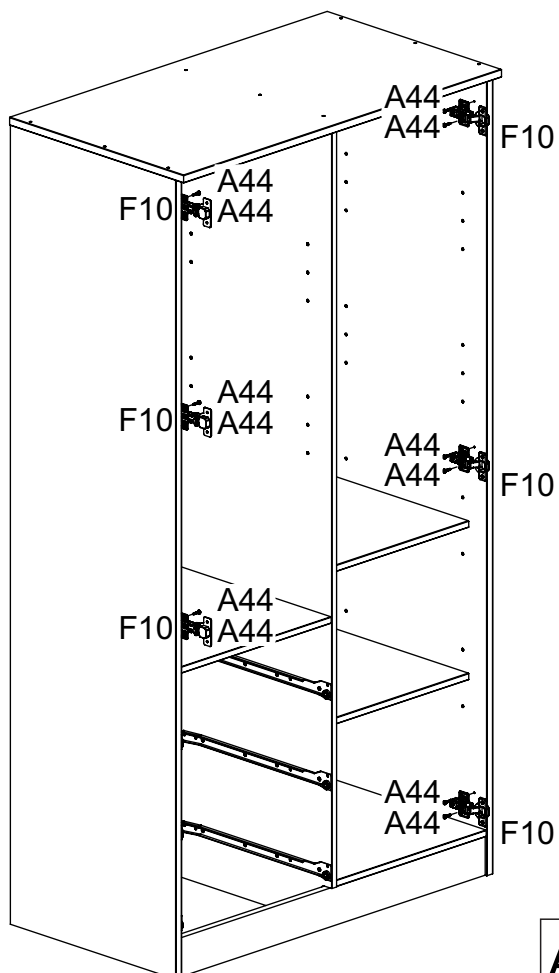

A44



3,5x14


12

F10




06

13)


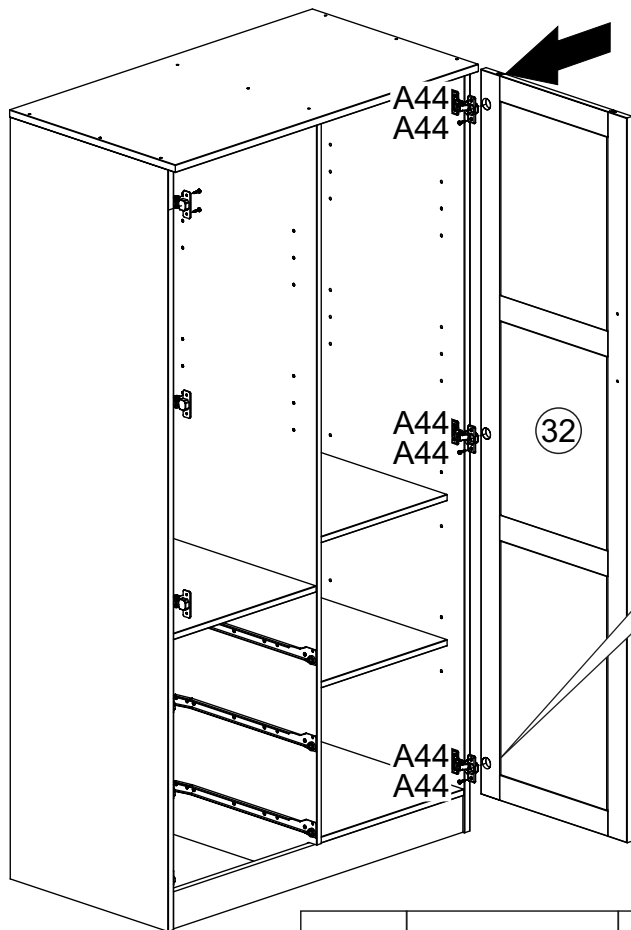


A44





3,5x14

06

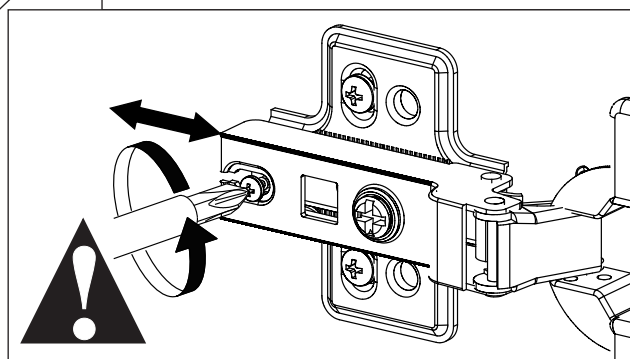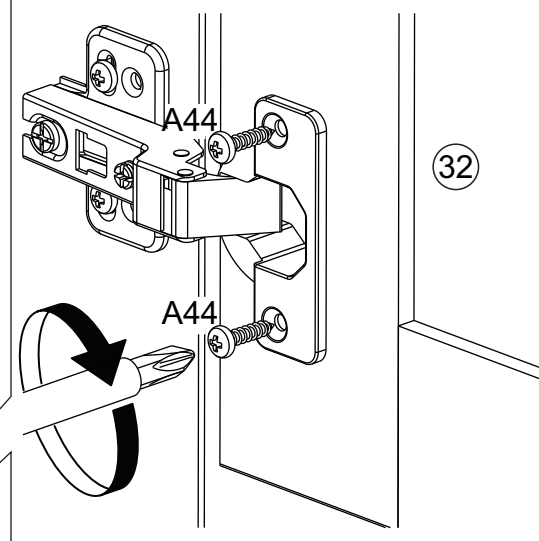


It might be necessary to adjust the hinges (F10) before hanging the doors.


14) Mirrored Door

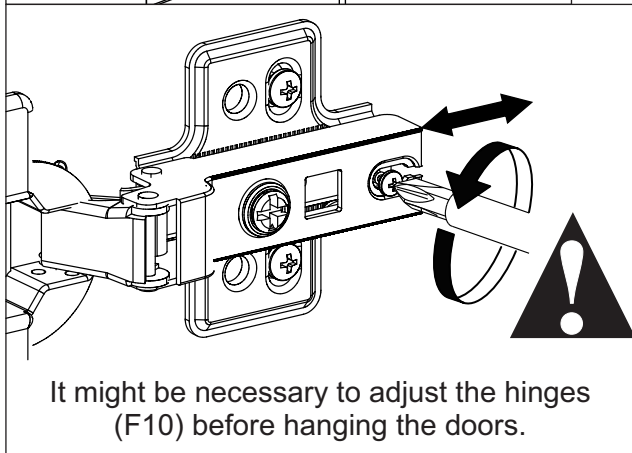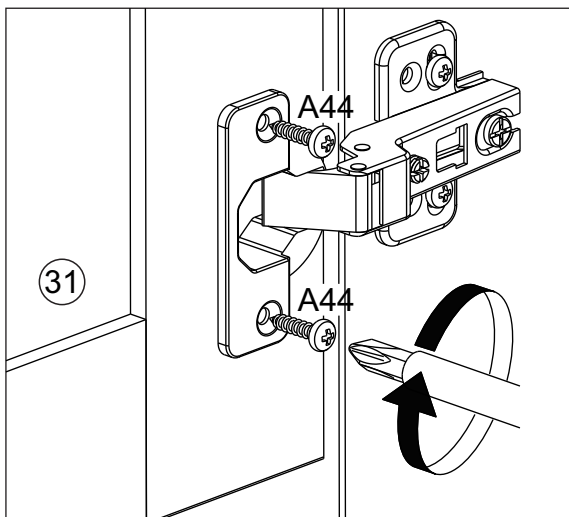

It might be necessary to adjust the hinges (F10) before hanging the doors.

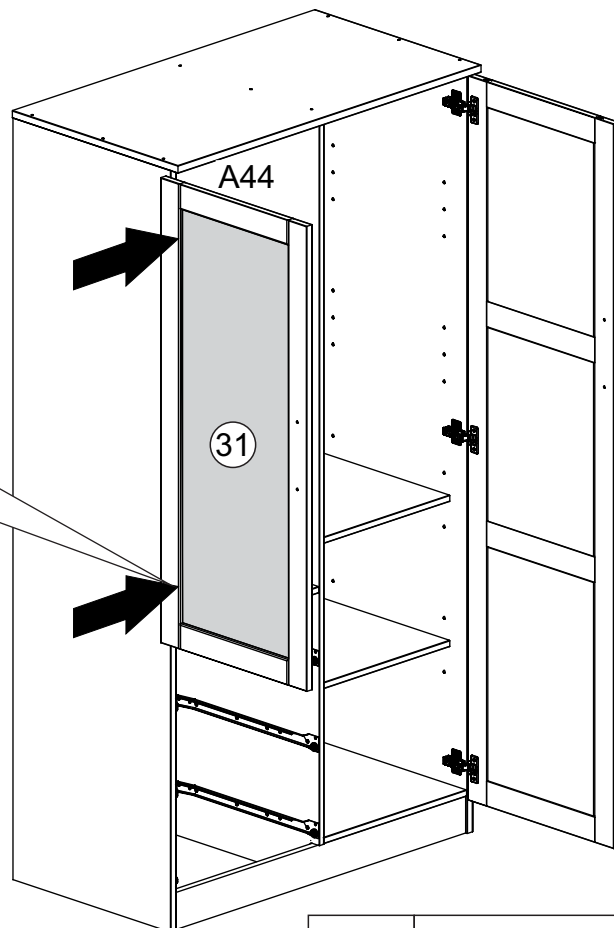



A44




3,5x14



06


14) Raised Panel Door

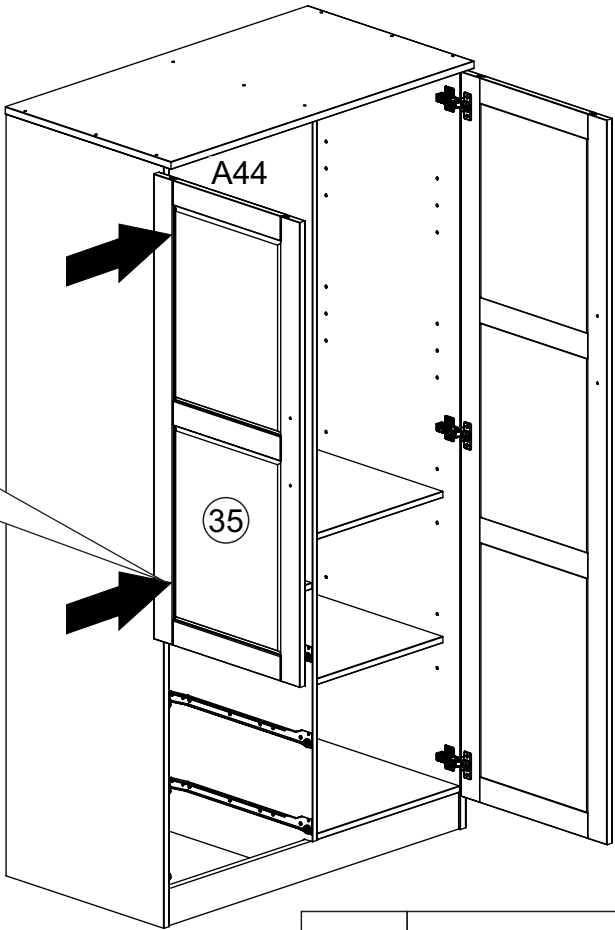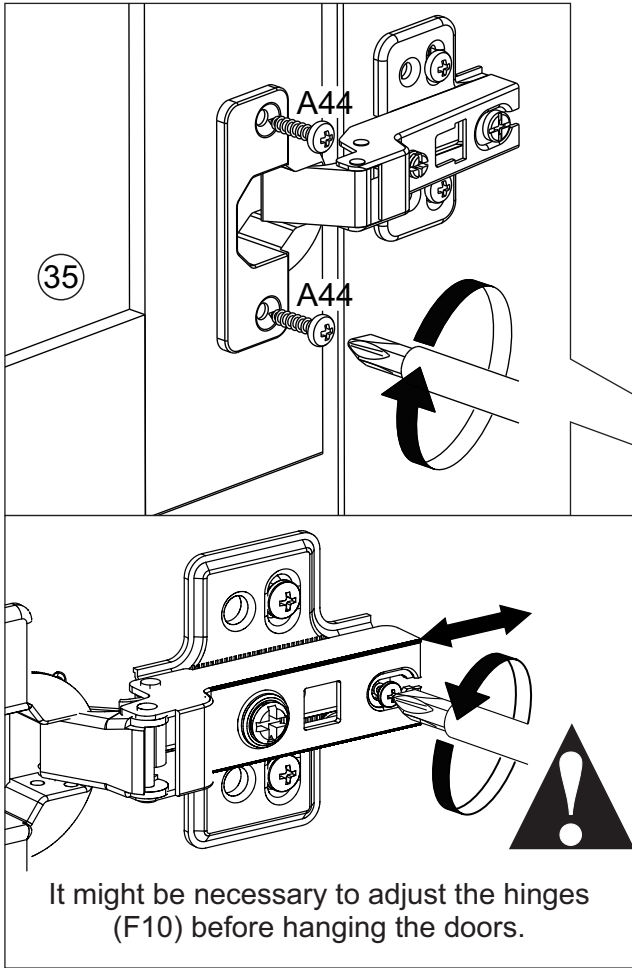













A44		06
3,5x14		

15




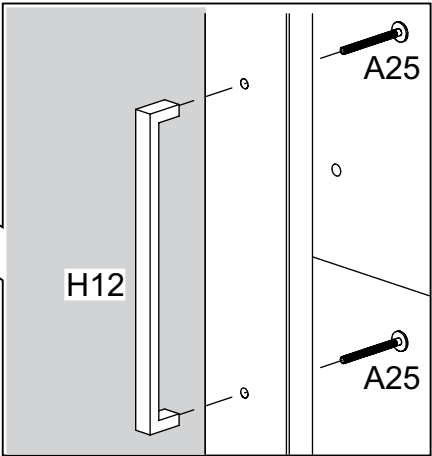
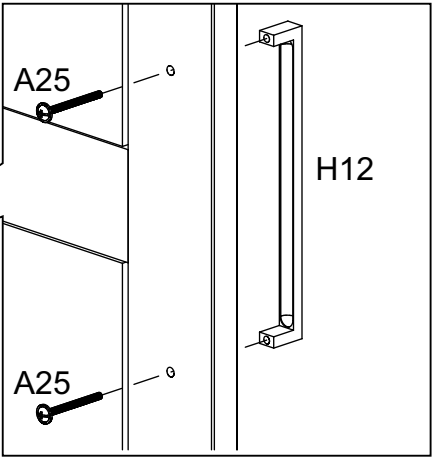




A25		04	H12		02
M4x25					

16)

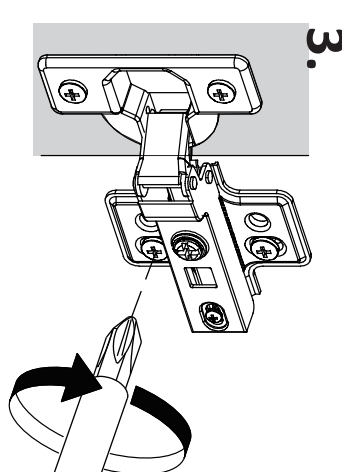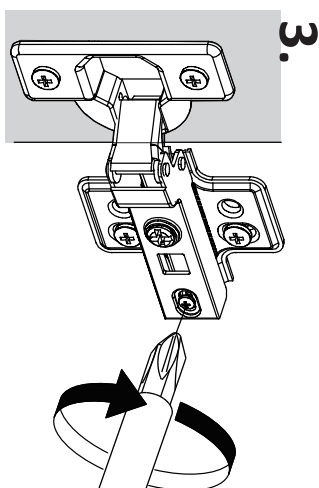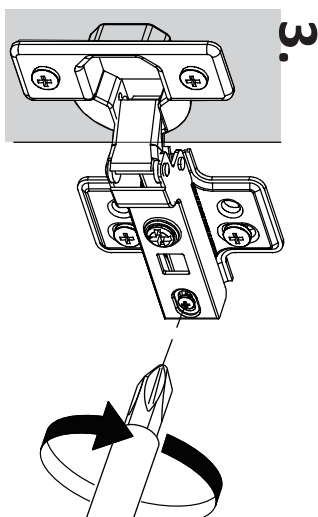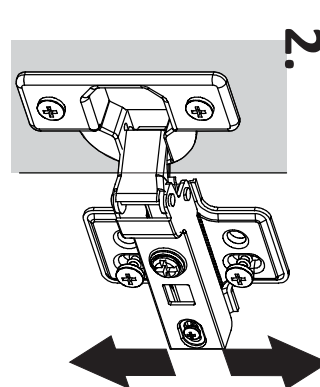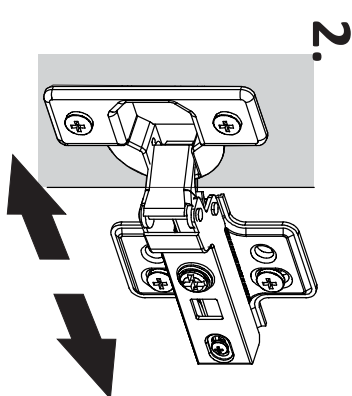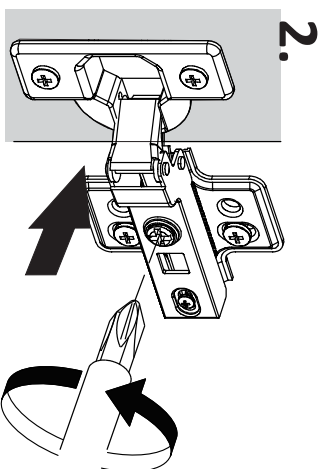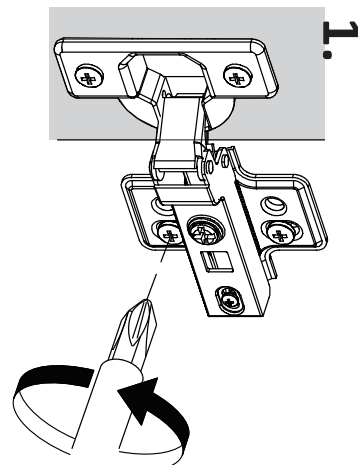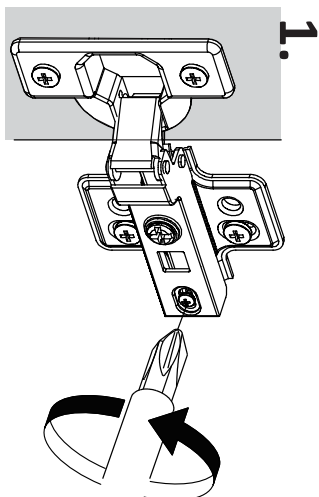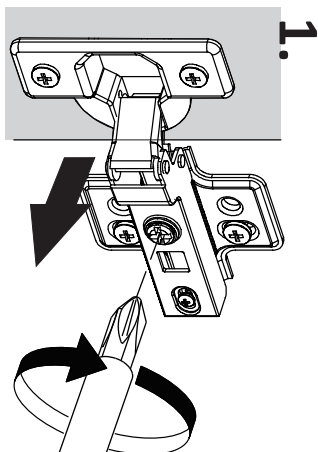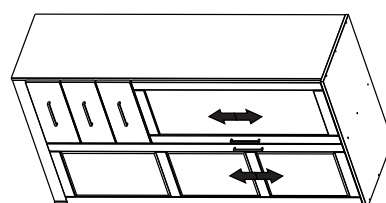
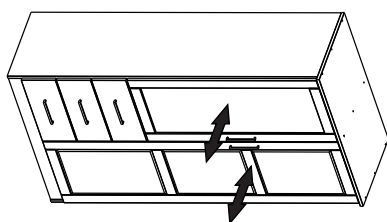
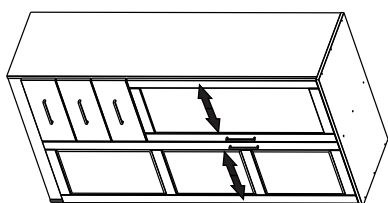



17) 3x

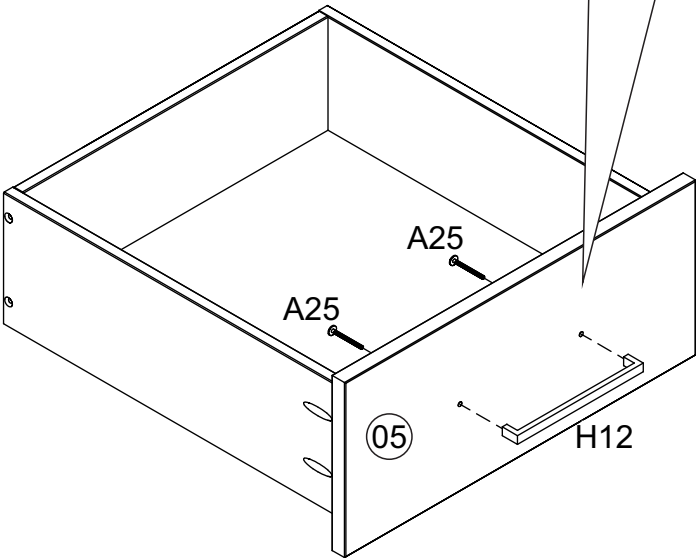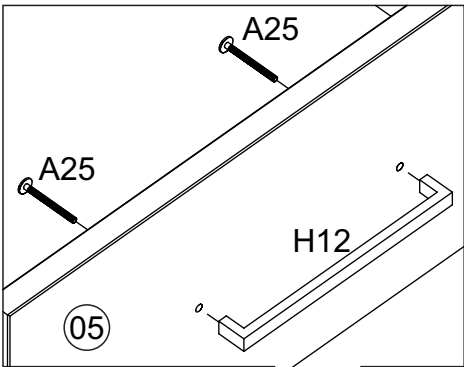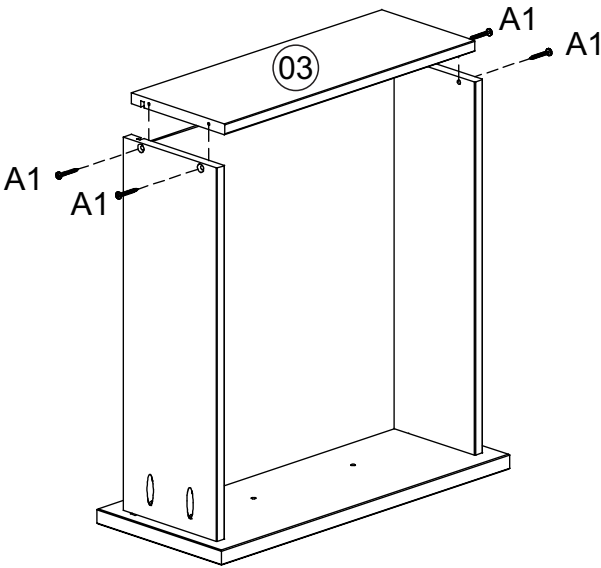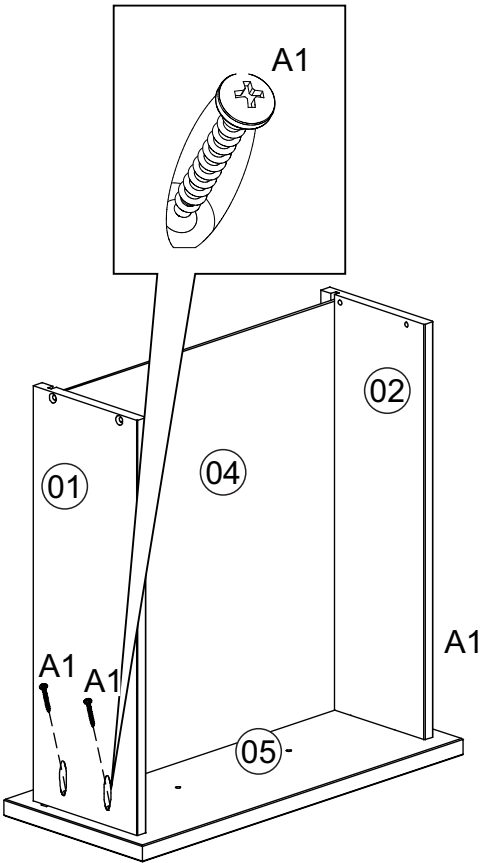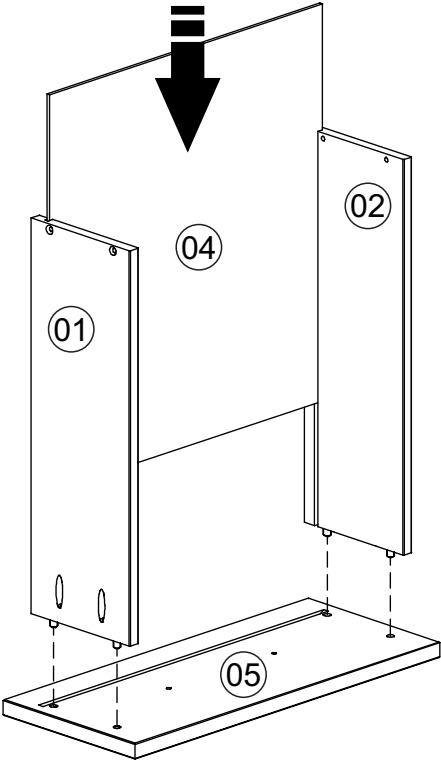

A1	 4.0x30	24
A25	 M4x25	06
H12		03




18) 3x

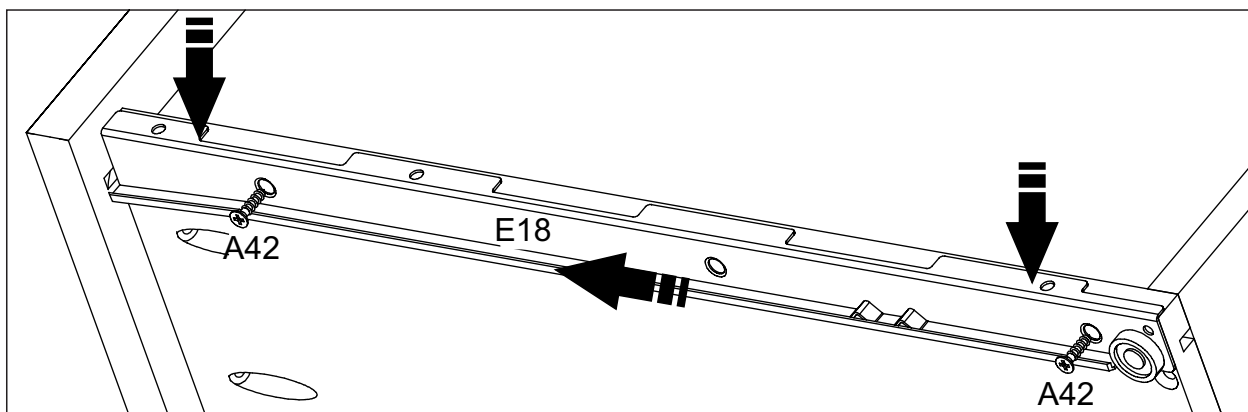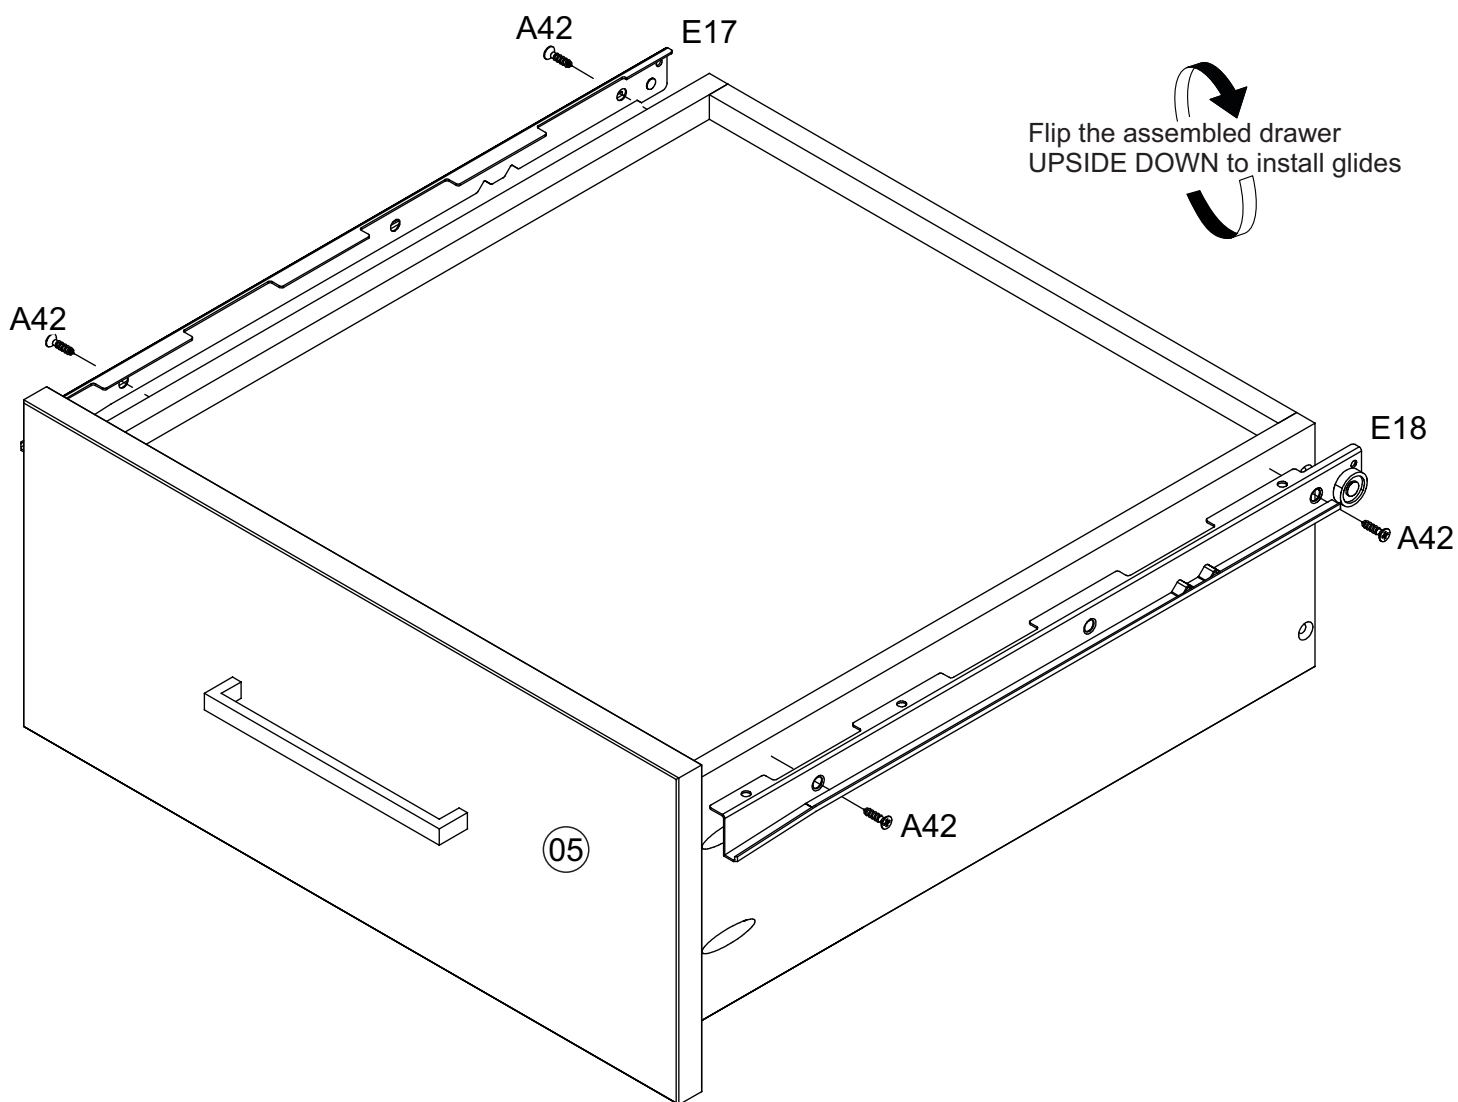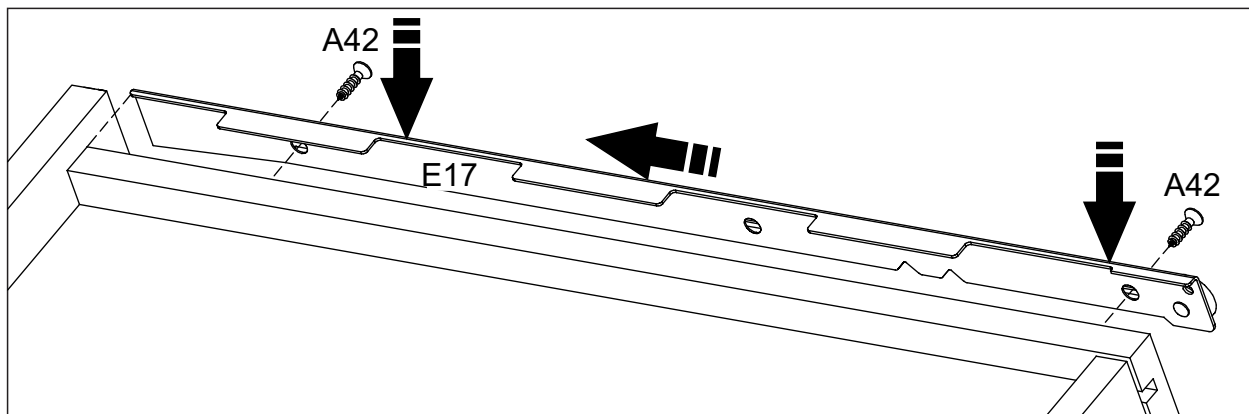

A42		12	E17		03	E18		03
	4,0x14			450mm - 17 3/4"			450mm - 17 3/4"	







19)


Place the labeled drawer at the top.

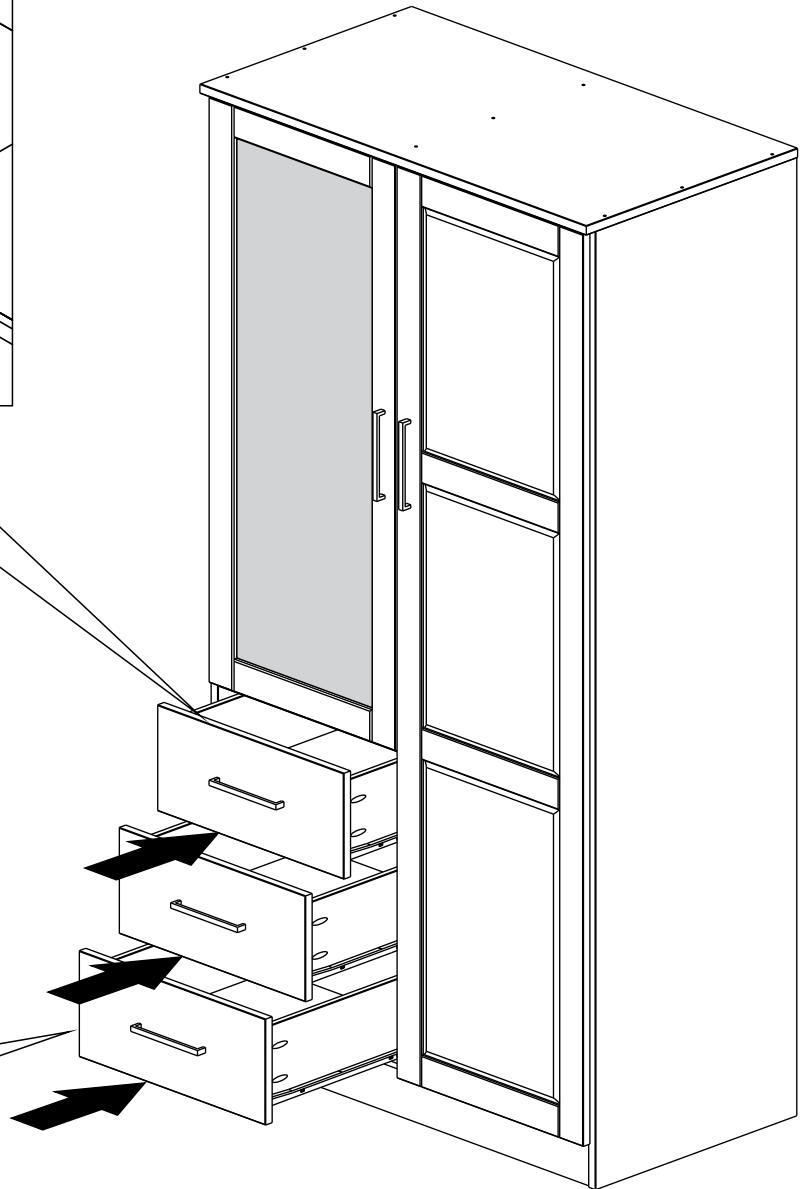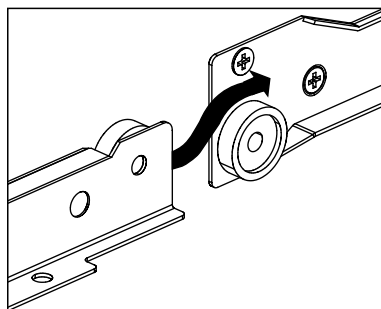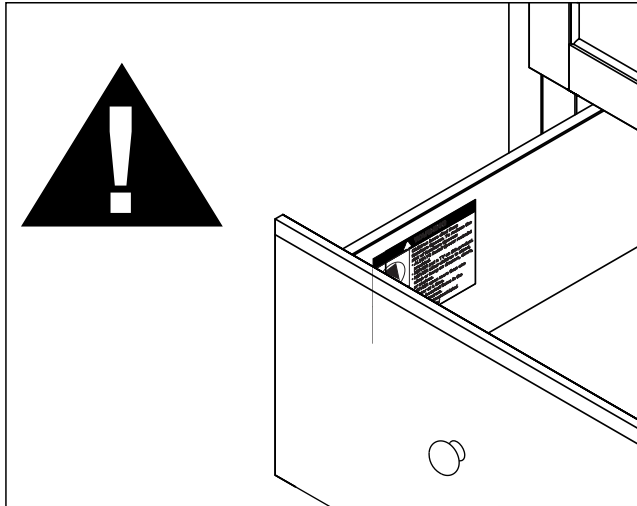

20)

FURNITURE TIPOVER PREVENTION KIT INSTALLATION

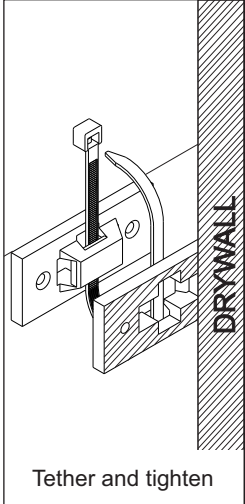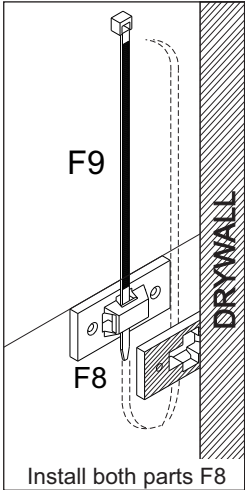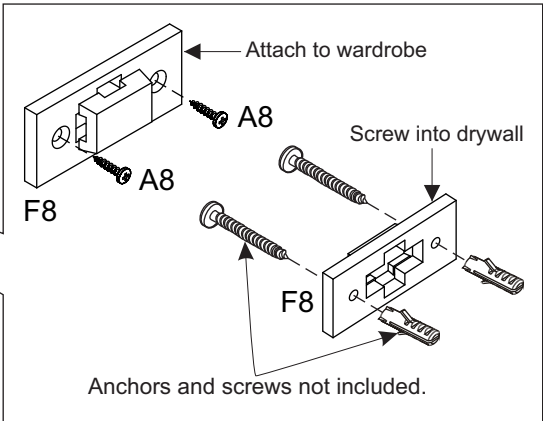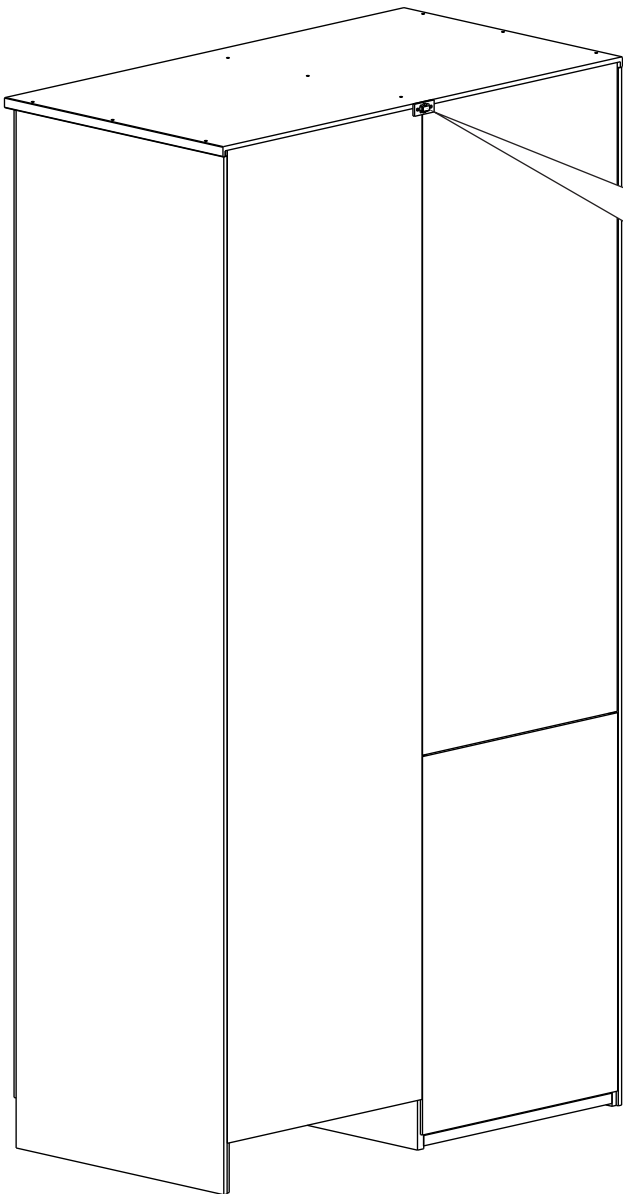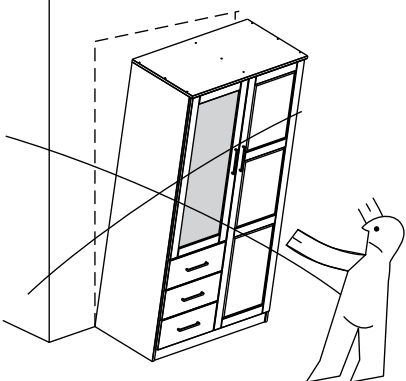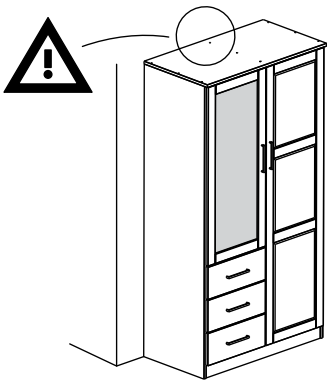

A8	 3.0x20	02
F8		02
F9		01