



Assembly Instructions

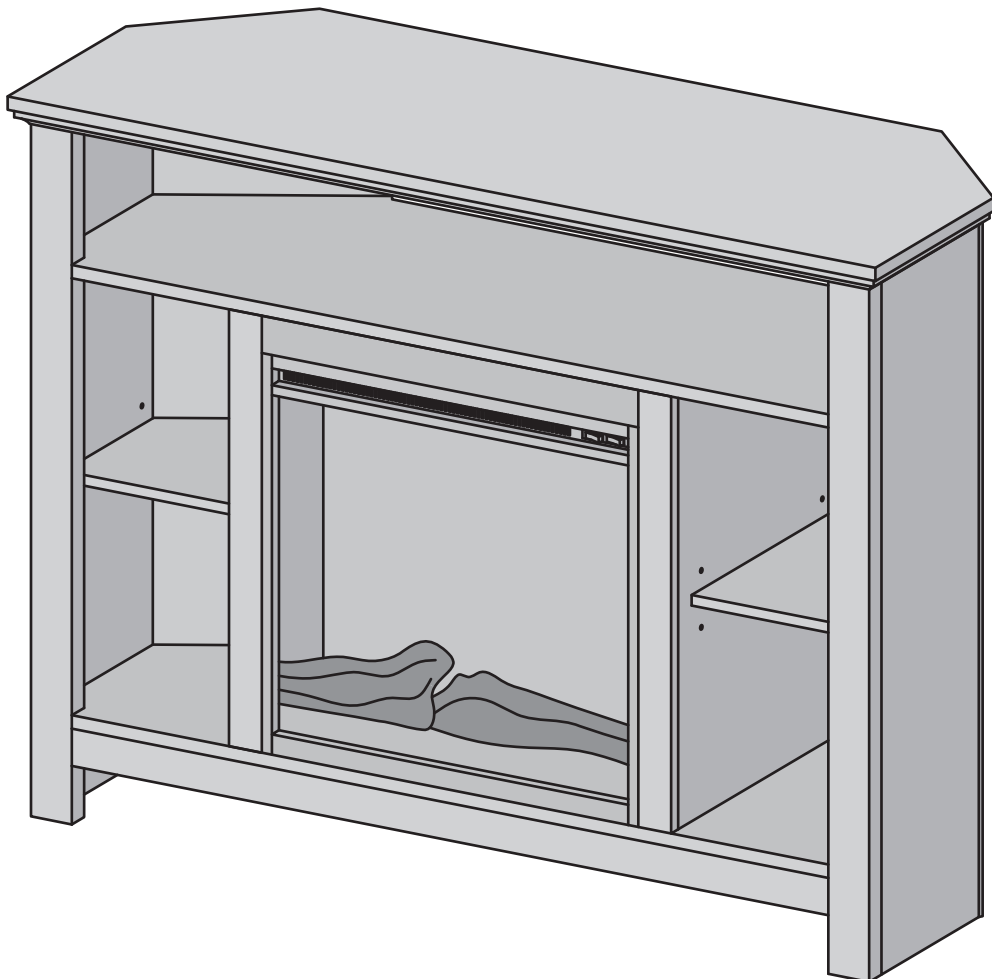


General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

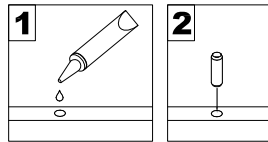


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

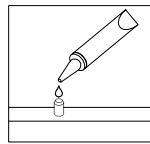


- VI. A Phillips head screwdriver is required for the assembly of this product .

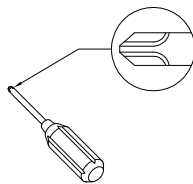



- VII. Power tools should not be used to assemble this product .

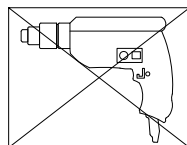


Parts List

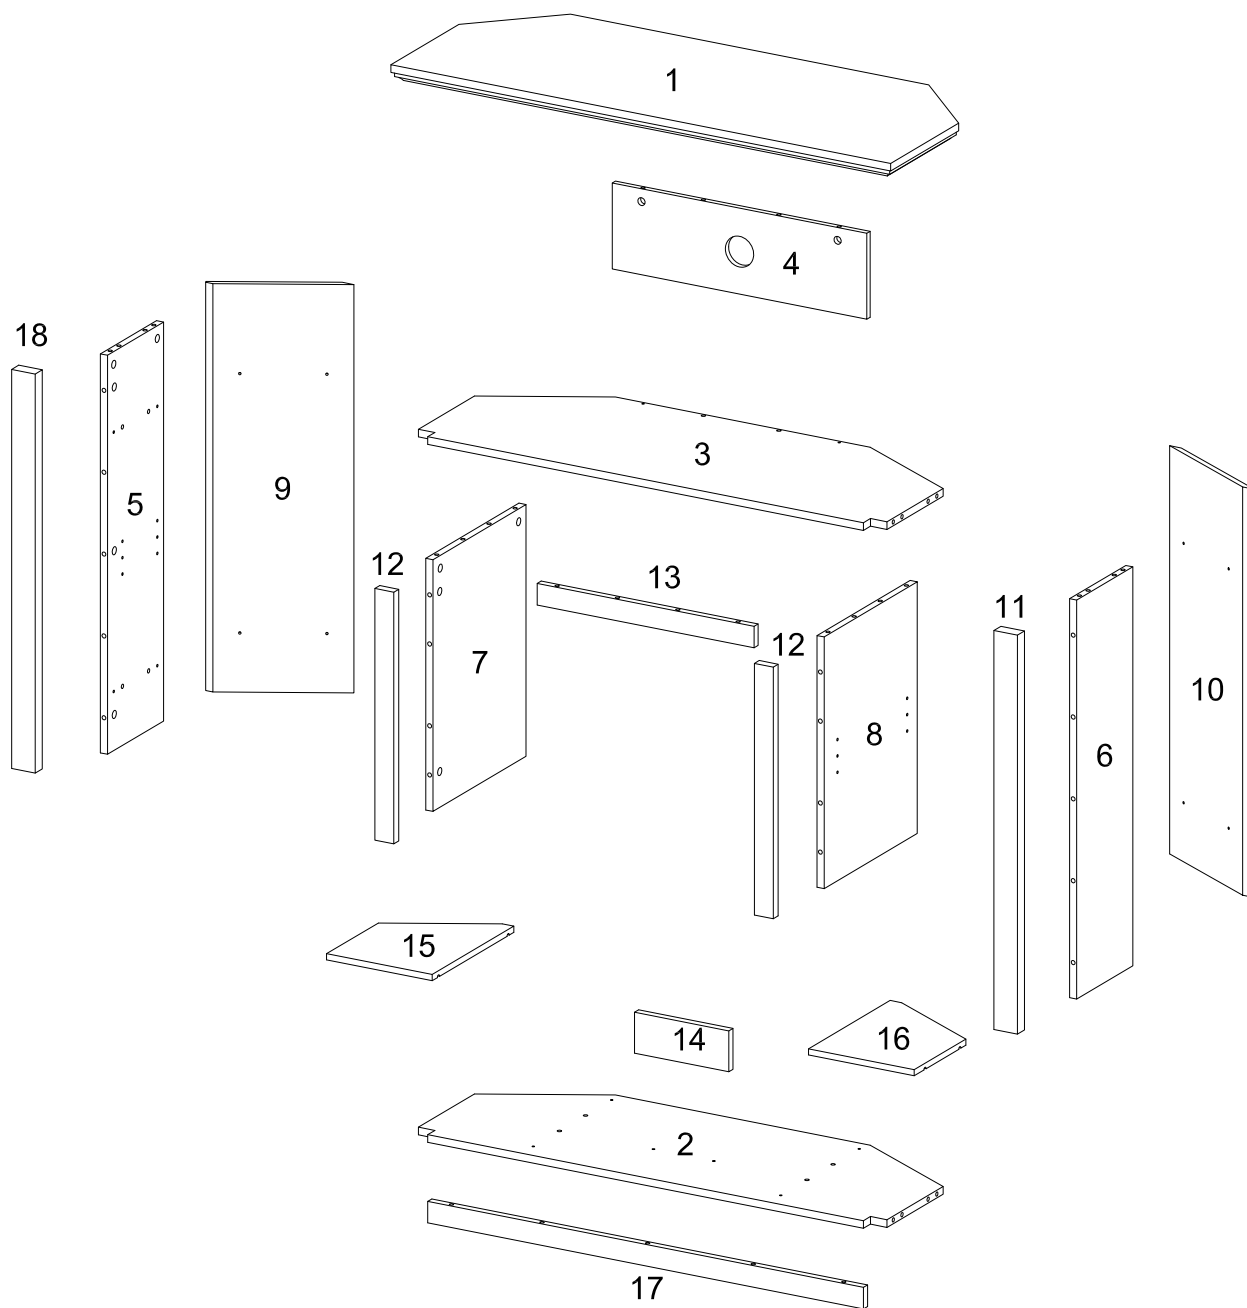

Hardware List


A		Ø8x30mm	Wooden dowel	36 pcs
B			Cam bolt	35 pcs
C		Ø15x11mm	Cam lock	33 pcs
D		Ø15x9.5mm	Cam lock	2 pcs
E		Ø6x50mm	Bolt	14 pcs
F		Ø8x5x16mm	Shelf support pin	8 pcs
G		Ø4mm	Wrench	1 pc
H			Glue tube	2 pcs
J			Sticker	43 pcs
K			Screw	6 pcs
L			Fireplace Insert	1 pc

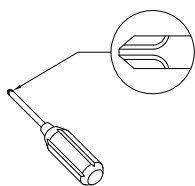

Philips head screwdriver required for assembly
(not included)


*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*

Step 1

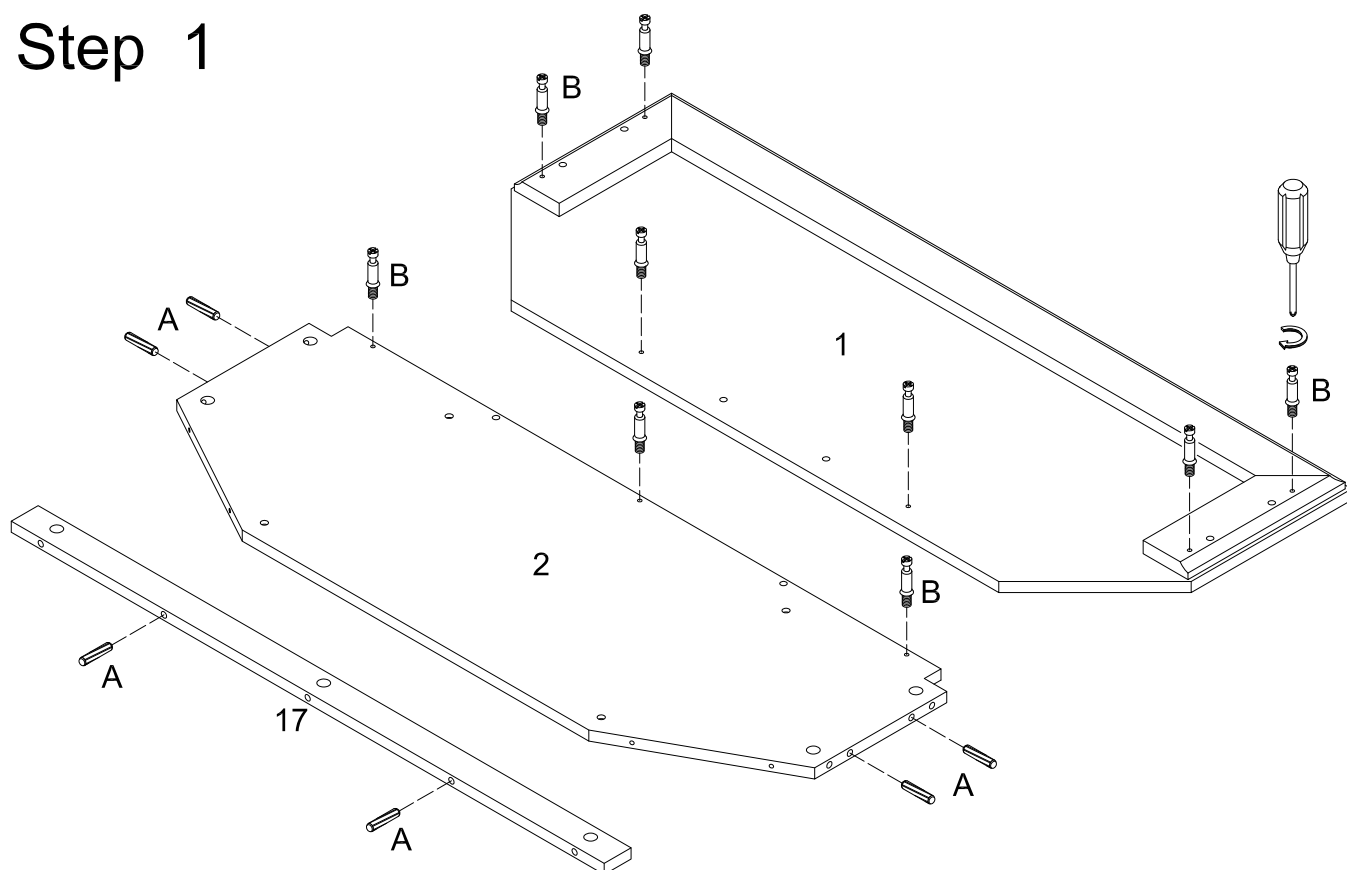


Attach cam bolts (B) to parts (1) and (2). Insert wooden dowels (A) into parts (2) and (17).

Step 2

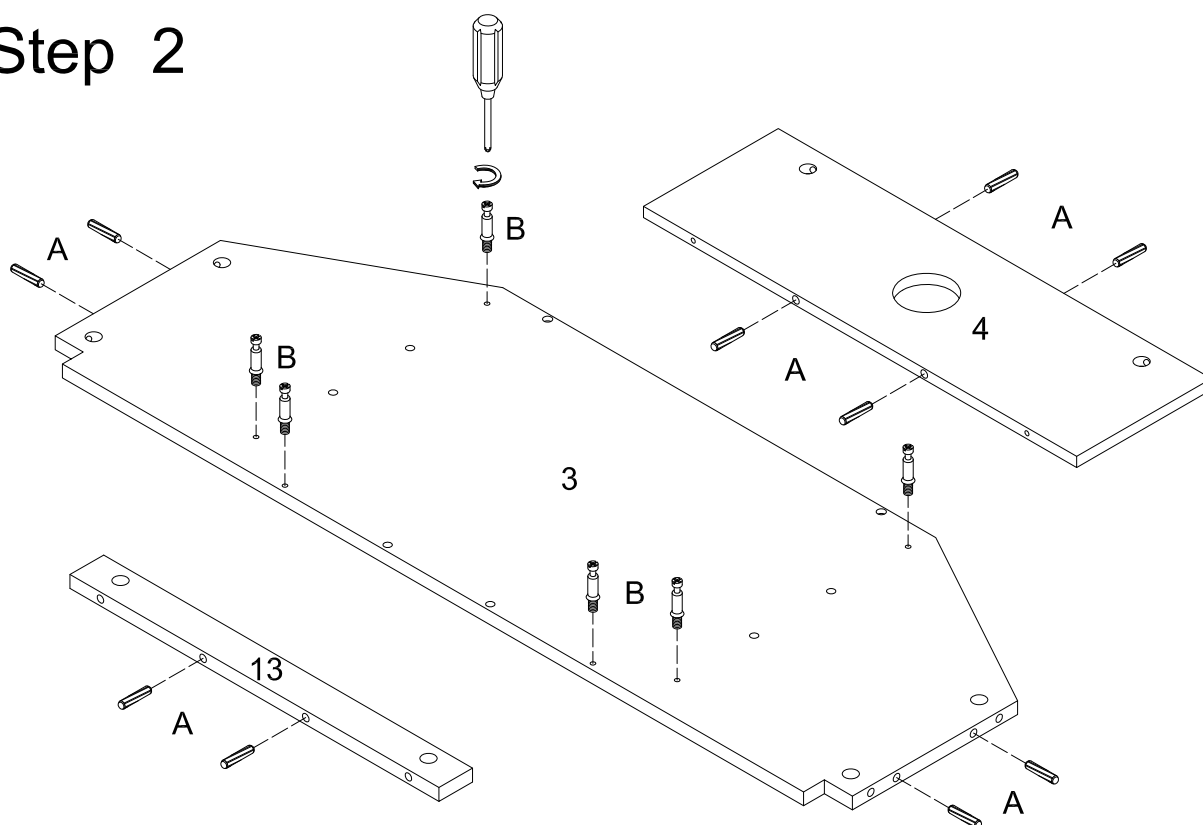


Attach cam bolts (B) to part (3). Insert wooden dowels (A) into parts (3,4) and (13).

Step 3

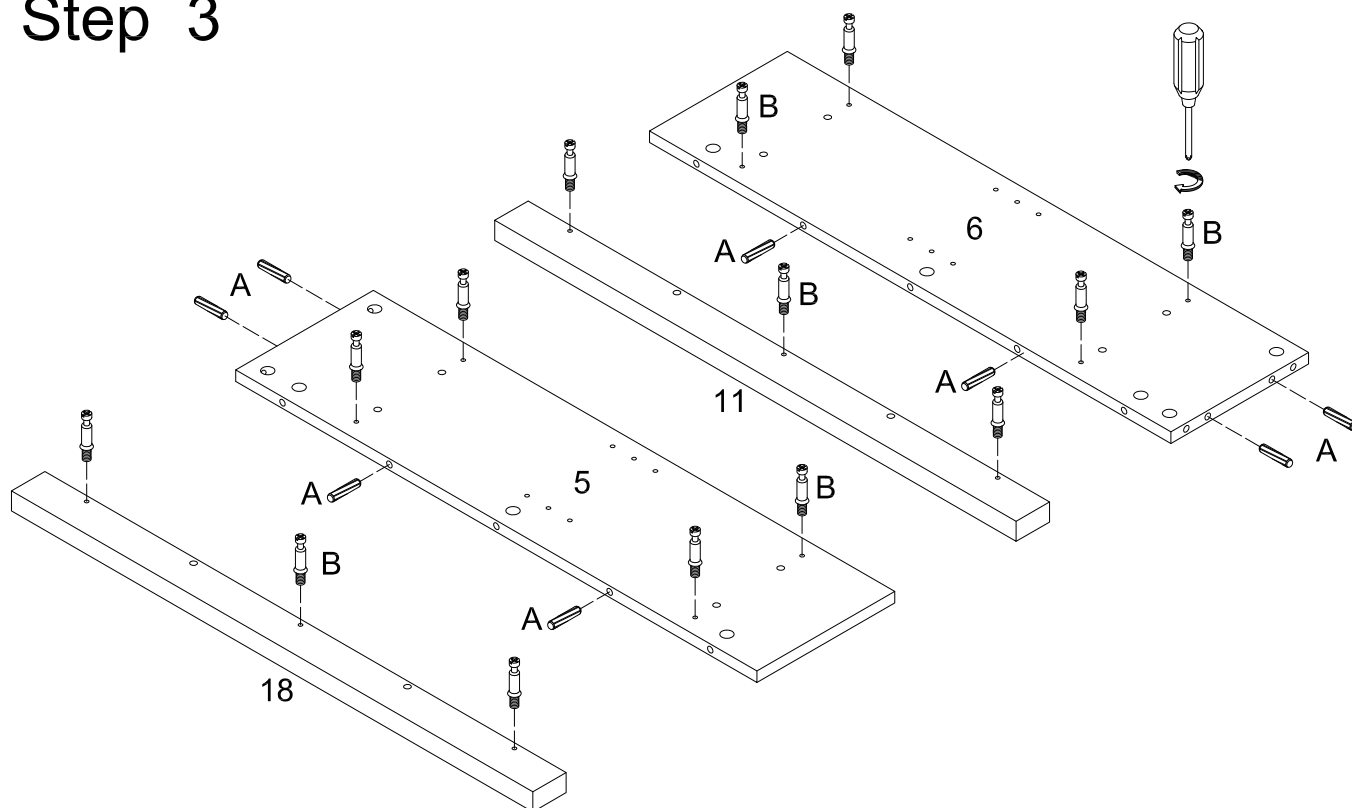


Attach cam bolts (B) to parts (5,6) and (11,18). Insert wooden dowels (A) into parts (5) and (6).

Step 4

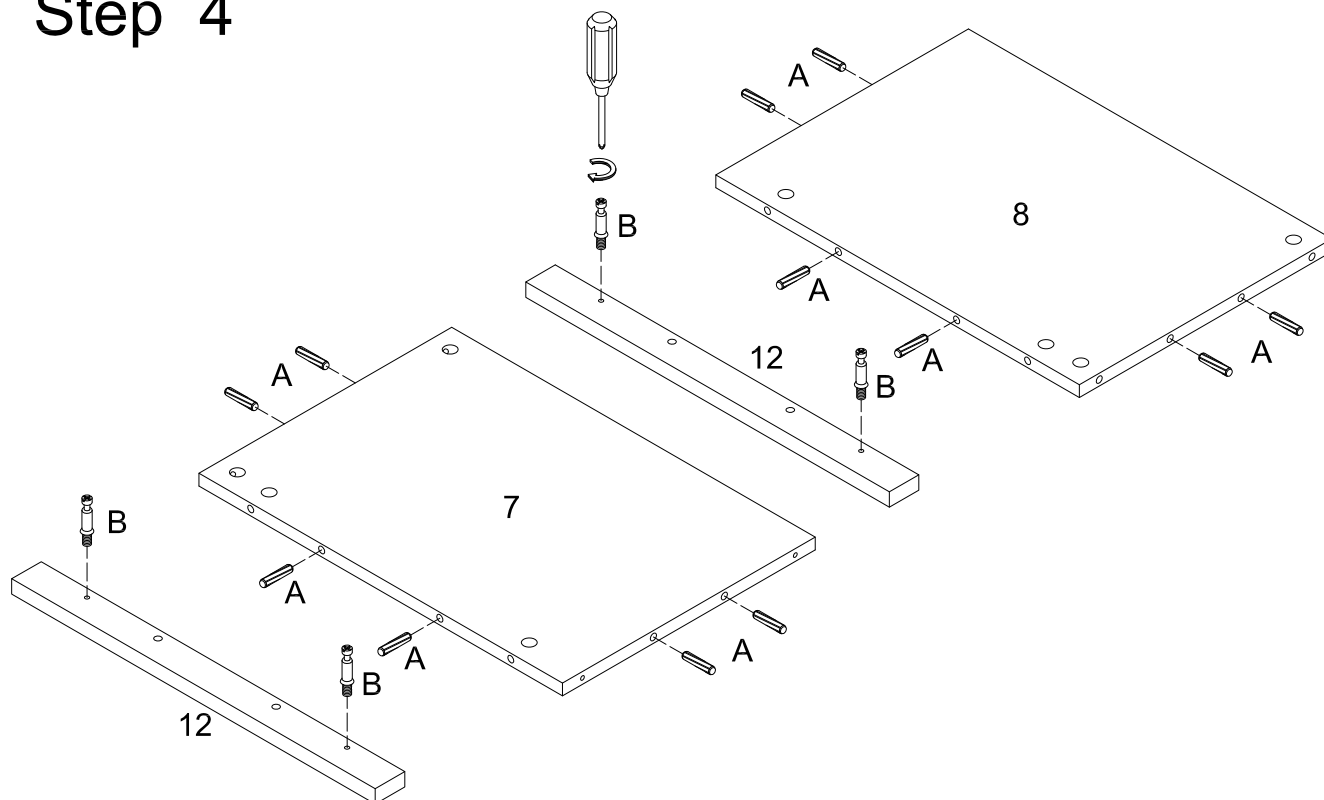


Attach cam bolts (B) to parts (12). Insert wooden dowels (A) into parts (7) and (8).

Step 5

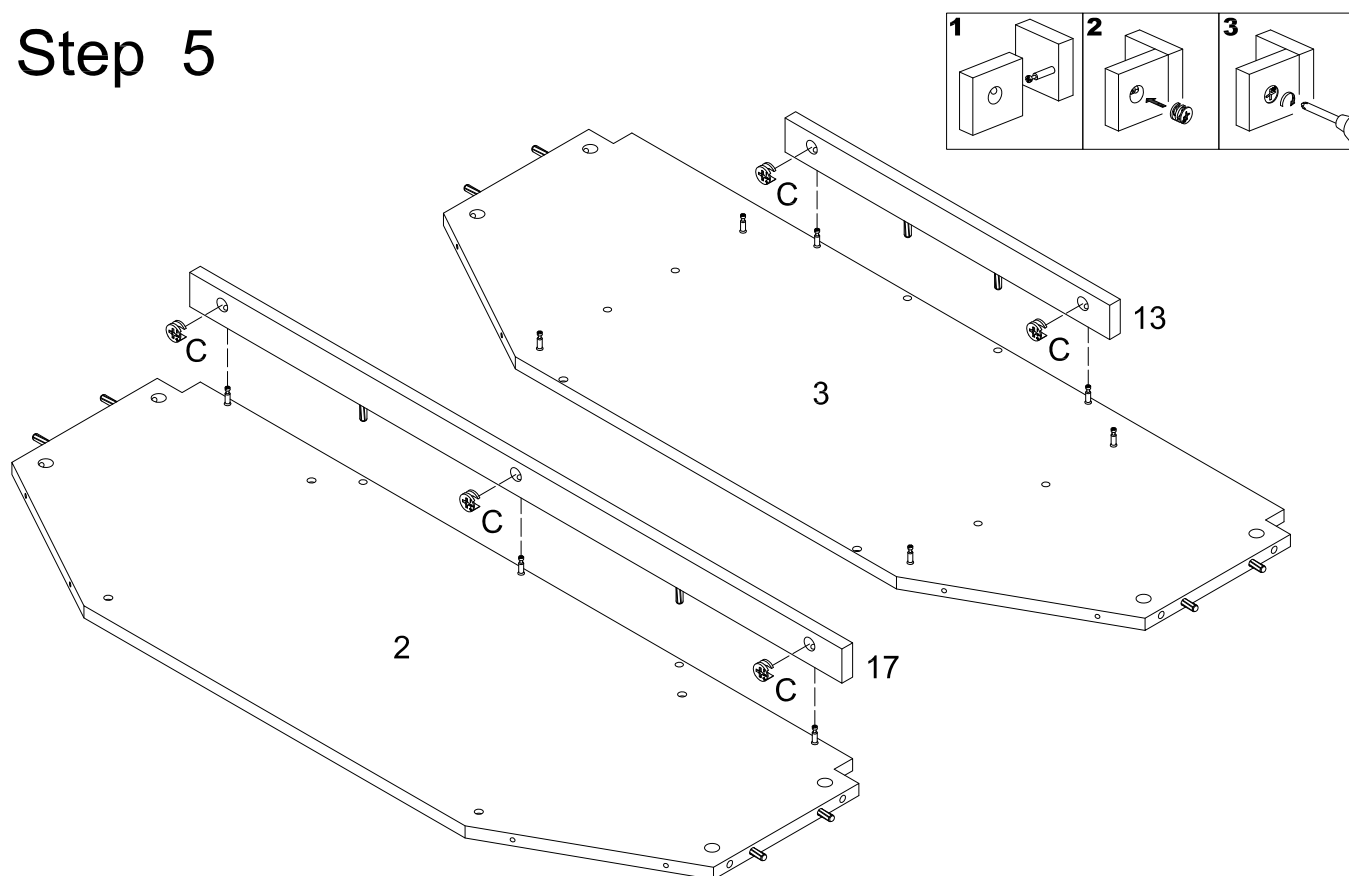


Attach cam locks (C) to parts (13) and (17) to connect part (2) and part (3) as shown in the diagram.

Step 6

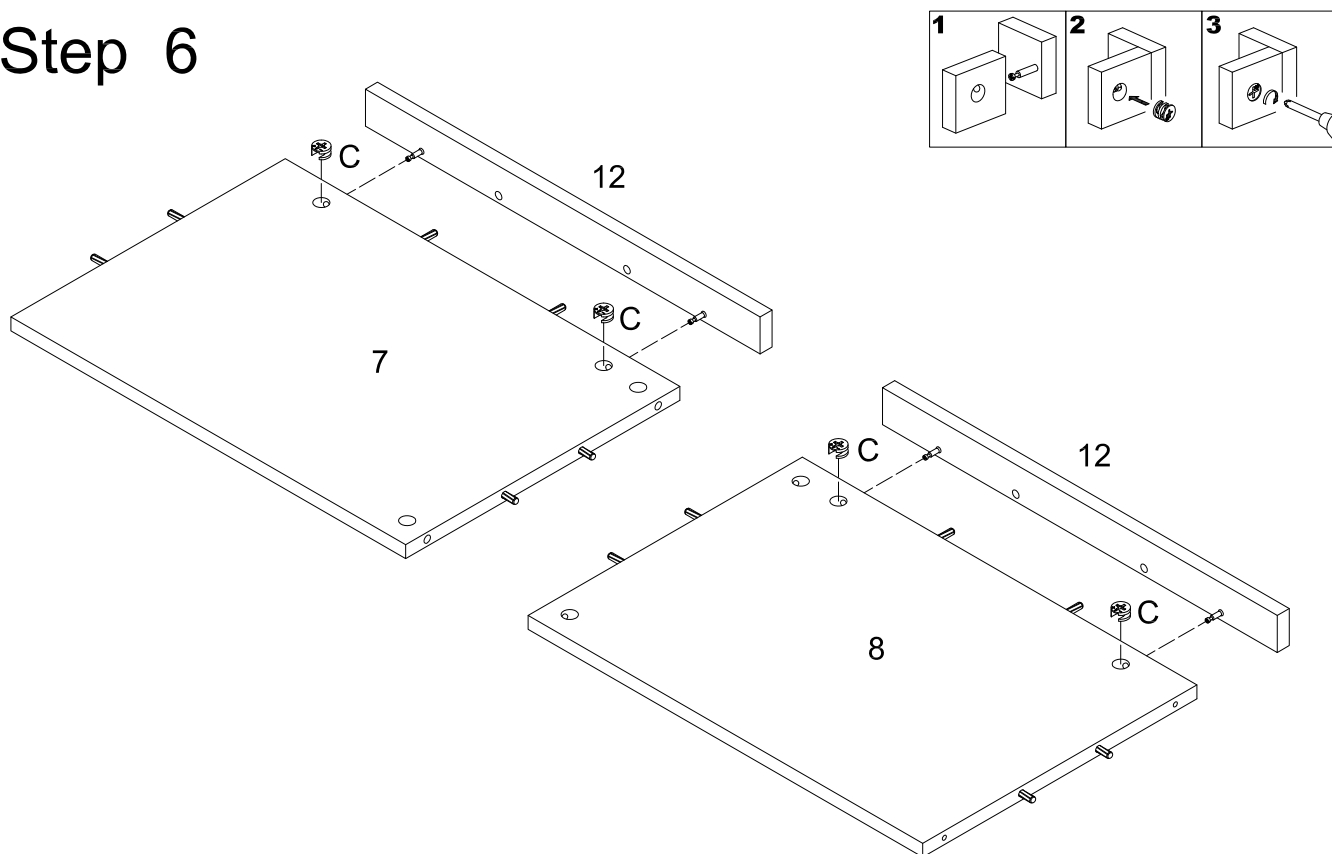


Attach cam locks (C) to parts (12) to connect to part (7) and part (8) as shown in the diagram.

Step 7

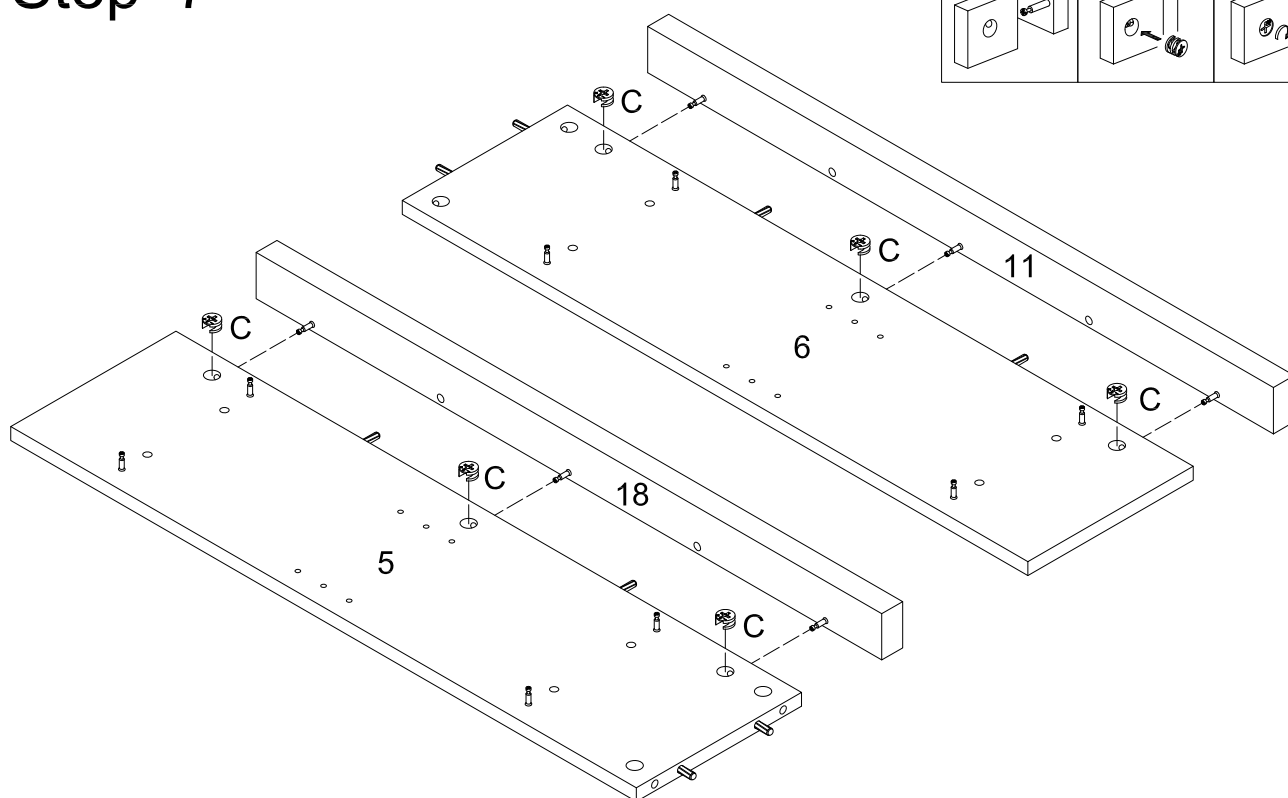



Attach cam locks (C) to parts (11,18) to connect to part (5,6) as shown in the diagram.

Step 8

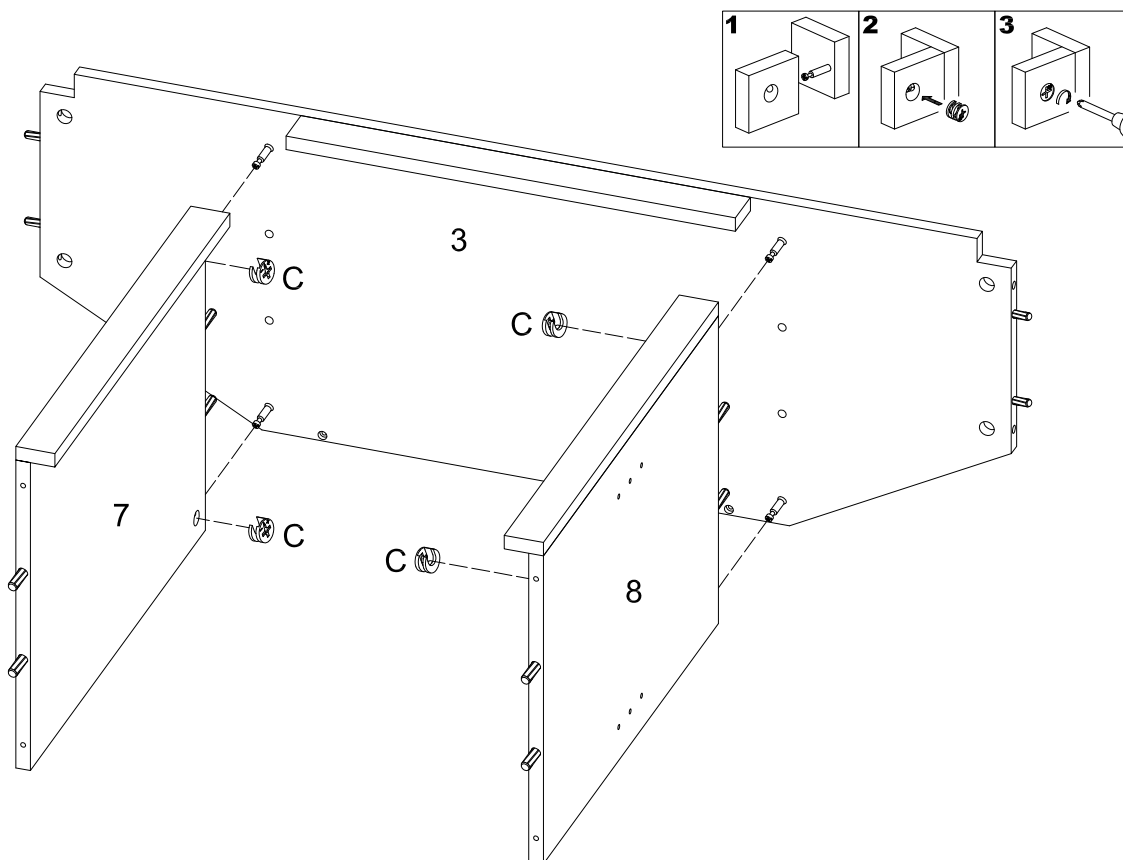



Attach cam locks (C) to parts (7) and (8) to connect to part (3) as shown in the diagram.

Step 9

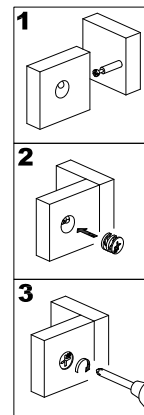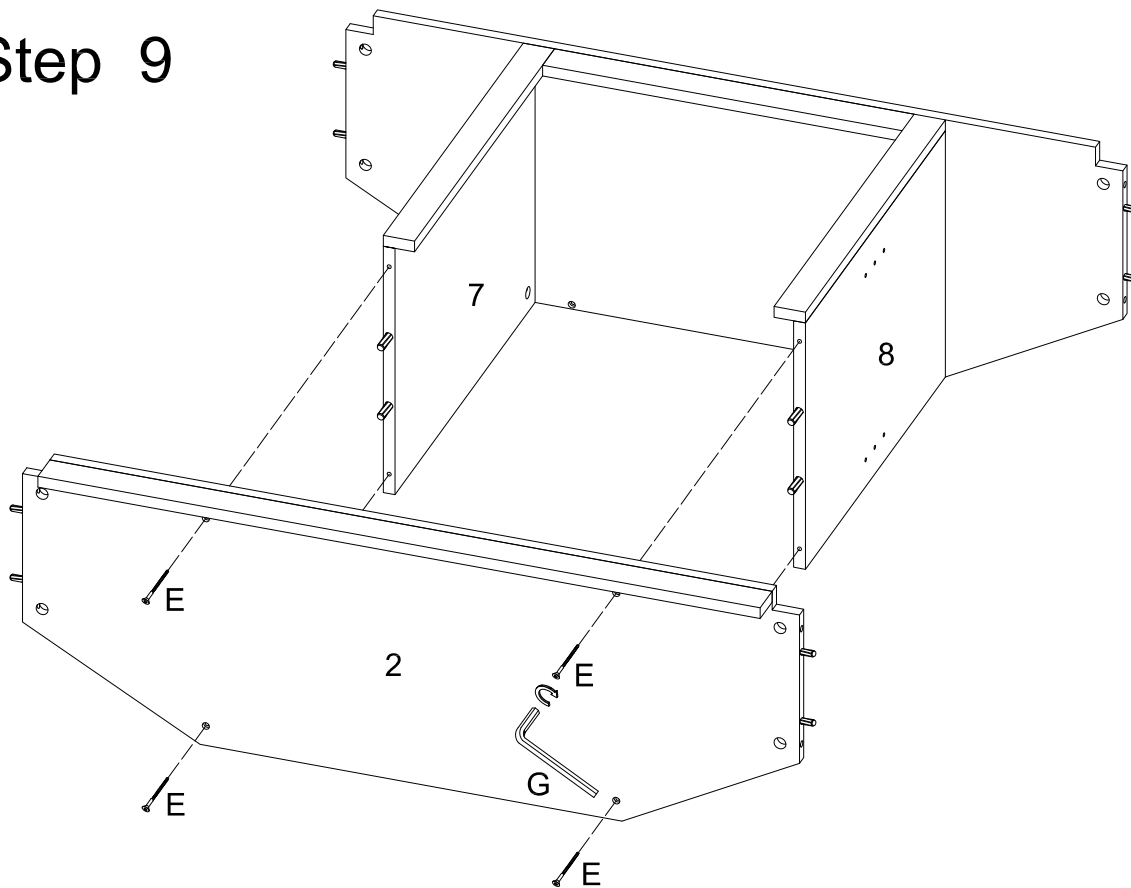


Secure part (2) to frame assembly using bolts (E) as shown in the diagram.

Step 10

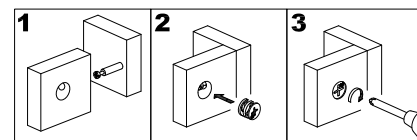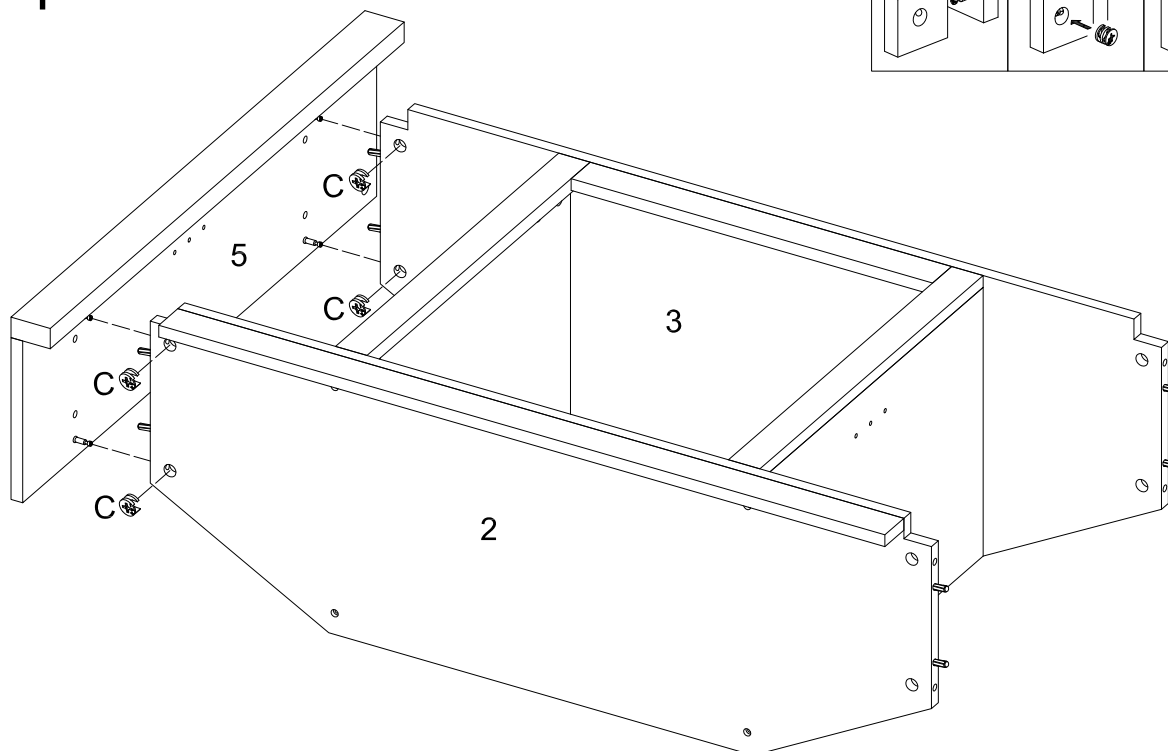


Use cam bolts (C) to connect part (5) to assembled frame.

Step 11

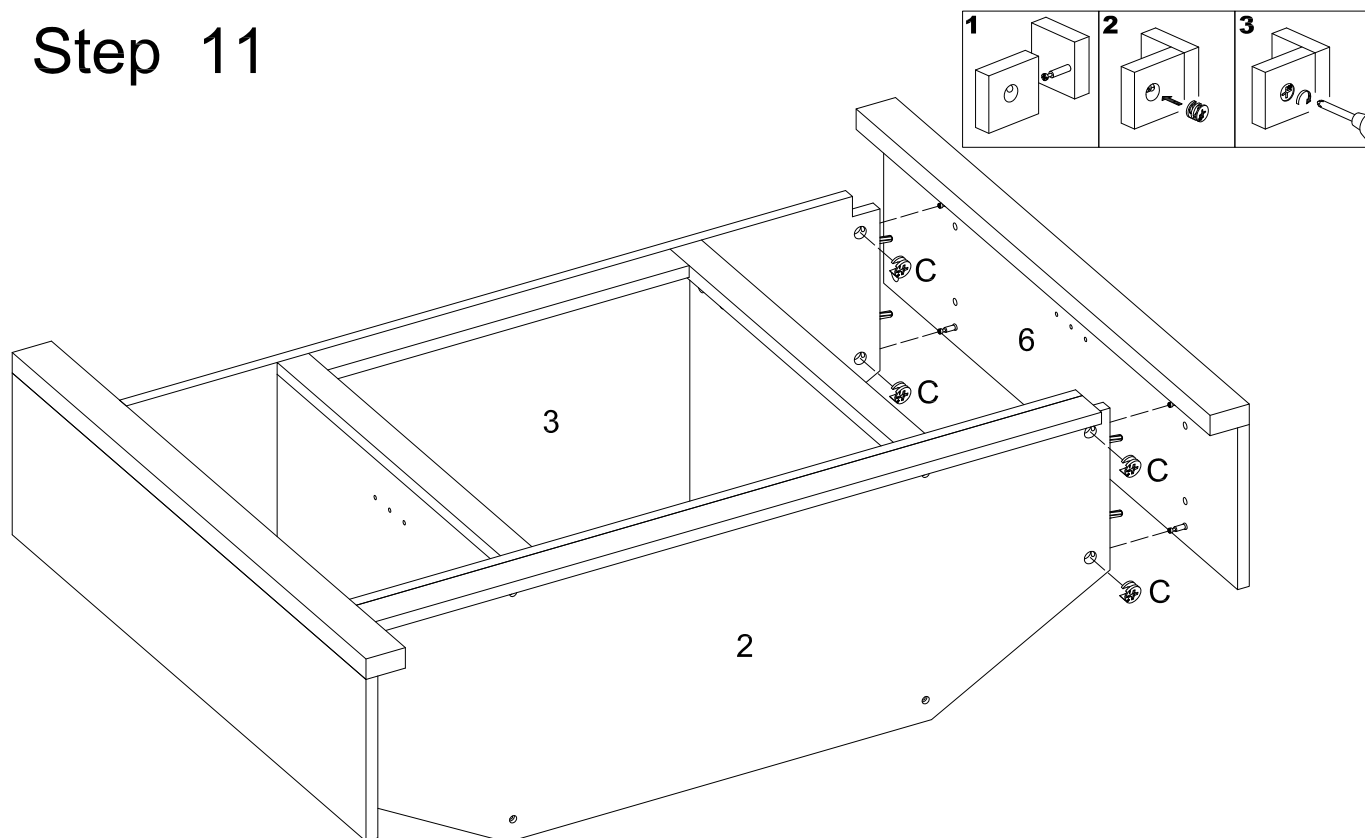


Use cam bolts (C) to connect part (6) to assembled frame.

Step 12

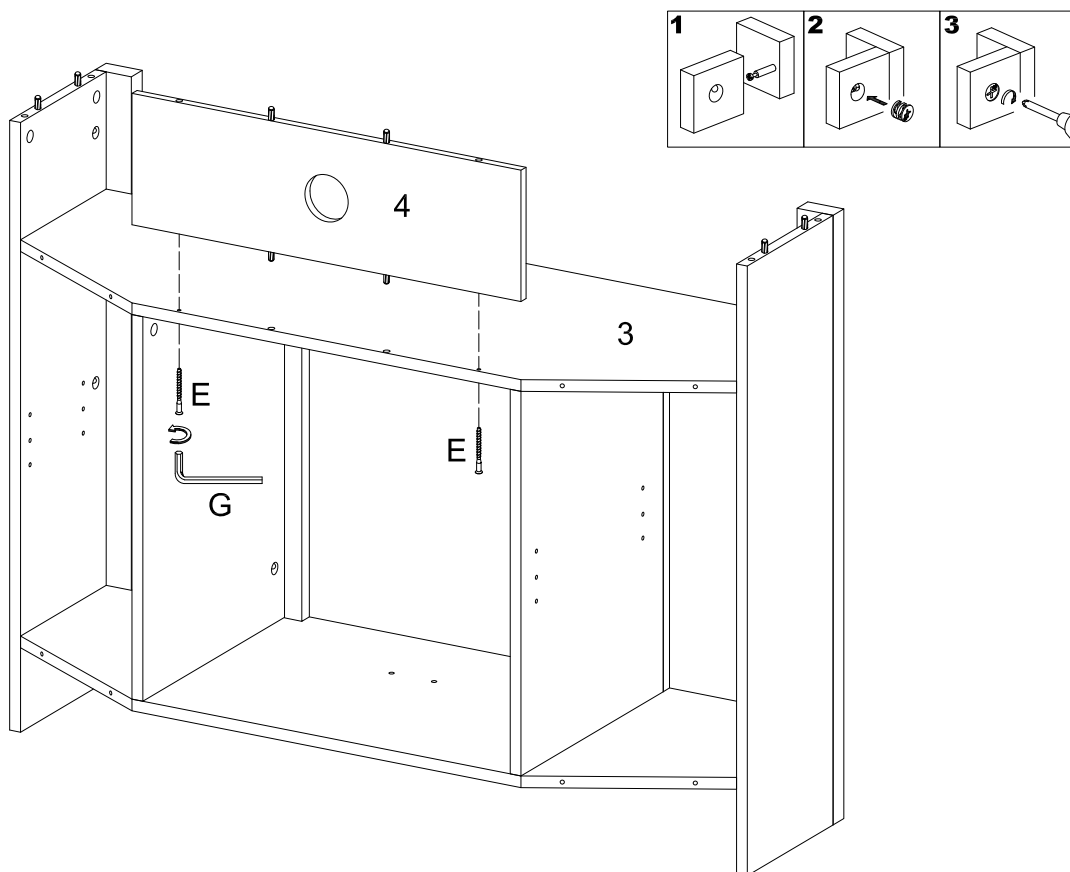



Secure part (4) to frame assembly using bolts (E) as shown in the diagram.

Step 13

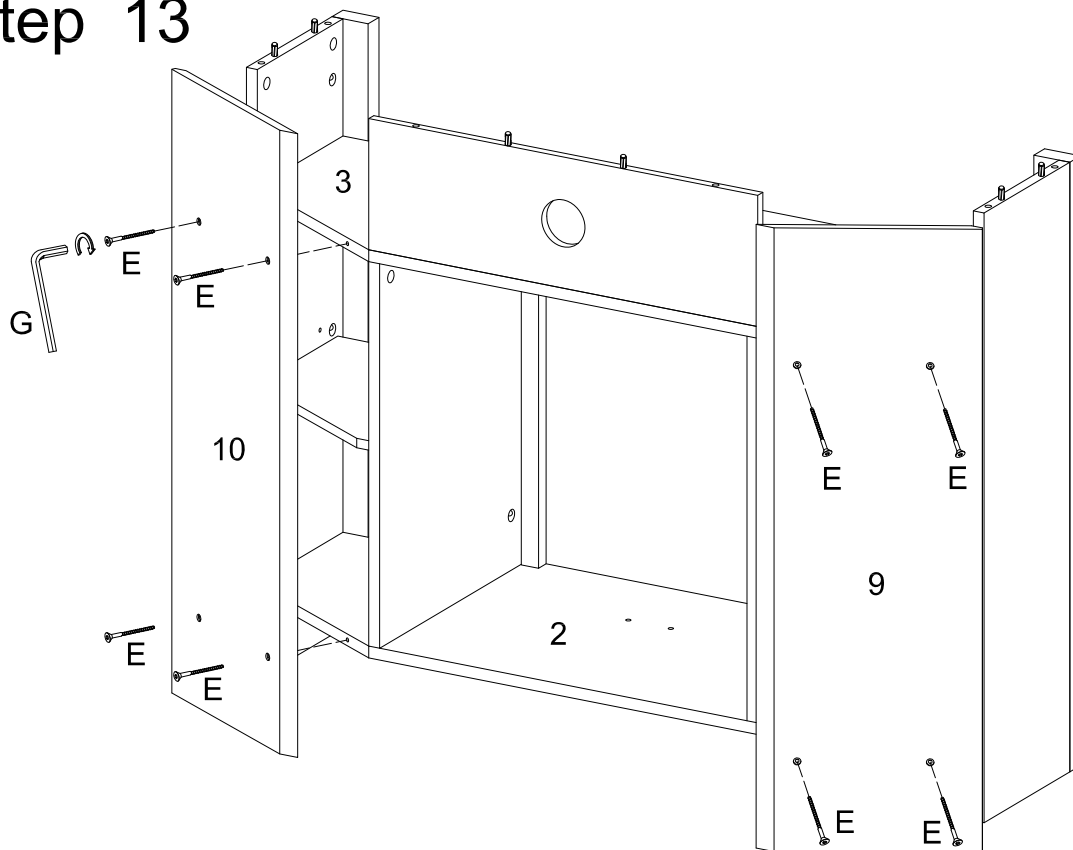


Attach parts (9) and (10) to frame assembly using bolts (E) as shown in the diagram.

Step 14

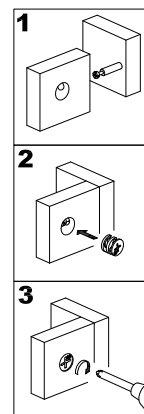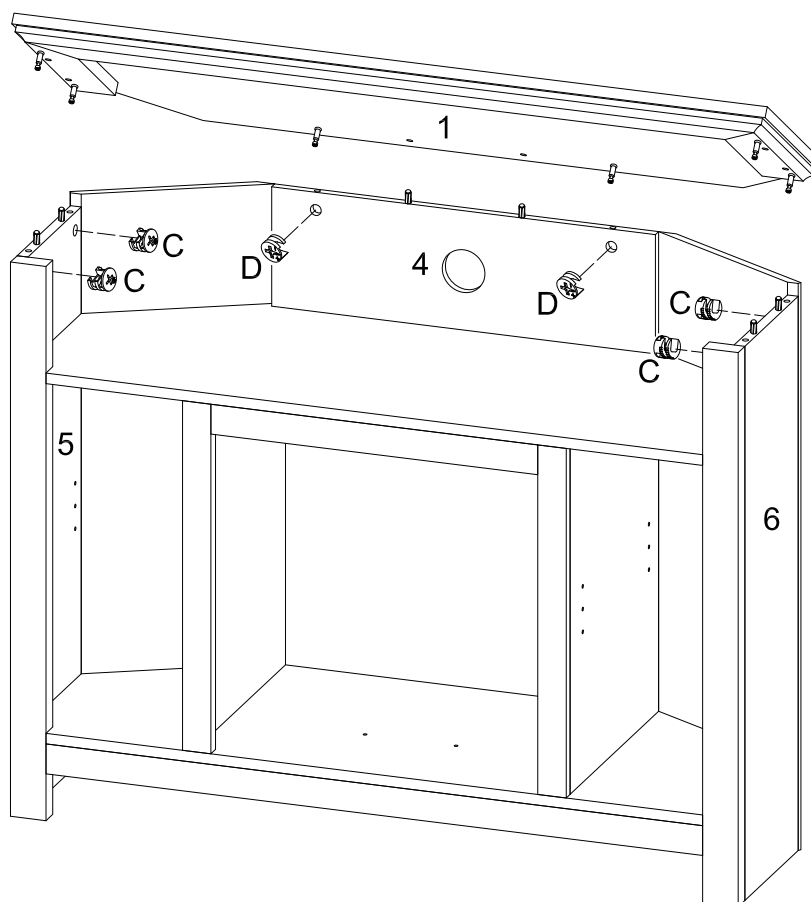


Secure top panel (1) to frame using cam locks (C) and (D) as shown in the diagram.

Step 15

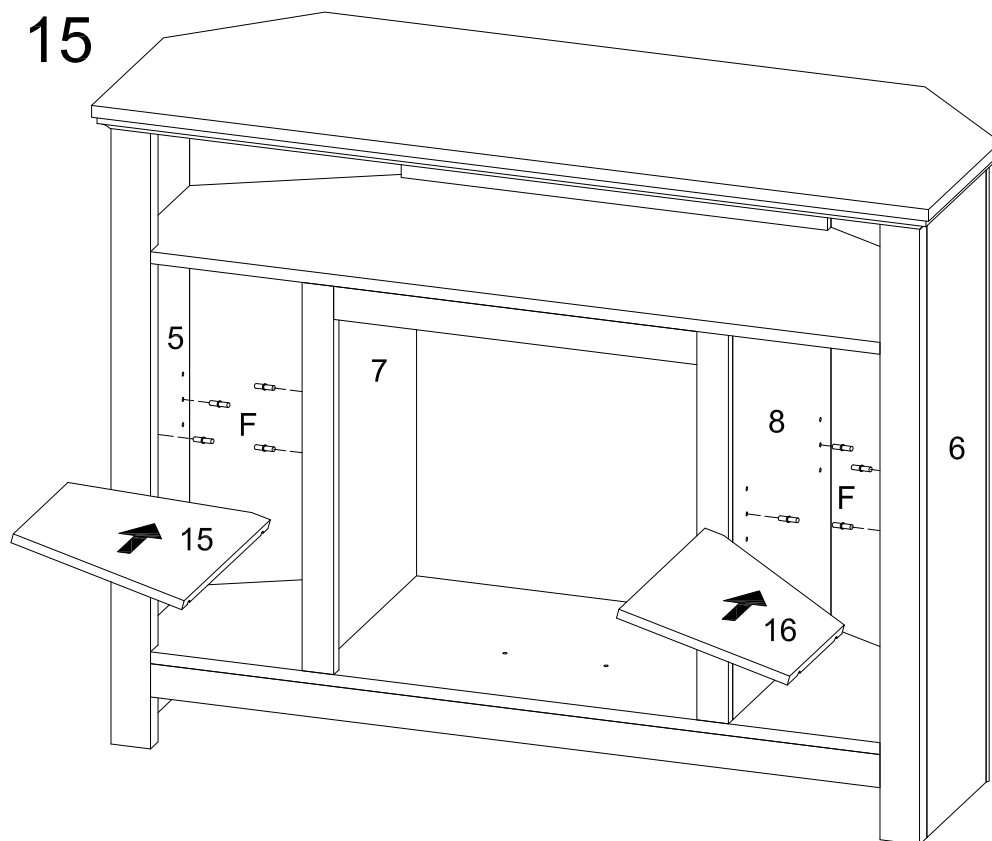


Insert shelf supports (F) and place shelves (15) and (16) carefully.

Step 16

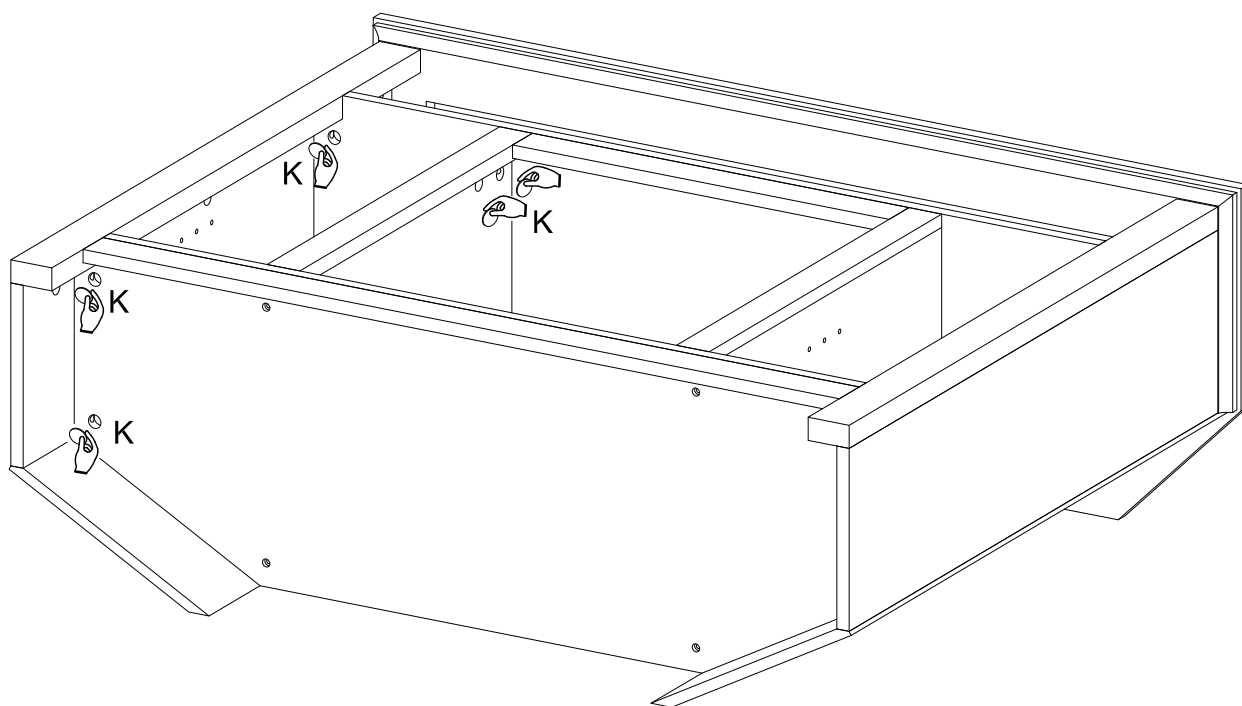



Place stickers (K) in designated areas as shown in the diagram.

Step 17

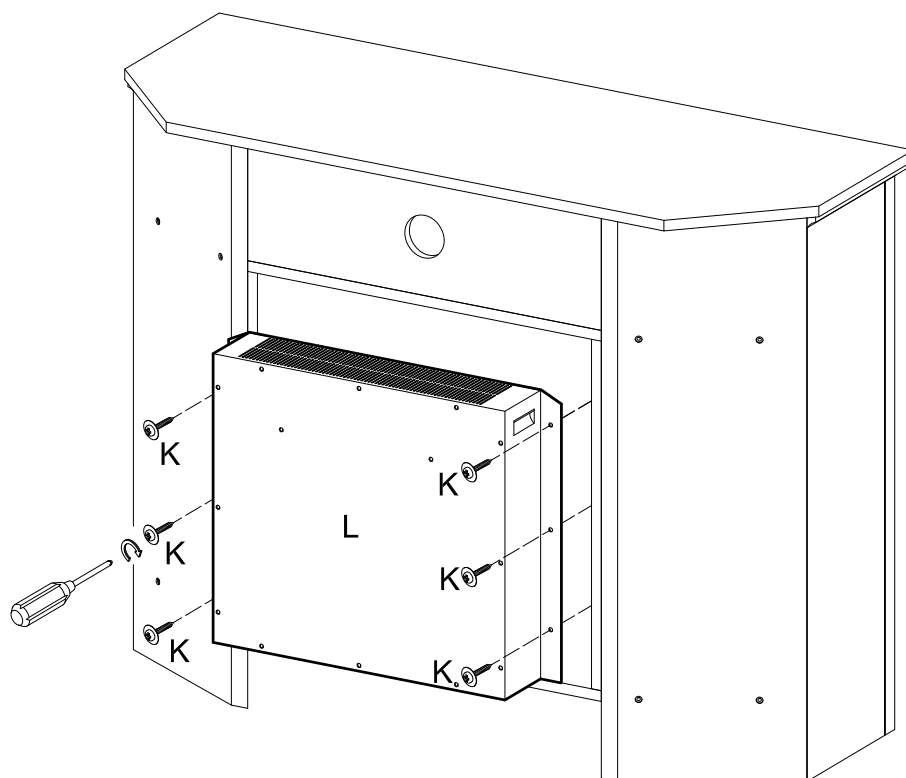


Insert fireplace (L) to the front by sliding it through the back of the unit and attach by using screws (K).

Step 18

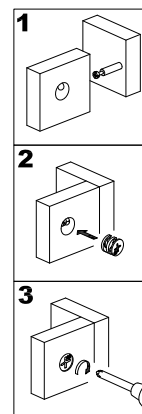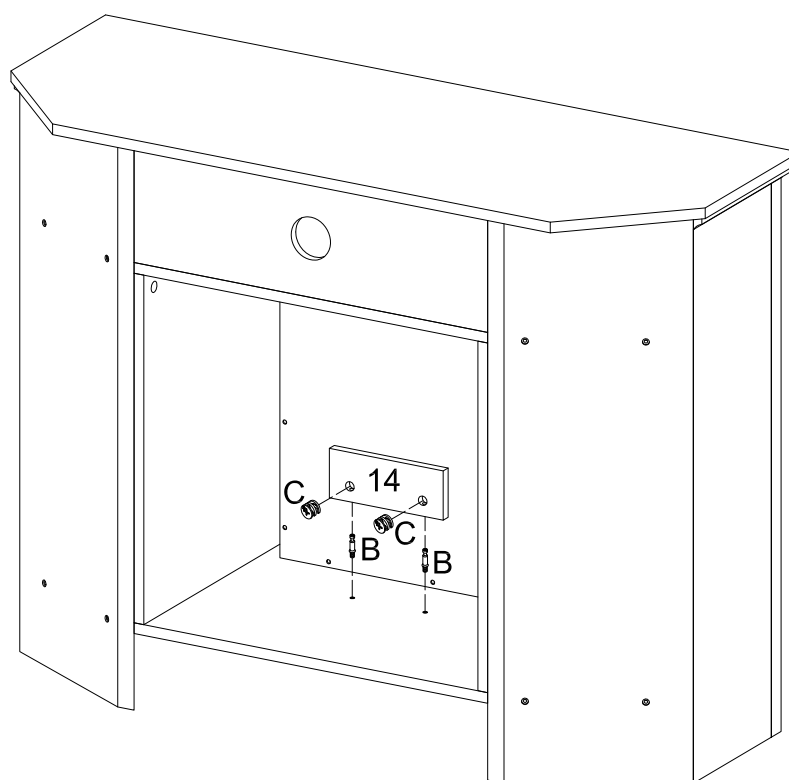


Attach part (14) behind the fireplace unit by using cam bolts (C) and cam bolts (B).

Step 19

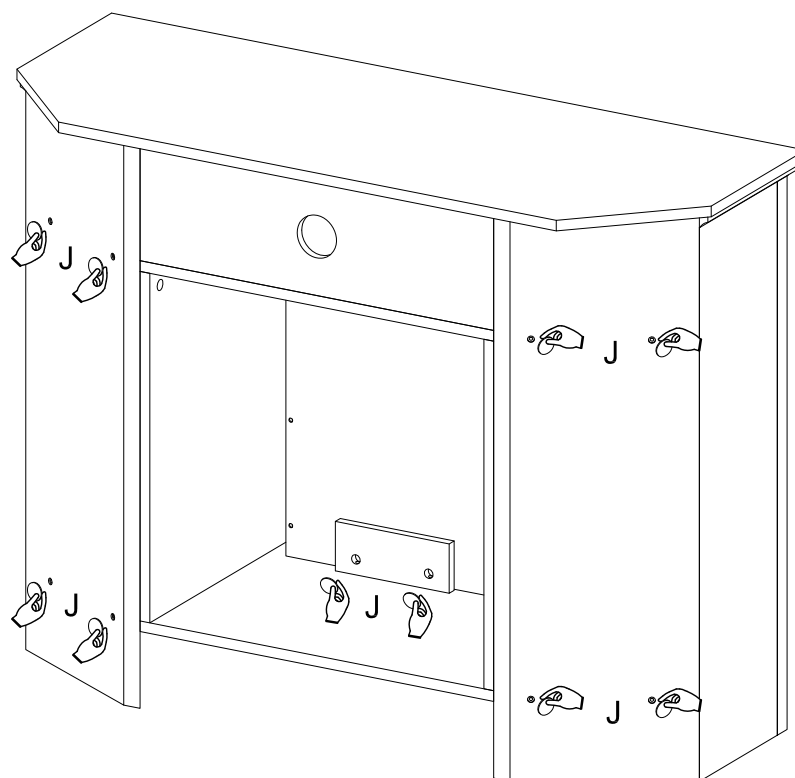

Place stickers (J) in designated areas as shown in the diagram.

Step 20

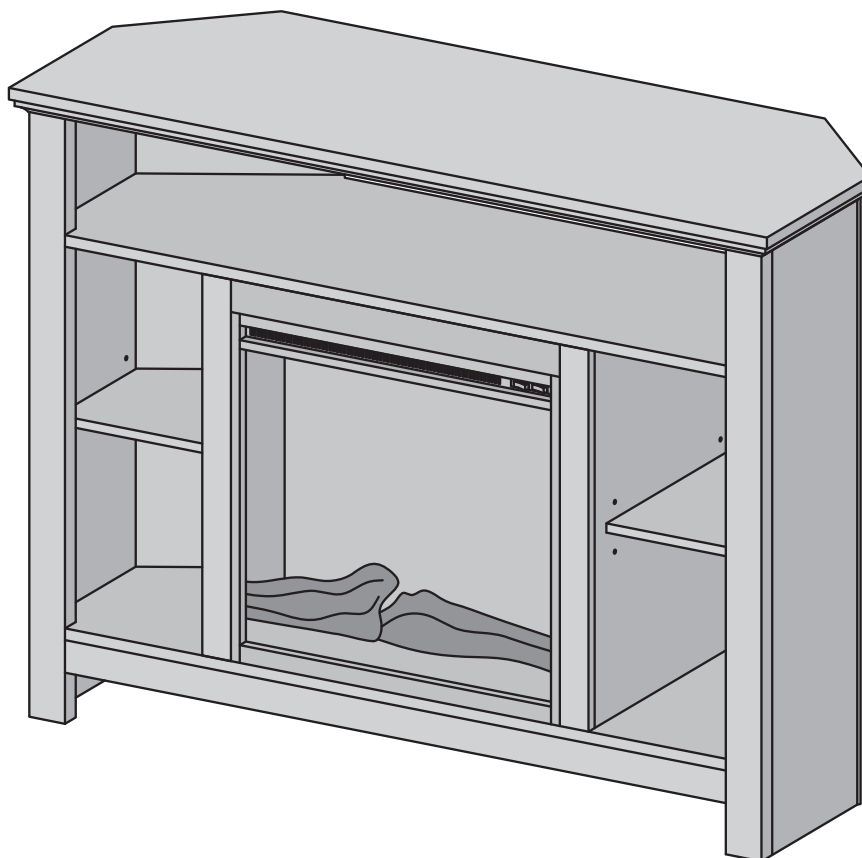

Final Assembly