


Assembly Instructions

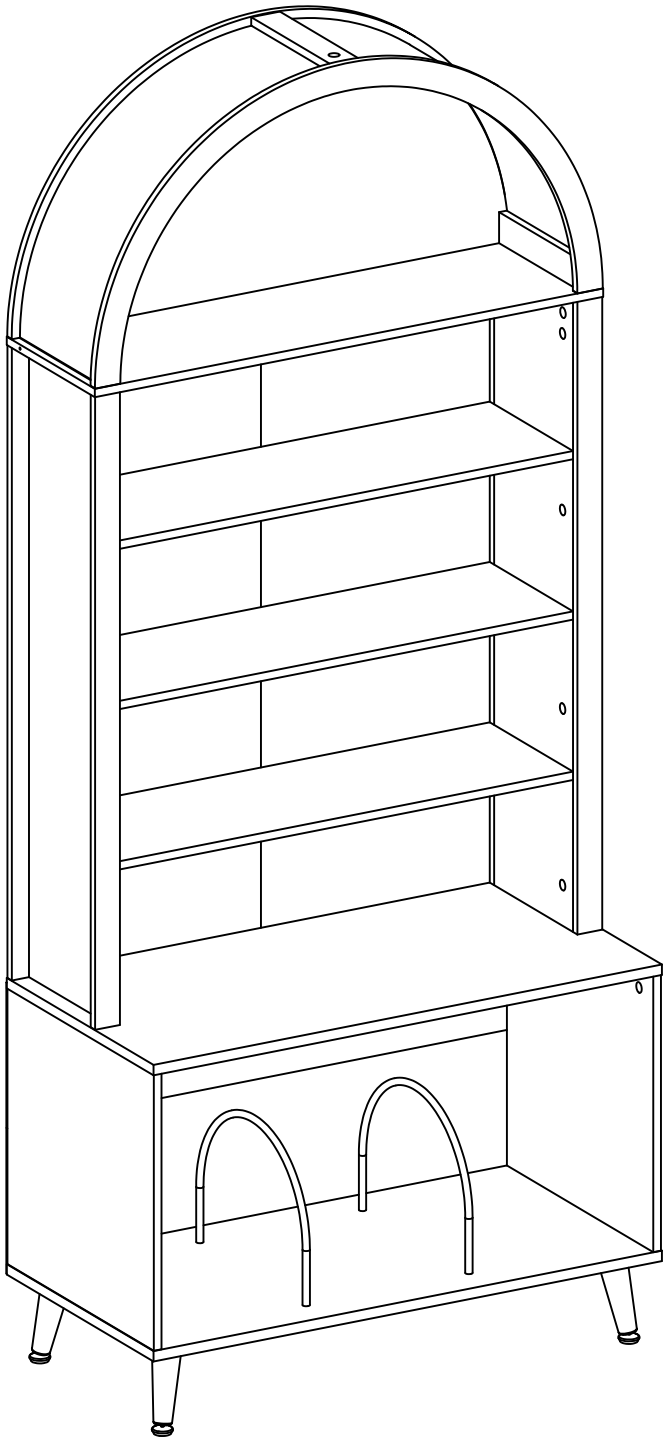


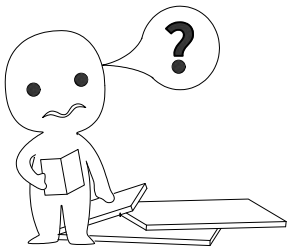


IMPORTANT INFORMATION!
please read the entire manual before starting to assemble and/or using this product.follow the manual thoroughly and keep it for further reference.

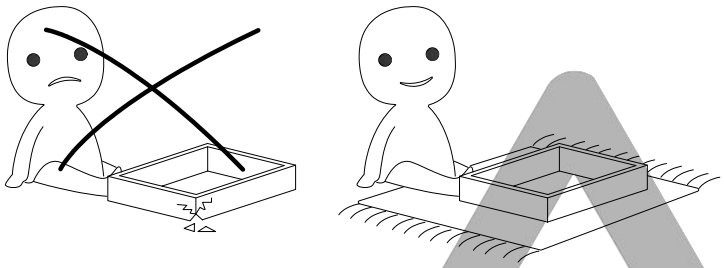

AVOID SCRATCHES!
In order to avoid scratching this furnuture should be assembled on a soft layer-could be a rug.

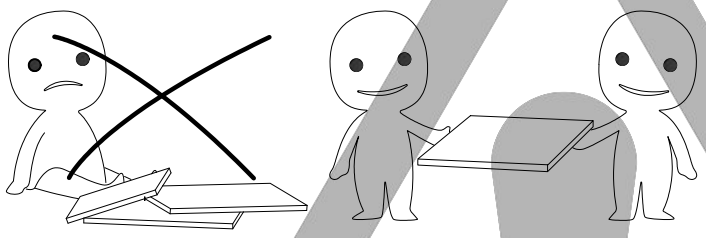

IMPROVE EFFICIENCY !
Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

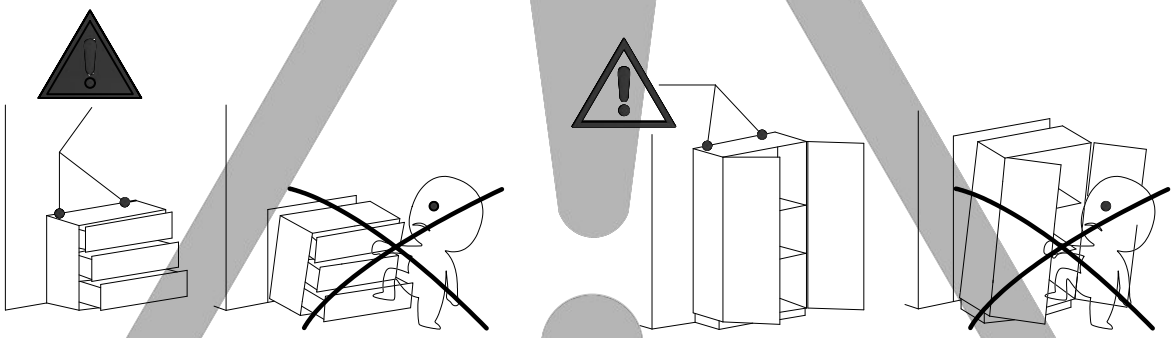

ANTI-TOPPLE WARNING !

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly,and once every 3 months - in order to assure stability through-out the lifespan of the product.


For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag.For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

'SAFETY TIPS:

Static charge may cause duston foam- clean with a dry or damp cloth.
Smafoam strands may oepresent - handle gently and dispose of properly.
Do not burn or incinerate.
Check local recycling quidelines.

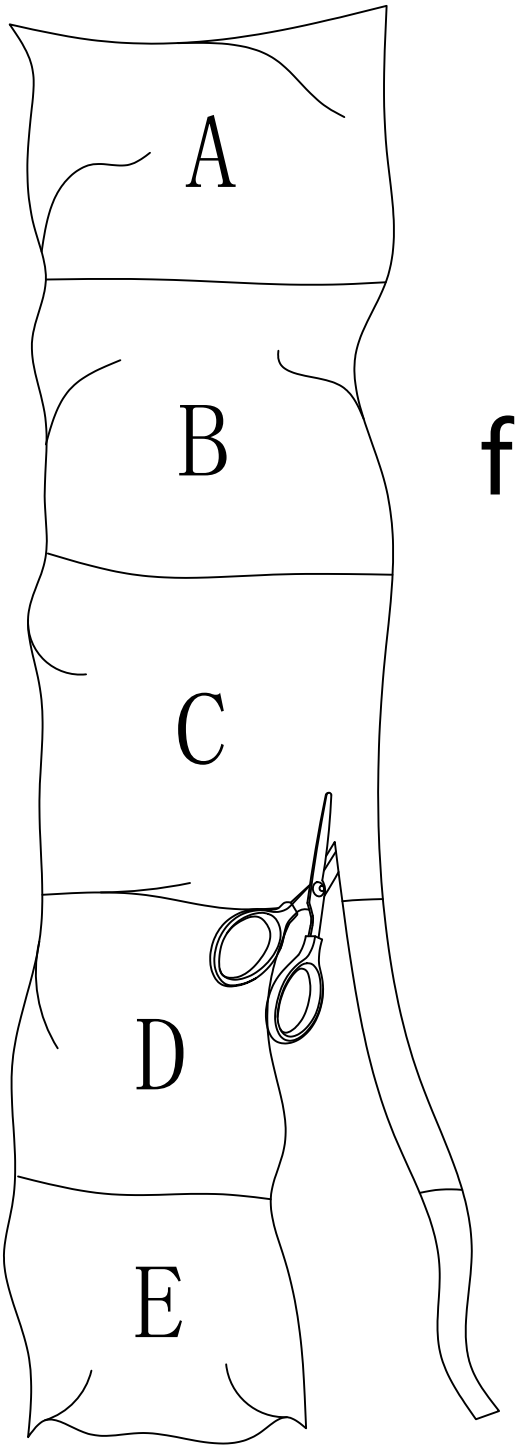


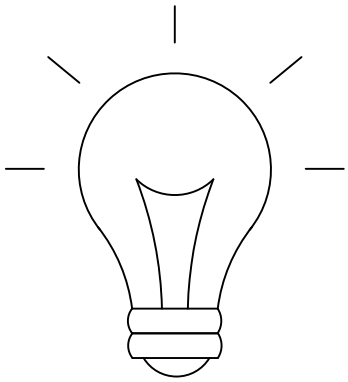

friendly reminder

To avoid errors and confusion during the installation of accessories, use the type and quantity of hardware accessories according to the installation procedure described in the instructions. First, unroll the accessories bag and lay out the hardware accessories, cut holes in the side, and take out the hardware accessories

Packaging Details

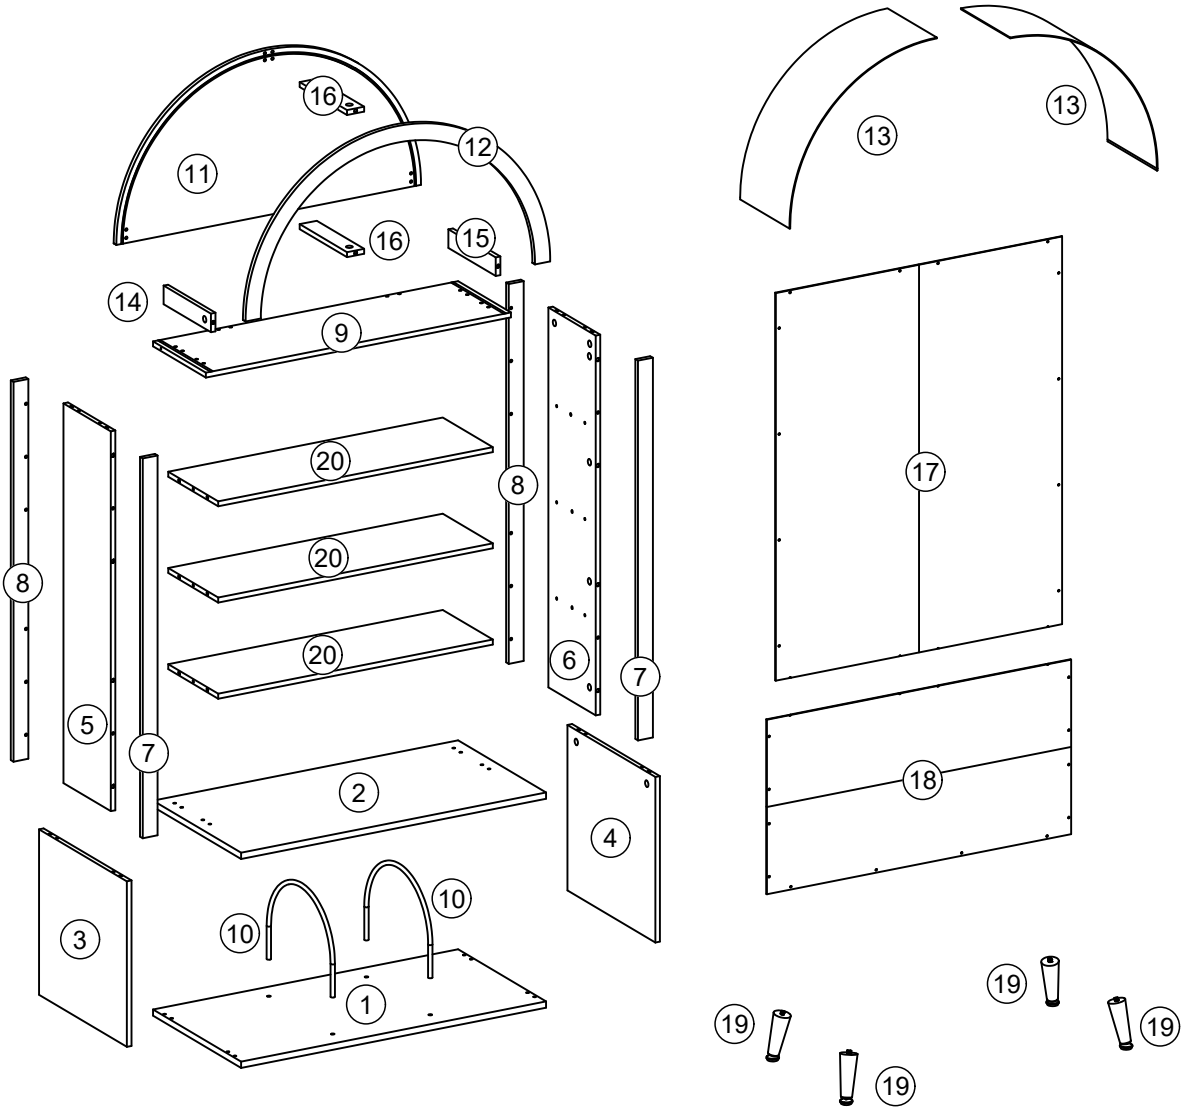

A	X32+4
Ø6x35mm	

B	X32+4
Ø15x10mm	

C	X36+4
Ø6x30mm	

D	X30+4
Ø5x38mm	

E	X48+5
ø4x12mm	

F	X4


G	X2

H	X4+1
M6x20mm	


I	X1
4mm	

J	X28+4


Step 01

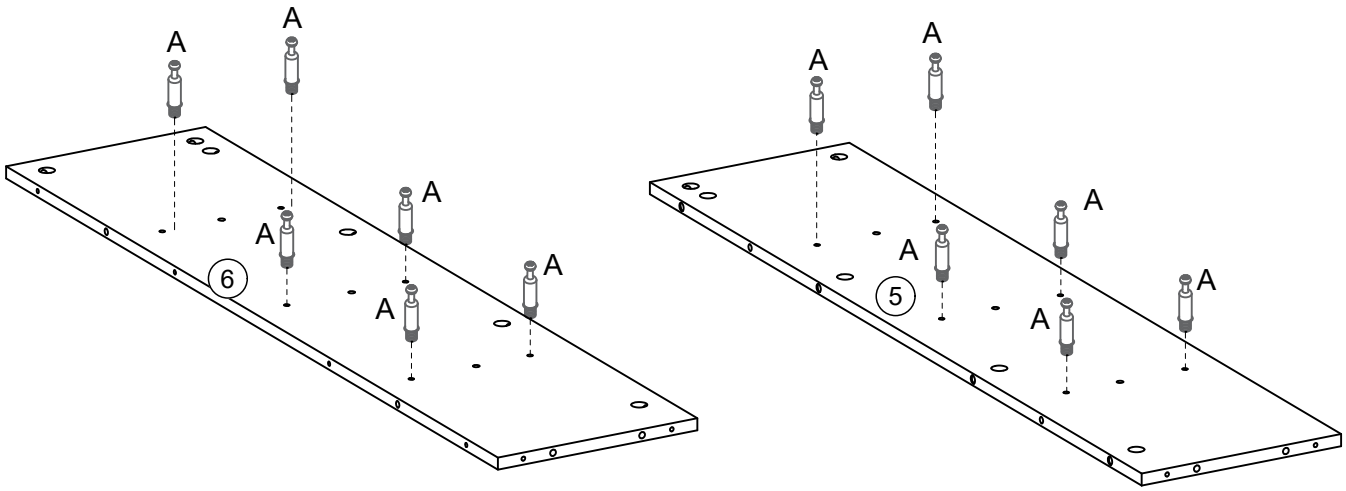

A	X12
Ø6x35mm	

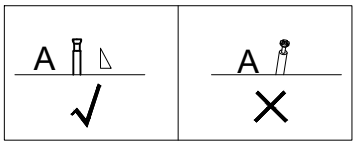


Step 02

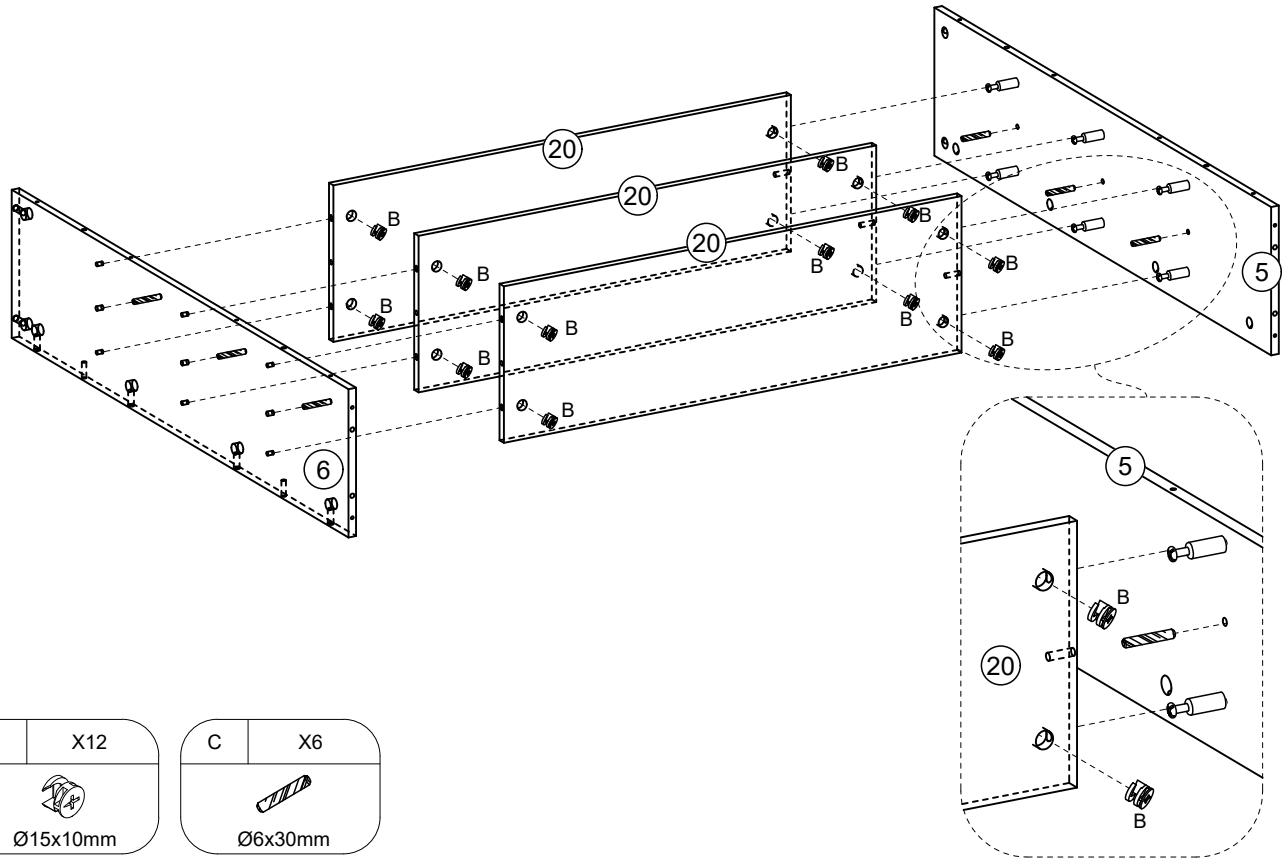

B	X12
Ø15x10mm	

C	X6
Ø6x30mm	


Step 03

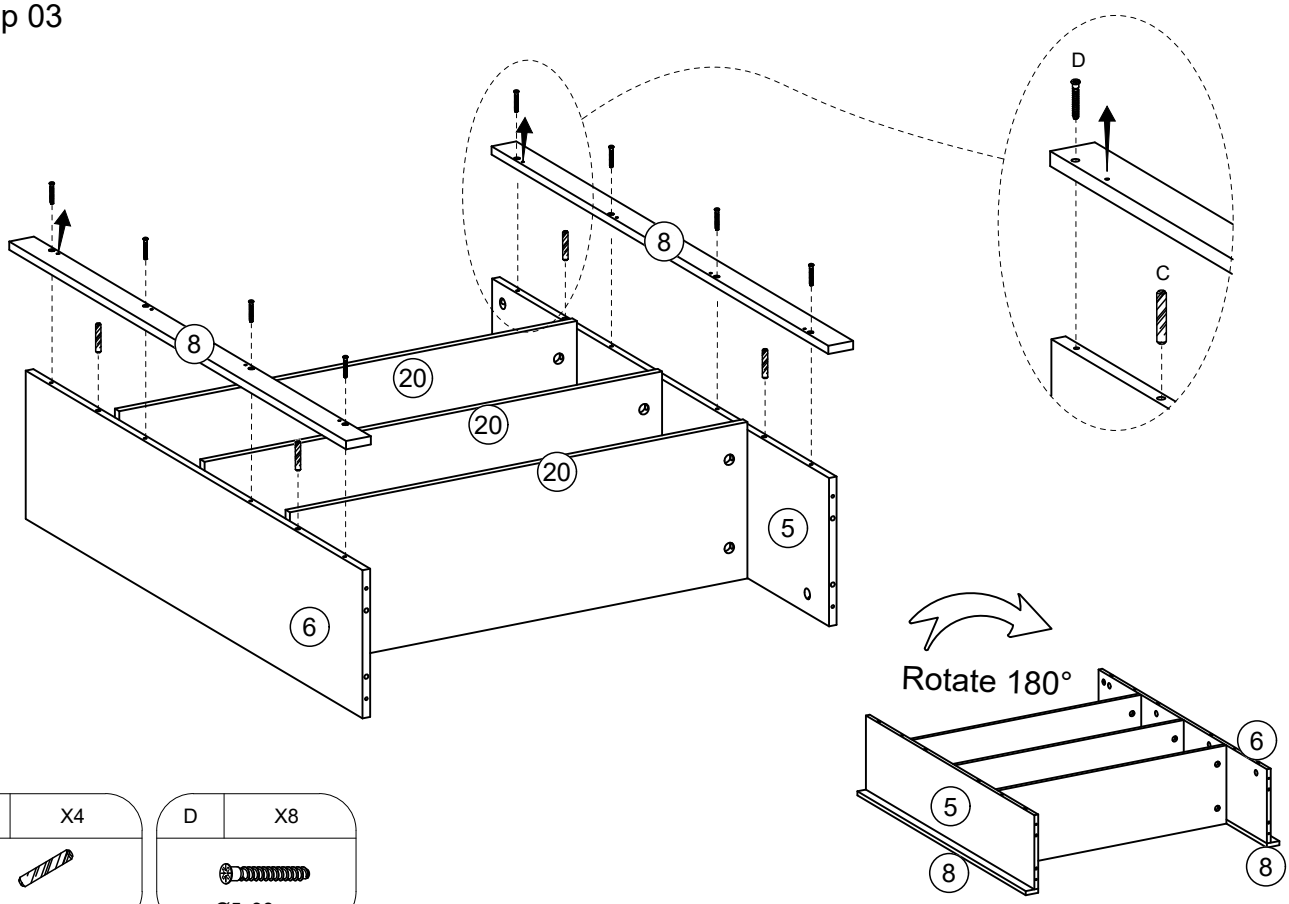


C	X4
Ø6x30mm	

D	X8
Ø5x38mm	


Step 04

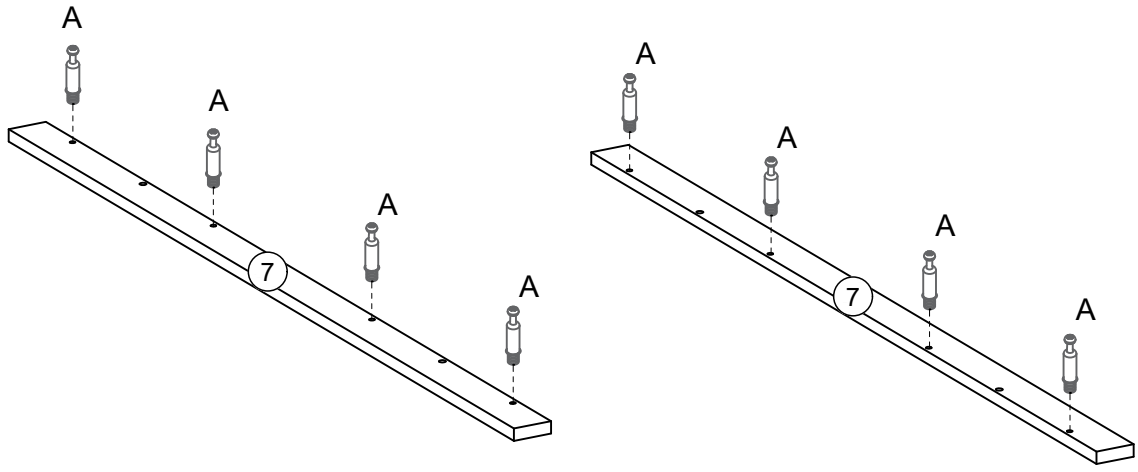

A	X8
Ø6x35mm	

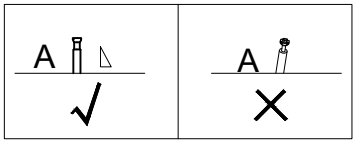


Step 05

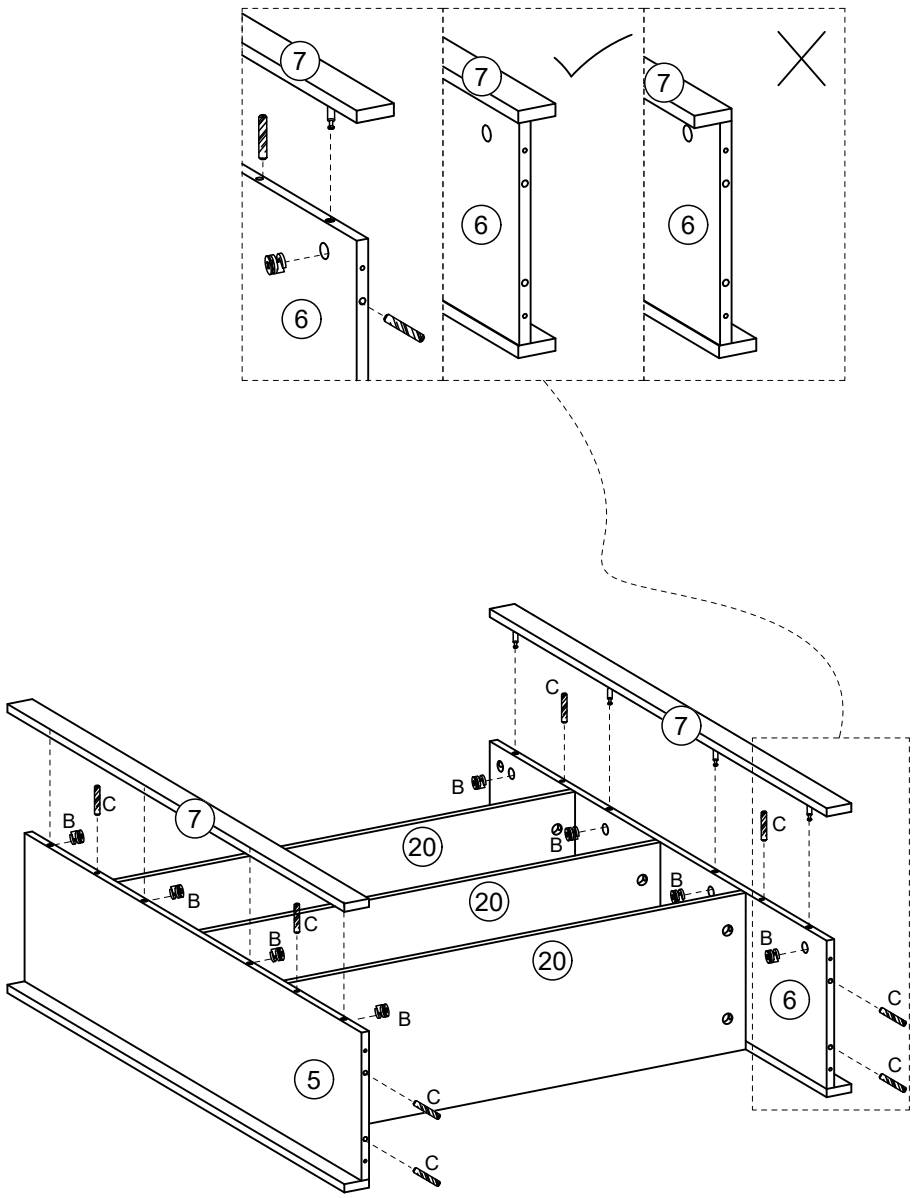

B	X8
Ø15x10mm	

C	X8
Ø6x30mm	


Step 06

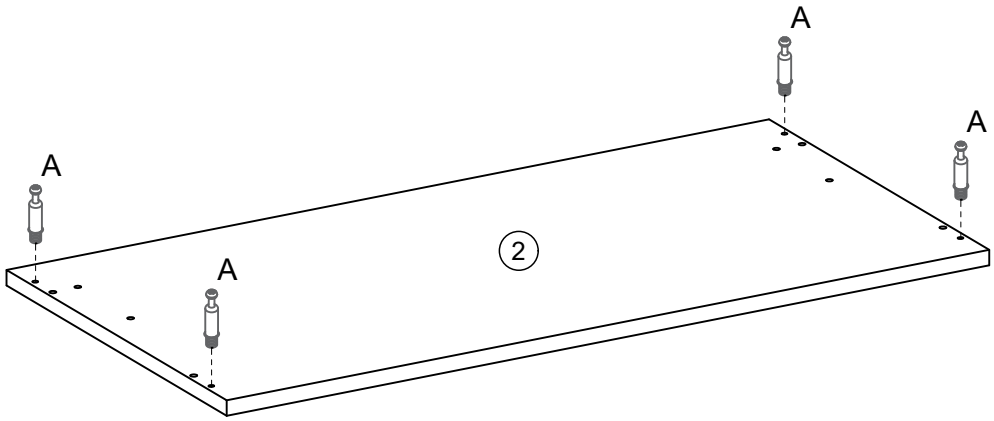


A	X4



Ø6x35mm

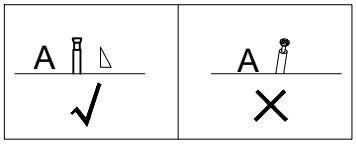

Step 07

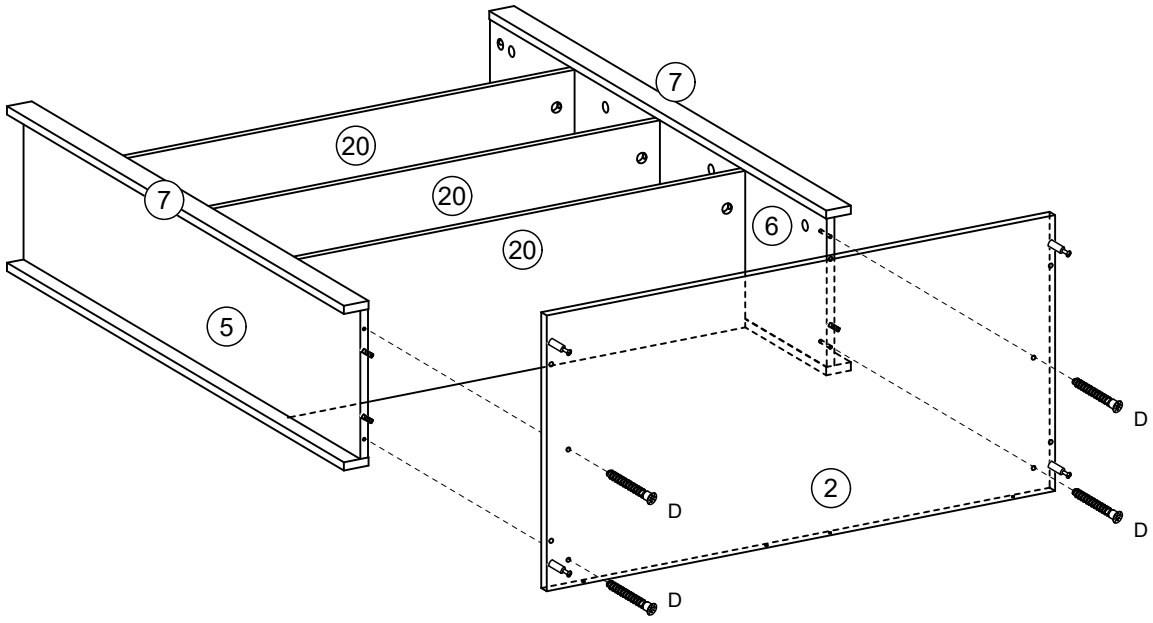


D	X4



Ø5x38mm


Step 08

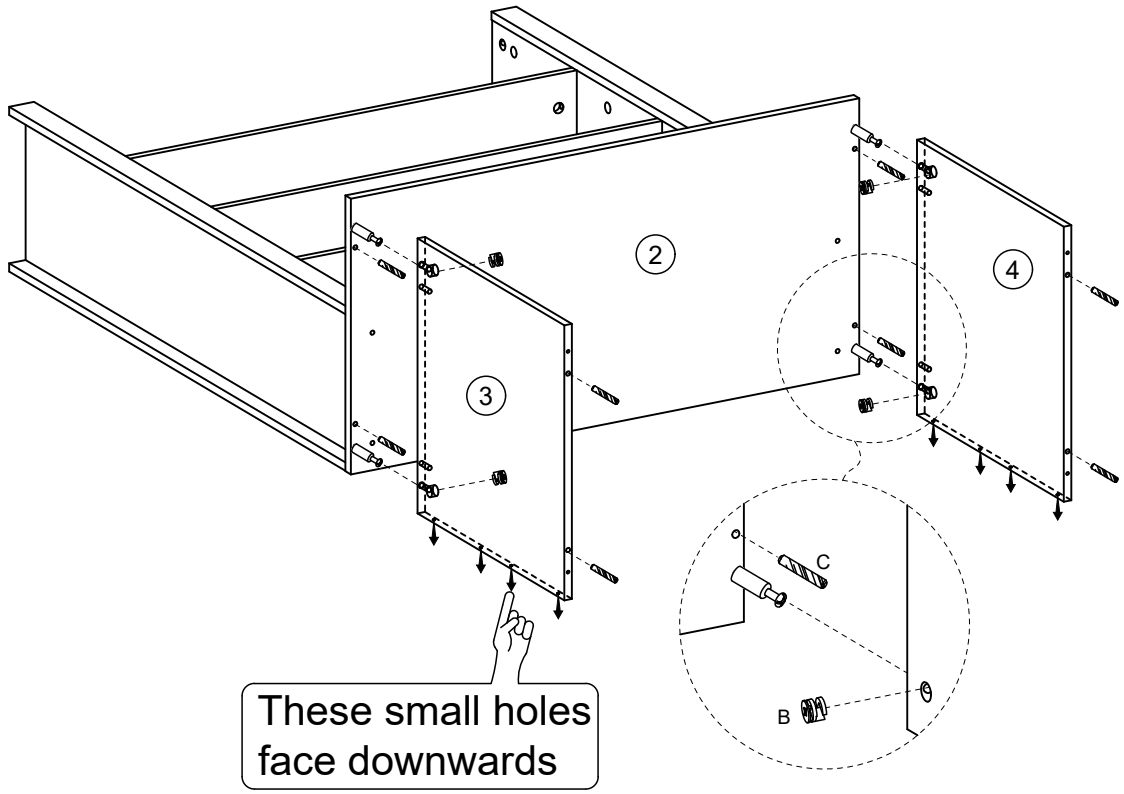

B	X4
Ø15x10mm	


C	X8
Ø6x30mm	

Step 09

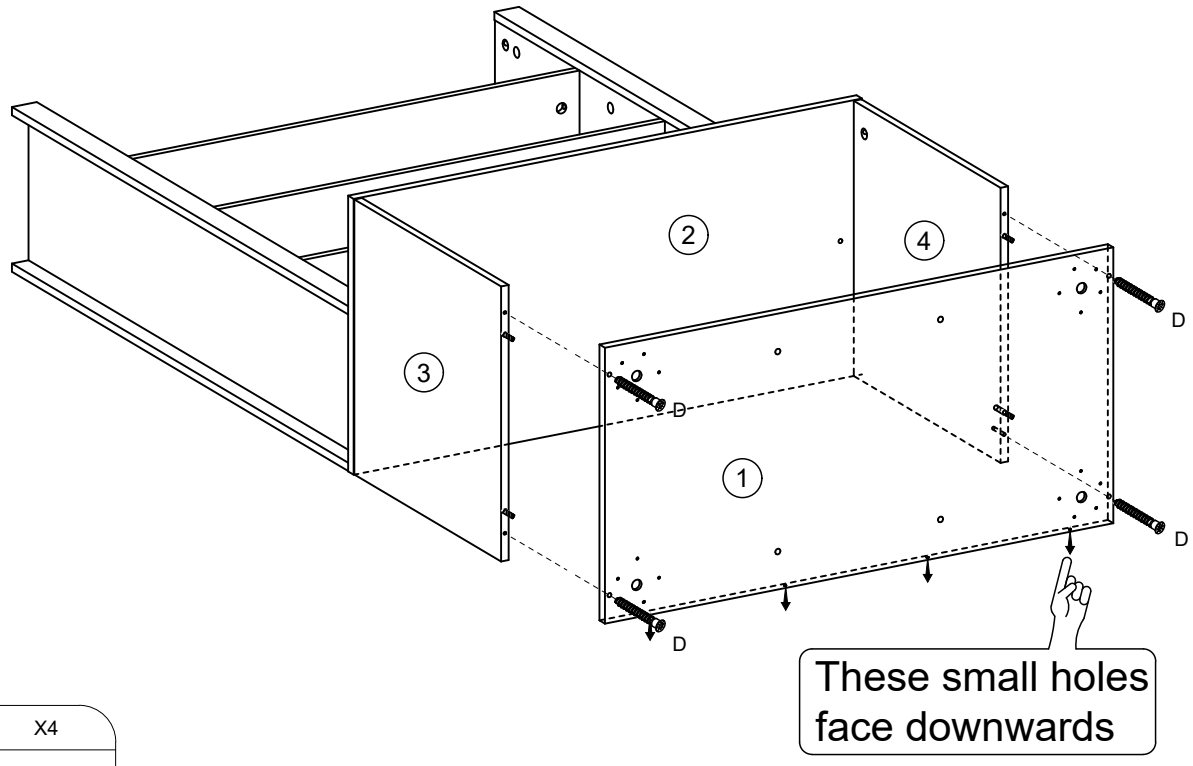

D	X4
Ø5x38mm	

Step 10

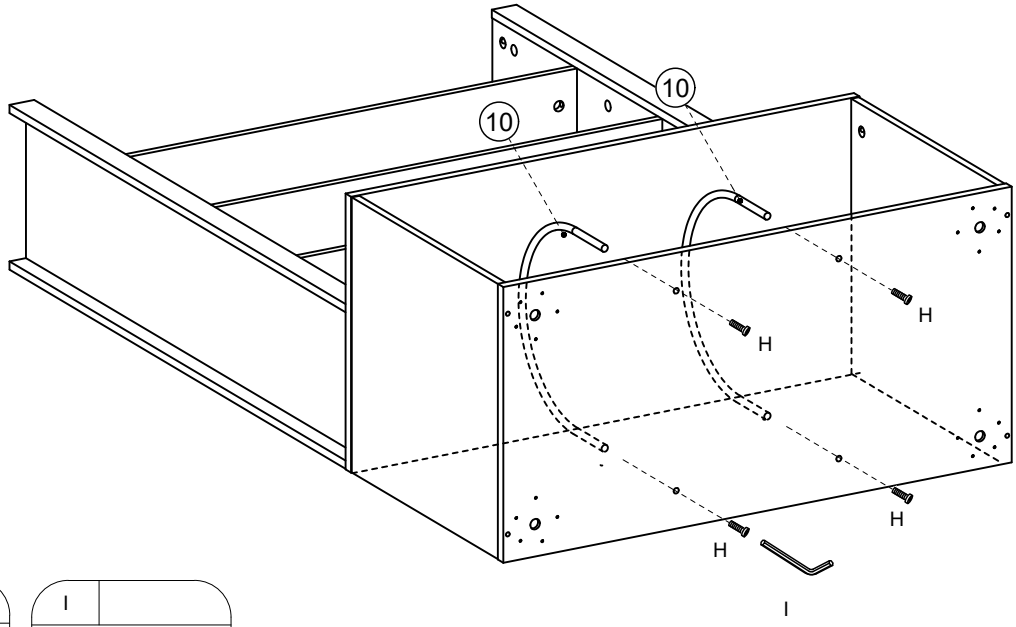

H	X4




M6x20mm

I	



4mm

Step 11

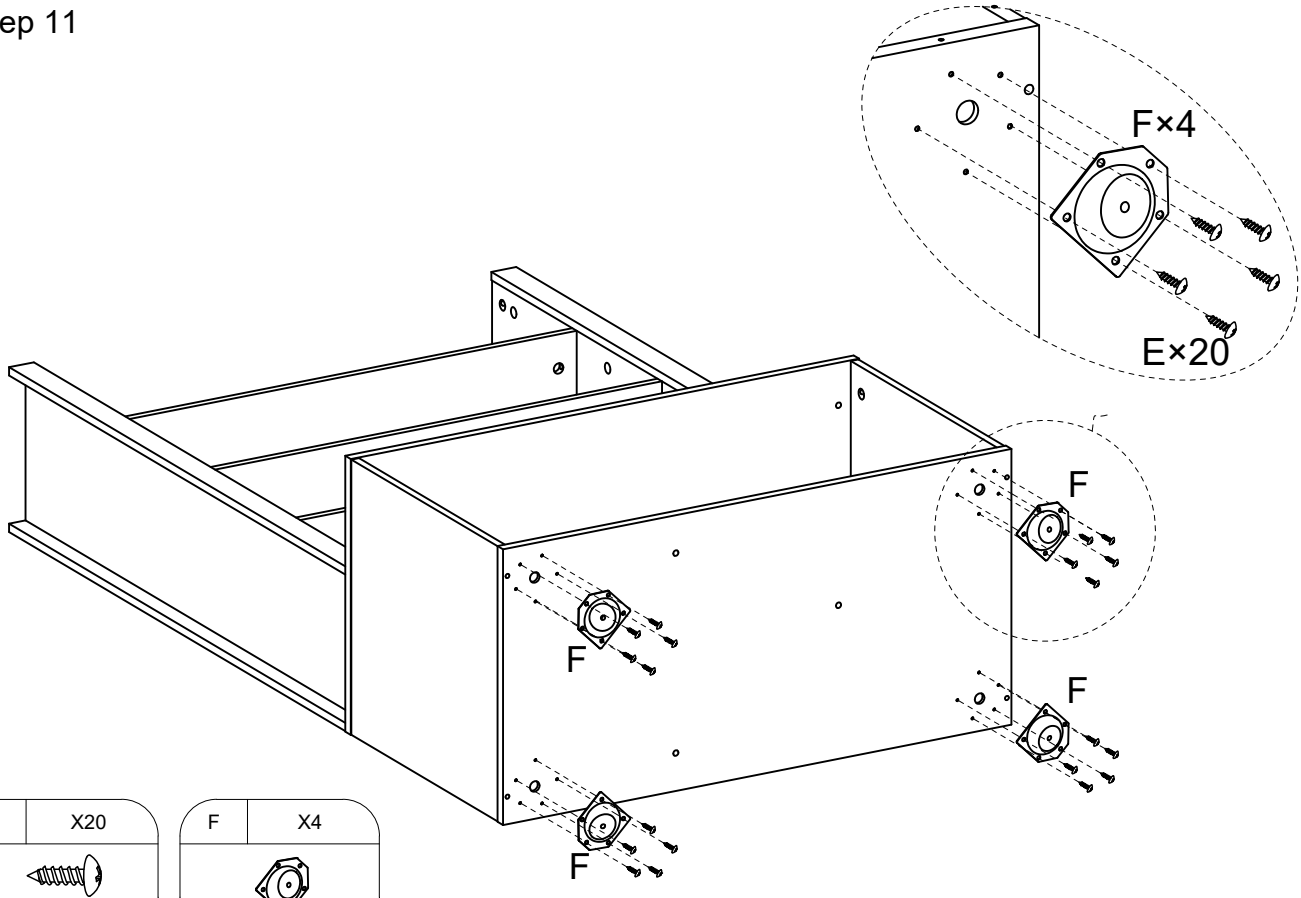



E	X20

ϕ4x12mm


F	X4

Step 12

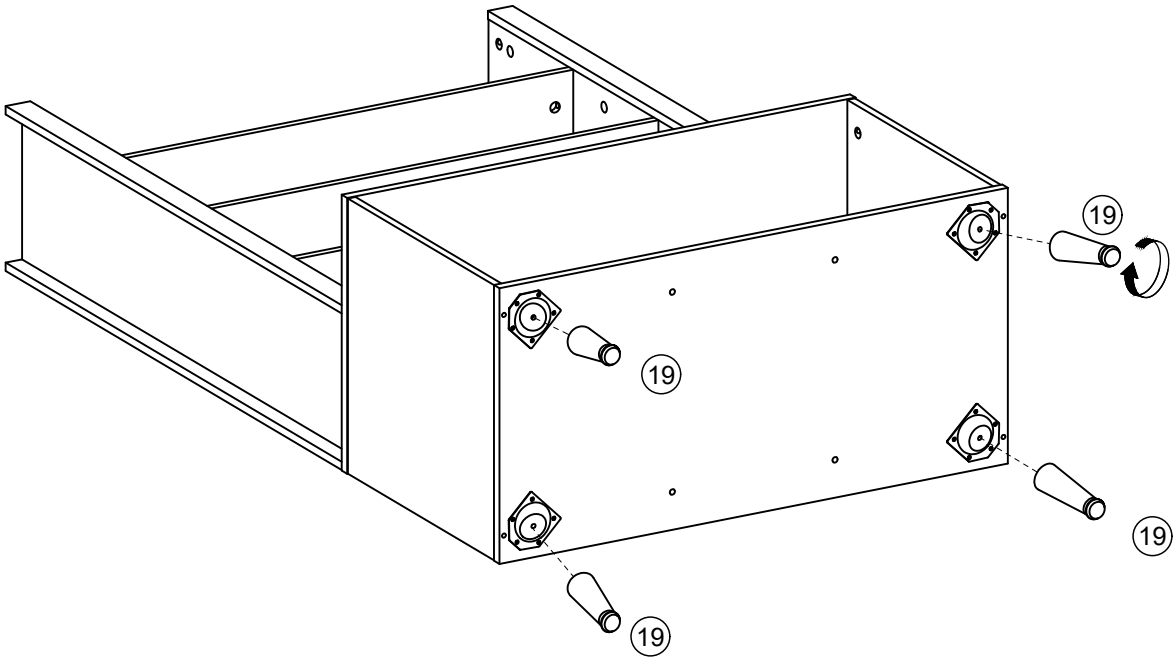

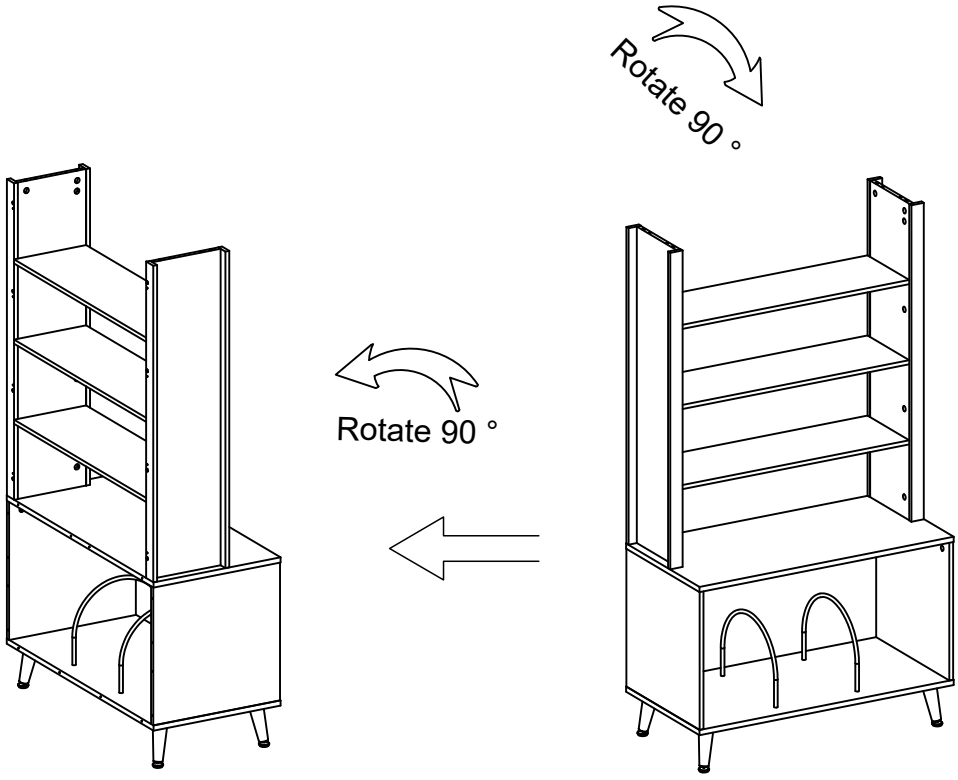


Step 13

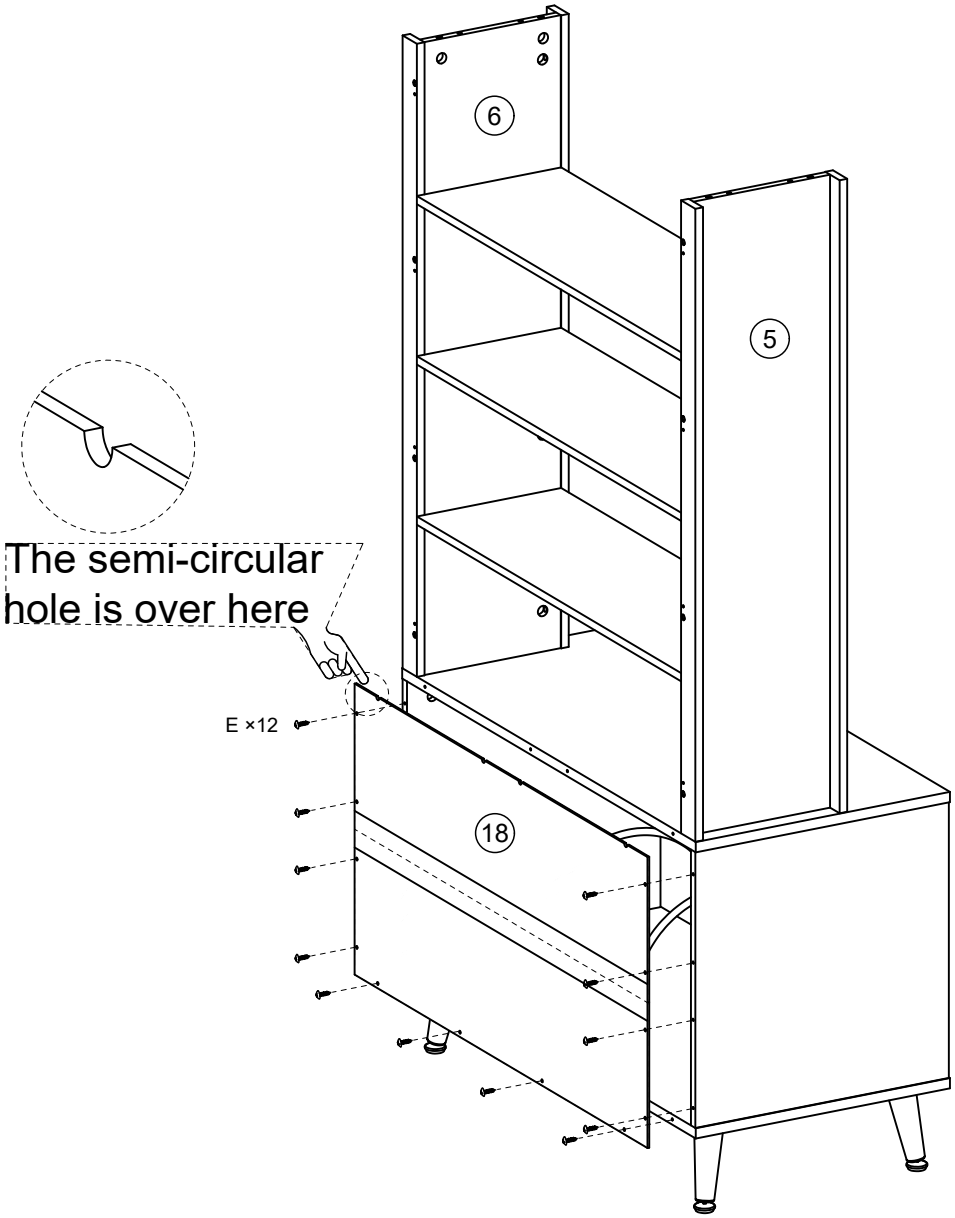


E	X12
ø4x12mm	


Step 14

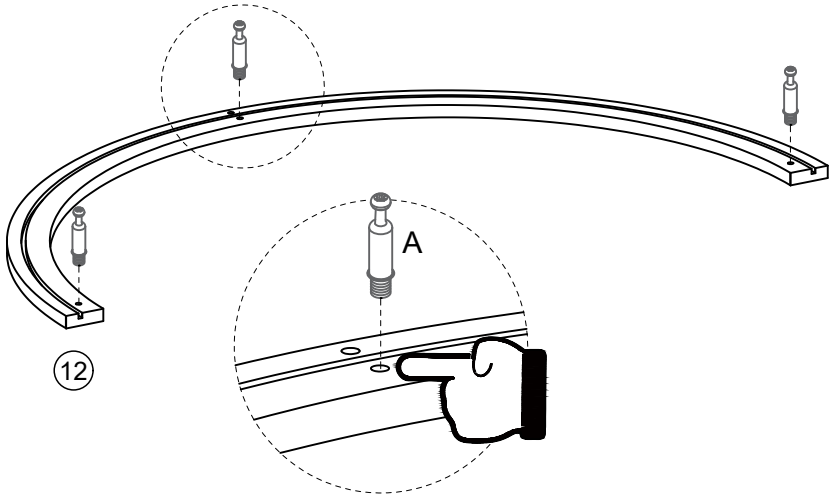


A	X3
Ø6x35mm	

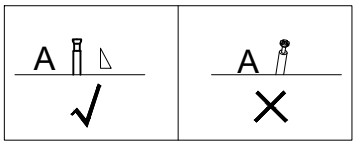

Step 15

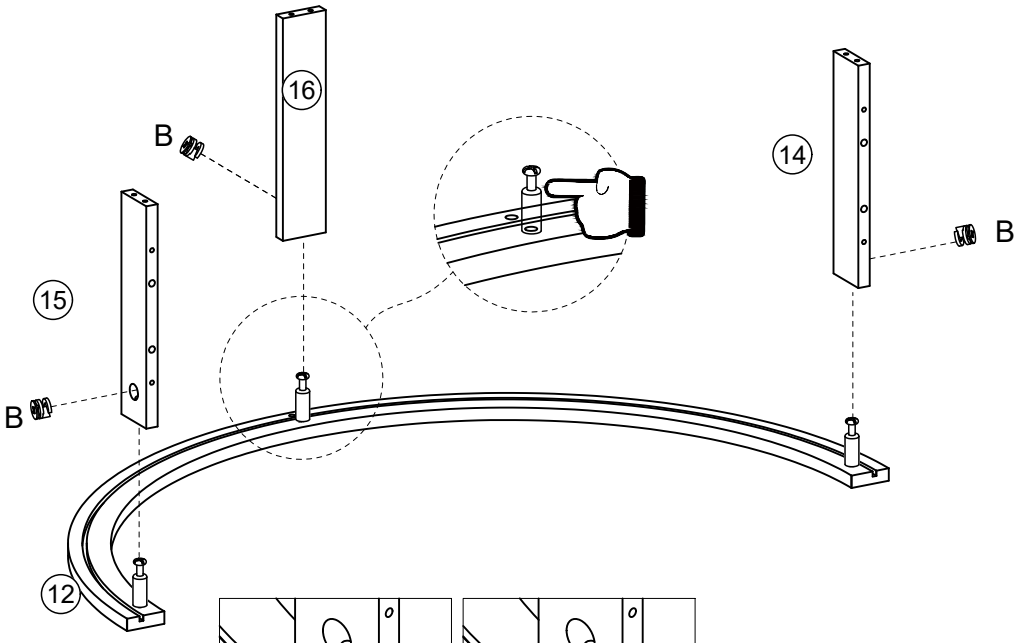


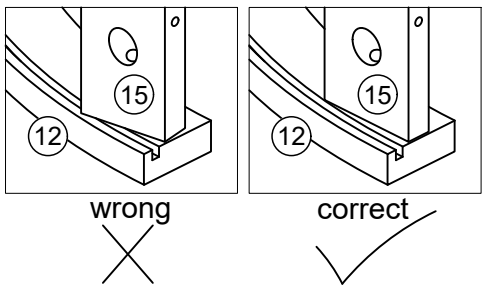


B	X3
Ø15x10mm	

The slot on Component (12) should not be blocked


Step 16

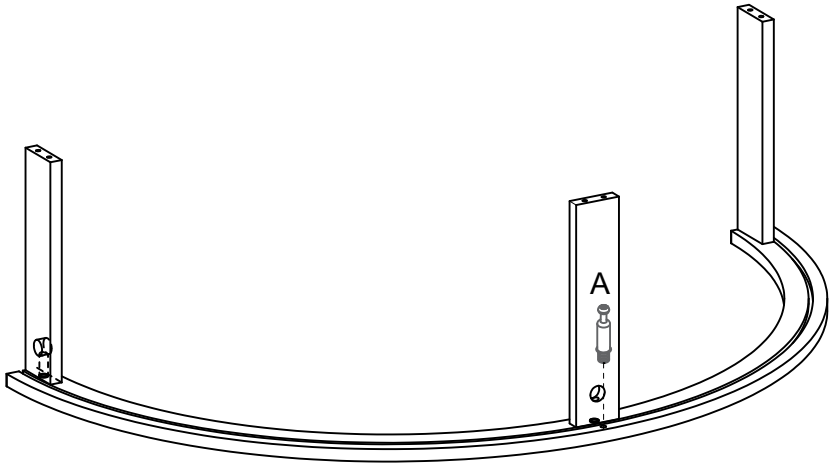

A	X1
 Ø6x35mm	

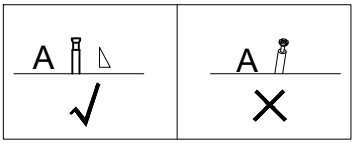



Step 17

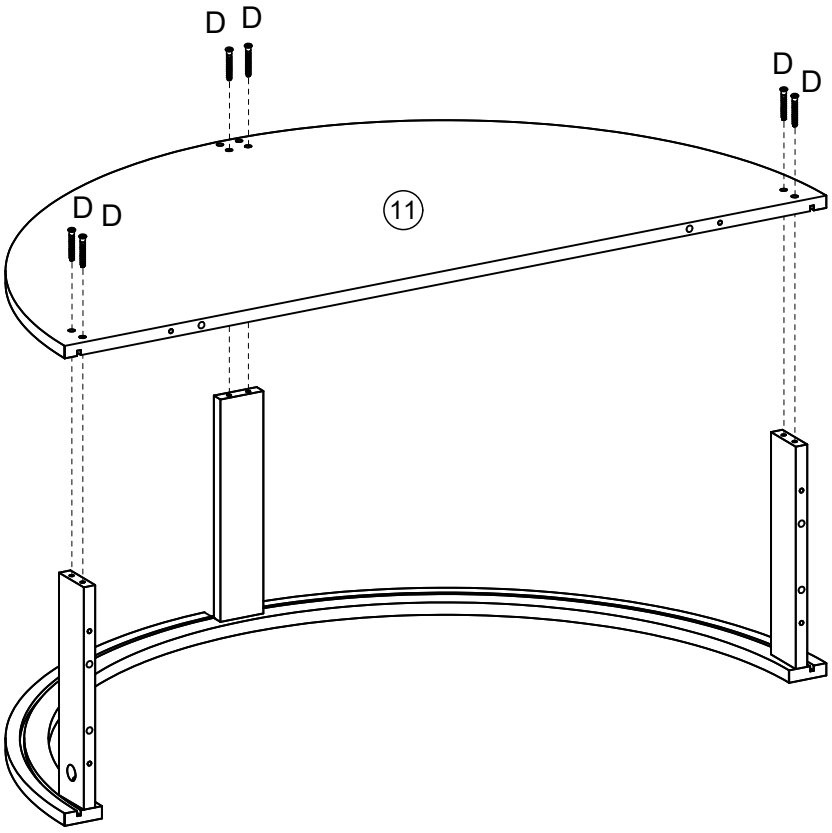

D	X6
 Ø5x38mm	

Step 18

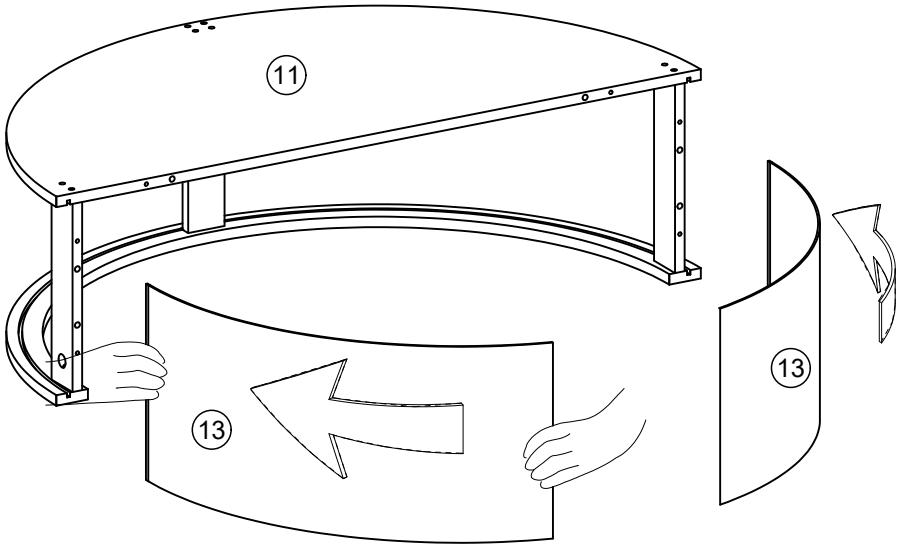


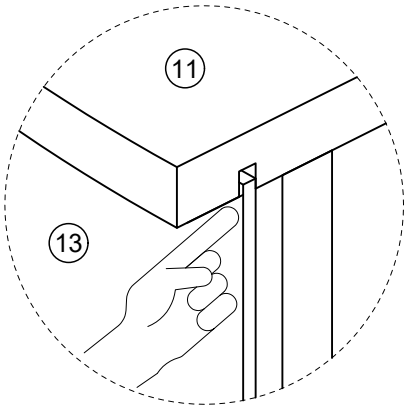



When installing Component (13) , the cooperation of two people is required. One person pulls in the front and the other pushes from behind.

Note that both sides of Board (13) protrude by the same amount


Step 19

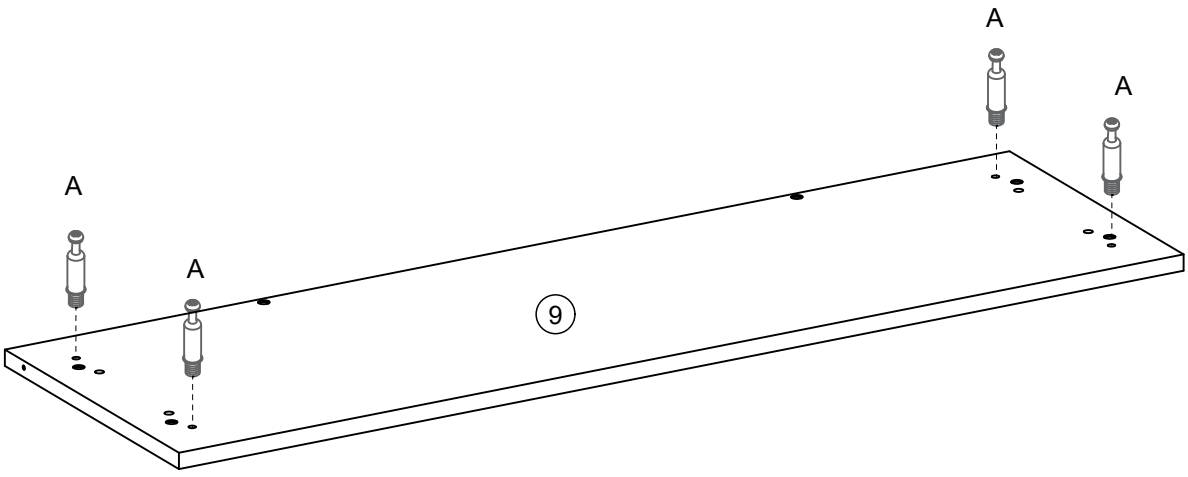


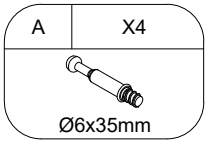


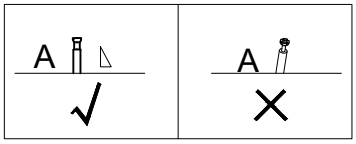


Step 20

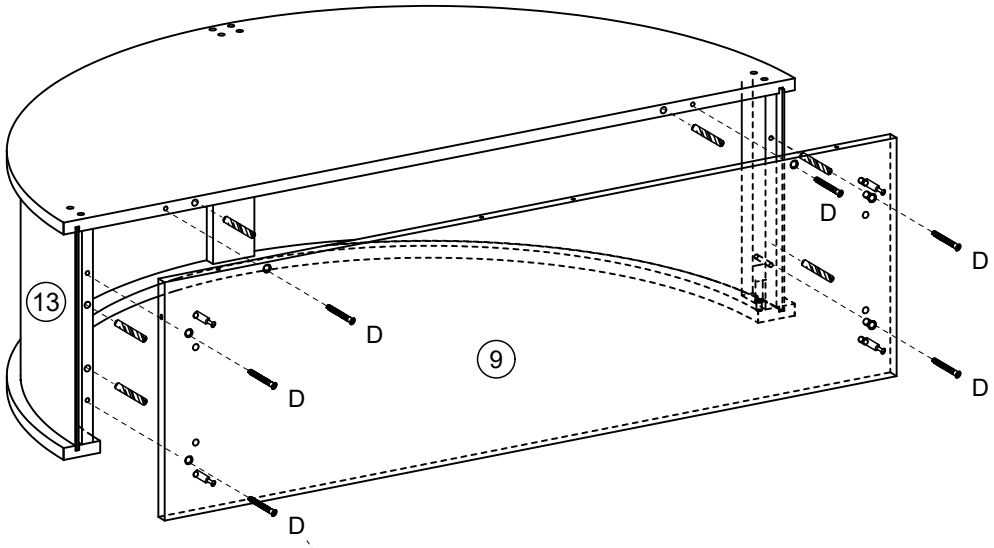

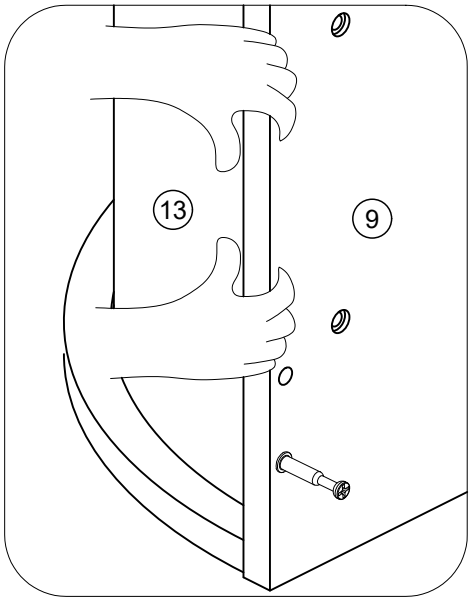


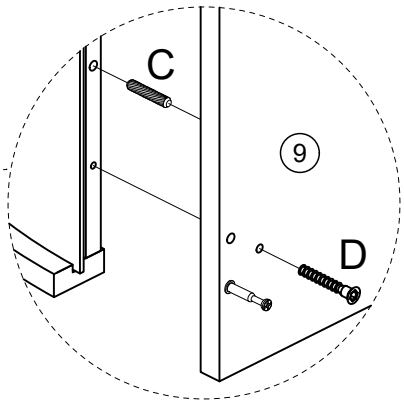


After the 6 wooden pins are installed, the No. 13 plates on both sides need to be pressed inward by hand to make the No. 13 plate stick into the slot of the No. 9 plate, and finally lock 6 screws D

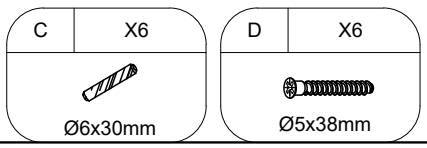


Step 21

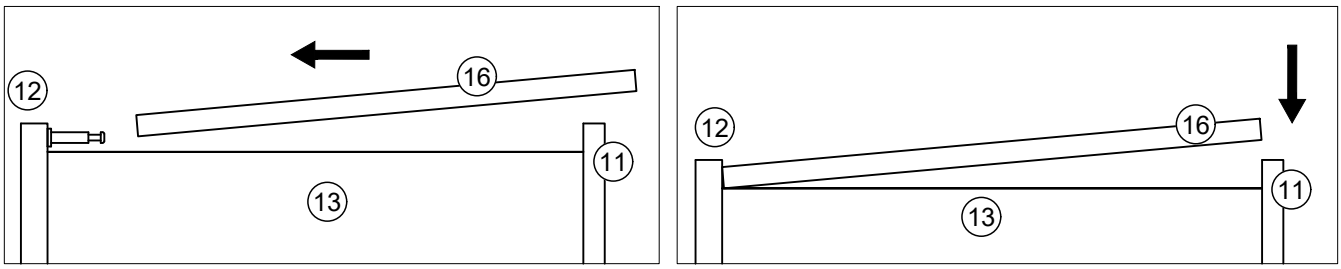

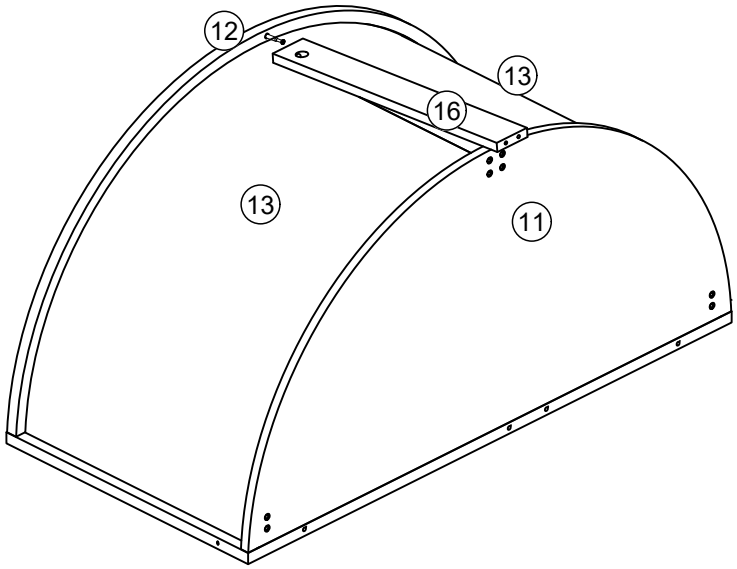


Step 22

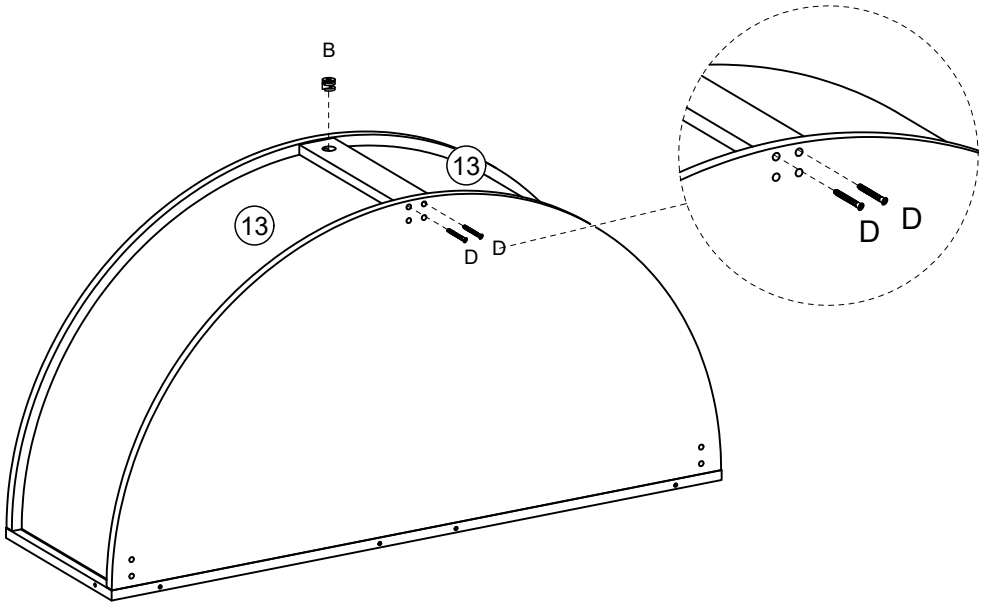

B	X1
Ø15x10mm	

D	X2
Ø5x38mm	


Step 23

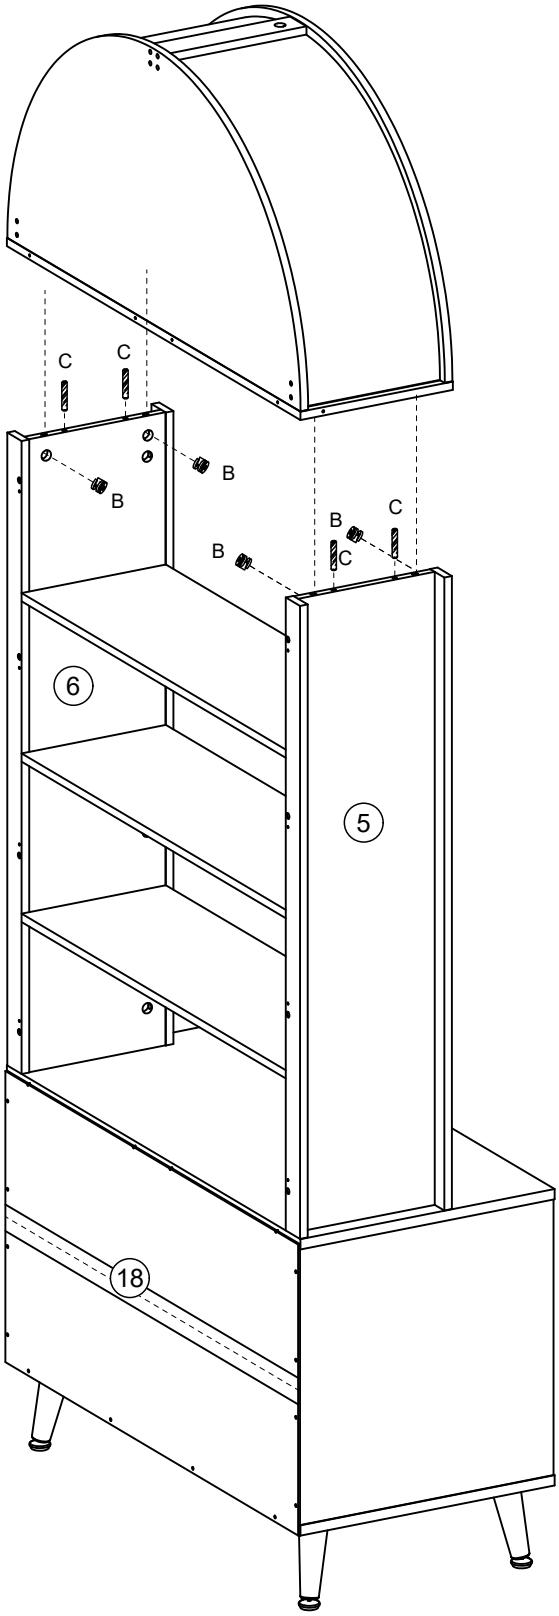

B	X4
Ø15x10mm	

C	X4
Ø6x30mm	


Step 24

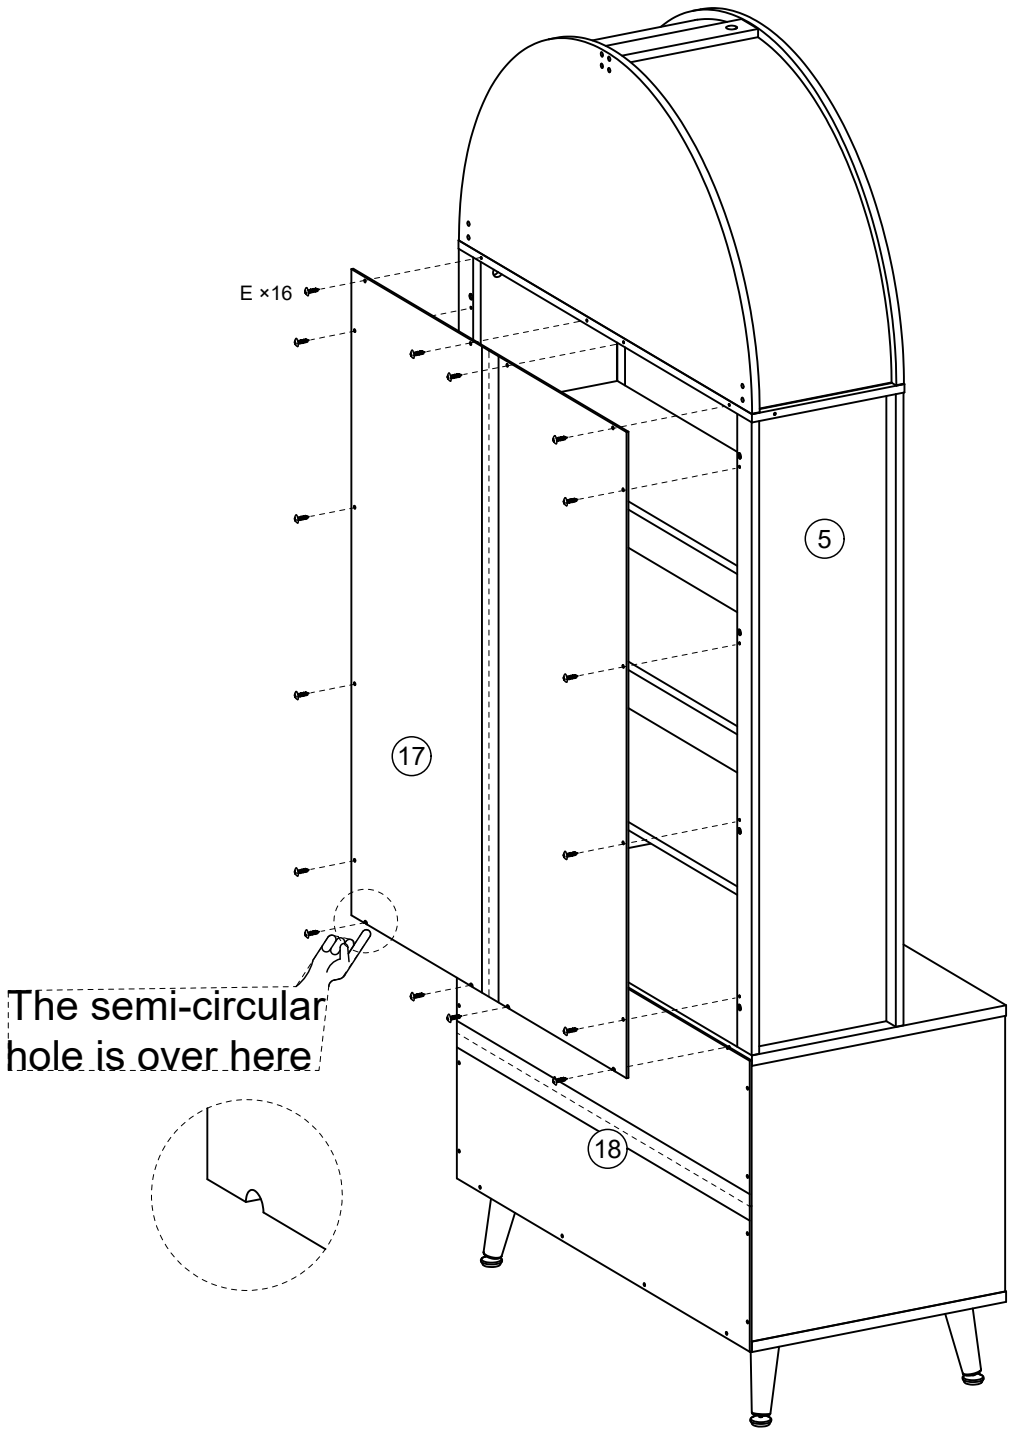



E	X16
ø4x12mm	

Step 25


The cabinet must be permanently fixed to the wall
Equipped with an anti-tipping device to prevent cabinet don't tip over
Mark the position of the drill on the wall with a pencil
Drill holes at the marked locations with a drill bit
Insert the wall anchor **(G)** gently into the hole
Knock in this wall anchor **(G)**
Lock the strips to the wall
Equipped with screws **(G)**

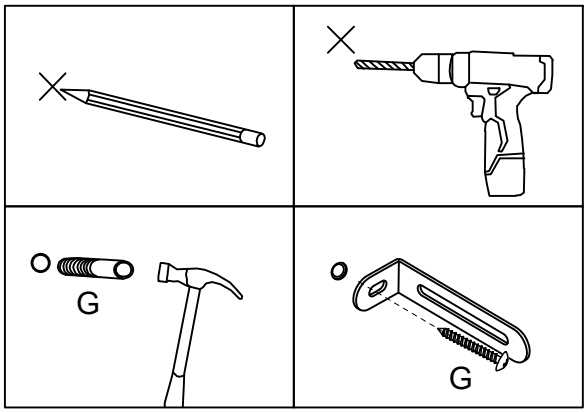


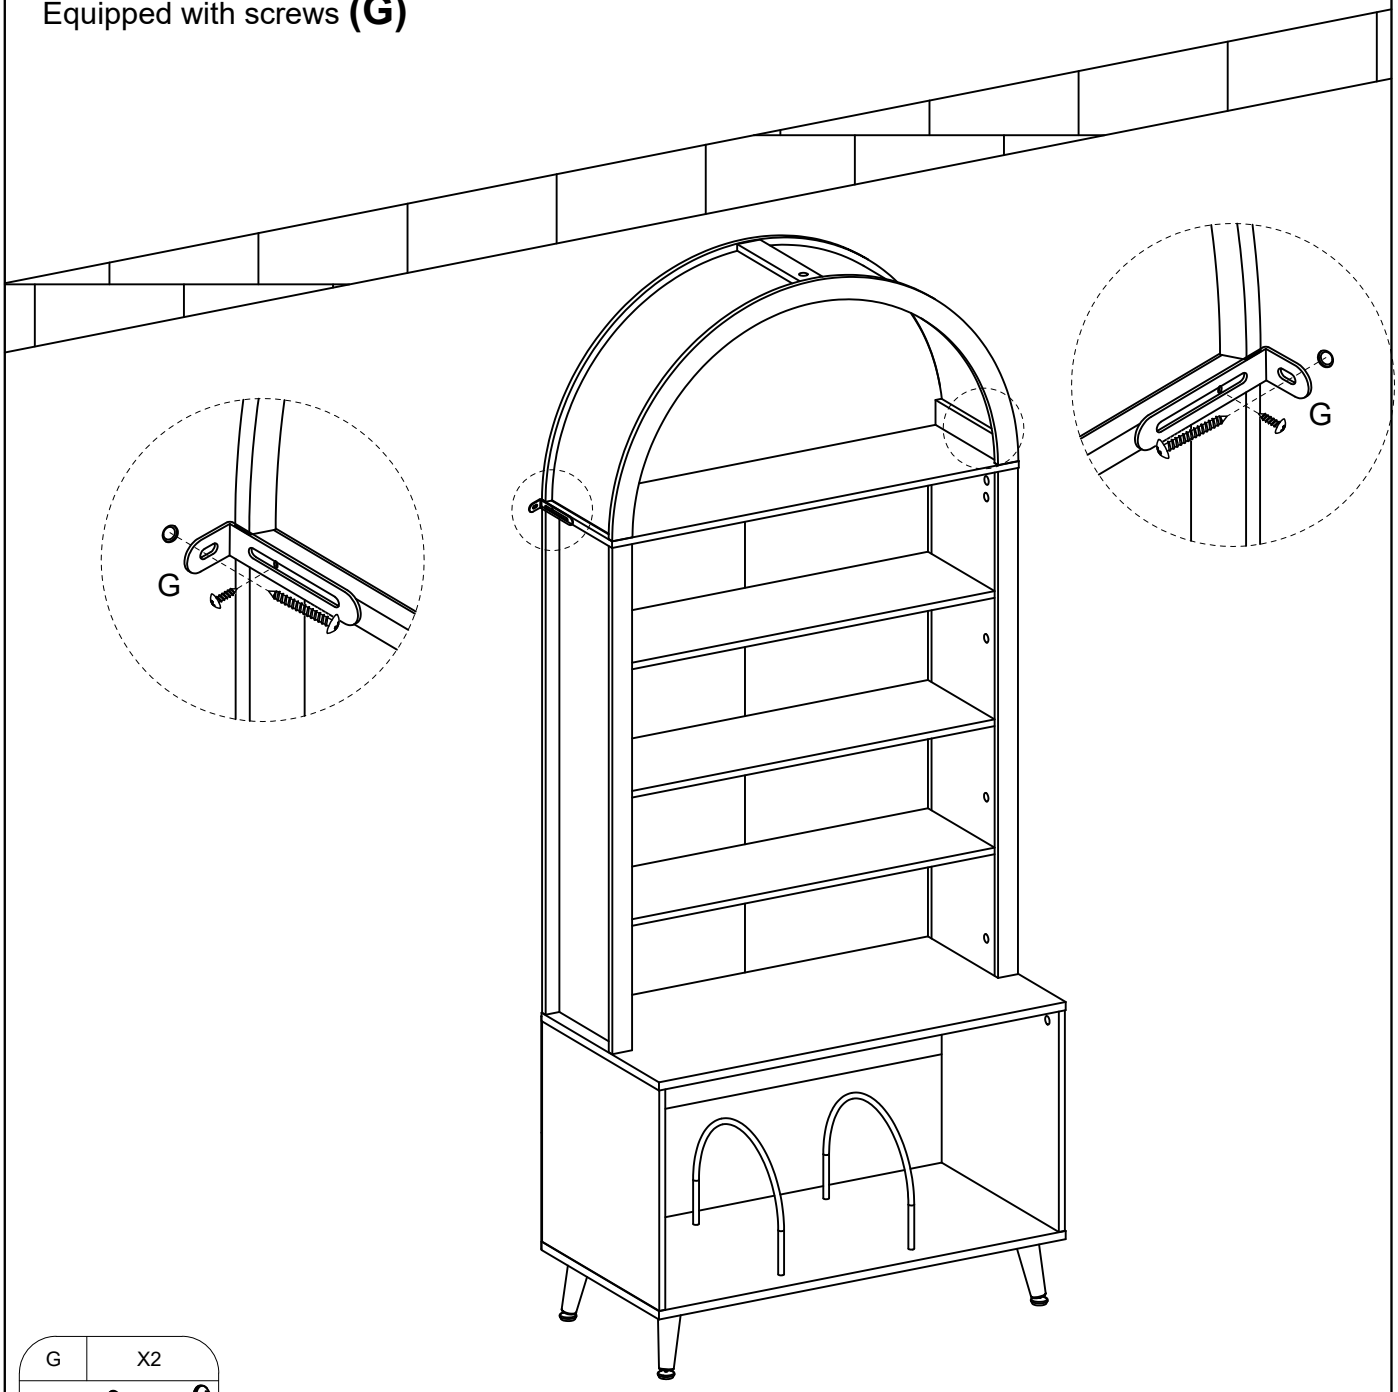

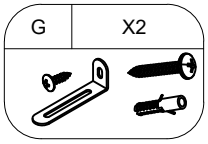

Step 26

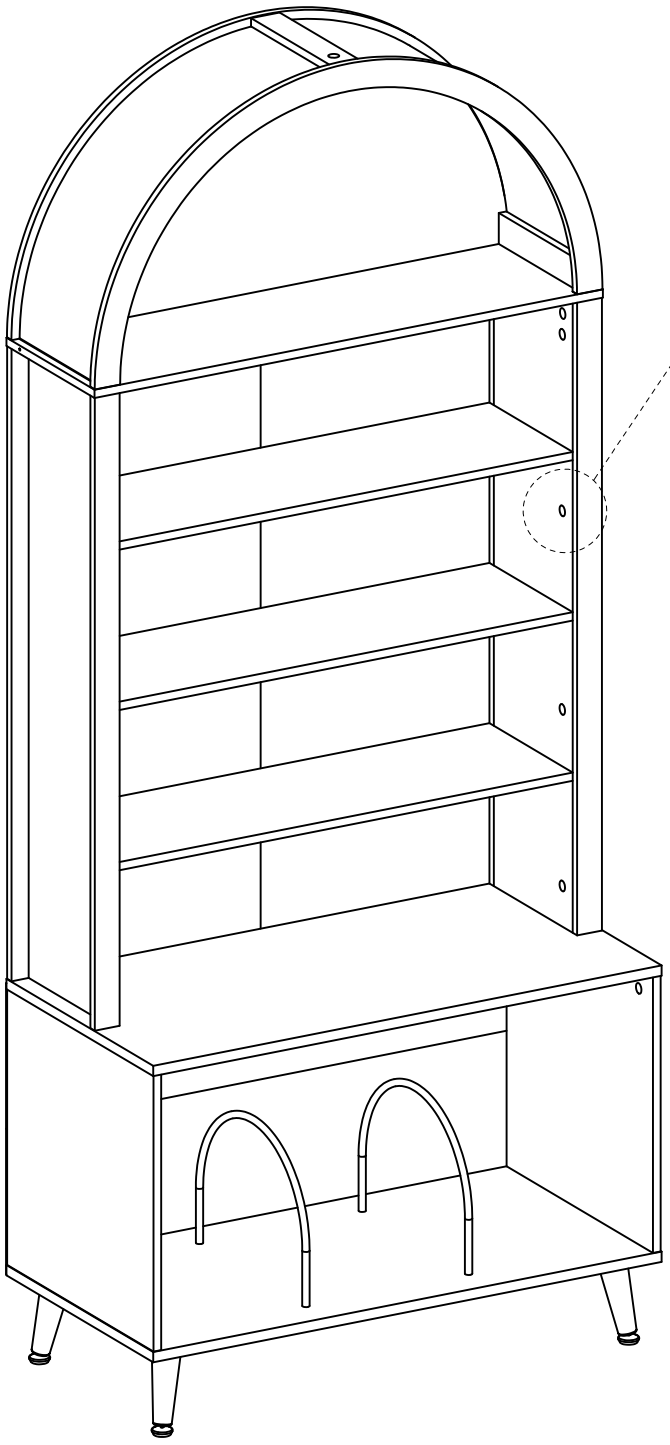

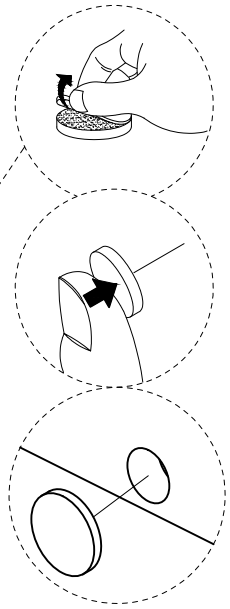

Exposed holes can be attached with stickers J

J	X28

