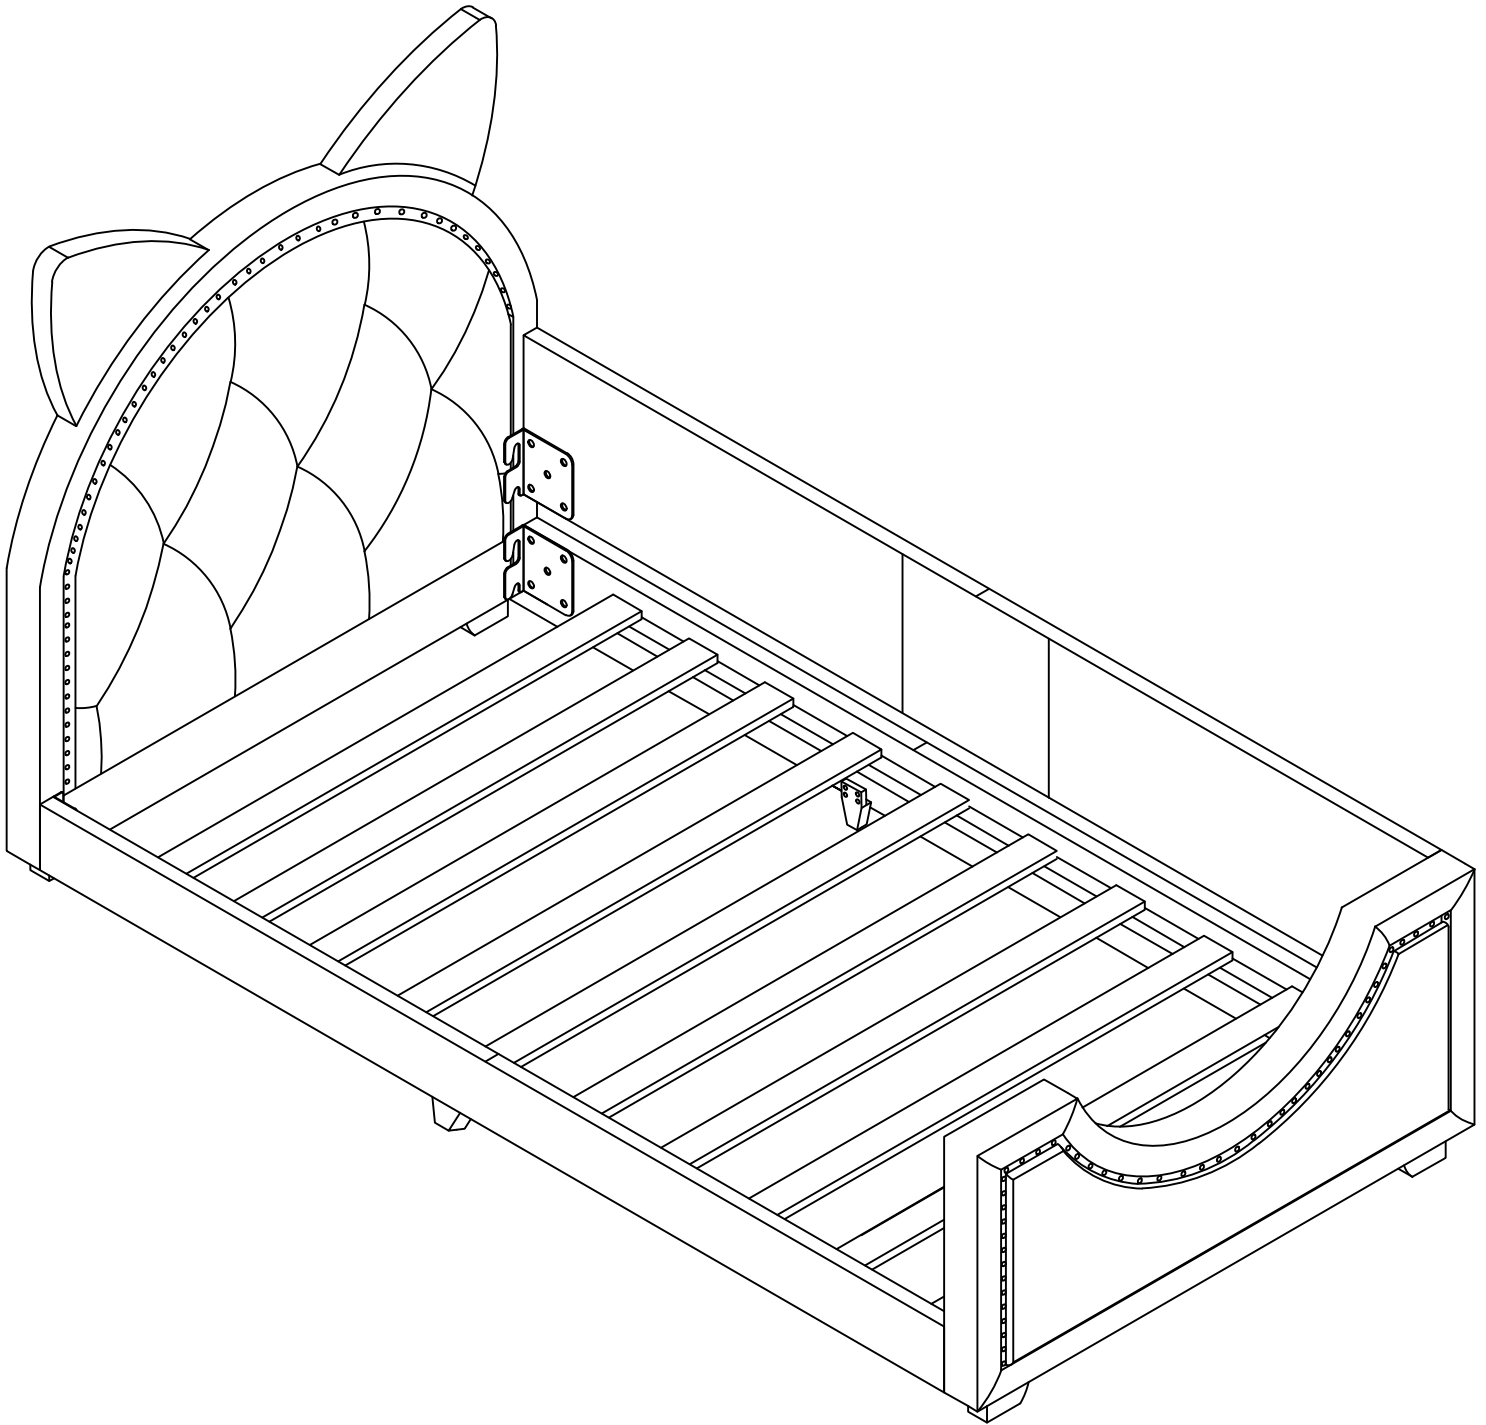


ASSEMBLY INSTRUCTIONS

WF 309251



IMPORTANT NOTE









****PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED**

**** BEFORE YOU BEGIN , KINDY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP**

****DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE BED IS FULLY SET-UP**

ASSEMBLY INSTRUCTIONS

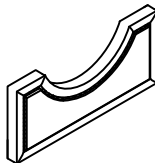
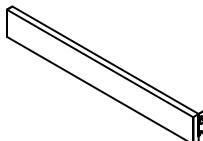
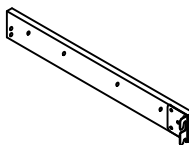
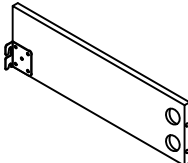
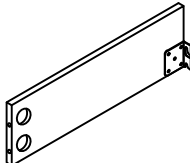
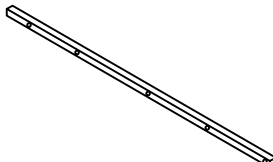
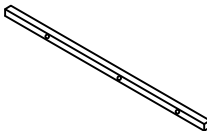
WF 309251

PART LIST BOX 1: WF 309251					
1			2		
Headboard Panel (1 pc)			Footboard Panel (1 pc)		
3			4		
Left Headboard ear (1 pc)		Right Headboard ear (1 pc)		5	
					
				Leg (4 pcs)	
6			7		
Left Lower Rail (2 pcs)		Right Lower Rail (2pcs)		8	
					
				Rail support legs (2pcs)	
9			10		
Roll Slat (10 pcs) 985*60*15		Upper Rail (1 pc)		11	
					
				Upper Rail (1 pc)	
12			13		
Bed Support Bar (2 pcs)		Bed Support Bar (2 pcs)			

ASSEMBLY INSTRUCTIONS


WF 309251

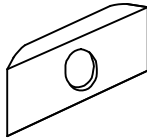HARDWARE LIST IN WF 309251

A  Short Bolt (12pcs) (Ø 5/16 "X25mm)	B  Long Bolt (6 pcs) (Ø 5/16 "X32mm)	C  Long Bolt (8 pcs) (Ø 5/16 "X38mm)
D  Long Bolt (16pcs) (Ø 5/16 "X45mm)	E  Long Bolt (4pcs) (Ø 5/16 "X50mm)	F  Allen Wrench (1 pc) (M4x75mm x32mm)
G  Flat Washer (46 pcs) (Ø 5/16 "-RBW)	H  Spring Washer (46 pcs) (Ø 5/16 "-RBW)	I  Flat Head Screw (20 pcs) (m4x30mm-RBW)
J  Threaded Bolt (2 pcs) (Ø 5/16 "X90mm-RBW)	K  Hex Nut (4 pcs) (16mmx13mmx13-RBW)	L  U-Square Washer (4 pcs) (36mmx15mmx11mm-RBW)
M  Wrench (1 pcs) (14MM-RBW)		


ASSEMBLY INSTRUCTIONS

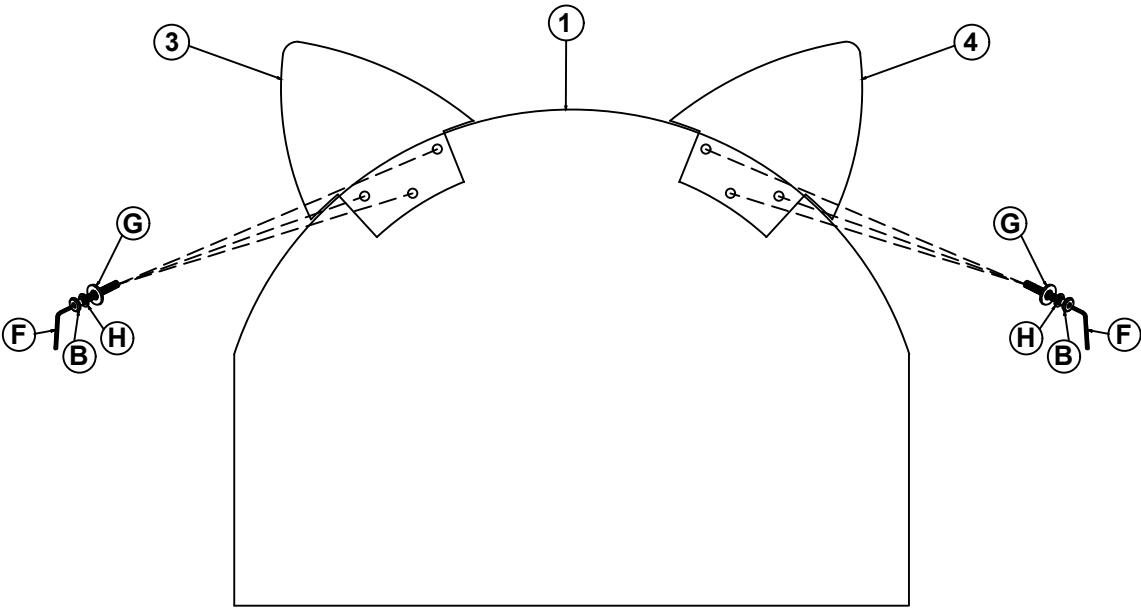STEP 1



B	Bolt (Ø 5/16 "X32mm)		6pcs	G	Flat Washer (Ø 5/16 "-RBW)		6pcs
F	Allen Wrench (M4x75mm x32mm)		1pc	H	Spring Washer (Ø 5/16 "-RBW)		6pcs

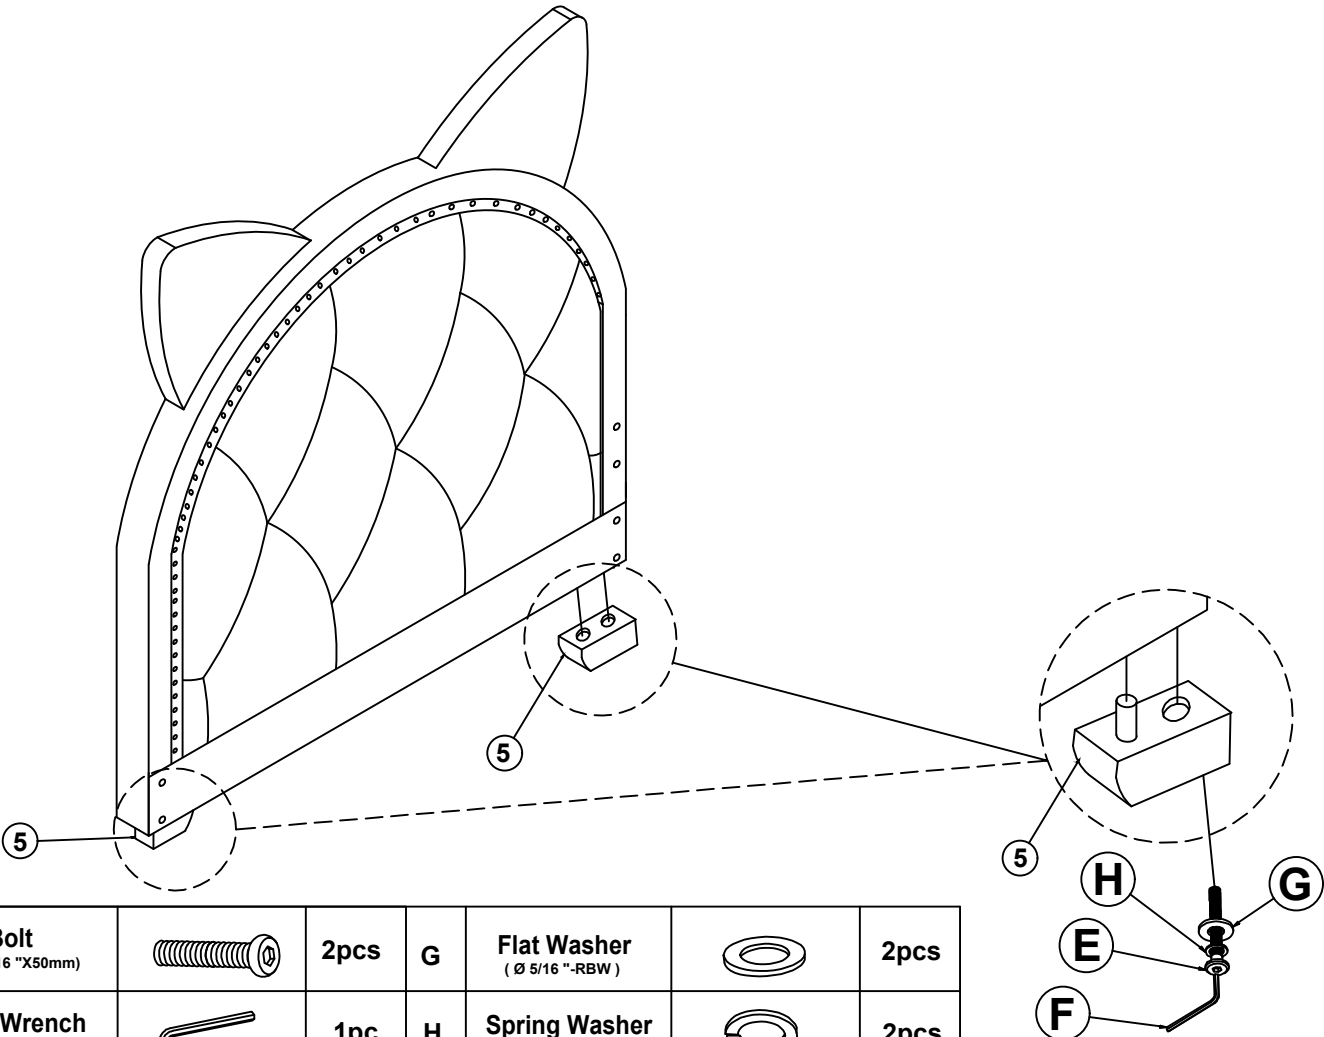
STEP 2



E	Bolt (Ø 5/16 "X50mm)		2pcs	G	Flat Washer (Ø 5/16 "-RBW)		2pcs
F	Allen Wrench (M4x75mm x32mm)		1pc	H	Spring Washer (Ø 5/16 "-RBW)		2pcs


ASSEMBLY INSTRUCTIONS

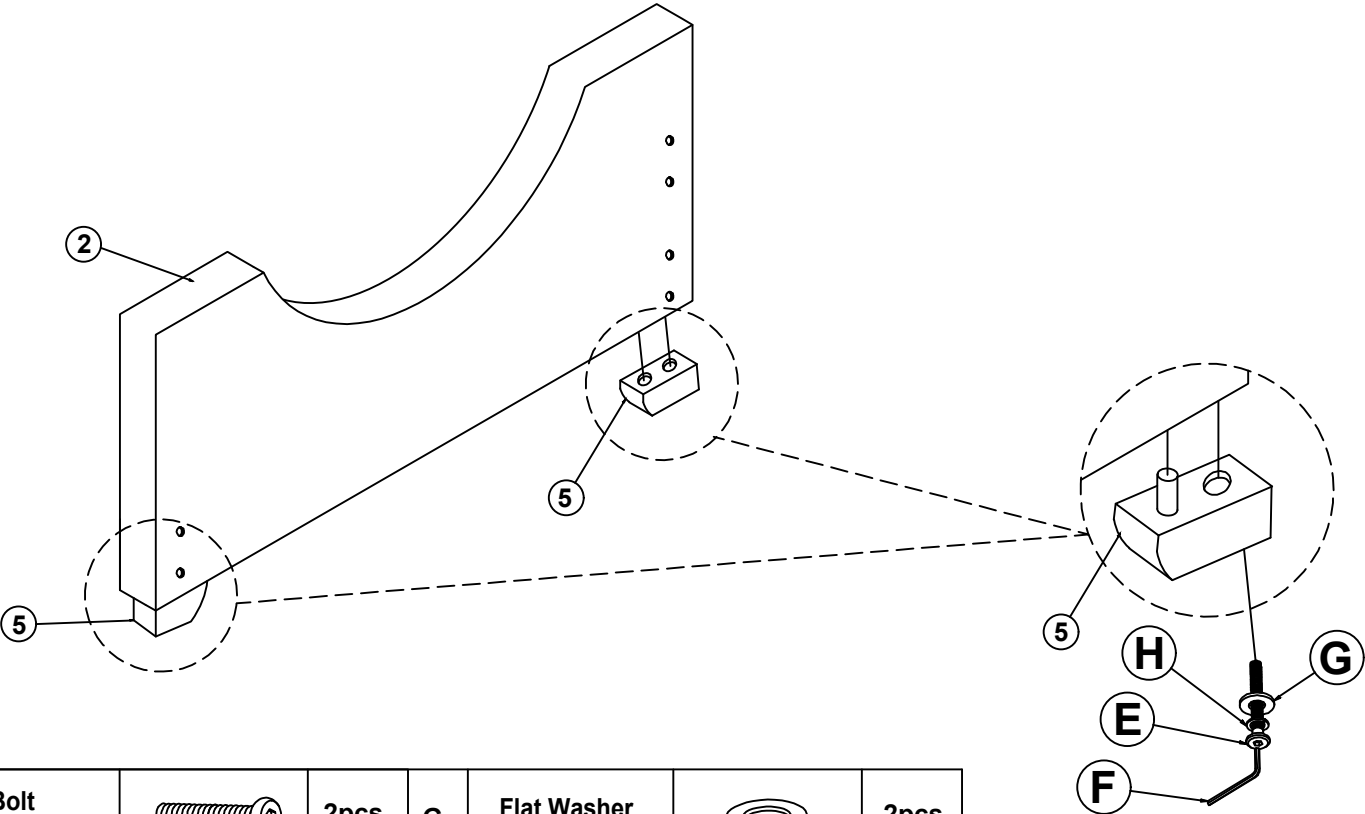STEP 3



E	Bolt (Ø 5/16 "X50mm)		2pcs	G	Flat Washer (Ø 5/16 "-RBW)		2pcs
F	Allen Wrench (M4x75mm x32mm)		1pc	H	Spring Washer (Ø 5/16 "-RBW)		2pcs

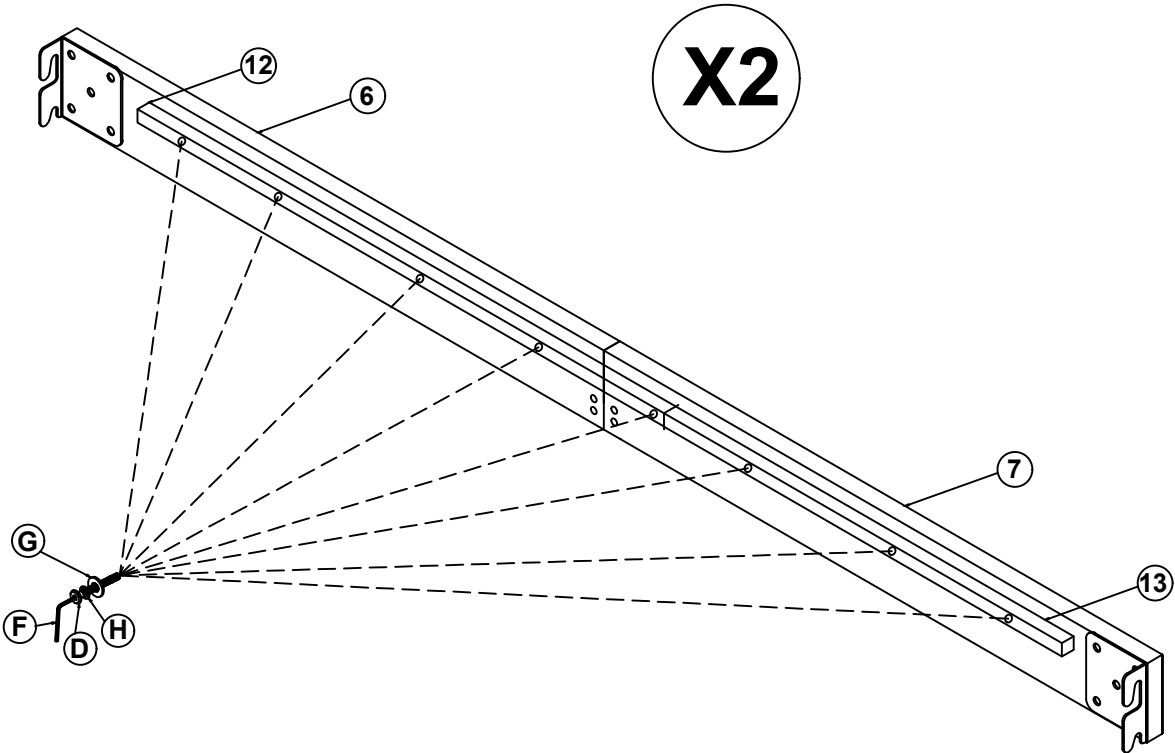
STEP 4



D	Bolt (Ø 5/16 "X45mm)		16pcs	G	Flat Washer (Ø 5/16 "-RBW)		16pcs
F	Allen Wrench (M4x75mm x32mm)		1pc	H	Spring Washer (Ø 5/16 "-RBW)		16pcs


ASSEMBLY INSTRUCTIONS

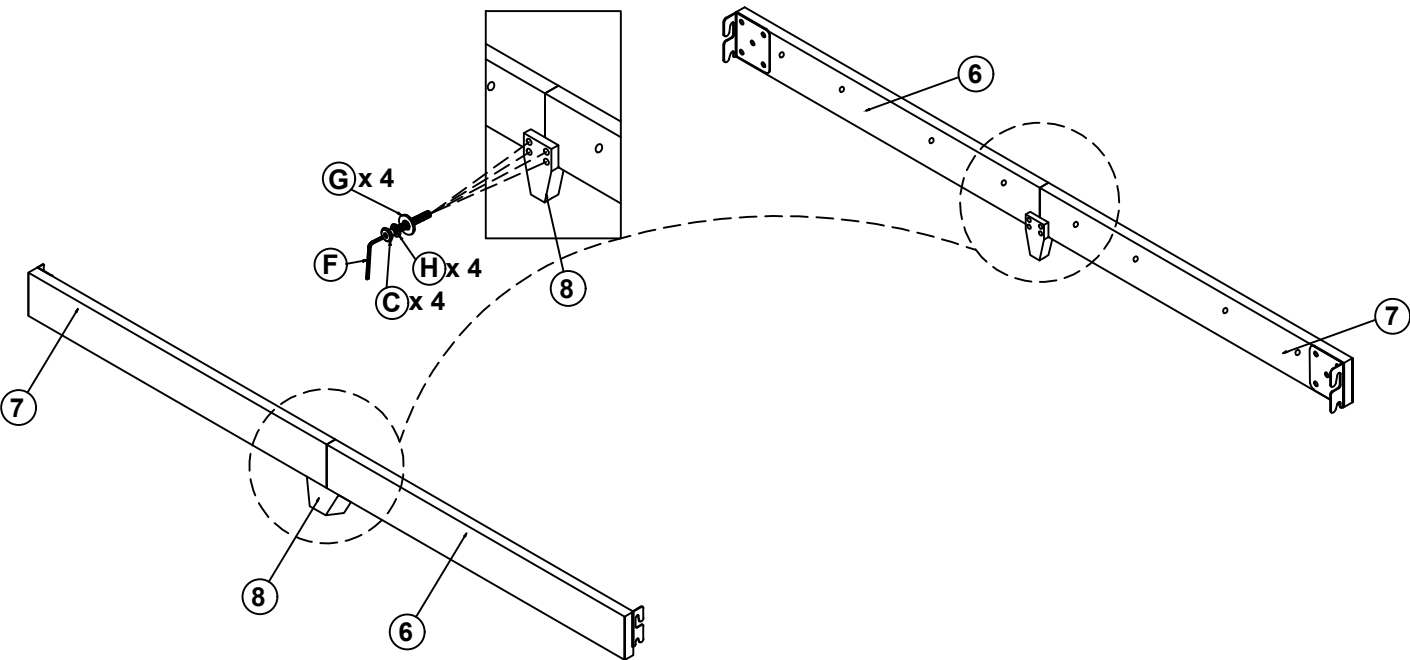STEP 5



C	Bolt (Ø 5/16 "X38mm)		8pcs	G	Flat Washer (Ø 5/16 "-RBW)		8pcs
F	Allen Wrench (M4x75mm x32mm)		1pc	H	Spring Washer (Ø 5/16 "-RBW)		8pcs

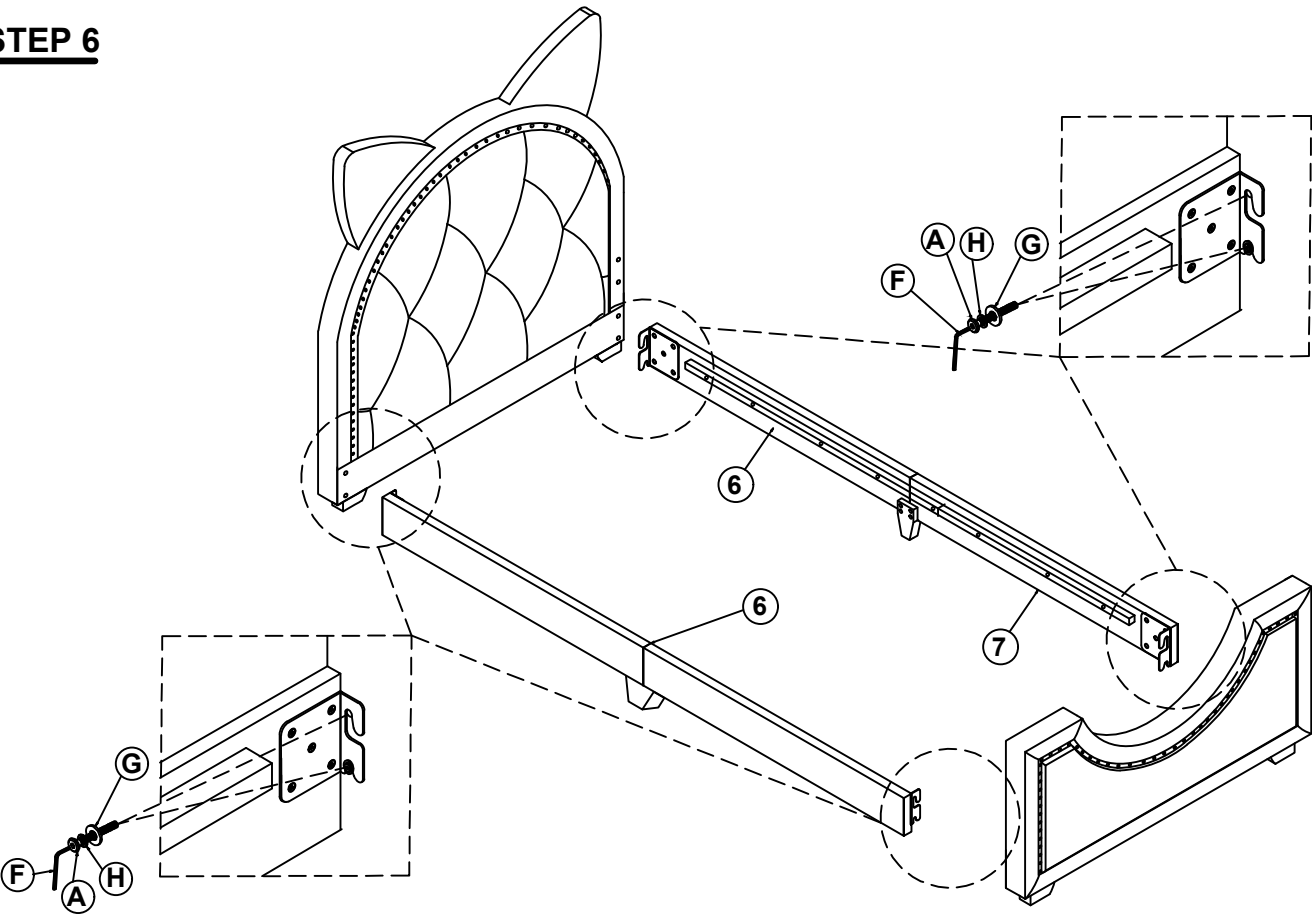
STEP 6



A	Bolt (Ø 5/16 "X25mm)		8pcs	G	Flat Washer (Ø 5/16 "-RBW)		8pcs
F	Allen Wrench (M4x75mm x32mm)		1pc	H	Spring Washer (Ø 5/16 "-RBW)		8pcs


ASSEMBLY INSTRUCTIONS

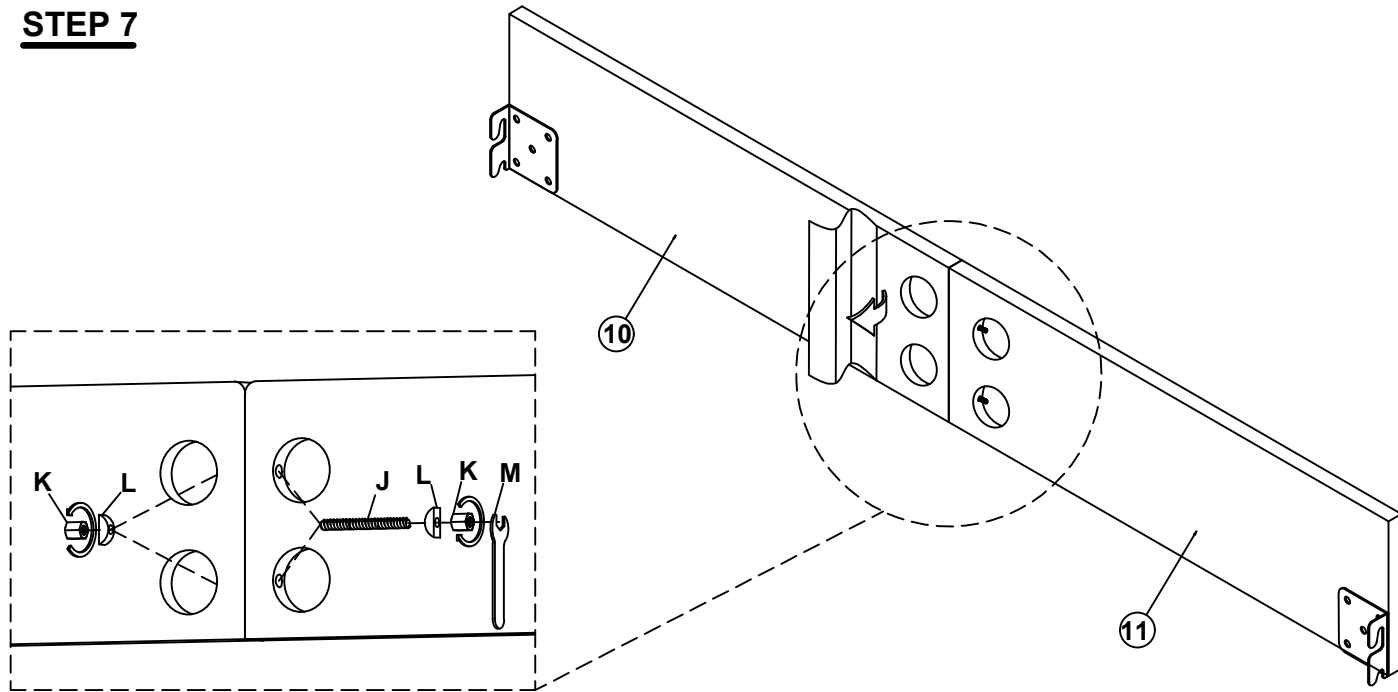STEP 7



J	Threaded Bolt (Ø 5/16 "x90mm-RBW)		2pcs	L	U-Square Washer (36x15x11mm-RBW)		4pcs
K	Hex Nut (16x13x13mm-RBW)		4pcs	M	Wrench (14mm-RBW)		1pc

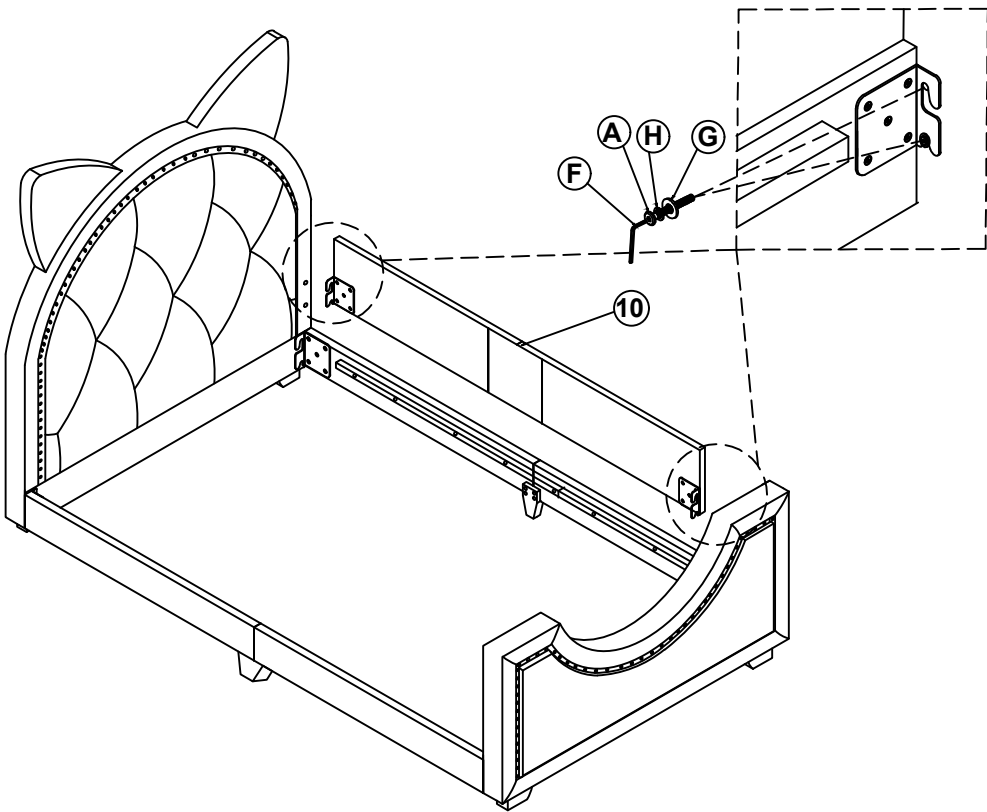
STEP 8




A	Bolt (Ø 5/16 "X25mm)		4pcs	G	Flat Washer (Ø 5/16 "-RBW)		4pcs
F	Allen Wrench (M4x75mm x32mm)		1pc	H	Spring Washer (Ø 5/16 "-RBW)		4pcs

ASSEMBLY INSTRUCTIONS

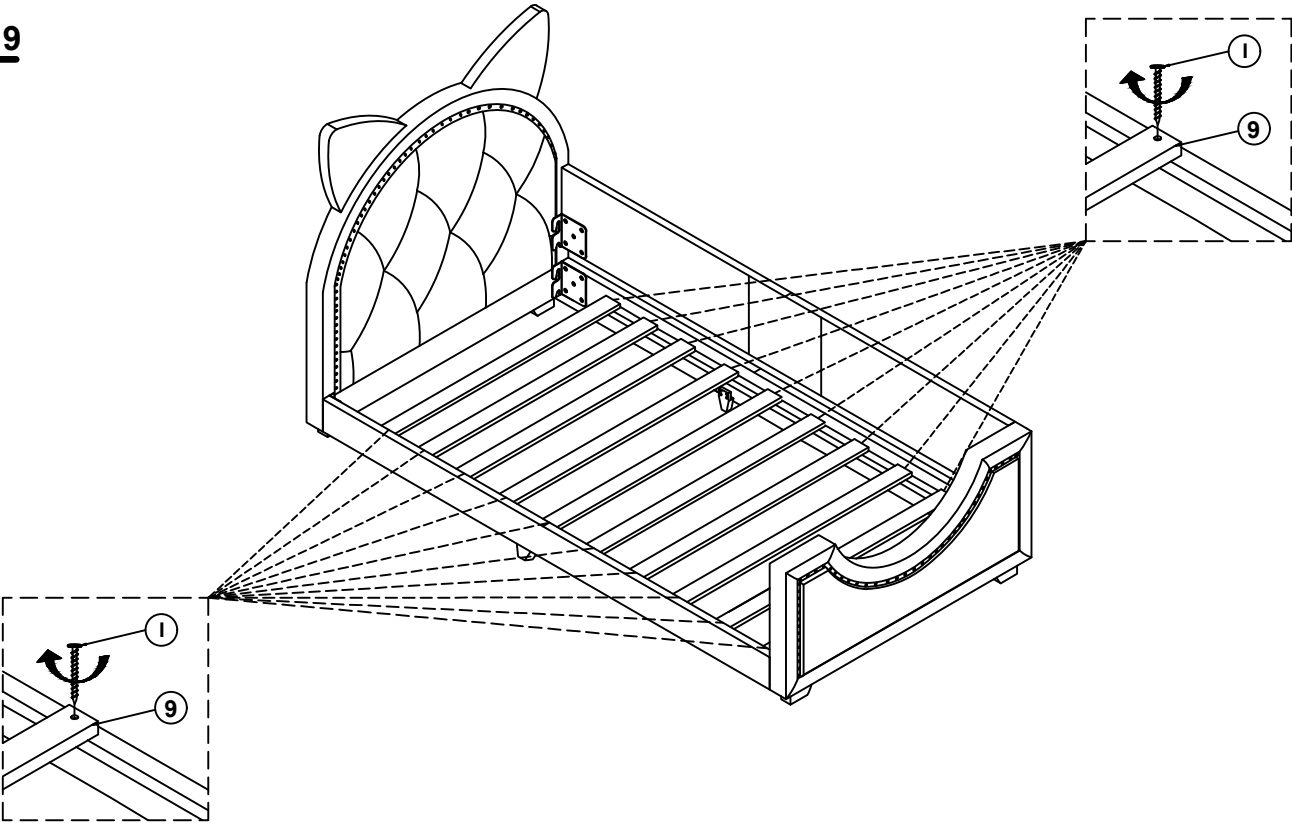STEP 9



I	Flat Head Screw (m4x30mm-RBW)		20pcs
---	-----------------------------------	---	-------

STEP 10 COMPLETE

