

















Installation & Assembly

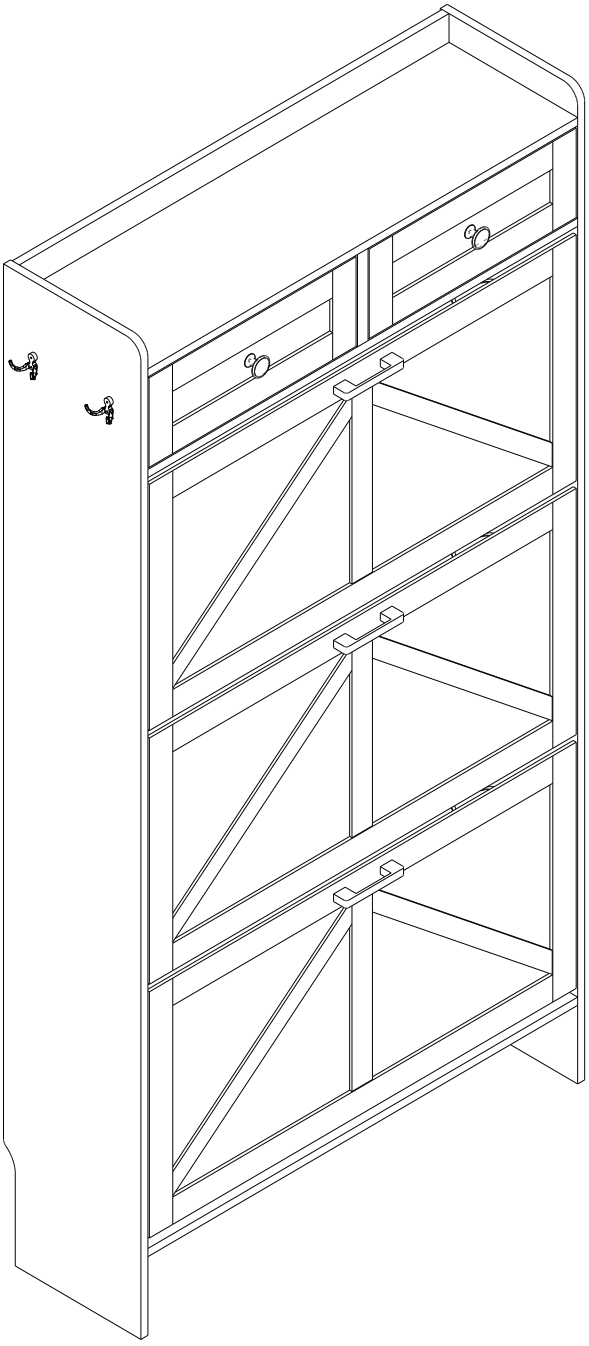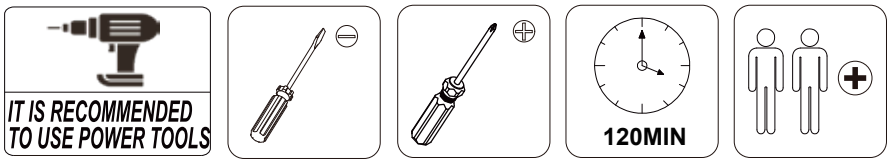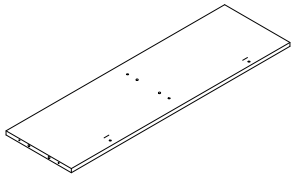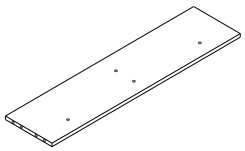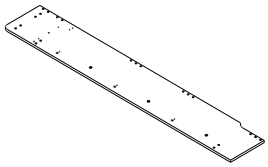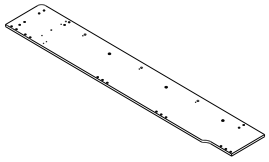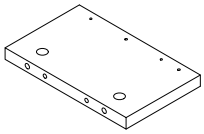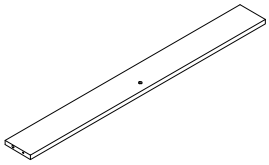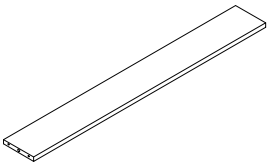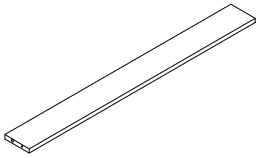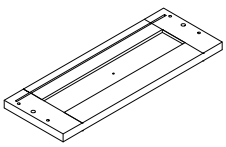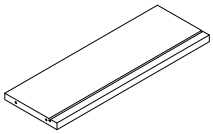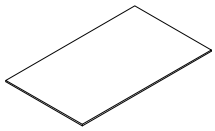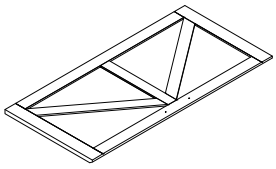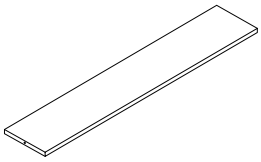


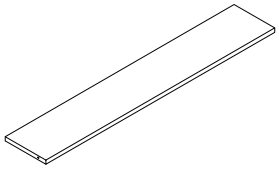



***EN*_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.**

NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x1	
⑦		x3	
⑧		x1	
⑨		x2	
⑩		x2	


NO.	PARTS	QTY	SPARE
⑪		x2	
⑫		x2	
⑬		x2	
⑭		x3	
⑮		x3	
⑯		x6	

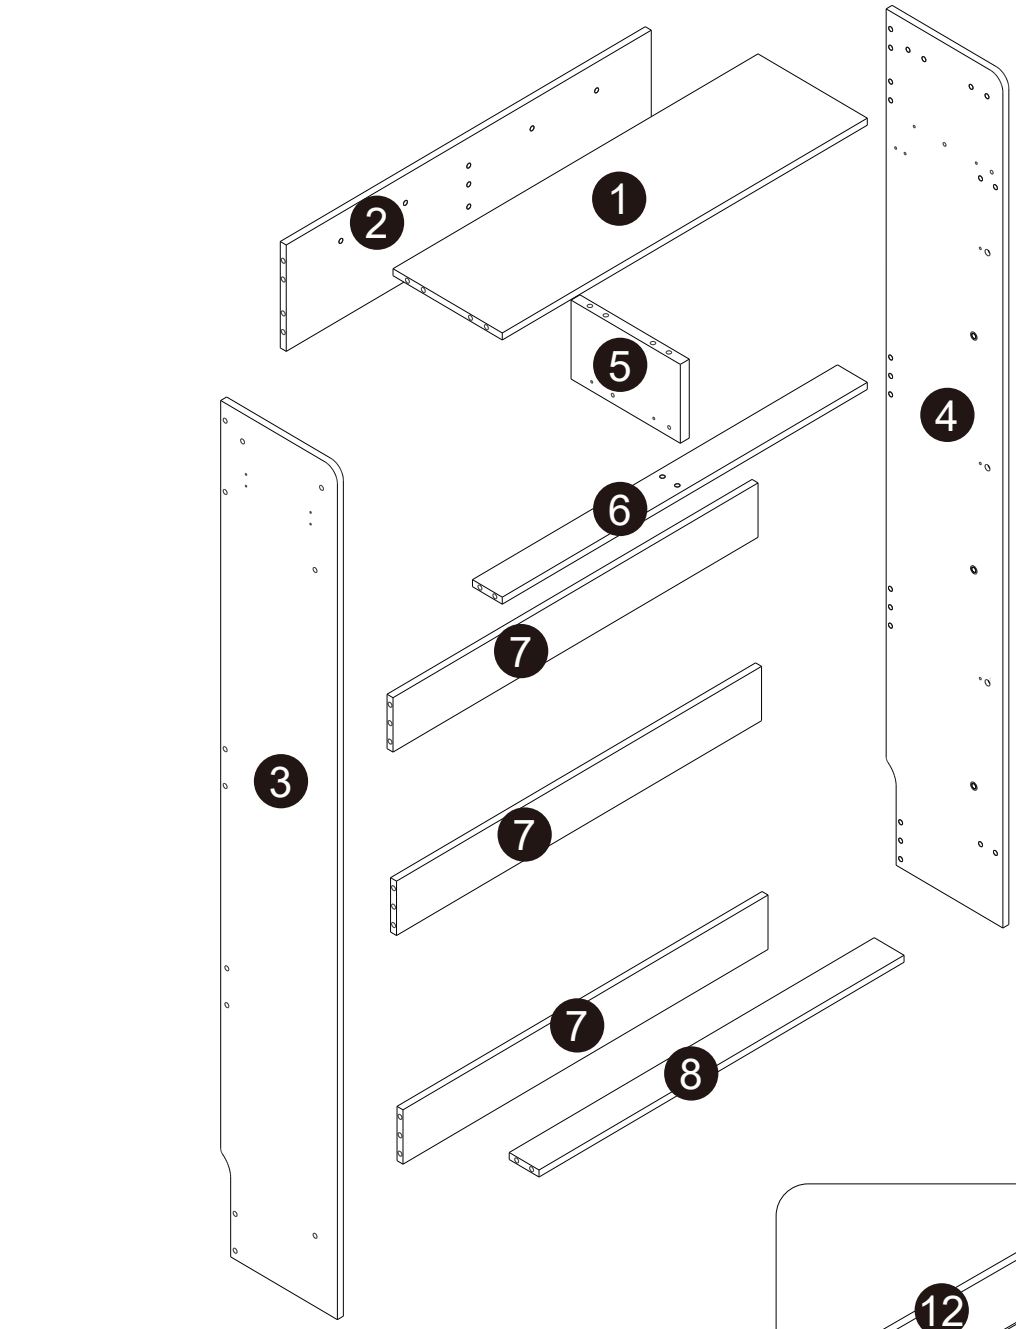
1
2
3
4
5
6
7
7
7
8

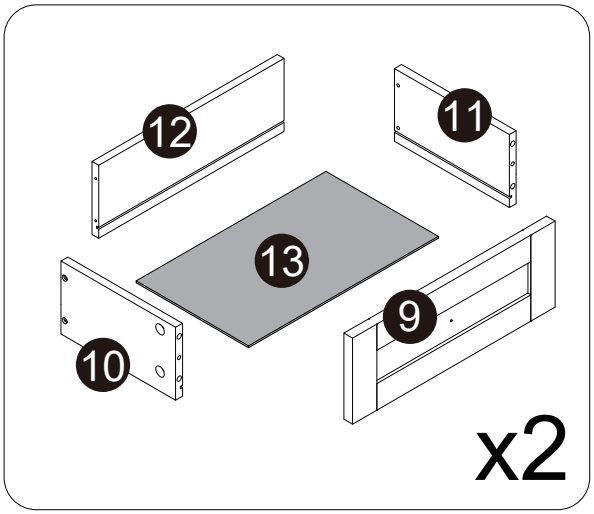

12
11
13
9
10
x2

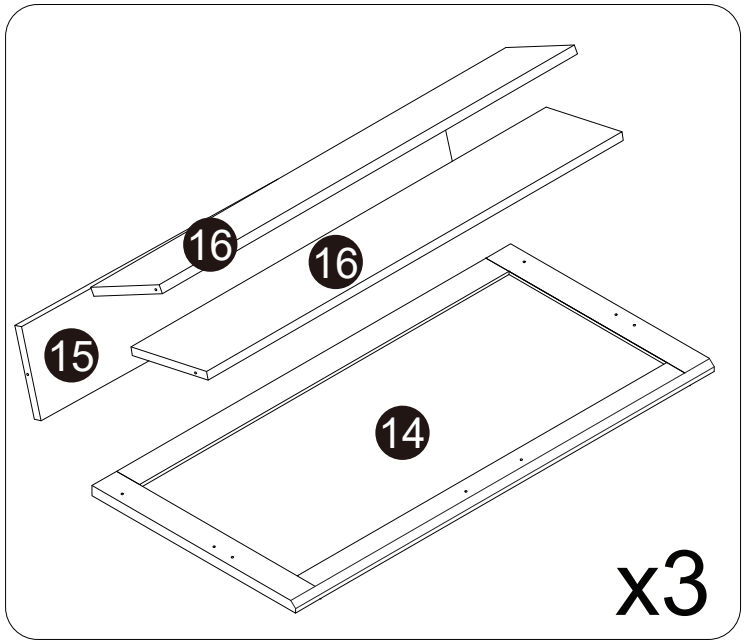
16
16
15
14
x3


HARDWARE

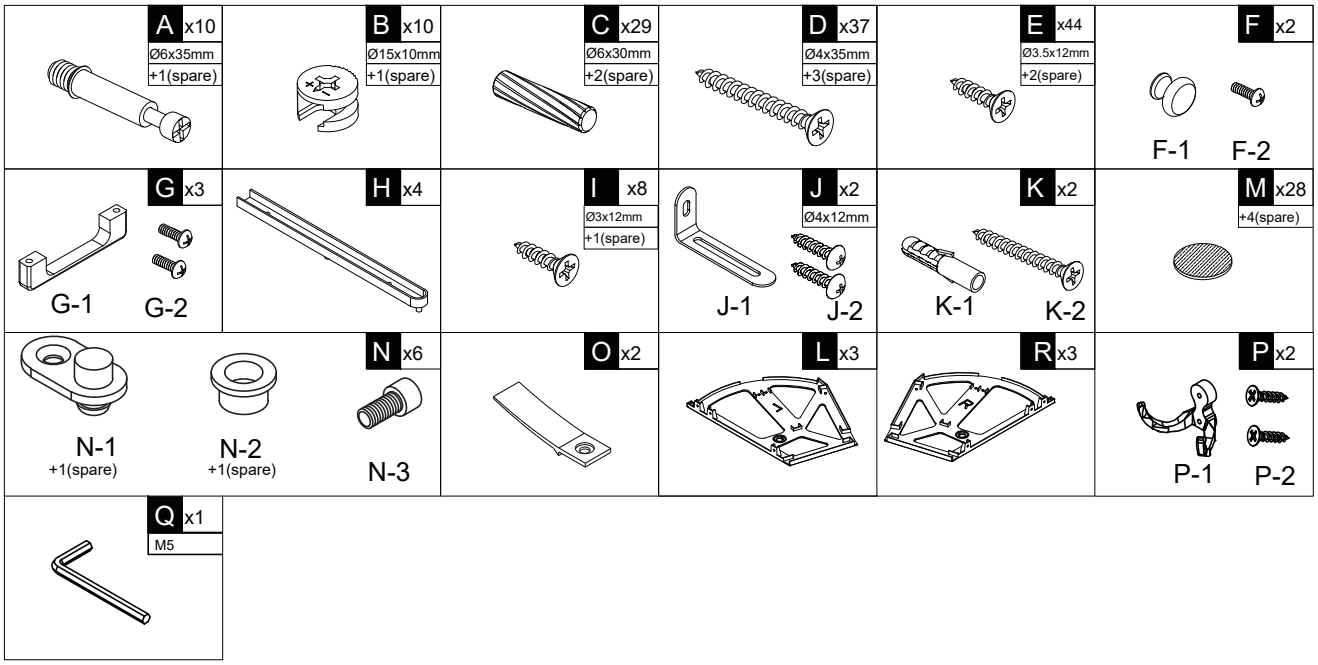

A x10
Ø6x35mm
+1(spare)
B x10
Ø15x10mm
+1(spare)
C x29
Ø6x30mm
+2(spare)
D x37
Ø4x35mm
+3(spare)
E x44
Ø3.5x12mm
+2(spare)
F x2
F-1
F-2
G x3
G-1
G-2
H x4
I x8
Ø3x12mm
+1(spare)
J x2
Ø4x12mm
J-1
J-2
K x2
K-1
K-2
M x28
+4(spare)
N x6
N-1
+1(spare)
N-2
+1(spare)
N-3
O x2
L x3
R x3
P x2
P-1
P-2
Q x1
M5

01

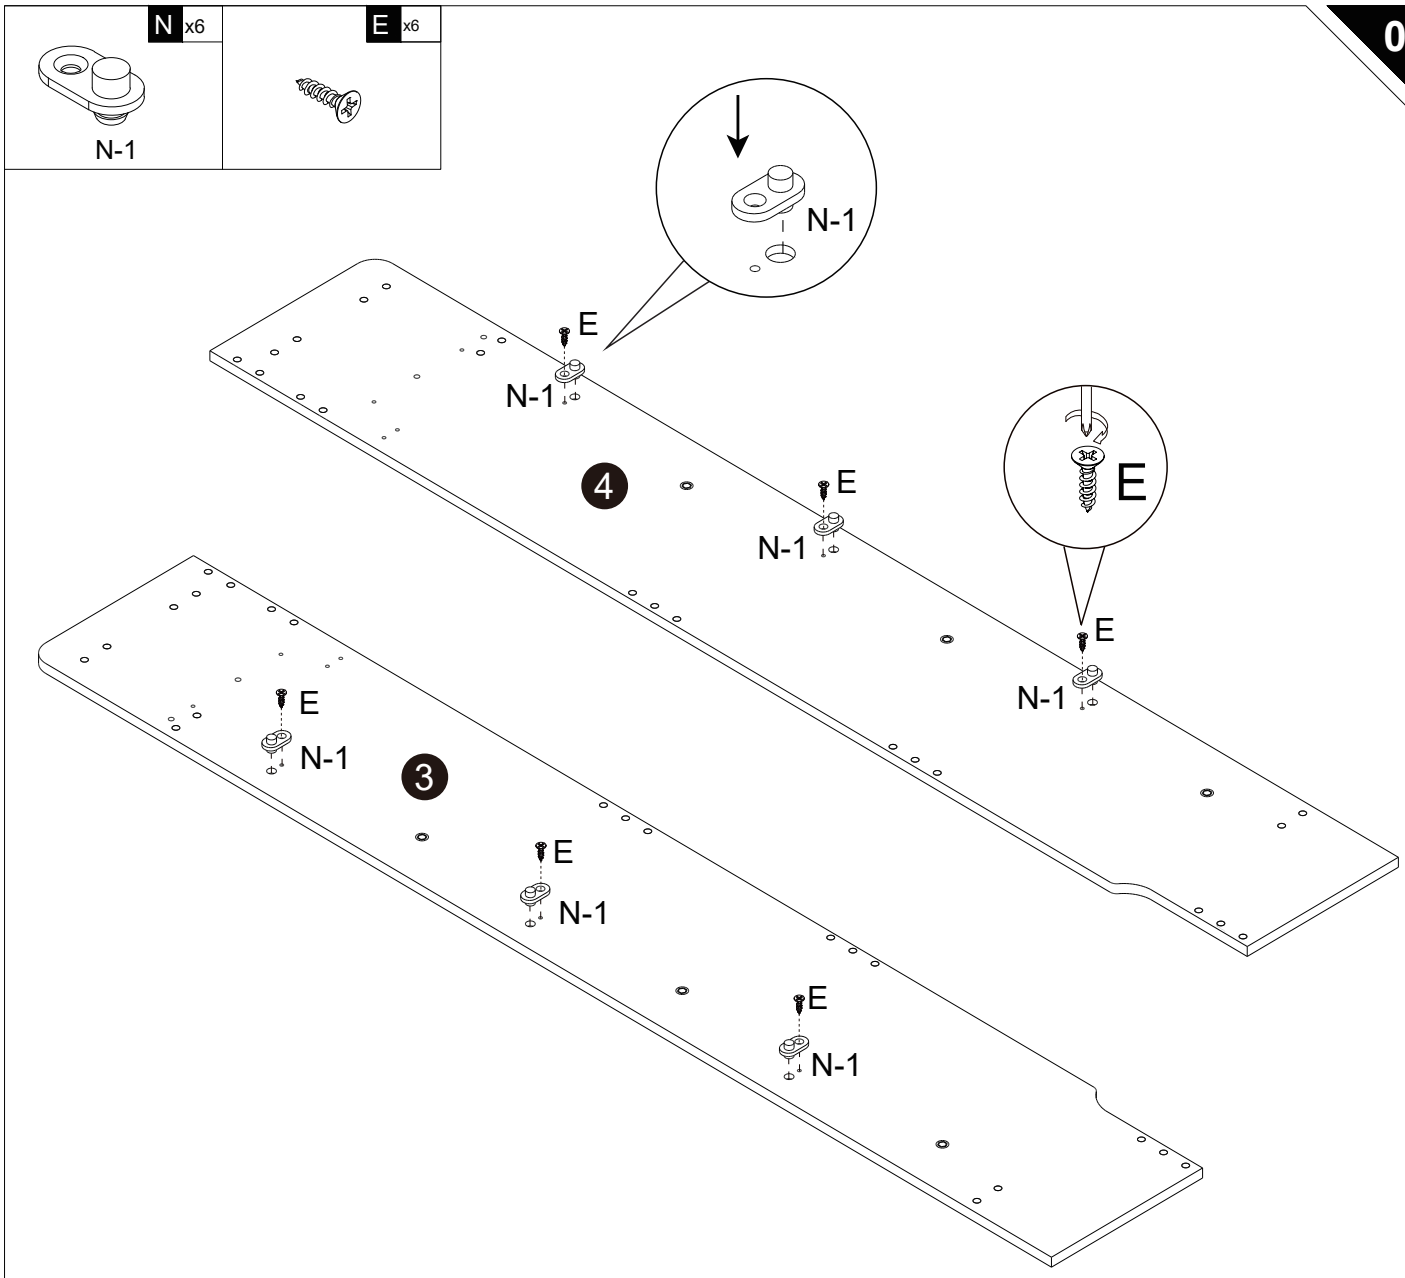

N x6
N-1
E x6
N-1
E
4
3
E


02

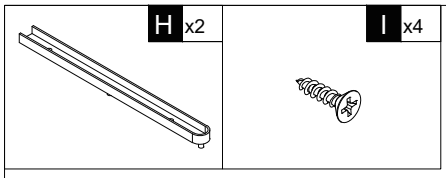

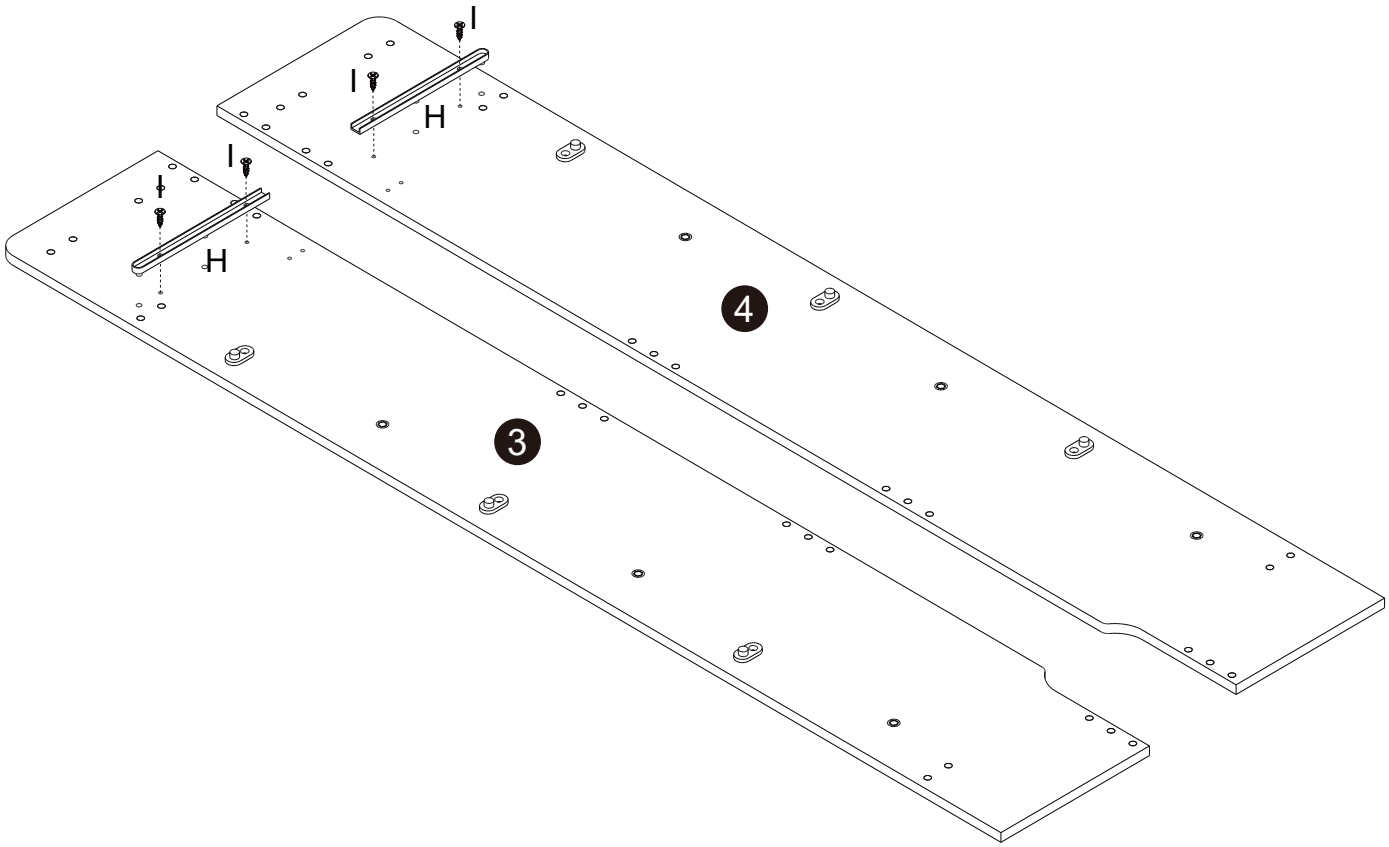


03

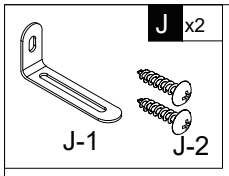


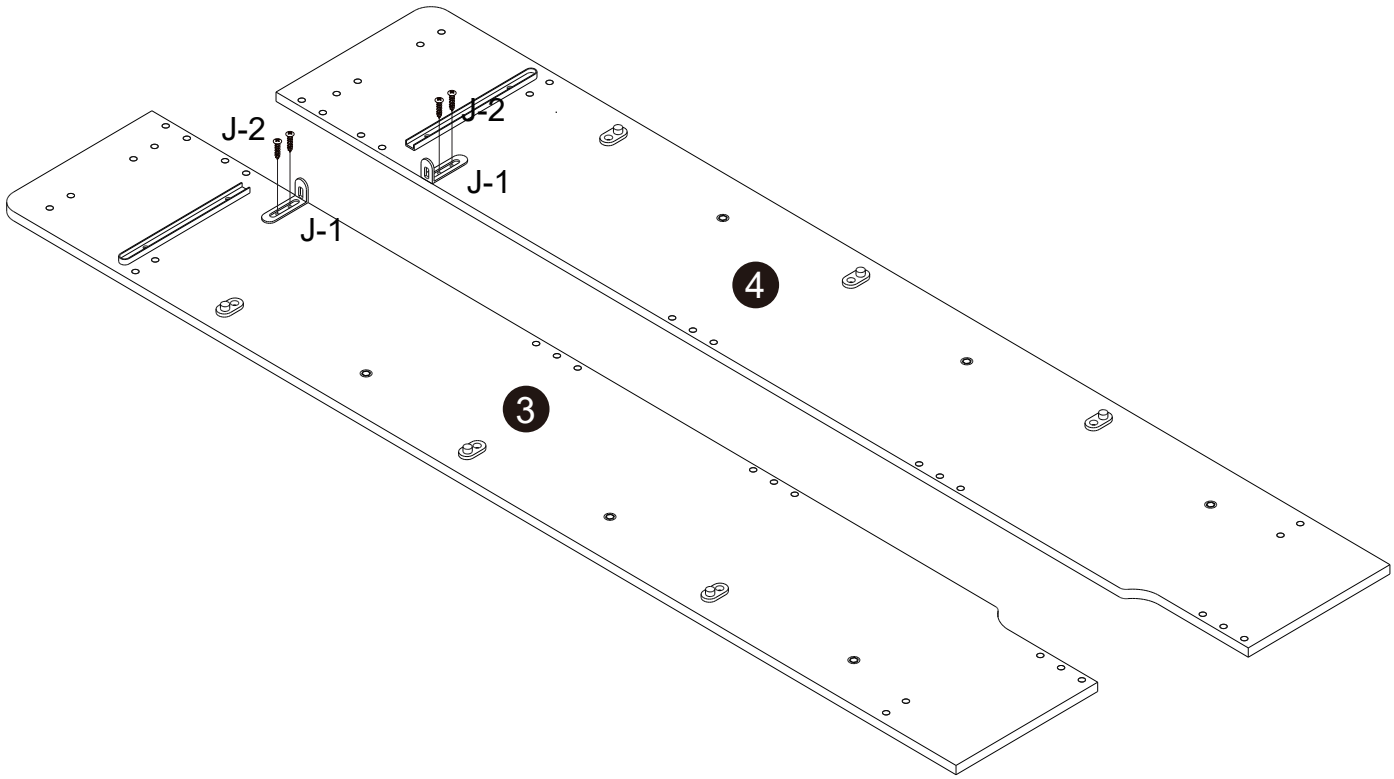

04

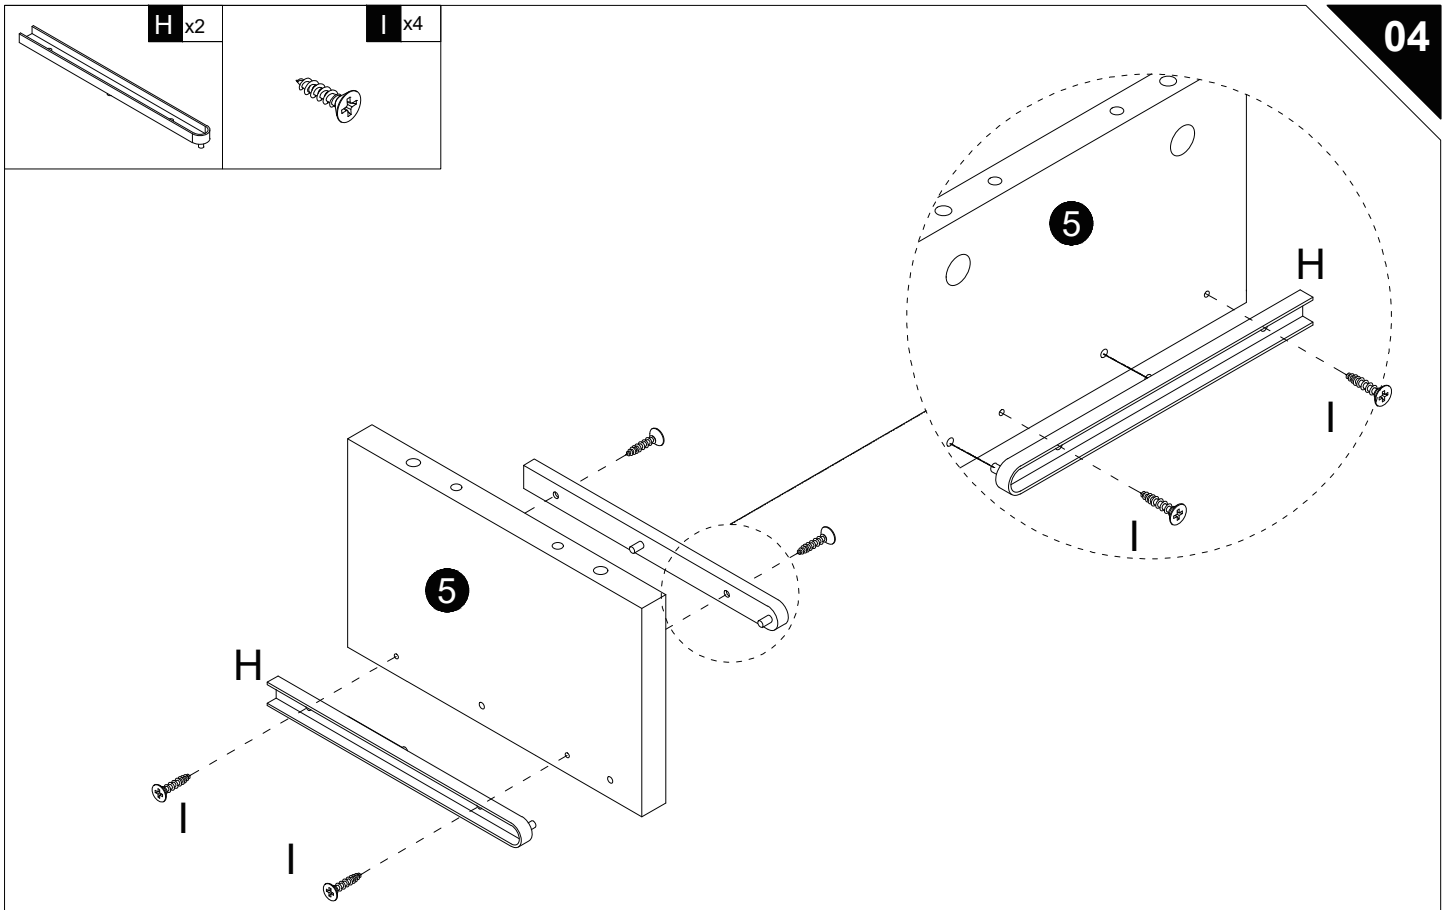


05

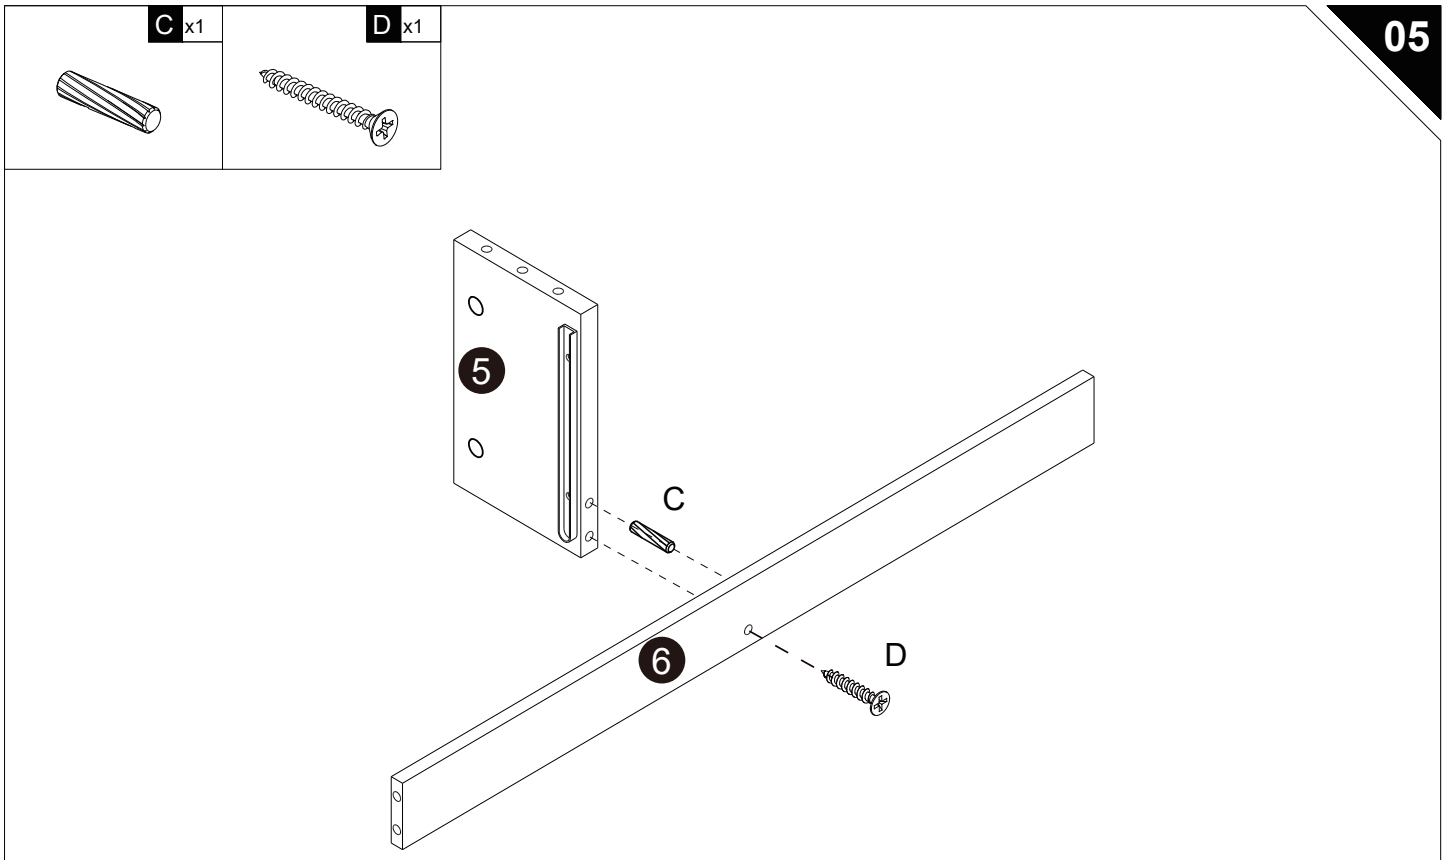


06

A x2




O x2



E x2



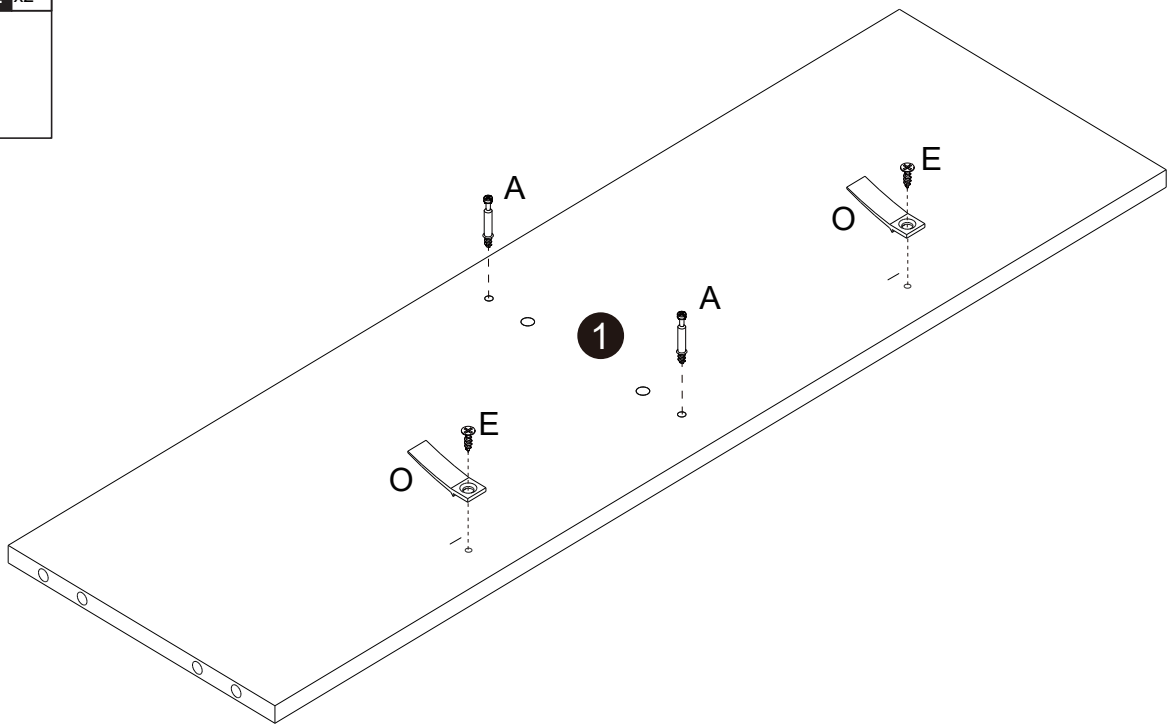



07


B x2





C x2



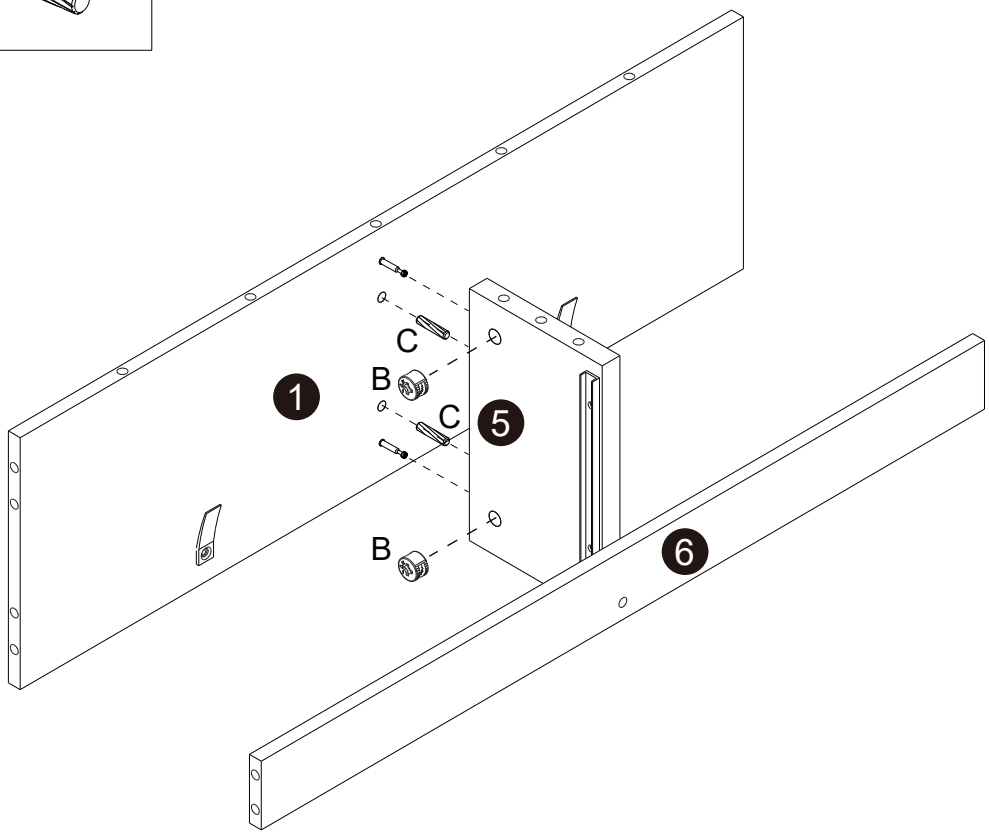


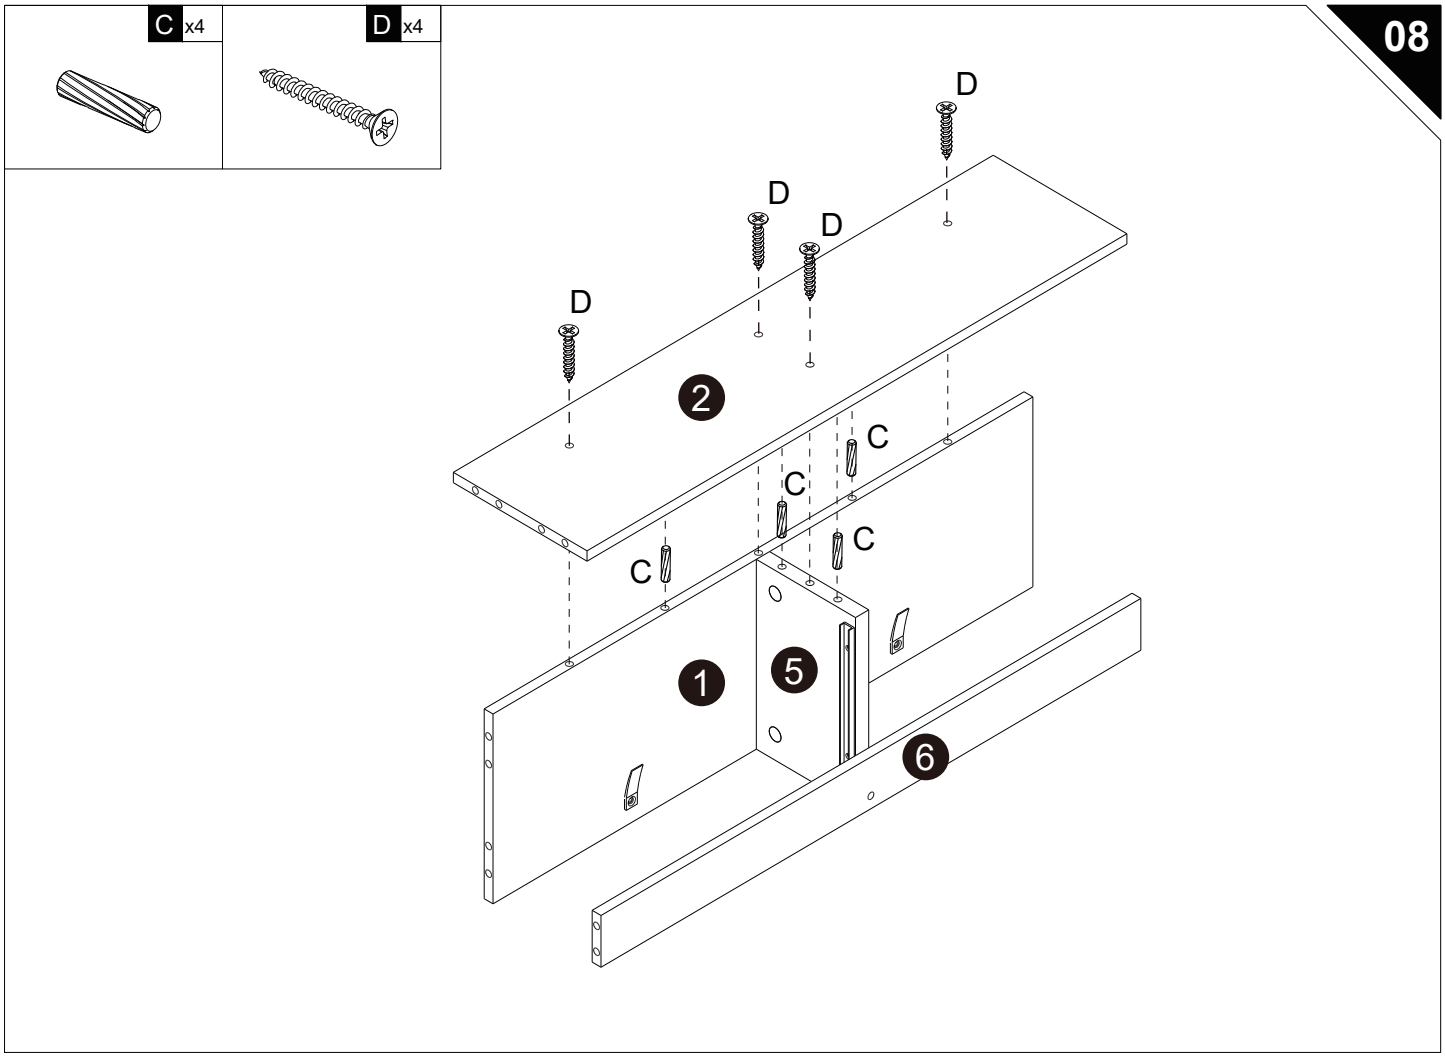

C x4
D x4
08
D
D
D
D
2
C
C
C
C
1
5
6

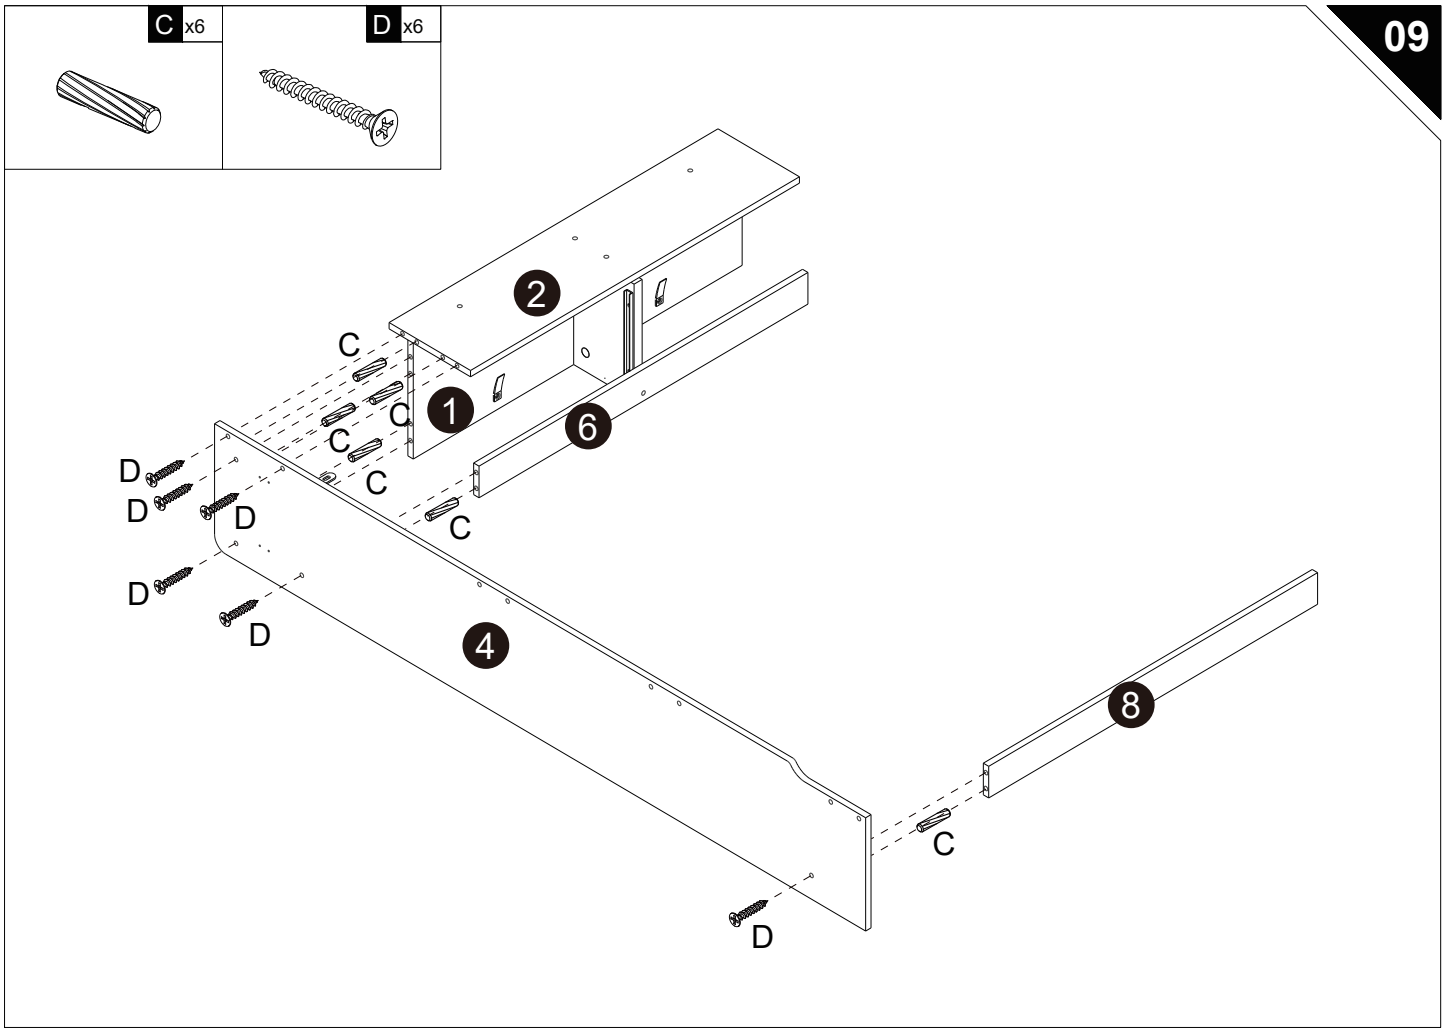

C x6
D x6
09
2
C
C
C
C
C
1
6
D
D
D
D
D
D
4
8
C
D

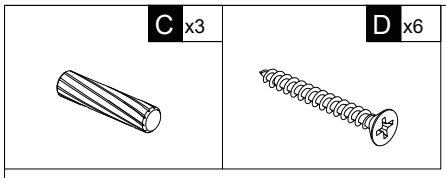



During the installation process, you need to keep your balance by hand to avoid damage.

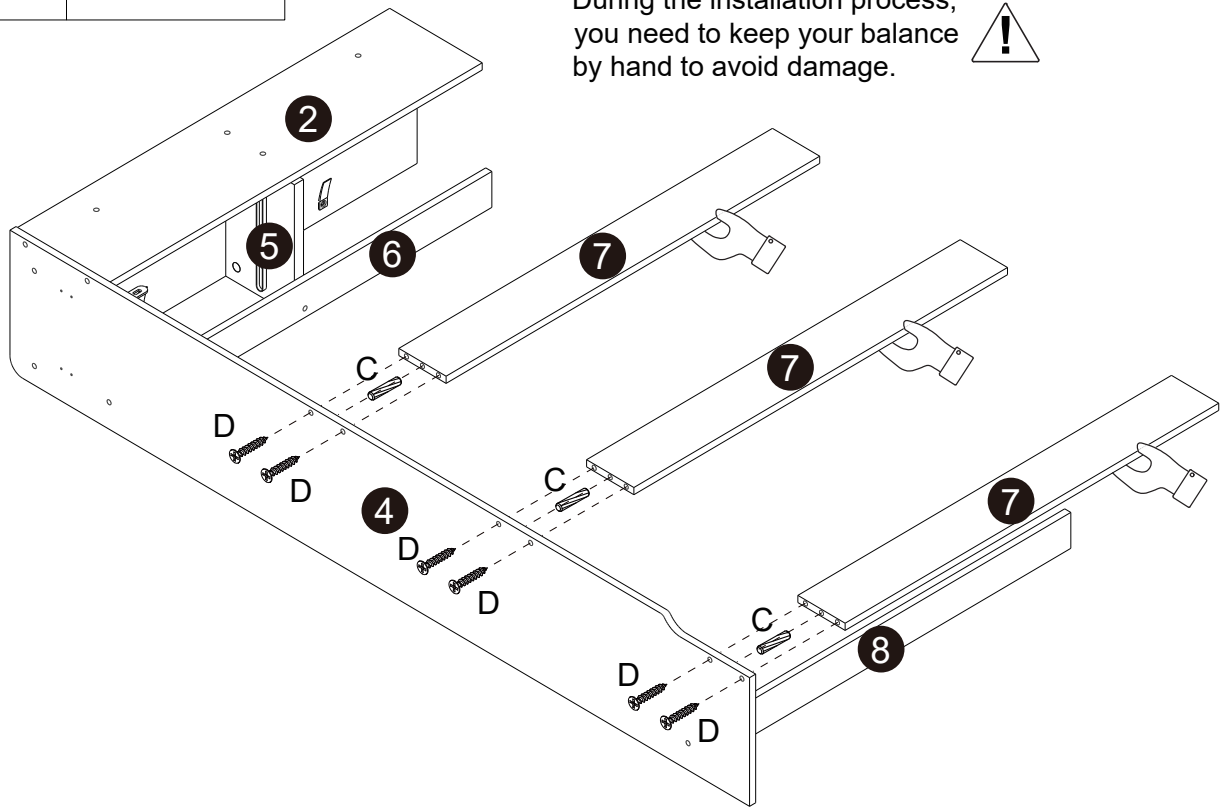

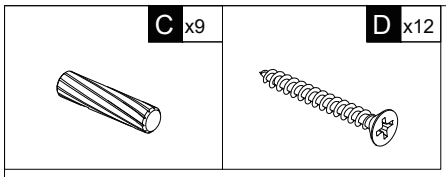

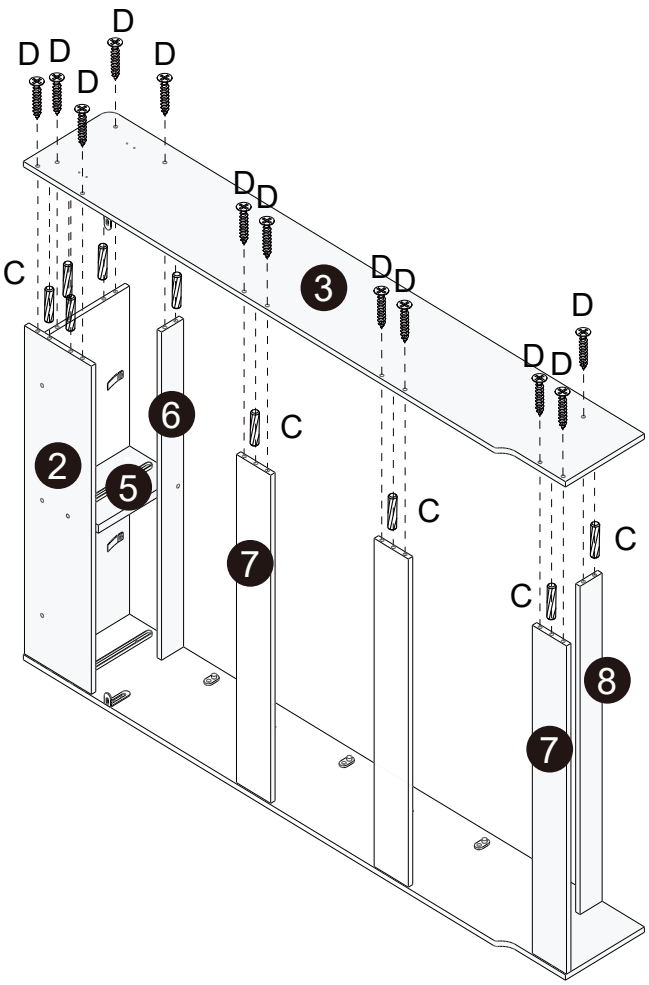

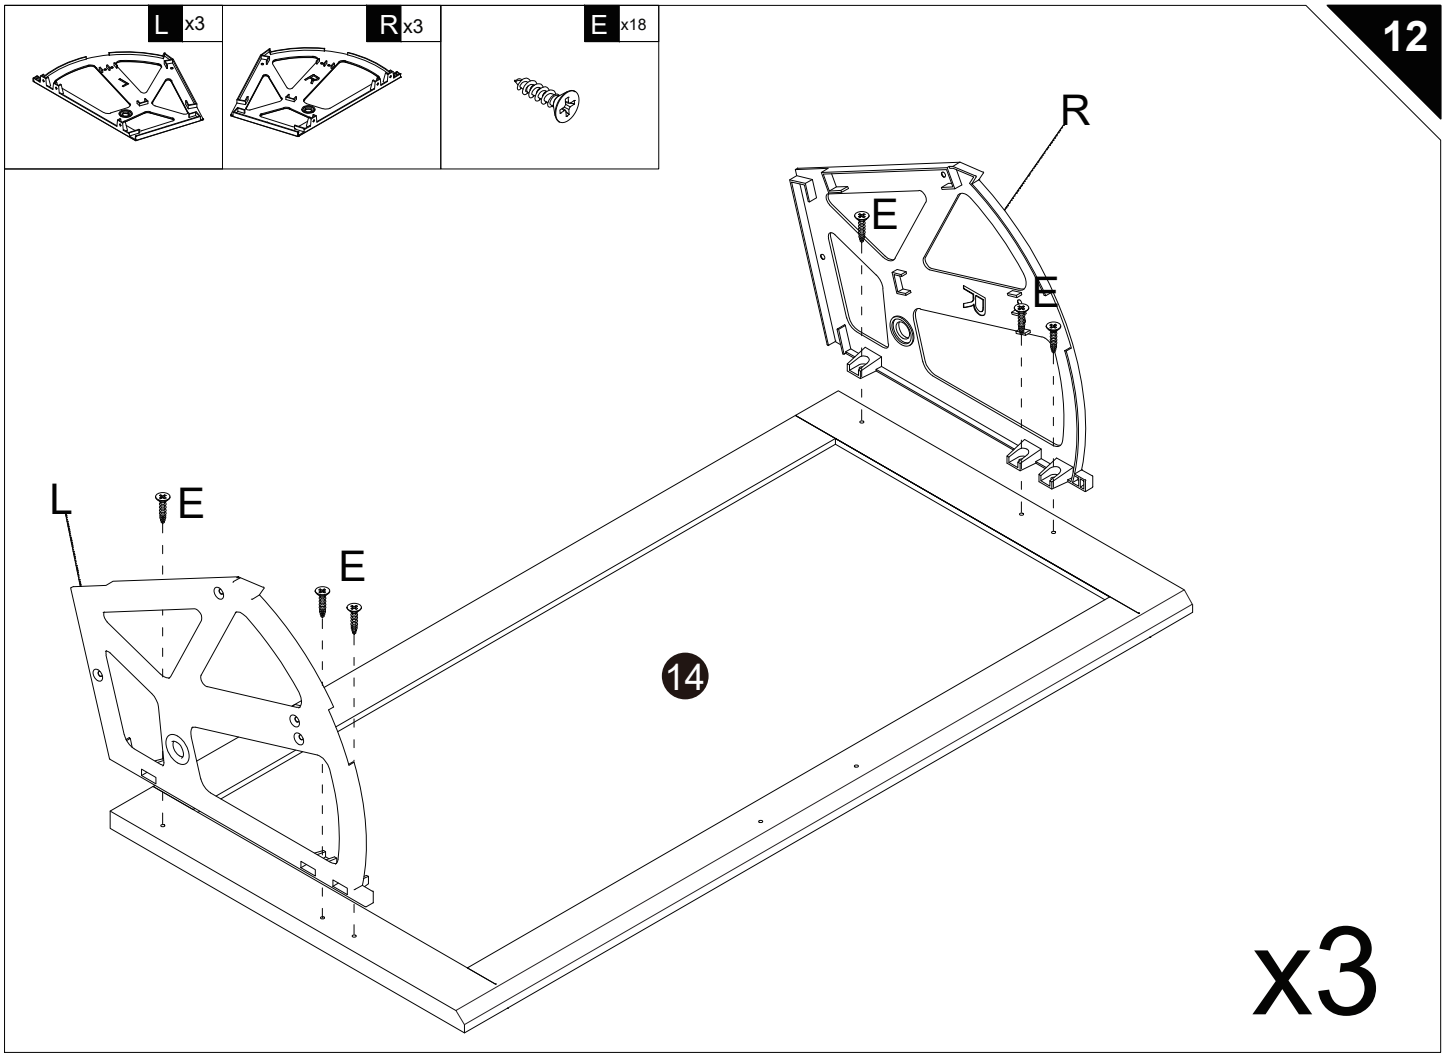
L x3
R x3
E x18
12
R
E
E
L
E
E
14
x3

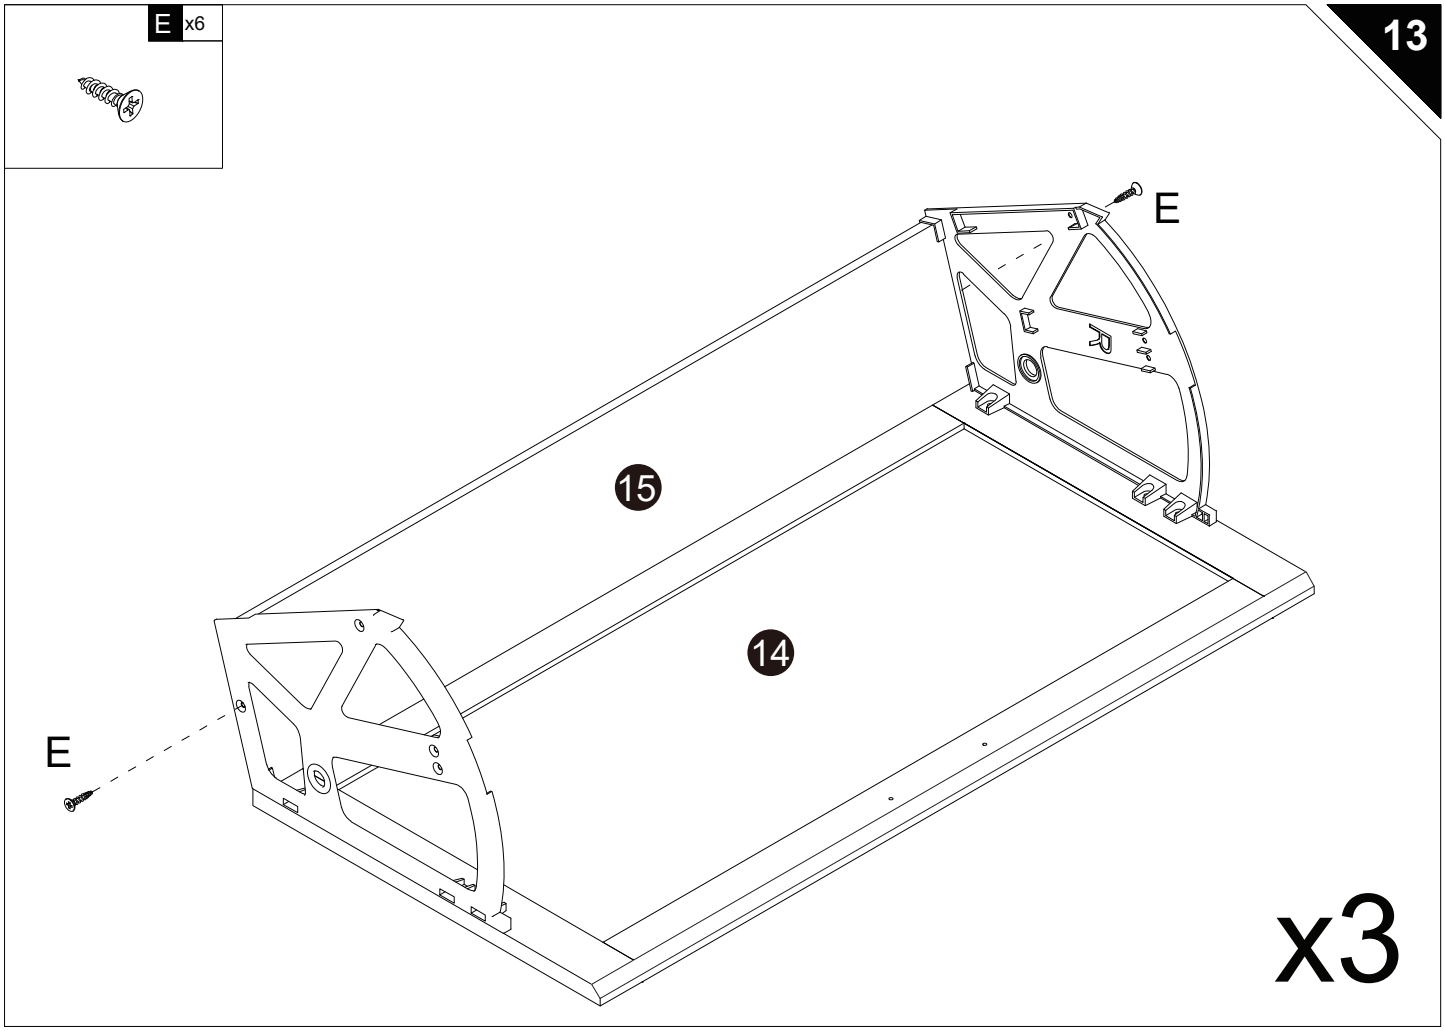
E x6
13
E
15
14
E
x3


14

E x6

G x3

G-1


G-2

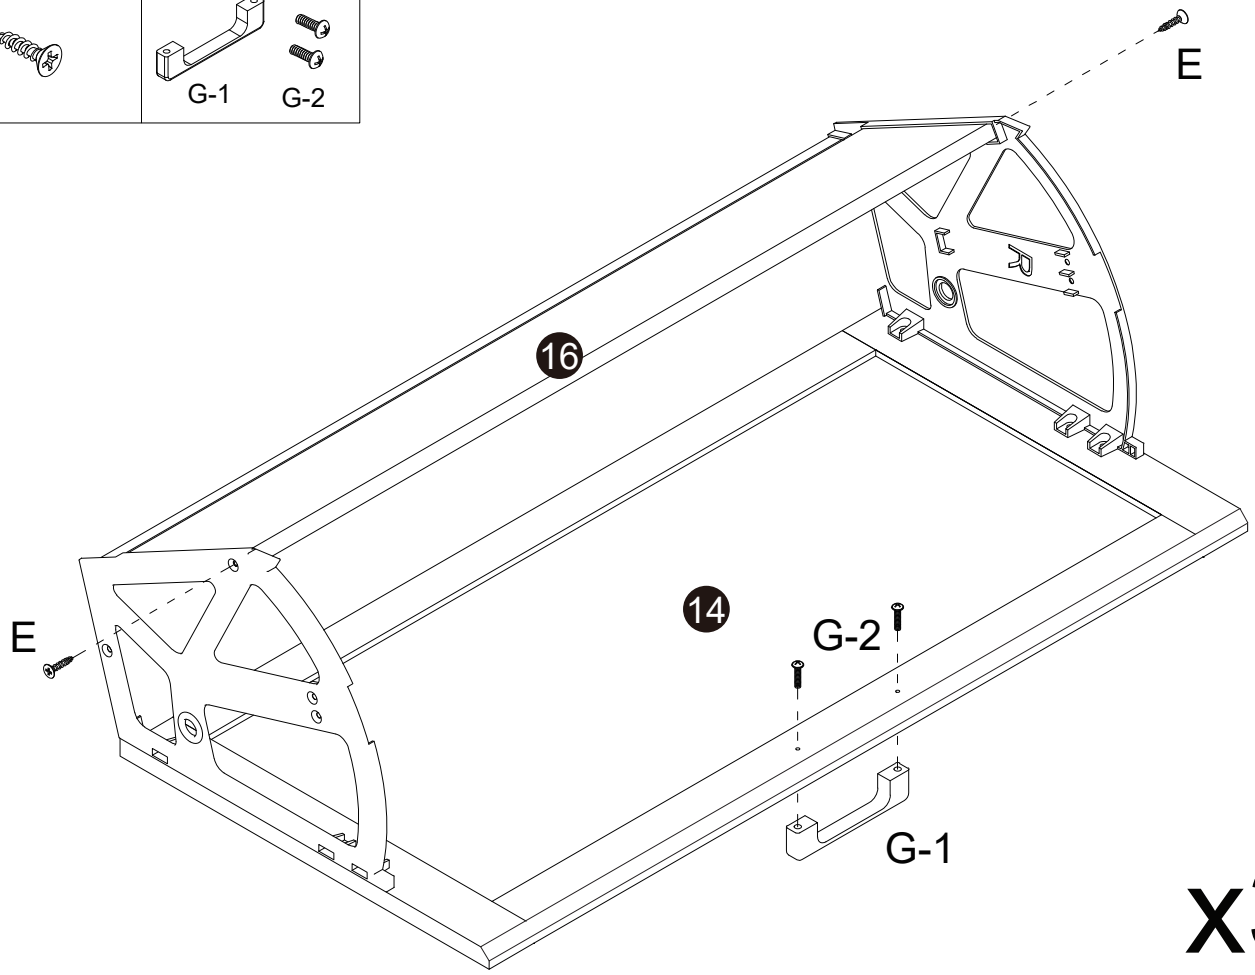

x3


15

A x8

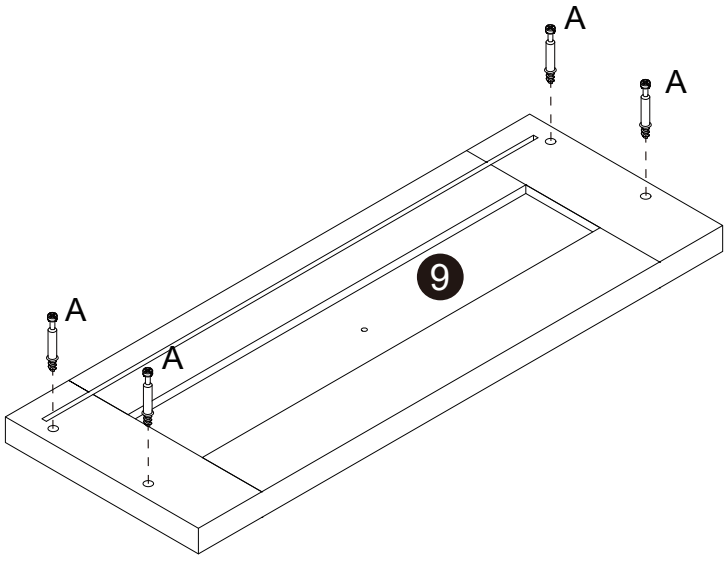


x2

D x8




16

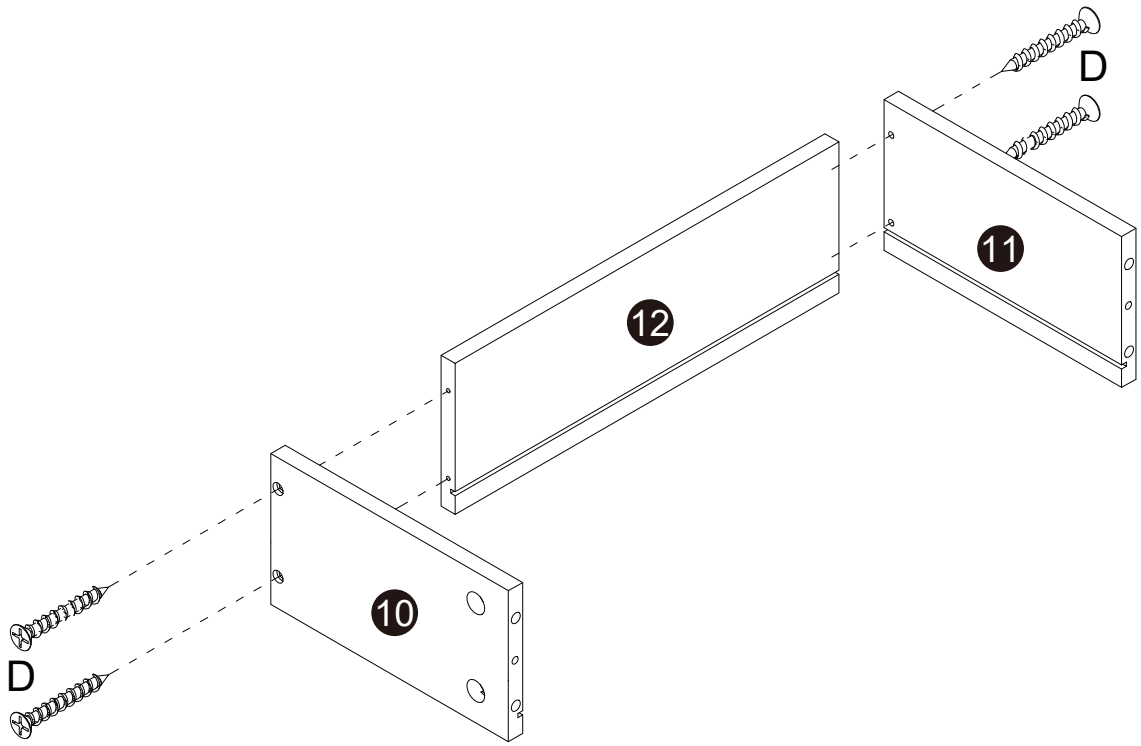

x2

17

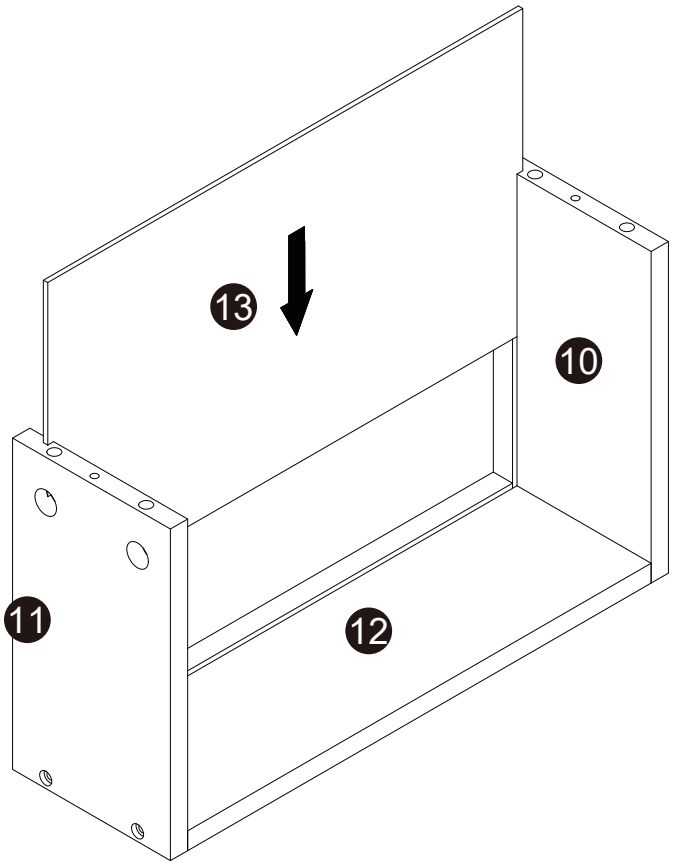


x2


18

B x8



C x4




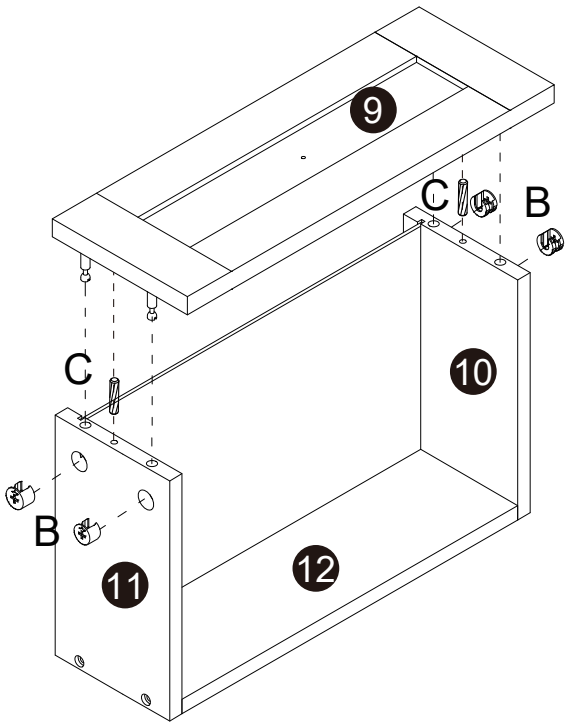


x2


19


F x2



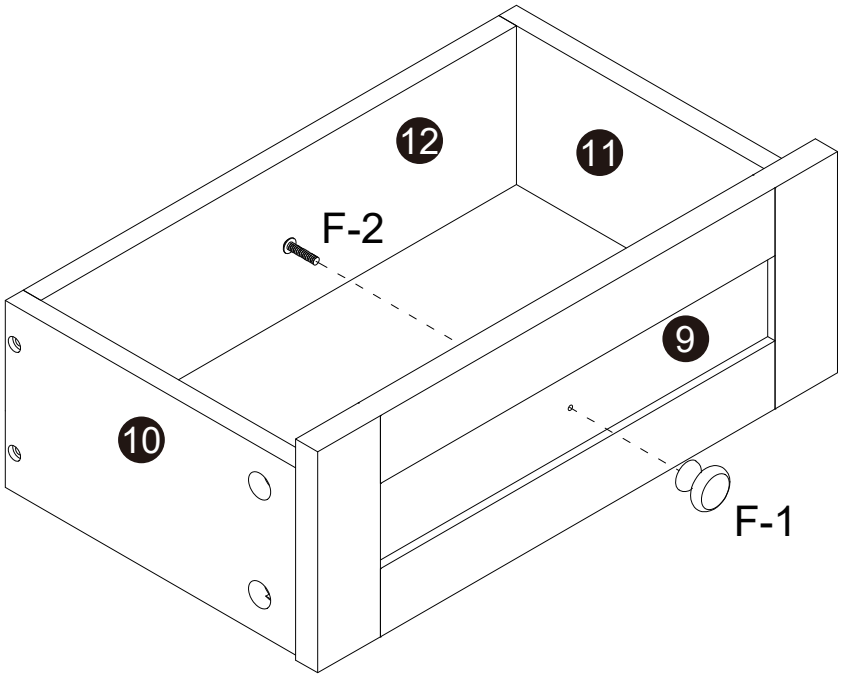


x2

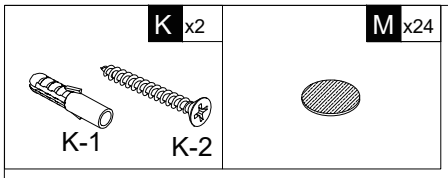


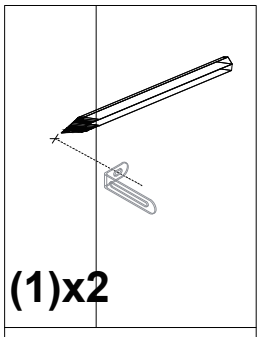


then, use a ruler to measure the approximate height of the product on the wall, and then mark it witha pen.

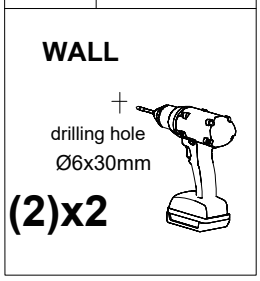


Then use a tape drill to make holes in the wall that are suitable for the product screws.

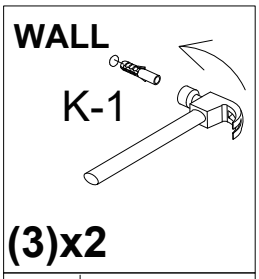


Then,put the expansion bolt into the hole

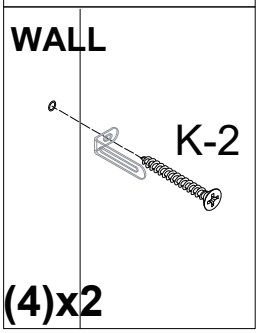


Finally,pass the matching screws throughthe "anti-rewind" and tighten themto fix them on the wall.

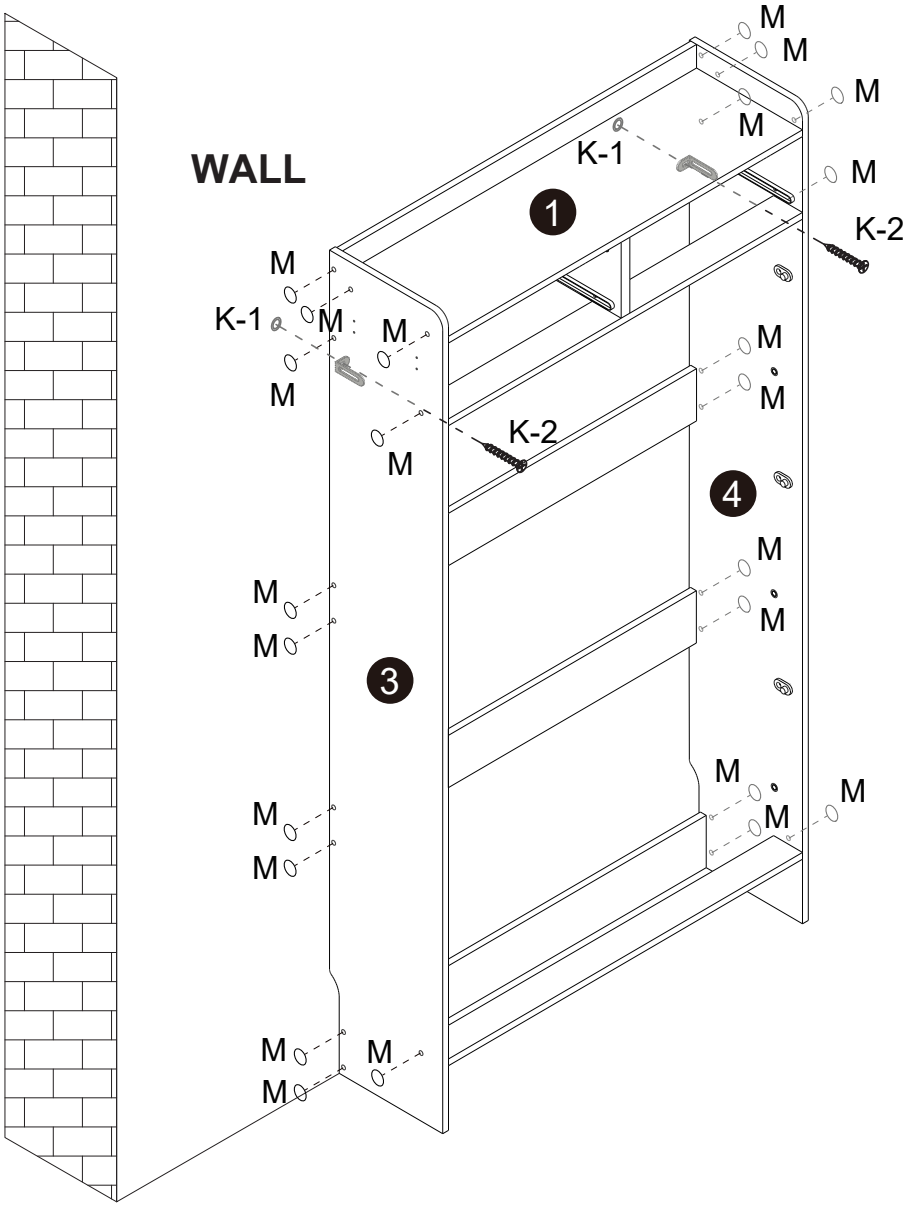

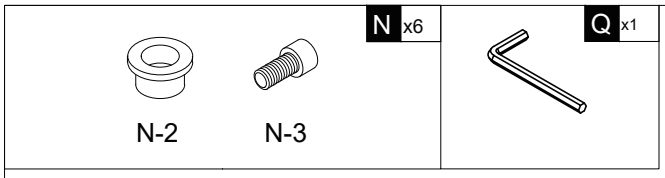




If the installation cannot be placed in the correct position, please try operating at other inclined angles.

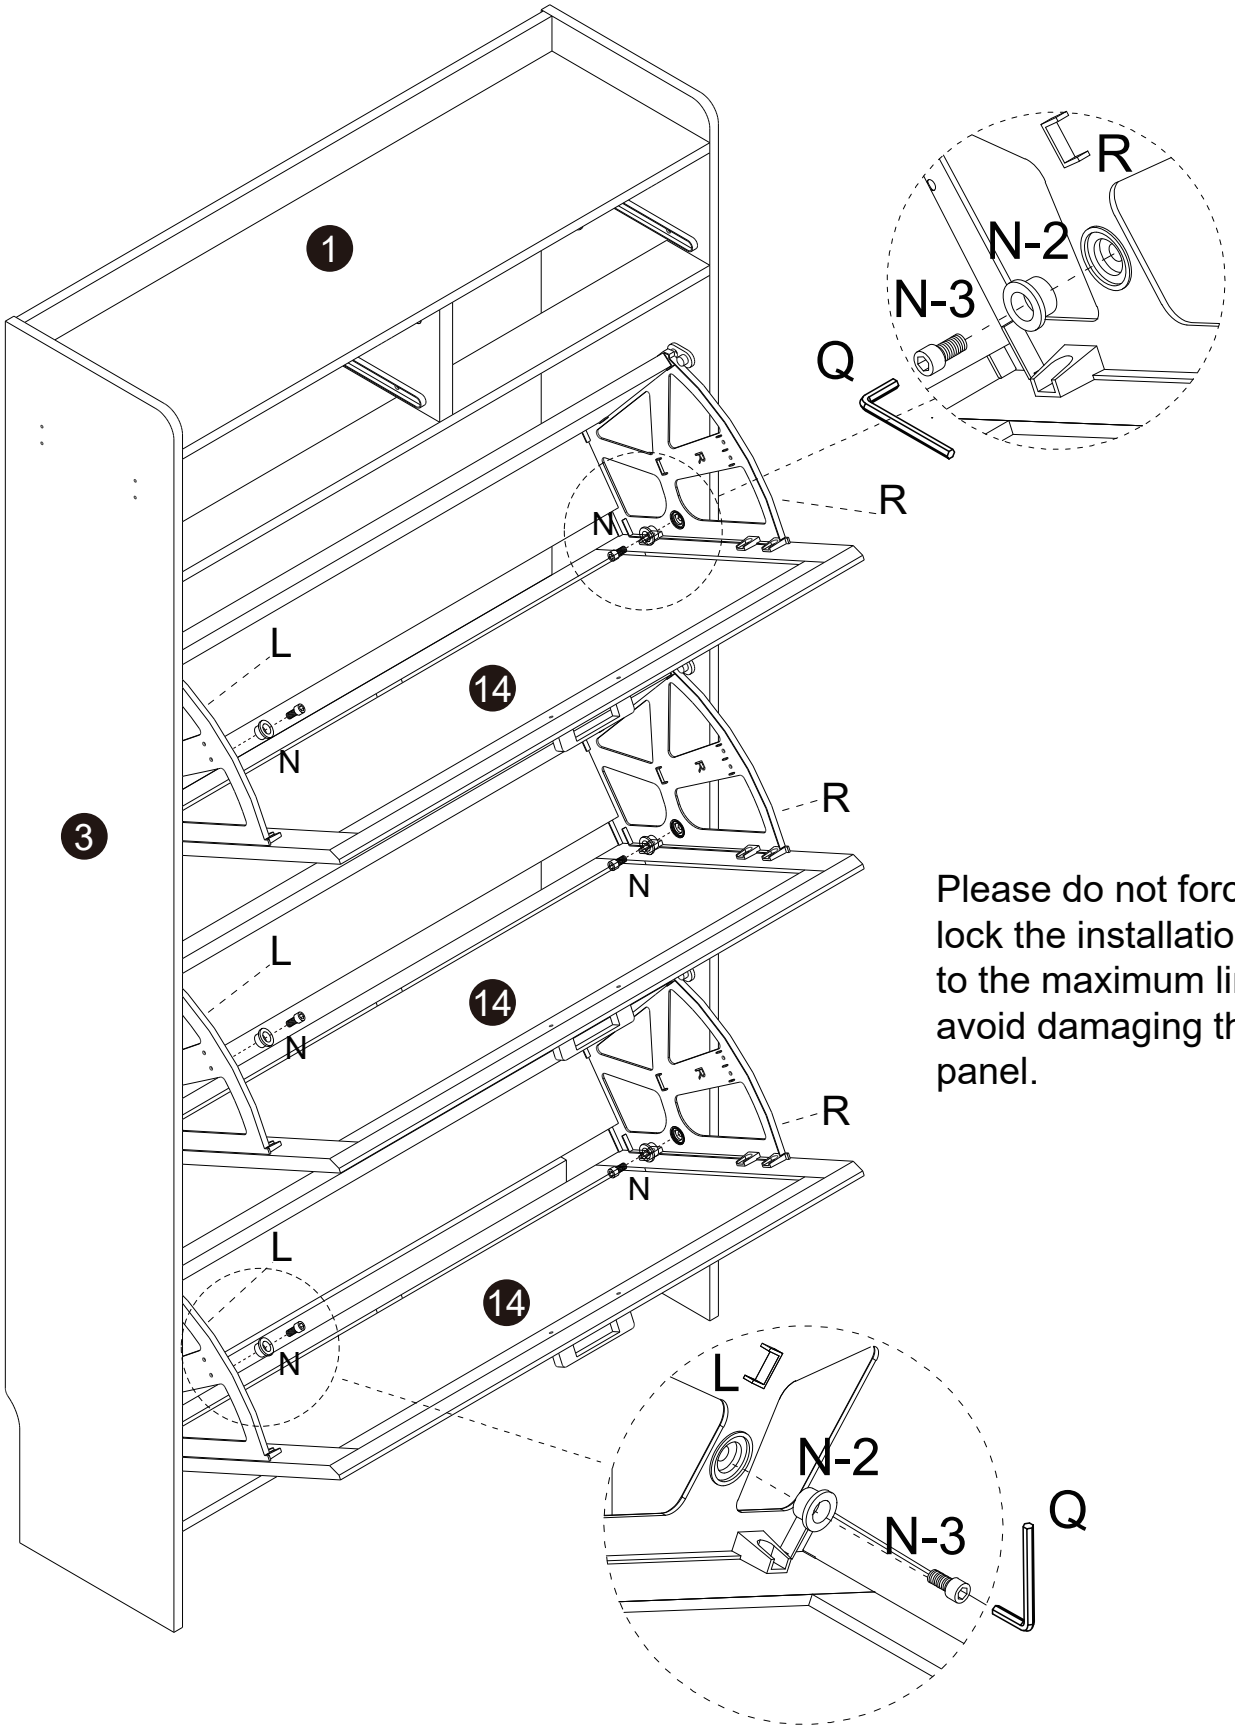


Please do not forcefully lock the installation screws to the maximum limit to avoid damaging the side panel.


E x6



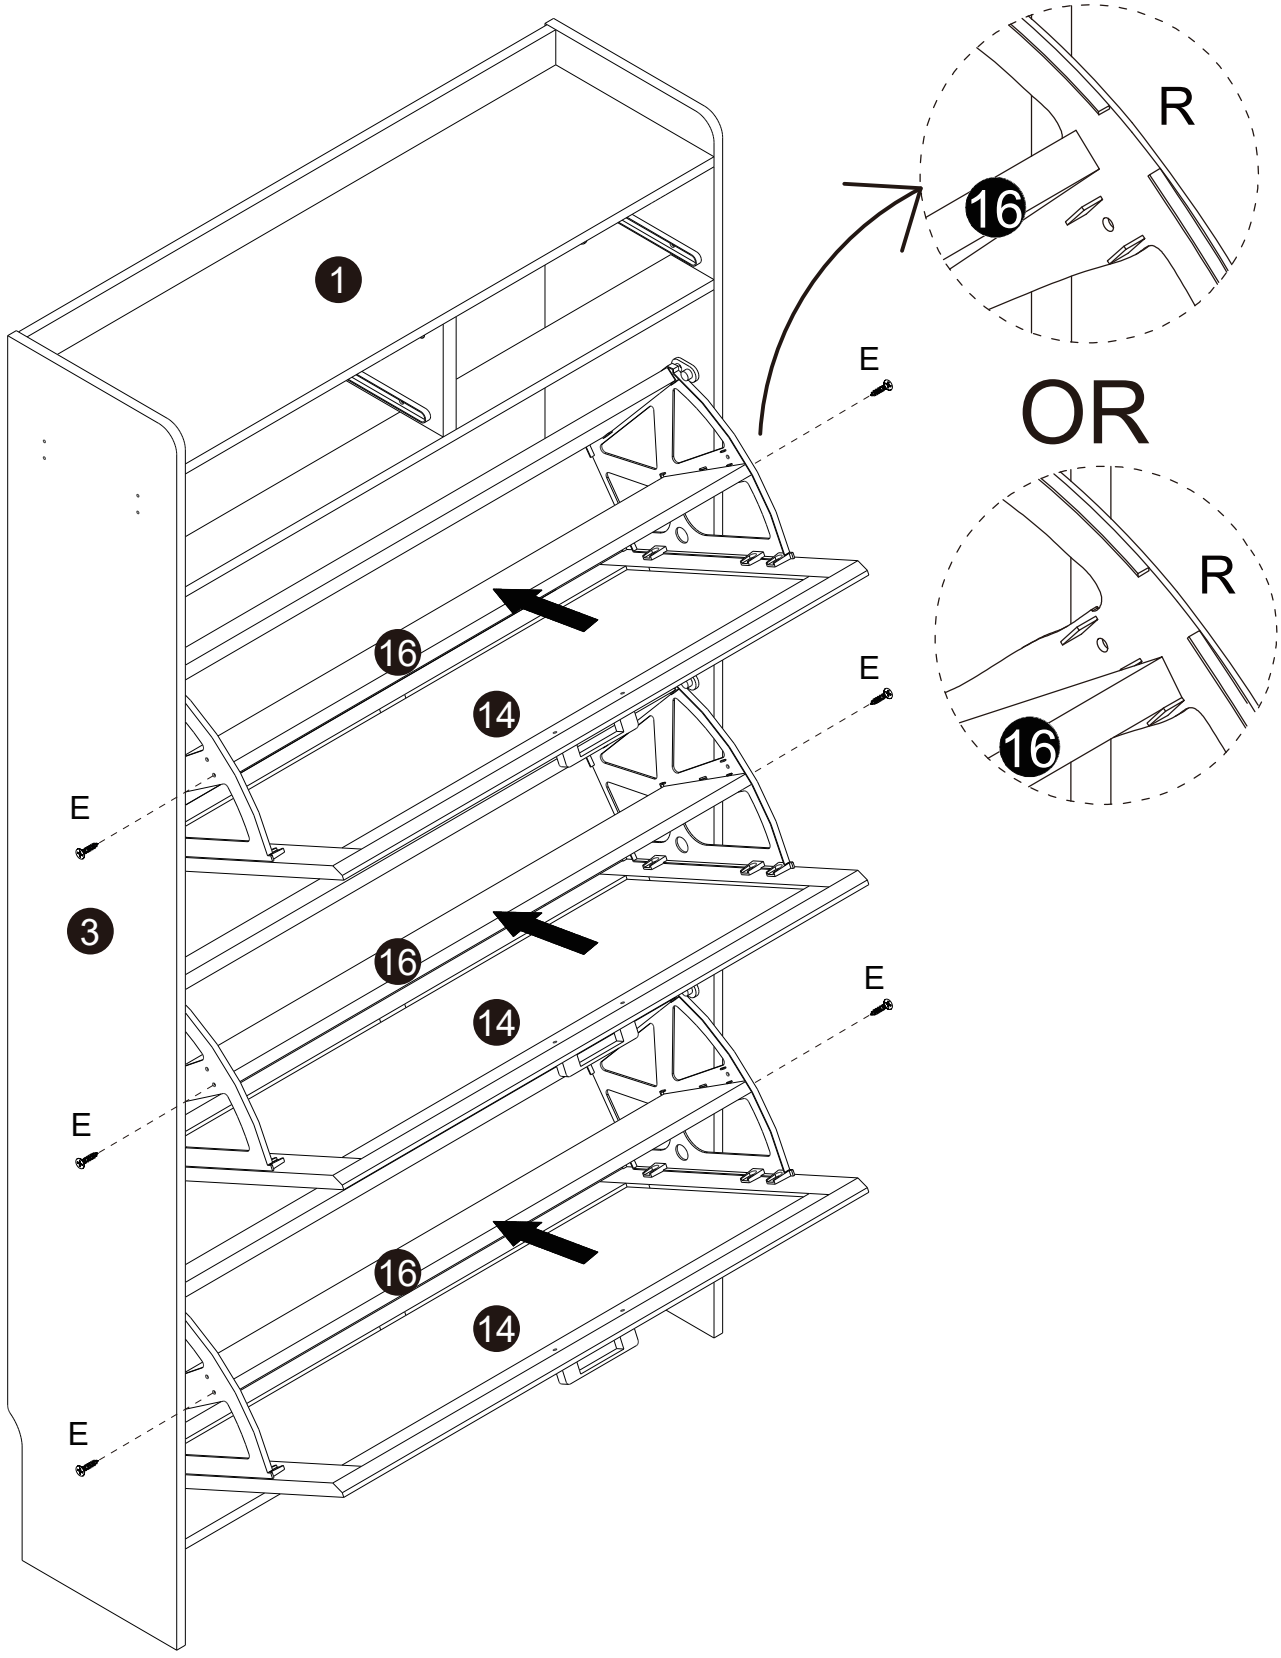


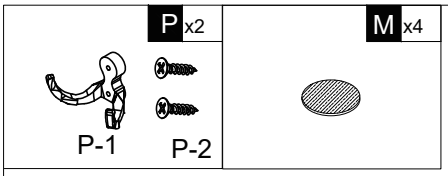


The P number can be mounted to the No. 3 or No. 4 side panels

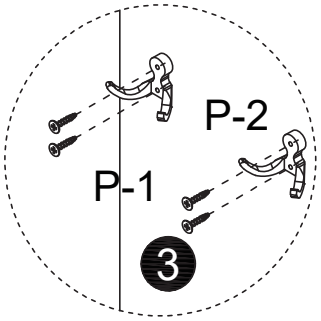

OR

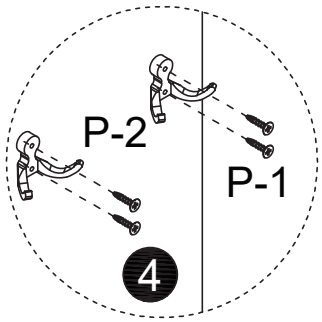

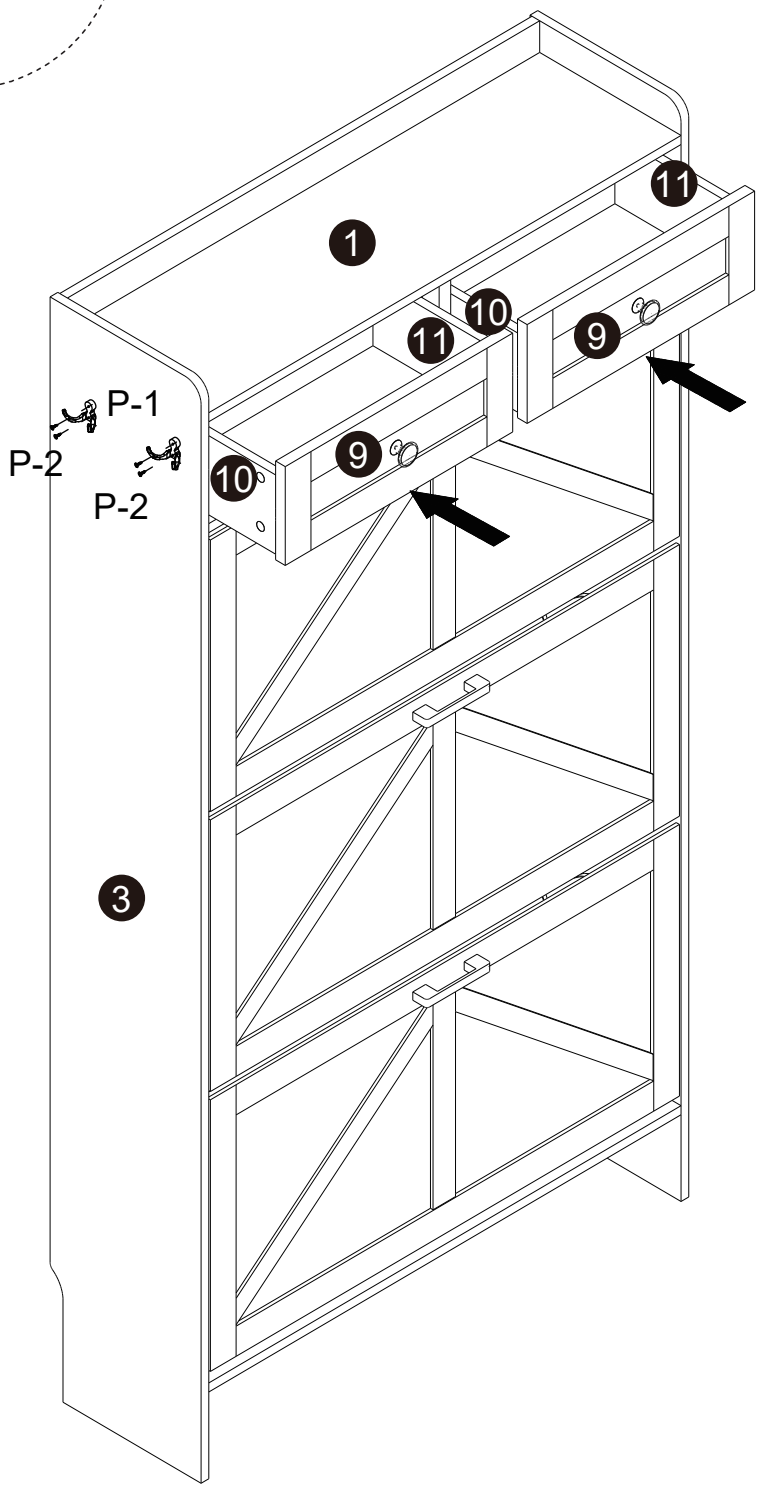

Done

