
Bed Frame





FBE014-Q

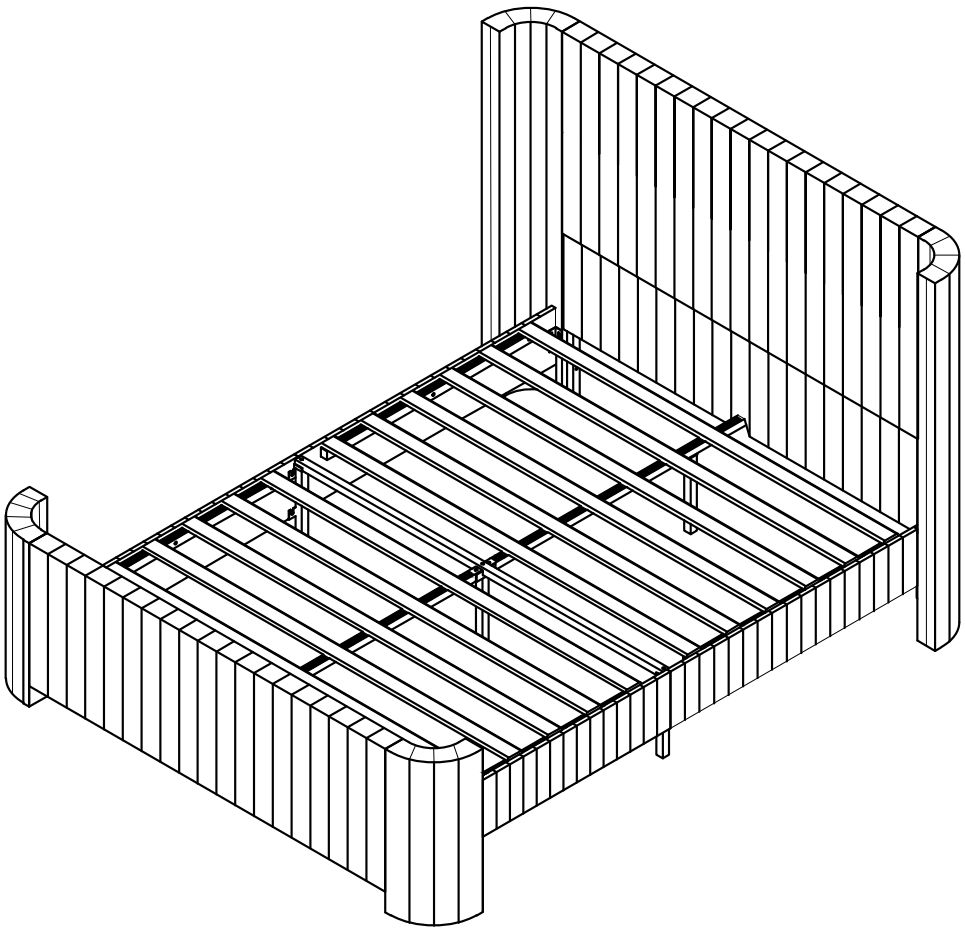








Team
Assembly
Recommended

E-Mail:Furniture_CSTM@outlook.com
(Get efficienct answer within 12 hours)


Parts List BOX 1

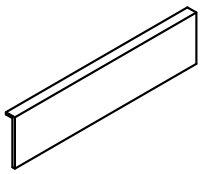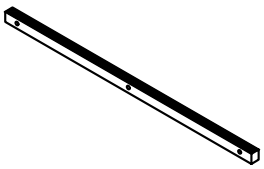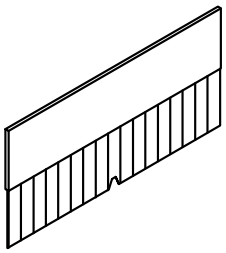			
1 ×1	2 ×4	10 ×1	11 ×1
			
13 ×1	24 ×1	25 ×1	


Parts List BOX 2

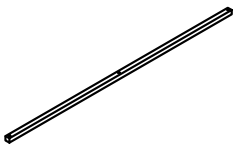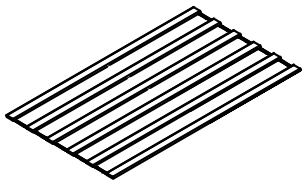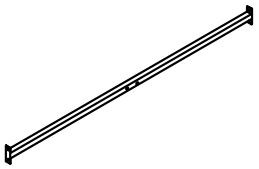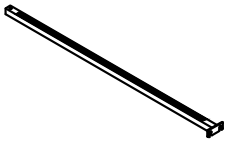			
3 ×2	4 ×1	5 ×2	6 ×1
			
7 ×1	8 ×1	9 ×1	12 ×1


Parts List BOX 2

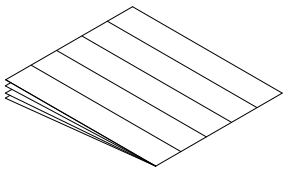


14	×1

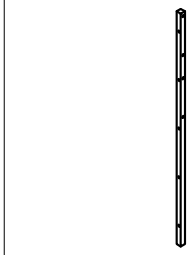

15	×2

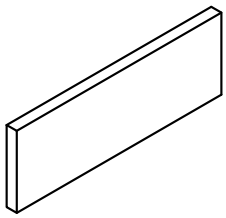


17	×1

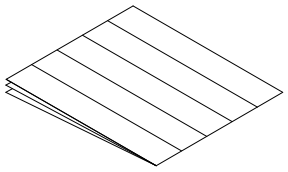


18	×1




19	×2

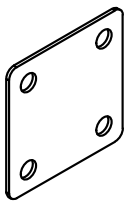


20	×2

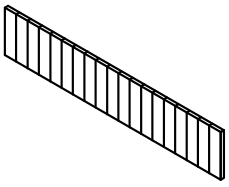

21	×1

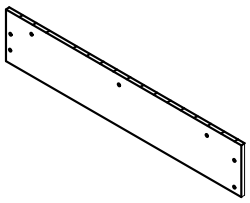


22	×1




23	×2


Parts List BOX **2**

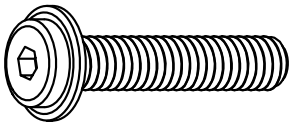


A	M8×50mm	×1




B	M8×40mm	×39



C	M8×20mm	×24

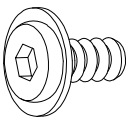



D	M8×15mm	×16

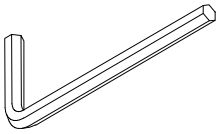

F	M5	×1

Headboard Section Installation

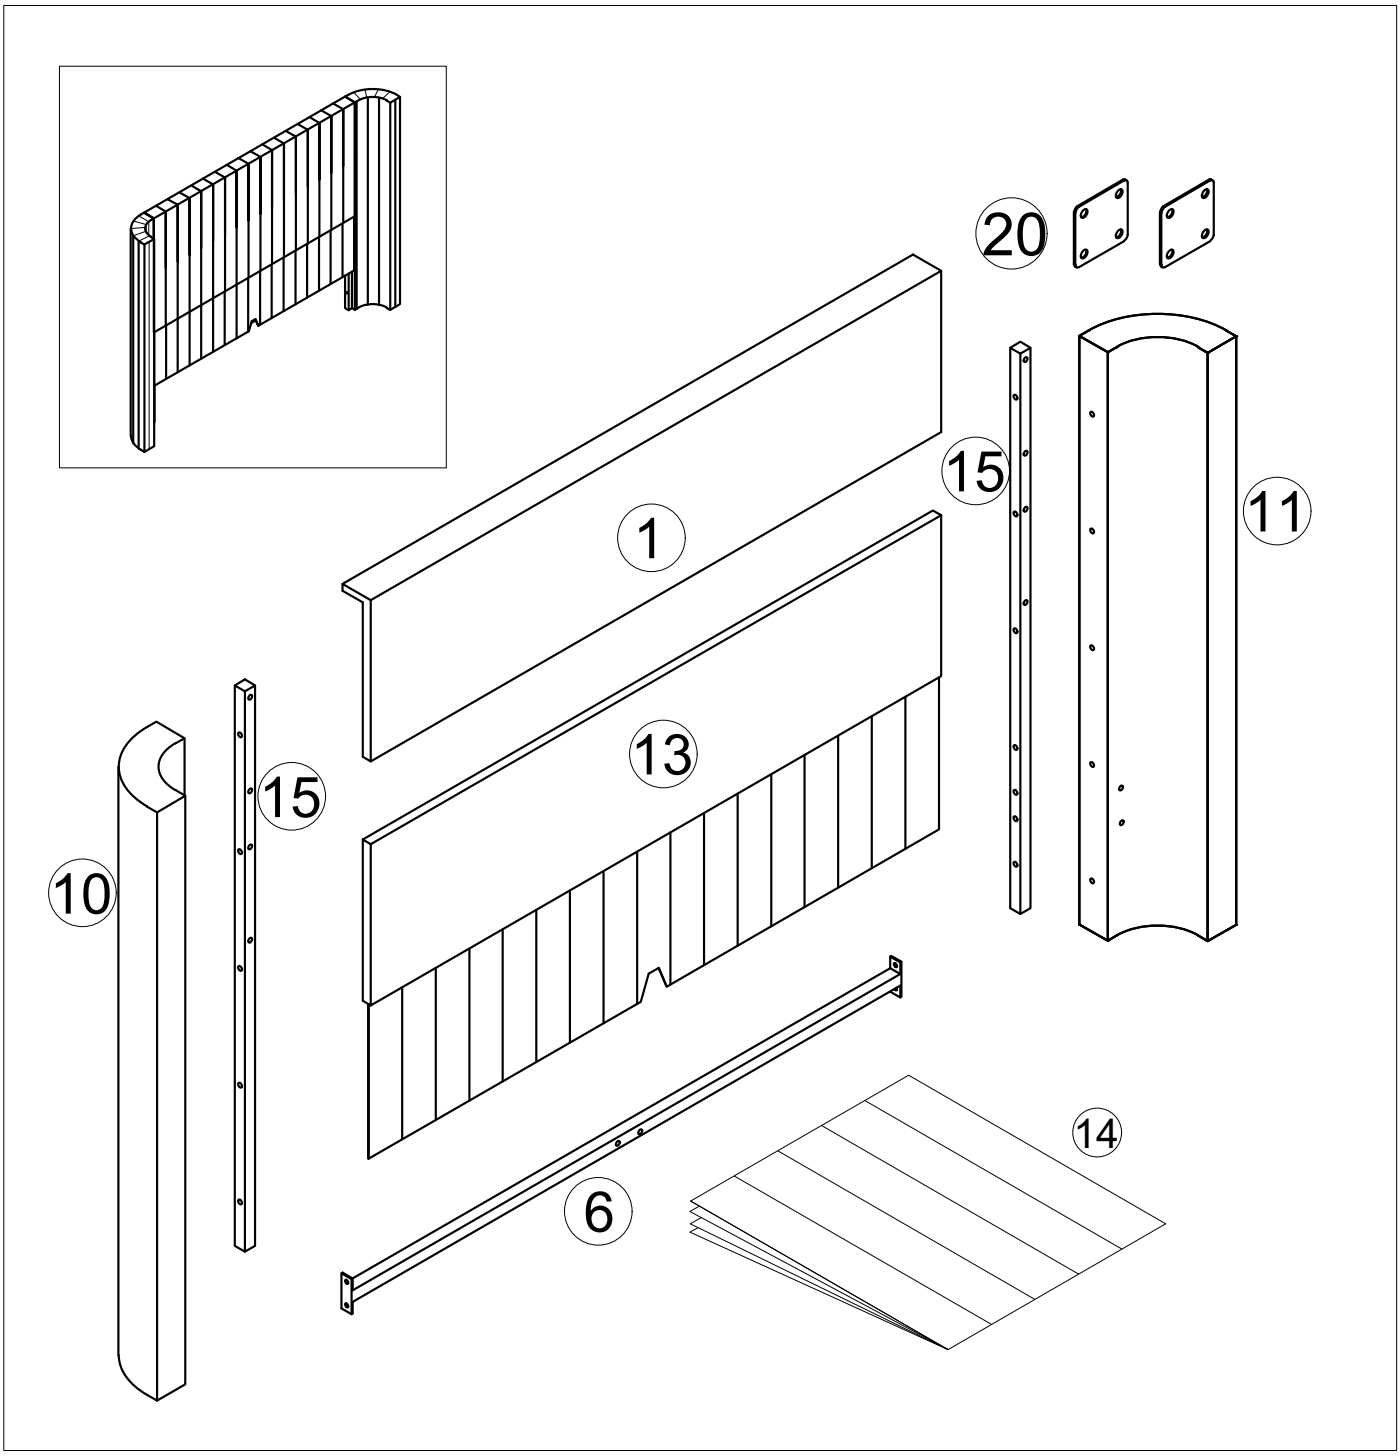

		
B	M8×40mm	×18


		
C	M8×20mm	×12

The headboard section assembly requires a total of labeled panels shown in the diagram. Please locate all of them and prepare them for use.


Note:

Ensure all hardware components are accounted for before beginning assembly. Missing or damaged hardware should be reported to customer service for replacement.


Step 1

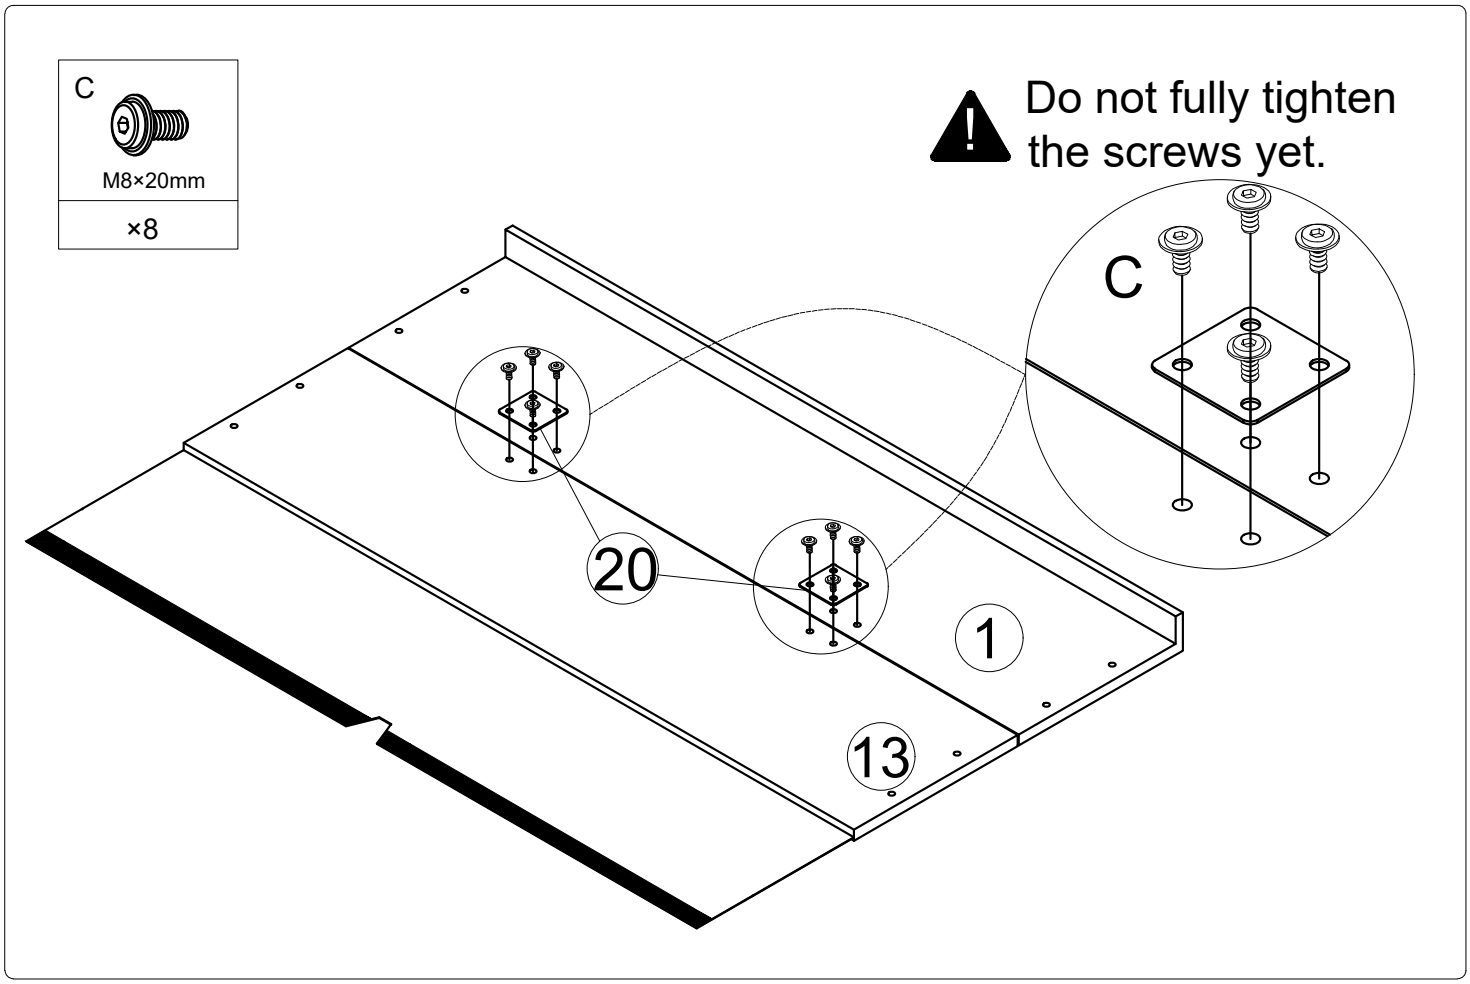
C
M8×20mm
×8
Do not fully tighten the screws yet.
C
20
1
13


Step 2

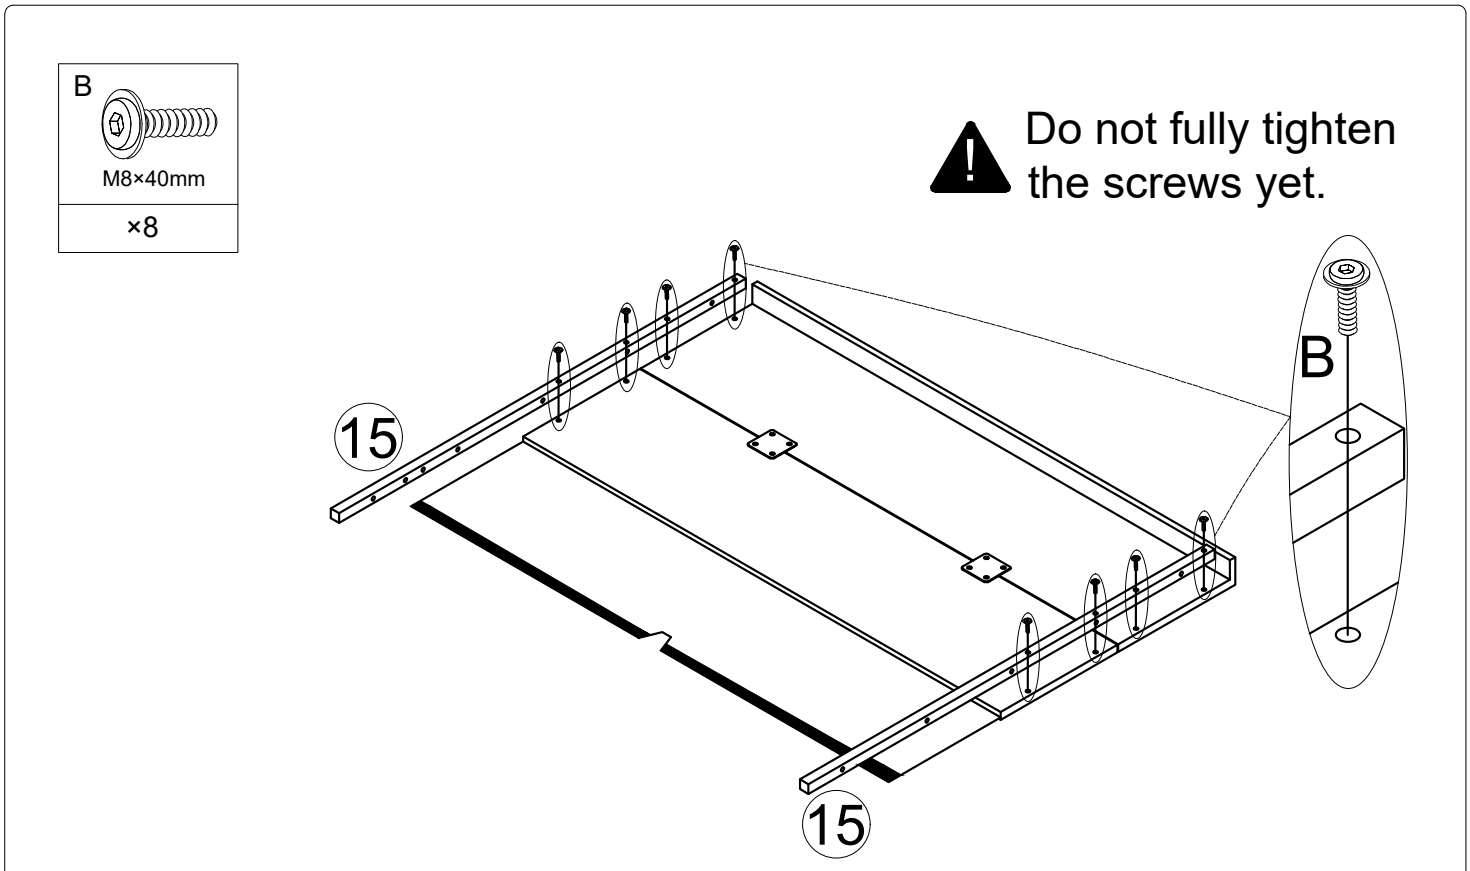
B
M8×40mm
×8
Do not fully tighten the screws yet.
B
15
15


Step 3

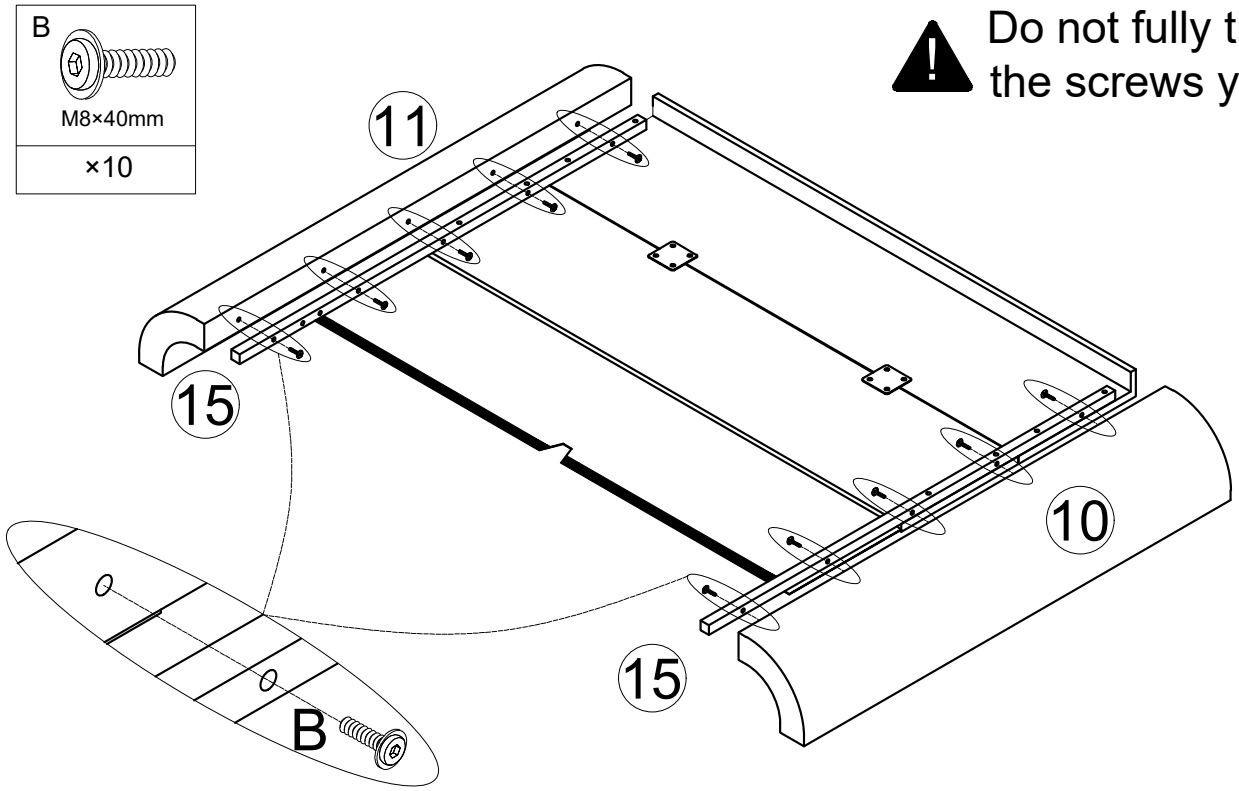
B
M8×40mm
×10
Do not fully tighten the screws yet.
11
15
10
15
B

Step 4

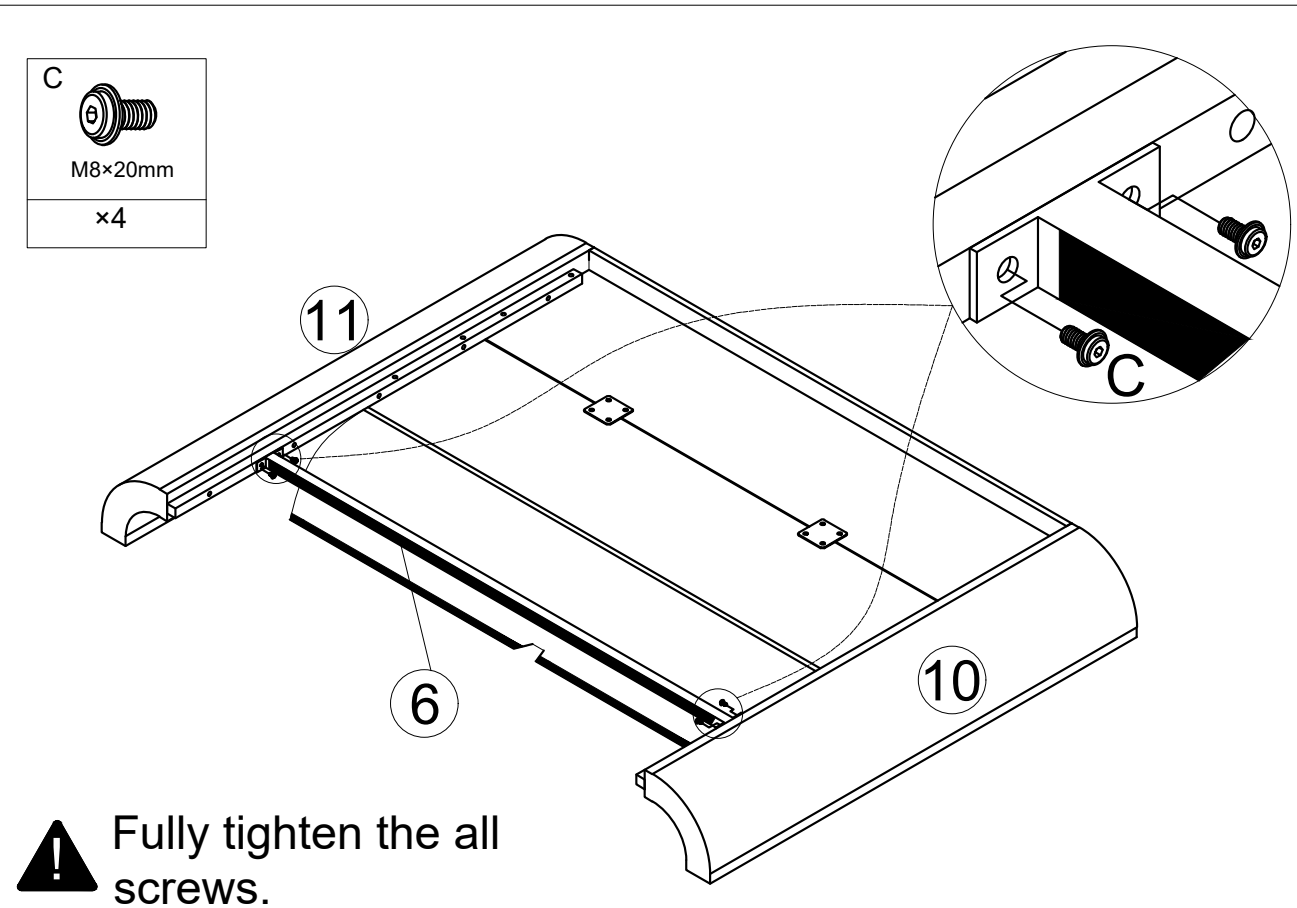

C
M8×20mm
×4
11
C
6
10
Fully tighten the all screws.

Step 5

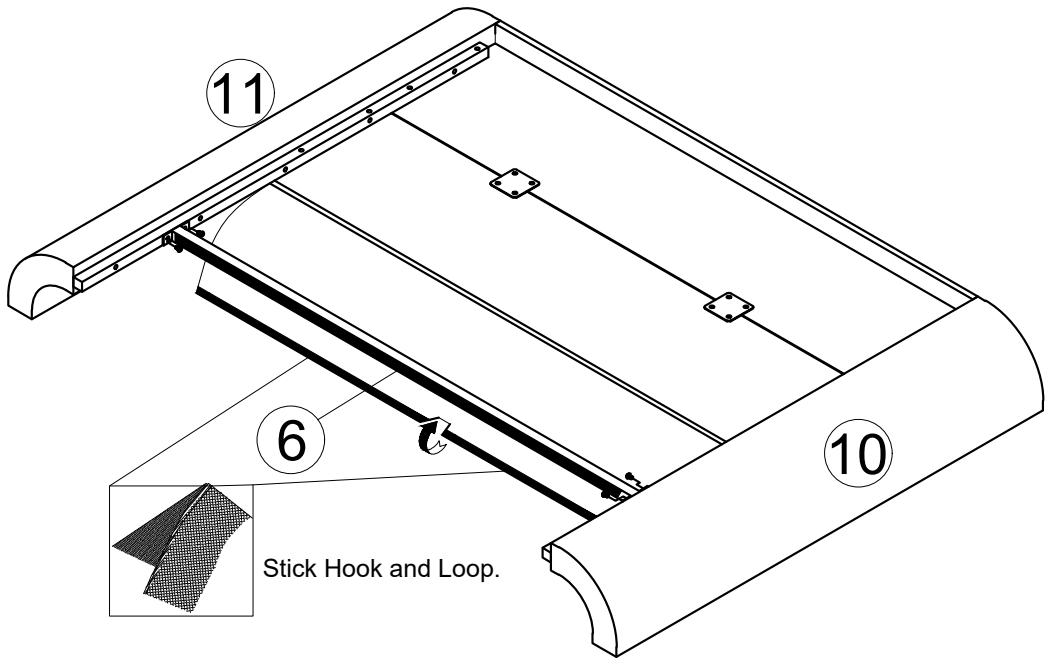


Step 6


Attention:smooth out any wrinkles in the headboard fabric cover by hand or with an iron before placing it on the headboard.

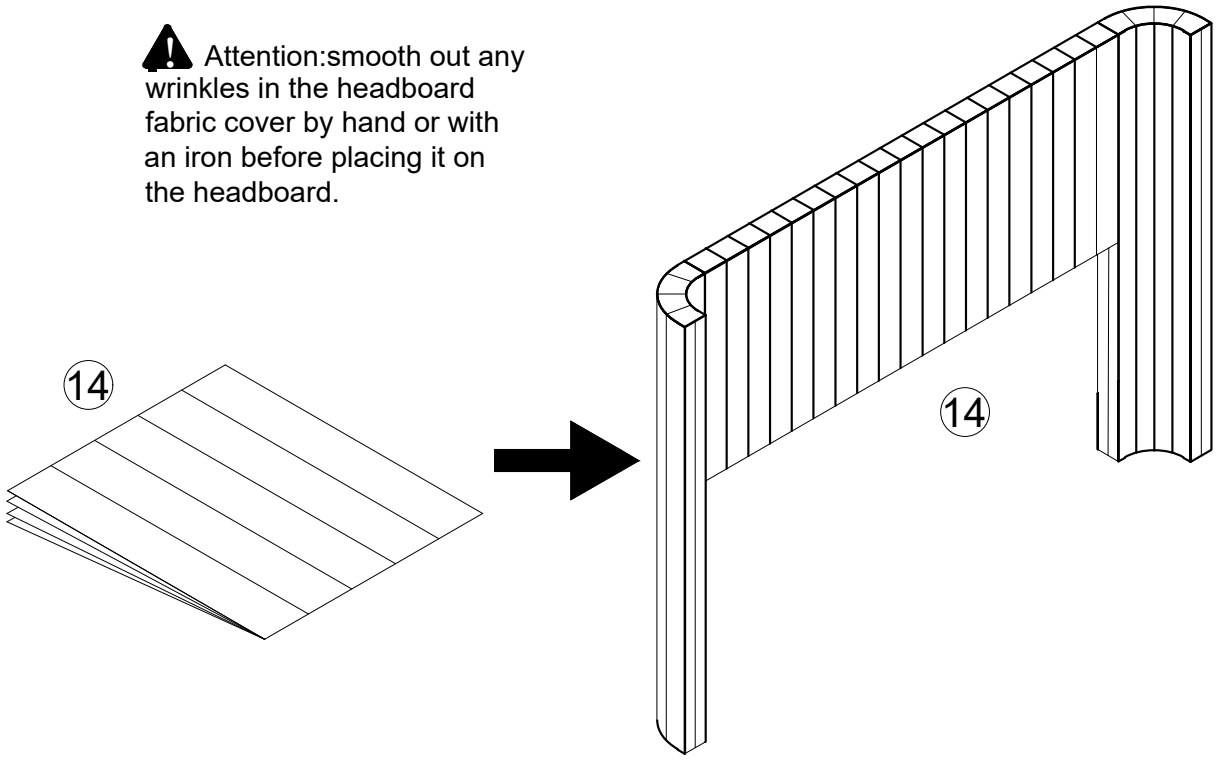


Step 7

Align the comer of fabric cover 14 indicated by the arrow with the corresponding corner on part 10 and part 11,then fit it into place.

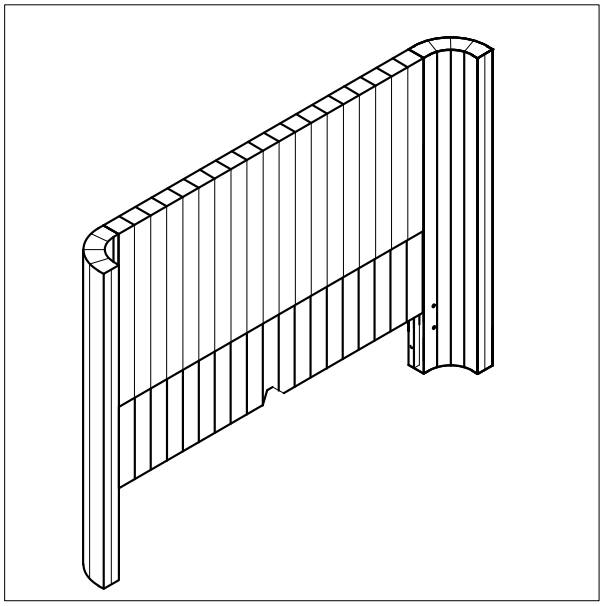


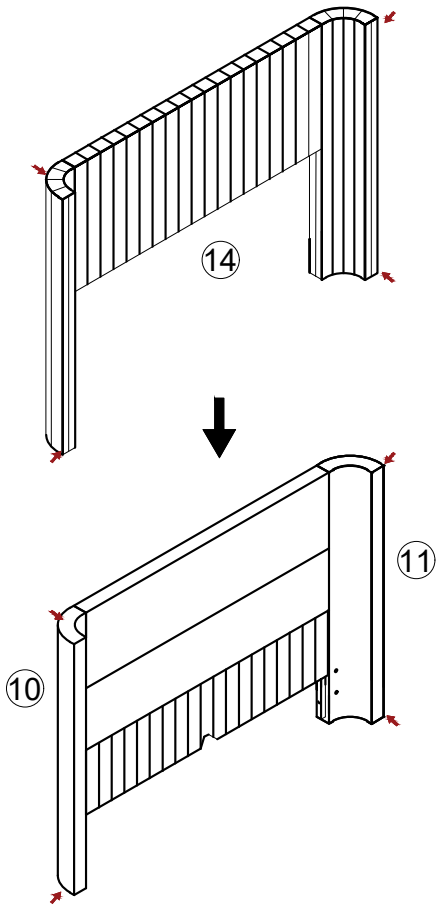


Step 8

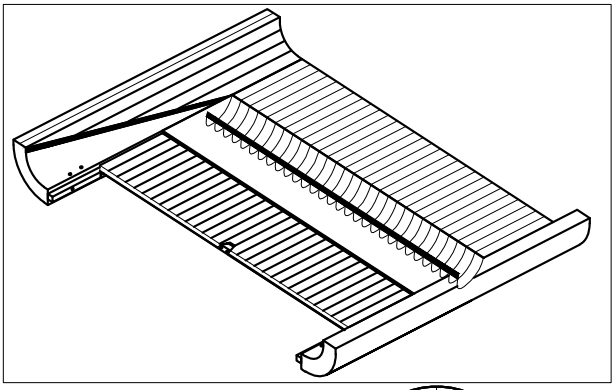


Step 9

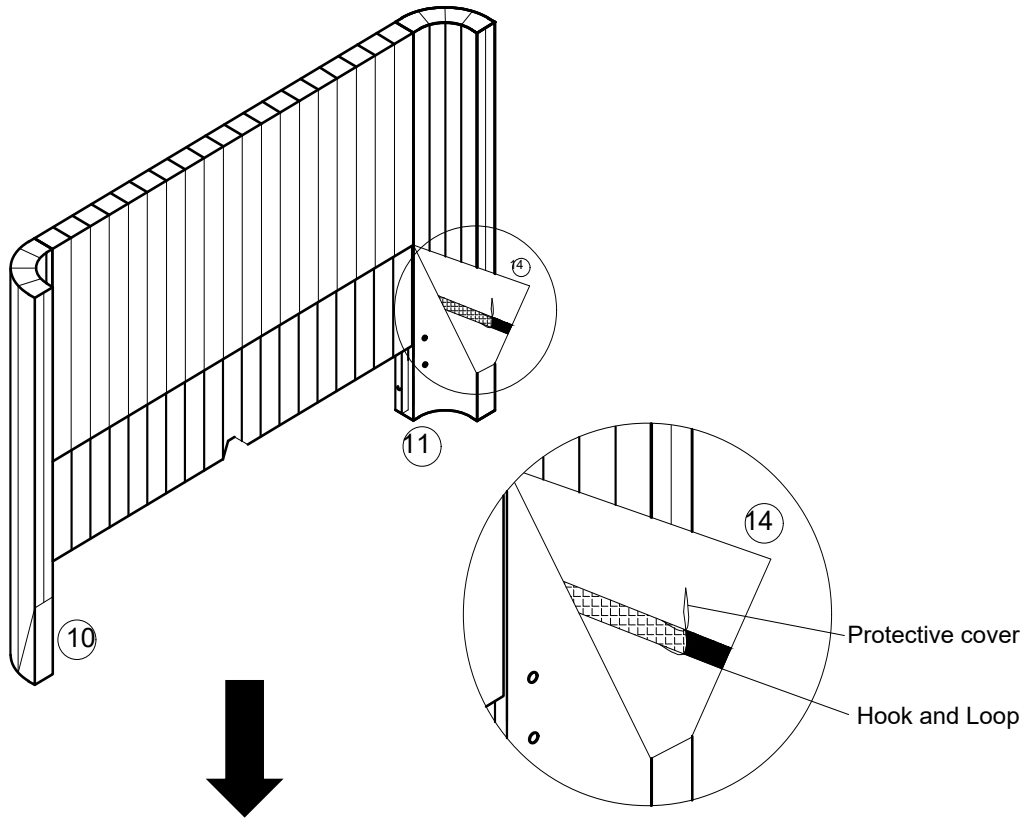


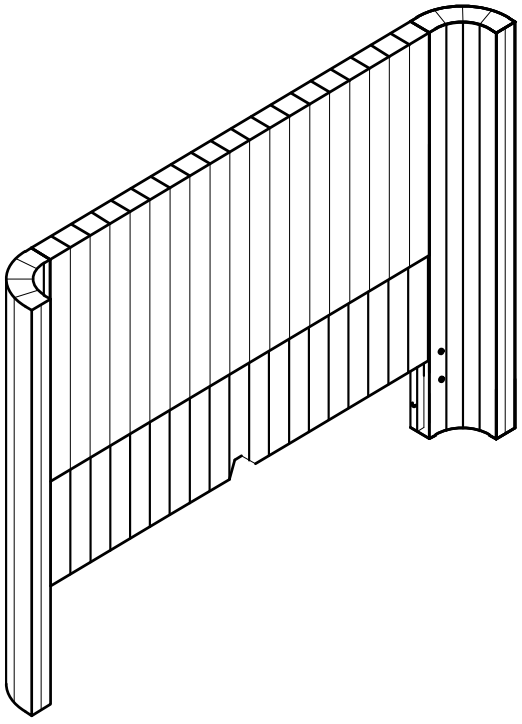


As shown,peel off the protective from the Hook and Loopon fabric cover 14 at the positions corresponding to Parts10 and 11.
Then press firmly on fabric cover 14 at the positionscorresponding to Parts 10 and 11 to ensure the fabric cover 14 is fully secured and fits snugly against theentire headboard.

Frame Parts Section Installation

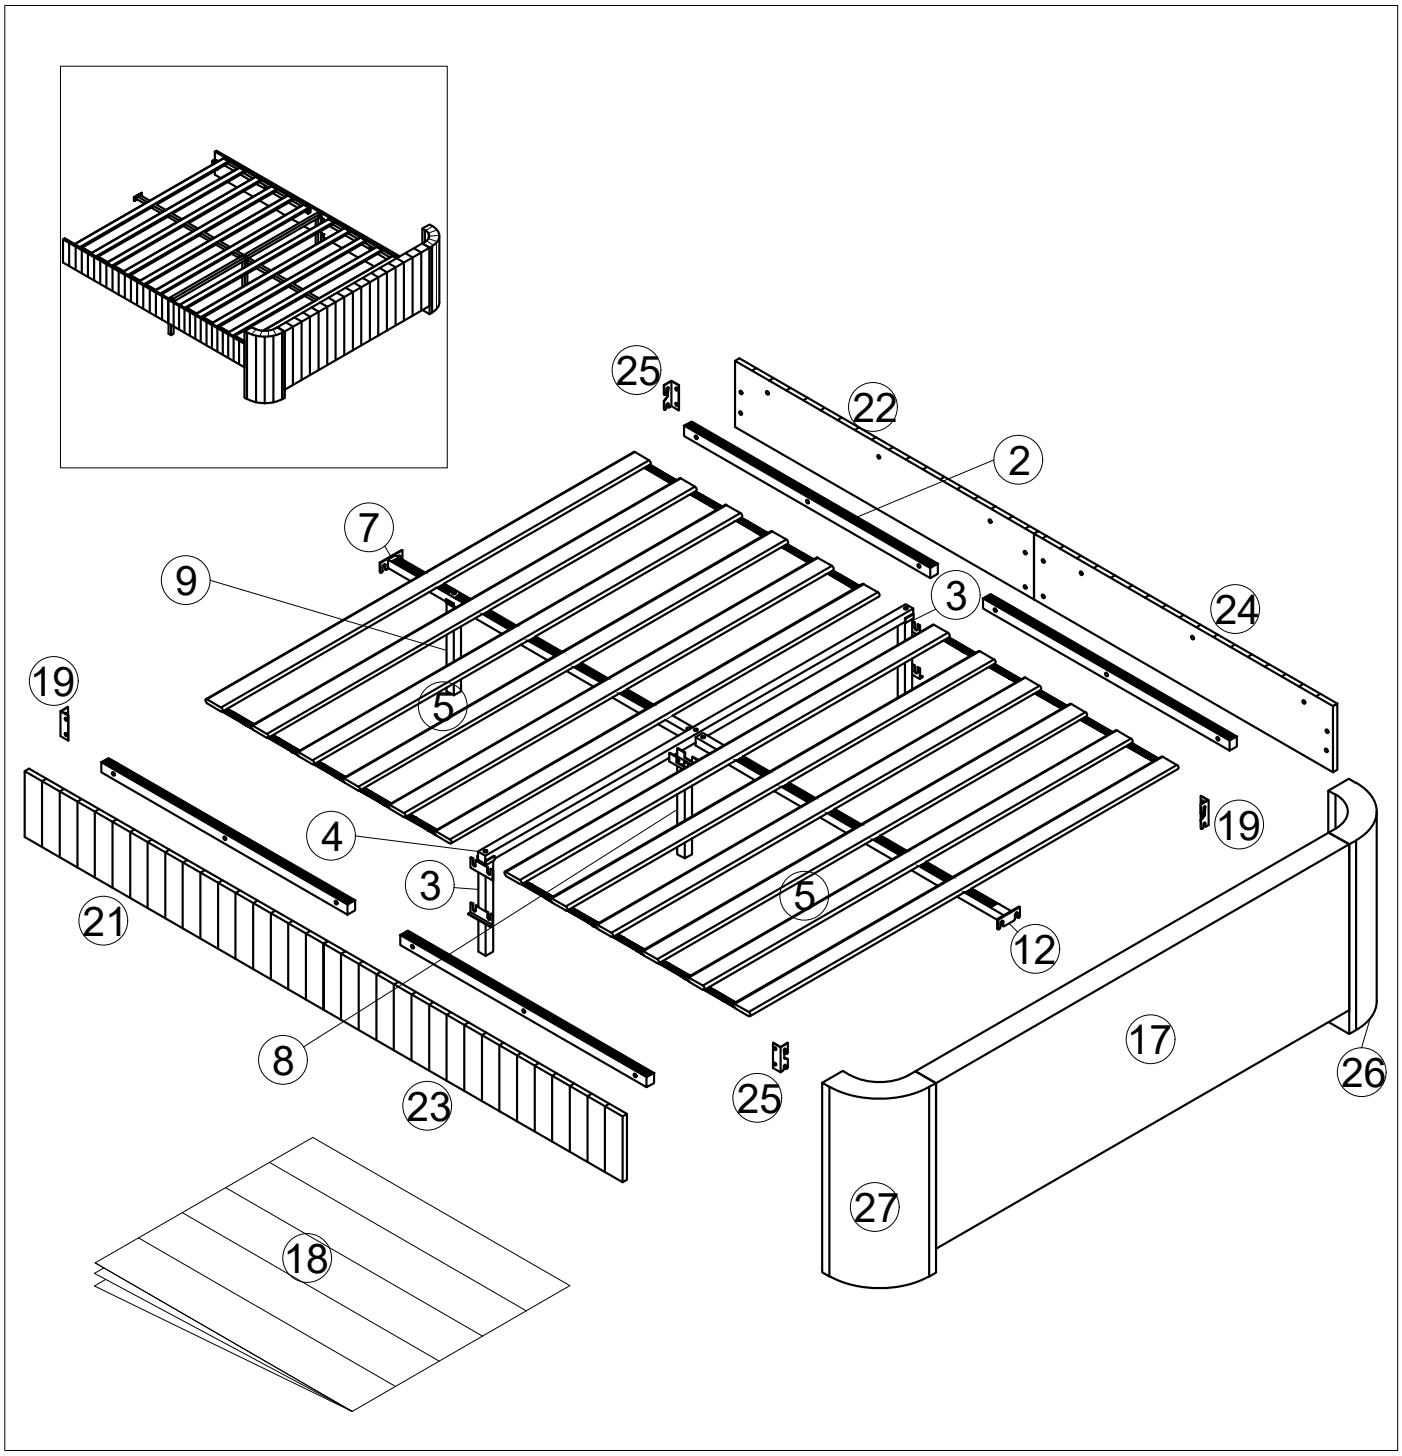

			
A	M8×50mm	×1	

			
B	M8×40mm	×21	

			
C	M8×20mm	×12	


			
D	M8×15mm	×16	


The headboard section assembly requires a total of labeled panels shown in the diagram. Please locate all of them and prepare them for use.

Note:

Ensure all hardware components are accounted for before beginning assembly. Missing or damaged hardware should be reported to customer service for replacement.


Step 10

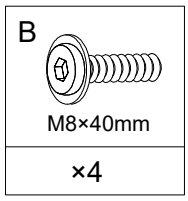

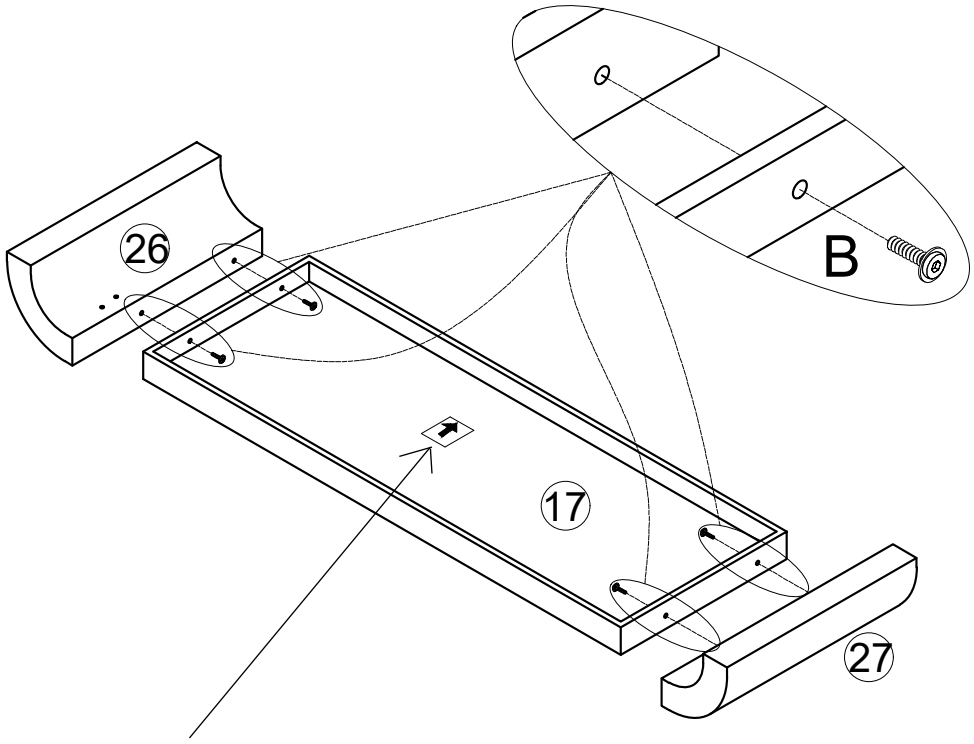


During assembly, ensure that part 17 is positioned in the direction indicated by the arrow.


Step 11

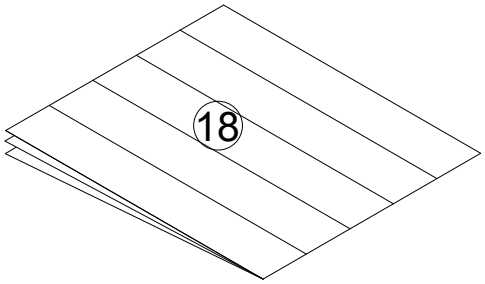


⚠ Attention:smooth out any wrinkles in the headboard fabric cover by hand or with an iron before placing it on the headboard.

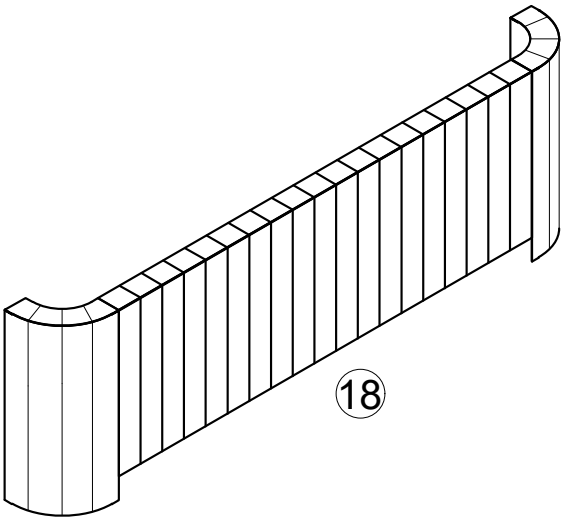

Step 12

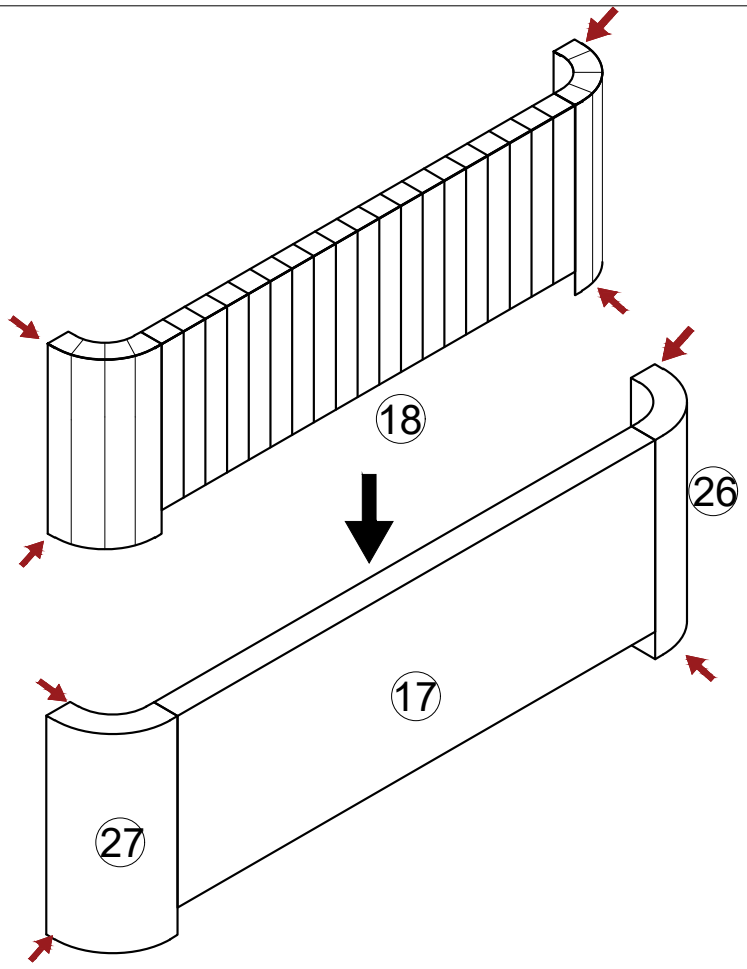


Align the corner of fabric cover 18 indicated by the arrow with the corresponding corner on part 24 and part 25,then fit it into place

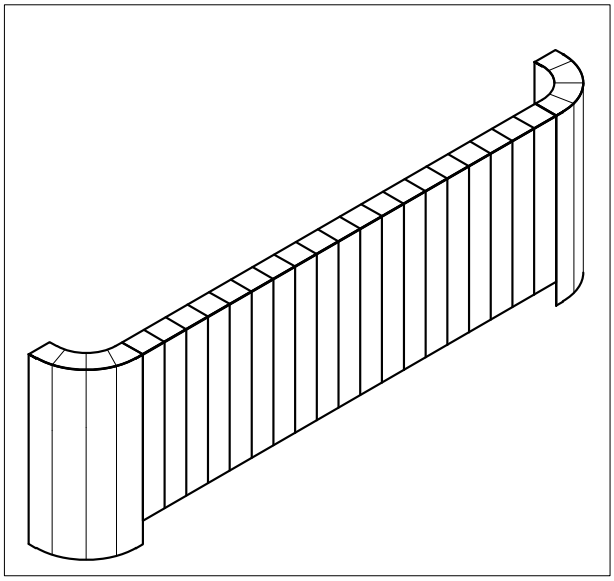


Step 13


Press firmly on fabric cover 18 at the positions corresponding to Parts 26 and 27 to ensure the fabric cover 18 is fully secured and fits snugly against the entire footboard.

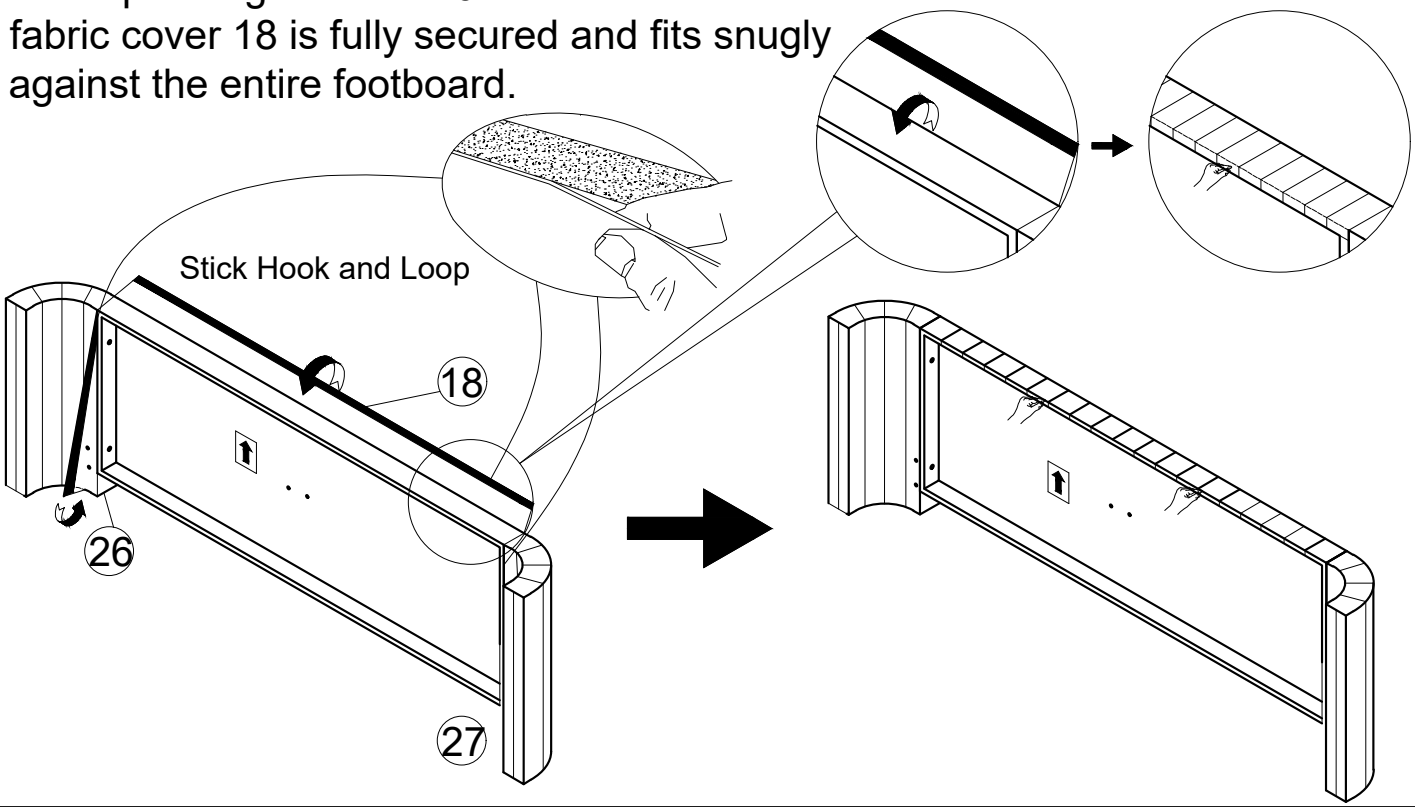


Step 14

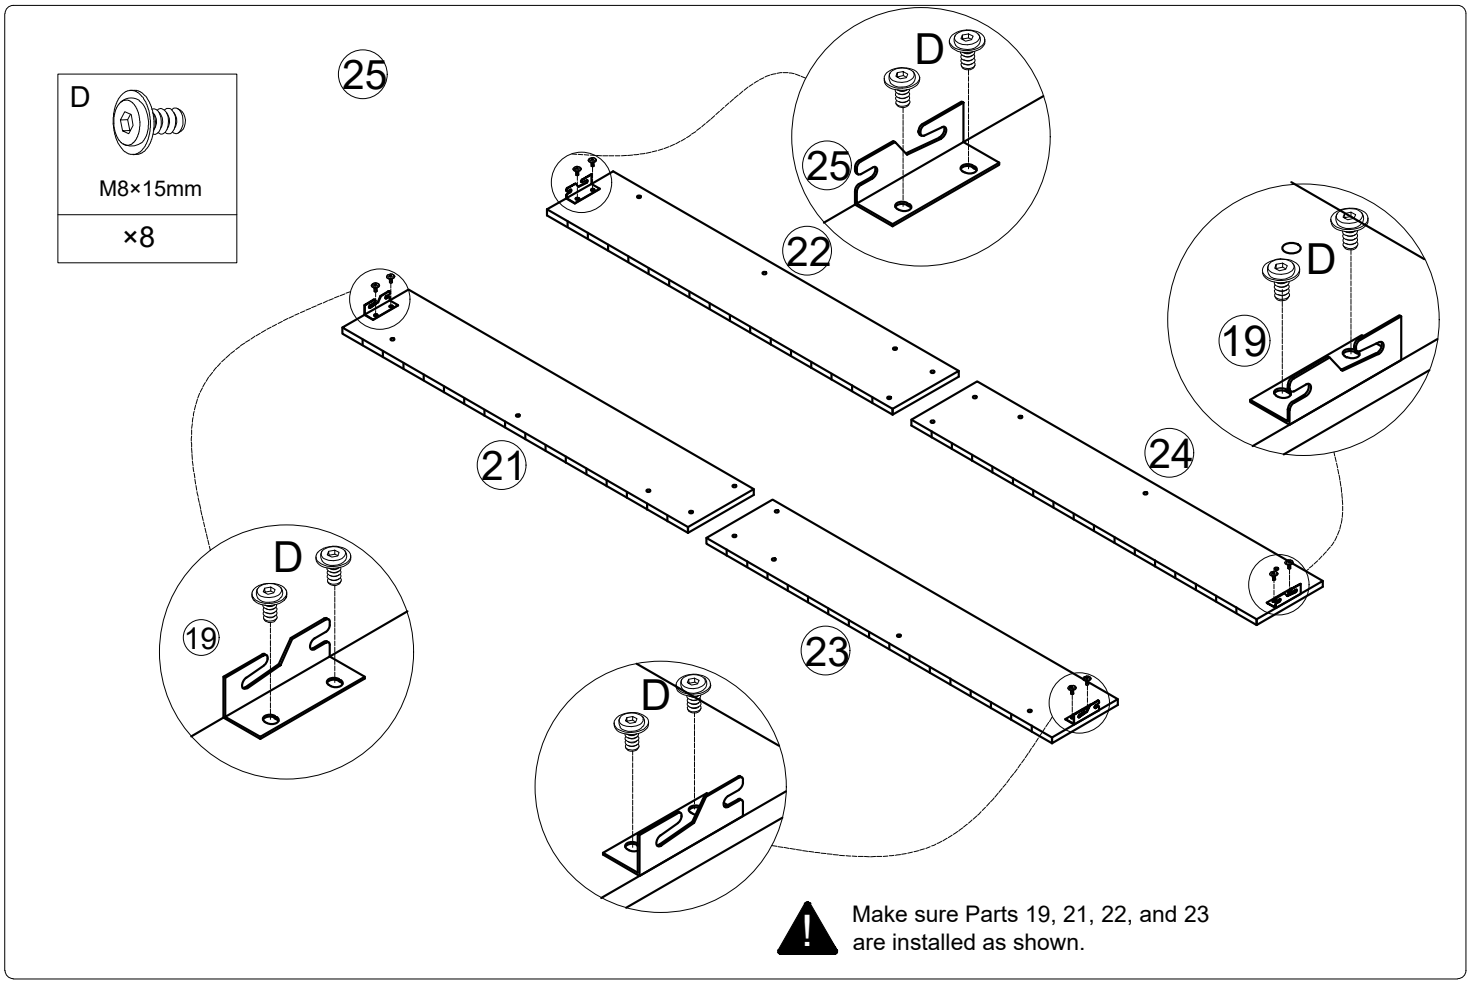


Step 15

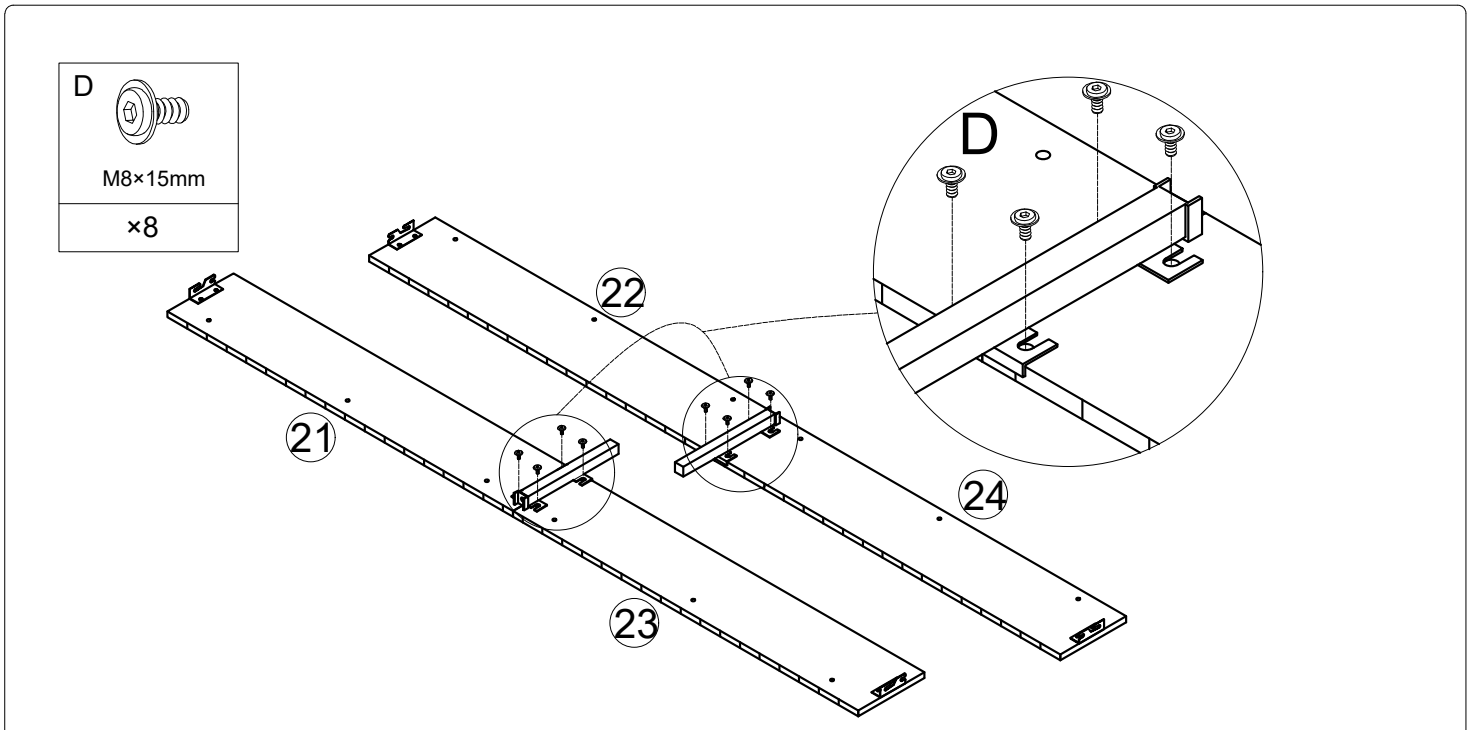


Step 16

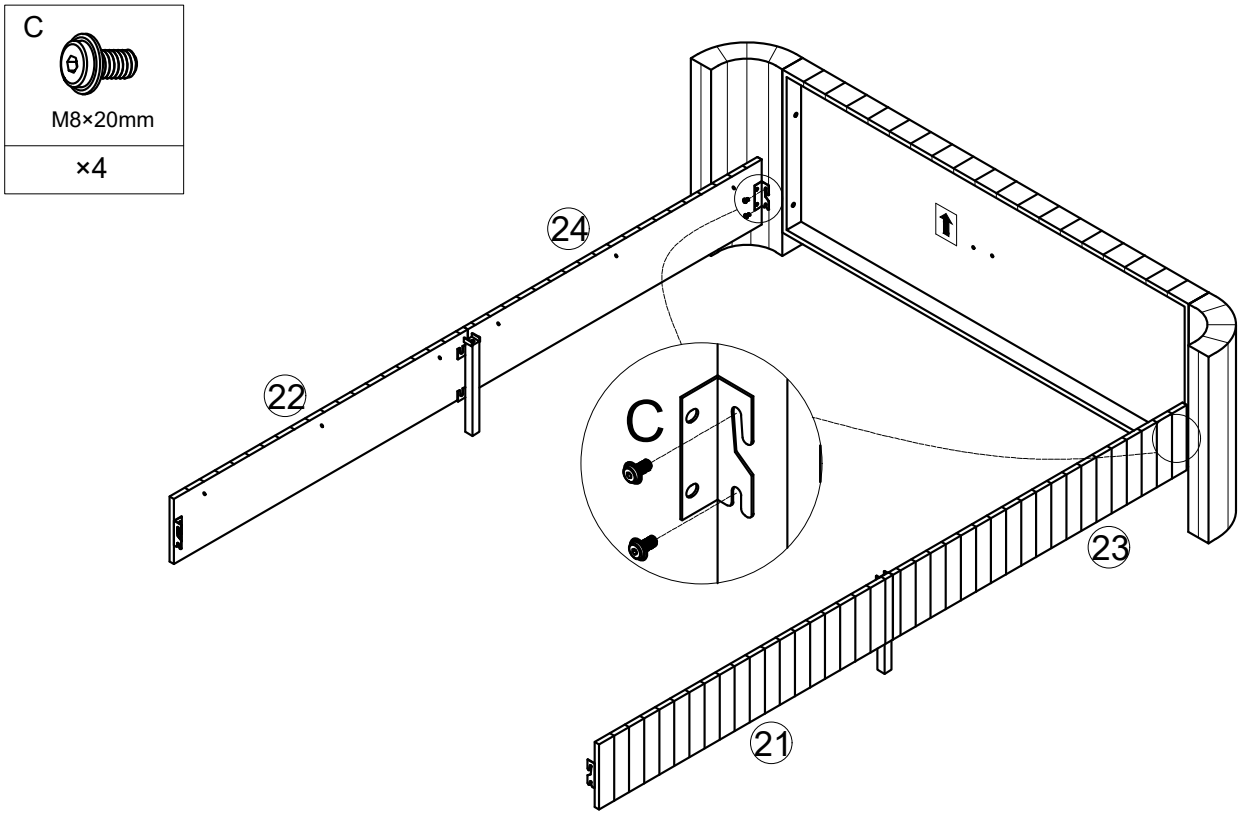


Step 17

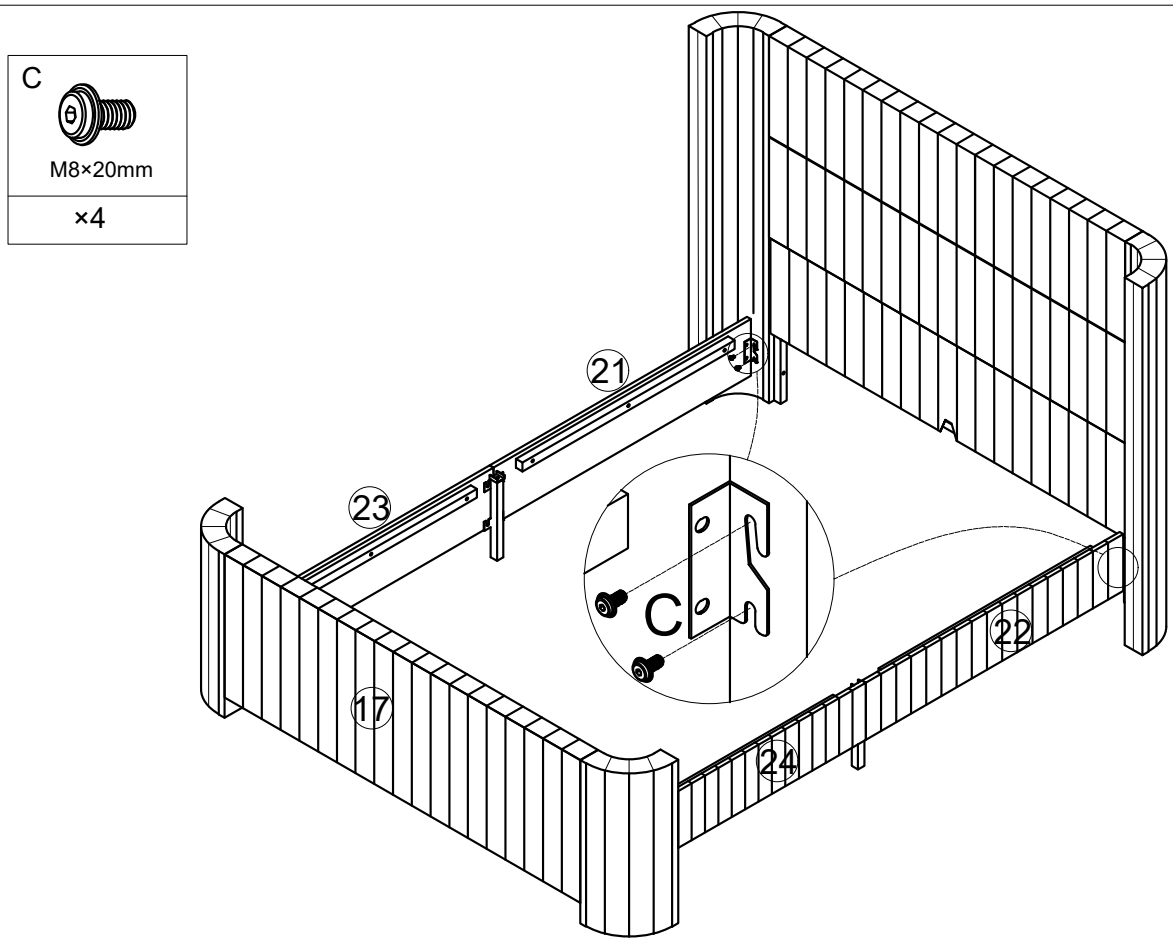


Step 18

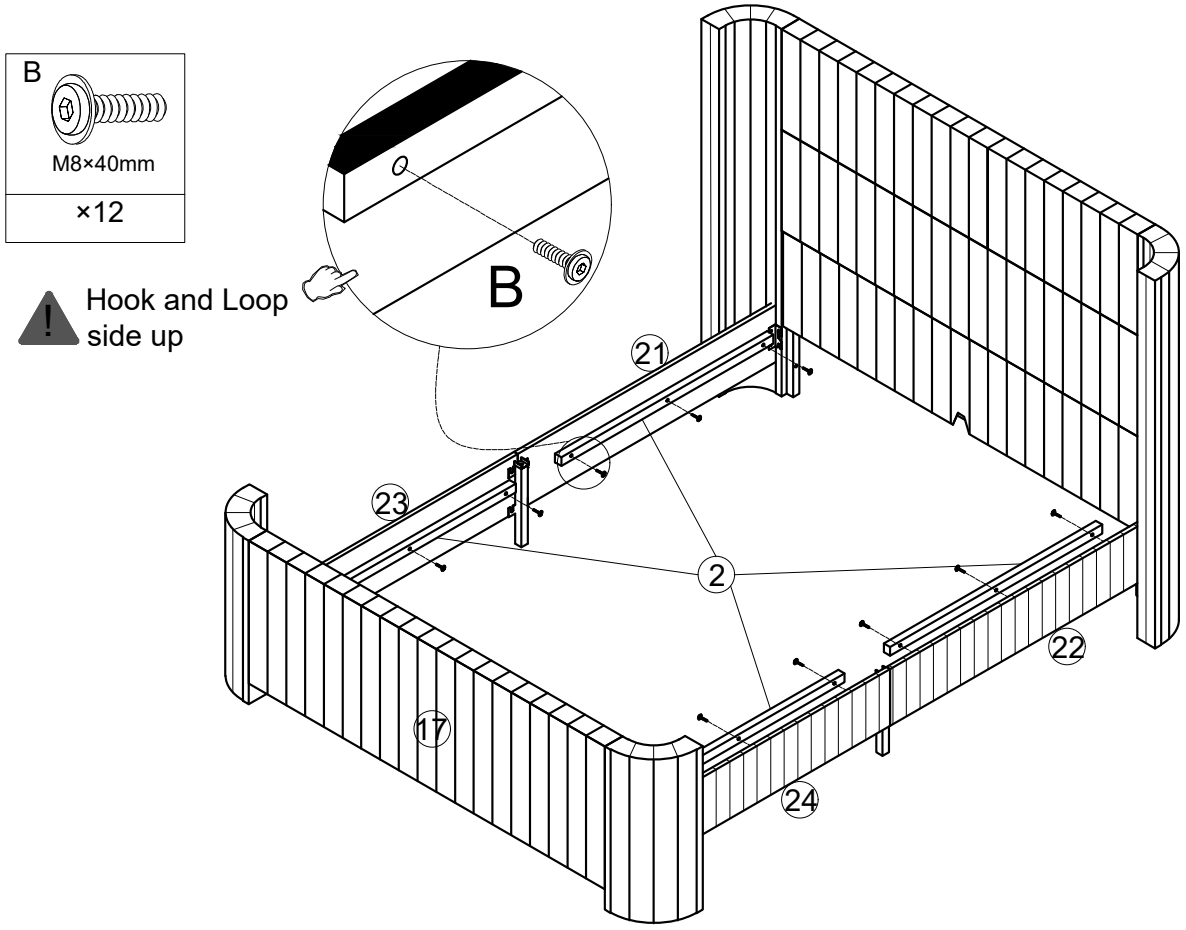


Step 19

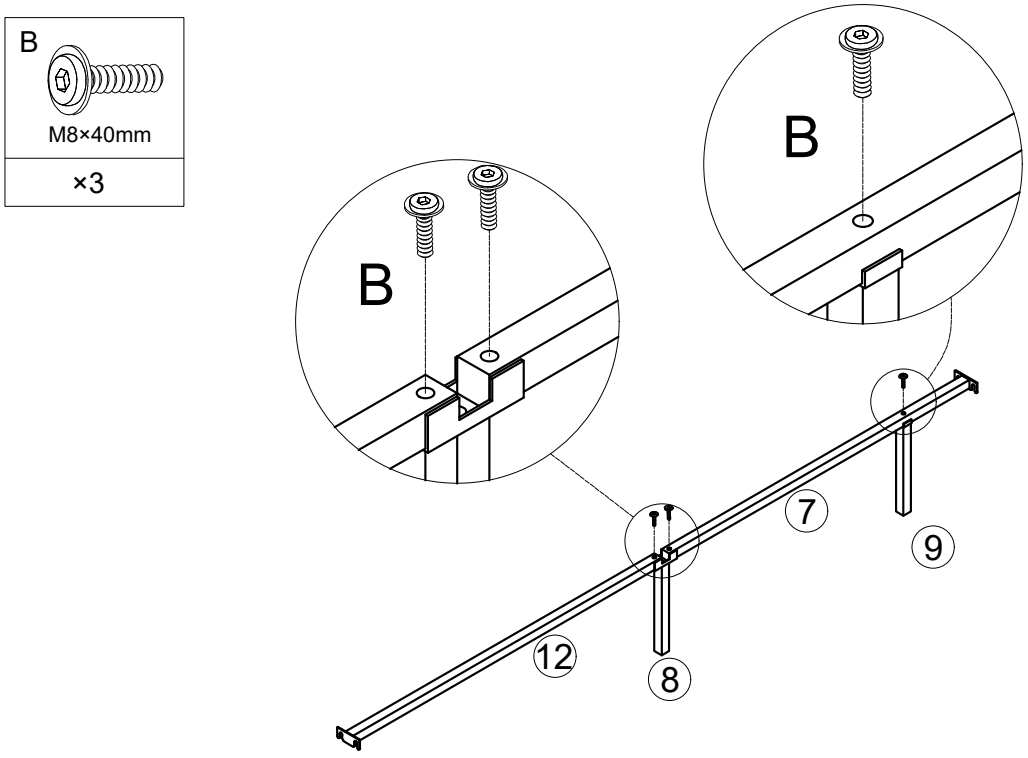


Step 20

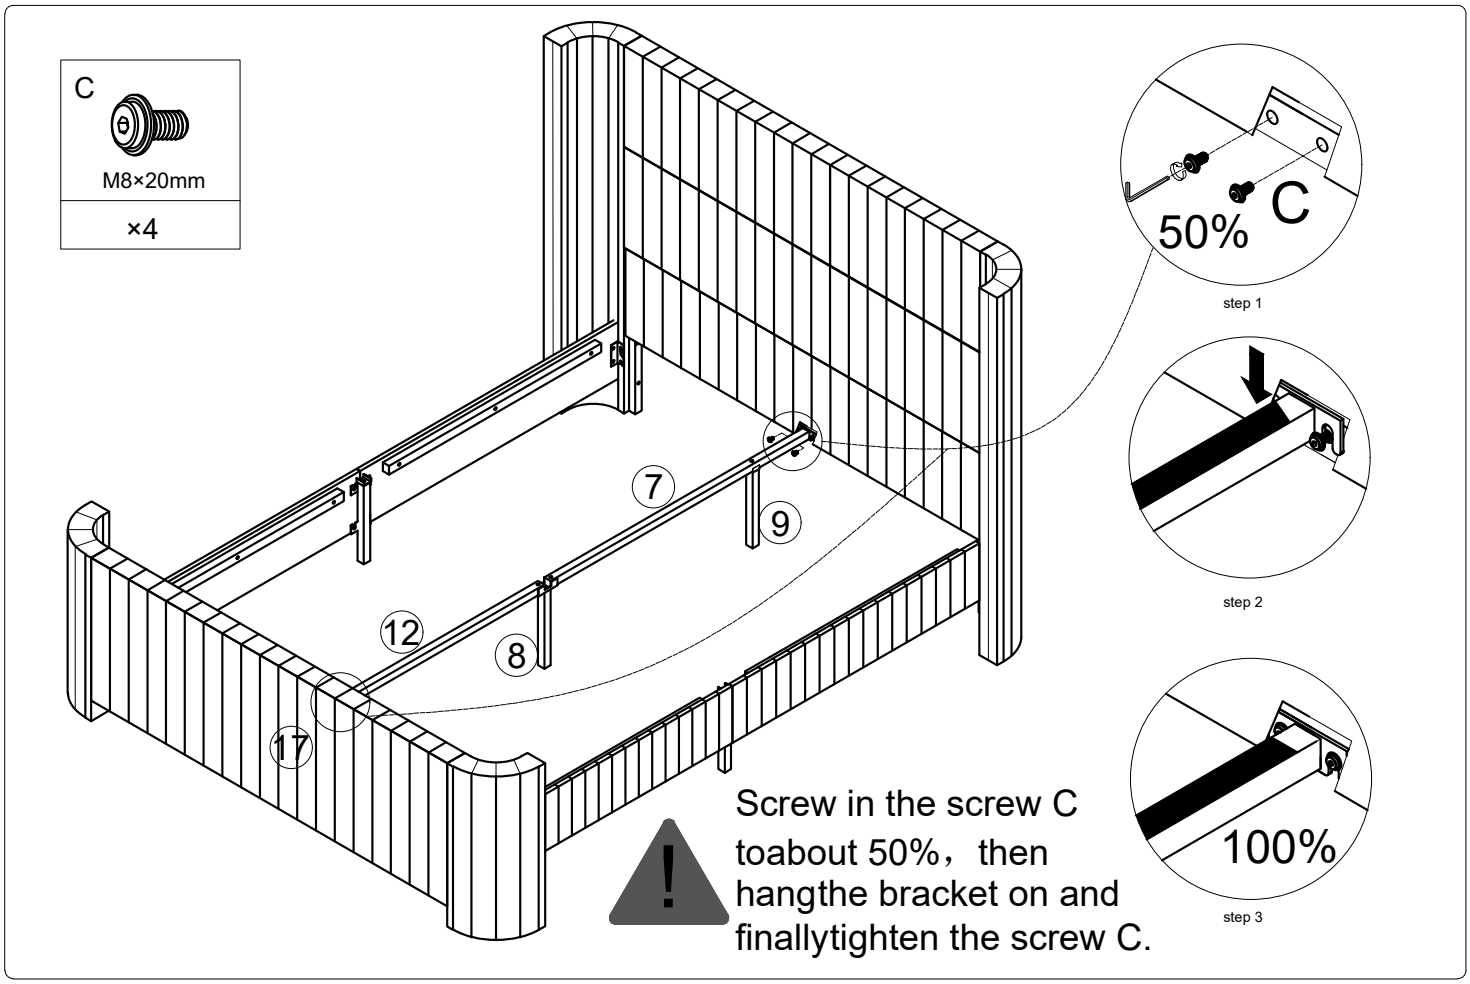

Step 21

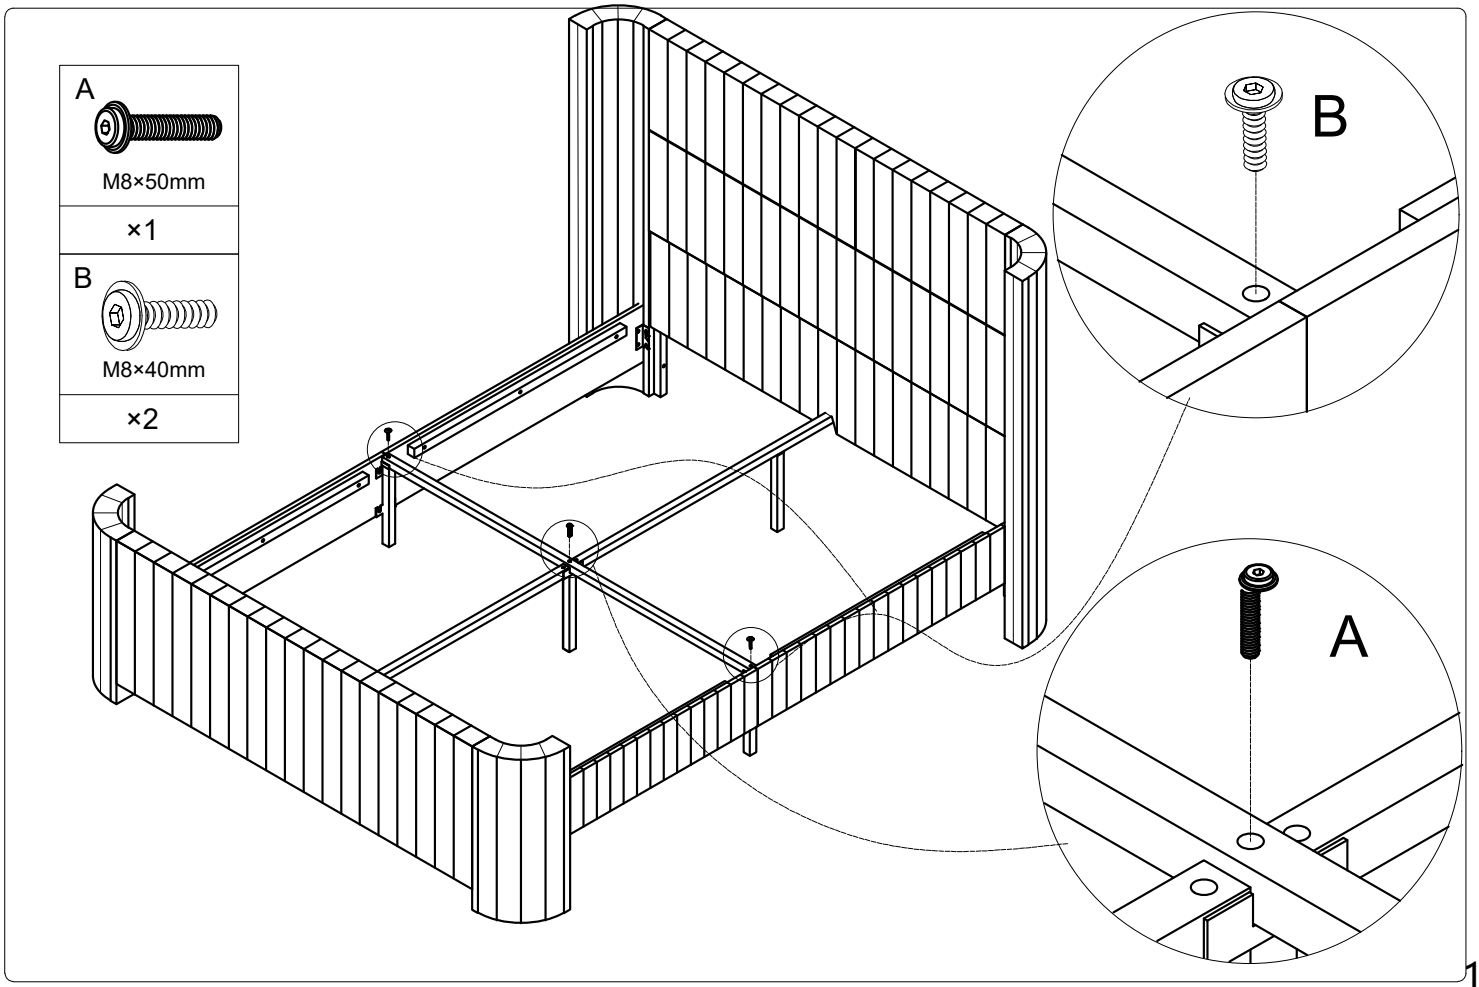

Step 22

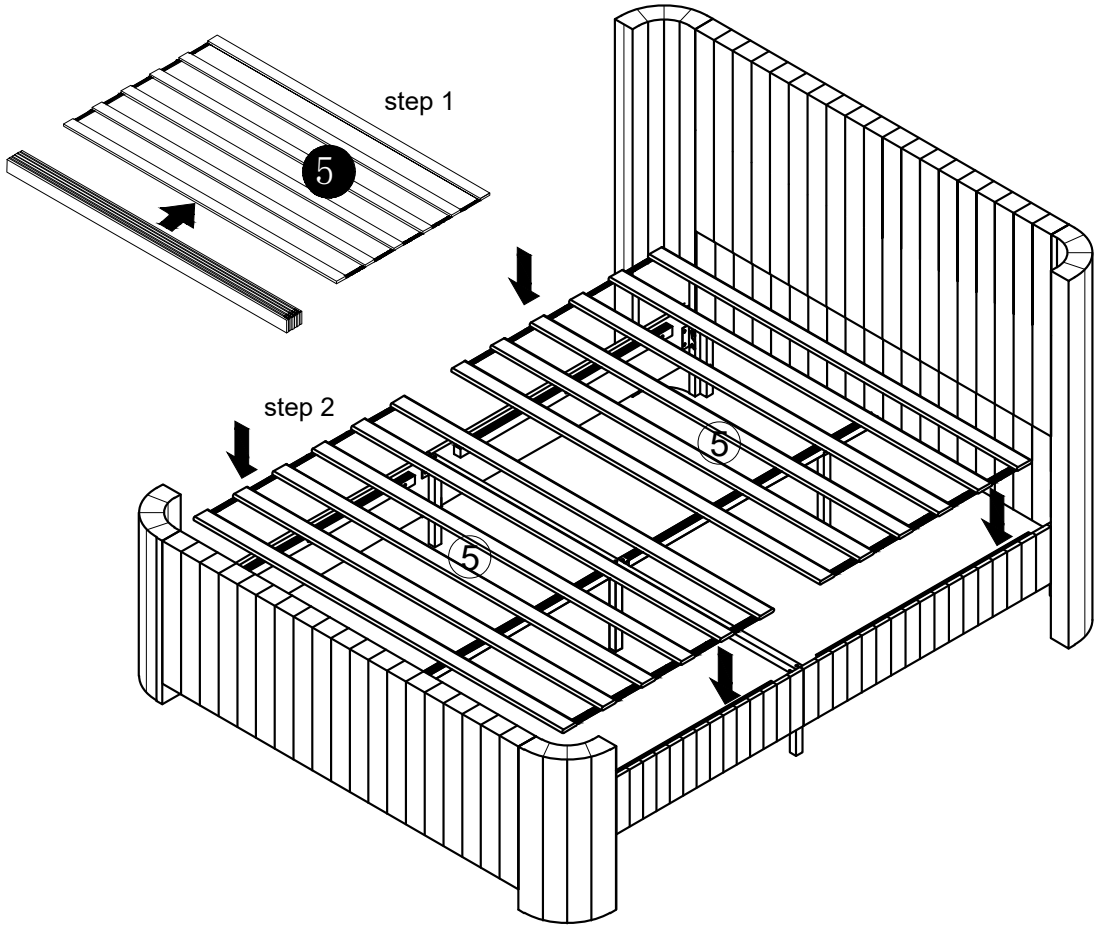

Step 23

Please make sure all screws are tightened securely.

